

Printed Version of PNA Help

Agilent Technologies PNA Series Network Analyzers

Note: The Table of Contents and Index refer to page numbers on the PRINTED page.



Manufacturing Part Number: N5230-90017

Supports FW A.07.50

Rev Date: Dec 06, 2007

Supersedes: May 31, 2007

© Agilent Technologies, Inc. 2004 - 2007 All rights reserved.

Documentation Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AGILENT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. AGILENT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD AGILENT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

DFARS/Restricted Rights Notice

If software is for use in the performance of a U.S. Government prime contract or subcontract, Software is delivered and licensed as "Commercial computer software" as defined in DFAR 252.227-7014 (June 1995), or as a "commercial item" as defined in FAR 2.101(a) or as "Restricted computer software" as defined in FAR 52.227-19 (June 1987) or any equivalent agency regulation or contract clause. Use, duplication or disclosure of Software is subject to Agilent Technologies' standard commercial license terms, and non-DOD Departments and Agencies of the U.S. Government will receive no greater than Restricted Rights as defined in FAR 52.227-19(c)(1-2) (June 1987). U.S. Government users will receive no greater than Limited Rights as defined in FAR 52.227-14 (June 1987) or DFAR 252.227-7015 (b)(2) (November 1995), as applicable in any technical data.

Contacting Agilent

Assistance with test and measurements needs and information on finding a local Agilent office are available on the Web at: <http://www.agilent.com/find/assist>. If you do not have access to the Internet, please contact your Agilent field engineer.

NOTE	In any correspondence or telephone conversation, refer to the Agilent product by its model number and full serial number. With this information, the Agilent representative can determine whether your product is still within its warranty period.
------	---

TABLE OF CONTENTS

Whats New	38
Administrative Tasks	
PNA User Accounts and Passwords	43
Computer Properties	46
Error-check and Disk Defragmenter	49
Operating System Recovery	50
Windows Considerations	51
Quick Start	
Front Panel Tour (E836x and PNA-L)	53
Front Panel Tour (PNA-X)	59
Rear Panel Tour (E836x and PNA-L)	67
Rear Panel Tour (PNA-X)	68
Powering the PNA ON and OFF	72
PNA User Interface (E836x and PNA-L)	75
Traces, Channels, and Windows on the PNA	78
Basic Measurement Sequence	86
Frequency Blanking	87
Internal Second Source	90
Connectivity Guide	92
PNA Preferences	93
VNC	96
Using Help	97
1. Set Up a Measurement	
Preset the PNA	106
Measurement Parameters	114
Measurement Classes	122
Frequency Range	125
Power Level	133
Sweep Settings	142
Trigger Setup	152
External Triggering	155

Trigger Model Animation	161
Data Format and Scale	162
Preconfigured Measurement Setups	171
Path Configurator	175
Customize Your Analyzer Screen	178
Copy Channels	190
ADC Measurements	193
System Impedance	196
2. Optimize a Measurement	
Dynamic Range	198
Dynamic Range-4 Jumpers	200
Dynamic Range-Test Set Option	201
Number of Data Points	202
Phase Accuracy	204
Electrically Long Devices	208
Reflection Accuracy	210
Measurement Stability	213
Noise Reduction Techniques	215
Crosstalk	223
Effects of Accessories	224
Fastest Sweep	225
Multiple State Measurements	227
Fastest Data Transfer	230
Using Macros	231
3. Calibrate a Measurement	
Calibration Overview	235
Calibration Standards	237
Calibration Wizard	241
Select a Calibration	256
Using Cal Sets	262
Error Correction and Interpolation	270
Calibration Thru Methods	274
Accurate Calibrations	280

Validity of a Cal	283
ECal	288
ECal User Characterization	296
TRL Calibration	308
Calibration Preferences	312
Measurement Errors	316
Modify Cal Kits	328
Power Calibration	347
Fixture Compensation	361
Port Extensions	373
Characterize Adaptor Macro	379
Delta Match Calibration	383
4. Analyze Data	
Locate Data Using Markers	387
Math & Memory Operations	397
Equation Editor	403
Use Limits to Test Devices	416
5. Output Data	
Save and Recall Data	421
Drive Mapping	435
Print	437
Tutorials	
App Notes	443
Network Analyzer Basics	445
Connector Care	446
ESD Protection	457
Measurements	
Absolute Output Power	458
AM-PM Conversion	460
Amplifier Measurements	465
Antenna Measurements	468
Balanced Measurements	471
Complex Impedance	477

Comparing the PNA Delay Functions	480
Deviation from Linear Phase	482
External Source Control	485
Gain and Flatness	489
Gain Compression	492
Group Delay	497
High-Power Measurements using a PNA	503
High Power Measurements using a PNA-X	504
Phase Measurements	506
Reverse Isolation	509
Reflection Measurements	512
Time Domain Measurements	516
Programming	
COM	
Commands	
Objects	
The Analyzer Object Model	532
Application Object	534
AuxTrigger Object	540
BalancedMeasurement Object	542
BalancedTopology Object	544
CalFactorSegments Collection	546
Calibrator Object	547
CalKit Object	552
CalManager Object	554
CalSet Object	556
CalSets Collection	561
CalStandard Object	562
Capabilities Object	564
Channel Object	566
Channels Collection	572
E5091Testset Collection	574
E5091Testset Object	576

EmbeddedLO Object	578
EmbeddedLODiagnostic Object	580
Equation Object	582
ExternalTestsets Collection	584
Fixturing Object	586
FOM Collection	591
FOMRange Object	593
Gating Object	596
GuidedCalibration Object	598
HWAuxIO Object	601
HWExternalTestSetIO Object	604
HWMaterialHandlerIO Object	606
IFConfiguration Object	608
IMixer Interface	611
InterfaceControl Object	614
Limit Test Collection	615
LimitSegment Object	617
Marker Object	619
Measurement Object	622
Measurements Collection	629
NAWindow Object	630
NAWindows Collection	632
PathConfiguration Object	633
PathConfigurationManager Object	635
PathElement Object	637
Port Extension Object	639
PowerLossSegment Object	641
PowerLossSegments Collection	643
PowerMeterInterface Object	644
PowerMeterInterfaces Collection	646
PowerSensor Object	648
PowerSensorCalFactorSegment Object	650
PowerSensors Collection	651

Preferences Object	652
PulseGenerator Object	654
SCPIStringParser Object	656
Segment Object	658
Segments Collection	660
SignalProcessingModuleFour Object	662
SMC Type Object	665
SourcePowerCalibrator Object	667
TestsetControl Object	670
Trace Object	672
Traces Collection	674
Transform Object	675
TriggerSetup Object	677
VMC Type Object	679
Properties	
AcceptTriggerBeforeArmed	682
AcquisitionDirection	683
Active Cal Kit	684
Active Channel	685
Active Marker	686
Active Measurement	687
Active NAWindow	688
ActiveXAxisRange	689
ADCCaptureMode	690
ALCLevelingMode	691
Active Trace	692
AllowArbitrarySegments	693
Alternate Sweep	694
Application	695
Arrange Windows	696
Attenuator Mode	697
Attenuator	698
AutoOrient	700

AutoPortExtConfig	701
AutoPortExtDCOffset	702
AutoPortExtLoss	703
AutoPortExtSearchStart	704
AutoPortExtSearchStop	705
AutoPortExtState	706
AuxiliaryTriggerCount	707
AuxTriggerScopelsGlobal	708
Averaging Count	709
Averaging Factor	710
Averaging ON/OFF	711
AvoidSpurs	712
BalancedMode	713
Bandwidth Target	714
Bandwidth Tracking	715
BB_BalPort1Negative	716
BB_BalPort1Positive	717
BB_BalPort2Negative	718
BB_BalPort2Positive	719
BBalMeasurement Property	720
Begin Response	721
Begin Stimulus	722
BroadbandTuningSpan	723
Bucket Number	724
C0	725
C1	726
C2	727
C3	728
Cal Factor	729
Cal Type (applied)	730
Calibration Name	732
Calibration Port	733
Calibration TypeID	734

Cal KitType	736
CalKitType (FCA)	737
Cal Power	739
Center	740
Center (Meas)	741
Center Frequency	742
Channel Number	743
CharacterizeMixerOnly	744
CharFileName	745
CharMixerReverse	746
CitiContents	747
CitiFormat	748
CmnModeZConvPortImag	749
CmnModeZConvPortReal	750
CmnModeZConvPortZ0	751
CmnModeZConvState	752
CompatibleCalKits	753
ConnectorType	754
ControlLines	755
Count	757
Couple Ports	758
CoupleChannelParams	759
Coupled	760
Coupled Markers	761
CoupledParameters - Gate	762
CoupledParameters - Transform	763
CW Frequency	764
Delay	765
Delay pulse	766
Delay_trigger	767
DelayIncrement	768
DeltaMarker	769
Description	770

DescriptiveText	771
DiffPortMatch_C	772
DiffPortMatch_G	773
DiffPortMatch_L	774
DiffPortMatch_R	775
DiffPortMatchMode	776
DiffPortMatchState	777
DiffPortMatchUserFilename	778
DiffZConvPortImag	779
DiffZConvPortReal	780
DiffZConvPortZ0	781
DiffZConvState	782
Display Format	783
DisplayAutomationErrors	784
DisplayGlobalPassFail	785
DisplayRange	786
Distance	787
DistanceMarkerMode	788
DistanceMarkerUnit	789
Divisor	790
Do1PortEcal	791
Do2PortEcal	792
Domain	793
DUTTopology	794
Dwell Time	795
ECALCharacterization (smc)	796
ECALCharacterization (vmc)	797
ECALCharacterizationEx	798
ECALIsolation	799
ECALModuleNumberList	800
EcalOrientation	801
EcalOrientation1Port	803
EcalOrientation2Port	804

ECALPortMapEx	806
ElecDelay Medium	808
Electrical Delay	809
Element	810
Elements	811
Embed4PortA	812
Embed4PortB	813
Embed4PortC	814
Embed4PortD	815
Embed4PortList	816
Embed4PortNetworkFilename	818
Embed4PortNetworkMode	819
Embed4PortState	820
Embed4PortTopology	821
Enable	822
Enabled	823
EnableSourceUnleveledEvents	824
Error Correction	825
ErrorCorrection(Channel)	826
External ALC	827
ExternalTriggerConnectionBehavior	828
ExternalTriggerDelay	830
Filter BW	831
Filter CF	832
Filter Loss	833
Filter Q	834
FilterErrors	835
FilterMode	837
FirmwareMajorRevision	838
FirmwareMinorRevision	839
FirmwareSeries	840
FixturingState	841
FootSwitch	842

Footswitch Mode	843
Format (Marker)	844
Format	783
Frequency	845
Frequency Span	846
FrequencyList	847
Frequency Offset Divisor	848
Frequency Offset Frequency	849
Frequency Offset Multiplier	850
Frequency Offset Override To CW	851
Frequency Offset State	852
Gate Shape	853
Gate Type	854
GPIBAddress	855
GPIB Mode	856
GPIBPortCount	857
HandshakeEnable	858
ID	859
IDString	860
IF Bandwidth Option	861
IF Bandwidth	862
IFDenominator	863
IFFilterSampleCount	864
IFFilterSamplePeriod	865
IFFilterSamplePeriodList	866
IFFilterSamplePeriodMode	867
IFFilterSource Property	868
IFGainLevel	869
IFGainMode	870
IFGateEnable	871
IFFrequency	872
IFFrequencyMode	873
IFNumerator	874

IFSideband	875
IFSourcePath	876
IFStartFrequency	877
IFStopFrequency	878
Impulse Width	879
IndexState	880
Input A	881
Input B	882
Input C	883
InputDenominator	884
InputFixedFrequency	885
InputIsGreaterThanOrEqualTo	886
InputNumerator	887
InputPower	888
InputRangeMode	889
InputStartFrequency	890
InputStopFrequency	891
InternalTestsetPortCount	892
Interpolate Correction	893
Interpolated	894
InterpolateNormalization	895
Interrupt	896
IsContinuous	897
IsECALModuleFoundEx	898
IsFrequencyOffsetPresent	899
IsHold	900
IsMarkerOn	901
IsolationAveragingIncrement	902
IsOn	903
IsReceiverStepAttenuatorPresent	904
IsReferenceBypassSwitchPresent	905
IsSParameter	906
IterationsTolerance	907

Kaiser Beta	908
L0	909
L1	910
L2	911
L3	912
Label	913
Label Testset	914
LastModified	915
LimitTestFailed	916
Limit Line Begin Stimulus	722
Limit Line End Stimulus	917
Limit Line Begin Response	721
Limit Line End Response	918
Limit Type	919
Line Display	920
LoadCharFromFile	921
LoadPort	922
LocalLockoutState	923
Locator	924
LODeltaFound	925
LODenominator	926
LOFixedFrequency	927
LOFrequencyDelta	928
OBS_LogMagnitudeOffset	929
LOName	930
LONumerator	931
LOPower	932
LORangeMode	933
Loss	934
Loss (sourceCal)	935
LOStage	936
LOStartFrequency	937
LOStopFrequency	938

MagnitudeOffset	939
MagnitudeSlopeOffset	940
Marker Annotation	941
Marker Bucket Number	724
Marker Format (all)	942
Marker Format (indiv)	844
Marker Interpolate(all)	943
Marker Interpolate (indiv)	894
Marker Number	944
Marker Position	945
Marker Readout	946
Marker ReadoutSize	947
Marker State	948
Marker Type	949
Marker X-axis Value	950
Marker Y-axis Value	951
Maximum Frequency	953
MaximumFrequency (capabilities)	954
MaximumFrequency (sourceCal)	955
MaximumIFFilterSampleCount	956
MaximumIFFrequency	957
MaximumIterationsPerPoint	958
MaximumNumberOfChannels	959
MaximumNumberOfTracesPerWindow	960
MaximumNumberOfWindows	961
MaximumNumberOfPoints	962
MaximumReceiverStepAttenuator	963
MaximumSourceALCPower	964
MaximumSourceStepAttenuator	965
MaxPreciseTuningIterations	966
Mean	967
Medium	968
Minimum Frequency	969

MinimumFrequency (capabilities)	970
MinimumFrequency (sourceCal)	971
MinimumIFFilterSampleCount	972
MinimumIFFrequency Property	973
MinimumNumberOfPoints	974
MinimumReceiverStepAttenuator	975
MinimumSourceALCPower	976
Mode	977
Multiplier	978
Name (Calset)	979
Name (CalKit object)	980
Name config	981
Name element	982
Name FOMRange	983
Name (meas)	984
Name (trace)	985
NetworkFilename	986
NetworkMode	987
NominalIncidentPowerState	988
NormalizePoint Property	989
Number (meas)	990
Number	991
Number of Points	992
Number of Points (Meas)	993
NumberOfPorts	994
NumberOfPorts(Testset)	995
NumberOfSweeps	996
Offset	997
OffsetReceiverAttenuator	998
OffsetSourceAttenuator	999
OmitIsolation	1000
OneReadoutPerTrace	1001
Options	1002

OrientECALModule	1003
OutputFixedFrequency	1005
OutputPort	1006
OutputPorts calset	1008
OutputPorts	1009
OutputRangeMode	1010
OutputSideband	1011
OutputStartFrequency	1012
OutputStopFrequency	1013
Parameter	1014
Parameter_elo	1015
Parent	1016
PassFailLogic	1017
PassFailMode	1018
PassFailPolicy	1019
PassFailScope	1020
PassFailStatus	1021
Path Property	1022
PathCalMethod	1023
PathConfiguration	1025
PathThruMethod	1026
Peak Excursion	1028
Peak Threshold	1029
PeakTo Peak	1030
Period	1031
Phase Offset	1032
Port 1	1033
Port 2	1034
Port 3	1035
Port2PdeembedCktModel	1036
Port2PdeembedState	1037
PortArbzImag	1038
PortArbzReal	1039

PortArbzState	1040
PortArbzZ0	1041
PortCatalog	1042
PortCLogic	1043
PortCMode	1044
PortDelay	1045
PortExtState	1046
PortExtUse1	1047
PortExtUse2	1048
PortFreq1	1049
PortFreq2	1050
Port Label	1051
PortLogic	1052
PortLoss1	1053
PortLoss2	1054
PortLossDC	1055
PortMatching_C	1056
PortMatching_G	1057
PortMatching_L	1058
PortMatching_R	1059
PortMatchingCktModel	1060
PortMatchingState	1061
PortMode	1062
PortsNeedingDeltaMatch	1063
Power Slope	1064
Power Acquisition Device	1065
Power Meter Channel	1066
Power Meter GPIBAddress	1067
PowerOnDuringRetraceMode	1068
PowerSweepRetracePowerMode	1069
PreciseTuningTolerance	1070
PreferInternalTriggerOnChannelSingle	1071
PreferInternalTriggerOnUnguidedCal	1073

R1 Input Path	1074
RangeCount	1075
rangeNumber	1076
Readings Per Point	1077
ReadingsTolerance	1078
ReadyForTriggerState	1079
Receiver Attenuator	1080
ReceiverCount	1081
ReceiverStepAttenuatorStepSize	1082
Receive Port	1083
ReduceIFBandwidth	1084
ReferenceCalFactor	1085
Reference Marker State	1086
Reference Level	1087
Reference Position	1088
RemoteCalStoragePreference	1089
SB_BalPortNegative	1090
SB_BalPortPositive	1091
SB_SEPort	1092
SBalMeasurement	1093
Scope	1094
Search Function	1095
SecurityLevel	1096
Segment Number	1097
SelectPort	1098
Show Statistics	1099
ShowProperties	1100
SICL	1101
SICLAddress	1102
Simultaneous2PortAcquisition	1103
Smoothing Aperture	1104
Smoothing ON/OFF	1105
SnPFormat	1106

Sound On Fail	1107
SourceCount	1108
Source Port	1109
SourcePortCount	1110
SourcePortMode	1111
SourcePortNames	1112
Source	1113
SourcePowerCalPowerOffset	1114
Source Power Correction	1115
Source Power Option	1116
Source Power State	1117
Span	1118
Span (Meas)	1119
SSB_BalPortNegative	1120
SSB_BalPortPositive	1121
SSB_SEPort1	1122
SSB_SEPort2	1123
SSBMeasurement	1124
Stage1Coefficients	1125
Stage1Frequency	1126
Stage1MaximumCoefficient	1127
Stage1MaximumCoefficientCount	1128
Stage1MaximumCoefficientSum	1129
Stage1MinimumCoefficientCount	1130
Stage2Coefficients	1131
Stage2MaximumCoefficient	1132
Stage2MaximumCoefficientCount	1133
Stage2MaximumCoefficientSum	1134
Stage2MinimumCoefficientCount	1135
Stage3FilterType Property	1136
Stage3FilterTypes Property	1137
Stage3Parameter Property	1138
Stage3ParameterMaximum Property	1139

Stage3ParameterMinimum Property	1140
Stage3Parameters Property	1141
Standard Deviation	1142
Standard For Class	1143
Start Frequency_CS	1145
Start Frequency	1146
Start Power	1148
Start	1149
Start (Meas)	1150
State	1151
State pulse	1153
Statistics Range	1154
StatusAsString	1155
Step Rise Time	1156
StepData	1157
StepTitle	1158
StimulusValues	1159
Stop Frequency	1160
Stop Frequency_CS	1162
Stop Power	1163
Stop	1164
Stop (Meas)	1165
strPort2Pdeembed_S2PFile	1166
strPortMatch_S2PFile	1167
SweepEndMode	1168
SweepHoldOff	1169
Sweep Generation Mode	1170
Sweep Time	1171
SweepTimeOption	1172
Sweep Type	1173
System Impedance Z0	1174
SystemName	1175
Target Value	1176

Test Port Power	1177
TestSetType	1179
Text	1180
ThruCalMethod (FCA)	1181
ThruCalMethod	1182
ThruPortList	1183
Title	1185
Title State	1186
Touchscreen	1187
Trace Math	1188
TraceTitle	1189
TraceTitleState	1190
Tracking	1191
Transform Mode	977
Trigger Delay	1192
TriggerInPolarity	1193
TriggerInType	1194
TriggerOutDuration	1195
TriggerOutInterval	1196
TriggerOutPolarity	1197
TriggerOutPosition	1198
TriggerOutputEnabled	1199
TuningIFBW	1200
TuningMode	1201
TuningSweepInterval	1202
Trigger Mode	1203
Trigger Signal	1204
Trigger Type	1205
Type (calstd)	1206
Type_ts	1207
TZImag Property	1208
TZReal Property	1209
UnusedChannelNumbers	1210

USBPowerMeterCatalog	1211
UsedChannelNumbers	1212
Use Power Loss Segments	1213
Use Power Sensor Frequency Limits	1214
User Range	1215
User Range Max	1216
User Range Min	1217
UserPresetEnable	1218
Valid	1219
ValidConnectorType	1220
Value element	1221
Values	1222
Velocity Factor	1223
View	1224
Visible	1225
WGCutoffFreq	1226
Width	1227
Window Number	1228
Window State	1229
XAxisAnnotation	1230
XAxis Point Spacing	1231
XAxisStart	1232
XAxisStop	1233
YAxisAnnotation	1234
YScale	1235
Z0	1236
Methods	
Abort	1237
AbortPowerAcquisition	1238
Acquire Cal Standard	1239
Acquire Cal Standard2	1241
AcquireCalConfidenceCheckECALEX	1243
AcquireStep	1244

AcquirePowerReadingsEx	1245
Activate	1247
Activate Marker	1248
Activate Window	1249
Add (channels)	1250
Add (measurement)	1251
Add (naWindows)	1254
Add (PowerLossSegment)	1255
Add (PowerSensorCalFactorSegment)	1256
Add (segments)	1257
Add Testset	1258
Allow All Events	1259
Allow Event Category	1260
Allow Event Message	1261
Allow Event Severity	1262
Apply	1263
ApplyDeltaMatchFromCalSet	1264
ApplyPowerCorrectionValuesEx	1265
ApplySourcePowerCorrectionTo	1266
AutoPortExtMeasure	1267
AutoPortExtReset	1268
Autoscale	1269
Averaging Restart	1270
Build Hybrid Kit	1271
Calculate Error Coefficients	1272
Calculate	1273
Change Parameter	1275
CheckPower	1278
Clear	1279
Close CalSet	1280
ComputeErrorTerms	1281
ConfigEnhancedNB2	1282
ConfigEnhancedNBIFAtten	1284

ConfigNarrowBand3	1285
ConfigurationFile	1287
Configurations	1288
Configure	1289
Continuous Sweep	1290
Copy	1291
CopyToChannel	1293
Create SParameterEX	1294
CreateCalSet	1296
CreateCustomMeasurementEx	1297
Create Custom Cal	1299
Create Measurement	1300
DataToMemory	1304
Delete	1305
Delete Marker	1306
Delete All Markers	1307
DeleteCalSet	1308
DeleteConfiguration	1309
Delete ShortCut	1310
Delta Marker	769
Disallow All Events	1311
Do Print	1312
DoECAL1PortEx	1313
DoECAL2PortEx	1314
DoneCalConfidenceCheckECAL	1316
DoReceiverPowerCal	1317
EnumerateCalSets	1319
Execute	1320
Execute Shortcut	1321
GenerateGlobalDeltaMatchSequence	1322
GenerateErrorTerms	1323
GenerateSteps	1324
Get AuxIO	1325

Get Cal Standard	1326
Get CalManager	1327
Get CalSetByGUID	1328
Get CalSetCatalog	1329
Get CalSetUsageInfo	1330
Get Cal Types	1331
Get Complex	1332
Get DataByString	1334
Get Data	1336
Get ECALModuleInfoEx	1338
Get ErrorCorrection	1339
Get Error Term	1340
Get Error Term2	1342
Get Error Term By String	1344
Get Error Term Complex	1346
Get Error Term Complex2	1348
Get Error Term Complex By String	1350
Get Error Term List	1352
Get Error Term List2	1354
Get ExternalTestSetIO	1355
Get Filter Statistics	1356
Get Guid	1357
get InputVoltageEX	1358
Get Input1	1360
Get IsolationPaths	1361
Get MaterialHandlerIO	1362
Get NAComplex	1363
Get NumberOfGroups	1365
Get Output	1366
Get Output Voltage	1367
Get OutputVoltage Mode	1368
Get Paired Data	1369
Get Port	1371

Get PortC Data	1372
Get PortNumber	1373
Get Reference Marker	1374
Get Required Eterm Names	1375
Get Scalar	1376
Get Shortcut	1378
Get SnPData	1379
Get SnpDataWithSpecifiedPorts	1380
Get SourcePowerCalDataEx	1382
Get SourcePowerCalDataScalarEx	1384
Get Standard	1386
Get Standard By String	1388
Get Standard Complex	1389
Get Standard Complex By String	1391
Get StandardsList	1392
Get Standard List2	1394
Get StandardsForClass	1395
Get StepDescription	1397
Get SupportedALCModes	1398
Get Test Result	1399
Get Trace Statistics	1400
Get X-Axis Values	1401
Get XAxisValues (Meas)	1402
Get X-axis Values Variant	1403
Has CalType	1404
Hold	1406
Hold (All Chans)	1407
Initialize	1408
Item	1409
LaunchCalWizard	1411
Launch Dialog	1412
LaunchPowerMeterSettingsDialog	1413
Load Configuration	1414

LoadFile	1415
Manual Trigger	1416
MessageText	1417
Next IF Bandwidth	1418
Number of Groups	1419
Open CalSet	1420
Parse	1422
Preset (app and chan)	1423
Previous IF Bandwidth	1424
Print To File	1425
Put Complex	1426
Put Data Complex	1428
Put ErrorTerm	1430
Put ErrorTerm2	1432
Put Error Term By String	1433
Put ErrorTerm Complex	1434
Put ErrorTerm Complex2	1436
Put Error Term Complex By String	1438
Put Formatted Scalar Data	1439
Put NAComplex	1441
Put Output	1443
Put Output Voltage	1444
Put Output Voltage Mode	1445
Put Port	1446
Put PortCData	1448
Put Scalar	1449
Put Shortcut	1451
Put SourcePowerCalDataEx	1452
Put SourcePowerCalDataScalarEx	1453
Put Standard	1454
Put Standard By String	1456
Put Standard Complex	1457
Put Standard Complex By String	1459

Quit	1460
Read Data	1461
Read Raw	1462
Recall	1464
Recall Kits	1465
Remove	1466
Reset	1468
ResetLOFrequency	1469
ResetTuningParameters	1470
Restore Cal Kit Defaults	1471
Restore Cal Kit Defaults All	1472
Resume	1473
Save	1474
Save (CalSet)	1476
Save CalSets	1477
SaveCitiDataData	1478
SaveCitiFormattedData	1479
Save File	1480
Save Kits	1481
Search Filter Bandwidth	1482
Search Max	1483
Search Min	1484
Search Next Peak	1485
Search Peak Left	1486
Search Peak Right	1487
Search Target	1488
Search Target Left	1489
Search Target Right	1490
SelectCalSet	1491
Set All Segments	1492
Set BBPorts	1494
Set Cal Info	1495
SetCallInfoEx	1497

Set Center	1499
Set CW	1500
Set Electrical Delay	1501
Set FailOnOverRange	1502
Set IsolationPaths	1503
Set PowerAcquisitionDevice	1505
Set Frequency LowPass	1506
Set Reference Level	1507
Set SBPorts	1508
Set SSBPorts	1509
Set StandardsForClass	1510
Set Start	1512
Set Stop	1513
Show Marker Readout	1514
Show Status Bar	1515
Show Stimulus	1516
Show Table	1517
Show Title Bars	1518
Show Toolbar	1519
Single	1520
Store	1521
StoreConfiguration	1522
StringToNACalClass	1523
StringtoNAErrorTerm2	1525
TestsetCatalog	1526
UserPreset	1527
UserPresetLoadFile	1528
UserPresetSaveState	1529
Write Data	1530
Write Raw	1531
WriteSnpFileWithSpecifiedPorts	1533
Events	
OnCalEvent	1535

OnChannelEvent	1537
OnDisplayEvent	1539
OnHardwareEvent	1541
OnMeasurementEvent	1543
OnSCPIEvent	1545
OnSystemEvent	1547
OnUserEvent	1549
Examples	
CalSet_Examples	1550
Getting Trace Data from the Analyzer	1552
Perform a Guided Cal using COM	1555
Perform an ECal	1558
Perform a Source Power Cal	1560
Perform an Unguided Cal using COM	1563
Perform an Unknown Thru or TRL Cal	1566
Perform Global Delta Match Cal	1568
Writing Cal Set Data using COM	1569
Upload a Source Power Cal	1571
Upload Segment Table	1573
Create and Cal an SMC Measurement	1575
Create and Cal a VMC Measurement	1577
Create an SMC Fixed Output Meas	1580
Create a Narrowband Pulsed Measurement (E836x)	1582
Create a Narrowband Pulsed Measurement (PNA-X)	1584
Create a Wideband Pulsed Measurement (PNA-X)	1588
Create a Balanced Measurement	1590
Perform an ECAL Confidence Check	1594
Limit Line Testing Example with COM	1596
E5091Testset Control	1597
Errors and the SCPIStringParser Object	1598
External Testset Control	1600
PathConfiguration Example	1602
Events Example	1603

Concepts

Configure for COM-DCOM Programming	1604
COM Fundamentals	1609
Getting a Handle to an Object	1613
Collections in the Analyzer	1616
COM Data Types	1617
PNA Automation Interfaces	1619
Working with the Analyzer's Events	1621
Read and Write Calibration Data using COM	1625
C and the COM Interface	1627
Using .NET	1630

SCPI

Commands

SCPI Command Tree	1632
Common Commands	1634
Abort	1637
Calculate	
Correction	1638
Custom	1644
Data	1648
Equation	1655
Filter	1658
Format	1664
FSimulator	1666
Function	1668
Limit	1673
Marker	1679
Math	1696
Mixer	1698
Normalize	1699
Offset	1702
Parameter	1705
RData	1713

Smoothing	1715
Transform	1718
Control	1727
Display	1738
Format	1754
Hardcopy	1756
Initiate	1757
Memory	1760
Output	1769
Route	1770
Sense	
Average	1771
Bandwidth	1773
Correction	
Correction	1775
Guided Cal	1794
Cal Kit	1812
Cal Stds	1820
Cal Sets	1841
Extensions	1852
Session	1861
SMC	1867
VMC	1875
Couple	1885
FOM	1887
Frequency	1896
IF	1900
IF (PNA-X)	1905
Mixer	1914
Multiplexer	1932
Offset	1943
Path	1947
Power	1952

Pulse	1953
Roscillator	1957
Segment	1958
Sweep	1968
XAxis	1975
Source	1976
Source Correction	1987
Status	2003
System	2019
Trigger	2039
Examples	
Catalog Measurements	2052
Create an FOM Measurement	2053
Create an S-Parameter Measurement	2056
Create a Balanced Measurement	2057
Channels, Windows, and Measurements using GPIB	2062
Setup Sweep Parameters	2064
Setup the Display	2065
Triggering the PNA	2067
GPIB using Visual C	2072
Guided 2-Port or 4-Port Cal	2076
Guided 2-Port Comprehensive Cal	2079
Guided ECal	2085
Guided Mechanical Cal	2087
Guided 1-Port on Port 2	2089
Guided TRL Calibration	2091
Guided Unknown Thru or TRL Cal	2093
Global Delta Match Cal	2095
Unguided ECAL	2096
Unguided 2-Port Mech Cal	2097
Unguided 1-Port Cal on Port 2	2099
Unguided 2-Port Cal on a 4-Port PNA	2101
Unguided_Cal_on_Multiple_Channels	2110

ECAL Confidence Check	2114
Source and Receiver Power Cal	2117
Upload a Source Power Cal	2126
Perform a Sliding Load Cal	2130
Load Eterms during Cal Sequence	2131
Create New Cal Kit	2132
Modify a Calibration Kit	2138
Create and Cal a VMC Measurement	2140
Create and Cal an SMC Measurement	2143
Create an SMC Fixed Output Measurement	2145
Getting and Putting Data	2148
Getting and Putting Data (definite block transfers)	2150
Control an External Test Set	2153
Transfer Data using GPIB	2155
Establish a VISA Session	2157
Status Reporting	2159
Create a Custom Power Meter Driver	2161
GPIB Pass Through	2165
PNA as Controller and Talker/Listener	2166
Send SCPI Commands using a Socket Client	2168
Concepts	
GP-IB Fundamentals	2172
The Rules and Syntax of SCPI Commands	2177
How to Configure for GPIB, SCPI, and SICL	2181
Getting Data from the Analyzer	2185
Understanding Command Synchronization	2189
Calibrating the PNA Using SCPI	2194
The PNA as a USB Device	2199
Reading the Analyzer's Status Registers	2200
Configure for VISA and SICL	2203
VEE Examples	
VEE Pro Runtime	2206
Basic Control VEE	2207

ECal with Confidence Check using VEE	2209
Data Access Map	
DataMapSet	2210
Rear Panel IO Connectors	
Interface Control	2211
Auxiliary IO connector	2217
External TestSet IO Connector	2222
Material Handler IO Connector	2228
Pulse IO (PNA-X)	2241
Power IO (PNA-X)	2243
Programming Guide	2245
New Programming Commands	2246
COM versus SCPI	2257
Remotely Specifying a Source Port	2259
Using Macros	231
Time Domain	
Time Domain	516
Frequency Offset (Opt 080)	
Frequency Offset (Option 080)	2260
Frequency Converting Device Measurements	2270
Frequency Offset Calibration	2271
Conversion Loss	2273
Conversion Compression	2277
Isolation	2279
Harmonic Distortion	2282
Return Loss and VSWR	2284
Frequency Converter Application (Opt 083)	
Known Issues	2286
Overview	2287
Using the Frequency Converter Application	2289
Calibrations	2299
Configure a Mixer	2320
Configure an External LO Source	2329
How to make a VMC Fixed Output Measurement	2337

How to make an SMC Fixed Output Measurement	2346
Embedded LO (Opt 084)	2354
Characterize Adaptor Macro	379
SMC with a Booster Amp	2360
Networking the PNA	
Drive Mapping	435
Connecting the PNA to a PC	2363
Easy vs Secure Configuration	2366
Changing Network Client	2367
Product Support	
Troubleshoot the PNA	2368
List of Error Messages	2372
About Error Messages	2433
Accessories	2437
USB to GPIB Adapter	2444
Firmware Update	2447
PNA Configurations and Options	2453
Option Enable	2462
Instrument Calibration	2466
Other Resources	2467
SCPI Errors	2468
Technical Support	2479
Diagnostic Tools and Adjustments	
3.8 GHz Frequency Adjust	2484
10 MHz Reference Adjust	2486
Display Test	2488
LO Power Adjust	2489
Offset LO Power Adjustment	2491
Operators Check	2492
Option H11 Verification	2496
Phase-Lock IF Gain Adjust	2499
System Verification	2501
Source Cal	2511

Receiver Cal	2514
Receiver Display	2517
IF Access	
IF Access User Interface Settings	2519
External Test Head Configuration	2523
PNA-X IF Path Configuration	2527
Pulsed Application	2531
Controlling External Devices	
E5091 Test Set Control	2544
External Testset Control	2548
Interface Control	2211
USB to GPIB Adapter	2444
Aux IO Connector	2217
Handler IO Connector	2228
Test Set IO Connector	2222
Power IO Connector (PNA-X)	2243
Configure an External LO Source	2329
Synchronize an External PSG Source	485
Specifications	
E8356A, 57A, 58A	2560
E8801A, 02A, 03A	2561
N3381A, 82A, 83A	2562
E8361A	2563
E8362A, 63A, 64A	2624
E8362B, 63B, 64B	2625
N5230A 2-Port	2671
N5230 4-Port	2749
N5242A	2784
N5250A	2876
Glossary	2883

What's New in PNA Code Version A.07.50

- [USB / LAN power sensor support](#)
- [Increased Number of Points to 20,001](#)
- ['Extra' Security Setting](#)
- [Wideband Pulsed Application](#) (PNA-X)
- [Expanded right-click mouse capabilities](#) (PNA-X)
- [IF Path Configuration for all receivers](#) (PNA-X)
- [External Source Control](#)
 - Consistency improvements
 - Generic (Non-Agilent) sources are NOT supported in this release. This could result in errors in remote programs.
- [Copy Source Power Cal Macro](#)

Note: This firmware revision can be installed on ALL PNA models that use Windows XP.

[Highlighted text](#) on the remainder of this page describes features that are **NEW** for most PNA models. These features have already been released for PNA-X models.

See [New 7.50 Programming Commands](#)

To check your PNA code version, click **Help**, then **About Network Analyzer**

What's New in PNA Code Version 7.22

- [Enhanced Response Calibration](#)
 - [PNA-X Support for Millimeter-wave](#) (Please read **CAUTION**)
 - [External Source Control for ALL measurement types](#)
 - [Embedded LO Measurements](#)
 - [ADC Receiver Measurements](#)
-

What's New in PNA Code Version 7.21

- [Wider IF Bandwidths](#) (PNA-X Only)

- [Produce receiver power calibration of PNA reference receiver](#)
 - [Isolation Cal \(SCPI and COM only\)](#)
-

What's New in PNA Code Version 7.20

[New PNA-X models](#) includes the following features:

- [Internal Second Source \(some models\)](#)
- [Improved Front-Panel User Interface](#)
 - [10.4 inch Hi resolution LCD Touchscreen](#)
 - [Fully functional Hardkey / Softkey layout](#)
 - [Trace Zoom](#)
 - [Trace Max - isolates a single trace](#)
 - [Marker Drag with mouse or touchscreen](#)
 - [Expanded Right-click mouse capabilities](#)
 - [Custom Trace Titles](#)
 - [Memory Normalize](#)
- [Increased Rear-Panel Capabilities](#)
 - [Auxiliary Triggering](#)
 - [Pulse I/O](#)
 - [Power I/O](#)
 - [IF Path Configuration](#)
- [RF Path Configurator](#)
- [Measurement Classes](#)
- [Source](#) and [Receiver](#) Attenuation Offset
- [Updated Pulsed Application](#)
- [True Mode Stimulus Application](#) (Webpage)

New [PNA Preferences](#) Help Topic

See [New 7.20 Programming Commands](#)

What's New in PNA Code Version 7.1

- [New PNA-L 4-port models](#)
- [FOM](#) and [Power](#) dialog support for 2 Internal Sources

See [New 7.1 Programming Commands](#)

What's New in PNA Code Version 6.2

- [Option 551 Multiport Test Set Control](#)
- [QSOLT Calibration Method](#)
- [Calibration Preferences](#)
- [Unlimited number of windows](#)
- [Source Power Cal using a PNA receiver only](#)
- [Choose ports for saving sNp files](#)
- [Channel Trigger State added to Status Bar](#)
- [FCA and Cal Set viewer data can be saved to *.prn files](#)
- [Cal Channel created for performing calibrations](#)

New in PNA Help:

- [Improved FOM Setup Examples](#)

See [New 6.2 Programming Commands](#)

What's New in PNA Code Version 6.04

- [Updated Print and Page Setup dialog](#)
- [Selectable Power Sweep retrace level](#)
- [Turn power OFF during a retrace in single band sweep.](#)
- [Inverse Smith](#) and [Unwrapped Phase](#) added to PNA display formats.
- [Opt. 082 SMC Measurements](#)
- [Equation Editor](#)

- [Remote SCPI over LAN from non-windows PC using Sockets/Telnet](#)
- [Citifiles recalled to channel 32 and below.](#)
- [ECal User-Characterization allowed beyond ECal module frequency range](#)

New in PNA Help:

- FCA Measurement Examples ([VMC](#) and [SMC](#))
- [Comparing the PNA Delay Functions](#)
- [PNA Online Web Help](#)

See [New 6.04 Programming Commands](#)

What's New in PNA Code Version 6.0

- [Calibrate using an External Trigger Source](#)
(This could affect your remote programs.)
- [Calibrate with an Offset Load Standard](#)
(Cal Kits that you use may now include this standard.)
- [Corrected Measurement visible in Cal Window](#)
- [External Testset Control](#)
- [New FCA capabilities](#)
- [Characterize Adaptor Macro](#) creates S2P files from two 1-port Cal Sets.
- [1.1 GHz CPU and related capabilities](#)
- [Error-checking and Disk Defragmenter recommendation](#)
- [Agilent VEE Runtime Installed](#)
- [*.csa file type is default for Save As](#) and [Auto Save](#)
- [Bandwidth Markers search for "Valley" response](#)
- [SimCal SCPI Preference](#)
- [Application Code \(software\) Revision number](#) now contains 6 digits instead of 4.
(This could affect your remote [SCPI](#) and [COM](#) programs.)
- Rev 6.0 is NOT supported on PNA models using Windows 2000. For more information, see the [PNA support website](#).
- Rev 6.0 is NOT supported on PNA models N3381A, N3382A, N3383A.

Last modified:

9/28/06 Cross-browser

PNA User Accounts and Passwords

When the PNA power is switched on, it automatically logs into Windows using the default user name and password. This gives anyone full access to the analyzer. The following steps can be taken to increase security of your PNA.

- Require users to logon when the PNA computer is turned ON - [Learn how to enable this feature](#)
- Setup individual accounts on the PNA with varying level of access - Learn how to [Add or Change User Accounts and Passwords](#)

[Please read about Anti-virus protection for your PNA](#)

Existing User Accounts

The following user accounts already exist on new PNAs:

- **Default User Account**
Beginning in April 2004, PNAs were shipped from the factory with the default user name is **PNA-Admin** and the password is **agilent**.
For PNAs shipped before that, the default user name is **Administrator** and the password is either **tsunami** or left blank.
These accounts are created by Windows and cannot be deleted.
We recommend you change the password and, if desired, the user name.
DO NOT FORGET YOUR NEW PASSWORD. You will not be able to start your PNA without it.
- **Agilent Account** This Administrator account is created by Agilent for service purposes. Each PNA has a unique password for this account. Although allowed by Windows, please do not delete this account.
- **Guest Account** This account allows anyone to type in any name, without password, and gain limited access to the PNA files. This account is created by Windows and cannot be deleted. It can be renamed. This account is turned OFF when the PNA is shipped.

Notes

- Although allowed by Windows, do NOT setup an Administrator account without a password. Internet viruses look for, and exploit, this condition.
- You can create as many user accounts as you like.
- The user name is not case sensitive. The password IS case sensitive.
- The PNA local policies are set so that, if logon is required, you must retype the user name (and password) every time. Do not change the local policies on the PNA.

How to Require Users to Logon when the PNA Computer is turned ON.

[How do I know which Operating System I have?](#)

Windows 2000	Windows XP
On the Windows taskbar, click Start , then Settings , then Control Panel	On the Windows taskbar, click Start , then Run
Double click Users and Passwords	Type control userpasswords2 then click OK
Check Users must enter a user name and password to use this computer.	Check Users must enter a user name and password to use this computer.

To turn this function OFF, perform the same procedure, but clear the checkbox. The account that is selected when the checkbox is cleared is the account that is automatically logged on when the PNA is turned ON.

Add or Change User Accounts and Passwords

If the analyzer is in a secure environment, you can setup PNA users by name and grant various levels of access. This is particularly important when the PNA is remotely controlled or accessed over LAN.

You can designate a person as the administrator and then configure the PNA to allow others to use it with reduced permissions. That is, other people can be signed on to use the analyzer but they will not have the ability to perform all of the administrative functions that you can as the administrator.

How to add or change a user account and password

[How do I know which Operating System I have?](#)

Windows 2000	Windows XP
In the analyzer System menu, point to Configure , and click Control Panel .	Click Start, then point to Settings, then click Control Panel
In the Control Panel window, scroll down and select the Users and Passwords application.	Click User Accounts
On the Users tab, if the Add button appears dimmed, select the Users must enter a user name and password to use this computer check box near the top of the window.	Follow the prompts to: <ul style="list-style-type: none"> • Change an account • Create a new account • Change the way users log on or off.
Click Add to enter the information for yourself or for another user.	CAUTION: Although allowed by Windows, do NOT allow an Administrator account without a password. Internet viruses look for, and exploit, this condition.
In the User name box, enter a user name for the user. In the Full name box, enter the full name of the user.	

In the Description box, enter a description for the user. Then, click Next .	
In the Password box, have the user type a password. Have the user retype the password in the Confirm password box. Then, click Next .	
<p>Select the level of access that you wish to grant this user.</p> <p>Note: Standard users and restricted users are NOT able to switch GPIB modes and install firmware.</p> <p>There are several other levels of security that you may grant in the Other list. A description of each of these other levels is displayed beneath the Other box when it is selected. Then, click Finish.</p>	Note: Standard users and restricted users ARE ABLE to switch GPIB modes and install firmware.
In the Users for this computer box, validate the user name and security level group of the user.	
If you want this user to be able to use the network analyzer without entering their password each use, clear the Users must enter a user name and password to use this computer check box. Click OK .	
When the Automatically Log On window is displayed, have the new user type their password in the Password box and have them retype the password in the Confirm Password box.	
Click OK to complete this user addition.	
In the File menu, click Close to close the Control Panel.	

PNA Computer Properties

The PNA uses a personal computer and a Windows operating system. The following are common tasks that you may need to perform on the PNA computer.

[View or change Full Computer Name](#)

[Check IP Address](#)

[Check the amount of RAM](#)

[Check CPU Speed](#)

[Set Time and Date](#)

[Turn OFF Speaker](#)

[Other Administrative Task Topics](#)

View or change Full Computer Name

Your PNA has a unique computer name that identifies it on a network. To view or change the computer name, you must first [minimize the PNA](#) application.

[How do I know which Operating System I have?](#)

Windows 2000	Windows XP
On the desktop, right-click My Computer	On the desktop, right-click My computer Icon
Click Properties	Click Properties
Click the Network Identification tab at the top of the dialog box	Click the Computer Name tab at the top of the dialog box
Click Properties	Click Change next to "..rename this computer.." message
Type your new Computer Name	Type your new Computer Name

Note: To add your computer to a domain, or to set up the networking configuration, contact your company's I.T. department. This setup is custom for each company.

To restore the PNA application, click **PNA Analyzer** in the task bar at the bottom of the screen.

Check IP Address

If your PNA is connected to a LAN, you can view the IP address and other networking information.

1. [Minimize the PNA](#) application
2. Click **Start**, then **Run**
3. Type **cmd**, then click **OK**
4. At a DOS prompt, type **ipconfig /all**

Check the amount of RAM

Random Access Memory (RAM) is the amount of working memory in your computer. The PNA application can require up to 512 MB of RAM depending on the settings you use. If your PNA is operating slowly when you have more than four windows open or if you routinely use more than 1601 data points, you may need to upgrade to 512 MB.

To view the amount of PNA RAM, you must first [minimize the PNA](#) application.

[How do I know which Operating System I have?](#)

Windows 2000	Windows XP
On the desktop, right-click My Computer	On the desktop, right-click My computer Icon
Click Properties	Click Properties
Click the General tab at the top of the dialog box	Click the General tab at the top of the dialog box
The amount of RAM appears at the bottom of the window.	The amount of RAM appears at the bottom of the window.

To restore the PNA application, click **PNA Analyzer** in the task bar at the bottom of the screen.

Check CPU Speed

The speed of the PNA processor (CPU) is a factor in determining how quickly the PNA processes data. See [PNA configurations](#) to learn if you can upgrade your PNA CPU. To check your PNA CPU speed, you must first [minimize the PNA](#) application.

[How do I know which Operating System I have?](#)

Windows 2000	Windows XP
On the desktop, right-click My Computer	On the desktop, right-click My computer Icon
Click Manage	Click Properties
Open System Tools folder, then click System Information .	Click the General tab at the top of the dialog box
Click System Summary .	The CPU speed appears near the bottom of the window
After refreshing, the CPU speed appears at the end of the Processor entry.	

To restore the PNA application, click **PNA Analyzer** in the task bar at the bottom of the screen.

Set Time and Date

Both Windows 2000 and XP

To set the time and date on your PNA, you must first [minimize the PNA](#) application.

1. Move the cursor to the lower corner of the screen
2. When the taskbar appears, double-click on the displayed time. This opens the **Date/Time Properties** dialog box.
3. Change the date, time, and time zone as appropriate.

To restore the PNA application, click **PNA Analyzer** in the task bar at the bottom of the screen.

Turn OFF | ON Speaker

When the PNA is generating errors, you may want to turn the speakers off to quiet the beeping. [Learn more about errors.](#)

1. To turn ON or OFF the PNA speaker, you must first [minimize the PNA](#) application.
2. Then click **Start, Control Panel**, then **Sounds and Audio Devices**.
3. Under **Device Volume**, check **Mute**.

Last Modified:

20-Sep-2007 Added speaker OFF

Run Error Check and Disk Defragmenter

When the PNA is shutdown unexpectedly or power is removed without first shutting down, large amounts of Hard Disk Drive space is rendered unusable. If shutdown in this manner enough times, the PNA could become unstable and no longer work.

This Hard Disk Drive space can be recovered by first running Windows **Error-checking** to find and correct errors on the disk, and then the **Disk Defragmenter** to recover Hard Disk Drive space.. These programs should be run routinely, about every 1 to 4 weeks, depending on how often the PNA is unexpectedly shutdown.

To learn more about Disk Defragmenter, see the Windows Help file.

Follow this procedure to run these programs:

Windows 2000	Windows XP
On the desktop, double-click My Computer	On the desktop, double-click My Computer
Select Local Disk (C:)	Select System OS
Click File , then Properties	Click File , then Properties
Click the Tools tab	Click the Tools tab

Error-checking

- Click **Check Now**.
- Check **Automatically fix file system errors**.
- Click **Start**.
- Click **Yes** to run disk check on next restart.
- Manually [restart the PNA](#). The disk check will run before Windows restarts.

Approximately every six months, check the second box in addition to the first box. The error-checking process takes much longer, but performs a more complete check.

Defragmentation

- Click **Defragment Now...**
- Click **Defragment** to begin the defragment process.
- Click **Close** when defragmentation is complete.

Recovering from PNA Hard Drive Problems

The leading cause of PNA failures is problems with the PNA Hard Disk Drive (HDD). These problems are usually preventable (see [Preventing PNA HDD Problems](#)), and in many cases, recoverable. The following could save you weeks of downtime and the cost of replacing your PNA HDD.

This document is now on the Agilent PNA Support Website: <http://na.tm.agilent.com/pna/>. When at this webpage, click the **Hard Drive Recovery** link.

If your PNA does experience a Hard Disk Drive Problem, you will not be able to access this Help file, but you may be able to access the Internet from another computer.

Microsoft Windows® XP / 2000 Considerations

In this topic:

- [Microsoft Windows on the PNA](#)
 - [Using USB](#)
 - [Plug & Play Stability and Security](#)
 - [LAN Connections](#)
 - [Single and Double Click option](#)
 - [Windows XP Theme](#)
 - [Printing](#)
-

Microsoft Windows on the PNA

- Beginning in April 2004, the PNA is shipped from the factory with a modified version of Microsoft Windows XP operating system. Previously, the PNA was shipped with Windows 2000. The PNA application performs identically using these two operating systems.
- Beginning in Dec. 2005 with PNA Rev 6.0, firmware cannot be upgraded on PNA models that use Microsoft Windows 2000. For more information, see the [PNA support website](#).

To determine which Operating System is installed on your PNA:

1. [Minimize the PNA application](#)
2. On the PNA desktop, click **Start**.
3. Along the side of the Start menu appears one of the following:
 - **Windows 2000 Professional**
 - **Windows XP Professional**

VERY IMPORTANT Protect your hard drive!

The leading cause of PNA failures is problems with the PNA Hard Disk Drive (HDD). These problems are usually preventable, and in many cases, recoverable. [Learn more about protecting your PNA](#).

Using USB

The PNA has at least two USB ports for connecting devices: one on the front panel and at least one on the [rear](#)

[panel](#). The main advantages of USB are “hot” connects and disconnects and fast data transfer speeds. Electronic Calibration modules are now available with USB connections.

The first time you plug a device into a USB port there is some wait time. Windows reports it is identifying the hardware, then searching for the correct driver, then installing the driver (if it was found).

Connecting that same device back into that same port later is quick and easy, but if you move the device to a different USB port, you will have to wait through the hardware ID and driver search again.

[Learn about USB limitations.](#)

Note: Certain USB devices (such as ECAL modules) require you be logged on with [Administrator privileges](#) the first time you plug them into the PNA. This must be done for each serial number. Click **Next** to choose the default settings when installing new USB devices.

Plug & Play Stability and Security

Plug & Play capabilities is similar to Win 95 and 98. It provides both a stable and secure operating environment. You may notice also that it greatly reduces the number of required reboots.

LAN Connections

Windows supports DHCP and fixed IP addressing. Also, “Hot” connect and disconnect of the LAN cable, as well as a visual indicator of LAN status in system tray area, makes LAN connections more intuitive. In addition, the Hardware Wizard helps users with system hardware configuration.

Single and Double Click option

By default, Windows allows a single-click method of launching icons. To revert to double-clicking, click **Start**, then **Settings**, then **Control Panel**, then click **Mouse**. In the Mouse Properties dialog, select **Double-click to open an item**. Then click **OK**.

Windows XP Theme

The PNA application is designed for, and best viewed in, **Windows Classic** theme. To change the theme from Windows XP to Windows Classic,

1. [Minimize the PNA application](#).
2. Right-click on the Desktop, then click **Properties**.
3. On the Theme tab, under **Theme** select **Windows Classic**.

Printing


Adding a printer should be done outside of the PNA application. [Learn more.](#)

Front Panel Tour

PNA-L and Microwave Models

[See the PNA-X Front Panel Tour](#)

Click on the sections of the front panel for information.

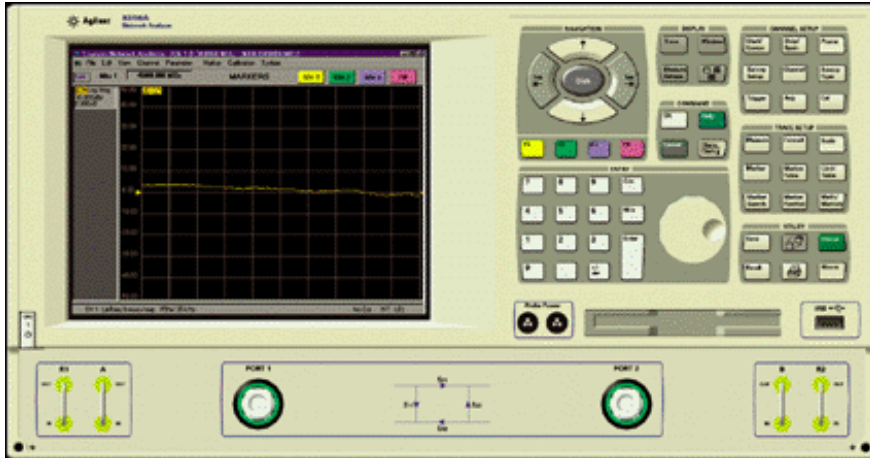

Power Switch

Toggles the analyzer between the On and Hibernate conditions. This switch is not connected to the power supply.

[Learn more about powering the PNA ON and OFF.](#)

Front-Panel Access Jumpers

Provides access to the measurement path. [Learn more.](#)

Test Ports

PNA test ports internally switch between source and receiver allowing measurement of your device in two directions. Two different lighting methods are used to indicate the source and receiver port:

For 9 GHz and below PNA models

- A green light indicates the source port.
- An orange light indicates the receiver port.

All other PNA models:

- An illuminated image next to the test port indicates the source.

See [Input Damage Levels](#)

USB

This Type A Universal Serial Bus (USB) connector allows you to connect a keyboard, mouse, ECAL module, or other USB device.

- Contact 1: Vcc; 4.75 to 5.25 VDC, 500 mA maximum.
- Protected with an automatically-resettable 1A fuse.
- Contact 2: –Data
- Contact 3: +Data
- Contact 4: Ground

[See USB limitations.](#)

3.5" Floppy Disk Drive

Installs files on the analyzer hard drive or stores data files from the analyzer. Access the disk drive by using Windows Explorer.

- Unformatted Data Capacity: 2MB
- Compatible with: High Density (2HD), and Normal Density (2DD)
- Transfer Rate: 500 kbits/second

Probe Power

The 3-pin (m) connectors supply power for active probes.

- Top Pin: Ground
- Left Pin: +15 VDC $\pm 2\%$, 400 mA maximum; protected by PTC @0.5A
- Right Pin: –12.6 VDC $\pm 5\%$, 300 mA maximum; protected by PTC @0.5A

(PTC=slow acting, automatically resettable fuse)

The [PNA-X](#) does NOT provide probe power.

Navigation Keys

These keys allow you to navigate through menus and dialog boxes and select choices from the active entry toolbar.

Left / Right	Moves left and right through menus Moves tab-left and tab-right within dialog boxes
Up / Down	Moves up and down through menus Behaves as follows in a dialog box: <ul style="list-style-type: none">• Modifies a numeric value• Moves through items in a drop-down list• Moves through options buttons in a group of option buttons
Click	Makes a selection just like a mouse click
F1...F4 Keys	Selects choices from the active entry toolbar. The color of the key corresponds to the active entry toolbar choice. Learn more about Active Entry Keys.

Entry Keys

These keys allow you to enter values for measurement settings.

Numeric Keys	Selects values for measurement settings, then press Enter or G/n or M/u to complete the selection.
Units Keys	Completes the value selection, assigning a unit of measurement. Select either <ul style="list-style-type: none">• G/n (Giga/Nano) E12 or E-12• M/u (Mega/micro) E6 or E-6 Then press Enter to complete the value entry.
Decimal point	Enters a decimal point to designate fractions of a whole number.
Plus - Minus - Backspace Key	Toggles between a positive and negative value entry if it is the first key pressed in the entry. Backs up the cursor and deletes any previous selection.
Enter	Enters the values that you select for the measurement settings.
Knob	Rotate to increase or decrease the value of the active entry.

Display Keys

Controls window and trace configuration

Trace	First press brings up the Trace Active Toolbar. Subsequent presses allow you to cycle through the measurement traces in a window, making each trace active in turn. You can make modifications only to active functions. This key also allows you to create or delete traces, using the function keys.
Window	<p>First press brings up the Window Active Toolbar, where you can create, select, and delete windows, using the function keys.</p> <p>Subsequent presses of this key cycle through the windows that are currently set up, making each window active in turn. You can make size modifications only to an active window. A window must also be active to cycle through the traces in the window.</p>
Measure Setup	Allows you choose from four pre-configured measurement setups .
Arrange	Allows you to choose from four window arrangements: Overlay, Stack 2, Split 3, Quad 4. Learn More about Arranging the Display

Channel Setup Keys

Controls channel settings.

Start/Stop	Sets the frequency range of the channel.
Center/Span	
Power	Sets the source power level .
Sweep Setup	Defines several sweep settings .
Channel	Select an active channel, or delete the active channel. A channel must be active to modify any channel settings. Learn more about Channels .
Sweep Type	Sets the sweep type and associated settings.
Trigger	Sets how the start of the measurement sweep is initiated.
Avg	Applies measurement averages which reduces noise. The analyzer performs a complex exponential average of a number of sweeps that you specify. Learn more about Averaging
Cal	Initiates a measurement calibration. The Calibration Wizard appears if you press Menu/Dialog, Cal. Otherwise, pressing the Cal key makes the calibration active entry toolbar appear. Learn more about Calibration

Command Keys


OK	Closes a dialog box and enters any values made in the dialog box.
Help	Launches the analyzer Help file.
Cancel	Closes a dialog box.
Menu/Dialog	Allows you to browse the menus with the Navigation keys. Also allows you to display dialog boxes by pressing Menu/Dialog and then a key in the Channel, Trace, or Utility blocks. Learn more.

Trace Setup Keys


Performs many trace settings. [Learn more about Traces.](#)

Measure	Allows you to select an S-parameter measurement. Through the dialog box you can also select an arbitrary ratio, or unratioed power measurement. Learn more.
Format	Allows you to select the format the analyzer uses to display the measurement data. Learn more.
Scale	Allows you to specify the value the analyzer uses to scale the displayed measurement response. You can also let the analyzer automatically set the Y axis scales to fit the entire measurement trace on the screen. Learn more.
Marker	Allows you to activate a marker and set the value. Markers provide numerical readout of measured data. Learn more.
Marker Table	Displays the table of values that allow you to view the data readout for all of the markers on the active trace. Learn more.
Limit Table	Displays the table of values that allow you to create pass / fail testing based on these limit segments. Learn more.
Marker Search	Provides access to the marker search functions. If there is no marker displayed, this key will activate a marker. Learn more.
Marker Function	Allows you to change measurement settings, based on the location of an active marker. If there is no marker displayed, this key will activate a marker. Learn more.
Math/Memory	Allows you to select math and memory functions that the analyzer performs on the measurement data. Learn more.

Utility Keys

Save	Allows you to save instrument states, calibration data, and measurement data to a file. Learn more.
	Changes the selected window to the full measurement screen size and then restores it to the previous window size. Restores the PNA application if minimized. Learn more.
Preset	Presets the PNA. Learn more.
Recall	Recalls a file from the hard drive. Learn more.
Print	Prints a displayed measurement. Learn more.
Macro/Local	<p>When the analyzer is being controlled through automation, pressing this key allows the analyzer to respond to front panel key presses.</p> <p>When the analyzer is in normal operation, pressing this key accesses a set of user macros that are in the form of executable files. You can title and store up to 12 macros. When you repeatedly press this key, the titles in the active entry toolbar rotate through three sets of four titles.</p> <p>The executable files must already be on the hard drive and setup as a macro. Learn more.</p>

PNA-X Front-Panel Tour

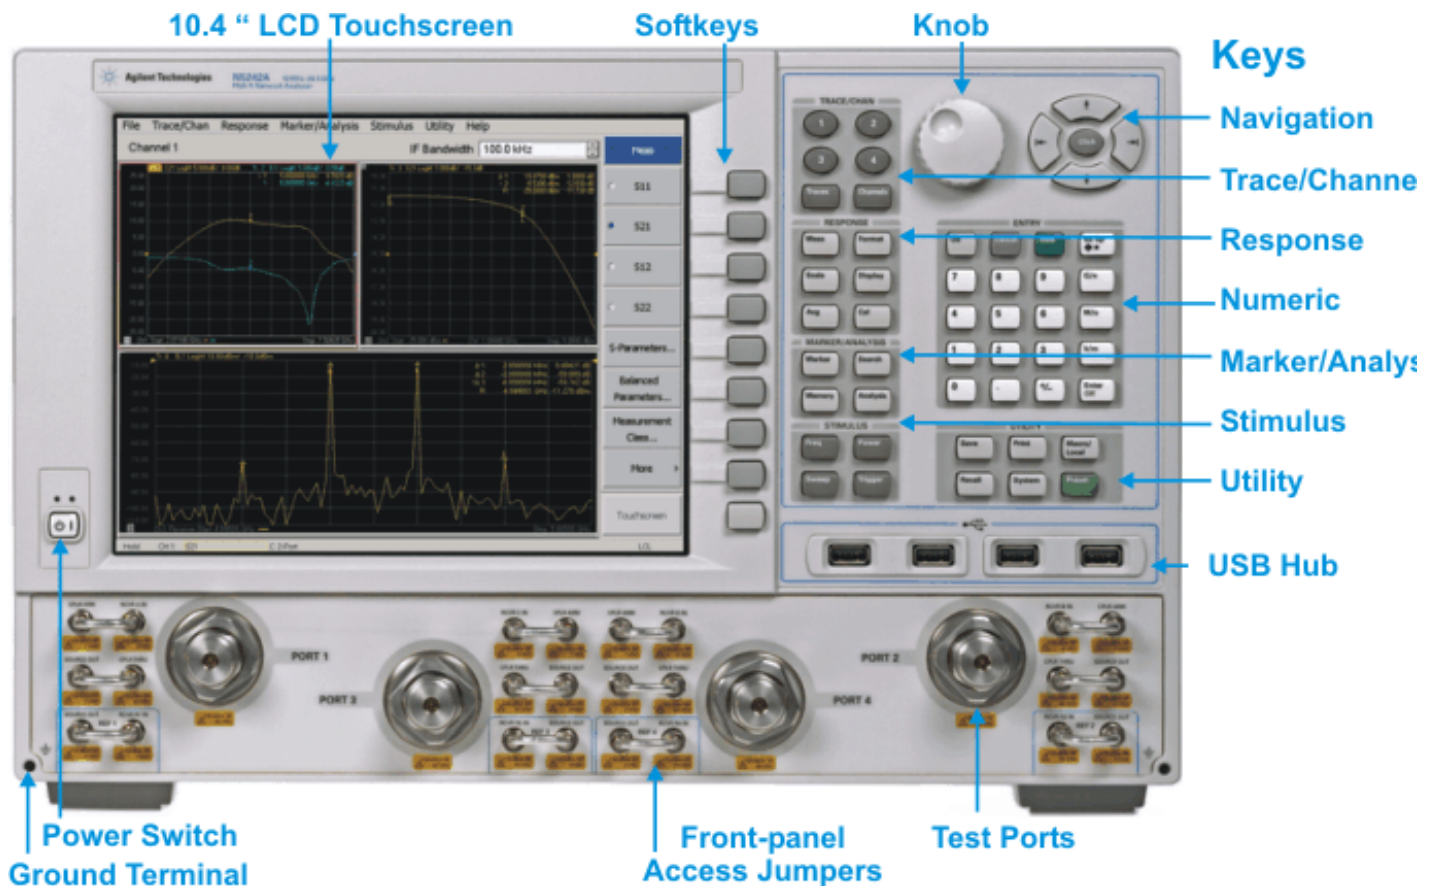

See Also

- The PNA-X Display area
- PNA-X Models / Options
- PNA-X Rear-Panel Tour

Familiar Hardkey layout, similar to Agilent 8720 and 8753 Network Analyzers

Back to the familiar layout, significantly different from legacy PNA models. Most measurement settings are made from the Stimulus Block and the Response Block.

Fully functional Hardkey/Softkey selections consistent with Menu (mouse) selections

Access ALL PNA settings from the front panel using hardkey/softkeys or from the Menu using a mouse. Both methods are consistent; learn the menu structure once, and it applies to both methods of UI navigation.

Power Switch

Used for choosing between power-on (|) and standby (O) state.

Learn to power ON and OFF the PNA.

Test Ports

The PNA-X is available with 2 or 4 test ports.


Learn about the Test port connectors .

Learn about the Input damage levels.

Front panel Access Jumpers

These connectors provide direct access to the PNA source and receivers. This allows you to make a wide variety of measurements and improve dynamic range. All PNA-X models have these same jumpers for each test port.

See the PNA-X front panel jumpers specifications

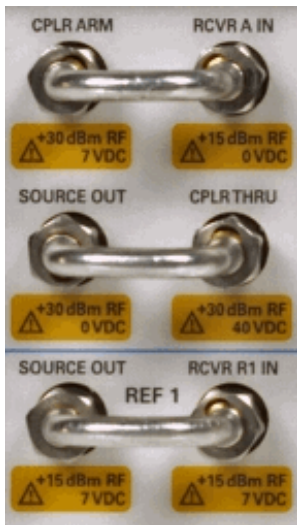

USB Hub

This USB hub contains four USB ports to power your PNA peripherals. There are also four USB ports on the rear panel.

Limitation: The total power consumption for all eight USB ports is limited to 4.0 amps. If this limit is exceeded, all USB ports are disabled until a device is removed and power consumption falls below the limit. When first connected, Agilent ECal modules 8509x and N4431 draw significantly more current than other modules.

Ground terminal

Connect a banana-type plug to this terminal for grounding to the PNA chassis.

No probe power

Probe power is NOT provided with the PNA-X.

Hardkeys

TRACE/CHAN Keys

Manages the Traces and Channels on the PNA display.

Hard Key	Invokes these Softkeys
1, 2, 3, 4	Makes the corresponding trace active.
Traces	Invokes the Traces softkey menu which allows you to create a new trace, select a trace, delete a trace, or maximize the trace.
Channels	Invokes the Channels softkey menu which allows you to manage channels.

RESPONSE Keys

Performs operations on measurement traces after data is measured - not including Data Analysis operations.

Hard Key	Invokes these Softkeys - Click to learn more
Meas	Measurement selections <ul style="list-style-type: none"> • S-Parameters • Balanced Parameters • Measurement Class More Meas <ul style="list-style-type: none"> • Receivers
Format	Format
Scale	Scale Electrical Delay Phase Offset More <ul style="list-style-type: none"> • Velocity Factor • Media -Waveguide/coax • Waveguide cutoff freq
Display	Display settings Arrangements (Overlay...) Windows (Managing) Measurement Setups Display Items

	<ul style="list-style-type: none">• Title• Trace Status• Freq Stimulus• Marker Readout• Toolbars• Tables• Status Bar• Hide Sofkeys• Minimize App
Avg	Averaging Smoothing IF Bandwidth
Cal	Start Cal <ul style="list-style-type: none">• Cal Wizard• Preferences• Global Delta Match Correction Power Cal <ul style="list-style-type: none">• Source Cal• Receiver Cal Manage Cals <ul style="list-style-type: none">• Cal Set• Cal Type• Cal Set Viewer Properties (must have a Cal ON) no idea what this is Port Ext Toolbar Interpolation Fixtures

- ON |Off
- Port matching
- lots more

Manage Cal Kit

Manage ECal

System Z0

Velocity Factor

MARKER/ANALYSIS Keys

Control all aspects of Data Analysis including Markers and Math functions..

Hard Key	Invokes these Softkeys - Click to learn more
Marker	<p>Markers</p> <p>Properties</p> <ul style="list-style-type: none"> • Delta Markers • Discrete • Type • Coupled <p>Functions</p>
Search	Marker Search
Memory	<p>Data/ Memory Math</p> <p>8510 Mode</p>
Analysis	<p>Limit Lines</p> <ul style="list-style-type: none"> • Limit Test • Global Pass/Fail <p>Trace Statistics</p> <p>Gating</p> <p>Transform</p> <ul style="list-style-type: none"> • Windowing

- Coupling
- Distance Marker

Equation Editor

STIMULUS Keys

Controls settings that determine **what** data (stimulus range), and **how** data (sweep type and triggering), is measured.

Hard Key	Invokes these Softkeys - Click to learn more
Freq	Frequency Range Frequency Offset Mode
Power	RF Power level Power Slope Power and Attenuator settings
Sweep	Sweep Time Number of Points Sweep Type Sweep Setup Segment Table settings
Trigger	Trigger settings

UTILITY Keys

Performs global PNA operations.

Hard Key	Invokes these Softkeys - Click to learn more
Save	File Save Manage Files Define Data Saves User Preset
Print	Print Print to file Page Setup
Macro/Local	Macro Setup Run Macros

Recall	File Recall
System	Security Configure <ul style="list-style-type: none"> • SICL / GPIB • Control Panel (Windows) • System Z0 • Power Meter Settings • Millimeter Module Service Help <ul style="list-style-type: none"> • Error Messages • About NA User Key Touchscreen
Preset	Preset User Preset

ENTRY Keys

Hard Key	Invokes these Softkeys
OK	Closes a dialog box and enters any values made in the dialog box.
Cancel	Closes a dialog box.
Help	Launches this Help file.
Bk Sp	Back Space. Backs up the cursor and deletes any previous selection.
1 to 9	Selects values for measurement settings, then press Enter or G/n - M/u - k/m to complete the selection.
G/n M/u k/m	Completes the value selection, assigning a unit of measurement. <ul style="list-style-type: none"> • G/n (Giga/Nano) E12 or E-12 • M/u (Mega/micro) E6 or E-6

	<ul style="list-style-type: none"> • k/m (kilo/milli) E3 or E-3
Enter Off	Enters the values that you select for the measurement settings.
Decimal point	Enters a decimal point to designate fractions of a whole number.
+/-	Plus - Minus Toggles between a positive and negative value entry if it is the first key pressed in the entry.

Knob

Rotate to increase or decrease the value of the active entry.

Navigation Keys

These keys allow you to navigate through menus and dialog boxes and select choices from the active entry toolbar.

Hard Key	Invokes these Softkeys
Left / Right	<p>Moves left and right through menus.</p> <p>Moves tab-left and tab-right within dialog boxes.</p>
Up / Down	<p>Moves up and down through menus.</p> <p>Behaves as follows in a dialog box:</p> <ul style="list-style-type: none"> • Modifies a numeric value • Moves through items in a drop-down list • Moves through options buttons in a group of option buttons
Click	Makes a selection just like a mouse click.

Last Modified:


23-Aug-2007 Added front panel jumpers image

Rear Panel Tour

PNA-L and Microwave Models

[See the PNA-X Rear Panel Tour](#)


This image includes ALL rear-panel features.
Your PNA may not have this capability or look.
Click on a connector for detailed information.

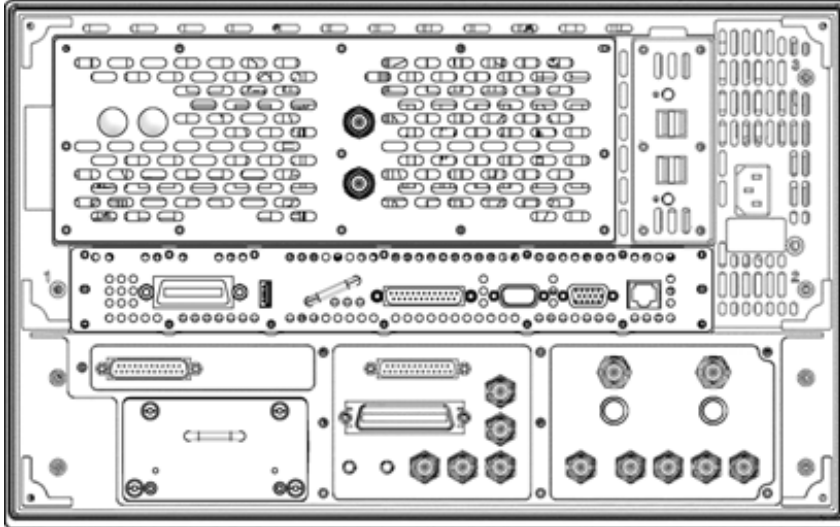

[See this rear-panel with a 1.1 GHz CPU Board.](#)

PNA-X Rear Panel

Click image to learn more.

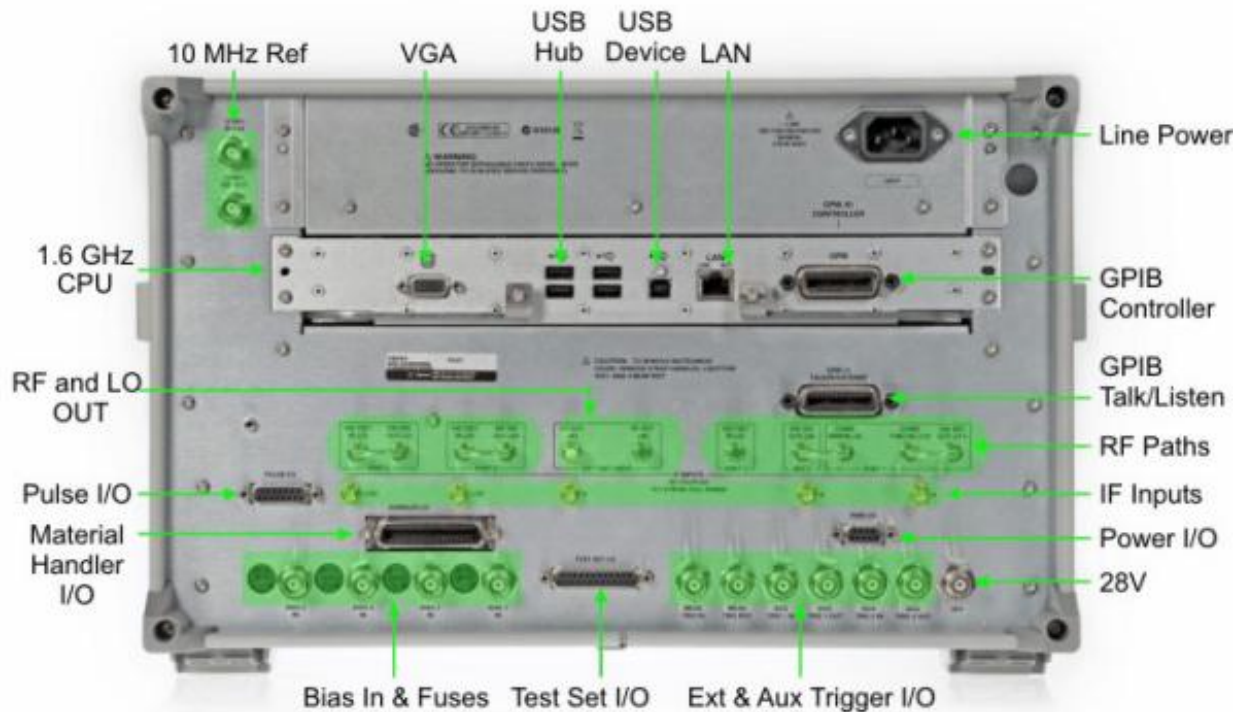

10 MHz Reference IN/OUT

10 MHz Reference Input When a 10 MHz external reference signal is detected at this port, it will be used as the instrument frequency reference instead of the internal frequency reference.

10 MHz Reference Output This BNC(f) connector outputs a frequency reference signal for use by other test equipment.

[See specifications for these ports.](#)

VGA Connector [Learn more](#)

USB Hub

This USB hub contains four USB ports to power your PNA peripherals. There are also four USB ports on the [front panel](#).

Limitation: The total power consumption for all eight USB ports is limited to 4.0 amps. If this limit is exceeded, all USB ports are disabled until a device is removed and power consumption falls below the limit. When first connected, Agilent ECal modules 8509x and N4431 draw significantly more current than other modules. [See specifications.](#)

USB Device

Not supported at this time.

LAN Connector

This 10/100BaseT Ethernet connection has a standard 8-pin configuration and auto selects between the two data rates.

Line Power

[See specifications](#)

GPIO Controller and Talker/Listener Ports

The PNA-X can be a GPIO Controller and Talker/Listener. [Learn more.](#)

RF Path Access

These connectors allow [RF Path Configuration](#).

IF Path Inputs

Option 020 adds these connectors, which allow access to the PNA Receiver / IF paths.



These are labeled A, B, C/R1, D/R2, R.

- For 2-port PNA-X models, use A, B, R1, R2.
- For 4-port PNA-X models, use A, B, C, D, R.

[See IF Path configuration block diagram.](#)

Settings are made using [SCPI](#) and [COM](#) ONLY.

Power I/O


Has some of the [AUX I/O connector](#) functionality on the PNA-L and E836xB models.

[See Details](#)

28 Vdc

For Future Use

External and AUX Trigger I/O

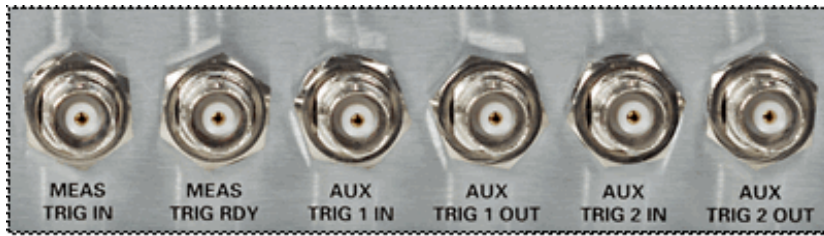

MEAS TRIG IN - When enabled, PNA is triggered by signals on this connector. [Learn more.](#)

MEAS TRIG RDY When enabled, PNA outputs a 'READY' signal on this connector to other devices. [Learn more.](#)

AUX TRIG 1&2 IN When enabled, PNA accepts signals on these connectors which indicates that the external devices is ready to be triggered. [Learn more.](#)

AUX TRIG 1&2 OUT When enabled, PNA outputs signals on these connectors either before or after a measurement. [Learn more.](#)

Test Set I/O

[See Details](#)

Bias IN and Fuses



Apply Bias to the PNA ports through these BNC connectors.

[See specifications](#)

Material Handler I/O

[See details.](#)

Pulse I/O

[See Details](#)

RF and LO OUT



Caution: LO OUT has more power than previous PNA models.

[See Specifications](#)

1.6 GHz CPU See [CPU Speed / Performance](#)

Last modified:

June 6, 2007 Added RF and IF connector images

January 11, 2007 MX New topic

Powering the PNA ON and OFF

The following is described in this topic:

- [How to...](#)
- [Hibernate](#)
- [ON](#)
- [Shutdown](#)
- [Turn OFF Autostart](#)

Notes

During boot up of Windows or of the Network Analyzer application program, do **NOT** press keys on the front panel, rotate the RPG knob, or connect a USB device. Doing so MAY lead to a front panel lockup state.

If the PNA front-panel keypad or USB ports are not responding, SHUTDOWN or RESTART the PNA; do NOT Hibernate. This causes the PNA drivers to awaken from hibernation in the same corrupt state.

How to Log off, Shut down, Restart, or Hibernate the PNA.

WITH a Mouse

1. On the PNA **System** menu, click **Windows Taskbar**
2. On the Windows Taskbar, click **Shutdown**
3. In the **What do you want the computer to do?** list, choose an action:
 - Log off (closes programs and disconnects from the network)
 - [Shut down](#)
 - Restart (shutdown and start)
 - [Hibernate](#)
4. Click **OK** to perform the action

WITHOUT a Mouse

- To Hibernate, BRIEFLY press the front-panel PNA power button.
- To Shutdown - ONLY if the PNA is locked and you cannot operate the mouse or keypad - Press and hold the power button for at least four seconds. **This practice should be avoided!** Repeated shutdowns in this manner WILL damage the hard drive. [Learn more about damaging the PNA hard drive.](#)
- **Recommended** - To SAFELY shutdown the PNA without a mouse, configure the PNA so you can choose

what to do when the power button is briefly pressed (as in Step 3 above). PNAs shipped after June 2005 are already configured this way:

1. From Windows Control Panel, select **Power Options**
2. Click **Advanced** Tab
3. Under **Power buttons**, select **Ask me what to do**.
4. Click **OK** to end configuration.

The next time the power button is pressed, a dialog box will ask **What do you want the computer to do?** Use the PNA front panel **Tab** and **Enter** keys to choose an action.

Tip: If it is not already running, press the [Preset](#) button (on the PNA front-panel) to start the PNA application.

Hibernate Mode

- In hibernate mode the current [instrument state](#) is automatically saved to the hard disk before the PNA is powered OFF.
- When the PNA is powered ON, this instrument state is loaded, thus saving time over a full system boot-up.
- A password is NOT required to resume PNA operation after Hibernate mode.
- The hibernation state is the normal OFF state. A small amount of standby power is supplied to the PNA when it is in the hibernation mode. This standby power only supplies the power switch circuits and the 10 MHz reference oscillator; no other CPU-related circuits are powered during hibernation. To guarantee that your measurements meet the PNA specified performance, allow the PNA to **warm-up for 90 minutes** after the power button light has changed from yellow back to green.

ON Mode

- To turn ON the PNA press the yellow power button.
- The power button will change to green when power is ON.

Turn OFF PNA Autostart

The PNA application (835x.exe) always starts automatically when power is turned ON. To cause the PNA to NOT Autostart, do the following:

1. Minimize the PNA application.
2. From Windows Explorer, navigate to and double-click the following file: C:/Program Files/Agilent/Network Analyzer/Service/Toggle_PNA_Autostart.

The script toggles the PNA Autostart mode ON and OFF.

Shutdown Mode

- In shut down mode the current instrument state is NOT automatically saved before the PNA is powered OFF.
- When the PNA is again powered ON, a full system boot-up is performed and the PNA powers-up in the [preset settings](#).
- A password is required to resume PNA operation after being in Shutdown mode.
- To guarantee that your measurements meet the PNA specified performance, allow the PNA to **warm-up for 90 minutes** after the power button light has changed from yellow back to green.
- The PNA should only be shut down for service or to provide security via password protection.
- The power button will change to yellow when power is OFF.

Note: If the PNA is locked and you cannot operate the mouse or keypad, shut down the PNA by pressing and holding the power button for at least four seconds.

This practice should be avoided! Repeated shutdowns in this manner WILL damage the hard drive. [Learn more about damaging the PNA hard drive.](#)

Unplugging the PNA

- Remove the power cord from the PNA ONLY when the power button is yellow, in either Hibernate or Shutdown mode. If the power cord is removed while the power button is green (PNA ON), damage to the hard drive is **likely**.
- The button will remain yellow for several seconds after the power cord has been removed.
- When plugged back in and the power button is pressed to ON, the PNA starts in the mode it was in when the power cord was unplugged, either Hibernate or Shutdown.

Front Panel Interface

All PNA models except [PNA-X](#)

There are three ways to use the front panel keys:

- [Active Entry Toolbar](#) (quickest)
- [Launch Dialog Boxes](#)
- [Navigate Menu](#) (most comprehensive)


[Other Quick Start topics](#)

Active Entry Toolbar

Not all settings can be made this way. For making ALL settings use [Menus](#).

You can make settings quickly using this four step procedure.

- (1) Press a key
- (2) View active entry
- (3) Select a function
- (4) Enter a value (if necessary)

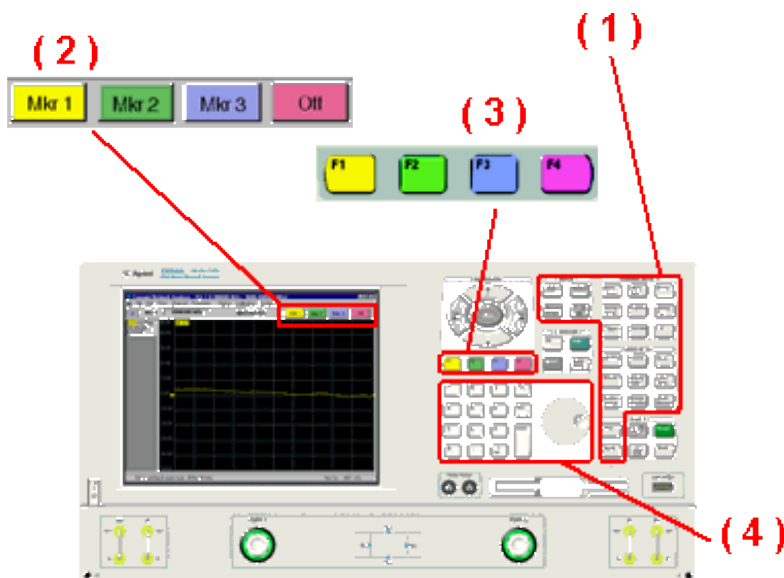


Launch Dialog Boxes,

To quickly launch MOST dialog boxes:

(1) Press the Menu/Dialog Key

(2) Select a function key

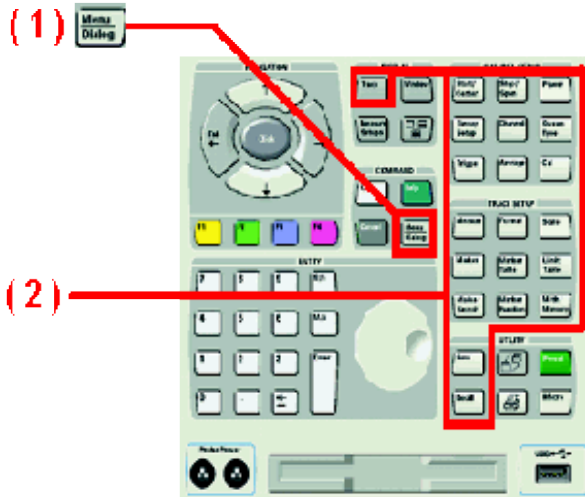


Navigate Menu

You can access ALL PNA functions using Menus:

(1) Press the Menu/Dialog Key

(2) Use the direction keys to navigate through the Menus. Use the "Click" key to make a selection.

(3) Other Command keys are available for cancelling or seeking Help (if necessary)

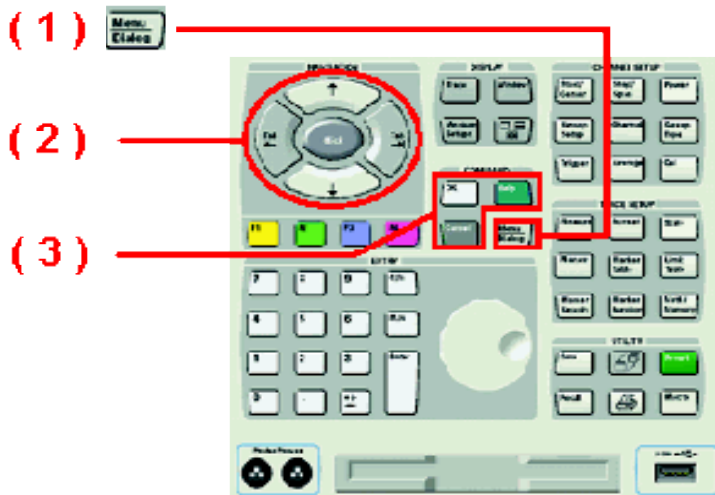

Traces, Channels, and Windows on the PNA

It is critical to understand the meaning of the following terms as they are used on the PNA.

- [Traces - Managing](#)
- [Channels - Managing](#)
- [Windows - Managing](#)

Note: You may experience a significant decrease in computer processing speed with combinations of the following: increased number of points, number of traces, and calibration error terms (full 2-port or 3-port). If this becomes a problem, you can increase the amount of RAM with PNA [Option 022](#). To monitor the amount of PNA memory usage, press **Ctrl Alt Delete**, select **Task Manager**, then click on the **Performance** tab.

[Other Quick Start topics](#)

Traces are a series of measured data points. There is no theoretical limit to the number of traces. However, the practical limit is the [maximum number of windows](#) * the maximum number of traces per window (8).

In addition, one memory trace can be stored and displayed for every data trace. [Learn more about Math / Memory traces.](#)

Trace settings affect the presentation and mathematical operations of the measured data. The following are Trace settings.

- [Parameter](#)
- [Format and Scale](#)
- [Smoothing](#)
- [Correction ON / OFF](#)
- [Electrical Delay](#)
- [Phase Offset](#)
- [Trace Math](#)
- [Markers](#)
- [Time Domain](#) (Opt 010)

Managing Traces

- [How to **Select** a trace](#)
- [How to **Delete** a trace](#)

- [How to **Move** a trace](#)
- [How to **Maximize** a trace](#)
- [How to **Create** a new trace](#)
- [How to **Change** the trace parameter.](#)
- [How to display a custom **trace title**.](#)

How to Select a Trace

 
A trace must be selected (active) before its trace settings can be changed.

[How to know which trace is Active?](#)

Using front-panel HARDKEY [softkey] buttons

PNA Menu using a mouse

For [PNA-L](#) and [E836x](#) models



1. Press TRACE repeatedly

1. Click the [Trace Status](#) button.

For [PNA-X](#) models



1. For Traces 1-4, press the corresponding Hard Key
2. For other trace numbers, press TRACES
3. then **[Select Traces]**
4. Select a trace number in the [Entry toolbar](#).

1. Click the [Trace Status](#) label or trace.

 
How to Delete a Trace

Using front-panel HARDKEY [softkey] buttons

For [PNA-L](#) and [E836x](#) models


1. Press TRACE

PNA Menu using a mouse



1. Right-click the [Trace Status](#) button, then click Delete.

 For [PNA-X](#) models



1. For Traces 1-4, press the corresponding Hard Key
2. For other trace numbers, press TRACES
3. then **[Select Traces]**
4. Select a trace number in the [Entry toolbar](#).

1. Right-click the [Trace Status](#) label, then click Delete.

How to Move a trace to a different window

Using front-panel HARDKEY [softkey] buttons

For [PNA-L](#) and [E836x](#) models

1. Not available

PNA Menu using a mouse


1. Not available

For [PNA-X](#) models

1. Select the trace to move.
2. Press TRACES
3. then **[Move Trace]**
4. Select a window number in the following dialog.

1. Right-click the [Trace Status](#) label, then click **Move Trace**.

PNA-X ONLY

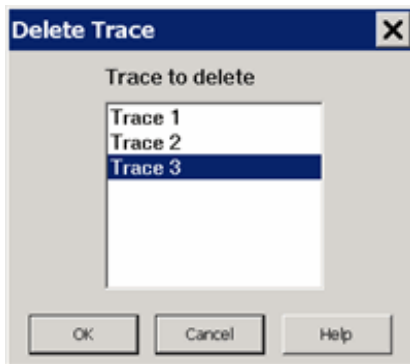

This dialog is launched by clicking **Trace/Chan**, then **Delete Trace**

The Select Trace dialog is launched by clicking **Trace/Chan**, then **Select Trace**

Select, Delete, Move Traces dialog box help

Both the **Select Trace** and **Delete Trace** dialogs work the same.

Select a trace, then click **OK**.

Only ONE trace can be Selected or Deleted.

Note:

To EASILY select a trace, click the [Trace Status](#) label.

To EASILY delete a trace, right-click the Trace Status label, then click **Delete**.

Trace Max - PNA-X ONLY

Makes the active trace the ONLY trace on the display. All other traces are hidden.

How to do Trace Max

- Select **Trace**, then **Trace Max**.
- With Trace Max ON, select a different trace from the **Traces** softkeys to make that trace visible.
- To make all traces visible again select **Trace Max OFF**

Trace Title


A Trace Title overwrites the Measurement Parameter in the [Trace Status](#) area, the [Status Bar](#), and [hardcopy prints](#).

- This title has priority over [Equation Editor](#) titles.
- The practical limit is about 70 characters if there is only one trace.
- Spaces are accepted but not displayed; use underscores.
- The title is annotated as follows:

Tr 1 New Trace LogM 10.00dB/ 0.00dB

How to enter a Trace Title

1. Click the [Trace Status](#) label to select a trace.
2. Click **Trace/Chan**, then **Trace**, then **Trace Title**.

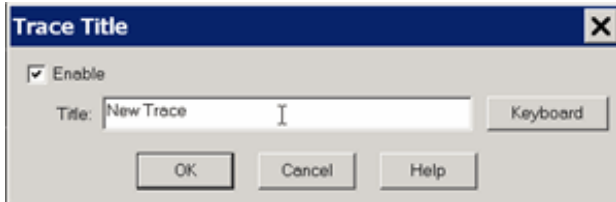

3. Click **Enable**, then type the trace title. Click **Keyboard** to type with a mouse.
4. To remove the trace title, clear the **Enable** checkbox, or delete the text from the dialog entry.

Channels contain traces. The PNA can have up to **32 independent channels**.

Channel settings determine **how** the trace data is measured . All traces that are assigned to a channel share the same channel settings. A channel must be selected (**active**) to modify its settings. To select a channel, click the [Trace Status](#) button of a Trace in that channel. The following are channel settings:

- [Frequency range](#)
- [Power level](#)
- [Calibration](#)
- [IF Bandwidth](#)
- [Number of Points](#)
- [Sweep Settings](#)
- [Average](#)
- [Trigger](#) (some settings are global)

Managing Channels


How to Select a Channel

A channel must be selected (active) before its settings can be changed.

To make a channel active, [select a trace](#) in that channel.

How to Turn ON or OFF a Channel

Click **Trace/Chan**, then **Channel**, then **Turn On / Off Channel**.

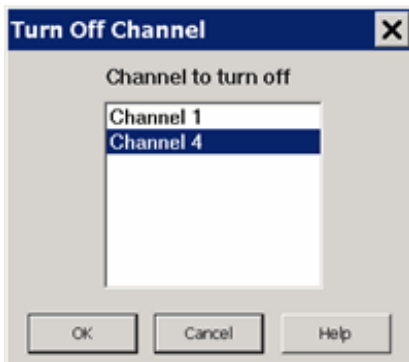

Turn ON | OFF Channel dialog box help

Both the Turn **ON** and Turn **OFF** dialogs work the same.

Select a channel, then click **OK**. Only ONE channel can be selected


When turning ON a channel, the new channel is always the Standard [Measurement Class](#) with an S11 trace.

Note: To create more than one trace in a new channel, click Trace, then New Trace

Windows are used for viewing traces.

- The PNA can show an **UNLIMITED** number of windows on the screen (16 windows previous to PNA release 6.2) with the following limitations:
 - The COM property [MaximumNumberOfWindows](#) returns 1000 ('unlimited' is not a number).
 - The [SCPI status register](#) can only track the status of up to 576 traces.
- Each window can contain up to **8 traces** (4 traces previous to PNA release 5.2).
- Windows are completely independent of channels.
- Learn to [create and manage windows](#).

The following is a window containing two traces. Both traces use the same channel 1 settings as indicated by the annotation at the bottom of the window.

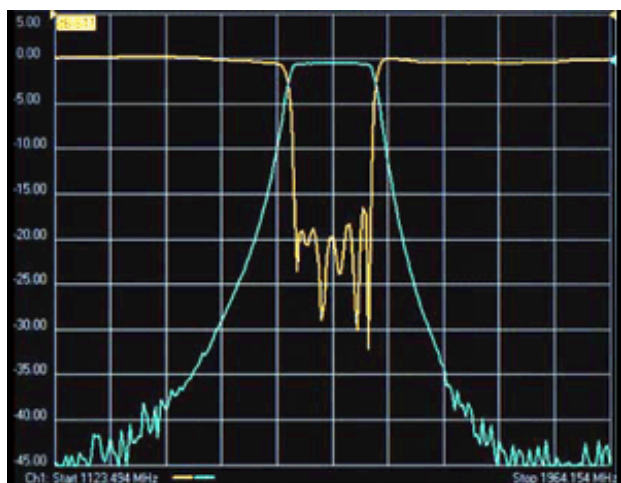

PNA-X shows the window number in the lower-left corner of the window. The following shows window 5.



Managing Windows -

How to make various window settings

New, Close, Tile, Cascade, Minimize, Maximize

Using front-panel
HARDKEY [softkey] buttons

PNA Menu using a mouse

For [PNA-L](#) and [E836x](#) models

◀ Programming Commands ▶

1. Press



1. Click **Window**

For [PNA-X](#) models

◀ Programming Commands ▶

1. Press **RESPONSE**


1. Click **Response**

2. then **[Display]**

2. then **Display**

3. then **[Windows]**

3. then **Windows**

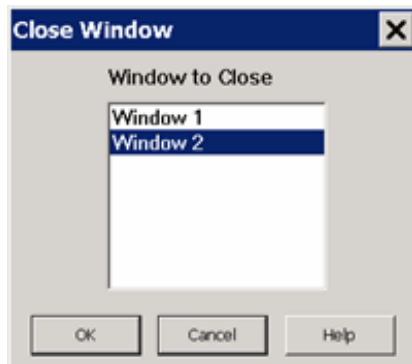

Close Window dialog box help

Select a window, then click **OK**. The remaining windows are tiled.

Only ONE window can be selected.

Traces contained in a closed window are deleted.

Note: To EASILY close a window, click the X in the upper right corner of a window. The X is only visible when [Title Bars](#) are enabled. The remaining windows are NOT tiled.

See [Customize the PNA screen](#) to learn how to make other window settings

Last modified:

15-Oct-2007 MX New settings

9/19/06 MQ Modified for unlimited number of windows

Basic Measurement Sequence

The following process can be used to setup all PNA measurements:

[Step 1. Set Up Measurements](#)

Reset the analyzer, create a measurement state, and adjust the display.

[Step 2. Optimize Measurements](#)

Improve measurement accuracy and throughput using techniques and functions.

[Step 3. Perform a Measurement Calibration](#)

Reduce the measurement errors by performing a calibration.

[Step 4. Analyze Data](#)

Analyze the measurement results using markers, math operations, and limit tests.

[Step 5. Print, Save or Recall Data](#)



Save or print the measurement data.


Frequency Blanking

Note: To learn how to erase memory before moving your PNA out of a secure area, see <http://na.tm.agilent.com/pna/security.html>.

For security reasons, you can prevent frequency information from appearing on the PNA screen and printouts.

How to set Frequency Blanking

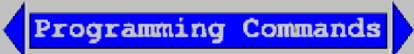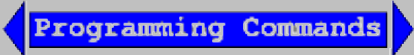Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click System 2. then Security
For PNA-X models	
1. Press UTILITY 2. then [System] 3. then [Security]	1. Click Utility 2. then System 3. then Security

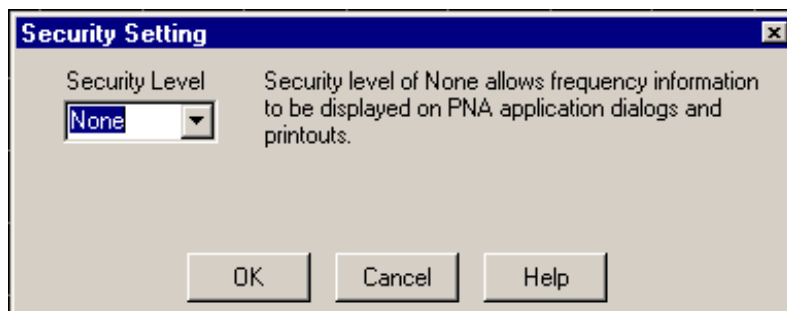

Security Setting dialog box help

None All frequency information is displayed on the screen and printouts.

Low security level

Frequency information is blanked from the following:

- Display annotation
- Calibration properties
- All tables
- All toolbars
- All printouts

To re-display frequency information, revisit this dialog box and select **None**.

High security level

Low security level settings PLUS:

- [GPIB console](#) is inactive

To re-display frequency information, perform an [instrument preset](#), or recall an instrument state with security level of None.

Extra security level

High security level settings PLUS:

- All ASCII [data saving](#) capability (.snp, .prn, .cti) is DISABLED.

To re-display frequency information, perform an [instrument preset](#), or recall an instrument state with security level of None.

For ALL security levels:

Frequency information is **NOT** blanked from the following:

- The [Frequency Converter Application](#) ([opt 083](#)) dialog box information or printouts.
- [Service Adjustment Programs](#)
- Your remote COM or SCPI programs.

Last Modified:

17-Jul-2007 Added Extra setting

Internal Second Source

The following PNA models include an internal second source.

Model (click to see block diagram)	Total # of Ports	Frequency
N5230A Opt 146	4	300 KHz - 13.5 GHz
N5230A Opt 246	4	300 KHz - 20 GHz
N5242A Opt 224	<u>2*</u>	10 MHz to 26.5 GHz
N5242A Opt 400	4	10 MHz to 26.5 GHz

How to use the second source

- Set frequency using the [Frequency Offset Opt 080 dialog](#).
- Set power using the [Advanced Power dialog](#).
- [Source power calibration](#) of the second source is performed as usual.
- Using FCA, [click the LO button](#) to set frequency and power.
- The [specifications](#) of the second source are the same as source 1.

Benefits / Uses of the second source

- Up to five times faster than stepping an external source.
- Measure Mixers with internal swept or fixed LO.
- Measure TOI or Intermodulation distortion.

Internal Second Source Restrictions

Source 1 and Source 2 are available at specific ports as follows:

N5230A (PNA-L) models:

- Source 1 power available at Port 1 OR Port 2; NOT at both ports simultaneously.
- Source 2 power available at Port 3 OR Port 4; NOT at both ports simultaneously.

N5242A Opt 224 (PNA-X 2-port model):



- Source 1 power available at **Port 1** OR **Port 2**; NOT at both ports simultaneously.
- Source 2 (**SRC 2**) power available at **Out 1** AND **Out 2**; BOTH ports simultaneously.

N5242A Opt 400, 419, 423 (PNA-X 4-port models):

- Source 1 power available at Port 1 OR Port 2; NOT at both ports simultaneously.
- Source 2 power available at Port 3 AND Port 4; BOTH ports simultaneously.
- Opt 423 ONLY - Source 2 power is available at Port 4 AND either Port 3 OR Port 1 (through the combiner as "Port 1 Src2"). [See block diagram for N5242A Opt 423](#)

Remotely Accessing the Internal Second Source

See

Last modified:

23-Jul-2007	Added remote section
1123-Jul-2007	MX Added PNA-X models
10/02/06	MQQ New topic

Networking and Connecting the PNA

The PNA as a PC

- [PNA User Accounts and Passwords](#)
- [Drive Mapping](#)
- [Connecting the PNA to a PC](#)
- [Easy versus Secure Configuration](#)
- [Changing Network Client](#)
- [Using VNC to Control the PNA User Interface](#)

GPIO / COM Programming

- [Configure for COM/DCOM Programming](#)
- [82357A USB to GPIO Interface](#)
- [The PNA as GPIO System Controller](#)
- [How to Configure for GPIO, SCPI, and SIDL](#)

Controlling External Devices

- [E5091 TestSet Control](#)
- [External Testset Control](#)
- [Interface Control Feature](#)
- [TestSetIO Connector](#)
- [Handler IO Connector](#)
- [AuxIO Connector](#)

PNA Preferences

The following is a list of PNA preferences. Most of these are set using SCPI or COM commands. SCPI commands can be easily set from the PNA front panel. For more information, click the links below.

Calibration

Preference	UI Setting	SCPI	COM
Auto-save User Cal Set	None	SENS:CORR:PREF:CSET:SAVE	None
For Guided Cal, set external trigger.	None	SENS:CORR:PREF:TRIG:FREE	PreferInternalTriggerOnChannelSingle
For Unguided Cal, set external trigger.	None	SENS:CORR:PREF:TRIG:FREE	PreferInternalTriggerOnUnguidedCal
Sets behavior for simulated cal	None	SENS:CORR:PREF:SIMCal	None
Show or not, the first 'Method' Page of the Cal Wizard.	Cal Preferences	None	None
Set and order default Cal Types	Cal Preferences	None	None
Perform orientation of the ECal module during calibration?	ECal Wizard	SENS:CORR:PREF:ECAL:ORI	OrientECALModule
Specify ECal port mapping when orientation is OFF	ECal Wizard	SENS:CORR:PREF:ECAL:PMAP	ECALPortMapEx

File Save

Preference	UI Setting	SCPI	COM
Specifies the contents of subsequent citifile saves.	Data Define	MMEM:STOR:TRAC:CONT:CIT	CitiContents
Specifies the format of subsequent citifile saves.	Data Define	MMEM:STOR:TRAC:FORM:CIT	CitiFormat

Measurements

Preference	UI Setting	SCPI	COM
Mathematically offset for receiver attenuation.	None	SYST:PREF:ITEM:OFFS:RCV	OffsetReceiverAttenuator
Mathematically offset for source attenuation.	None	SYST:PREF:ITEM:OFFS:SRC	OffsetSourceAttenuator
Turn RF power ON or OFF during a frequency sweep retrace.	None	SYST:PREF:ITEM:RETR:POW	PowerOnDuringRetraceMode
For power sweep, maintain source power at the start or stop power level.	None	SYST:PREF:ITEM:PSRT	PowerSweepRetracePowerMode
Sets the External Trigger OUT behavior to have either Global or Channel scope.	None	TRIG:PREF:AIGL	AuxTriggerIsGlobal

Errors

Preference	UI Setting	SCPI	COM
Report source unlevelled events as errors?	None	SYST:ERR:REP:SUNL	EnableSourceUnleveledEvents
Display Error Messages?	Error Preferences	None	None

Last Modified:

5-Feb-2007 MX New topic

Using VNC to Control the PNA User Interface

VNC (Virtual Network Computing) allows you to control the User Interface of a PNA from any PC. The PNA display appears on the connected PC display. Mouse and keyboard control can occur from both the PNA and PC, although not simultaneously.

Both the PNA and PC must be connected to the internet. The responsiveness of the PNA while using VNC is dependent of the speed of your internet connection.


Every PNA is shipped with VNC installed. However, you must download and install the VNC software onto the PC from <http://www.realvnc.com/>.

Once installed, the following procedure will help you configure VNC to view and control the PNA application from your PC.

On the PNA, run VNC Server

To do this:

1. Click View, then Minimize Application.
2. Click **Start, Programs, RealVNC, Run VNC Server**.

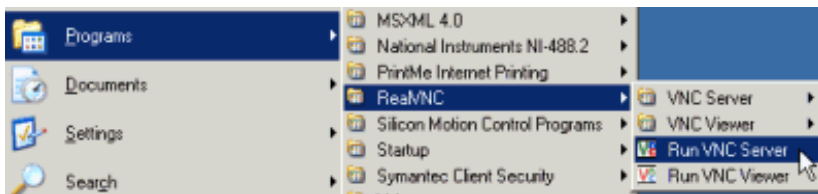

- The first time you run VNC Server, you will set a password to control access from remote PCs.
- To automatically start VNC when the PNA computer boots, drag a **Run VNC Server** shortcut to your User "startup" folder. The following is the Administrator folder: C:\Documents and Settings\Administrator\Start Menu\Programs\Startup

On the PC, run VNC Viewer

To do this:

1. Download (<http://www.realvnc.com/>) and install VNC on the PC.
2. From the PC Desktop, click **Start, Programs, RealVNC, Run VNC Viewer**
3. When prompted for the Hostname, type the [full computer name](#) or [IP address](#) of the PNA.
4. When prompted for the password, type the password you set when configuring VNC on the PNA.

Using Help

Help Rev. 2007-12-03
PNA Rev. A.07.50
© Agilent Technologies, Inc. 2007

This topic discusses the following:

- [PNA Documentation](#)
- [Printing Help](#)
- [Copying Help to your PC](#)
- [Launching Help](#)
- [Navigating Help](#)
- [Help Languages](#)
- [Glossary](#)
- [Dialog Boxes](#)
- [About Network Analyzer](#)
- [Documentation Warranty](#)
- [Suggestions Please](#)

[Other Quick Start Topics](#)

PNA Documentation

This Help file, which is embedded in the PNA, is the **Users Guide and Programming Manual for the PNA**. The help file is automatically updated on the PNA when firmware is updated. Only the PNA [Installation and Quick Start Guide](#) is shipped with new PNA instruments.

Hardcopy manuals are no longer available for purchase with the PNA.

All PNA documentation, including the **latest online Web Help version** of this Help file, and a printable .PDF version of the Help file, are available at <http://na.tm.agilent.com/pna/help/index.html>.

Printing Help

Beginning with the PNA 5.2 release (March 2005), we once again offer a .pdf version of PNA Help. Download the .pdf file from <http://na.tm.agilent.com/pna/help/index.html>. You can still print individual PNA Help topics by clicking the Print icon at the top of the PNA Help window.

Copying Help to your PC

With the Help system on your PC, you can read about the PNA while away from it. You can also Copy and Paste programming code from this Help system directly into your programming environment.

The Help file is located on your PNA hard-drive at **C:\Winnt\Help\ PNAHelp.chm**. If both the PNA and PC are connected to LAN, you can [map a drive](#) and copy the file directly.

The Help file can also be downloaded from <http://na.tm.agilent.com/pna/help/index.html>.

Launching Help


The Help system can be launched in three ways:

1. From the front panel [Help button](#).
2. From the **Help** drop-down menu
3. From [Dialog Box](#) Help

Navigating Help


The Help Window contains 3 panes (regions):

1. [Toolbar](#) Pane
2. [Topic](#) Pane
3. [Navigation](#) Pane

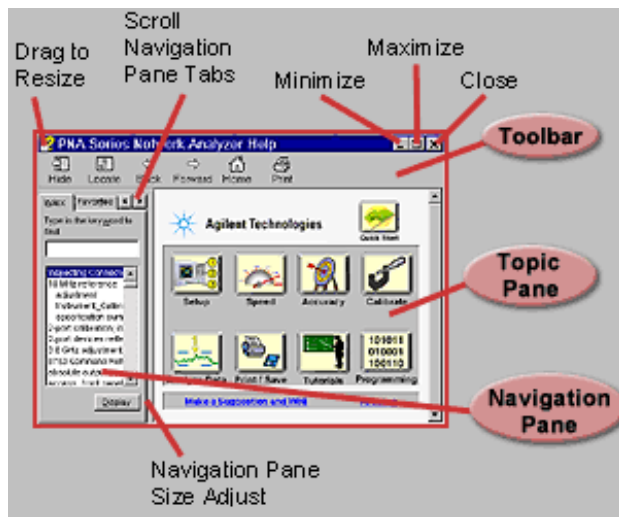

Toolbar Pane

The Toolbar is at the top of all Help windows. It allows you to resize the window, browse and print the selected topic.

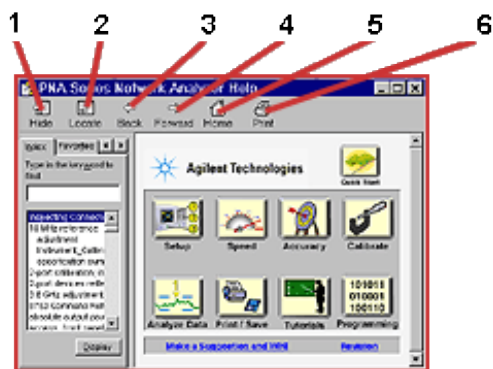

1. Hide or show the navigation pane
2. Locate the topic in the table of contents
3. Back to topic visited previously
4. Forward again if **Back** was clicked
5. Go to the Home page.
6. Print the topic pane.

Navigation Pane

Click the following tabs in the Navigation Pane to access information in the Help system:


[Table of Contents Tab](#)

[Index Tab](#)

[Search Tab](#)

[Favorites Tab](#)

(Table of)Contents Tab

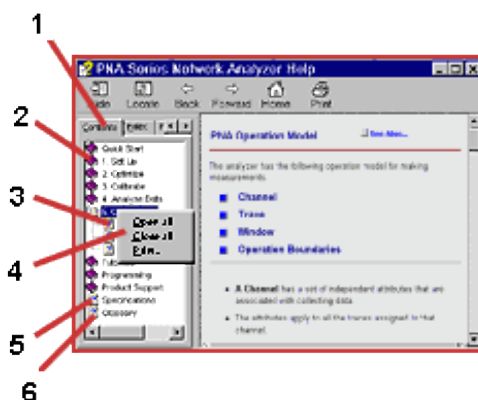


1. Click tab to select Table of Contents.
2. Click a book to access related topics.
3. Click to display a topic.

4. Right click to access menu.
5. Click to display specifications
6. Click to display glossary

Index Tab

The index tab allows you to type a keyword and go to only the most applicable topics.

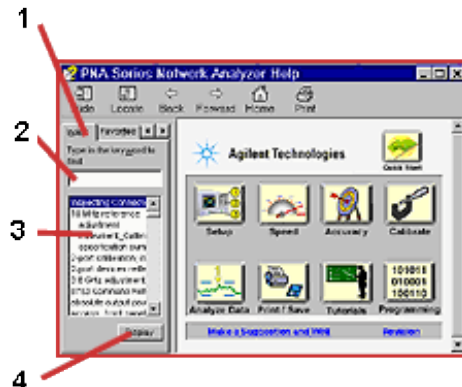

1. Click tab to select index.
2. Type keyword to find topics of interest.
3. View suggested topics. (Double-click to display topic.)
4. Click to display topic.

Search Tab

TIP: To Search any topic for a keyword, press **Ctrl** and **F**.


The following rules apply for using full-text search:

- Searches are not case-sensitive.
- You can search for any combination of letters (a-z) and numbers (0-9).
- Punctuation marks (period, colon, semicolon, comma, and hyphen) are ignored during a search.
- You can group the words of your search using double quotes or parentheses. Examples: "response calibration" or (response calibration). This requirement makes it impossible to search for quotation marks.
- Use Wildcard expressions:
 - To search for one undefined character use a question mark (?). For example, searching for **cal?** will find **calc** and **calf**.
 - To search for more than one undefined character use an asterisk (*). Searching for **Cal*** will find **calibration** and **calculate**.
- Use Boolean operators to define a relationship between two or more search words.

Search for	Example	Results will show topics containing:
Two words in the same topic	response AND calibration	Both the words "response" and "calibration".
Either of two words in a topic	response OR calibration	Either the word "response" or the word "calibration" or both.
The first word without the second word in a topic	response NOT calibration	The word "response" but not the word "calibration".
Both words in the same topic, close together.	response NEAR calibration	The word "response" within eight words of the word "calibration".

Favorites Tab

The favorites tab allows you to store (bookmark) the topics you refer to most often so that they can be recalled easily.

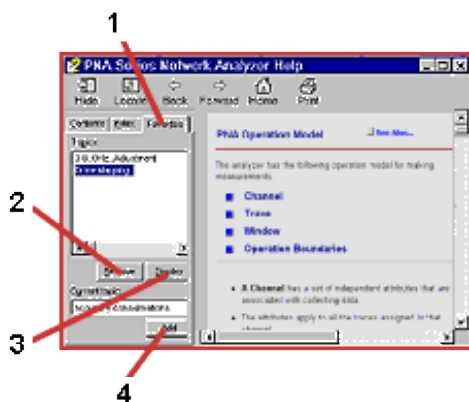

1. Click tab to view stored topics in Favorites.
2. Remove selected topic.
3. Display selected topic.
4. Add (store) current topic.

Topic Pane

The Topic pane allows you to view the contents of the selected topic.



Help Languages

The Help system is available in five languages:

- English
- French
- German
- Japanese
- Spanish
- Chinese

To upgrade to the latest version, or to make Chinese Help available, use [AgileUpdate](#).

To select a different help language, on the **Help** menu, point to **Help Language**. Then click the language.

Note: The Programming and Specifications sections are only available in English. Also, the most recent version of Help will be English.

Viewing Help in Japanese or Chinese

These two languages use a different character font set than the other languages. To view these languages, you must change the following settings:

1. From the PNA, click **View**
2. Click **Title Bars** (if not already checked)
3. Minimize the PNA screen
4. From the desktop of the PNA, click **Start / Settings / Control Panel / Regional Options**.
5. Under **Language settings for the system**, scroll to and check **Japanese or Chinese**
6. Under **Your locale (location)** select **Japanese or Chinese**
7. Click **Set default...**

8. Under **Select the appropriate locale**, select **Japanese or Chinese**


These changes may cause the Windows 2000 fonts to become small. To change them back to larger fonts, change the following settings:

1. From the PNA desktop click **Start / Settings / Control Panel**
2. Click **Display / Appearance**
3. Under **Scheme** select **Windows Standard**

To restart the PNA application, click **PNA Analyzer** taskbar button at the bottom of the screen


Glossary

The [Glossary](#) holds definitions of words, in alphabetical order.

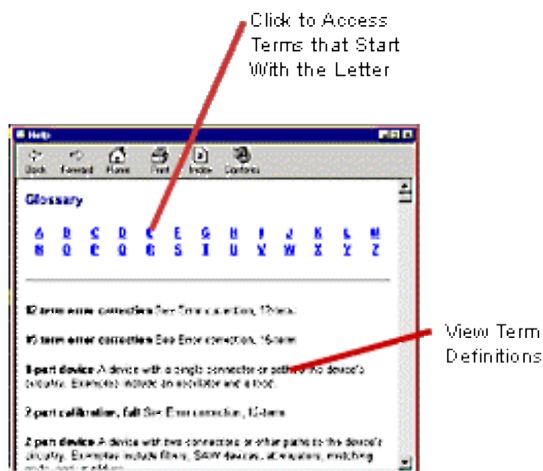

Note: Click on a word in **green** text throughout Help to see the glossary definition.

Dialog Boxes

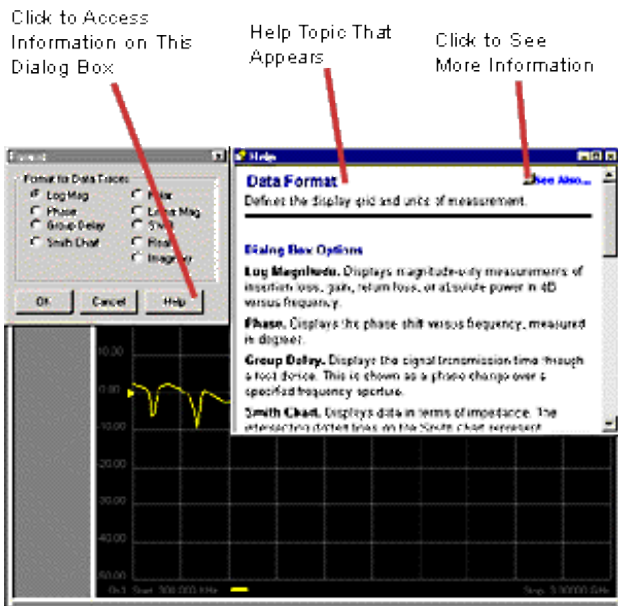

About Network Analyzer

To learn the following about the PNA, click **Help**, then **About Network Analyzer**:

- Model number ([see list of PNA models](#))
- Frequency range
- Serial number
- Installed options
- Application Code (firmware) version
- Version of hard drive in the analyzer

Documentation Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, AGILENT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. AGILENT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR ANY INFORMATION CONTAINED HEREIN. SHOULD AGILENT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT WILL CONTROL.

Suggestions Please!

Please let us know about your experience using PNA Help. Send your comments to: pna_help@am.exch.agilent.com. Comment about any aspect of the help system. Here are a few areas that you might consider:

- Does anything appear to be broken?
- Did you find what you were looking for?
- Was the information you found helpful?
- Any suggestions as to how we can improve the help system?

Your comments go directly to the help system authors. For help with technical questions, please refer to [Technical Support](#).

Preset the PNA

When you Preset the PNA, it is set to known, or preset conditions. You can use the factory default preset conditions, or define your own User Preset conditions.



- [Preset \(Default\) Conditions](#)
- [User Preset Conditions](#)

[See other 'Setup Measurements' topics](#)

Preset Default Conditions

How to Preset the PNA

Tip: Press the **Preset** button to start the PNA application if it is not already running.

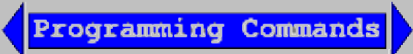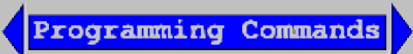Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	 Programming Commands
1. Press Preset	1. Click System 2. then Preset
For PNA-X models	 Programming Commands
1. Press Preset	1. Click Utility 2. then Preset

Click to view the **factory preset conditions**.

- [Frequency Settings](#)
- [Power Settings](#)
- [Sweep Settings](#)
- [Segment Sweep Settings](#)
- [Trigger Settings](#)
- [Display Settings](#)

- [Response Settings](#)
- [Calibration Settings](#)
- [Marker Settings](#)
- [Limit Test Settings](#)
- [Time Domain Settings \(Option 010\)](#)
- [Global Display Settings](#)

Frequency Settings:

Measurement Parameter	S11
Start Frequency	Minimum frequency of the PNA
Stop Frequency	Maximum frequency of the PNA
CW Frequency	1 GHz

See the [PNA configurations](#) for the minimum and maximum frequency of your PNA

Power Settings:

Test Port	0 dBm for E8356/7/8A
Power	0 dBm for E8801/2/3A
	0 dBm for N3381/2/3A
	-5 dBm for N5230A - 20 GHz
	-10 dBm for N5230 - 40 GHz
	-15 dBm for N5230 - 50 GHz
	-12 dBm for E8362/3/4 A or B, standard
	-15 dBm for E8361A
	-17 dBm for E8362/3/4 A or B with option UNL or 014
Power	On
Port Power	On
Coupled	
Auto	On
Attenuation	
Attenuator	0 dB
Value	
Power Slope	Off
Slope Value	0 dB/GHz

Sweep Settings:

Type	Linear Frequency
Mode	Continuous
Generation	Analog
Auto Sweep Time	On
Number of Points	201

Segment Sweep Settings:

Active Segments	1
Start Frequency	PNA start frequency
Stop Frequency	1 MHz for E8356/7/8A 1 MHz for E8801/2/3A 1 MHz for N3381/2/3A 1 GHz for E836xA/B
Number of Points	21
Power	PNA preset test port power
IF Bandwidth	50 KHz for N5230A 35 kHz for all other models
Reduce IF BW at Low Frequencies	ON
Dwell Time	0

Trigger Settings

Source	Internal
Mode	Sweep

Display Settings:

Format	Log Mag
--------	---------

These settings apply for formats when selected:

Format	Scale	Reference Position	Reference Value
Log Mag	10 dB/	5	0 dB
Phase	45 degrees/	5	0 degrees
Group Delay	10 nsec/	5	0 s
Linear Mag	100 munits/	0	0 units
SWR	1 unit/	0	1 unit
Real	2 units/	5	0 units
Imaginary	2 units/	5	0 units
Polar	1 unit/	n/a	1 unit
Smith Chart	1 unit/	n/a	1 unit

Response Settings:

Channel Number	1
IF Bandwidth	50 KHz for N5230A 35 kHz for all other models
Averaging	Off
Averaging Factor	1
Smoothing	Off
Smoothing Factor	1% of span
Electrical Delay	0 s
Velocity Factor	1.0
Phase Offset	0 degrees
Math/Memory Trace View	Data

Calibration Settings:

Correction State	Off
Interpolation State	On
Calibration Type	None
Cal Kit Number	Current Cal Kit Number
System Z0	50 ohms
Port Extensions State	Off
Port Ext. Values	0
Input A, B	
Port 1, 2	

Marker Settings:

Initial Frequency	Current Center Frequency
Reference	None
Interpolation	On
Format	Trace Default
Type	Normal
Function	Max Value
Domain	Full Span
Table	Empty
Coupling	Always uncoupled

Limit Test Settings:

Limit Testing	Off
Line Display	ON
Sound on Fail	Off

Limit List Settings:

Type (OFF, MAX, MIN) OFF

Begin Stimulus 0

End Stimulus 0

Begin Response 0

End Response 0

Time Domain Settings:

Transform State Off

Transform Mode Band Pass

Transform Start -10 ns

Transform Stop 10 ns

Window 6.0 (Kaiser-Bessel factor)

Gating State Off

Gating Start -10 ns

Gating Stop 10 ns

Gate Type Band Pass

Gate Shape Normal

Global Display Settings:

Trace Status On

Frequency/ Stimulus Off

Marker Readout On (when a marker is activated)

Toolbars Shown Active Entry

Status Bar State ON

User Preset Conditions

The analyzer can be **preset** to either **factory default** conditions or **User Preset** conditions.

How to set User Preset

Using front-panel HARDKEY [softkey] buttons

For [PNA-L](#) and [E836x](#) models

1. [Navigate using MENU/DIALOG](#)

For [PNA-X](#) models

1. Press **SAVE**
2. then **[User Preset]**


PNA Menu using a mouse

◀ **Programming Commands** ▶

1. Click **System**
2. then **User Preset**

◀ **Programming Commands** ▶

1. Click **Utility**
2. then **User Preset**

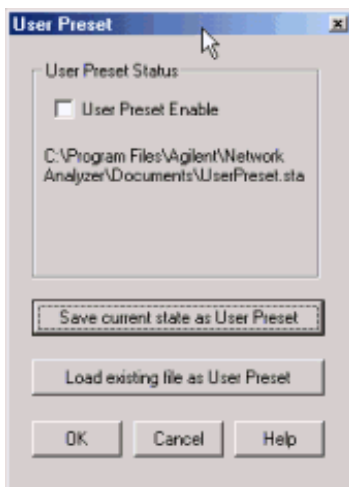

User Preset dialog box help

With a User Preset saved and enabled, when the PNA is Preset, the User Preset settings are recalled instead of the factory default settings. Calibration data is NOT recalled with a User Preset. [Learn more about instrument state settings.](#)

User Preset Enable

Check - The PNA is preset to **User Preset** conditions when the Preset button is pressed.

Clear - The PNA is preset to **Default** conditions when the Preset button is pressed.

Save current state as User Preset Click to store the current instrument state as the User Preset conditions. File is stored as C:/ Program Files/ Agilent/ Network Analyzer/ Documents/ UserPreset.sta.

Load existing file as User Preset Click to retrieve an instrument state to be used as the User Preset conditions.

Last modified:

9/27/06 MX Added UI

9/12/06 Added link to programming commands

Measurement Parameters

This topic contains the following information:

- [S-Parameters](#) (pre-selected ratios)
- [Ratioed](#) (choose your own ratio)
- [Unratioed Power](#) (absolute power)
- [How to Select a Measurement Parameter](#)

[Learn about Balanced Measurements](#)

[See other 'Setup Measurements' topics](#)

S-Parameters


S-parameters (scattering parameters) are used to describe the way a device modifies a signal. For a 2-port device, there are **four S-Parameters**. The syntax for each parameter is described by the following:

S out - in

out = PNA port number where the device signal output is measured (receiver)

in = PNA port number where the signal is applied (incident) to the device (source)

Move the mouse over each S-parameter to see the signal flow:

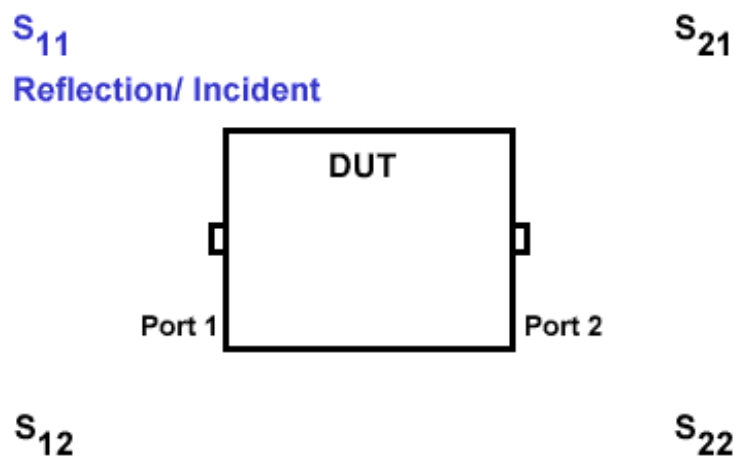

For two-port devices:

- When the source goes into port 1, the measurement is said to be in the **forward** direction.

- When the source goes into port 2, the measurement is said to be in the **reverse** direction.

The analyzer automatically switches the source and receiver to make a forward or reverse measurement. Therefore, the analyzer can measure all four S-parameters for a two-port device with a single connection.

See the [block diagram](#) (including receivers) of your PNA.

Common Measurements with S-Parameters

Reflection Measurements (S11 and S22)

- Return loss
- Standing wave ratio (SWR)
- Reflection coefficient
- [Impedance](#)
- S₁₁, S₂₂

Transmission Measurements (S21 and S12)

- [Insertion loss](#)
- Transmission coefficient
- Gain/Loss
- Group delay
- Deviation from linear [phase](#)
- [Electrical delay](#)
- S₂₁, S₁₂

Receiver Measurements

A 2-port PNA typically has four receivers: A, B, R1, and R2.

Your PNA may not have 2 reference and 2 test port receivers. See the [block diagram](#) of your PNA.

- R1 and R2 are reference receivers. They measure the PNA source signal as it leaves the PNA and is incident on the DUT.
 - R1 measures the signal out of Port 1
 - R2 measures the signal out of Port 2.
- A and B are test port receivers. They measure the signal out (or reflecting off) of the DUT.
 - A measures the signal into PNA Port 1
 - B measures the signal into PNA Port 2

You can specify measurements using one or two of the available receivers.

Note: Beginning with PNA Rev. 7.22, you can use the internal ADC (Analog-Digital Converters) as measurement receivers. [Learn more.](#)

Ratioed Measurements

Ratioed measurements allow you to choose your own ratio of any two receivers that are available in your PNA. S-parameters are actually predefined ratio measurements. For example S₁₁ is A/R₁.

The following are common uses of ratioed measurements:

- Comparing the phase between two paths of a device. An example could be something simple like a power splitter or more complicated like a dual-channel receiver.
- Measurements that require a higher dynamic range than the analyzer provides with S-parameters.

Your PNA **MAY** have front-panel jumper cables that go directly to measurement receivers. Learn about the [front-panel jumpers](#) on your PNA.

Unratioed (Absolute Power) Measurements

The unratioed power parameter allows you to look at the absolute power going into any of the measurement receivers that are available on your PNA.

The reference receivers are internally configured to measure the source power for a specific PNA port. Performing an absolute power measurement of a reference receiver using a different source port will measure very little power unless the front panel jumpers are removed and signal is applied directly to the receiver. An example of this would be an R1 measurement using port 2 as the source.



- [Measuring phase](#) using a single receiver yields meaningless data. Phase measurements must be a comparison of two signals.
- [Averaging](#) for Unratioed parameters is computed differently from ratioed parameters.

How to create a NEW trace

PNA-X


The only measurements that can be created are those in the same measurement class as is currently assigned to the active channel. To create a measurement other than these, first assign the appropriate measurement class to a new or existing channel. [Learn how.](#)

After that is done...

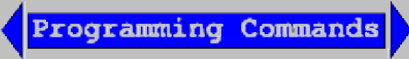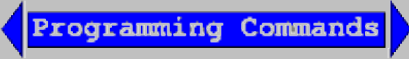Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	
1. Press TRACE	1. Click Trace
2. then [Active Entry keys]	2. then New Trace
For PNA-X models	
1. Press TRACE 1, 2, 3, OR 4	1. Click Trace/Chan
	2. then New Trace

How to CHANGE the active trace

 
For [PNA-L](#) and [E836x](#) models



1. Press **MEASURE**
2. then [\[Active Entry keys\]](#)

1. Click **Trace**
2. then **Measure**

 For [PNA-X](#) models




1. Press **MEAS**

1. Click **Response**
2. then **Measure**


E836x and PNA-L models:

Click a tab to select the **TYPE** of measurement:

The tabs are populated **ONLY** with measurements and receivers that are available for your PNA configuration.

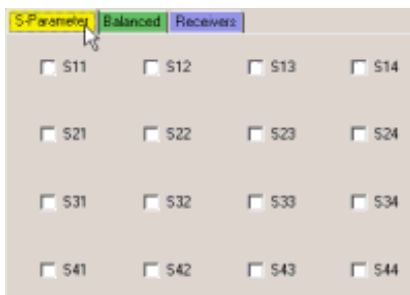

S-Parameters

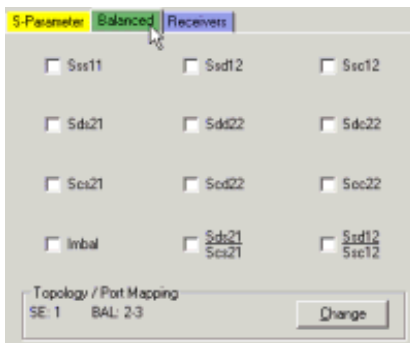

Balanced

Different measurements are available depending on the selected [topology](#).

Activate	Numerator	Denominator	Source Port
<input checked="" type="checkbox"/>	A	/ 1	Port 1
<input type="checkbox"/>	B	/ 1	Port 1
<input type="checkbox"/>	C	/ 1	Port 1
<input type="checkbox"/>	D	/ 1	Port 1
<input type="checkbox"/>	R	/ 1	Port 1
<input type="checkbox"/>	A	/ R	Port 1
<input type="checkbox"/>	B	/ R	Port 1
<input type="checkbox"/>	C	/ R	Port 1
<input type="checkbox"/>			
<input type="checkbox"/>			

Receivers

- Ratioed
- Unratioed

The internal ADCs (Analog-Digital Converters) can be used as measurement receivers. [Learn more.](#)

[Learn about new logical receiver notation.](#)

Channel / Window Selections

New / Change Measurement dialog box help

Click a tab to create or change measurements.

- When creating NEW measurements, you can choose more than one.
- When changing an EXISTING measurement, you can choose ONLY one.

Note: For **PNA-X**, the only measurements that are available are those in the [measurement class](#) currently assigned to the active channel. Other measurements are NOT compatible.

To create a measurement other than these, first assign the appropriate measurement class to a new or existing channel. [Learn how.](#)

Tabs

S-Parameter Select a predefined ratioed measurements. [Learn more about S-parameters.](#)

Balanced Select a balanced measurement type. (Multiport PNAs ONLY)

Change Click to invoke the [Balanced DUT Topology / Logical Port mappings](#) dialog box. [Learn more about Balanced Measurements.](#)

Receivers Select receivers to make Ratioed and Unratioed (absolute power) measurements. [Learn more about receiver measurements.](#)

Logical Receiver Notation

With PNA [Rev 6.2](#), Ratioed and Unratioed measurements can also use **logical receiver notation** to refer to receivers. This notation makes it easy to refer to receivers with an [External Test Set](#) connected to the PNA. You do not need to know which physical receiver is used for each test port.

- **aN** - Reference receiver for logical port N
- **bN** - Test port receiver for logical port N

For example:

- **Ratioed:** "b12/a1" refers to the logical test port 12 receiver / the logical port 1 reference receiver.
- **Unratioed:** "b10" refers to the logical test port 10 receiver.

The old style notation (A, B, R1 and so forth) can still be used to refer to the PNA **physical** receivers.

However, ratioed measurements **MUST** use the same notation to refer to both receivers; either the physical receiver notation (A, R1) or the logical receiver notation (aN, bN). For example, the following mixed notation is **NOT** allowed: A/b3 and a5/R2.

Programming

When entering receiver letters using programming commands, neither logical or physical receiver notation are case sensitive.

Ratioed Check **Activate** to create or change a measurement. Select a receiver for the Numerator, select another receiver for the Denominator, then select a source port for the measurement.

The **Source port** is ALWAYS interpreted as a logical port number.

For convenience, the table is populated with common choices.

- [Learn about External Test Sets and Ratioed Measurements](#)
- [Learn more about Ratioed Measurements.](#)

Unratioed Same as Ratioed, but select **1** as the Denominator.

- [Learn More about Unratioed Measurements.](#)
- See the [block diagram](#) of receivers in YOUR PNA.
- The internal ADCs (Analog-Digital Converters) can be used as measurement receivers. [Learn more.](#)

Channel / Window Selections

These selections are NOT AVAILABLE when changing an EXISTING measurement. [Learn how to change a measurement.](#)


Channel Number Select the channel for the new traces.

Create in New Window

- Check to create new traces in a new window.
- Clear to create new traces in the active window. When the PNA [traces per window limitation](#) has been reached, no more traces are added.

Auto-Create Windows Check to create new traces in as many windows as necessary. See PNA [number of windows limitation](#).

[About Measurement Parameters](#) (top of page)

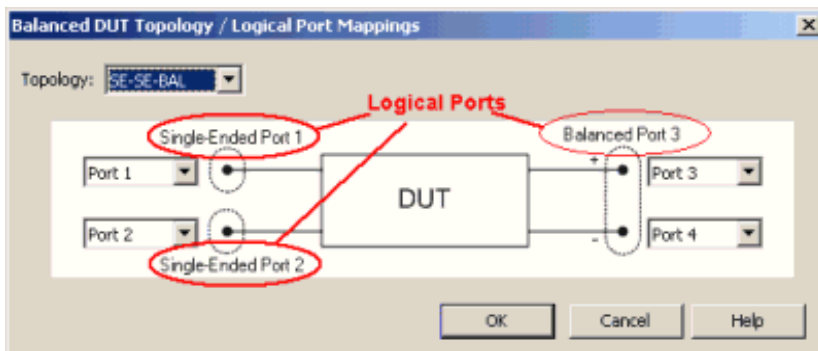

Balanced DUT Topology / Logical Port mappings dialog box help

New Check out the **True Mode Stimulus Application** being offered at www.agilent.com/find/balanced.

Create or edit DUT Topology and Logical Port Mapping.

A Logical Port is a term used to describe a physical PNA test port that has been remapped to a new port number.

- Any **Two** physical PNA ports are mapped to **One Balanced** Logical port
- Any **One** PNA physical port is mapped to **One Single-Ended** Logical port

Note: These selections apply to ALL measurements in the channel. If the device topology is changed, any existing measurements in the channel that are incompatible with the new topology will be automatically changed to one that is compatible.

Topology: Describes your DUT as you would like it tested. The following device topologies can be measured by a multiport PNA.

- **Balanced / Balanced**
(2 logical ports - <4 actual ports>)
- **Single-ended / Balanced**
(2 logical ports - <3 actual ports>)

- **Single-ended - Single-ended / Balanced**
(3 logical ports - <4 actual ports>)

These topologies can be used in the reverse (\Leftarrow) direction to measure:

- **Balanced / Single-ended** topology
- **Balanced / Single-ended - Single-ended** topology

For example, to measure a **Balanced / Single-ended** topology, measure the S12 (reverse direction) of a **Single-ended / Balanced** topology.

Learn about [Logical Port mapping when using an External Test Set.](#)

Learn more about [Balanced Measurements](#)

Last modified:

- 10/11/06 Added new UI
- 9/19/06 MQ Added logical receiver notation and Multiport meas toolbar.
- 9/12/06 Added link to programming commands

Measurement Classes

Measurement Classes are categories of measurements that can coexist on a channel.

- [What are Measurement Classes](#)
- [How to assign a Measurement Class to a Channel](#)
- [Measurement Class Dialog Box Help](#)

[See other 'Setup Measurements' topics](#)


What are Measurement Classes


The following table shows the three Measurement Classes currently available for the PNA. Within each of these classes there are a number of measurements.

Measurement Class	Examples of Measurements
Standard S-Parameters	S11, S22, R, A/R1
Scalar Mixer Measurements	SC21, S11, RevOPwr
Vector Mixer Measurements	VC21, S11, B

Measurement Classes are categories of measurements that can coexist on a channel. A measurement from one class can NOT reside in a channel with a measurement from another class. For example, a VC21 measurement can NOT reside in a channel that is currently hosting Scalar Mixer Measurements.

The Measurement Class dialog is accessed in the following ways:

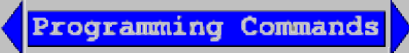How to assign a Measurement Class to a Channel	
Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	
1. Not Available	1. Not Available
For PNA-X models	
1. Press MEAS	1. Click Trace/Chan
2. then [Measurement Class]	2. then Measurement Class

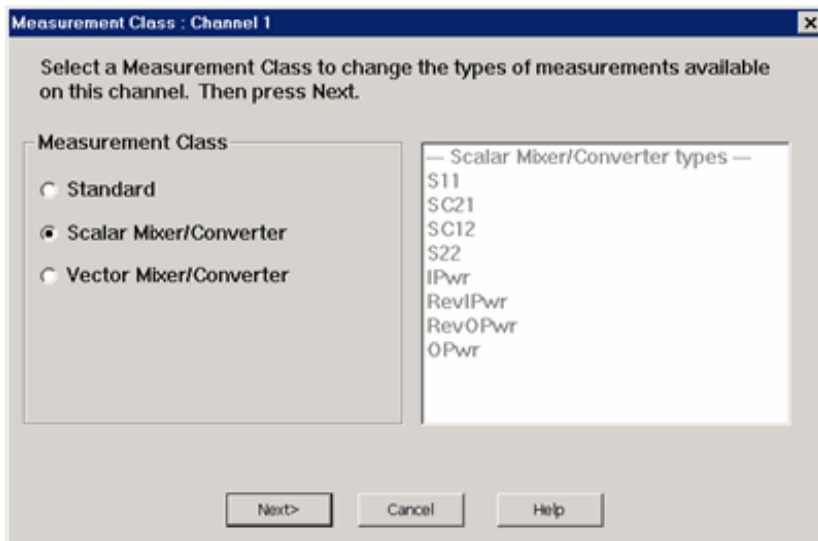

Measurement Class dialog box help

This dialog box **CHANGES** the measurement class for the active measurement channel. Therefore,


- Next is available **ONLY** when the selected measurement class is different from that of the active channel.
- To **CREATE** a new channel of the same type as the active channel, first create a new channel (click **Trace/Chan**). All new channels default to **Standard** Measurement Class. Then change the Measurement Class if necessary.

Title Bar Indicates the active channel to which the measurement class will be assigned.

Measurement Class Choose the measurement class.

Note: The list of measurements is provided for display only. If you choose to create the measurement class in a new channel, a default measurement (usually S11) will be created. To change the measurement, click **Trace**, then select a new measurement.

Next Click to invoke the following dialog. NOT available when the selected measurement class is the same as the active channel.

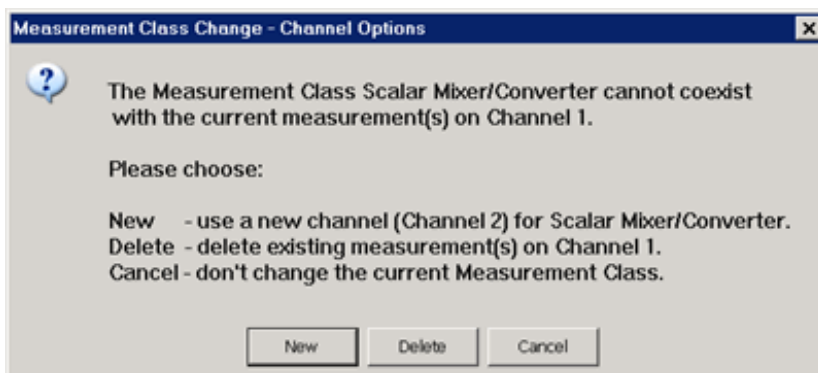

Choose to do the following:

- **New** - Create the measurement class in a new channel. A default measurement will also be created. To change the measurement, click **Trace**, then select a new measurement.
- **Delete** - Delete the existing measurements in the active channel. Create the measurement class, and default measurement, in that channel.
- **Cancel** - Do not create the new measurement class. Leave the old measurements (and class) in that channel.

Last Modified:

18-Jun-2007 MX New topic

Frequency Range

Frequency range is the span of frequencies you specify for making a device measurement.

- [How to Set Frequency Range](#)
- [Zoom](#)
- [CW Frequencies](#)
- [Frequency Resolution](#)
- [Frequency Band Crossings](#)



[See other 'Setup Measurements' topics](#)


How to set Frequency Range

There are two ways to set the frequency range:

- Specify the **Start** and **Stop** frequencies of the range.
- Specify the **Center** frequency and desired **Span** of the range.

See the [frequency ranges of all PNA models](#)

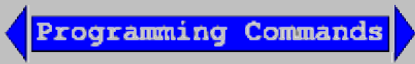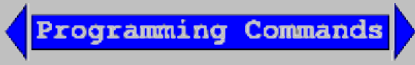
Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	
1. Press START/STOP or CENTER/SPAN	1. Click Channel 2. then Start/Stop or Center/Span
For PNA-X models	
1. Press FREQUENCY	1. Click Stimulus 2. then Frequency

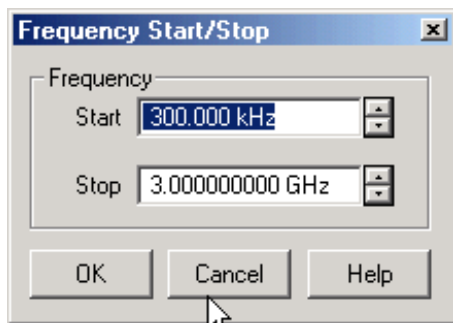

Frequency Start/Stop dialog box help

Start Specifies the beginning frequency of the swept measurement range.

Stop Specifies the end frequency of the swept measurement range.

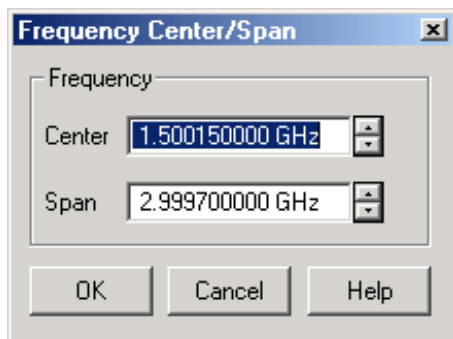

Frequency Center/Span dialog box help

Center Specifies the value at the center of the frequency sweep. This value can be anywhere in the analyzer range.

Span Specifies the span of frequency values measured to either side of the center frequency.


Zoom - PNA-X ONLY

Zoom allows you to easily change the start and stop frequencies or start and stop power levels in a [power sweep](#).

Zoom operates on the [Active Trace](#) and all traces in the same channel as the active trace, regardless of the window in which they appear.

How to Zoom in a measurement window

1. Left-click the mouse or use a finger, then drag across a portion of a trace.
2. Release the mouse or lift the finger and the following menu appears:
3. Select from the following:

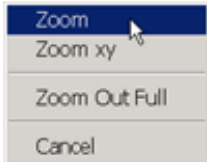

Zoom - changes the channel stimulus settings to the left and right border values of the Zoom selection

Zoom xy - changes the channel stimulus settings as above. In addition, the Y-axis scale of the active trace changes to the approximate scale of the Zoom selection.

Zoom Full Out - changes the channel stimulus settings to the full span of the current calibration. If no calibration is ON, then the stimulus settings are changed to the full span of the PNA model.

Notes

- The stimulus settings are changed for **ALL** traces in the active channel, regardless of the window in which they appear.
- If markers are in the selected area, they remain in place.
- If markers are in the unselected area, they are moved to the right or left edge of the new span. When Zoom Full Out is selected, the markers are moved back to their original location.

Zoom is NOT available for the following:

- Smith Chart or Polar [display formats](#)
- [CW Time](#) and [Segment sweep type](#)
- [Frequency Offset Measurements](#)
- [FCA Opt 083 Measurements](#)



CW Frequencies


Measurements with a [CW Time sweep](#) or [Power sweep](#) are made at a single frequency rather than over a range of frequencies.

How to set CW Frequency

1. Set [Sweep Type](#) to **CW Time** or **Power**.

You can also set CW frequency from within the Sweep Type dialog box.

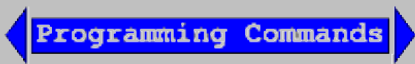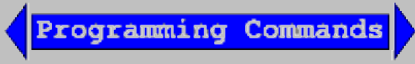Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	
2. Press START/STOP or CENTER/SPAN	1. Click Channel 2. then CW Frequency
For PNA-X models	
2. Press FREQ 3. then [CW]	2. Click Stimulus 3. then Frequency 4. then CW Frequency

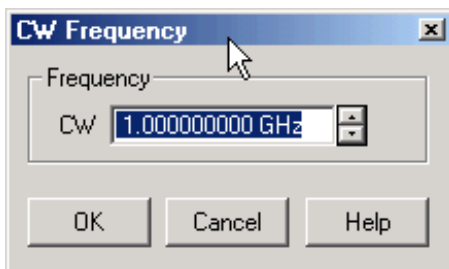

CW Frequency dialog box help

CW Type a value and the first letter of the suffix (k,m,or g) or use the up and down arrows to select any value within the range of the PNA.

Frequency Resolution

The resolution for setting frequency is 1 Hz.

Frequency Band Crossings

The frequency range of the PNA covers several internal frequency bands. The higher the frequency range of the

PNA, the larger the number of bands. The source power to your DUT turns off as the stimulus frequency is swept through these band crossings. To learn more, see [Power ON and OFF during Sweep and Retrace](#).

The listed frequencies in the following tables are the stop frequency of the specified band, and the start frequency of the following band.

Frequency band crossings are different for the following models:

- [3 GHz, 6 GHz, and 9 GHz Models](#)
- [E8362A/B, E8363A/B, E8364A/B](#)
- [E8361A](#)
- [N5230A \(2-port models\)](#)
- [N5230A \(4-port models\)](#)
- [N5242A](#)

For 3 GHz, 6 GHz, and 9 GHz (discontinued) PNA models:

Band	Frequency
1	10 MHz
2	748 MHz
3	1500 MHz
4	3000 MHz
5	4500 MHz
6	6500 MHz

For E8362 / 63 / 64 A/B

(A models do not have band 0)

Band	Freq (GHz)	Band	Freq (GHz)	Band	Freq (GHz)
0	.045				
1	0.748	9	7.60	17	25.60
2	1.500	10	10.00	18	30.00
3	3.00	11	12.00	19	32.00
4	3.80	12	12.8	20	36.00
5	4.50	13	15.20	21	38.40
6	4.80	14	16.00	22	40.00
7	6.00	15	20.00	23	45.60
8	6.40	16	22.80	24	48.00

For E8361A

Band	Freq (GHz)	Band	Freq (GHz)	Band	Freq (GHz)
0	.045	9	10.00	18	32.00
1	0.748	10	12.00	19	36.00
2	1.500	11	12.80	20	40.00
3	3.00	12	15.40	21	44.70
4	3.80	13	16.00	22	46.20
5	4.00	14	20.00	23	51.20
6	4.50	15	24.00	24	60.00
7	6.00	16	25.60	25	64.00
8	7.70	17	30.00		

For N5230A 2-port models

Band	Freq (GHz)	Band	Freq (GHz)	Band	Freq (GHz)
1	.045	11	10.500	21	28.600
2	.748	12	12.500	22	31.250
3	1.5	13	15.750	23	31.500
4	3.125	14	16.667	24	33.333
5	4.167	15	18.750	25	37.000
6	5.250	16	21.000	26	40.500
7	6.250	17	22.500	27	41.667
8	7.875	18	25.000	28	42.000
9	8.333	19	26.250	29	46.800
10	9.375	20	26.500	30	

For N5230A 4-port models

Band	Freq (GHz)	Band	Freq (GHz)
0	.00112	9	8.333
1	0.010	10	9.800
2	0.040	11	10.500
3	0.748	12	12.500
4	1.500	13	15.000
5	3.125	14	15.750
6	4.166	15	16.666
7	5.250	16	18.750
8	6.250	17	20.100

For N5242A

Band	Freq (GHz)	Band	Freq (GHz)	Band	Freq (GHz)
0	Reserved	12	.396	24	8.50
1	Reserved	13	.500	25	10.664
2	.014	14	.628	26	12.00
3	.019	15	1.00	27	12.80
4	.027	16	1.50	28	13.51
5	.038	17	2.00	29	15.40
6	.053	18	3.00	30	16.00
7	.075	19	3.20	31	18.00
8	.105	20	4.00	32	20.00
9	.146	21	5.32	33	21.328
10	.205	22	6.75	34	22.50
11	.250	23	8.00	35	24.00

Last modified:

- 10/23/06 MX Added new band crossings
- 10/16/06 Moved phase lock lost indicator
- 9/12/06 Added link to programming commands
- 9/27/06 MX Added UI

Power Level

Power level is the power of the PNA source at the test ports.

- [How to make Power Settings](#)
- [Power Dialog Help](#)
- [Power and Attenuation Dialog Help](#)
- [Source Unleveled](#)
- [Setting Independent Port Power](#)
- [Optimum Attenuation Value](#)
- [Receiver Attenuation](#)
- [Power ON and OFF during Sweep and Retrace](#)







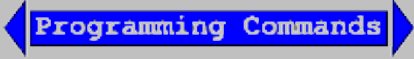
[See other 'Setup Measurements' topics](#)

Power Settings

The test port output power is specified over frequency (See the [Power Range](#) and [Frequency Range](#) specifications for your PNA)

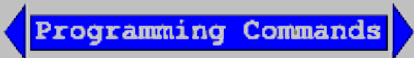How to make Power settings

Use one of the following methods to set port power. Only the menu can be used to launch the [Power and Attenuators](#) dialog box.

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
<div>1. </div> <div>2. then    </div>	<div>1. Click Channel</div> <div>2. then Power</div>
For PNA-X models	

1. Press **STIMULUS**
2. then **[Power]** or **[Power and Attenuators]**

1. Click **Stimulus**
2. then **Power** or [Power and Attenuators](#)

Power dialog box help

Defines and controls the PNA source power and attenuation.

Power On (All Channels) Check to enable source power for all channels. Only turns power ON if channel power setting is ON or Auto. [See Advanced Power.](#)

Note: Power ON/OFF setting and Instrument State [Save and Recall](#).

If power is OFF when an instrument state is saved, the power will be OFF when the state is recalled.

If power is ON when an instrument state is saved, then when recalled, the power setting will be the SAME as the current power setting. To protect your DUT, power will NOT be turned ON by an instrument state recall if the current power setting is OFF.

[User Preset](#) follows this instrument state save/recall behavior.

[Instrument Preset](#) always includes Power ON.

Port 'n' Active source port for which power is being set.

Port Power Sets the power level for the specified port.

- To accurately set the power level at any point after the test port, perform a [Source Power Calibration](#).
- See the [specified power range of your PNA model](#).

Power Sweep

Start / Stop Power Set the start and stop power values of a power sweep. These settings are only available when [Sweep Type](#) is set to Power Sweep. Sweep power can also be set from the [Advanced Power dialog box](#).

Zoom - allows you to easily change the start and stop power levels in a power sweep. [Learn how.](#)
[Learn more about Power Sweep.](#)

Power Slope

Helps compensate for cable and test fixture power losses at increased frequency.

Slope Select to set the power slope. Clear to set power slope OFF.

- With power slope enabled, the port output power increases (or decreases) as the sweep frequency increases.
- The units of power slope are dB/GHz.
- Power slope can only be set to values of 0.5, 1, 1.5, or 2 (positive or negative).

Name	State	Port Power	Start Power	Stop Power	Auto Range	Atten. Control	Leveling Mode
Port 1	Auto	-10.00 dBm	-10.00 dBm	0.00 dBm	<input checked="" type="checkbox"/>	0.00 dB	Internal
Port 2	Auto	-10.00 dBm	-10.00 dBm	0.00 dBm	<input checked="" type="checkbox"/>	0.00 dB	Internal
Port 3	Auto	-10.00 dBm	-10.00 dBm	0.00 dBm	<input checked="" type="checkbox"/>	0.00 dB	Internal
Port 4	Auto	-10.00 dBm	-10.00 dBm	0.00 dBm	<input checked="" type="checkbox"/>	0.00 dB	Internal
Port 1 Src2	Auto	-10.00 dBm	-10.00 dBm	0.00 dBm	<input checked="" type="checkbox"/>	0.00 dB	Internal

Channel Power Slope: 0.0 dB/GHz

Receiver Attenuator... Path Configuration... OK Help

Power and Attenuators dialog box help

Defines and controls the PNA source power and attenuation for the active channel.

Beginning with PNA Rev. 7.21, external sources can be controlled from this dialog. [Learn more.](#)

Power On (All Channels) Check to enable source power for all channels. Only turns power ON if channel power setting is ON or Auto.

Port Powers Coupled

- **Coupled** (checked) The power levels are the same at each test port. Set power at any test port and all test ports change to the same power level.
- **Uncoupled** (cleared) The power levels are set independently for each test port. Uncouple power, for example, if you want to measure the gain and reverse-isolation of a high-gain amplifier. The power required for the input port of the amplifier is much lower than the power required for the output port. Learn more about [Setting Independent Port Power](#)

Name Lists the PNA test ports.

State ON and OFF are valid ONLY on PNA models with an [internal second source](#).

- **Auto** Source power is turned ON at the specified test port when required by the measurement. This is the most common (default) setting.
- **ON** Source power is ALWAYS ON, regardless of measurements that are in process. Use this setting to supply source power to a DUT port that always requires power, such as an LO port. This could turn OFF power at another test port. [Learn about internal second source restrictions.](#)
- **OFF** Source power is never ON, regardless of the measurement requirements. Use this setting to prevent damage to a sensitive DUT test port.

Port Power Sets the power level at the output of the source.

- To accurately set the power level at any point after the test port, perform a [Source Power Calibration](#).
- See the [specified power range of your PNA model](#).

Start / Stop Power Available ONLY when sweep type is set to Power Sweep. Set the start and stop power values of a power sweep. [Learn more about Power Sweep.](#)

In PNA release 6.04 you can specify whether to maintain source power at either the start power or stop power level at the end of a power sweep. To do this, send [SYST:PREF:ITEM:PSRT](#) from the GPIB Command Processor Console.

Auto Range Check to allow the PNA to select the [optimum attenuation value](#) to achieve the specified test port power.

Clear to manually set the attenuation for each port. Type or select the attenuation value in the adjacent Attenuator Control box.

Attenuator Control When Port Powers are Uncoupled, manual attenuator control allows you to set a wide range of power levels by setting the attenuation. [See Setting Independent Port Power.](#) Also use manual attenuation control when a measurement requires a very good impedance match with the source, such as with oscillators or conditionally unstable amplifiers. Choose an attenuation level of 10 dB or more to ensure the best source match.

When Port Powers are Coupled, changing one port Attenuation Control value changes all port values.

Attenuation is in between the Source and the test port. Power to the reference receiver is not attenuated and is therefore higher than at the test port by the amount of attenuation. This will make an uncalibrated measurement using a reference receiver appear as though there is added attenuation at the test device. [See the PNA Block diagram.](#)

Note: With PNA release 7.2, a preference can be set to mathematically offset (or NOT) the power at the reference receiver by the amount of source attenuation. Because the reference receiver is not in the attenuation path, there is more power at the reference receiver than at the test port by the amount of source attenuation.

By default, ALL PNA models currently offset the reference receivers. [See Block diagram.](#)

See the [SCPI](#) and [COM](#) commands used to set the preference.

Leveling Mode

Internal Standard ALC leveling. Power level within an attenuator setting is limited to the ALC Range. [See Source Unleveled.](#)

Open Loop No leveling is used in setting the source power. The lowest settable power, without attenuation,

is limited to -30dBm. The source power level accuracy is compromised. Use a source power calibration to make the source power more accurate.

Source Unleveled

When the power level that is required at a test port is **higher** than the PNA can supply, a Source Unleveled [error message](#) appears on the screen and the letters LVL appear on the [status bar](#).

To perform a power sweep, the range of power is usually limited to the range of the Automatic Leveling Control (ALC) loop. (The PNA-X allows a very wide power range using **Open Loop**).

PNA specifications guarantee the ALC power range over which the PNA can supply power without an unleveled indication. However, the actual achievable power range on your PNA is probably greater than the specified range.

How to calculate the specified achievable power range

From the specifications for the N5230A Opt 245 for the frequency span from 15 GHz to 20 GHz:

- Max Leveled Power = **-8 dBm**
- Power Sweep Range (ALC) = **-17 dB**

For this frequency range the specified power range is calculated as:

- Max = **-8 dBm**
- Min = $(-8) - (17) = \mathbf{-25\ dBm}$

When using Source Attenuators:

- with 10dB of attenuation, this becomes **-18 dBm to -35 dBm**
- with 20dB of attenuation, this becomes **-28 dBm to -45 dBm**, and so forth.

[See the output power specs for your PNA.](#)

To resolve an unleveled condition, change either the Test Port Power or Attenuator setting. If an Unleveled condition exists within the specified power range, [contact Technical Support](#).

Setting Independent Port Power

The PNA allows you to [uncouple port power](#) and specify different power levels at each test port. There are a few things to consider when setting independent port powers.

- Does your required high and low power levels fall within the specified Min and Max power range of the PNA? [See Unleveled Indicator](#). If they do not, you may need to use the internal Source Attenuators.
- Does the PNA have source attenuators? If so, how many source attenuators? Some PNA models have one attenuator for each port. In most multiport PNA systems, the attenuators are shared by at least two test ports. See [PNA Options](#) to see the availability and range of source attenuation on your PNA.


- When using source attenuation, consider this PNA feature: To prevent premature wear on the attenuators, the PNA does not allow attenuators to switch between settings when continuously triggering. Therefore:
 - If the measurements that require different power levels are in the same channel, the PNA will not allow an attenuator to be set to different values.
 - If different channels are required, when settings require an attenuator to switch value, only one channel is allowed to sweep continuously. All other channels are automatically put in [Trigger Hold](#). To override this condition, change the 'Hold' channel to [Single trigger](#) or [Group trigger](#). The attenuator will then be allowed to switch settings for each channel.

Optimum Attenuation Value

The attenuator has different positions, allowing a wide range of power levels. The number of power ranges available is determined by the source attenuation installed in your PNA. See [PNA Options](#) to see the availability and range of source attenuation on your PNA.


- Each range has a total specified span (25 dB in the following Attenuation Values graphic).
- The optimum setting is the middle of the range. This range provides the best accuracy and performance of the source leveling system. The optimum ranges are the blue regions in the following graphic.
- An attenuator setting can be selected manually or automatically. If automatic is selected, the blue optimum ranges (shown in the following graphic) are used.

(Attenuator ranges vary, this particular range is 70 dB)

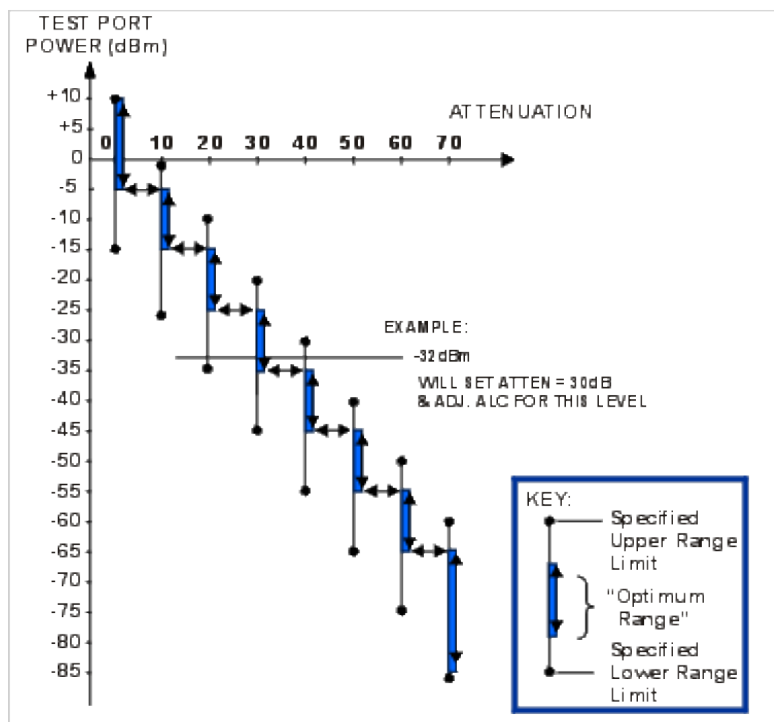

Note: Error correction is fully accurate only for the power level at which a measurement calibration was performed. However, when changing power within the same attenuator range at which the measurement calibration was

performed, ratioed measurements can be made with nearly full accuracy (non-ratioed measurements with less accuracy).

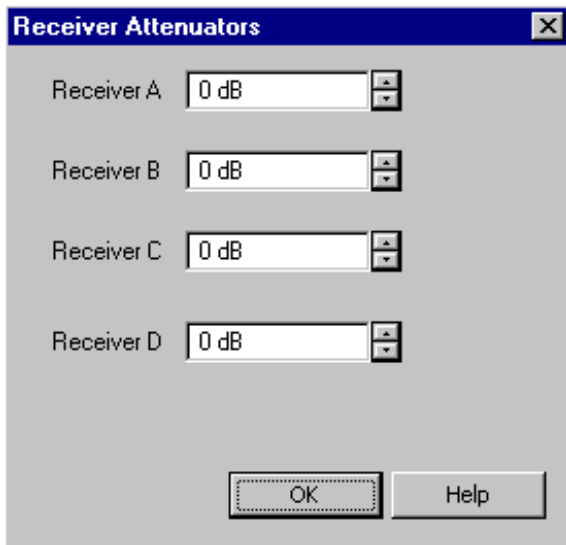

Receiver Attenuators dialog box help

Type or select independent attenuation values for each receiver.

Receiver Attenuation, available as [option 016](#) on some PNA models, is used to attenuate the output signal from the device under test to avoid damaging the PNA receivers. This causes the power level at the receiver to be less than the power at the test port by the specified amount of attenuation.

Note: With PNA release 7.2, a preference can be set to mathematically offset (or NOT) the displayed trace by the amount of receiver attenuation. This causes the display to show the power at the test port.

By default:

- PNA-L and E836xB do **NOT** offset the display.
- The PNA-X **DOES** offset the display.

See the [SCPI](#) and [COM](#) commands used to set the preference.

When an [external test set](#) is connected, Receiver Attenuation control is only available for the physical receivers in the PNA. Switching receiver attenuation using [logical receiver notation](#) is NOT allowed.

CAUTION! You can damage the analyzer receivers if the power levels exceed the maximum values. See your analyzer's [Technical Specifications](#) for the maximum input power to a receiver.

The receiver attenuator characteristics are:

- Range:
 - 0 to 50 dB (E8361A only)
 - 0 to 35 dB (all other applicable PNA models)

- Resolution:
 - 10 dB (E8361A only)
 - 5 dB (all other applicable PNA models)

Power ON and OFF during Sweep and Retrace

The frequency range of the PNA covers several internal frequency bands. The higher the frequency range of the PNA, the larger the number of bands. For example, a 9 GHz PNA has 6 frequency bands, a 50 GHz PNA has 25 frequency bands. See the [frequency band crossings](#).

Power to the DUT is turned OFF during band changes to avoid causing power spikes to the DUT.

Retrace occurs when the source gets to the end of your selected frequency span and moves back to the start frequency. Power to the DUT is again turned OFF when **retracing** across frequency bands.

Therefore, the following occurs for various stimulus settings:

1. **Single band sweep** - The power to the DUT is always ON, even during retrace.
In PNA release 6.04, [a preference setting](#) can turn power OFF during a retrace. Only available in single band frequency and segment sweeps.
2. **Multi-band sweep** - The power to the DUT is turned OFF while sweeping across a band crossing. It is turned OFF again during retrace.
3. **Power sweep** - Because power sweep is always done at a single frequency, the frequency is always within a single band and the source power is always ON. At the end of a power sweep, power is immediately set to the start power.
In PNA release 6.04, this behavior can be changed with [a preference setting](#).
4. **Single sweep:**
 - Manual trigger mode - At the end of a multiband sweep, power is turned OFF during retrace, and then power is turned back ON before arming for the next trigger.
 - Hold mode - Power can be ON or OFF depending on when and how Hold mode is entered. However, power can be immediately turned OFF manually or remotely.

Caution: Avoid expensive repairs to your PNA. Read [Electrostatic Discharge Protection](#).

Last modified:

March 26, 2007	Clarified retrace power OFF
11/16/06	Added new retrace features
10/23/06	Modified for new power diag
10/17/06	Clarified leveling
9/12/06	Added link to programming commands

Sweep Settings


A sweep is a series of consecutive data point measurements taken over a specified sequence of stimulus values. You can make the following sweep settings:

- [Sweep Type](#)
- [Sweep Time](#)
- [Sweep Setup](#)

See [Triggering](#) and [other 'Setup Measurements' topics](#)

How to set Sweep Type

Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For N5230A and E836xA/B models	Programming Commands
1. Press SWEEP TYPE	1. Click Sweep Type
2. then [Active Entry keys]	
For PNA-X	Programming Commands
1. Press SWEEP	1. Click Stimulus
2. then [Sweep Type]	2. then Sweep
	3. then Sweep Type

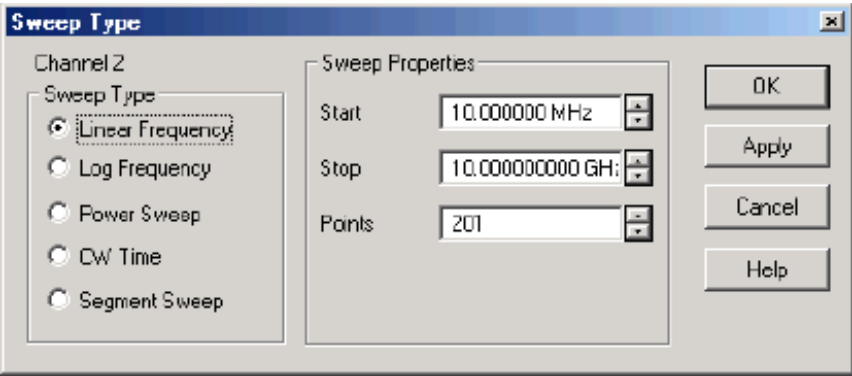

[Sweep Type dialog box help](#)

Note: Sweep Settings are not applied until either **OK** or **Apply** is pressed.

Channel The active channel when Sweep Type was selected. Sweep settings will be applied to this channel.

Sweep Type

Linear Frequency Sets a linear frequency sweep that is displayed on a standard grid with ten equal horizontal divisions.

- **Start** Sets the beginning value of the frequency sweep.
- **Stop** Sets the end value of the frequency sweep.
- **Points** Sets the number of data points that the PNA measures during a sweep. Range: 2 to 20001. (Default is 201).

Log Frequency The source is stepped in logarithmic increments and the data is displayed on a logarithmic x-axis. This is usually slower than a continuous sweep with the same number of points.

- **Start** Sets the beginning value of the frequency sweep.
- **Stop** Sets the end value of the frequency sweep.
- **Points** Sets the number of data points that the PNA measures during a sweep. Range: 2 to 20001. (Default is 201).

Power Sweep Activates a power sweep at a single frequency that you specify. [Learn about power sweep](#)

- **Start** Sets the beginning value of the power sweep.
- **Stop** Sets the end value of the power sweep.
- **CW Frequency** Sets the single frequency where the PNA remains during the measurement sweep.

CW Time Sets the PNA to a single frequency, and the data is displayed versus time.

- **CW Frequency** Sets the frequency where the PNA remains during the measurement.
- **Sweep Time** Sets the duration of the measurement, which is displayed on the X-axis.
- **Points** Sets the number of data points that the PNA measures during a sweep. Range: 2 to 20001. (Default is 201).

Segment Sweep Sets the PNA to sweep through user-defined sweep segments. [Learn how to make these settings.](#)

- **Independent Power Levels** Check to set the source power level for each segment. [Test port uncoupling](#) is also allowed.
- **Independent IF Bandwidth** Check to set the IF bandwidth for each segment.

- **Independent Sweep Time** Check to set the duration of the measurement for each segment.
- **X-Axis Point Spacing** Check to scale the X-Axis to include only the segments. [Learn more](#).
- **Allow Arbitrary Segments** Check to allow arbitrary frequencies (overlapped or reverse sweeps). [Learn more](#)
- **Show Table** Shows the table that allows you to create and edit segments.
- **Hide Table** Hides the segment table from the screen.

OK Applies setting changes and closes the dialog box.

Apply Applies setting changes and leaves the dialog box open to make more setting changes.

Cancel Closes the dialog. Setting changes that have been made since the last Apply button click are NOT applied.

Power Sweep

A power sweep either increases or decreases source power in discrete steps. Power sweep is used to characterize power-sensitive circuits, with measurements such as gain compression or AGC (automatic gain control) slope.

In the Sweep Type dialog, specify Start power, Stop power, and CW Frequency. Power can be swept over any attainable range within the [PNA ALC range](#).

Note: If the PNA has source attenuators, and the attenuation must be changed in order to achieve the requested start and stop power, click **Channel**, then **Power** to [set the power and attenuation](#).

The PNA does NOT allow a single power sweep over a range that requires attenuator switching. However, two power sweeps can be performed in different channels. The attenuators will not be allowed to switch continuously, but triggering can be performed using single or group triggering. [Learn more](#).

The remaining power settings apply in power sweep mode:

- Port Power is always coupled.
- Test Port Power setting is ignored.
- Attenuator Control is always Manual.
- Power Slope (dB/GHz) is ignored. The output frequency is CW.

Click **Sweep**, then [Number of Points](#) to change the step size of the power sweep.

Beginning with PNA release 6.04 you can specify whether to maintain source power at either the start power or stop power level at the end of a power sweep. To do this, send [SYST:PREF:ITEM:PSRT](#) from the GPIB Command Processor Console.

Segment Sweep

Segment Sweep activates a sweep which consists of frequency sub-sweeps, called segments. For each segment you can define independent power levels, IF bandwidth, and sweep time.

Once a measurement calibration is performed on the entire sweep or across all segments, you can make calibrated measurements for one or more segments.



In segment sweep type, the analyzer does the following:

- Sorts all the defined segments in order of increasing frequency
- Measures each point
- Displays a single trace that is a composite of all data taken

Restrictions for segment sweep:

- The frequency range of a segment is not allowed to overlap the frequency range of any other segment.
- The number of segments is limited only by the combined number of data points for all segments in a sweep.
- The combined number of data points for all segments in a sweep cannot exceed 20001.
- All segments are FORCED to have power levels within the same attenuator range to avoid premature wear of the mechanical step attenuator. See [Power Level](#).

How to make segment sweep settings

Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For N5230A and E836xA/B models	
<ol style="list-style-type: none"> 1. Press SWEEP TYPE 2. then [Active Entry keys] 	<ol style="list-style-type: none"> 1. Click Sweep 2. then Segment Table
For PNA-X	
<ol style="list-style-type: none"> 1. Press SWEEP 2. then [Sweep Type] 	<ol style="list-style-type: none"> 1. Click Stimulus 2. then Sweep 3. then Sweep Type

Insert Segment - adds a sweep segment before the selected segment. You can also click the "down" arrow on your keyboard to quickly add many segments.

Delete Segment - removes the selected segment.

Delete All Segments - removes all segments.

Note: At least ONE segment must be ON or [Sweep Type](#) is automatically set to **Linear**.

To Modify an Existing Segment

To make the following menu settings available, you must first show the segment table.

Click **View**, point to **Tables**, then click **Segment Table**.

	STATE	START	STOP	POI	IFBW	P1 PwR	P2 PwR	TIME
1	ON	20.000000 MHz	1.000000 GHz	21	10.0 kHz	17.00 dBm	0.00 dBm	2.474 msec
2	ON	1.000000 GHz	4.000000 GHz	21	35.0 kHz	17.00 dBm	0.00 dBm	630.000 µsec

The above graphic shows the Segment table with all independent settings selected, including source power uncoupled (two power settings).

STATE Click the box on the segment to be modified. Then use the up / down arrow to turn the segment ON or OFF.

START Sets start frequency for the segment. Click the box and type a value and the first letter of a suffix (KHz, Mhz, GHz). Or double-click the box to select a value.

STOP Sets stop frequency for the segment. Click the box and type a value and the first letter of a suffix (KHz, Mhz, GHz). Or double-click the box to select a value.

POINTS Sets number of data points for this segment. Type a value or double-click the box to select a value.

To set IFBW, Power, and Sweep Time independently for each segment:

1. On the **Sweep** menu, click **Sweep Type**, then **Segment Sweep**.
2. Check the appropriate **Sweep Properties** boxes
3. Then click the box and type a value or double-click the box and select a value.

Note: If the following are NOT set, the entire sweep uses the channel IFBW, Power, and Time settings.

IFBW Sets the [IF Bandwidth](#) for the segment.

POWER Sets the [Power level](#) for the segment. You can also UNCOUPLE the test port power. See [Power Coupling](#).

TIME Sets the [Sweep time](#) for the segment.

X-Axis Point Spacing - Segment Sweep ONLY

This feature affects how a segment trace is drawn on the screen.

How to select X-Axis Point Spacing


On the [Sweep Type](#) dialog box, click **Segment Sweep**

Then check **X-Axis Point Spacing**


- **Without X-axis point spacing**, a multi-segment sweep trace can sometimes result in squeezing many measurement points into a narrow portion of the x-axis.
- **With X-axis point spacing**, the x-axis position of each point is chosen so that all measurement points are evenly spaced along the x-axis.

For example, given the following two segments:

	STATE	START	STOP	POINTS
1	ON	45.000000 MHz	50.000000 MHz	21
2	ON	170.000000 MHz	180.000000 MHz	21

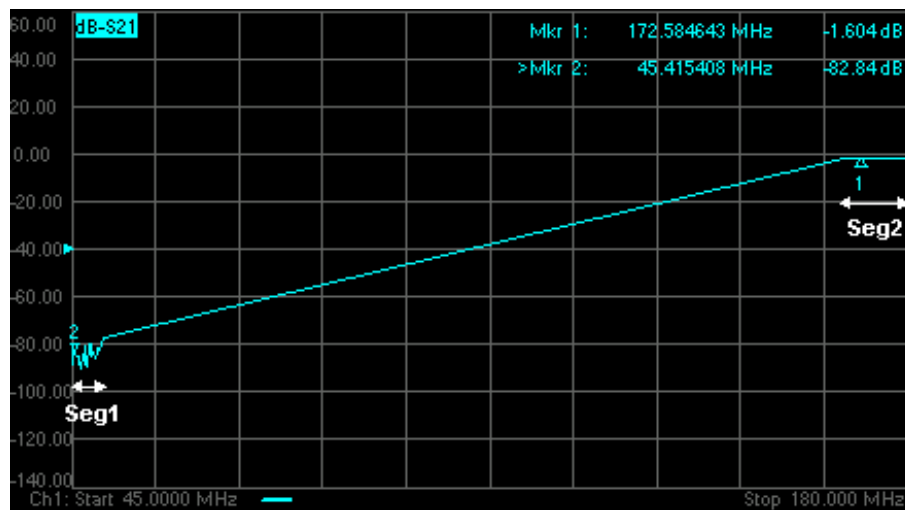

Without X-Axis Point Spacing

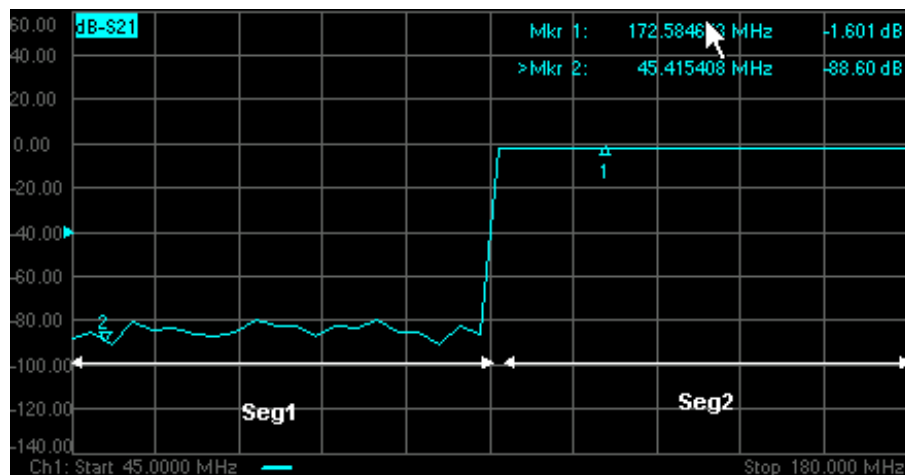

With X-Axis Point Spacing

Arbitrary Segment Sweep

This feature allows arbitrary frequencies to be entered into the segment sweep table. With this capability, segments can have:

- overlapping frequencies.

- the stop frequency less than the start frequency (reverse sweep).

How to enable Arbitrary Segment Sweep

1. On the [Sweep Type](#) dialog box, click **Segment Sweep**
2. Check **Allow Arbitrary Segment Sweep**

Notes:

- Unusual results may occur when using arbitrary sweep segments with markers, display settings, limit lines, formatting, and some calibration features.
- When Allow Arbitrary Segment is checked, [X-axis point spacing](#) is automatically turned ON.

Sweep Time

 
The PNA automatically maintains the fastest sweep time possible with the selected measurement settings. However, you can increase the sweep time to perform a slower sweep.

How to set Sweep Time

Using front-panel HARDKEY [softkey] buttons

PNA Menu using a mouse


For [N5230A](#) and [E836xA/B](#) models



1. Press **SWEEP SETUP**
2. then [\[Active Entry keys\]](#)


1. Click **Sweep**
2. then **SweepTime**

 For [PNA-X](#)



1. Press **STIMULUS**
2. then **[Sweep]**
3. then **[Sweep Time]**


1. Click **Stimulus**
2. then **Sweep**
3. then **Sweep Time**

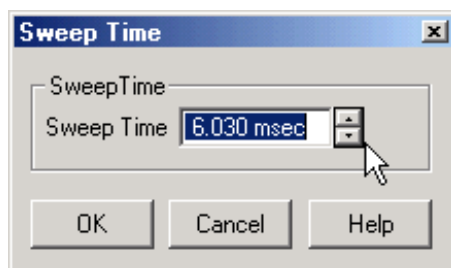

Sweep Time dialog box help

Specifies the time the PNA takes to acquire data for a sweep. The maximum sweep time of the PNA is 86400 seconds or 1 day. [Learn about other settings that affect sweep speed.](#)

Note: If sweep time accuracy is critical, use ONLY the up and down arrows next to the sweep time entry box to select a value that has been calculated by the PNA. Do NOT type a sweep time value as it will probably be rounded up to the closest calculated value. This rounded value will not be updated in the dialog box.

- The actual sweep time includes this acquisition time plus some "overhead" time.
- The PNA automatically maintains the fastest sweep time possible with the selected measurement settings. However, you can increase the sweep time using this setting.
- Enter **0** seconds to return the analyzer to the fastest possible sweep time.
- The Sweep Time setting is applied to the active channel.
- The sweep time is per sweep. A full 2-port cal requires two sweeps, both using the specified sweep time. [Learn more.](#)
- A **Sweep Indicator**  appears on the data trace when the Sweep Time is 0.3 seconds or greater, or if trigger is set to [Point Sweep Mode](#). The indicator is located on the last data point that was measured by the receiver. If the indicator is stopped (point sweep mode) the source has already stepped to the next data point.

Sweep Setup

How to make Sweep Setup settings

Using front-panel HARDKEY [softkey] buttons


For [N5230A](#) and [E836xA/B](#) models

1. Press **SWEEP SETUP**


For [PNA-X](#)

1. Press **STIMULUS**
2. then **[Sweep]**
3. then **[Sweep Setup]**


PNA Menu using a mouse

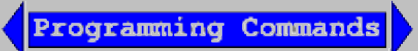

1. Click **Sweep**
2. then **Sweep Setup**

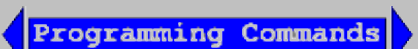

1. Click **Stimulus**
2. then **Sweep**
3. then **Sweep Setup**

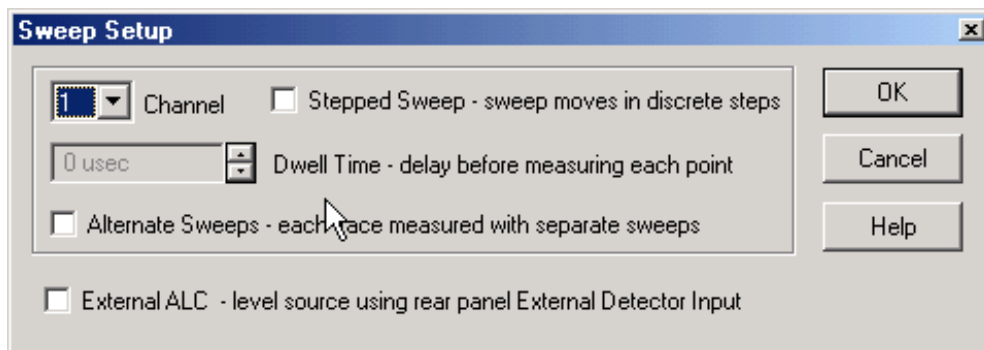

Sweep Setup dialog box help

Channel Specifies the channel that the settings apply to.

Stepped Sweep When checked (Stepped Sweep) the PNA source is tuned, then waits the specified Dwell time, then takes response data, then tunes the source to the next frequency point. This is slower than Analog Sweep, but is more accurate when testing electrically-long devices.

When cleared (Analog Sweep) the PNA takes response data AS the source is sweeping. The sweep time is faster than Stepped, but could cause measurement errors when testing electrically-long devices.

When the dialog checkbox is cleared, the PNA could be in either Analog or Step mode. There is no display indication of whether the PNA is in Analog or Stepped Sweep. Step mode is automatically selected for a number of reasons. Here are some of the reasons:

- [IF Bandwidth](#) is at, or below, 1 kHz.
- [Source Power Correction](#) is ON unless doing CW measurement.
- When more than one source is turned ON ([multisource PNA models](#)).
- When step mode is a faster way to take the data.
- For all [FOM](#) and [FCA](#) measurements.
- For all [ADC measurements](#).
- For all [MMwave measurements](#).

Dwell Time Specifies the time the source stays at each measurement point before the analyzer takes the data. Only applies to stepped sweep. The maximum dwell time is 100 seconds. See also [Electrically Long Devices](#).

Alternate Sweeps When checked, the PNA measures with only one receiver per sweep. Each sweep is performed using the specified sweep time. This setting could have implications on [triggering](#). Also, extra sweeps are always performed when [Full n-port correction](#) is ON.

When cleared, the PNA measures with all necessary receivers simultaneously. See also [Crosstalk](#).

Note: The PNA-L and PNA-X receivers can NOT be turned off individually. Therefore, Crosstalk is NOT improved on these models although sweeps are performed as on other PNA models when Alternate Sweep is selected.

External ALC Available ONLY on the **discontinued** 3 GHz, 6 GHz, and 9 GHz PNA models.

When checked, the analyzer is enabled to receive an external signal that you provide for leveling the source output. The external ALC signal input connector is the [External Detector Input](#) on the rear panel.

Last modified:

14-Nov-2007	Added Alternate Sweep note.
21-Jun-2007	Increased max data points
3-May-2007	Updated Step mode conditions
9/27/06	MX Added UI
9/12/06	Added link to programming commands



Trigger

A trigger is a signal that causes the PNA to make a measurement sweep. The PNA offers great flexibility in configuring the trigger function.


View the interactive [Trigger Model](#) animation to see how triggering works in the PNA.

- [How to Set Trigger](#)
- [Source](#)
- [Scope](#)
- [Channel Settings](#)
- [Restart](#)
- [External and Auxiliary Triggering](#) (separate topic)

[See other 'Setup Measurements' topics](#)

How to set Triggering	
Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	 Programming Commands
1. Press TRIGGER	1. Click Sweep 2. then Trigger 3. then Trigger
For PNA-X models	 Programming Commands
1. Press TRIGGER 2. then [Trigger...]	1. Click Stimulus 2. then Trigger 3. then Trigger

Note: The **Continuous**, **Single**, and **Hold** settings apply ONLY to the active channel. These settings are available from the Trigger menu, Active Entry keys, and softkeys

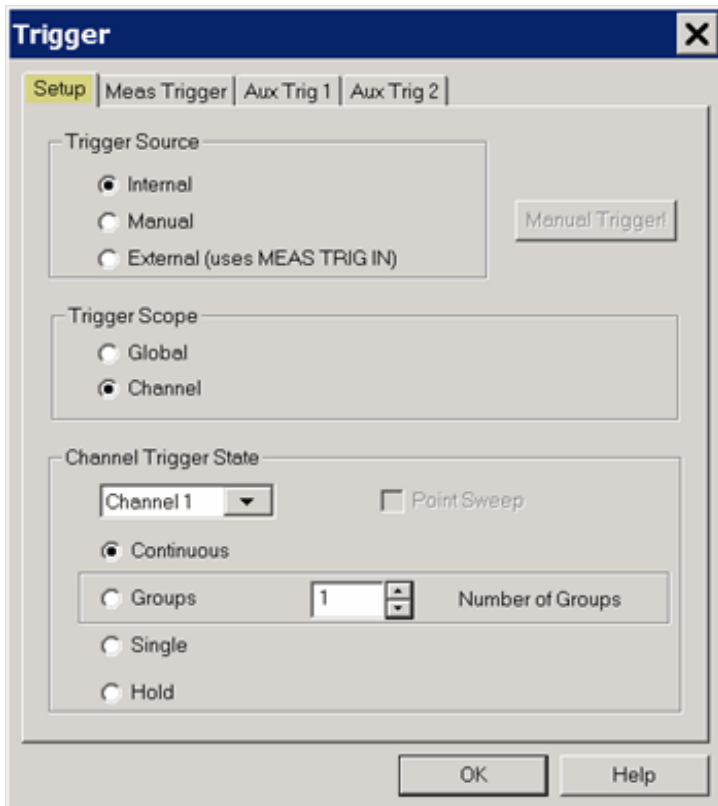

Trigger Setup dialog box help

View the interactive [Trigger Model](#) animation to see how triggering works in the PNA.

Trigger Source

These settings determine **where** the trigger signals originate for all existing channels. A valid trigger signal can be generated only when the PNA is not sweeping.

Internal Continuous trigger signals are sent by the PNA as soon as the previous measurement is complete.

Manual One trigger signal is sent when invoked by the Trigger button, the active toolbar, or a programming command.

External Trigger signals sent out or received from various connectors on the rear panel. [Learn more about External and AUX Triggering.](#)

Trigger Scope

These settings determine **what** is triggered.

Global All channels not in Hold receive the trigger signal [Default setting]

Channel Only the next channel that is not in Hold receives the trigger signal. This is not obvious or useful unless Trigger Source is set to Manual. This setting enables [Point Sweep](#) mode.

Channel Trigger State

These settings determine **how many** trigger signals the channel will accept.

Note: When a trigger signal is received, ALL measurements in the channel are made; first the forward measurements (S11, S21) are made simultaneously - then reverse measurements (S12, S22). There are two exceptions to this:

1. When [Alternate sweep](#) is selected.
2. When [Point Sweep](#) is selected.

Continuous The channel accepts an infinite number of trigger signals.

Groups The channel accepts only the number of trigger signals that is specified in the Number of Groups text box, then goes into Hold. Before selecting groups you must first increment the Number of Groups text box to greater than one.

Number of Groups Specify the number of triggers the channel accepts before going into Hold. If in Point Sweep, an entire sweep is considered one group.

First increment to desired number, then select 'Groups'.

Single The channel accepts ONE trigger signal, then goes into Hold.

Hold The channel accepts NO trigger signals.

Point Sweep When triggered, the channel measures the next data point in the sweep. Subsequent trigger signals go to the same channel until all of its measurements are complete. If in Groups or Single trigger, the count is decremented by ONE. Then the next channel that is not in Hold is triggered. Available only when both Trigger Scope = CHANNEL and Trigger Source = MANUAL and EXTERNAL.

- See also the (point) [Sweep Indicator](#).
- See [SCPI Triggering example](#) for use with External.

Trigger! - Manually sends one trigger signal to the PNA.

Restart - Channels in Hold are set to single trigger (the channel accepts a single trigger signal). All other settings are unaffected, including decrementing trigger Groups.

See Also

- [External and AUX Triggering](#).
- Interactive [Trigger Model](#) animation

Last modified:

Dec 06 Added MX capability

9/12/06 Added link to programming commands

External and Auxiliary Triggering

External and Auxiliary triggering are both used to synchronize the triggering of the PNA with other equipment or events.

- [Auxiliary vs External Triggering](#)
- [External Trigger Dialog](#)
- [I/O2 Trig Out Dialog](#)
- [Auxiliary Triggering Dialog](#)

See Also

- [Controlling a Handler](#)
 - [Synchronizing an External Source](#)
 - [PNA Triggering](#)
-

Auxiliary vs External Triggering

A major difference between External triggering and Auxiliary triggering is that an External trigger input to the PNA causes data acquisition to occur. An Auxiliary input to the PNA simply indicates that the external device is **ready** for data acquisition. The PNA trigger signal is generated from any of the usual sources: Internal, Manual, or External.

Besides this fundamental difference, Auxiliary Triggering, available ONLY on the PNA-X, offers more flexibility than External Triggering.

Auxiliary Triggering

Auxiliary triggering is used to handshake with an external device that needs to stay synchronized with the PNA. For example, when used with an external source, the PNA is configured to step frequencies and make measurements by communicating (handshaking) using Auxiliary Triggering. [Learn how](#). While this can be accomplished with External triggering, Auxiliary triggering allows more robust communication, as well as the following benefits over External Triggering:

- Channel independent - each channel can be configured differently.
- Used with any trigger source (Internal, External, or Manual)
- [Two pair of AUX TRIG connector](#) pairs allows two external devices to be controlled simultaneously.


Traditional External Triggering

The PNA-X also has [Meas Trig IN and RDY \(OUT\) connectors](#) with the same External trigger capabilities that are found on the PNA-L and E836x models.

External triggering is primarily used to synchronize PNA measurements with an external event, such as an antenna

positioner, a stepper motor, or a material handler. In this scenario, rather than allowing the PNA to free run, another user or piece of equipment is determining when the PNA's sweep should start or when each data point should be acquired.

[See how to access the Trigger Dialog](#)

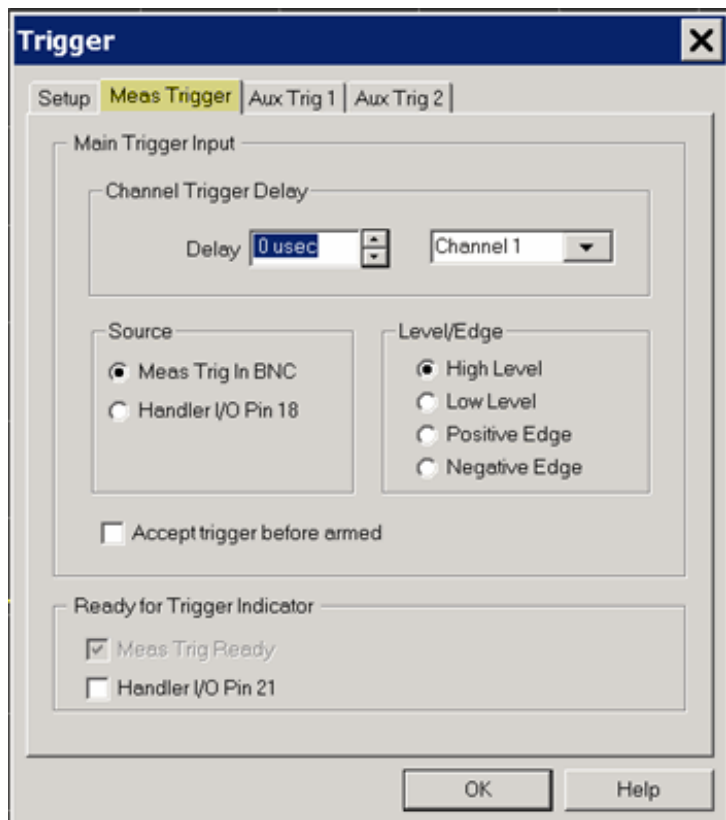

Dialog box as it appears on a PNA-X. Other models will vary.

Meas (External) Trigger dialog box help

[Learn how to calibrate while in External Trigger](#)

Main Trigger Input

Global Trigger Delay After an external trigger is received, the start of the sweep is held off for this specified amount of time plus any inherent latency.

When [Trigger Scope](#) = Channel, the delay value is applied to the specified channel.

When Trigger Scope = Global, the same delay value is applied to ALL channels.

Source The PNA accepts trigger input signals through one of the following rear-panel connectors:

- [Meas Trig IN BNC](#) (PNA-X ONLY)
- [I/O 1 \(TRIG IN\) BNC](#) (PNA-L and E836x ONLY)
- [Handler I/O Pin 18](#) (PNA-L and PNA-X ONLY)

- [Aux I/O - pin 19](#) (PNA-L and E836x ONLY)

Level / Edge

High Level The PNA is triggered when it is armed (ready for trigger) and the TTL signal at the select input is HIGH.

Low Level The PNA is triggered when it is armed (ready for trigger) and the TTL signal at the select input is LOW.

Positive Edge After the PNA arms, it will trigger on the next positive edge. If [Accept Trigger Before Armed](#) is set, PNA will trigger as soon as it arms if a positive edge was received since the last data was taken.

Negative Edge After the PNA arms, it will trigger on the next negative edge. If [Accept Trigger Before Armed](#) is set, PNA will trigger as soon as it arms if a negative edge was received since the last data was taken.


Note: Edge triggering is NOT available on the following PNA models: E835xA, E880xA, N338xA, E8362A, E8363A, E8364A.

Accept Trigger Before Armed When checked, as the PNA becomes armed (ready to be triggered), the PNA will immediately trigger if any triggers were received since the last taking of data. The PNA remembers only one trigger signal. All others are ignored.

When this checkbox is cleared, any trigger signal received before PNA is armed is ignored.

This feature is only available when positive or negative EDGE triggering is selected.

Configure this setting remotely using [CONTrol:SIGNal](#) (SCPI) or [ExternalTriggerConnectionBehavior](#) (COM).

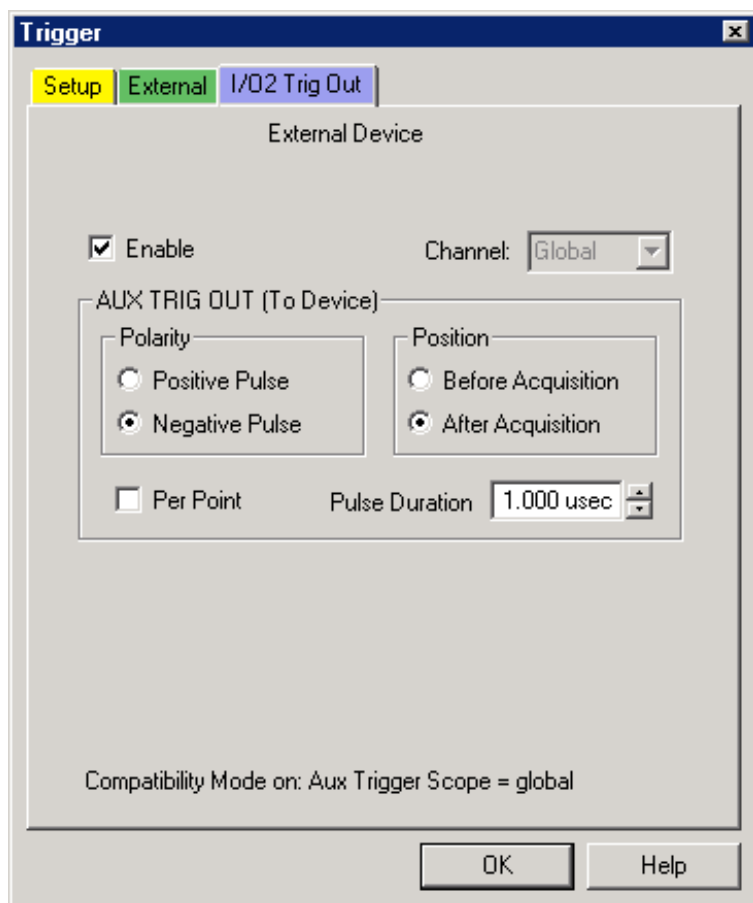

I/O2 Trig Out dialog box help

This TAB appears ONLY on E836X and PNA-L models with a Trig I/O rear-panel connector.

Enable Output When checked, the PNA sends synchronized trigger signals out the rear-panel [I/O \(TRIG OUT\)](#) BNC connector.

Channel

Global - Trigger output properties apply for all channels. This is the default setting and is consistent with pre-7.2 release behavior.

Channel Trigger output properties are channel dependent.

Note: This setting can ONLY be changed using the following Preference commands:

- SCPI [Trig:Pref:AIGLobal](#)
- COM - [AuxTriggerIsGlobal Property](#)

The current setting is annotated at the bottom of the dialog as:

Compatibility Mode on: Aux Trigger Scope = global

AUX (I/O) TRIG OUT (To Device)

Polarity The trigger pulse output from the PNA is either in the Positive or Negative direction.

Position The trigger pulse output is sent either BEFORE or AFTER data is acquired.

Per Point Check to cause a trigger output to be sent for each data point. Clear to send a trigger output for each sweep.

Pulse Duration Specifies the duration of the positive or negative output trigger pulse.

[Learn how to calibrate while in External Trigger](#)

The screenshot shows the 'Trigger' dialog box with the 'Aux Trig 1' tab selected. The 'External Device Control' section has 'Enable' checked and 'Channel' set to '1'. Under 'OUT (Trigger)', 'Polarity' is set to 'Negative Pulse' and 'Position' is set to 'After Acquisition'. The 'Per Point' checkbox is unchecked, and 'Pulse Duration' is set to '1.000 usec'. The 'Enable Ready-for-Trigger Handshake' checkbox is checked. Under 'IN (Ready)', 'Ready Low' is selected and 'Delay' is set to '0 psec'. At the bottom are 'OK', 'Cancel', and 'Apply' buttons.

Aux Trig 1 - Aux Trig 2 dialog box help

Auxiliary Triggering (also known as External Device Control) PNA-X models ONLY.

See how to use these connectors to [synchronize with External Sources](#).

Note: The Aux Trig 1 and Aux Trig 2 tabs are identical.

Enable Check to use the Aux1 or Aux2 connectors to output signals to an external device.

Channel All External Device Control settings on this dialog affect ONLY the selected channel.

OUT (Trigger)

Sets the properties of the signals sent out the rear panel [AUX TRIG OUT \(1&2\) connectors](#).

Polarity

Positive Pulse Outgoing pulse is positive.

Negative Pulse Outgoing pulse is negative.

Position

Before Acquisition Pulse is sent immediately **before** data acquisition.

After Acquisition Pulse is sent immediately **after** data acquisition.

Per Point Check to send a signal for each data point. This is similar to selecting [point sweep mode](#) on the main trigger dialog. Clear to send a signal once per sweep.

Pulse Duration Specifies the duration of the positive or negative output trigger pulse.

Ready for Trigger Handshake

When checked, the PNA waits indefinitely for the input line at the rear panel [AUX TRIG OUT \(1&2\) connectors](#) to change to the specified level before acquiring data. This signal indicates that the external device is ready for PNA data acquisition. If the signal arrives before the PNA is ready to acquire data, it is latched (remembered).

This signal is not a PNA trigger signal. The trigger signal, which may already have been received, is generated from any of the usual sources: Internal, Manual, or External.

IN (READY)

Ready High PNA responds to the leading edge of a pulse on the Aux1 or Aux2 In connector.


Ready Low PNA responds to the trailing edge of a pulse on the Aux1 or Aux2 In connector.

Delay Time that the PNA waits after receiving the Handshake input before data acquisition.

Note: Beginning with PNA Rev 6.0, Guided and Unguided Calibration CAN be performed in External Trigger mode. With this optional behavior, while Trigger Source is set to External, trigger signals must be sent for Calibration sweeps. This behavior does not apply to [FCA calibrations](#).

To revert to pre-6.0 behavior, (the PNA calibrates using Internal trigger signals while Trigger Source is set to External), send these [SCPI](#) or [COM](#) commands. You can send SCPI commands using the [GPIB console](#).


The following dialog box appears on the PNA screen while the PNA is waiting for an External trigger signal.

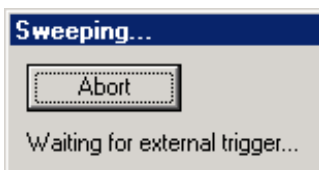

Click **Abort** to cancel the wait for a trigger signal.

Last Modified:

25-Jan-2007 MX New topic

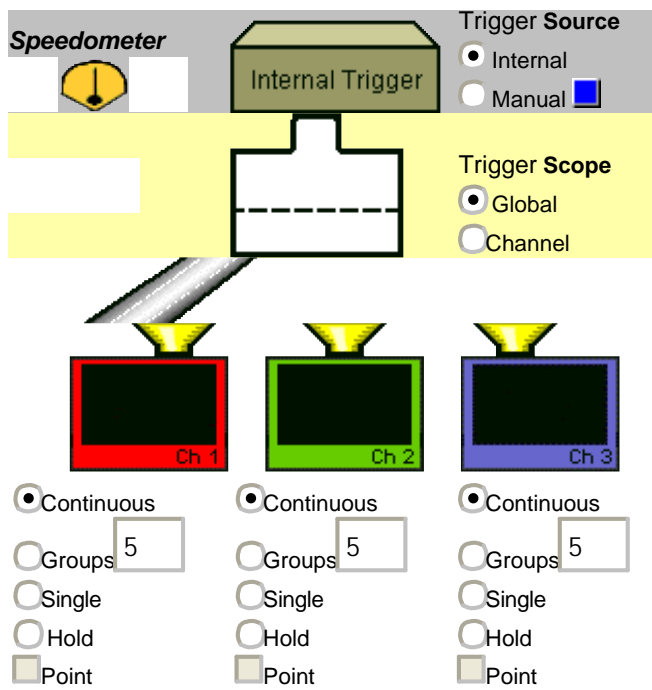

[About the trigger model](#)

Read [Text description](#) of triggering behaviors.

Data Format and Scale

A data format is the way the PNA presents measurement data graphically. Pick a data format appropriate to the information you want to learn about the test device.

- [How to set Format](#)
- [Rectangular \(Cartesian\) Display Formats](#)
- [Polar](#)
- [Smith Chart](#)
- [Scale, Reference Level and Position](#)
- [Magnitude Offset](#)

[See other 'Setup Measurements' topics](#)

How to set the Display Format

Using front-panel
HARDKEY [softkey] buttons

PNA Menu using a mouse

For [PNA-L](#) and [E836x](#) models

◀ **Programming Commands** ▶

1. Press **FORMAT**
2. then [Active Entry](#) keys


1. Click **Trace**
2. then **Format**

For [PNA-X](#) models

◀ **Programming Commands** ▶

1. Press **FORMAT**

1. Click **Response**
2. then **Format**

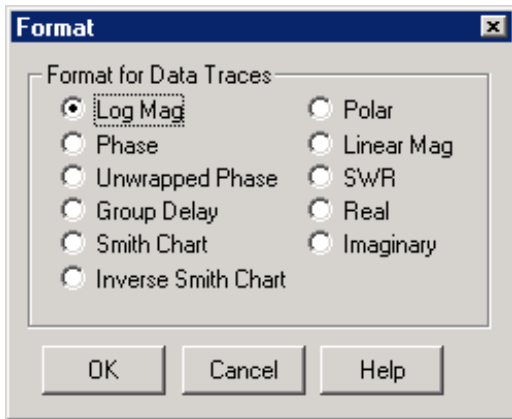

Format dialog box help

- [Log Mag](#)
- [Phase / Unwrapped Phase](#)
- [Group Delay](#)
- [Smith / Inverse Smith Chart](#)
- [Polar](#)
- [Linear Mag](#)
- [SWR](#)
- [Real](#)
- [Imaginary](#)

Rectangular Display Formats

Seven of the nine available data formats use a rectangular display to present measurement data. This display is also known as Cartesian, X/Y, or rectilinear. The rectangular display is especially useful for clearly displaying frequency response information of your test device.

- Stimulus data (frequency, power, or time) appears on the X-axis, scaled linearly
- Measured data appears on the Y-Axis.

Log Mag (Logarithmic Magnitude) Format

- Displays Magnitude (no phase)
- Y-axis: dB
- Typical measurements:
 - Return Loss

- Insertion Loss or Gain

Phase Format

- Displays Phase (no magnitude)
- Y-axis: Phase (degrees)
- The trace 'wraps' every 180 degrees for easier scaling.
- Typical Measurements:
 - [Deviation from Linear Phase](#)

Unwrapped Phase

- Same as Phase, but without 180 degree wrapping.

Group Delay Format

- Displays signal transmission (propagation) time through a device
- Y-axis: Time (seconds)
- Typical Measurements:
 - Group Delay

See also:

[Comparing the PNA Delay Functions.](#)

[Phase Measurement Accuracy](#)

Linear Magnitude Format

- Displays positive values only
- Y-axis: Unitless (**U**) for ratioed measurements
Watts (**W**) for unratioed measurements.
- Typical Measurements:
 - reflection and transmission coefficients (magnitude)
 - time domain transfer

SWR Format

- Displays reflection measurement data calculated from the formula $(1+p)/(1-p)$ where p is reflection coefficient.
- Valid only for reflection measurements.
- Y axis: Unitless

- Typical Measurements:
 - SWR

Real Format

- Displays only the real (resistive) portion of the measured complex data.
- Can show both positive and negative values.
- Y axis: Unitless
- Typical Measurements:
 - time domain
 - auxiliary input voltage signal for service purposes

Imaginary Format


- Displays only the imaginary (reactive) portion of the measured data.
- Y - axis: Unitless
- Typical Measurements:
 - impedance for designing matching network

Polar Format

Polar format is used to view the magnitude and **phase** of the reflection coefficient (Γ) from your S_{11} or S_{22} measurement.

You can use Markers to display the following:

- Linear magnitude (in units) or log magnitude (in dB)
- Phase (in degrees)

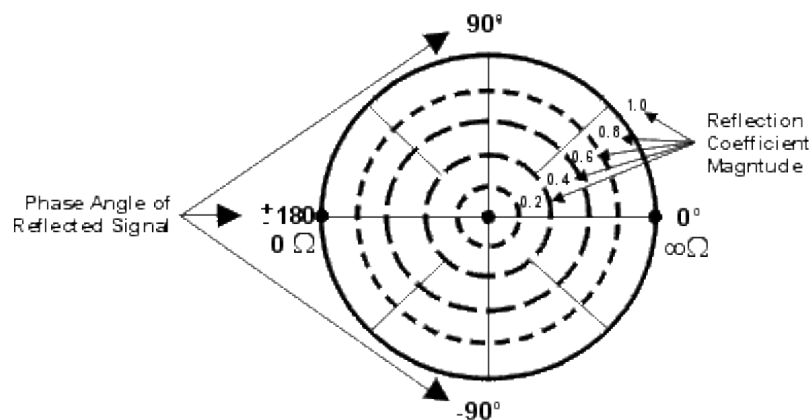

- The dashed circles represent reflection coefficient. The outermost circle represents a reflection coefficient (Γ) of 1, or total reflected signal. The center of the circle represents a reflection coefficient (Γ) of 0, or no reflected signal.
- The radial lines show the phase angle of reflected signal. The right-most position corresponds to zero phase angle, (that is, the reflected signal is at the same phase as the incident signal). Phase differences of 90° , $\pm 180^\circ$, and -90° correspond to the top, left-most, and bottom positions on the polar display, respectively.


Smith Chart Format

The Smith chart is a tool that maps the complex reflection coefficient (Γ) to the test device's impedance.

In a Smith chart, the rectilinear impedance plane is reshaped to form a circular grid, from which the series resistance and reactance can be read ($R + jX$).

You can use Markers to display the following:

- Resistance (in units of ohms)
- Reactance as an equivalent capacitance (in units of farads) or inductance (in units of henrys)

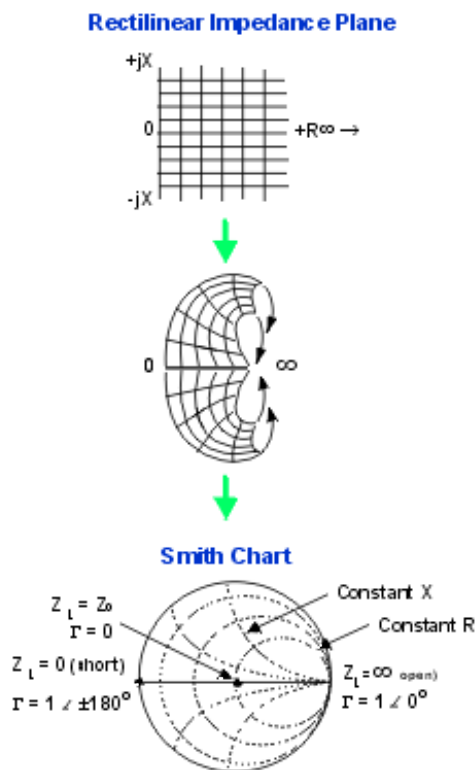


Inverse Smith Chart (also known as Admittance)

Same as standard Smith Chart , except:

- The plot graticule is reversed right-to-left.

- Admittance (in units of siemens) instead of resistance.

Interpreting the Smith Chart

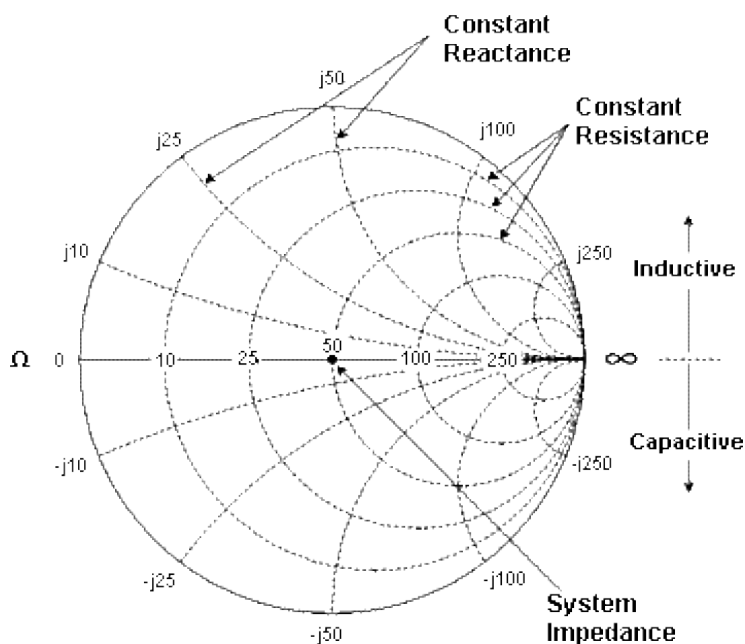

- Every point on the Smith Chart represents a complex impedance made up of a real resistance (r) and an imaginary reactance ($r+jX$)
- The horizontal axis (the solid line) is the real portion of the impedance - the resistance. The center of the horizontal axis always represents the system impedance. To the far right, the value is infinite ohms (open). To the far left, the value is zero ohms (short)
- The dashed circles that intersect the horizontal axis represent constant resistance.
- The dashed arcs that are tangent to the horizontal axis represent constant reactance.
- The upper half of the Smith chart is the area where the reactive component is positive and therefore inductive.
- The lower half is the area where the reactive component is negative and therefore capacitive.

Scale, Reference Level and Position

The Scale, Reference Level and Reference Position settings (along with format) determine how the data trace appears on the PNA screen.

How to set Scale, Reference Level, and Position

Using front-panel HARDKEY [softkey] buttons

PNA Menu using a mouse

For [PNA-L](#) and [E836x](#) models

◀ Programming Commands ▶

1. Press **SCALE**
2. then [Active Entry](#) keys


1. Click **Scale**
2. then **Scale**

For [PNA-X](#) models

◀ Programming Commands ▶

1. Press **SCALE**

1. Click **Response**
2. then **Scale**
3. then **Scale**

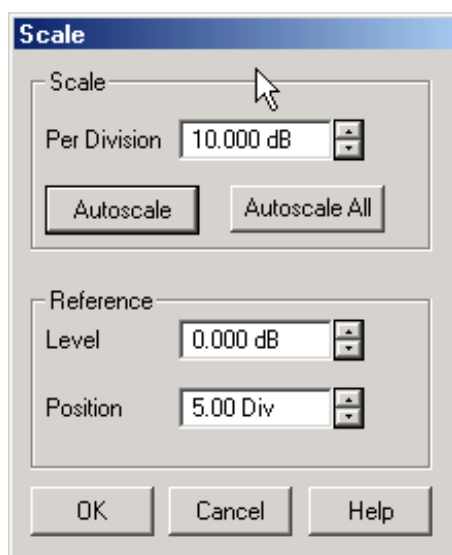

Scale dialog box help

Scale

Per Division Sets the value of the vertical divisions of a rectangular display format. In Polar and Smith Chart formats, scale sets the value of the outer circumference. Range: 0.001dB/div to 500 dB/div


Autoscale - Automatically sets value of the vertical divisions and reference value to fit the ACTIVE data trace within the grid area of the screen. The stimulus values and reference position are not affected.

The analyzer determines the smallest possible scale factor that will allow all the displayed data to fit onto 80 percent of the vertical grid.

The reference value is chosen to center the trace on the screen.

Autoscale All Automatically scales ALL data traces in the ACTIVE WINDOW to fit vertically within the grid area of the screen.

Reference

Level In rectangular formats, sets the value of the reference line, denoted by  on the PNA screen. Range: -500 dB to 500 dB.

In Polar and Smith chart formats, reference level is not applicable.

Position In rectangular formats, sets the position of the reference line. Zero is the bottom line of the screen and ten is the top line. Default position is five (middle).

In Polar and Smith chart formats, reference position is not applicable.

Magnitude Offset


Magnitude Offset allows you to offset the magnitude (not phase) data by a fixed and / or sloped value in dB. If the display format is Linear Magnitude or Real (unitless), the conversion from dB is performed and the correct amount of offset is implemented.

How to set Magnitude Offset

Using front-panel
HARDKEY [softkey] buttons

PNA Menu using a mouse


For [PNA-L](#) and [E836x](#) models

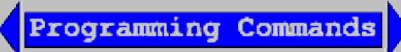

1. [Navigate using MENU/DIALOG](#)


1. Click **Scale**
2. then **Magnitude Offset**

For [PNA-X](#) models

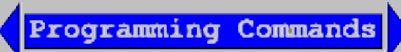

1. Press **SCALE**
2. then **[More]**
3. then **[Magnitude Offset]**

1. Click **Response**
2. then **Scale**
3. then **Magnitude Offset**

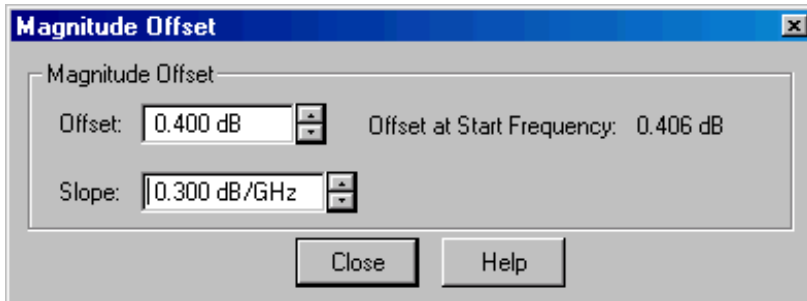

Magnitude Offset dialog box help

The Magnitude offset setting affects only the active trace.

Offset Offsets the entire data trace by the specified value.

Slope Offsets the data trace by a value that changes with frequency. The offset slope begins at 0 Hz.

For your convenience, the offset value at the start frequency is calculated and displayed.

See where this operation is performed in the [data processing chain](#).

Last modified:

9/12/06 Added link to programming commands

9/27/06 MX Added UI

Pre-configured Measurement Setups

- [Pre-configured setups for NEW measurements](#)
- [Pre-configured arrangements for EXISTING measurements](#)

Before reading this topic, it is important to understand [Traces, Channels, and Windows](#) in the PNA.


[See other 'Setup Measurements' topics](#)

Pre-configured Setups for NEW Measurements

Each of the following setups **creates new traces**. Existing traces and their settings will be lost, unless you first save them.



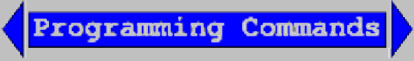
How to select a pre-configured measurement setup	
Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	No programming commands
1. Press MEASURE SETUPS	1. Click Window
2. then Active Entry keys	2. then Meas Setups
For PNA-X models	No programming commands
1. Press RESPONSE	1. Click Response
2. then [Display]	2. then Display
3. then [Meas Setups]	3. then Meas Setups

The following are the four pre-configured measurement setups:

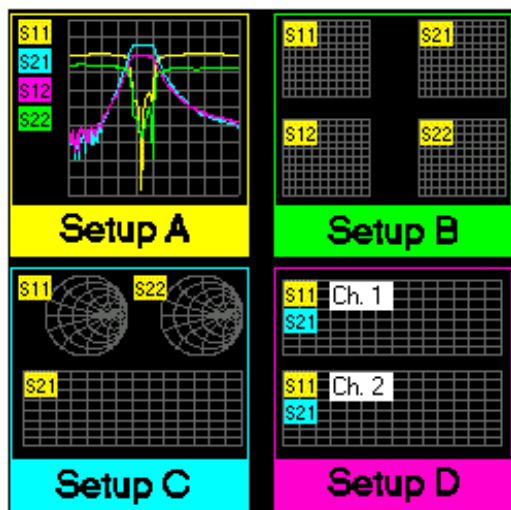


Arranging Existing Measurements

The following arrangements place EXISTING measurements into pre-configured Window arrangements using a sort algorithm.

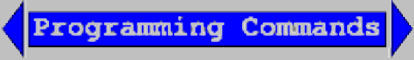How to select an Existing measurement arrangement	
Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	
1. Press  2. then Active Entry keys	1. Click Window 2. then Arrange
For PNA-X models	
1. Press DISPLAY	1. Click Response 2. then Display


Overlay Arrangement

This configuration places all existing traces in a single window, all overlaid on each other.

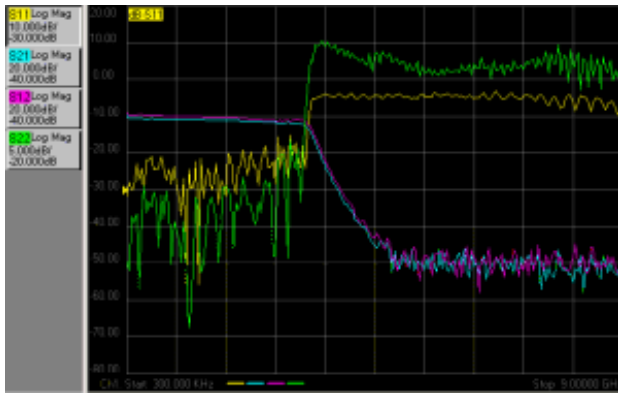


Stack 2 Arrangement

This configuration places all existing traces in two "stacked" windows.

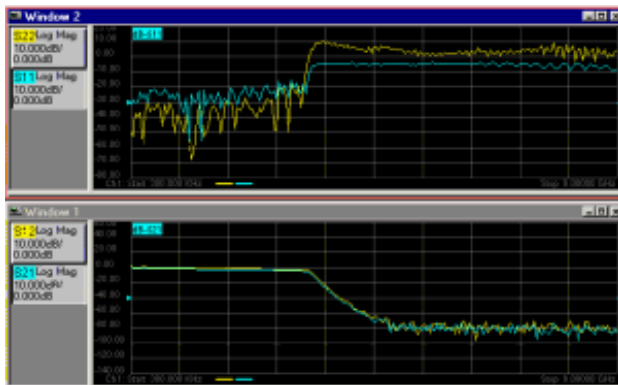


Split 3 Arrangement

This configuration places all existing traces in three windows, two on top and one below.

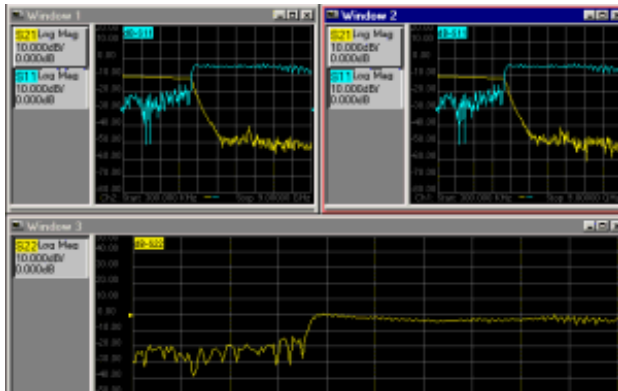

Quad 4 Arrangement

This configuration places all existing traces in four windows, one window in each screen quadrant.

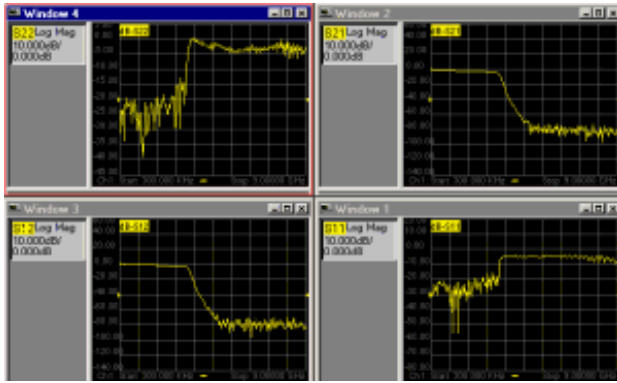

Sort Algorithm

The sort algorithm for the Arrange Windows feature is designed to:

- Divide traces among windows based on their properties
- Group traces with common properties

The algorithm sorting is based on the following trace properties, in order of priority:

1. Format: circular (polar or Smith) versus rectilinear (log mag, lin mag, group delay, etc.)
2. Channel number
3. Transmission versus reflection

Note: The PNA [traces per window limitation](#) overrides this algorithm. An error occurs if the arrange selection cannot be completed with the current number of traces on the screen.



Last modified:

9/27/06 MX Added UI

9/12/06 Added link to programming commands


Path Configurator

Allows you to configure hardware components that are available with selected [PNA-X options](#).

How to access Path Configurator	
Using HARDKEY [softkey] buttons:	PNA Menu using a mouse:
For PNA-L and E836x models (Not Available)	
1. Not Available	1. Not Available
For PNA-X models	 Programming Commands 
1. Press TRACE/CHAN	1. Click Trace/Chan
2. then [Channel]	2. then Channel
3. then [More]	3. then Hardware Setup
4. then [Hardware Setup]	4. then Path Config...
5. then [Path Config...]	

The following image shows configuration with PNA-X Opt 423 (4-port, internal 2nd source, combiner, and mechanical switches). Your PNA-X may not include these options.

[See other RF path configuration diagrams.](#)

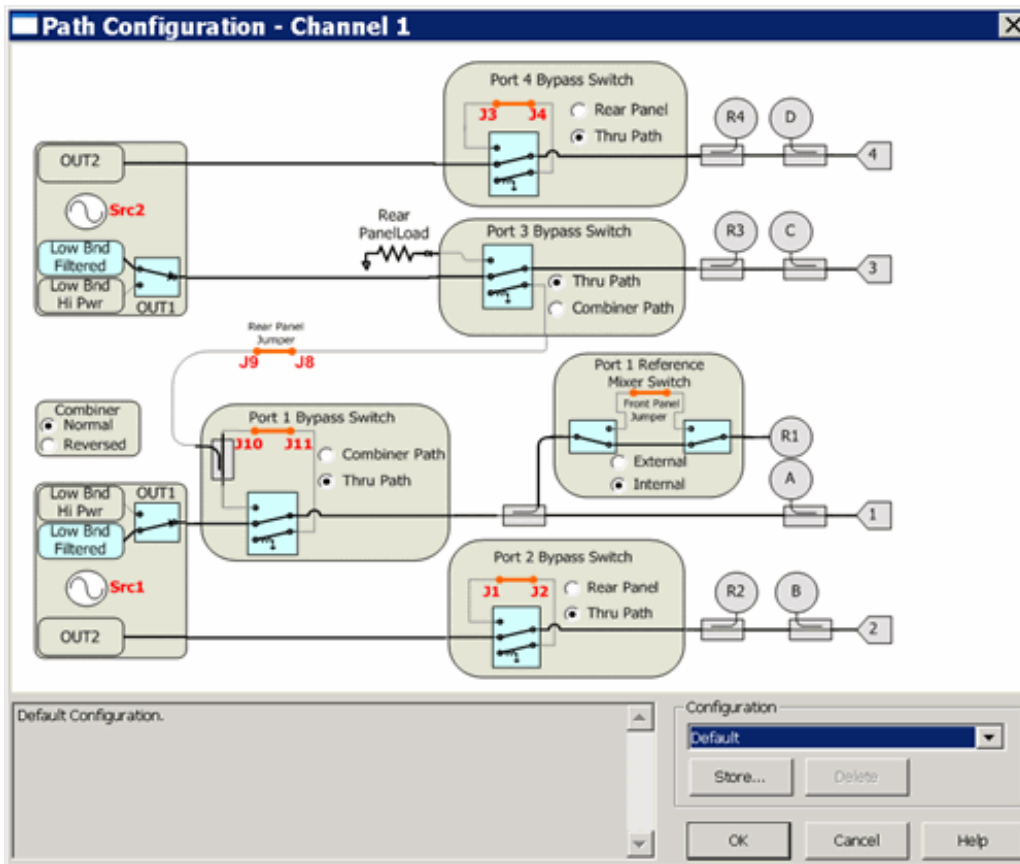

Path Configuration dialog box help

Different paths can be configured for each channel.

Configuration

Select, store, and delete factory configurations or user-defined configurations. Configurations are stored on the PNA hard drive.

Any configuration can be saved, and later recalled, from this dialog. Click **Store**, type a configuration name, then click **OK**.

Text area Displays text describing the physical connections required to complete the configuration. The text for factory configurations can NOT be edited. Text is saved as part of the configuration.

Cancel Closes the dialog and returns the configuration settings to the state they were in when the dialog was opened. Cancel does NOT undo **Store** and **Delete** actions that were performed while the dialog was open.

Notes

- Click or touch anywhere within a box to actually cycle through the available settings.
- Some switch settings alter graphics in areas other than where the switch is thrown.
- If you don't hear switches clicking, this could be why:
 - Electronic switches are **orange** on the path configuration dialog. These switches do not make

noise when being thrown. Mechanical switches are **blue**.

- The channel is in hold and not sweeping.
- PNA switch wear prevention logic does NOT allow mechanical switching with continuous triggering. To override the logic use group or single triggering. [Learn more.](#)
- Orange lines are jumpers on the front or rear panel.
- Notice on the [block diagrams](#):
 - Extra filtering is available to optimize harmonics below 3.2 GHz on OUT1 of both sources. These filters are not used in the Hi Pwr setting. [See specifications.](#)
 - Each source optionally has [pulse modulation](#) capability.
- [Copy channel](#) feature copies path configuration settings.
- Saved and recalled as part of an [instrument state](#).

Last modified:

January 5, 2007 MX- New topic

Customize the PNA Screen

You can customize your PNA screen by showing or hiding the following display elements. All of these selections are made from the PNA **View** menu.

- [Status Bar](#)
- [Toolbars](#)
- [Tables](#)
- [Measurement Display](#)
- [Data and Memory Trace](#)
- [Title Bars](#)
- [Minimize Application](#)

Learn about using [pre-configured measurements and windows arrangements](#)

Learn about [Traces, Channels, and Windows on the PNA](#)

[See other 'Setup Measurements' topics](#)

Status Bar







When enabled, the status bar is displayed along the bottom of the PNA screen. The primary status bar shows the following:

- [Channel Trigger State](#) (Cont., Groups, Single, Hold)
- Active channel
- Measurement parameter for the active trace
- [Trace Math](#)
- [Error correction](#) for the active trace
- [Averaging Factor](#) for the active channel
- [Smoothing](#) Percentage
- [Transform](#) (On)
- [Gating](#) (On)
- IF Gating Enabled for [Pulsed App](#): (G)
- Manual IF Filtering for Pulsed App: (F)

- Delay if invoked using [Phase Offset](#), [Electrical Delay](#), or [Port Extensions](#).
- Loss if invoked using [Magnitude Offset](#) or [Port Extensions](#).
- GPIB status: Local (LCL), Remote Talker Listener (RMT), or System Controller (CTL).
- Error Status: (LVL, LCK, etc)

Note: A second level status bar appears when using [External Test Set Control](#) or [Interface control](#).

The status bar state (ON or OFF) will not change when the PNA is Preset.

How to display the Status Bar	
Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	 Programming Commands 
1. Navigate using MENU/DIALOG	1. Click View 2. then Status Bar
For PNA-X models	 Programming Commands 
1. Press DISPLAY 2. then [More] 3. then [Status Bar]	1. Click Response 2. then Display 3. then Status Bar

Toolbars

 
You can display up to five different toolbars to allow you to easily set up and modify measurements.

How to display toolbars

Using front-panel HARDKEY [softkey] buttons

PNA Menu using a mouse


For [PNA-L](#) and [E836x](#) models



1. [Navigate using MENU/DIALOG](#)

1. Click **View**
2. then **Toolbar**
3. then the toolbar to turn ON/OFF

 For [PNA-X](#) models



1. Press **DISPLAY**
2. then **[More]**
3. then **[Toolbars]**

1. Click **Response**
2. then **Display**
3. then **More**
4. then **Toolbars**

List of toolbars:

- [Active Entry](#)
- [Markers](#)
- [Measurement](#)
- [Sweep Control](#)
- [Stimulus](#)
- [Time Domain](#)
- [Port Extension](#)
- [All Off](#)

Note: There is also a Cal Set toolbar available for [Monitoring Error Terms](#).

 
Active Entry Toolbar (PNA-L and E836x Only)



The active entry toolbar is displayed at the top of the screen, below the menu bar. It allows you to make selections from the active function using the mouse or by pressing the front panel key with the corresponding color.

Learn more about using the [front panel interface](#)

Entry Toolbar (PNA-X Only)



When used with softkeys, this area allows numeric values to be entered for PNA-X settings. From the keyboard, enter G for Giga, M for Mega or milli, K for kilo, and so forth.

Markers Toolbar



The markers toolbar allows you to set up and modify markers. It shows:

- Marker number
- Stimulation value
- Marker functions:
 - Delta
 - Start/Stop
 - Center/Span

Tip: To use the [Front Panel Knob](#) to change marker position, first click the **Stimulus** field of the marker toolbar. Then turn the knob.

[Learn more about Markers](#)

Measurement Toolbar



The measurement toolbar allows you to **create a new trace** for a desired S-parameter measurement in a current window or new window.

Sweep Control Toolbar



In left to right order, the buttons on this toolbar set the active channel to:

- **Hold** mode
- **Single** sweep, then Hold mode
- **Continuous** sweep

Learn more about [Channel Trigger State](#).

 
Stimulus Toolbar



The stimulus toolbar allows you to view, set up, and modify the sweep stimulus. It shows the:

- **Start** value
 - **Stop** value
 - Number of **points**
-

Time Domain



The Time Domain toolbar allows you to do the following:

- Turn Transform and Gating ON / OFF
- Change the Start / Stop times for both Transform and Gating
- **More...** launches the [Time Domain Transform](#) dialog box
- **X** Closes the toolbar

The front panel [Tab](#) key steps through all of the settings on all of the toolbars on the display. If Tab does not work, press one of the Active Toolbar (color) keys.

Port Extension



The Port Extension toolbar allows you to set Port Extensions while viewing the measurement trace. Learn more about [Port Extensions](#).

All Off

This allows you to **hide all toolbars** with a single selection.

Tables

 
Tables are displayed at the bottom of the selected window. Only one table may be displayed at a time for a window.

How to display tables

Using front-panel HARDKEY [softkey] buttons

PNA Menu using a mouse


For [PNA-L](#) and [E836x](#) models



1. [Navigate using MENU/DIALOG](#)

1. Click **View**
2. then **Tables**
3. then the table to turn ON/OFF

 For [PNA-X](#) models



1. Press **DISPLAY**
2. then **[More]**
3. then **[Tables]**

1. Click **Response**
2. then **Display**
3. then **More**
4. then **Tables**

List of tables:

- [Marker Table](#)
- [Limit Line Table](#)
- [Segment Table](#)

Marker Table

You can display a table of marker settings. These settings include the:

- Marker number
- Marker reference (for delta measurements)
- Frequency
- Time and Distance (for Time Domain measurements)
- Response

Learn more about [Markers](#)

Limit Line Table

You can display, set up, and modify a table of limit test settings. These include:

- Type (MIN, MAX, or OFF)
- Beginning and ending stimulus values
- Beginning and ending response values

Learn more about [Limit Lines](#)



Segment Sweep Table

You can display, set up, and modify a table of segment sweep settings. These include:

- State (On/Off)
- Start and Stop frequencies
- Number of Points
- IF Bandwidth (if independent levels)
- Power Level (if independent levels)
- Sweep Time (if independent levels)

Learn more about [Segment sweep](#)

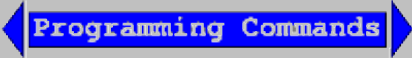

Measurement Display Items

How to show and hide Measurement Display items	
Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click View 2. then Meas Display 3. then the display item to show/hide
For PNA-X models	
1. Press DISPLAY 2. then [Display Items]	1. Click Response 2. then Display 3. then Display Items

Measurement Display items:

- [Trace Status](#)
- [Frequency Stimulus](#)
- [Marker Readout](#)
- [Limit Test Results](#)
- [Limit Lines](#)
- [Title](#)

Trace Status

	<p>PNA-L and E836x models</p> <p>Trace status buttons are displayed to the left of each window.</p> <p>The depressed button indicates the Active Trace.</p> <p>Click to select a trace.</p>
	<p>PNA-X models:</p> <p>Trace status is annotated at the top of each window.</p> <p>The highlighted trace number indicates the Active Trace.</p> <p>Click to select a trace.</p>

Trace Status shows the following:

- Trace number (Tr x). This is the trace number of the channel; NOT the window trace number which is used in many programming commands.
- Measurement parameter. This can be replaced with a custom [Trace Title](#).
- Format
- Scaling factor
- Reference level

[How to show/hide Trace Status](#)

Frequency/Stimulus



Frequency/stimulus information is displayed at the bottom of each window on the screen. It shows:

- Channel number

- Start value
- Stop value

[How to show/hide Frequency/Stimulus information](#)

Marker / Bandwidth / Trace Statistics Readout

[How to show/hide Readout settings](#)

The [Marker](#) / [Bandwidth](#) / [Trace Statistics](#) Readout area, in the upper-right corner of each window, can contain up to **20** total readout lines. However, all readout lines may not be visible depending on the window size and whether [Large Marker Readout](#) is enabled.

> 1:	13.255000 GHz	-15.928 dB
	Peak to Peak:	65.1137 dB
	Mean:	-2.07125 dB
	Std. Dev.:	8.33126 dB

The image shows 3 readout lines.

- Markers use one readout line per marker.
- Marker Bandwidth and Trace Statistics use three readout lines per trace.

Marker Readout

- Checked - Shows readout information.
- Cleared - Shows **no** readout information.

One Readout Per Trace

- Checked - Shows the readout of only the **active marker** for each trace.
- Cleared - Shows up to 20 total readouts lines.

Large Marker Readout

This setting also controls Trace Statistics readout.

- Checked - Shows the marker readout in **large font size for easy reading**.
- Cleared - Shows the marker readout in **normal font size**.

Learn more about [Markers](#)

Limit Line Test Results

Limit line test results, **Pass** or **Fail**, are displayed on the right side of the designated window.

Limit Lines

Limit lines are displayed for the active trace in the designated window. Their position depends on:


- Limit levels
- Format
- Scaling
- Reference level

Learn more about [Limit Lines](#)

[How to show/hide Limit Lines and Results](#)

Title

You can create and display a title for each **window** using the keyboard. You can also use the following Title Entry dialog box.

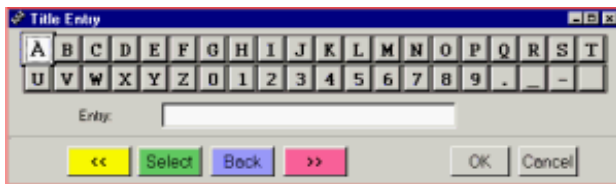

The title is displayed in the upper-left corner of the selected window.

To clear a title, delete the title from the dialog box entry area and click OK.

See also [Trace Titles](#)

[How to show/hide a Title](#)

Data Trace and Memory Trace

You can view or hide the active data or memory trace.

- Make a trace active by clicking the trace status button
- To view a memory trace you must first store a trace in memory. Click **Trace**, then **Math / Memory**, then **Data => Memory**.

Learn more about [Math operations](#)


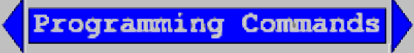
Title Bars



The Title bar shows the window number and Minimize / Maximize icons.

- Checked - Title bars for all PNA windows are shown.
- Cleared - Title bars for all PNA windows are hidden. This allows more room to display measurement results.

How to show/hide the Title Bars

Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click View 2. then Title Bars
For PNA-X models	
1. Press DISPLAY 2. then [More] 3. then [Title Bars]	1. Click Response 2. then Display 3. then More 4. then Title Bars

Minimize Application

The Network Analyzer application can be minimized to show the desktop and Windows taskbar.


How to minimize the Network Analyzer Application

Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click View 2. then Title Bars
For PNA-X models	
1. Press DISPLAY	1. Click File

2. then **[Windows]**
3. then **[More]**
4. then **[Minimize]**

2. then **Minimize Application**

To restore the PNA application:

- Click the PNA application on the Windows taskbar
- Or press  on the front panel ([PNA-L](#) and [E836x](#) only)

Last modified:

- | | |
|-------------|------------------------------------|
| 27-Aug-2007 | Edited readout section |
| 9/12/06 | Added link to programming commands |
| 9/27/06 | MX Added UI |

Copy Channels

You can copy the channel settings from an existing channel to a new or another existing channel.

- [Why Copy Channels](#)
- [How to Copy Channels](#)
- [List of Channel Settings](#)



[Other Setup Measurements Topics](#)

Why Copy Channels

Copy channel settings if you need to create several channels that have slightly different settings.
For example, if you have an amplifier that you want to characterize over a frequency span with several different input power levels.
Follow these steps:


1. Create one measurement with your optimized channel settings.
2. Copy that channel to new channels.
3. Change the power level on the new channels.

The alternative to using Copy Channels is to create new default measurements on new channels. Then change every channel setting to your new requirement. This is very time consuming and thus shows the benefit of the Copy Channels feature.

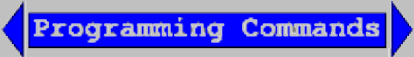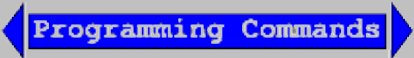How to Copy Channels	
Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Channel 2. then Copy Channel
For PNA-X models	
1. Press TRACE/CHAN 2. then [Channel]	1. Click Trace/Chan 2. then Channel

3. then **[More]**
4. then **[Copy Channel]**

3. then **Copy Channel**

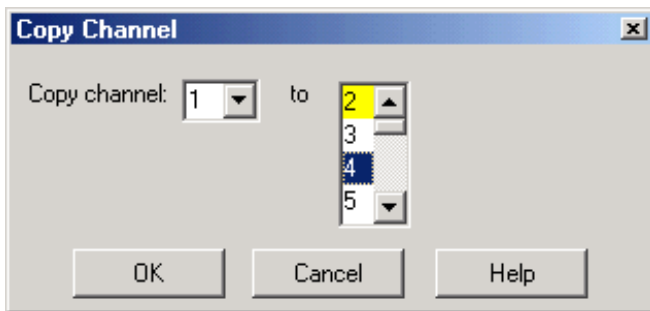

Copy Channel dialog box help

Copies an existing channel's settings to another channel.

Copy channel: Select a channel to copy.

to: Scroll to select a channel to copy settings to. Channel numbers that are currently being used are highlighted. They can be selected and overwritten.

Notes:

- You can copy channel settings to **ONLY** one new or existing channel. Repeat this operation to copy to more than one channel.
- The new channel is **ALWAYS** copied to the Active window. If you want the new channel in its own window, first create a new measurement in a new window. Then make sure it is the Active window before you copy the channel into it.
- The measurement in the new channel becomes the active measurement.
- Only the channel settings are copied. The measurement trace is **NOT** copied to the new channel.
 - If measurements already exist on a channel being copied to, the measurements on that channel will not change, but they will assume the new channel settings.
 - If a **NEW** channel is copied **TO**, an S11 measurement is created in order to view the channel settings.

For example:

1. **Existing** channel 1: S21 measurement
2. **Copy** channel 1 to NEW channel 2
3. **Result:** channel 2: S11 measurement with channel 1 copied settings. Both measurements are in the same window. The S11 measurement is the active measurement.

For more information see [Traces, Channels, and Windows on the PNA](#)

List of Channel Settings

- [Frequency Span](#)
- [Power](#)
- [Cal Set usage](#)
- [Source Power Cal data](#)
- [IF Bandwidth](#)
- [Number of Points](#)
- [Sweep Settings](#)
- [Average](#)
- [Trigger \(some settings\)](#)

Last modified:

9/12/06 Added link to programming commands

9/27/06 MX Added UI

ADC Measurements

The PNA is equipped with one or more ADC (Analog to Digital Converter) inputs. These ADC inputs can be used as measurement receivers and display measurements on the PNA screen.

- Analog Inputs can be used for measuring from -10V to +10V. These inputs can be considered auxiliary receivers and used in a similar way as S-Parameter receivers.
- Analog Output Sense inputs (AOS1 and AOS2) can be used to measure the corresponding DAC outputs.
- Analog Ground input (AG1) can be used to measure the instruments analog ground (PNA-X only).

Supported Hardware

PNA-X: [Power I/O connector](#)

Other models: [Aux I/O connector](#)

How to create ADC receiver measurements

For [PNA-X](#) models


◀ Programming Commands ▶

The [New](#) and [Edit](#) Measurement commands are extended to include ADC receiver measurements.

1. Press **TRACES**

2. then **[New Trace]**
1. Click **Trace/Chan**

2. then **New Trace**

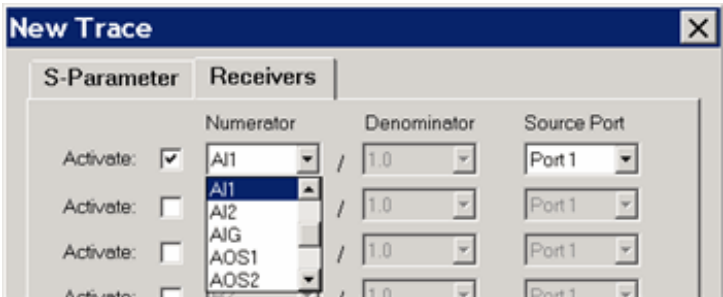

New Trace (ADC) dialog box help

Note: Sweep speed slows dramatically when measuring more than two ADC receivers.

On the [New Trace dialog](#), click the **Receivers** tab.

Activate - check any empty line to create a trace.

 
Numerator - select from the following:

- **AI1** - Input 1 (PNA-X only)
- **AI2** - Input 2
- **AOS1, AOS2** - Output sense 1 or 2
- **AIG** - Analog ground (PNA-X only)

Denominator - NOT available (ONLY unratioed measurements)

Source Port - The ADC receiver is measured when the specified source port is sweeping.

ADC receiver traces are labeled as shown in the following images:



- The ADC1 input is being measured, with 2 as the source port.
- The Y axis is U (unitless).
- The default trace [format](#) is Real (linear).

ADC Traces and other useful PNA functions

Although most PNA functions work with ADC traces, the following may be especially useful.

- [Equation Editor](#) can be used with the trace data. Although the PNA-X ADC is measuring voltage (-10V to +10V range in 14 bits), by using a trace formula, this voltage can represent other types of measurement parameters (such as current, temperature, or a scaled voltage). [See PAE example.](#)
- [Trace averaging](#) and [Trace Smoothing](#) can be used to remove trace noise.
- [Dwell time](#) can be used to allow for settling.

PNA Functions Not Supported

- Calibration for ADC receivers is NOT supported.
- Use with FCA is NOT supported.

- While the PNA is sweeping an ADC measurement, do NOT use the rear-panel [Analog I/O SCPI commands](#).


Last Modified:

19-Apr-2007 MX New topic

Setting System Impedance

The system impedance can be changed for measuring devices with an impedance other than 50 ohms, such as waveguide devices. The PNA mathematically transforms and displays the measurement data as though the PNA ports were the specified impedance value. Physically, the test ports are always about 50 ohms.

How to change the System Impedance	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	◀ Programming Commands ▶
1. Navigate using MENU/DIALOG	1. Click System 2. then Configure 3. then System Z0
For PNA-X models	◀ Programming Commands ▶
1. Press SYSTEM 2. then [Configure] 3. then [System Z0]	1. Click Utility 2. then System 3. then Configure 4. then System Z0

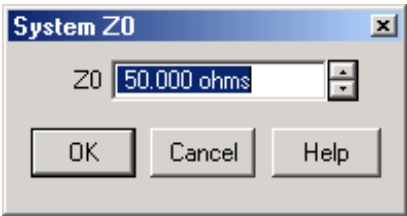

System Z0 dialog box help

Allows you to change the system impedance (default setting is 50 ohms).

Z0 Displays the current system impedance.

For 75 ohm devices:

1. Change the system Z0 to 75 ohms.
2. Connect minimum loss pads (75 ohm impedance) between the analyzer and the DUT to minimize the physical mismatch.
3. Perform a calibration with 75 ohm calibration standards.

For waveguide devices:

1. Change the system Z0 to 1 ohm.
2. Perform a calibration with the appropriate waveguide standards.

Last modified:


9/27/06 MX Added UI

9/12/06 Added link to programming commands

Dynamic Range

Dynamic range is the difference between the analyzer receiver's maximum input power and the minimum measurable power (noise floor). For a measurement to be valid, input signals must be within these boundaries.

Increasing dynamic range is important if you need to measure very large variations in signal amplitude, such as filter bandpass and rejection. The dynamic range is shown below for an example measurement.

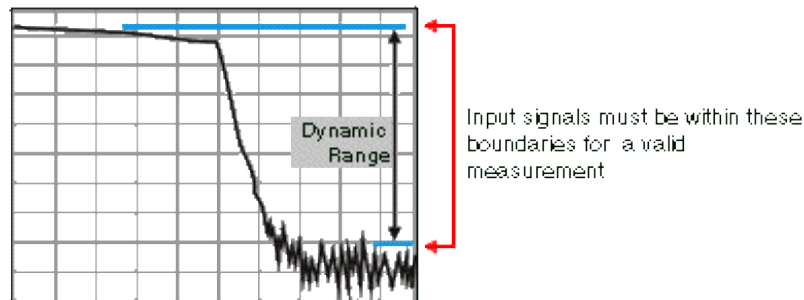

To help reduce **measurement uncertainty**, the analyzer dynamic range should be greater than the response that the DUT exhibits. For example, measurement accuracy is increased when the DUT response is at least 10 dB above the noise floor. The following methods can help you increase the dynamic range.

- [Increase the Device Input Power](#)
- [Reduce the Receiver Noise Floor](#)
- [Use the Front-Panel Jumpers \(if your PNA has a configurable test set\)](#)

[Other topics about Optimizing Measurements](#)

Increase Device Input Power

Increase the DUT input power so that the analyzer can more accurately detect and measure the DUT output power. However, use caution - too much power can damage the analyzer receiver or cause compression distortion.

Caution! Receiver input damage level: +15 dBm.

[See how to increase input power to the device](#)

Tip: You can further increase dynamic range by using an external booster amplifier to increase the input power to the DUT. See [High Power Amplifier Measurements](#).

Reduce the Receiver Noise Floor

You can use the following techniques to lower the **noise floor** and increase the analyzer's **dynamic range**.

- Reduce crosstalk between the PNA receivers when measuring signals close to the noise floor. See [Receiver Crosstalk](#).)
- Use **Sweep Averaging** - learn more about [Sweep Average](#)

- Reduce the **IF Bandwidth** - learn more about [IF Bandwidth](#).
- In [Segment sweep](#) mode each segment can have its own IF bandwidth. For example, when measuring a filter:
 - In the passband, the IF bandwidth can be set wider for a fast sweep rate, as long as high-level trace noise is kept sufficiently small.
 - In the reject band, where noise floor contributes significantly to measurement error, the IF bandwidth can be set low enough to achieve the desired reduction in average noise level.

Use the Front-Panel Jumpers (if your PNA has the configurable test set)

If your PNA has FOUR front-panel jumpers, you can bypass the test-port couplers and apply signals directly into the receivers. See [Dynamic Range - 4 Jumpers](#). Using this configuration, you can achieve up to 143 dB dynamic range with **Response Calibration** using segment sweep mode.

If your PNA has MORE THAN FOUR front-panel jumpers ([Configurable Test Set](#)), you can use the front-panel jumpers to reverse a test-port coupler. See [Dynamic Range - Configurable Test Set Option](#). Using this configuration, you can achieve up to 143 dB dynamic range with **Full 2-port Calibration** using segment sweep mode.

Note: Bypassing a port's directional coupler increases the port mismatch by approximately 15 dB (the coupling factor of the directional coupler).


- For information about upgrading your PNA to include front-panel jumpers, see [PNA Options](#).
- Discover the measurement possibilities using [front-panel jumpers](#).

Improving Dynamic Range with FOUR front-panel jumpers

To improve dynamic range you can bypass the test-port coupler and apply the signal directly into the receiver. As shown in the following graphic, the signal is applied to the front-panel connector for the B In or Rcvr B In front-panel jumper rather than Port 2. Using this configuration, you can achieve up to 143 dB dynamic range with response calibration using segment sweep mode.

Explore the graphic with your mouse.

Note: Your PNA may not be equipped with front-panel jumpers or all of the components shown in this block diagram.

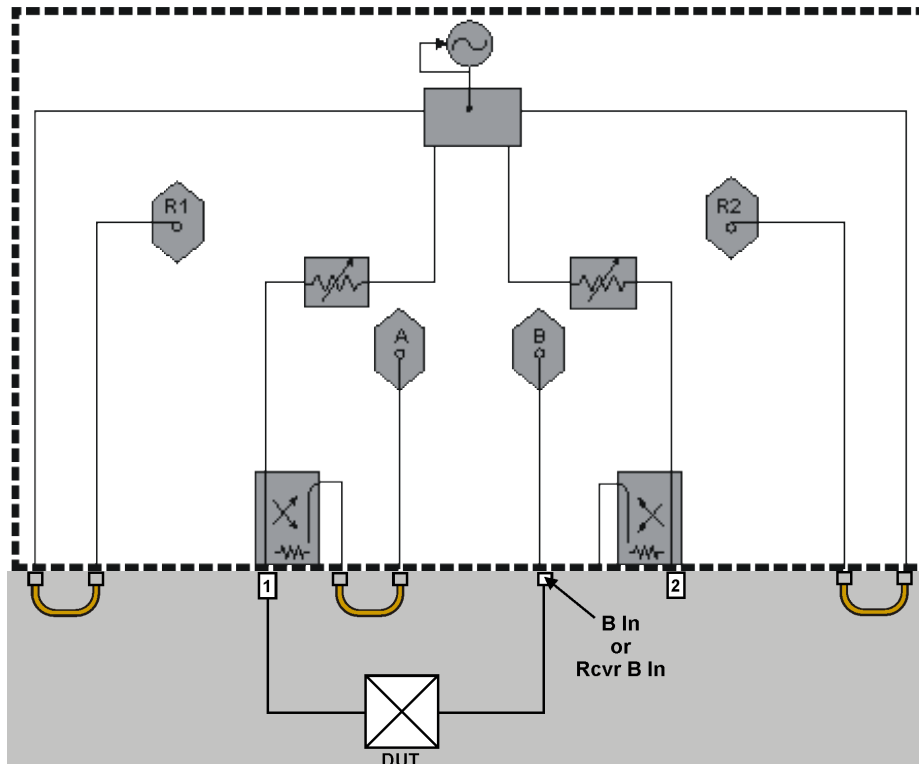


Improving Dynamic Range with Configurable Test Set Option

To improve dynamic range you can reverse the signal path in the test-port coupler and bypass the loss typically associated with the coupled arm. As shown in the following graphic, the signal is applied to Port 2. The signal bypasses the coupled arm via the jumper cable connected to the Coupler Thru (or Coupler In) and the Receiver B In (or B In) ports. Using this configuration, you can increase the forward measurement dynamic range up to 143 dB with full 2-port calibration using segment sweep mode. When making full 2-port error corrected measurements, the reverse measurement is degraded by 15 dB, with up to 113 dB of dynamic range available.

Explore the graphic with your mouse.

Note: Your analyzer's block diagram may contain different components than shown below.

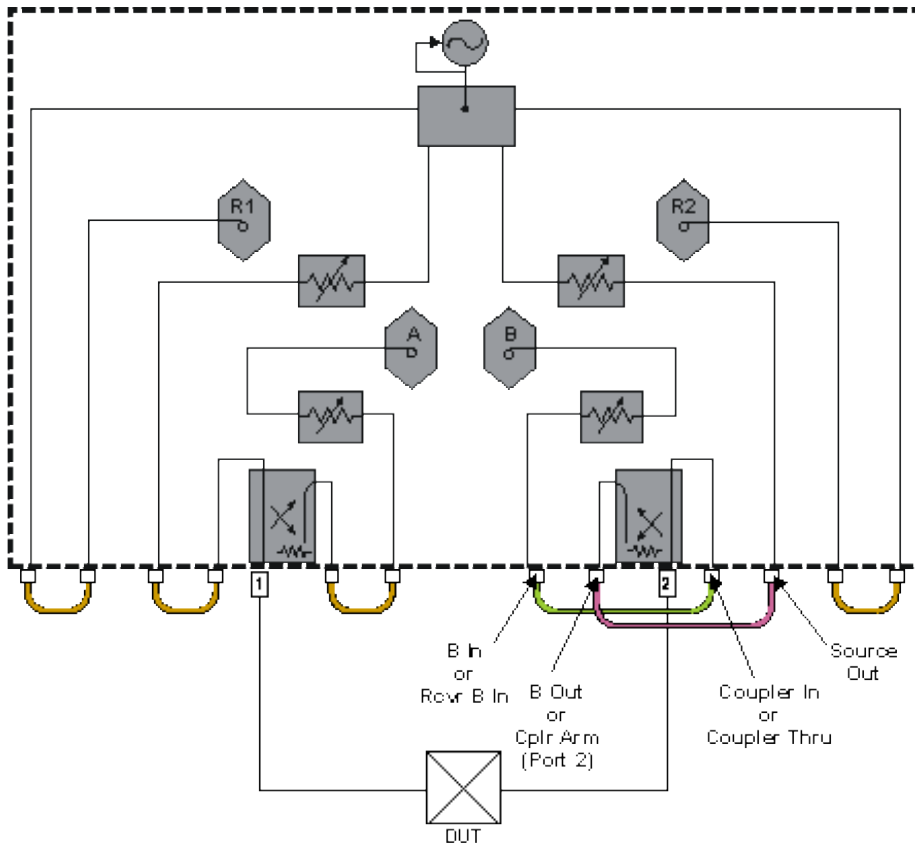

Number of Points



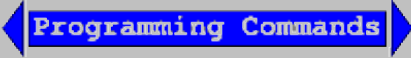
A data point is a sample of data representing a measurement at a single stimulus value. You can specify the number of data points that the PNA measures across a sweep. (A "sweep" is a series of consecutive data point measurements, taken over a sequence of stimulus values.)


The PNA sweep time changes proportionally with the number of points. However, the overall measurement cycle time does not. See [Technical Specifications](#) for more information on how the number of points, and other settings, affect the sweep time.

Note: You may experience a significant decrease in computer processing speed with increased number of points, number of traces, and calibration error terms (full 2-port or 3-port). If this becomes a problem, you can increase the amount of RAM with PNA [Option 022](#).

How to change the number of data points

Select a number or click Custom to invoke a [dialog box](#)

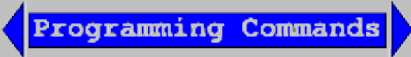Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
<div>1. Press SWEEP SETUP</div> <div>2. then </div>	<div>1. Click Sweep</div> <div>2. then Number of Points</div>
For PNA-X models	
<div>1. Press SWEEP</div> <div>2. then [Number of Points]</div>	<div>1. Click Stimulus</div> <div>2. then Sweep</div> <div>3. then Number of Points</div>

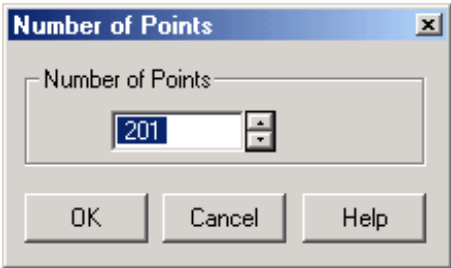

Number of Points dialog box help

Specifies the number of data points that the analyzer gathers during a measurement sweep. You can specify any number from 2 to 20,001. The default value is 201.

Tips:

- To achieve the greatest trace resolution, use the maximum number of data points.
- For faster throughput use the smallest number of data points that will give you acceptable accuracy.
- To find an optimized number of points, look for a value where there is not a significant difference in the measurement when you increase the number of points.
- To ensure an accurate measurement calibration, perform the calibration with the same number of points that will be used for the measurement.

Last modified:

June 21, 2007 MX Increased maximum

9/12/06 Added link to programming commands

Phase Measurement Accuracy

You can increase the accuracy of phase measurements by using the following PNA features.

- [Electrical Delay](#)
- [Phase Offset](#)
- [Spacing Between Frequency Points \(Aliasing\)](#)

See Also

[Port Extensions](#)

[Comparing the PNA Delay Functions.](#)



[Learn more about Phase measurements](#)


Electrical Delay

Electrical delay is a mathematical function that simulates a variable length of lossless transmission line.

Use the electrical delay feature to compensate for the linear phase shift through a device. This feature allows you to look at only the [deviation from linear phase](#) of the device.

You can set the electrical delay independently for each measurement trace.

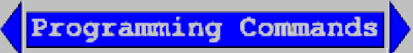How to set Electrical Delay	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Scale 2. then Electrical Delay
For PNA-X models	
1. Press SCALE 2. then [Electrical Delay]	1. Click Response 2. then Scale 3. then Electrical Delay

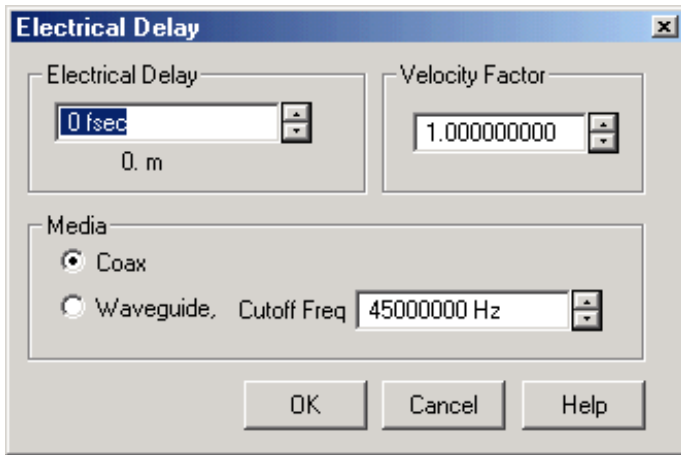

Electrical Delay dialog box help

Electrical Delay Specifies the value of delay added or removed, in units of time. This compensates for the linear phase shift through a device. You can set the electrical delay independently for each measurement trace.

Velocity Factor Specifies the velocity factor that applies to the medium of the device that was inserted after the measurement calibration. The value for a polyethylene dielectric cable is 0.66 and 0.7 for PTFE dielectric. 1.0 corresponds to the speed of light in a vacuum.

Velocity factor can also be set from the [Port Extensions toolbar / More settings](#) and [Time Domain Distance Marker Settings](#).

Media

Coax select if the added length is coax. Also specify the velocity factor of the coax.

Waveguide Select if the added length is waveguide. Also specify the low frequency cutoff of the waveguide.

Cutoff Freq Low frequency cutoff of the waveguide.



Learn about [Electrical Delay](#) (scroll up)

Phase Offset

Phase offset mathematically adjusts the phase measurement by a specified amount, up to 360°. Use this feature in the following ways:

- **Improve the display of a phase measurement.** This is similar to the way you would change the reference level in an amplitude measurement. Change the phase response to center or align the response on the screen.
- **Emulate a projected phase shift in your measurement.** For example, if you know that you need to add a cable and that the length of that cable will add a certain phase shift to your measurement, you can use phase offset to add that amount and simulate the complete device measurement.

How to set Phase Offset

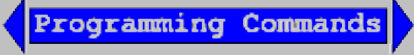Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Scale 2. then Phase Offset
For PNA-X models	
1. Press SCALE 2. then [Phase Offset]	1. Click Response 2. then Scale 3. then Phase Offset



Phase Offset dialog box help

Phase Offset Type a value or use the up and down arrows to select any value up to 360 degrees.

Learn about [Phase Offset](#) (scroll up)


Spacing Between Frequency Points (Aliasing)

The analyzer samples data at discrete frequency points, then connects the points, creating a trace on the screen.

If the phase shift through a device is $>180^\circ$ between adjacent frequency points, the display can look like the phase slope is reversed. This is because the data is undersampled and aliasing is occurring.

If you are measuring group delay and the slope of the phase is reversed, then the group delay will change sign. For example, the following graphic shows a measurement of a SAW bandpass filter.

- The left measurement has 51 points and indicates the group delay is negative, which is a physical impossibility. That is, the response is below 0 seconds reference line.
- The right measurement shows an increase to 201 points which indicates the group delay is positive. That is, the response is above the 0 seconds reference line.

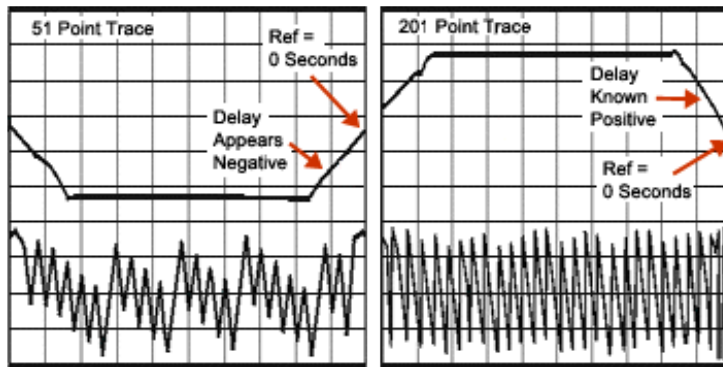

Tip: To check if aliasing might be occurring in a measurement, either [increase the number of points](#) or [reduce the frequency span](#).

Last modified:

December 3, 2007 MX Added UI

Sept.12, 2006 Added link to programming commands

Electrically-Long Device Measurements

A signal coming out of a device under test may not be exactly the same frequency as the signal going in to a device at a given instant in time. This can sometimes lead to inaccurate measurement results. You can choose between two techniques to eliminate this situation and increase measurement accuracy.


- [Why Device Delay May Create Inaccurate Results](#)
- [Solutions to Increase Measurement Accuracy](#)
 - [Slow the Sweep Speed](#)
 - [Add Electrical Length to the R Channel](#)

[Other topics about Optimizing Measurements](#)

Why Device Delay May Create Inaccurate Results

The following graphic shows an example of this situation:

- In the network analyzer, the source and receiver are [phase](#) locked together and sweep simultaneously through a span of frequencies.
- The signal flow through the Device Under Test (DUT) is shown as different colors for different frequencies.
- You can see as a stimulus frequency travels through the [DUT](#), the analyzer tunes to a new frequency **just before** the signal arrives at the receiver. This causes inaccurate measurement results.

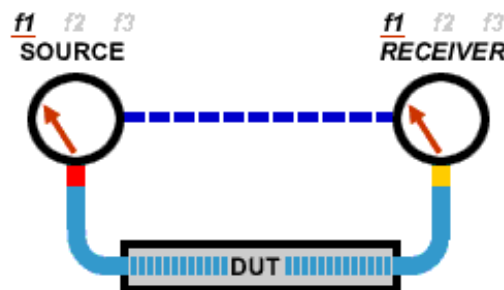

If the analyzer is measuring a long cable, the signal frequency at the end of the cable will lag behind the network analyzer source frequency. If the frequency shift is appreciable compared to the network analyzer's IF [detection](#) bandwidth (typically a few kHz), then the measured result will be in error by the rolloff of the IF filter.

Note: There is no fixed electrical length of a device where this becomes an issue. This is because there are many variables that lead to measurement speed. When high measurement accuracy is critical, lower the sweep speed until measurement results no longer change.

Solutions to Increase Measurement Accuracy

Choose from the following methods to compensate for the time delay of an electrically long device.

- [Slow the Sweep Speed](#)
- [Add Electrical Length to the R Channel](#)

Slow the Sweep Speed

The following methods will slow the sweep speed.

- [Increase the Sweep Time](#)
- [Increase the Number of Points](#)
- [Use Stepped Sweep](#)
- [Set Dwell Time](#)


Add Electrical Length to the R Channel

Note: This method applies to PNA models with front panel loops.

Instead of slowing the sweep, you can compensate for the electrical length of a cable or fixture.

- Remove the R-channel jumper on the front panel of the analyzer.
- Replace the jumper with a cable of about the same length as the device under test.
 - Add the cable on the R1 channel for S_{11} and S_{21} measurements.
 - Add the cable on the R2 channels for S_{22} and S_{12} measurements.
- Set the analyzer for a fast sweep.

Configuration for S_{22} and S_{12} Measurements

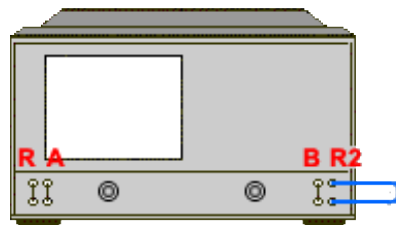

This method balances the delays in the reference and test paths, so that the network analyzer's ratioed transmission measurement does not have a frequency-shift error.

Note: This method works well if the delay is in a cable or fixture. For devices with long delays, this method is only suitable for uncalibrated measurements.

Reflection Accuracy on Low-Loss 2-Port Devices

To make accurate reflection measurements that have a 1-port calibration, you should terminate the unmeasured port.

- [Why Terminate the Unmeasured Port](#)
- [How to Terminate the Unmeasured Port](#)
- [Resulting Measurement Uncertainty](#)

[Other topics about Optimizing Measurements](#)


Why Terminate the Unmeasured Port

A 2-port calibration corrects for all 12 twelve error terms. A 1-port calibration corrects for directivity, source match and frequency response, but not load match. Therefore, for highest accuracy, you must make the load match error as small as possible. This especially applies for low-loss, bi-directional devices such as filter passbands and cables. You do not need to be concerned with load match when you are measuring a device with high reverse isolation, such as an amplifier.

How to Terminate the Unmeasured Port

Use one of the following methods:


- Connect a high-quality termination load (from a calibration kit, for example) to the unmeasured port of your device. This technique yields measurement accuracy close to that of a Full SOLT 2-port calibration.
- Connect the unmeasured port of your device directly to the analyzer, inserting a 10 dB precision attenuator between the device output and the analyzer. This improves the effective load match of the analyzer by approximately twice the value of the attenuator, or 20 dB.

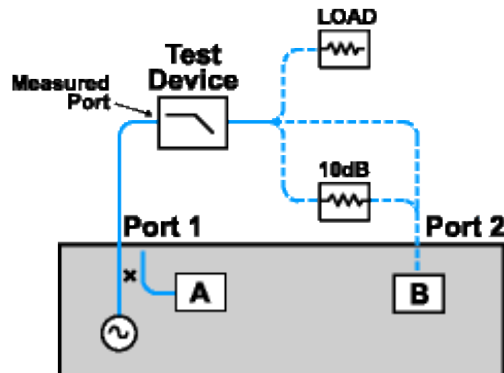

Resulting Measurement Uncertainty

The following graph illustrates the measurement uncertainty that results from terminating **with** and **without** a

precision 10 dB attenuator on the output of the test device.

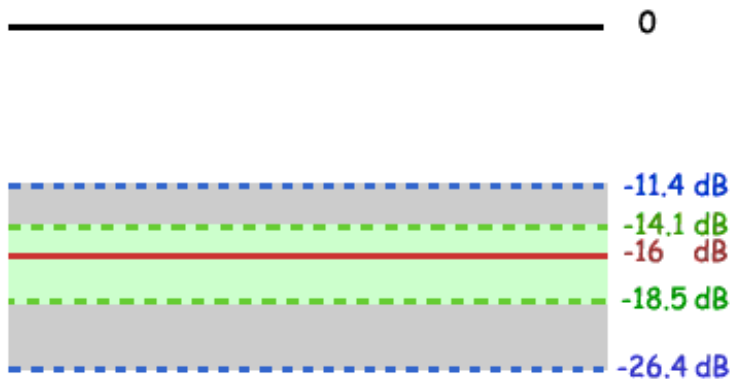

Legend

- Filter Reflection
- Uncertainty **with** attenuator
- Uncertainty **without** attenuator

The calculations below show how adding a high-quality 10 dB attenuator improves the load match of the analyzer.

Note: The corresponding linear value is shown in parentheses.

Network Analyzer:

Load match (NA_{LM}) = 18 dB (.126)

Directivity (NA_D) = 40 db (.010)

Filter:

Insertion loss (F_{IL}) = 1dB (.891)

Return loss (F_{RL}) = 16 dB (.158)

Attenuator:

Insertion loss (A_{IL}) = 10 dB (.316)

SWR (A_{SWR}) = 1.05 (.024)

32.26 dB Return Loss

Calculations:

	Without Attenuator	With Attenuator
	$r_{NA} = (FIL) * (NA_{LM}) * (FIL)$ $= (.891) * (.126) * (.891)$ $=.100$	$= (FIL) * (A_{IL}) * (NA_{LM}) * (A_{IL}) * (FIL)$ $= (.891) * (.316) * (.126) * (.316) * (.891)$ $=.010$
rAttenuator	NA	$= (FIL) * (ASWR) * (FIL)$ $= (.891) * (.126) * (.891)$ $=.019$
Worst Case Error (EWC)	$= p_{NA}$ $=.1$	$= p_{NA} + p_{Attn.}$ $=.01+.019$ $=.029$
<hr/>		
Uncertainty Adds	$= -20\log(FRL) + (EWC) + (NAD)$ $= -20\log(.158) + (.100) + (.010)$ $= 11.4 \text{ dB}$	$= -20\log(FRL) + (EWC) + (NAD)$ $= -20\log(.158) + (.029) + (.010)$ $= 14.1 \text{ dB}$
<hr/>		
Uncertainty Subtracts	$= -20\log(FRL) - (EWC) - (NAD)$ $= -20\log(.158) - (.100) - (.010)$ $= 26.4 \text{ dB}$	$= -20\log(FRL) - (EWC) - (NAD)$ $= -20\log(.158) - (.029) - (.010)$ $= 18.5 \text{ dB}$

Measurement Stability

There are several situations that can cause unstable measurements. To ensure that you are making repeatable measurements, you can use various methods to create a stable measurement environment.

- [Frequency Drift](#)
- [Temperature Drift](#)
- [Inaccurate Measurement Calibrations](#)
- [Device Connections](#)

[Other topics about Optimizing Measurements](#)

Frequency Drift

The analyzer **frequency accuracy** is based on an internal 10 MHz frequency oscillator. See [Technical Specifications](#) for stability and aging specifications.

If your measurement application requires better frequency accuracy and stability, you can override the internal frequency standard and provide your own high-stability external frequency source through the 10 MHz Reference [Input connector on the rear panel](#).

Temperature Drift

Thermal expansion and contraction changes the electrical characteristics of the following components:

- Devices within the analyzer
- Calibration kit standards
- Test devices
- Cables
- Adapters

To reduce the effects of temperature drift on your measurements, do the following.

- Switch on the analyzer 1/2 hour before performing a measurement **calibration** or making a device measurement.
- One hour before you perform a measurement calibration, open the case of the calibration kit and take the standards out of the protective foam.
- Use a temperature-controlled environment. All specifications and characteristics apply over a 25 °C \pm 5 °C range (unless otherwise stated).
- Ensure the temperature stability of the calibration kit devices.

- Avoid handling the calibration kit devices unnecessarily during the calibration procedure.
- Ensure the ambient temperature is $\pm 1^{\circ}\text{C}$ of the measurement calibration temperature.

Inaccurate Measurement Calibrations

If a measurement calibration is inaccurate, you will not measure the true response of a device under test. To ensure that your calibration is accurate, you should consider the following practices:

- Perform a measurement calibration at the points where you connect the device under test, that is, the [reference plane](#).
- If you insert any additional accessory (cable, adapter, attenuator) to the test setup after you have performed a measurement calibration, use the [port extensions](#) function to compensate for the added electrical length and delay.
- Use calibration standards that match the definitions used in the calibration process.
- Inspect, clean, and gage connectors. See [Connector Care](#).

See [Accurate Measurement Calibrations](#) for more detailed information.

Device Connections

Good connections are necessary for repeatable measurements. To help make good connections, do the following:

- Inspect and clean the connectors for all of the components in the measurement setup.
- Use proper connection techniques.
- Avoid moving the cables during a measurement.

Noise Reduction Techniques

Random electrical noise which shows up in the analyzer receiver chain can reduce measurement accuracy. The following PNA functions help reduce trace noise and the noise floor which can lead to better dynamic range and more accurate measurements.

Note: The trace noise in microwave PNAs becomes worse below 748 MHz and is especially obvious between 10 MHz and 45 MHz. See [Reduce IFBW](#).

- [Sweep Average](#)
- [IF Bandwidth](#)
- [Trace Smoothing](#)

See Also

[Increase Dynamic Range](#)

[PNA data processing map](#).

[Other topics about Optimizing Measurements](#)


Sweep Average

Sweep average is a feature that reduces the effects of random noise on a measurement. The PNA computes each data point based on the average of the same data point over several consecutive sweeps. You determine the number of consecutive sweeps by setting the Average factor. The higher the average factor, the greater the amount of noise reduction.

- An **Average Counter** appears on the screen when Averaging is ON, displaying the number of sweeps that has been averaged. The effect on the signal trace can be viewed as the Average Factor increases. This can assist in the selection of the optimum number of sweep averages.
- **Channel wide** - Averaging is applied to all measurements in a channel. The Average counter is displayed for each channel.
- **Unratioed** measurements - Although you can average unratioed (single receiver) measurements, you may get unexpected results:
 - Phase results may tend toward 0. This is because phase measurements are relative by nature. Measuring absolute phase with a single receiver appears random. Averaging random positive and negative numbers will tend toward 0.
 - The noise floor does not drop when averaging unratioed measurements as on ratioed measurements.
- **Average vs IF Bandwidth** - Both can be used for the same benefit of general noise reduction. For minimizing very low noise, using Average is more effective than reducing system bandwidth. Generally, Averaging takes slightly longer than IF bandwidth reduction to lower noise, especially if many averages are required. Also, changing the IF bandwidth after calibration results in [uncertain accuracy](#).


- **Calibration** - Because averaging is a mathematical process that occurs after the raw measurement is made, averaging can be turned ON before, or after, calibration without invalidating the error correction terms. If averaging is ON before calibration, the measurement of calibration standards are averaged measurements. More sweeps are needed to perform the calibration, but there will be less noise in the resulting error correction terms. Subsequent corrected measurements will also have less noise error. In addition, noise is further reduced by turning Averaging ON after calibration. [See the PNA data processing map.](#)
- **Point-averaging** - The PNA does NOT have a "point-averaging" feature like the Agilent 8510 network analyzer. That feature measures and averages each data point BEFORE moving to the next data point. Therefore, all data points are averaged in a single, slower sweep. To accomplish similar results with the PNA, try [lowering the IFBW](#).

Effects of Sweep Average

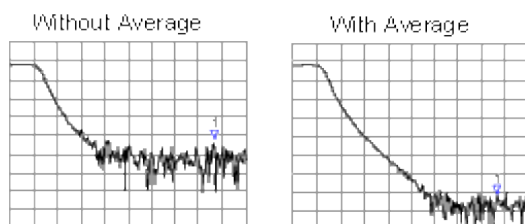

How to Set Averaging

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	◀ Programming Commands ▶
1. Navigate using MENU/DIALOG	1. Click Channel 2. then Average
For PNA-X models	◀ Programming Commands ▶
1. Press Avg 2. then [Averaging]	1. Click Response 2. then Avg 3. then Average

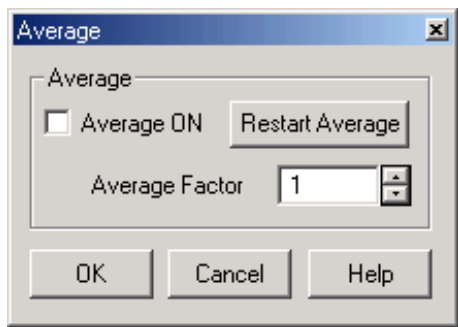

Average dialog box help

Average ON

Checked - Averaging is applied

Cleared - Averaging is NOT applied

Average Factor Specifies the number of sweeps that is averaged. Range of 1 to 65536 (2^{16}).

Restart Begins a new set of measurements that are used for the average. This set of measurements is equal to the average factor.

[Learn about Averaging](#) (scroll up)


IF Bandwidth

The PNA converts the received signal from its source to a lower intermediate frequency (IF). The bandwidth of the IF bandpass filter is adjustable from 40 kHz (for most PNA models) down to a minimum of 1 Hz.



Reducing the IF receiver **bandwidth** reduces the effect of random noise on a measurement. Each tenfold reduction in IF bandwidth lowers the **noise floor** by 10 dB. However, narrower IF bandwidths cause longer sweep times.


- **Channel wide** - IF bandwidth can be set independently for each channel
- **Segment sweep** - IF bandwidth can be set independently for each segment of segment sweep.
- **Calibration** - Changing the IF bandwidth after calibration will cause a ['C-delta' correction level](#), which means that calibration accuracy is uncertain.

Effect of Reducing IF Bandwidth

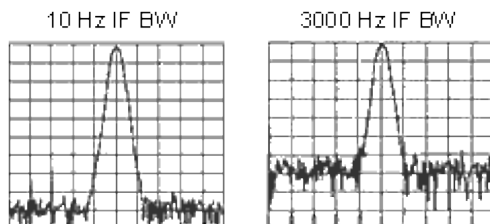

How to set IF Bandwidth

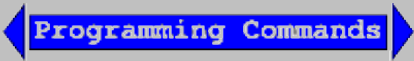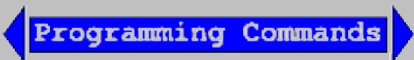Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Sweep 2. then IF Bandwidth
For PNA-X models	
1. Press AVG 2. then [IF Bandwidth]	1. Click Response 2. then Avg 3. then IF Bandwidth

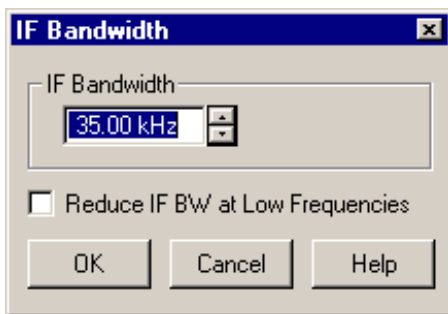

IF Bandwidth dialog box help

IF Bandwidth Specifies the IF (receiver) bandwidth. The value of IF bandwidth is selected by scrolling through the values available in the IF bandwidth text box. The IF BW is set independently for each channel.

The list of selectable IF Bandwidths is different depending on PNA model.

The following values are common to all models:

- 1 | 2 | 3 | 5 | 7 | 10 | 15 | 20 | 30 | 50 | 70 | 100 | 150 | 200 | 300 | 500 | 700 | 1k | 1.5k | 2k | 3k | 5k | 7k | 10k | 15k | 20k | 30k

In addition, the following values are PNA Model specific:

5230A Opts 020, 025, 120, 125, 140, 145, 146, 240, 245, 146

- 50k | 70k | 100k | 150k | 200k | 280k | 360k | 600k

N5230A Opts 220, 225, 420, 425, 520, 525:

- **50k | 70k | 100k | 150k | 200k | 250k**

E836x models:

- **35k | 40k**

N5242A (PNA-X):

- **50k | 70k | 100k | 150k | 200k | 280k | 360k | 600k | 1M | 1.5M | 2M | 3M | 5M**
- The following limitations apply for the highlighted IFBW settings (1 MHz and above).
Note: These wider IFBW's do NOT provide faster sweep speeds. They are used to make wideband pulsed measurements
 - Dwell time is not allowed.
 - Sweep times that are slower than the default value are not allowed.
 - Step sweep mode only - NOT available in Analog sweep.
 - External Trigger Delay is not allowed.
 - Number of points for CW sweep is limited to 1001.
 - A slight shift (.1dB) in Log Mag traces may be seen when switching in and out of these bandwidths.

Reduce IF BW at Low Frequencies

On PNA models with a maximum frequency of 20 GHz and higher, the trace noise becomes worse below 748 MHz. This is especially obvious between 10 MHz and 45 MHz and also when Time Domain is ON. [See PNA models / maximum frequencies.](#)

When this box is checked, the PNA uses a smaller IF Bandwidth than the selected value at frequencies below 748 MHz.

This setting:

- can be made for each channel.
- is ON (checked) by default.
- also applies to [segment sweep](#).
- is NOT available on 4-port PNA-L (model N5230A Opt 240 and 245).

Use the following calculations to determine the actual IF Bandwidth value that is used below 748 MHz.

If the result is NOT a selectable IF BW value, the next higher selectable value is used.

	10 MHz to 44.999999 MHz	45 MHz to 748 MHz
Less than 20 GHz models:	Not applicable	Not applicable
ALL 2-port 20 GHz PNA models :	Actual IF BW = (selected IF BW) x (.05)	Actual IF BW = selected IF BW (No reduction)
ALL 40 GHz and higher models:	Actual IF BW = (selected IF BW) x (.025)	Actual IF BW = (selected IF BW) x (.5)

PNA-X Models

Start Freq	Stop Freq	Actual IF BW = (selected IF BW) x n
10MHz	19 MHz	n = .05
19MHz+	53 MHz	n = .1
53 MHz+	75 MHz	n = .5
75 MHz+	26.5 GHz	n = 1

+ indicates plus 1 Hz

Example:

On a 67 GHz PNA, the selected IF BW is 30 KHz.

With **Reduce IF BW at Low Frequencies** checked, the actual IF Bandwidths used are:

- From **10 MHz to 44.999999 MHz**: $30,000\text{Hz} * .025 = 750\text{ Hz}$ (PNA uses next higher selectable value: **1000 Hz**.)
- From **45 MHz to 748 MHz**: $30,000\text{Hz} * .5 = 15\text{ KHz}$
- From **748 MHz** to stop sweep: **30 KHz**

OK Selects the value of IF bandwidth shown in the text box.

[Learn about IF Bandwidth](#) (scroll up)

Trace Smoothing

Trace smoothing averages a number of **adjacent** data points to smooth the displayed trace. The number of adjacent data points that get averaged together is also known as the smoothing aperture. You can specify aperture as either the number of data points or the percentage of the x-axis span.

Trace Smoothing reduces the peak-to-peak noise values on broadband measured data. It smooths trace noise and does not increase measurement time significantly.

Because Trace Smoothing follows Format in the PNA data processing map, the formatted data is smoothed.

Smoothing is automatically turned off if the format is Polar or Smith Chart.


[Learn more about Data Format Types.](#)

[See the PNA data processing map.](#)

Tips:


- Start with a high number of display points and reduce until you are confident that the trace is not giving misleading results.
- Do not use smoothing for high-resonance devices, or devices with wide trace variations. It may introduce misleading information.
- Smoothing is set independently for each trace.

Effects of Smoothing on a Trace

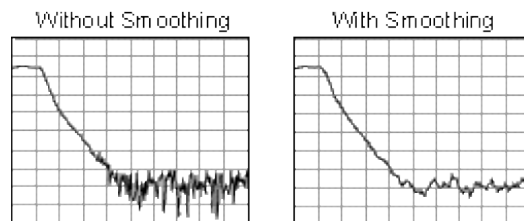

How to set Trace Smoothing

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	Programming Commands
1. Navigate using MENU/DIALOG	1. Click Trace 2. then Smoothing
For PNA-X models	Programming Commands
1. Press Avg 2. then [Smoothing]	1. Click Response 2. then Avg 3. then Smoothing

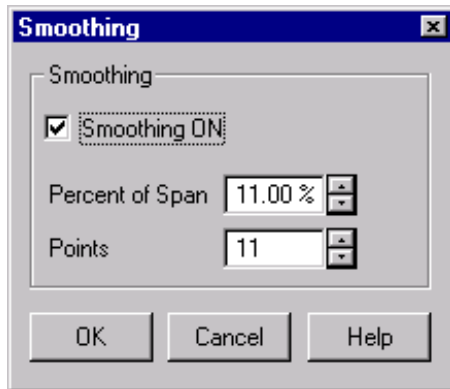

Smoothing dialog box help

Smoothing ON When checked, applies smoothing to the displayed trace.

Percent of Span Specify percent of the swept stimulus span to average. For example, for a trace that contains 100 data points, and specify a percent of span = 11%, then the number of data points that are averaged is 11.

Points Specify the number of adjacent data points to average.

[Learn about Trace Smoothing](#) (scroll up)

Last modified:

Sept.12, 2006 Added link to programming commands

Crosstalk

Crosstalk is energy leakage between analyzer signal paths. This can be a problem with high-loss transmission measurements.

The PNA noise floor has to be lowered substantially before crosstalk is visible. You may need to use [averaging](#) or narrow the [IF bandwidth](#).

Although the [crosstalk specification](#) of the PNA is exceptional, you can reduce the effects of crosstalk by doing the following:

- [Set the Sweep to Alternate](#)
- [Perform an Isolation Calibration](#)

[Other topics about Optimizing Measurements](#)

Set the Sweep to Alternate

Alternate sweep measures only one receiver per sweep. When one receiver is measured, the analyzer switches off the other receiver. This helps reduce receiver crosstalk.

Learn how to set [Alternate Sweep](#).

Perform an Isolation Calibration

For transmission measurements, a response and isolation measurement [calibration](#) helps reduce crosstalk because the analyzer measures and then subtracts the leakage signal during the measurement calibration. The calibration improves isolation so that it is limited only by the noise floor.

Note: Isolation is never performed on a Smart (Guided) Calibration. [Learn more.](#)

Generally, the isolation error falls below the noise floor. So when you are performing an isolation calibration you should use a noise reduction technique such as sweep averages or reducing the IF bandwidth.

Effects of Accessories

Accessories in a configuration may affect the results of a device measurement. You can choose between two analyzer features that reduce the effects of accessories.

- [Power Slope to Compensate for Cable Loss](#)
- [Gating to Selectively Remove Responses](#)

[Other topics about Optimizing Measurements](#)

Power Slope to Compensate for Cable Loss

If you have a long cable or other accessory in a measurement configuration where a power loss occurs over frequency, apply the power slope function. This function increases the analyzer source power by a rate that you define (dB/GHz).

1. In the **Channel** menu, click **Power**.
2. If the slope function is not already switched on, click the **Slope** check box.
3. In the **dB/GHz** box, enter the rate that you want the source power to increase over the frequency sweep. Click **OK**.

Gating to Selectively Remove Responses

Gating is a feature in the time domain (option 010) that allows the analyzer to mathematically remove responses. You can set the gate for either a reflection or transmission response, but you will see different results.

- **Gating a reflection response** isolates a desired response (such as a filter's return loss), from unwanted responses (such as adapter reflections or connector mismatches).
- **Gating a transmission response** isolates a specific path in a multipath device that has long electrical lengths.

See [Time Domain Gating](#) for more information.

Achieve Fastest Sweep

You can achieve the fastest measurement sweep by adjusting the following:

- [Sweep Settings](#)
- [Noise Reduction Settings](#)
- [Measurement Calibration Choice](#)
- [Unnecessary Functions](#)

[Other topics about Optimizing Measurements](#)

Sweep Settings

Consider changing each of the following settings as suggested.

- [Frequency Span](#) - Measure only the frequencies that are necessary for your device.
- [Segment Sweep](#) - Use segments to focus test data only where you need it.
- [Switch Off Stepped Sweep](#) - Use linear swept mode to minimize sweep time when possible.
- [Auto Sweep Time](#) - Use this default to sweep as quickly as possible for the current settings.
- [Number of Points](#) - Use the minimum number of points required for the measurement.

For more information on how number of points and other settings affect sweep cycle time, see [Technical Specifications](#).

Noise Reduction Settings

Using a combination of these settings, you can decrease the sweep time while still achieving an acceptable measurement.

- [IF Bandwidth](#). Use the widest IF bandwidth that will produce acceptable trace noise and [dynamic range](#).
- [Average](#). Reduce the average factor, or switch Average off.

Measurement Calibration Choice

Choose the appropriate type of calibration for the required level of accuracy.

When full 2-port error correction is applied, the PNA takes both forward and reverse sweeps to gather all 12 error correction terms. This occurs even with a single S11 measurement displayed. All displayed measurements are updated as the second sweep is performed. Both sweeps are performed using the specified sweep time.

When calibrating greater than 2 ports, the following formula is used to determine the number of sweeps required:

- $N * (N-1)$ where N = the number of ports.

When full 3-port calibration is applied, 6 sweeps are required; forward and reverse for each port pair. With full 4-port correction, 12 sweeps are required, and so forth.

To limit the measurement time, perform ONLY the level of calibration that your measurements require. For example, if making only an S11 measurement, perform a 1-port calibration on that port.

Sweep speed is about the same for uncorrected measurements and measurements done using a response calibration, or one-port calibration. For more information see [Select a Calibration](#).

Unnecessary Functions

The analyzer must update information for all active functions. To achieve an additional increase in sweep speed, switch off all of the analyzer functions that are not necessary for your measurement application.

- [Delete Unwanted Traces](#)
- [Switch Off Unwanted Markers](#)
- [Switch Off Smoothing](#)
- [Switch Off Limit Testing](#)
- [Switch Off Math Functions](#)

Analyzer sweep speed is dependent on various measurement settings. Experiment with the settings to get the fastest sweep and the measurement results that you need.

Switch Between Multiple Measurements

If you need to make multiple measurements to characterize a device, you can use various methods to increase throughput. Experiment with these methods to find what is best for your measurement application needs.

- [Set Up Measurements for Increased Throughput](#)
 - [Arrange Measurements in Sets](#)
 - [Use Segment Sweep](#)
 - [Trigger Measurements Selectively](#)
- [Automate Changes Between Measurements](#)
- [Recall Measurements Quickly](#)

[Other topics about Optimizing Measurements](#)

Set Up Measurements for Increased Throughput

To achieve optimum throughput of devices that require multiple measurements, it is helpful to know the operation of the PNA. This knowledge allows you to set up the measurement scenarios that are best for your applications.

[Learn more about Traces, Channels, and Windows on the PNA](#)

Arrange Measurements in Sets

If you arrange measurements to keep the complete set of device measurements in one instrument state, you can save them so that you can later recall a number of measurements with one recall function.

See [Pre-configured Measurement Setups](#) for more information.

Use Segment Sweep

Segment sweep is helpful if you need to change the following settings to characterize a device under test.

- Frequency Range
- Power Level
- IF [Bandwidth](#)
- Number of Points

The segment sweep allows you to define a set of frequency ranges that have independent attributes. This allows you to use one measurement sweep to measure a device that has varying characteristics.

See [Segment Sweep](#) for more information.

Trigger Measurements Selectively

You can use the measurement trigger to make measurements as follows:

- Continuously update only the measurements that have rapidly changing data.
- Occasionally update measurements that have infrequently changing data.

For example, if you had four channels set up as follows:

- Two channels measuring the data that is used to tune a filter
- Two channels measuring the data for the out-of-band responses of the filter

You would want to constantly monitor only the measurement data that you use for tuning the filter. If you continuously update all of the channels, this could slow the response of the analyzer so that you would not be able to tune the filter as effectively.

Note: You must either trigger the infrequent measurement manually or with remote interface commands.

To trigger measurements selectively:

This procedure shows you how to set up two different measurements with the following behavior:

- Channel 1 measurement will continuously update the data.
- Channel 2 measurement will occasionally update the data.

1. In the **Windows** menu, click **Meas Setups, Setup D**.

Set Up a Measurement Trigger for Continuous Updates

2. In the **Sweep** menu, click **Trigger, Trigger....**
3. Under **Trigger Source**, click **Internal**.
4. Under **Channel Trigger State**, select **Channel 1**, and click **Continuous**.

Set Up a Measurement Trigger for Occasional Updates

5. Under **Channel Trigger State**, select **Channel 2**, and click **Single, OK**.
 - If you want the analyzer to trigger more than a single sweep, click the **Enable Groups** check box and enter the number of sweeps.
6. In the **System** menu, click **Keys, Trigger**.

Update the Measurement

7. Click on the lower window to make Channel 2 the active channel.

8. On the active entry toolbar, click the type of trigger you set up.
 - Click **Single** if you set up the analyzer for a single sweep per trigger.
 - Click **Groups** if you set up the multiple sweeps per trigger.

Note: A trace must be active for you to initiate a trigger for that measurement.

Automate Changes Between Measurements

If there are slight differences between the various measurements that you need to characterize a device, you may find that it is faster to change the measurement settings using programming.

Recall Measurements Quickly

The most efficient way to recall measurements is to recall them as a set of measurements (instrument state).


- It only takes a short time longer to recall an instrument state that includes multiple measurements, than it does to recall an instrument state with only one measurement.
- Each recall function has time associated with it. You can eliminate that time by setting up the measurements as a set so you can recall them as a set.

See [Save and Recall Files](#) for more information.

Data Transfer Speed

When testing devices remotely using COM or SCPI, the following techniques can be used to transfer data quickly between the PNA and remote computer, helping you achieve the best measurement throughput.

- Use [single sweep \(trigger\) mode](#) to ensure that a measurement is complete before starting a data transfer.
- **Transfer the minimum amount of data** needed. For example, a trace with a few points, using segment sweep rather than a full trace with many linearly spaced points. Also, use markers instead of trace transfers.
- **Choose the REAL data format** to provide the fastest transfer speed when using SCPI programs for automated applications.
- **Use SCPI over LAN** for applications that are automated with SCPI programs.
- **Use COM programs** to provide the fastest transfer speed when using an automated application. See [Data Transfer Time](#) specifications.

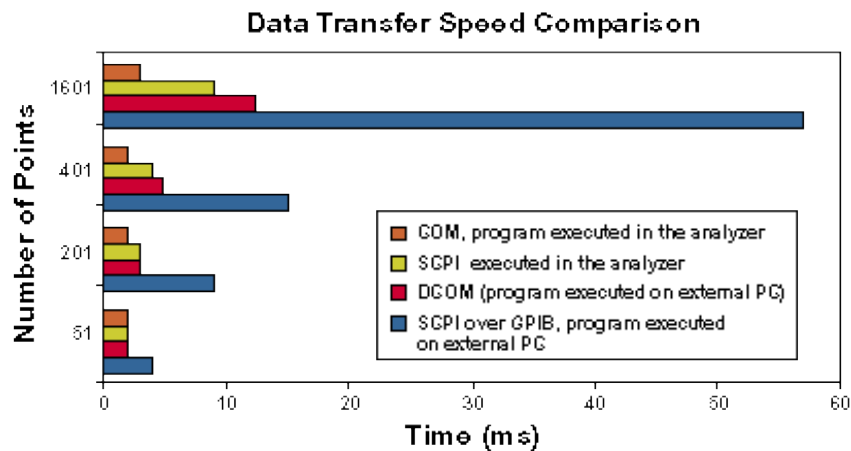





[Other topics about Optimizing Measurements](#)

Using Macros

Macros are executable programs that you write, load into the analyzer, and then run from the analyzer. You can have up to 12 macros set up to run on the analyzer.

- [How to Setup Macros](#)
- [How to Run Macros](#)
- [Macro Example](#)

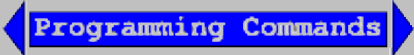
How to Setup Macros

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Press  +  2. Press	1. Click System 2. then Macro 3. then Macro Setup
For PNA-X models	
1. Press MACRO 2. then [Macro Setup]	1. Click Utility 2. then Macro 3. then Macro Setup

In the Macro Setup dialog box:

1. Click on a blank line below the last entry. (There may be NO entry.)
2. Click **Edit**
3. In the **Macro Title** box, type a descriptive title for your macro.
4. Click **Browse**.
5. Change **Files of Type**
6. Find and click your macro file

7. Click **OK**
8. Click **OK** on the Macro Setup dialog box.

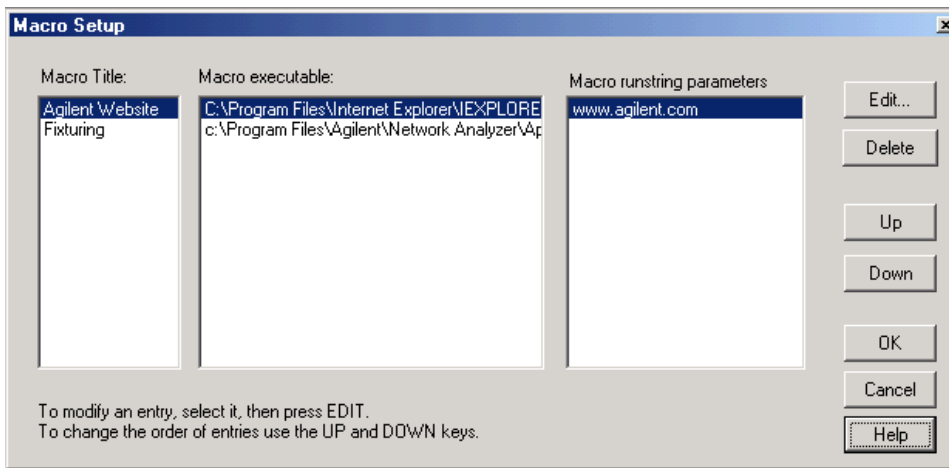

Macro Setup dialog box help

Allows you to create a set of 12 macros so that you can launch other programs from within the PNA application.

Note: To add a Macro, select a blank line then click **Edit**

Macro Title Shows the titles that appear in the active entry toolbar when you press the Macro key. These titles are associated with the executable files and should be descriptive so you can easily identify them. For example, if you wanted to launch the Agilent Home Page, you could title the executable "Agilent Home."

Macro Executable Lists the complete path to the executable file. To follow the example of launching the Agilent PNA Series Home Page, the path to the executable could be "C:\Program Files\Internet Explorer\iexplore.exe."


Macro Runstring Parameters Lists the parameters that get passed to the program that is referenced in the executable file. Again following the example of launching the PNA Series Home Page, you could assign the runstring parameters "http://www.agilent.com/find/pna".

Edit Invokes the [Macro Edit dialog box](#).

Delete Deletes the selected macro.

Up Allows you to reorder the macros, moving the selected macro up one line. For the 12 possible macros there are 12 lines, indicating the order that they appear in the active entry toolbar when you press the Macro key. Since there are four titles that can be shown at one time in the toolbar, when you repeatedly press the Macro key, the toolbar changes the macro titles to the next set of four macro titles.

Down Moves the selection down one line in the list of macros.

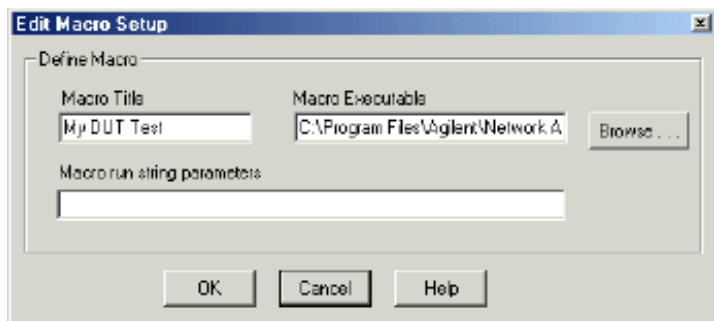

Macro Edit dialog box help

Macro Title Allows you to modify the title that appears in the active entry toolbar.



Macro Executable Allows you to modify the complete path to the macro executable file.

Browse Allows you to look through drives and directories, to locate the macro executable file and establish the complete path to the file.

Macro run string parameters Allows you to modify the parameters that are passed to the program referenced in the executable file.

[See Macro Setup dialog box](#)

How to Run Macros

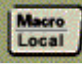Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Press  until your macro is visible 2. then 	1. Click System 2. then Macro 3. then select the macro to run
For PNA-X models	
1. Press MACRO 2. then select the macro to run	1. Click Utility 2. then Macro 3. then select the macro to run

Macro Example

The following is an example Visual Basic Scripting (vbs) program that you can copy, install, and run on your PNA

Note: Print these instructions if viewing in the analyzer. This topic will be covered by the Macro Setup dialog box.

1. Copy the following code into a Notepad file.
2. Save the file on the analyzer hard drive in the **C:\Documents** folder. Name the file **FilterTest.vbs**
3. Close Notepad
4. [Setup the macro in the PNA](#)
5. [Run the macro](#)

```
'Start copying here
'This program creates a S21 measurement, with Bandwidth
'markers for testing a 175MHz Bandpass filter
'It is written in VBscript using COM commands

Set PNA = CreateObject("AgilentPNA835x.Application")
PNA.Preset
Set chan=PNA.activechannel
Set meas=PNA.activemeasurement
Set limts = meas.LimitTest
Set trce = PNA.ActiveNAWindow.ActiveTrace

meas.ChangeParameter "S21",1
chan.StartFrequency = 45e6
chan.StopFrequency = 500e6
trce.ReferencePosition = 8
PNA.TriggerSignal = 3

'Do Test
for t=1 to 5
call measure
call compare
next
msgbox("Done Testing")

sub measure
msgbox("Connect Device " & t & " and press OK")
PNA.ManualTrigger True
meas.SearchFilterBandwidth
end sub

sub compare
BW = meas.FilterBW
if bw>6.5e7 then msgbox("Failed BW: " & BW)
Loss = meas.FilterLoss
if loss>5 then msgbox("Failed Loss: " & Loss)
end sub
'End copying here
```


Calibration Overview

The following is discussed in this topic:

- [What Is Measurement Calibration?](#)
- [Why Is Calibration Necessary?](#)
- [Conditions Where Calibration Is Suggested](#)
- [What Is ECal?](#)

[See other Calibration Topics](#)

What Is Measurement Calibration?

Calibration removes one or more of the systematic errors using an equation called an error model. Measurement of high quality standards (for example, a short, open, load, and thru) allows the analyzer to solve for the error terms in the error model. See [Measurement Errors](#).

You can choose from different calibration types, depending on the measurement you are making and the level of accuracy you need for the measurement. See [Select a Calibration Type](#).

The accuracy of the calibrated measurements is dependent on the quality of the standards in the calibration kit and how accurately the standards are modeled (defined) in the calibration kit definition file. The calibration-kit definition file is stored in the analyzer. In order to make accurate measurements, the calibration-kit definition must match the actual calibration kit used. To learn more, see [Accurate Calibrations](#).

Calibration Wizard provides the different calibration methods used in the PNA. See [Calibration Wizard](#).

There are quick checks you can do to ensure your measurement calibration is accurate. To learn more see [Validity of a Measurement Calibration](#)

If you make your own custom-built calibration standards (for example, during in-fixture measurements), then you must characterize the calibration standards and enter the definitions into a user modified calibration-kit file. For more information on modifying calibration kit files, see [Calibration Standards](#).

Note: [Instrument Calibration](#) is ensuring the analyzer hardware is performing as specified. This is not the same as measurement calibration.

Why Is Calibration Necessary?

It is impossible to make perfect hardware that would not need any form of [error correction](#). Even making the hardware good enough to eliminate the need for error correction for most devices would be extremely expensive.

The accuracy of network analysis is greatly influenced by factors external to the network analyzer. Components of the measurement setup, such as interconnecting cables and adapters, introduce variations in magnitude and [phase](#) that can mask the actual response of the device under test.

The best balance is to make the hardware as good as practically possible, balancing performance and cost. Calibration is then a very useful tool to improve measurement accuracy.

Conditions Where Calibration Is Suggested

Generally, you should calibrate for making a measurement under the following circumstances:

- You want the best accuracy possible.
- You are adapting to a different connector type or [impedance](#).
- You are connecting a cable between the test device and an analyzer test port.
- You are measuring across a wide [frequency span](#) or an electrically long device.
- You are connecting an attenuator or other such device on the input or output of the test device.

If your test setup meets any of the conditions above, the following system characteristics may be affected:

- Amplitude at device input
- [Frequency response](#) accuracy
- [Directivity](#)
- [Crosstalk \(isolation\)](#)
- Source match
- [Load match](#)

What Is ECal

ECal is a complete solid-state calibration solution. It makes one port (Reflection), full two and three-port calibrations fast and easy. See [Using ECal](#).

- It is less prone to operator error.
- The various standards (located inside the calibration module) never wear out because they are switched with PIN-diode or FET switches.
- The calibration modules are characterized using a TRL-calibrated network analyzer.
- ECal is not as accurate as a good TRL calibration.

For information about ordering ECal modules, see [Analyzer Accessories](#) or contact your [Agilent Support Representative](#)

Calibration Standards

This following section explains the general principles and terms regarding calibration kit files. To learn **how** to modify calibration kit files, See [Modify Calibration Kits](#).

- [About Calibration Kits](#)
- [Calibration Standards](#)
- [Standard Type](#)
- [Standard Definitions](#)
- [Class Assignments](#)

[See other Calibration Topics](#)

About Calibration Kits

A calibration kit is a set of physical devices called standards. Each standard has a precisely known or predictable magnitude and phase response as a function of frequency.

In order to calibrate the analyzer using the standards in a calibration kit, the response of each standard must be mathematically defined and then organized into standard classes that correspond to the error models used by the analyzer.

To be able to use a particular calibration kit, the known characteristics from each standard in the kit must be stored into analyzer memory. This is done for you with the PNA. All Agilent Cal Kits containing standard definitions are stored in the PNA. For a list of Agilent calibration kits, see [Analyzer Accessories](#).

Calibration Standards

Calibration standards provide the reference for error-corrected measurements in the network analyzer. Each standard has a precisely known definition that includes electrical delay, impedance, and loss. The analyzer stores these definitions and uses them to calculate error correction terms.

During measurement calibration, the analyzer measures standards and mathematically compares the results with "ideal models" of those standards. The differences are separated into error terms that are later removed from device measurements during error correction. [See Systematic Errors](#).

Standard Type

A standard type is one of five basic types that define the form or structure of the model to be used with that standard. The standard types are shown below:

Standard	Terminal Impedance
SHORT	zero ohms
OPEN	infinite ohms
LOAD	system impedance, Z0
THRU/LINE	no terminal impedance
ARBITRARY	user-defined

Standard Definitions

Standard definitions describe the electrical characteristics of the standards and the frequencies they will be used. Standard definitions can be viewed from the [Advanced Modify Cal Kit](#) menu selection. Standard definitions include:

- **Minimum Frequency** Specifies the minimum frequency the standard is used for calibration.
- **Maximum Frequency** Specifies the maximum frequency the standard is used for calibration.
- **Z0** Specifies the characteristic impedance of the standard (not the system characteristic impedance or the terminal impedance of the standard).
- **Delay** Specifies a uniform length of transmission line between the standard being defined and the actual calibration plane.
- **Type** Specifies type of standard (SHORT, OPEN, THRU/LINE, LOAD, ARBITRARY).
- **Loss** Specifies energy loss, due to skin effect, along a one-way length of coaxial cable.

Loss model equation:

- The value of loss is entered as ohms/second at 1 GHz.
- To compute the loss of the standard, measure the delay in seconds and the loss in dB at 1 GHz. Then use the following formula:

$$\text{Loss} \left(\frac{\Omega}{s} \right) = \frac{\text{loss (dB)} \times Z_0(\Omega)}{4.3429(\text{dB}) \times \text{delay}(s)}$$

Capacitance model equation:

C0, C1, C2, C3. Specifies the fringing capacitance for the open standard.

- $C = (C0) + (C1 \times F) + (C2 \times F^2) + (C3 \times F^3)$
- (F is the measurement frequency).
- The terms in the equation are defined when specifying the open as follows:

- C0 term is the constant term of the third-order polynomial and is expressed in Farads.
- C1 term is expressed in F/Hz (Farads/Hz).
- C2 term is expressed in F/Hz².
- C3 term is expressed in F/Hz³.

Inductance model equation:

L0, L1, L2, L3. Specifies the residual inductance for the short standard.

- $L = (L0) + (L1 \times F) + (L2 \times F^2) + (L3 \times F^3)$
- (F is the measurement frequency).
- The terms in the equation are defined when specifying the short as follows:
 - L0 term is the constant term of the third-order polynomial and is expressed in Henries.
 - L1 term is expressed in H/Hz (Henries/Hz)
 - L2 term is expressed in H/Hz².
 - L3 term is expressed in H/Hz³.

Class Assignments

Once a standard is characterized, it must be assigned to a standard "class". A standard class is a group of standards that are organized according to the calibration of the PNA error model.

The number of classes needed for a particular calibration type is equal to the number of error terms being corrected.

A class often consists of a single standard, but may be composed of multiple standards. These may be required for accuracy or to cover a wide frequency range.

Example: A response calibration requires only one class, and the standards for that class may include an OPEN, or SHORT, or THRU. A 1-port calibration requires three classes. A 2-port calibration requires 10 classes, not including two for isolation.

The number of standards assigned to a given class may vary from one to seven for unguided calibrations. Guided calibrations allow as many standards as needed.

Calibration Classes are assigned in the [Advanced Modify Cal Kit](#) menu selection.

The different classes used in the PNA:

S11A, S11B, S11C (S22A, S22B, S22C and so forth)

These are the three classes for port 1-reflection calibrations (three classes also for S22 and S33). They are used in the one-port calibrations and the full two-port calibration. They are required in removing the directivity, source match, and reflection tracking errors. Typically, these classes might consist of an open, a short and a load standard for each port.

Transmission and Match (forward and reverse)

These classes are used to perform a full two-port calibration. The transmission class relates primarily to the transmission tracking, while the match class refers to load match. For both of these classes, the typical standard is a thru or delay.

Isolation

The isolation classes are used to perform a full two-port and the TRL two-port calibrations. The isolation classes apply to the forward and reverse crosstalk terms in the PNA error model.

TRL THRU

These are used to perform a TRL two-port calibration. The TRL thru class should contain a thru standard or a short line. If it contains a non-zero length thru standard, then the calibration type is called LRL or LRM.

TRL REFLECT

This class is used to perform a TRL two-port calibration. The TRL reflect class should contain a standard with a high reflection coefficient, typically an open or short. The actual reflection coefficient need not be known, but its phase angle should be specified approximately correctly (± 90 deg). The exact same reflection standard must be used on both ports in the TRL calibration process.

TRL LINE or MATCH

These are used to perform a TRL two-port calibration. The TRL line or match class should contain line standards, load standards, or both. If a line standard is used, its phase shift must differ from that of the TRL THRU standard by 20° to 160° . This limits the useable frequency range to about 8 to 1. Two or more line standards of different lengths may be specified to get broader frequency coverage. It is also common to include a load standard for covering low frequencies, where the line's length would be impractically long. When a load is used, the calibration type is called TRM or LRM.



Note: For more information, read application note 8510-5A, "*Specifying Calibration Standards for the Agilent 8510 Network Analyzer*". Although the application note is written for the Agilent 8510 series of network analyzers, it applies to the PNA as well. The part number for the publication is 5956-4352.


Calibration Wizard

The Calibration Wizard allows you to choose a Calibration method and then perform the calibration.

- [How to Start Calibration Wizard](#)
- [Guided Calibration: Mechanical Standards](#)
- [Unguided Calibration](#)
- [Saving a Calibration](#)

Other Cal Topics

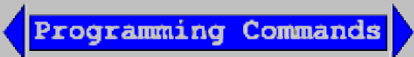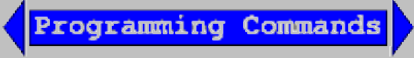How to start Calibration Wizard	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Press CAL 2. then Active Entry keys	1. Click Calibration 2. then Cal Wizard
For PNA-X models	
1. Press CAL 2. then [Start Cal] 3. then [Cal Wizard]	1. Click Response 2. then Cal Wizard

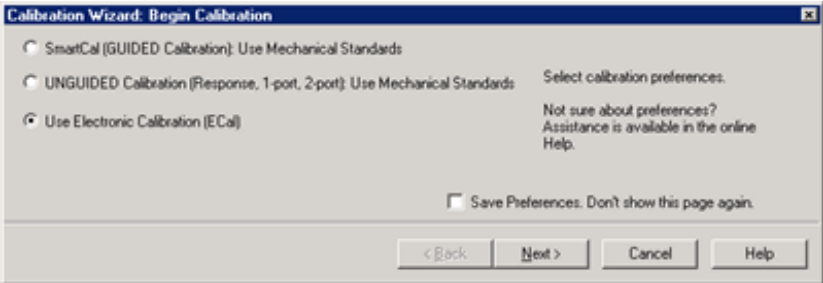

Calibration Wizard Begin dialog box help

Select the calibration method:

SmartCal (Guided Calibration)

This method provides a step-by-step "wizard" interface. You describe the connectors on your DUT and the cal kits you will use; it walks you through the most accurate calibration possible.

Note: SmartCal DOES allow you to measure calibration standards in any order. However, you must click **Next** and **Back** without measuring standards until you get to the standard you want to measure.

- Supports ALL Cals **EXCEPT** simple open, short, and thru response Cals . See Also [TRL Calibration](#)
- Use a different Cal Kit (**including ECal**) for each port.

Unguided Calibration

This method provides a familiar calibration interface, but with limited capability. You choose the type of cal to perform; it allows you the flexibility to measure the standards in any order.

- Supports all Cals **EXCEPT** full 3-port, full 4-port.
- TRL is NOT supported on multiport PNAs.
- Only one Cal Kit can be used.

Use Electronic Calibration

- This method provides fast, software-controlled calibrations.
- Only one ECal module can be used. Use SmartCal when more than one ECal module is needed.

Save Preferences

- When cleared, you will continue to see this page on subsequent calibrations.
- When checked, saves your calibration method choice and the dialog no longer appears.
- To make this dialog re-appear, click **Calibration**, then **Preferences**.
- Learn more about [Calibration Preferences](#).

The Calibration Channel / Window

With PNA Rev. 6.2, the measurement of calibration standards is performed in a dedicated PNA channel and window which is visible during the calibration process. The new Cal channel duplicates the settings in the channel being calibrated. [Correction is ALWAYS OFF](#) for the displayed calibration channel. The CH 'n' annotation on the [status bar](#) (where 'n' is the channel number) is replaced with 'CAL 1'. At the completion of the calibration, the calibration channel is deleted.

As each new cal step (1 of n) prompt appears, the visible traces are setup for measurement of the next cal standard. Sweeps are continuously triggered until the Measure button is pressed. This allows you to view the integrity of the cal standard connection.

SmartCal (Guided Calibration)

Guided Calibration automatically determines the calibration type and suggests a calibration kit that matches your DUT connectors.


Guided Calibration can perform the following Cal Types:

- ALL Cals **EXCEPT Open, Short, and Thru Response** Cals.
- ECal on one or more ports, beginning with [PNA firmware revision 5.24](#).
- TRL - [Learn how to do TRL cals](#)

Programming Commands

Note: SmartCal DOES allow you to measure calibration standards in any order. However, you must click **Next** and **Back** without measuring standards until you get to the standard you want to measure.

The PNA displays the following dialog boxes when performing a Guided calibration.

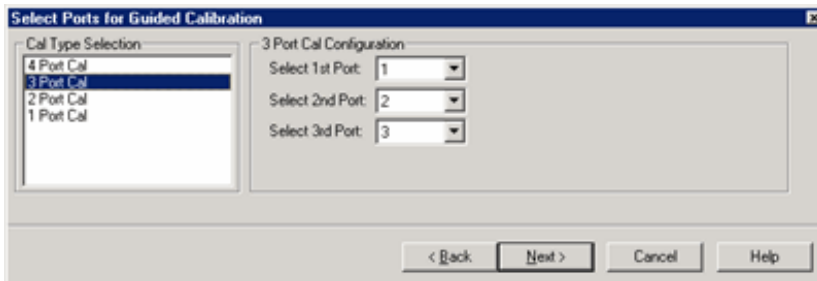

Select Ports for Guided Calibration dialog box help

Allows you to select ports to calibrate.


Cal Type Selection Select the number of ports to calibrate.

N Port Cal Configuration If not calibrating all PNA ports, specify which ports to calibrate.

Show Advanced Settings (Orientation & Thru Cal Section) Available only for [ECal](#).

Back Return to [Cal Wizard Begin](#) dialog. If you did not see the 'Cal Wizard Begin' dialog but want to, click **Back**, then clear the [Save Preferences](#) checkbox.

For greater than 4-port cals, see [External Test Set calibration - Select Cal Type](#).

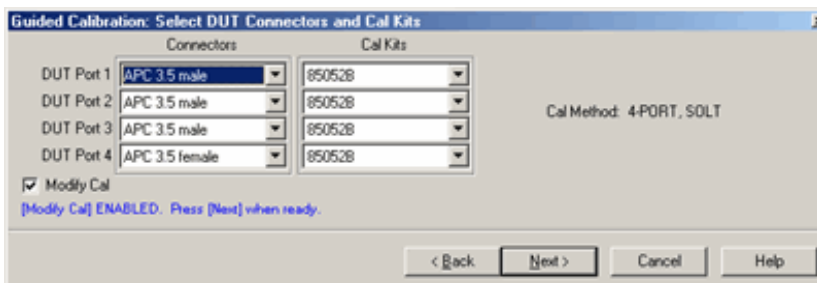

Select DUT Connectors and Cal Kits dialog box help

Allows you to select the connector type and Cal Kit for each DUT port to be calibrated.

Connectors To change selection, click the connector field for each DUT port.

If your DUT connectors are:

- **Waveguide** Change the system impedance to 1 ohm before performing a calibration. See [Setting System Impedance](#).
- **Not listed** You can create your own connector type and calibration kit file. The PNA includes the following example cal kits that can be used as a template. See [Calibration kits](#) for more information.
 - If using a gendered (male and female) connector type, select **Type A** as the connector type.
 - If using a connectorless device such as on-wafer probes., select **Type B** as the connector type.

Cal Kits Select the Cal Kit to be used to calibrate each test port. The list for each DUT Port displays kits having the same connector type as the DUT.

Identical ECal models connected? ECal modules can be distinguished by serial number. This can have implications on your remote [SCPI](#) programs.

85056K


- To calibrate 2.4 mm connectors using the 85056K cal kit, select 85056D as the cal kit. The 85056K definitions in the PNA are for 2.92mm standards (2.4mm plus 2.92 adapters). The 85056D kit contains exactly the same standards WITHOUT the adapters.

TRL

- To perform a [TRL Cal](#), assign a TRL Cal Kit to the lowest port number of each port pair.
- When selecting a TRL Cal Kit on a 4-port PNA, and a [Global Delta Match Cal](#) is not available, the Cal type will be set to SOLT and a "Could not find a Global Delta Match Cal." message is displayed on the dialog box. If the selected Cal Kit will not support SOLT, the **Next** button will not be available. Then you must select a different Cal Kit to proceed or **Cancel** and perform a Global Delta Match Cal.

Modify Cal Check, then click Next, to [Modify Cal](#) (Standards AND Thru Method).

For greater than 4-port cals, see External Test Set calibration - Select DUT Connectors.

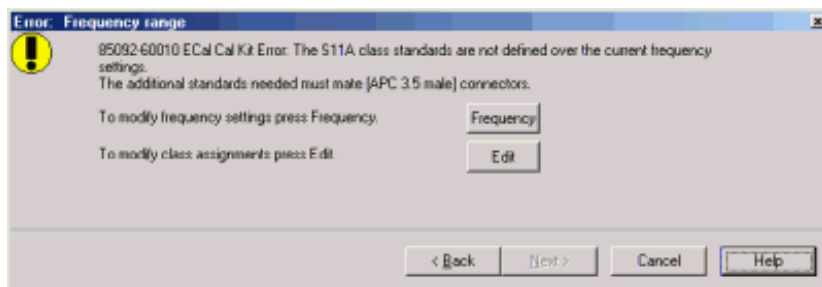

Error: Frequency Range dialog box help


The current cal kit does not cover the current frequency range of the measurement. Do one of the following to correct the problem:

Frequency Change the frequency range of the active channel.

Edit Modify the class assignments so that a different standard is selected.

Back Select a different Cal Kit that covers the required frequency range.

Cancel Exit the Cal Wizard

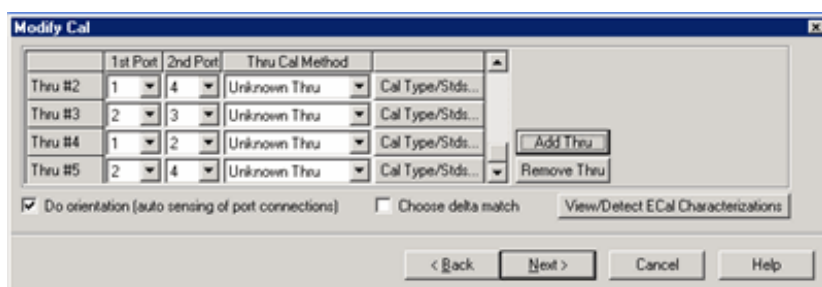

Modify Cal dialog box help

Thru #n

Lists the proposed Thru connections to be made during the calibration process. You can change these Thru connections to better suit your test setup.

- The proposed Thru connections are listed automatically.
- Additional Thru connections can be selected for higher accuracy. [Learn more.](#)

Add Thru

Click to add a Thru connection. [Learn more](#)

Remove Thru

Select a Thru by clicking the "Thru #N" field or the "1st Port / 2nd Port" field. Then click "Remove Thru". This selection is NOT available if the selected Thru is required for the calibration.

1st Port / 2nd Port

Click to select the two ports to be included in the Thru connection. The order of the port numbers is not critical.

Thru Cal Method

Lists the available Thru Cal methods for the specified port pairs.

[Learn about the Thru Cal Method choices.](#)

Cal Type/ Stds

Click to invoke the [View / Modify Properties of Cal dialog box](#)

Do orientation - Appears ONLY if an ECal module is selected for use.

When this box is checked (default) the PNA automatically senses the model and direction in which an ECal module port is connected to the PNA ports. If power to the ECal module is too low, it will appear as if there is no ECal module connected. If you use low power and are having this problem, clear this check box to provide the orientation manually.


Orientation occurs first at the middle of the frequency range that you are calibrating. If a signal is not detected, it tries again at the lowest frequency in the range. If you have an **E8361A** or **E836xB** PNA and do an ECal completely within 10 - 20 MHz OR 60 - 67 GHz, you may need to do orientation manually. There may not be sufficient power to orient the ECal module at those frequencies.

Choose delta match - Available when a Delta Match Cal is required.

- Check, then click **Next** to invoke the [Select Cal Set for Delta Match](#) dialog box.
- Clear - The Cal Wizard uses the [Global Delta Match Cal](#) if available.

View/Detect ECal Characterizations - Appears ONLY if an ECal module is selected for use.

Click to invoke the [View ECal Modules and Characterizations](#) dialog box. Displays a list of ECal modules that are connected to the PNA.

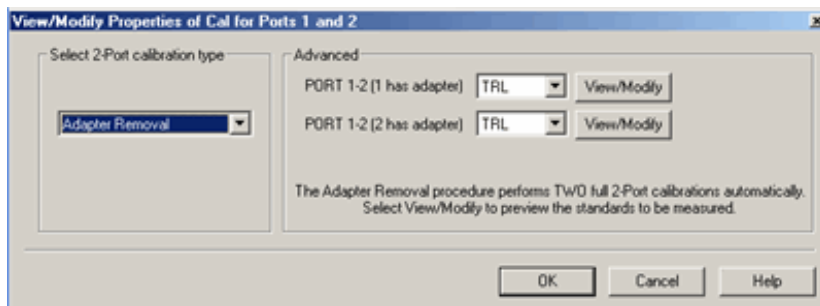

View/Modify Properties of Cal for Ports... dialog box help

Select calibration type

Another chance to change the Thru method.

[Learn about the Thru Cal Method choices.](#)


Advanced

Select the cal method for each connector of the Thru pair.

- [TRL](#) is only available if a TRL cal kit was selected for the lowest port number of the port pair.
- [QSOLT](#) Only available when "Defined Thru" or "Flush Thru" is selected.
"QSOLT 2 <= 1" refers to the receive port 2 and source port 1 (where reflection standards are connected).
- [Enhanced Response](#) Only available when "Defined Thru" or "Flush Thru" is selected. "EnhResp 2 <= 1" refers to the receive port 2 and source port 1.

View Modify Click to invoke the [Preview and Modify Calibration Selections](#) dialog box.

Note: Changes made to the Cal Kit through this dialog are **temporary** that last only for this calibration. To make permanent changes to the Cal Kit, perform [Advanced Modify Cal Kits](#).

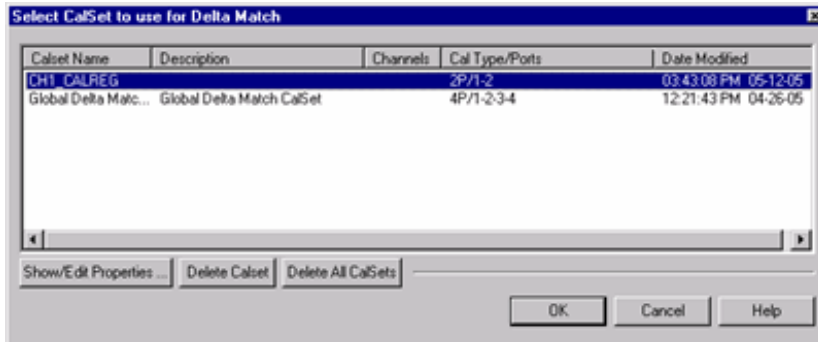

Select Cal Set for Delta Match dialog box help


This dialog box appears when a Delta Match Cal is required and [Choose delta match](#) was selected. [Learn more.](#)

Displays the Cal Sets that meet the requirements of the Delta Match Cal.

Select either a User Cal Set or [Global Delta Match Cal](#).

If there is no suitable choice for a Delta Match Cal:

1. Click **Cancel**, then **Cancel** again to quit the Cal Wizard.
2. Perform either a [Global Delta Match Cal](#) or a SOLT cal and save the result in a User Cal Set.
3. Start the Cal Wizard to re-initiate this calibration.
4. Select the Global Delta Match Cal or User Cal Set.

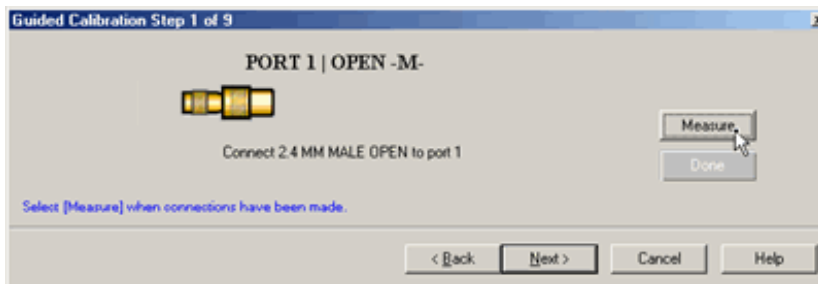

Calibration Steps dialog box help

Note: Beginning in PNA Rev. 6.0, calibration can be performed with External triggers. [Learn more.](#)

As each new cal step prompt appears, the traces are setup for the next standard measurement. Also, sweeps are triggered continuously until the Measure button is pressed. This way you can view the integrity of the standard connection.

Prompts for standards to be measured.


Measure Click to measure the standard.

Done Click **after** a standard is re-measured and all measurements for the calibration are complete.

Next Click to continue to the next calibration step. Does **NOT** measure the standard.

If a standard is NOT measured, a warning appears and **Done** will not be available after the last Cal step.

Note: SmartCal DOES allow you to measure calibration standards in any order. However, you must click **Next** and **Back** without measuring standards until you get to the standard you want to measure.

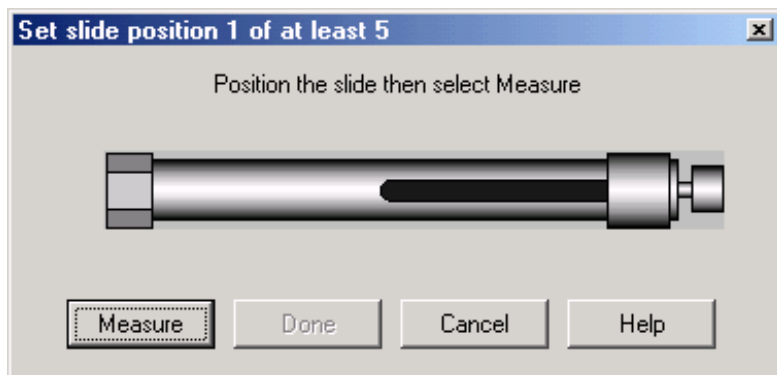

Sliding Load Measurement dialog box help

Allows you to measure the sliding load standard. [Learn more about the Sliding Load standard.](#)

To ensure an accurate calibration, carefully follow the instructions that were provided with your sliding load.

To Measure a Sliding Load:

1. Connect the sliding load to the measurement port.
2. Position the sliding element, then click **Measure**. Do not move the sliding element until measurement is complete.
3. Measure the sliding load for at least **five** and up to **seven** positions for best accuracy.

Note: The positions of the sliding element should cover the full length of the slide, but be unequally spaced to reduce the possibility of overlapping data points. Most sliding loads have marks for each slide position.

4. Click **Done** after the final measurement.
5. Remove sliding load from the measurement port.
6. Measure the remaining standards.



Specify delay dialog box help

This dialog appears ONLY when [Adapter Removal](#) or [Unknown Thru](#) calibrations are performed.

The following values were estimated from the measurement. Most of the time, they are adequate. However, for CW sweep or frequency sweep with large step sizes, the accuracy of the values may be improved.

Adapter delay To improve this value, measure and record the delay of the adapter with a dense step size. Enter that value here. The required precision value is the accuracy that is required to characterize the delay value.

Nominal phase offset (Waveguide ONLY). To improve this value, measure and record the phase offset of the Waveguide adapter with dense step size. Enter that value here.

When one connector is coax and the other connector is waveguide, the phase offset has an ambiguity of 180 degrees. For consistency, the estimate provided here is always between 0 and 180 degrees. You can change this estimate to any value between -180 degrees and +180 degrees.


For FCA calibrations, this dialog box appears twice: once for the input frequencies and once for the output frequencies. The values can be slightly different.

The [Calibration Complete](#) dialog box appears after all standards are measured.

Unguided Calibration

Programming Commands

The PNA displays the following dialog boxes when performing an Unguided calibration:

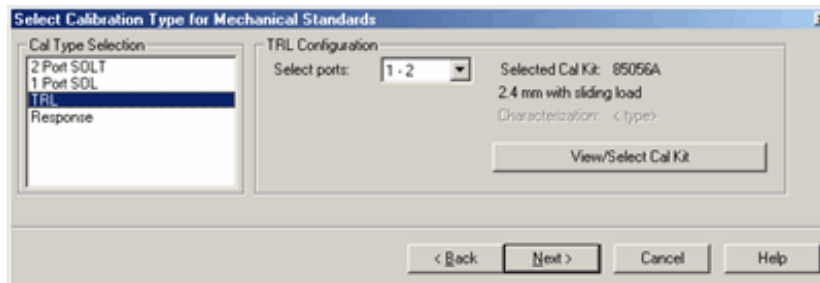

Select Calibration Type for Mechanical Standards dialog box help

Unguided calibration does **NOT** support cals greater than 2 ports or **E**Cal calibrations.

TRL Cal should be performed using [Guided Calibration](#).

Calibration Type Selection

- **2-Port SOLT**
- **1-Port SOL**
- **TRL** - NOT available on PNA models with more than 2 ports.
- **Response** - Reflection and Thru (if the active measurement is transmission)


Cal Configuration If not calibrating all PNA ports, specify which ports to calibrate.

Back Return to [Cal Wizard Begin](#) dialog. If checked, you can clear the [Save Preferences](#) checkbox to see the Begin page when the Cal Wizard begins.

View/Select Cal Kit Click to invoke the [Select Cal Kit dialog box](#).

Next Click to continue to [Measure Mechanical Standards](#) dialog box.

Note: If the DUT connector type has an impedance other than 50 ohms (waveguide = 1 ohm), change the system impedance before performing a calibration. See [Setting System Impedance](#).

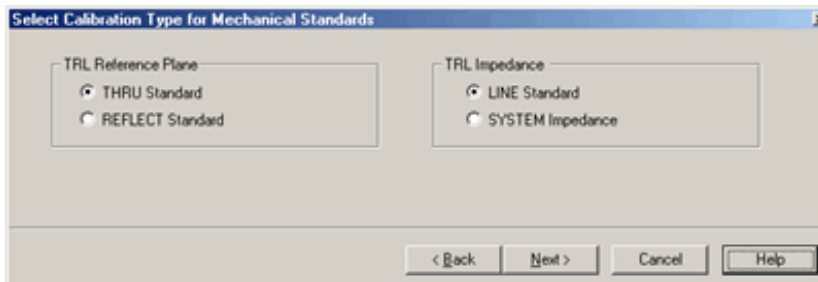

Select Cal Type dialog box help

This dialog box only appears if the selected Cal Type is TRL in the previous dialog box.

TRL Reference Plane Select which standard to use to establish the position of the measurement reference plane.

THRU Standard Select if the THRU standard is zero-length or very short.

REFLECT Standard Select if the THRU standard is not appropriate AND the delay of the REFLECT standard is well defined.


TRL Impedance

LINE Standard Specifies that the characteristic impedance of the LINE standard should be used as the system impedance. This ignores any difference between Offset Z0, Offset Loss, and System Z0.

SYSTEM Impedance Transforms the LINE standard impedance and loss to that of the system impedance for use with the calibration error terms. The TRL calibration will first compute the error terms assuming the LINE standard impedance is the system's characteristic impedance (same as previous LINE selection), then modify the error terms to include the impedance transformation. This should only be used with coax since the skin effect model used is a coaxial model.

[Learn how to change System Z0.](#)

To learn to substitute other calibration kits, see [Advanced Modify Cal Kits](#)

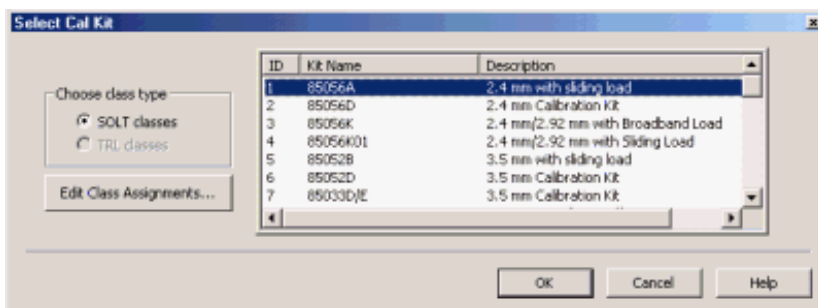


Select Cal Kit dialog box help

Displays the calibration kit files available for Unguided calibration. Select the desired calibration kit file and click **OK**.

Choose class type Unguided TRL calibration is NOT available on the 4-port PNA.

Edit Class Assignments Allows modification of the selected Cal Kit class assignments.

To learn to substitute other calibration kits, see [Advanced Modify Cal Kits](#)

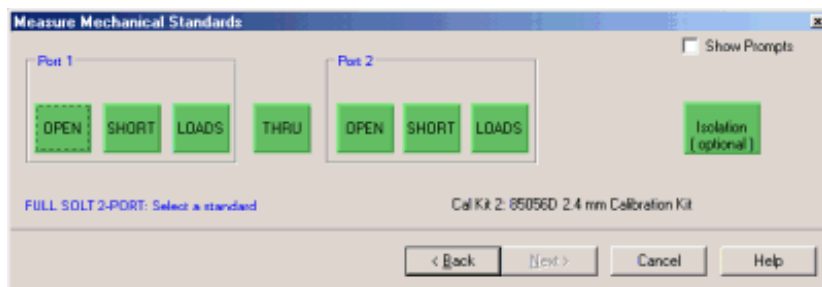


Measure Mechanical Standards dialog box help

Note: Beginning in PNA Rev. 6.0, calibration can be performed with External triggers. [Learn more.](#)

Displays the calibration kit file and standards required for the calibration.

- Standards may be connected and measured in any order.
- Connect the standard to the measurement port and click its associated green button. A check mark indicates the standard has been measured.
- If a standard type contains multiple standards, the [Multiple Standards dialog box](#) opens to display the multiple standards included in the calibration kit file.
- If a sliding load is included in the calibration kit file, the [Sliding Load dialog box](#) opens to perform the measurement with the standard.
- Reflection Response** Select EITHER Open or Short standard, then click **Next**.
- Isolation** Requires one load for each test port of the PNA. [Learn more about Isolation.](#) Use when your measurement requires maximum dynamic range (> 90 dB). See also [Isolation Portion of 2-Port Calibration.](#)
- Normalize** Available when performing a response cal for any measurement. After Normalize is pressed and the Cal is complete, the data trace is flat when the same physical connections are present on the port. This is similar to [Data/Memory](#), except that the response cal is [saved with Cal data](#) and can be applied to other like measurements. Data/Memory is still available after using Normalize. You would usually connect a THRU standard when calibrating a transmission measurement, and a SHORT standard when calibrating a reflection measurement.

Show Prompts Check to provide a reminder for the required connection when you click on the standard.

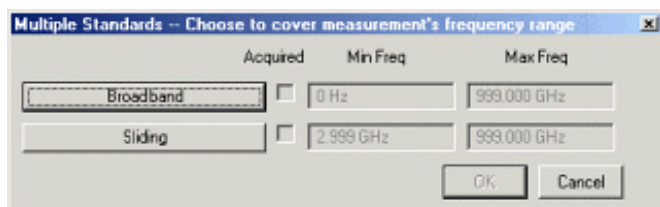

Multiple Standards dialog box help

Select the standards to be measured.

Note: You may see both male and female standards. The Unguided cal has no knowledge of the gender of your connector types. **Choose the gender of your DUT connector;** NOT the test port. Then click OK.


To modify this calibration class to show only one standard, on the Calibration menu, click **Advanced Modify Cal Kits**. Select the Cal kit and click **Edit Kit**. In **Class Assignment**, click **Edit**. Learn more about [Modify Calibration Class Assignments](#).

- Connect the standard to the measurement port and click its associated button. A check mark in the **Acquired** box indicates the standard has been measured.
- To cover the entire frequency range, you may need to measure more than one standard. The order in which the standards are measured is important. The last standard that is measured will override the others in respect to the frequency range of the standard definition. **Example:** In the case of measuring both a broadband load and a sliding load, you would measure the sliding load last. This is because the frequency range of the sliding load is a subset of the broadband load.

Learn more about [Modify Calibration Class Assignments](#)

Saving a Calibration

SmartCal, ECal, and Unguided Calibrations end with the following dialog box:

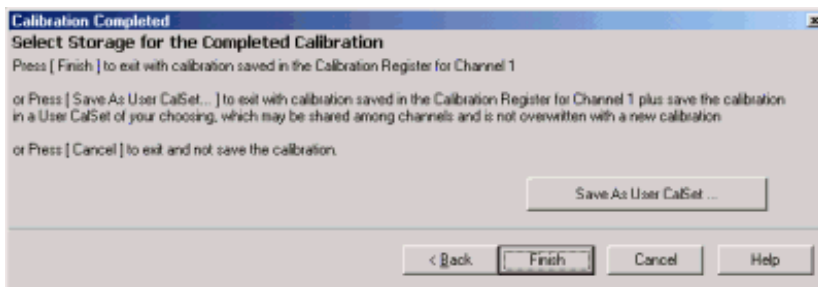

Calibration Completed dialog box help


Finish Save to the channel's calibration register.

Save As User Cal Set Invokes the [Save as User Cal Set dialog box](#) AND save to the channel's calibration register.

Cancel Calibration is NOT applied or saved.

Learn about [Calibration Registers](#).

Learn about [User Cal Sets](#)

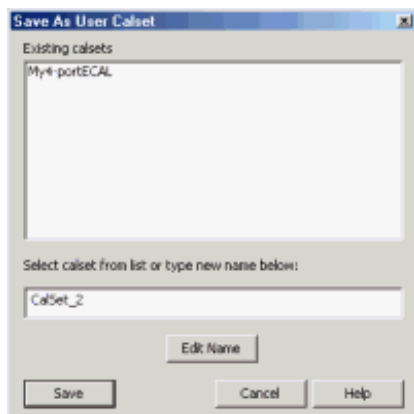

Save as User Cal Set dialog box help

Existing Cal Sets - Lists the Cal Set names saved on the PNA.

Select Cal Set from list or type new name below Specify a name for the new Cal Set. Either accept the suggested new name, type a new name, or select a name from the list to overwrite an existing name.

Edit Name If there is no keyboard, click to start the PNA typing tool that can be used from the PNA front panel.

Save Saves the Cal Set to the new Cal Set name.

Learn about [User Cal Sets](#)

Last modified:

21-Sep-2007	Added note about no TRL on 4-port PNAs
January 20, 2007	Added note about any order for SmartCal.
January 20, 2007	MX Added UI
Sept 18, 2006	MQ Major modifications for multiport

Select a Calibration Type

The following calibration types are available in the PNA.

Cal Type	Interface	Accuracy	Thru Methods allowed
TRL Family	SmartCal	Very High	NOT unknown or adapter removal
SOLT	Both	High	All
Enhanced Response	SmartCal	High	Defined Thru or Flush Thru
QSOLT (Quick SOLT)	SmartCal	Medium	Defined Thru or Flush Thru
1-Port Reflection	Both	High	Not Applicable
Open/Short Response	Unguided	Low	Not Applicable
Thru Response	Unguided	Low	Known Thru or Flush Thru

[Learn how to select a default Cal Type.](#)

Other Cal Types (Separate Topic)

- [Source and Receiver Power Cals](#)
- [FCA Scalar and Vector Mixer Cals](#)

[See other Calibration Topics](#)

TRL Family

Application: Used to accurately calibrate any pair of ports when calibration standards are not readily available.

Note: A [Delta Match Cal](#) is required to cal test ports that do not have a dedicated reference receiver.

- [Learn more about TRL family cal](#)
- For more information on modifying standards, see [Calibration Standards](#).

Calibration Method: [SmartCal](#)

General Accuracy: Very High

Standards Required: THRU, REFLECT, LINE or similar combination

Systematic Errors Corrected:

- Directivity
- Source match
- Isolation

- Load match
 - Frequency response transmission tracking
 - Frequency response reflection tracking
-

SOLT

Application: Used to accurately calibrate any number of ports.

General Accuracy: High

Calibration Method: [SmartCal](#), [Unguided Calibration](#), [ECal](#)

Standards Required: (SHORT, OPEN, LOAD, THRU) or ECal module

Systematic Errors Corrected (on all ports):

- Directivity
 - Source match
 - Isolation
 - Load match
 - Frequency response transmission tracking
 - Frequency response reflection tracking
-

Enhanced Response

Application: Used to calibrate two ports when measurements in only one direction (forward OR reverse) are required. Measurements are faster because a second sweep is NOT required. It is also much quicker to perform than SOLT when using a mechanical cal kit. ECal can also be used.

- Used ONLY for 2-port calibrations.
 - Reflection Standards (OPEN, SHORT, LOAD) are connected to the source port to be calibrated.
 - [Defined THRU](#) or [Flush THRU](#) standard is connected between the port pair.
 - Enhanced Response can be selected as the default Cal Type using [Cal Preferences](#).
-

General Accuracy: High

Calibration Method: [SmartCal](#), [ECal](#)

Standards Required: (SHORT, OPEN, LOAD, [Defined THRU](#) or [Flush THRU](#))

Systematic Errors Corrected:

- Directivity (source port)
 - Source match (source port)
 - Isolation
 - Load match (receiver port)
 - Frequency response transmission tracking (receiver port)
 - Frequency response reflection tracking (source port)
-

Procedure:

How to select Enhanced Response Cal using a Mechanical Cal Kit:

1. From the Cal Wizard, select **SmartCal**
2. At the 'Select Ports for Guided Calibration' page, choose **2 Port Cal**.
3. At the 'Select DUT Connectors' page, choose your DUT connector, then the cal kit for each port, check [Modify Cal](#), then click **Next**.
4. On the 'Modify Cal' dialog, click **Cal Type / Stds**.
5. On the 'View / Modify Properties' dialog, select **Defined Thru** or **Flush Thru**. For Calibration Type, select either:
 - **EnhResp 2 <= 1** (receive port 2 and source port 1)
 - **EnhResp 1 <= 2** (receive port 1 and source port 2)

How to select Enhanced Response Cal using an ECal Module:

1. From the Cal Wizard, select **ECal**
 2. At the 'Select Ports for Guided Calibration' page:
 - a. choose **2 Port Cal**
 - b. click **View / Select ECal Module**, then confirm that the DUT connectors exactly match either the ECal module connectors (Factory characterization) or a [User Characterizations](#).
 - c. check **Show Advanced Settings**, then click **Next>**
 3. On the 'Advanced Settings' dialog, click **Cal Type / Stds**
 4. On the 'View / Modify Properties' dialog, select **Defined Thru** or **Flush Thru**. For Calibration Type, select either:
 - **EnhResp 2 <= 1** (receive port 2 and source port 1)
 - **EnhResp 1 <= 2** (receive port 1 and source port 2)
-

QSOLT (Quick SOLT)

Application: Used to quickly calibrate any number of ports. Developed specifically for use with [external multiport test sets](#).

Note: A [Delta Match Cal](#) is usually required to do a QSOLT cal when both test ports of the Thru path share the same reference receiver, which is often the case with multiport test sets.

- Reflection Standards (OPEN, SHORT, LOAD) are connected to only ONE of the ports to be calibrated. The lower port number of the ports to be calibrated is selected by default. This can be changed through the [Modify Cal / Cal Type](#) setting.
- [Defined THRU](#) or [Flush THRU](#) standards are connected from the reflection standard port to the remaining ports to be QSOLT calibrated. (Not all ports to be calibrated must be done using QSOLT).
- Based on TRL math, QSOLT calculates the reflection error terms for the unmeasured ports.
- QSOLT can be selected as the default Cal Type using [Cal Preferences](#).

General Accuracy: Not as high as SOLT

Calibration Method: [SmartCal](#), [ECal](#)

Standards Required: (SHORT, OPEN, LOAD, [Defined THRU](#) or [Flush THRU](#))

Systematic Errors Corrected:

- Directivity
- Source match
- Isolation
- Load match
- Frequency response transmission tracking
- Frequency response reflection tracking

Procedure:

How to select QSOLT using a Mechanical Cal Kit:

1. From the Cal Wizard, select **SmartCal**
 2. At the 'Select Ports for Guided Calibration' page, choose **2 Port Cal**.
 3. At the 'Select DUT Connectors' page, choose your DUT connector, then the cal kit for each port, check [Modify Cal](#), then click **Next**.
 4. On the 'Modify Cal' dialog, click **Cal Type / Stds**.
 5. On the 'View / Modify Properties' dialog, select **Defined Thru** or **Flush Thru**. For Calibration Type, select either:
 - **QSOLT 2 <= 1** (receive port 2 and source port 1)
 - **QSOLT 1 <= 2** (receive port 1 and source port 2)
-

1-Port (Reflection)

Application: Used to accurately calibrate any single test port for reflection measurements only.

Calibration Method: [SmartCal](#), [Unguided Calibration](#), [ECal](#)

General Accuracy: High

Standards Required: (SHORT, OPEN, LOAD) or ECal module

Systematic Errors Corrected:

- Directivity
- Source match
- Frequency response reflection tracking

Open / Short Response

Application: Used to quickly calibrate any single test port for reflection measurements only.

Calibration Method: [Unguided Calibration](#)

General Accuracy: Low

Standards Required: OPEN or SHORT

Systematic Errors Corrected:

Frequency response reflection tracking

Thru Response (Isolation Optional)

Application: Used to quickly calibrate any pair of test ports for transmission measurements only.

Isolation is not usually recommended. Learn more about [Isolation](#)

Calibration Method: [Unguided Calibration](#)

General Accuracy: Low

Standards Required: THRU

Isolation: One LOAD for each PNA test port.

Systematic Errors Corrected:

- Frequency response reflection tracking
- Isolation

Last modified:

12-Oct-2007 Edits to Enhanced Response

23-Feb-2007 Added Enhanced Response

9/12/06 Added QSOLT

Using Calibration Sets

- [What are PNA Cal Sets](#)
- [Cal Registers and User Cal Sets](#)
- [How to Manage and Apply Cal Sets](#)
- [Examples of Cal Set Usage](#)
- [Archiving Cal Sets using .cal files](#)

[See other Calibration Topics](#)

What are PNA Cal Sets

At the completion of a calibration, all calibration data is stored to a Cal Set. The Cal Set can be applied later to any channel that has the same stimulus settings as the Cal Set, thereby saving the time it takes to perform another calibration. The following data is saved to a Cal Set:

- Name
- Cal Set Description
- Cal Set Attributes - stimulus settings, cal type, port association
- Standards data
- Error term data
- GUID (**G**lobally **U**nique **I**Dentifier)

Cal Registers and User Cal Sets

There are two types of Cal Sets:

- **Cal Registers** (channel specific)
- **User Cal Sets**

Calibration data is automatically saved to a Cal Register at the end of every calibration. You can also choose to save the cal data to a User Cal Set.

Calibration Registers

New with PNA Release 5.0, Calibration Registers are designed to simplify calibrations for most users. When a calibration is complete, the data is automatically saved to the channel's Cal Register, overwriting (or [appended to](#)) the previous cal data stored in that register. This concept is similar to previous Agilent Vector Network Analyzers.

- Every channel has ONE dedicated Cal Register. They are named CHn_CALREG, where **n** is the channel number. The name cannot be changed.
- Cal Registers are more volatile because they are overwritten (or [appended](#)) each time a calibration is performed on that channel. The Cal data is always saved, but only temporarily.
- Cal Registers can be applied to other measurements, but ONLY on the same channel as the Cal Register.

User Cal Sets

At the end of a calibration, you can choose to also save cal data to an existing or new User Cal Set.

- User Cal Sets can be applied to any number of channels simultaneously.
- User Cal Sets are named by you for easy identification.
- You can have an unlimited number of User Cal Sets.
- At any time, you can copy Cal Register data to create a User Cal Set. See [Cal Set Properties](#).

Appending Data in a Cal Set

At the end of a calibration, data is saved to the channel's Cal Register and, if you choose, to an existing User Cal Set. The PNA attempts to append new error terms to a non-empty Cal Set. The existing Cal Set data is completely overwritten UNLESS the new data can coexist with the existing data according to the following two rules:

- The stimulus settings of the new data must exactly match the existing data.
- The new cal must involve different ports from the existing cal.

For example:

Case 1 - An existing Cal Set contains a full 2-port cal between ports 1 and 2. Using the same stimulus settings, you perform a 1-port cal on port 3. At the end of the cal, you click [Save As User Cal Set](#) and select the existing full 2-port User Cal Set.

Result: The 1-port cal is appended to the 2-port User Cal Set. There is NO overlap between them.

Case 2 - Same situation as Case 1, except the 1-port cal is performed on port 1.

Result: The Cal Set will contain a 1 port cal on port1 and a 1 port cal on port 2. The overlapping tracking terms are removed rendering the original full 2 port cal invalid.

How to Manage and Apply Cal Sets



The PNA attempts to apply a Cal Set, and turn error correction ON, for ALL of the measurements on the active channel. This may not always be possible. For example, suppose a channel contains both S11 (reflection) and S21 (transmission) measurements. If a Cal Set that contains only an S11 **Cal Type** is applied to that channel, the Cal Set does not contain the error terms to correct the S21 measurement. Error correction is turned ON for the S11 measurement and NOT turned on for the S21 measurement.


There are two ways to apply an existing Cal Set (Cal Register or User Cal Set) to a measurement:

1. Recalling an Instrument State with Cal data ([.cst file](#)) - A .cst file contains an Instrument State with all measurement attributes AND a 'pointer' to the Cal Set that was used to calibrate the measurement. Before saving a .cst file, be sure that a User Cal Set (NOT a Cal Register) is being used for the measurement. Because Cal Registers are automatically overwritten when a new calibration is performed, it is likely that the Cal Register data will change before the .cst file is recalled.
2. Create a new measurement and select a Cal Set to apply to the active channel.

Note: NEVER copy or modify Cal Sets from Windows Explorer or other applications. Cal Sets should only be accessed through the PNA Application.

How to select and apply a Cal Set to the active channel

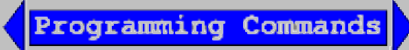Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Cal Set
For PNA-X models	
1. Press CAL 2. then [Manage Cals] 3. then [Cal Set]	1. Click Response 2. then Cal 3. then Manage Cals 4. then Cal Sets

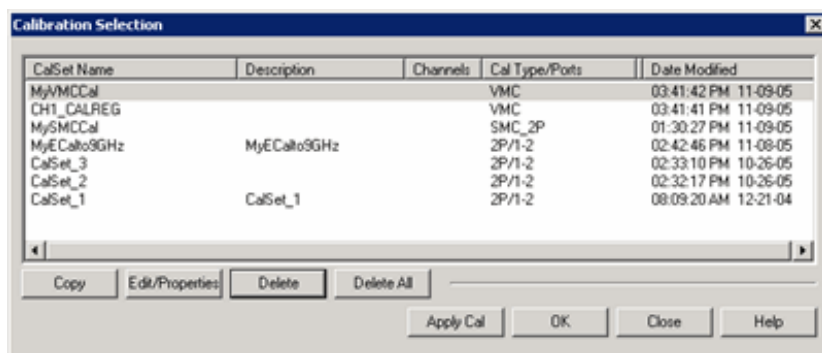

Calibration Selection dialog box help

This dialog box allows you to manage and apply Cal Sets.

Although the number of Cal Sets you can have is limited only by the amount of PNA memory, it is considered unusual to have more than about 10 existing Cal Sets, or one current Cal Set for every unique channel setup.

Old Cal Sets (with 'stale' data) should be deleted or overwritten.

The active channel's Cal Register always appears, even if empty. Cal Registers that belong to other channels appear in the list of Cal Sets only if the channel exists, and only if they contain data.

- Learn about [Cal Registers](#).
- Learn how to [View the Error Terms of a Cal Set](#).

To apply a Cal Set to the active channel, click a row to select that Cal Set, then click Apply Cal.

Note: A Cal Set must have been generated from the same [measurement class](#) as the active channel in order for it to be Applied.

Columns click a heading to sort by that column

Cal Set Name Name to identify the Cal Set.

Description User-settable text to further identify the Cal Set.

Channels Channel numbers that are currently using this Cal Set. A blank entry means it is not currently in use.

CalType / Ports Type of Cal contained in the Cal Set. [Learn about applying appropriate Cal Types](#).

Cal Type Abbreviations:

1P, 2P, 3P, 4P... - Full n-Port calibrations

R - Response (instead of ports, shows the measurement type that it corrects.)

ER/x-y [Enhanced Response](#), where **x** is the receive port; **y** is the source port.

VMC [Vector Mixer Cal](#)

SMC [Scalar Mixer Cal](#)

Modified Date and time the Cal Set was last modified.

Buttons

Copy Invokes the [Save as User Cal Set](#) dialog box. Type a name for the copy of the selected Cal Set data.

Show / Edit Properties Invokes the Cal Set Properties dialog box. This allows you to view all of the Cal Set properties and create a **duplicate** User Cal Set from an existing User Cal Set or Cal Register.

Delete Permanently deletes the Cal Set after you choose OK to a warning prompt.

Delete All Permanently deletes ALL listed Cal Sets and Cal Registers after you choose OK to a warning prompt.

Apply Cal Applies the selected Cal Set to the active channel. If the stimulus settings of the Cal Set and channel are different, [a choice must be made](#).

Unselect Available ONLY if the selected Cal Set is being used by the active channel. Click to 'Un-apply' the Cal Set, then click **Close** to exit with the Cal Set un-applied.

OK Always APPLIES THE SELECTED CAL SET to the active channel, then closes the dialog box.

Close Exit the dialog box. Performs no further action.

Calset Properties

Name:

Description:

Name: CH1_CALREG
 Description:
 GUID: {00000001-0000-0000-0000-000000000000}
 Last Modified: Aug 23, 2004 at 3:30:09 PM

Domain: Frequency
 Points: 201
 IF BW: 35000
 Sweep Type: Linear
 Sweep Mode: Analog
 Alt Sweep: Chop

Frequency:
 Range0: 20.000000 - 5000.000000 Mhz
 Range1: 20.000000 - 5000.000000 Mhz

Power:
 Port 1: -17.000000 dBm
 Port 2: -17.000000 dBm

Src Attenuators:

Cal Set Properties dialog box help

Allows you to view all of the Cal Set properties and create a **duplicate** User Cal Set from an existing User Cal Set or Cal Register.


Columns click a heading to sort by that column

Name Edit name of the User Cal Set. You can NOT change the name of a Cal Register.

Description Descriptive text to further identify the Cal Set.

Cal Set Properties Lists descriptive information and stimulus conditions of the Cal Set. Learn how to [View the Error Terms of a Cal Set](#).

Stimulus Setting Different between Cal Set and Measurement

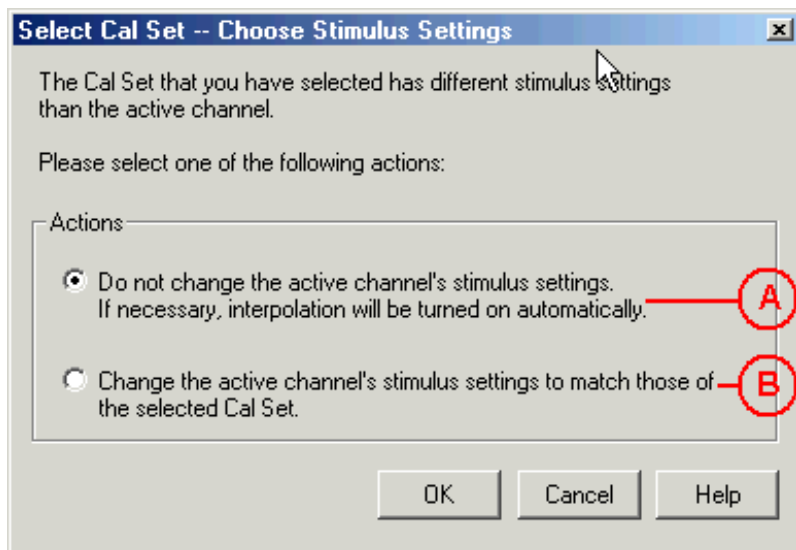

Select Cal Set -- Choose Stimulus Settings dialog box help

The Cal Set contains the channel stimulus settings that were in place when the Cal Set was saved. This dialog appears when the Cal Set channel settings are different than those of the channel to which the Cal Set is being applied. Choose between the following options.. (See above image).

- A. Keep the Active Channel Stimulus settings. Interpolate if possible.
 - If the Cal Set frequency range is greater the active channel, then Interpolation will be turned ON. Learn more about [Interpolation Accuracy](#)
 - If the Cal Set frequency range is less than the active channel, then this option is not available.
- B. Keep the Cal Set Stimulus settings. The Active Channel stimulus setting are changed.

OK Make the change.

Cancel Cal Set will NOT be applied.

Examples of Cal Set Usage

The following examples show how Cal Sets increase flexibility and speed in making analyzer measurements.

- [Using one User Cal Set with many Channels](#)
- [Using one Measurement with many Cal Sets](#)

Using one User Cal Set with many Channels


It is possible to do one calibration, then apply it to several channels.

An example:

During a manufacturing process, you may have many calibrated channels. You may wish to continuously cycle through the measurements and examine them individually. Occasionally, you may wish to refresh the calibration without having to recreate all the measurement state files.

Here is how: Examine the stimulus settings for each channel. Then make the User Cal Set stimulus range a super-set of the whole group. Each channel can then use the same User Cal Set. Some calibrations will be interpolated. **Note:** Make sure that [interpolation](#) is turned on.

Notice in the following image, Cal Set 78 is used on more than one channel, in this case Channel 5 and 16 .

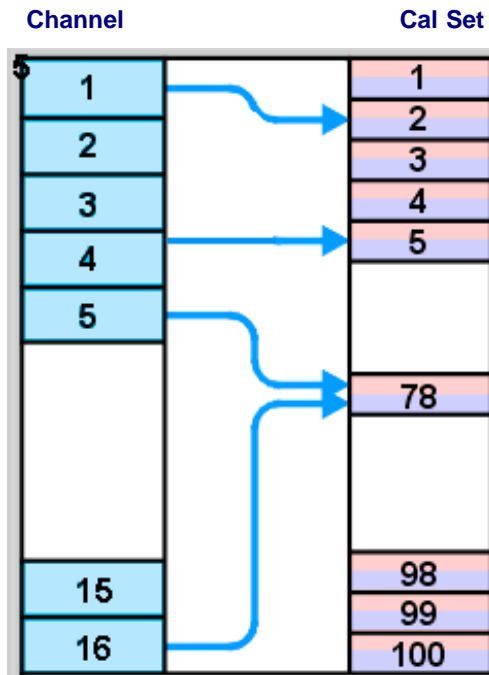

Using one Measurement with many Cal Sets

The drawback with having one very large User Cal Set associated with many instrument states could be a loss of accuracy due to interpolation. In such cases, consider using one User Cal Set for each stimulus setting.. The stimulus conditions can then be changed for a channel by applying different User Cal Sets. Other settings (window setups, measurement definitions, scaling, limits, markers) will not change. This may result in faster state changes than if you saved and recalled *.cst files for each set of stimulus conditions.

Example #1: An amplifier needs to be measured at several input power levels. Calibrate at several power levels and save each calibration in a separate User Cal Set. Then, apply the User Cal Sets to the single measurement consecutively.

Example #2: Making an S21 Measurement, you need to measure both wide span and narrow span characteristics of the device. One Cal Set covers the wide span setup; another the narrow span setup.

Archiving Cal Sets using .cal files

Because User Cal Sets can easily be deleted, provide extra backup by also saving your calibration as a .cal file ([see saving a .cal file](#)).

Example:

One person performs a calibration, names and saves it as a User Cal Set. This Cal Set is available for any other

person to use. A second user could accidentally delete or modify the User Cal Set requiring the originator to repeat the calibration.

Security can be provided for calibration data by saving the Cal Set to a **.cal** file. At a later time, the .cal file could be recalled and the original calibration restored.

Last modified:

9/12/06 Added link to programming commands


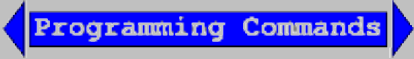
Error Correction and Interpolation

Error Correction and Interpolation settings work together to provide you with the highest level of calibration accuracy possible.

- [How to set Error Correction](#)
- [Error Correction](#)
- [Viewing Correction Levels](#)
- [How to set Interpolation](#)
- [Interpolation and Accuracy](#)

[See other Calibration Topics](#)

How to set Error Correction

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Correction ON/off
For PNA-X models	
1. Press CAL 2. then [Correction ON/off]	1. Click Cal 2. then Correction ON/off

Error Correction

The Error Correction ON setting means that the calibration error terms are applied to the measurement. Error Correction is automatically turned ON when a calibration is performed or if a Cal Set is applied to a measurement. The PNA attempts to turn error correction ON for ALL of the measurements on the active channel. This may not always be possible when applying Cal Sets. For more information, see [Applying Cal Sets](#).

When full 2-port error correction is ON, both forward and reverse sweeps are required to gather all 12 error terms, even if only one reflection measurement is displayed. This may result in a higher measurement speed than expected. [Learn more.](#)

You can always turn Error Correction OFF for the active measurement by clicking Correction OFF. The PNA will

turn Error Correction OFF automatically when making stimulus changes [under some conditions](#). To turn correction back ON, click **Correction ON**. Then:

 
- If Interpolation can NOT be performed, a dialog box will ask if you would like to [change the stimulus settings](#) to those of the applied calibration. Click OK or Cancel.
- If Interpolation can be performed, the stimulus setting will change and correction turned ON.

Viewing Correction Level

The correction level provides information about the accuracy of the active measurement. Correction level notation is displayed on the status bar for different calibration types like response, full 2-port, TRL, or power calibration.

To View Correction Levels:

In the **View** menu, click **Status Bar**. The status bar appears and displays the following items:



- a. Active Channel
- b. Measurement parameter
- c. Correction Level (see description below)
- d. Calibration type

Correction Level		Accuracy
C	Full	Highest
C*	Interpolated	Uncertain
CΔ	Changed	Uncertain
No Cor	No Correction	Lowest

C Full Correction

Full Correction level is displayed immediately after a calibration is performed or when a valid Cal Set is applied. If you require optimum accuracy, avoid adjusting analyzer settings after calibration so your measurement remains at this level.

C* Interpolated Correction

"C star" appears in the status bar when a measurement is being interpolated. See Interpolation (above) and [Interpolation Accuracy](#).

CD Changed Settings



"C-delta" appears in the status bar when one or more of the following stimulus settings change. The resulting measurement accuracy depends on which parameter has changed and how much it has changed. For optimum accuracy, recalibrate using the new settings.

- [Sweep time](#)
- [IF Bandwidth](#)
- [Port power](#)
- [Stepped sweep enabled/disabled](#)

No Corr No Correction

The following will cause the PNA to turn Error Correction OFF for the channel:

- Decrease the start frequency
- Increase the stop frequency
- Change start frequency, stop frequency, or number of points with Interpolation OFF.
- [Change sweep type](#)

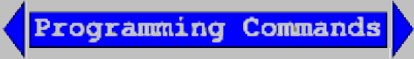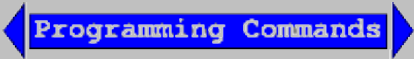How to set Interpolation	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Interpolation ON/off
For PNA-X models	
1. Press CAL 2. then [More] 3. then [Interplotion ON/off]	1. Click Cal 2. then More 3. then Interplotion ON/off

Interpolation

Calibration interpolation adjusts calibration error terms to match changes to the following settings that you make AFTER a calibration is performed or a [Cal Set applied](#).

The Interpolation **ON** setting means that interpolation is **enabled** for the active measurement. This does not necessarily mean that the measurement is interpolated. When enabled (ON), if interpolation becomes necessary because you change any of the following stimulus settings, **then** interpolation will be applied. When stimulus settings change while interpolation is OFF, interpolation is NOT applied but instead, error correction is turned OFF.

Interpolation occurs (if enabled) when you change any of the following settings:

- Start frequency increased
- Stop frequency decreased
- Number of points

Note: Decreasing the start frequency, or increasing the stop frequency will always turn correction **OFF**. (Exception: [Power Calibration](#) DOES extrapolate to the start and stop frequencies.)

Interpolation Accuracy

When a measurement is interpolated, the accuracy of the measurements cannot be predicted. It may be affected significantly or not at all. Identifying measurement errors in these cases must be determined on a case-by-case basis.

Significant measurement inaccuracy WILL occur when the phase shift between measurement points increases more than 180 degrees. The PNA will incorrectly interpolate the new phase data. For more information, see [phase accuracy](#).

In general, the chances of significant inaccuracy increases when interpolating measurements under the following conditions:

- when increasing, rather than decreasing, the frequency span between measurement points.
- when frequency span between measurement points becomes much greater.
- when measurement frequencies are very high, especially above 10 GHz.

Last modified:

December 3, 2007 MX Added UI

Sept 12, 20/06 Added link to programming commands

Calibration Thru Methods


- [What is a Non-Insertable Device](#)
- [Choosing a Thru Method](#)
 - [Flush Thru](#)
 - [Adapter Removal](#)
 - [Defined Thru](#)
 - [Unknown Thru](#)
- [ECal Thru Method Choices](#)

[Other Cal Topics](#)


What is a Non-Insertable Device

To understand the Thru method choices, you must first understand what is meant by "Non-Insertable device". These definitions also apply to ECal modules. Substitute "ECal module" for "device". Then see [ECal Thru Method Choices](#).

A **non-insertable device** is one whose connectors could NOT mate together. They either do not have the same type of connector or they have the same gender. This also means that the test port cables would not mate together, as in the following diagram.

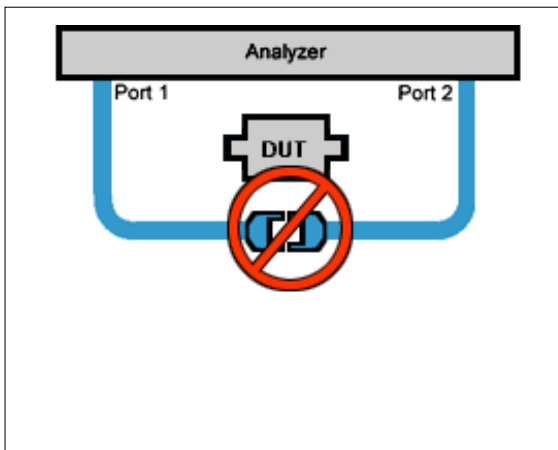

An **insertable device** is one whose connectors could mate together. They have the same type of connector and opposite, or no, gender. This also means that the test port cables would mate together, as in the following diagram.

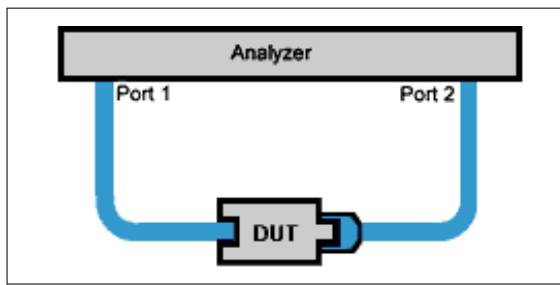

Choosing a Thru Method of Calibration

The Thru method is selected from the Cal Wizard. Select the **Modify** checkbox in the [Select DUT Connectors and Cal Kits](#) dialog box.

Notes:

For ECal, the following choices have different meanings. See [THRU methods for ECal](#).

For 4-port calibration, see [How can we measure only 3 THRU connections?](#)

Choice for Insertable Devices: FLUSH Thru (also known as Zero-length Thru)

When calibrating for an insertable device, the test ports at your measurement reference plane connect directly together. This is called a zero-length THRU, or Flush THRU meaning that the THRU standard has zero-length: no delay, no loss, no capacitance, and no inductance. Your calibration kit may not have a physical THRU standard because it is assumed you have an insertable device and will be using a zero-length THRU.

Choices for Non-Insertable Devices

The following methods calibrate for a non-insertable device:

- [Adapter Removal](#) Accurate, but least convenient.
- [Defined Thru](#)
- [Unknown Thru Cal](#) **Preferred method.**
- Swap-Equal-Adapters Method is a valid choice, but NOT included in the PNA firmware.

Adapter Removal Calibration

This method is potentially very accurate. However, it requires many connections which increases the chances of inaccurate data.

Two full 2-port calibrations are performed: one with the adapter connected at port 1, and the other with the adapter connected to port 2. The result of the two calibrations is a single full 2-port calibration that includes accurate characterization and removal of the mismatch caused by the adapter.

Performing an Adapter Removal Cal requires:

- a THRU adapter with connectors that match those on the DUT.

- calibration standards for both DUT connectors.

To select Adapter Removal during a SmartCal, select the **Modify** checkbox in the [Select DUT Connectors and Cal Kits](#) dialog box. The Cal Wizard will guide you through the steps.

Learn how to perform an [Adapter Removal Cal using ECal](#).

Defined Thru (also known as **Known Thru**, **Cal Kit Thru**, **ECal Thru**, **Characterized Thru**)

Defined Thru uses the THRU definition that is stored in the Cal Kit file or ECal module. The THRU standard may have worn over time, making it not as accurate as when it was new. Defined Thru is usually more accurate than Adapter Removal, but not as accurate as [Unknown Thru](#) method.

Notes

- If performing an ECal, this is the THRU standard in the ECal Module.
- If Defined Thru appears as a potential THRU method in the [SmartCal Wizard](#), this means that there is a defined THRU standard in the selected Cal Kit. This could be a [Zero-length Thru](#). The SmartCal Wizard will prompt you to connect the required standard when appropriate.

To define a THRU standard in a Cal Kit (not ECal module):

1. From the PNA Menu, click Calibration, [Advanced Modify Cal Kits](#).
2. Select the Cal Kit
3. Click Edit Kit
4. Click Add
5. Select THRU
6. Complete the dialog box.

The next time you perform a Guided Cal, this Defined THRU standard will be available if the DUT connector types match the THRU standard.

Unknown Thru Cal

Unknown Thru Cal is the **preferred** THRU method of calibrating the PNA to measure a non-insertable device.

The Unknown Thru calibration is also known as **Short-Open-Load-Reciprocal Thru** (SOLR) calibration.

- Very easy to perform.
- Better accuracy than [Defined Thru](#) and usually better than [Adapter Removal](#).
- Does not rely on existing standard definitions that may no longer be accurate.
- Causes minimal cable movement if the THRU standard has the same footprint as the DUT. In fact, the DUT can often BE the THRU standard.

The Unknown Thru Process

SmartCal guides you through the process. Although the following process describes ports 1 and 2, Unknown Thru can be performed on any two ports when using a multiport PNA.

1. Perform 1-port cal on port 1.
2. Perform 1-port cal on port 2.
3. Connect Unknown Thru between ports 1 and 2.
4. Measure Unknown Thru.
5. [Confirm Estimated Delay](#). This estimate may be wrong if there are too few frequency points over the given frequency span. You can measure the delay value independently and enter that value in the dialog box.

The Unknown Thru Standard

- Can have up to about 40 dB of loss and long electrical length.
- Must be reciprocal: $S_{21}=S_{12}$.
- Must know the phase response to within 1/4 wavelength (see step 5 above).
- Can be the DUT if it meets these conditions.

Unknown Thru Limitations

- Unknown Thru is NOT supported during a TRL calibration.
- Beginning with PNA code release 5.25, Unknown Thru CAN be performed using a 4-port PNA-L that does NOT have a [reference receiver for each test port](#). However, a [Delta Match Calibration](#) is usually required before the Unknown Thru is measured.
- Unknown Thru is NOT supported on E8801A, E8802A, and E8803A.

ECal Thru Method Choices

When the ECal module connectors exactly match the DUT connectors, choose from the following THRU methods:

ECal Thru as Unknown Thru [Learn more about Unknown Thru](#).

- Measures the THRU state of the ECal module as an Unknown Thru.
- Very accurate and easy.
- May require a [Delta Match Cal](#).

Flush Thru (zero-length Thru) [Learn more about Flush Thru](#)

- Requires an insertable ECal module / DUT.
- Remove the ECal module and connect the two reference planes directly together for a zero-length thru.
- Accurate, but not as easy as 'ECal Thru as Unknown Thru'.

ECal (Defined Thru)

- Measures the THRU state of the ECal module.
- Very easy, but not very accurate.

Unknown Thru


- Remove the ECal module.
- Then connect a Thru adapter to be measured as Unknown Thru.
- May require a [Delta Match Cal.](#)

When the ECal module connectors do NOT exactly match the DUT connectors, choose from the following two methods:

Adapter Removal

- Can be used with ECal when your DUT is [NON-insertable](#). However, the ECal module MUST be insertable, and the adapter connectors must exactly match the connectors of the DUT as in the following diagram.

Note: With PNA release 4.8, adapter removal now performs 2-port measurements on both sides of the adapter. It previously performed 2-port measurements on one side and 1-port measurements on the other. This improves the accuracy of the adapter removal calibration.

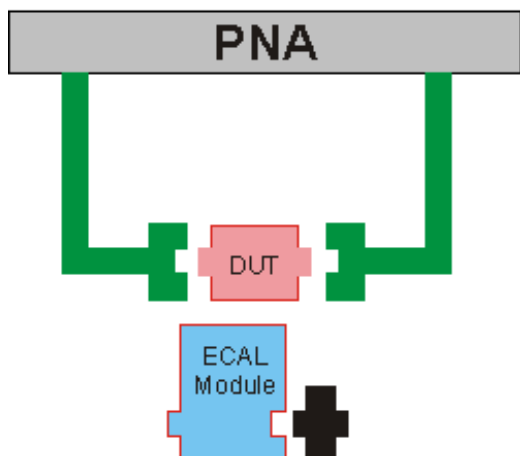

ECal User Characterization

In cases when adapter removal cannot be performed, ECal [User Characterization](#) is ALWAYS possible if you have the right adapters. A User Characterization is performed once and stored in the ECal module. However, accuracy is compromised every time you remove, then reconnect, the adapter with the ECal module.

Accurate Measurement Calibrations

Calibration accuracy is affected by the type of calibration, quality of the calibration standards, and the care with which the calibration is performed. This section provides additional information about how to make accurate calibrations.

- [Measurement Reference Plane](#)
- [Effects of Using Wrong Calibration Standards](#)
- [Data-based versus Polynomial Calibration Kits](#)
- [Accuracy Level of Interpolated Measurement](#)
- [Effects of Power Level](#)
- [Using Port Extensions](#)
- [Isolation Portion of 2-Port Calibration](#)
- [Choosing a Thru Method](#)


Learn how to [determine the validity of your calibration](#).

[See other Calibration Topics](#)

Measurement Reference Plane

Most measurement setups will NOT allow you to connect a device under test directly to the analyzer's front panel test ports. More likely, you would connect your device to test fixtures or cables that are connected to the analyzer.

For the highest measurement accuracy, you should calibrate at the points where you connect your device. This is called the measurement reference plane (see graphic). If you calibrate at these points, the errors associated with the test setup (cables, test fixtures, and adapters used between the analyzer ports and the reference plane) are measured and removed in the calibration process.

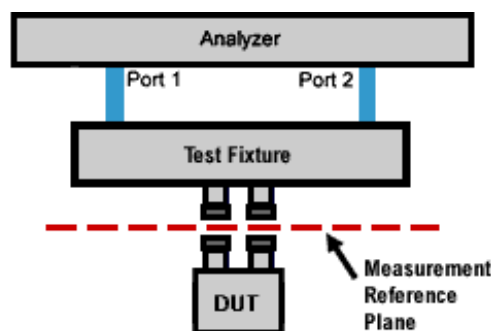

Effects of Using Wrong Calibration Standards

Normally, a calibration is performed using a calibration kit that contains standards with connectors of the same type and sex as your device under test.

However, your calibration kit may not have the same connector type as your device. For example, suppose your device has 3.5mm connectors, but you have a Type-N calibration kit. So, you use an adapter to connect the Type-N standards to the 3.5mm test port. Because the adapter is part of the calibration and NOT part of the test setup, this will result in significant errors in your reflection measurements.

Data-based versus Polynomial Calibration Kits

The [Select DUT Connectors and Cal Kits](#) dialog box offers a data-based model and a polynomial model for the newest high-frequency cal kits. See PNA Accessories. The data-based models provide higher accuracy for describing calibration standards than the polynomial models. It is RECOMMENDED that the data-based model be used if the most accurate results are desired.

	Data-Based Model	Polynomial Model
How accurate is the model?	Provides highest calibration accuracy. Eliminates the errors that can be the result of polynomial model approximations.	Provides high calibration accuracy.
How does the model define calibration standards?	Uses S-Parameter measurements.	Uses traditional four-term polynomial calibration standard modeling parameters.
How do I manually edit the definitions of the calibration standards when using the model?	Use the Advanced Modify Cal Kit function.	Use the Advanced Modify Cal Kit function.
How do I use the Calibration Wizard with the model?	Use only the SmartCal (Guided) Calibration method.	Use the SmartCal (Guided) or the Unguided Mechanical Calibration methods.

Learn about the ["Expanded Math"](#) feature.

Effects of Power Level

To attain the most accurate error correction, do NOT change the power level after a calibration is performed. However, when changing power within the same attenuator range at which the measurement calibration was performed, S-parameter measurements can be made with only a small degradation of accuracy. If a different attenuator range is selected, the accuracy of error correction is further degraded.

To check the accuracy of a calibration, see [Validity of a Calibration](#).

Using Port Extensions

Use the port extensions feature after calibration to compensate for phase shift of an extended measurement reference plane due to additions such as cables, adapters, or fixtures.

Port extensions is the simplest method to compensate for phase shift, mismatch, and loss of the path between the

calibration reference plane and the DUT.

Learn how to apply [port extensions](#).

Learn about [characterizing a test fixture](#).

Isolation Portion of 2-Port Calibration

The isolation portion of a calibration corrects for crosstalk, the signal leakage between test ports when no device is present. When performing an UNGUIDED 2-port calibration, you have the option of omitting the isolation portion of the calibration.

Note: Isolation is never performed on a Smart (Guided) Calibration.

The uncorrected isolation between the test ports of the PNA is exceptional (typically >100dB). Therefore, you should only perform the Isolation portion of a 2-port calibration when you require isolation that is better than 100dB. Perform an isolation calibration when you are testing a device with high [insertion loss](#), such as some filter stopbands or a switch in the open position.

The isolation calibration can add noise to the error model when the measurement is very close to the [noise floor](#) of the analyzer. To improve measurement accuracy, set a narrow IF Bandwidth.

How to perform an isolation calibration

Isolation is measured when the Load standards are connected to the PNA test ports. For best accuracy, connect Load standards to BOTH test ports each time you are prompted to connect a load standard. If two Loads are not available, connect the untested PNA port to any device that will present a good match.

Choosing a Thru Method

When calibrating for a non-insertable device, you must choose a method to calibrate for the THRU error terms. This can have a significant effect on measurement accuracy. Learn more about [choosing a thru method](#).

Validity of a Calibration

This section helps you determine if your calibration is valid and how the analyzer displays correction level information for your measurement.

- [Frequency Response of Calibration Standards](#)
- [Validating a Calibration](#)
- [Quick Check](#)
- [ECal Confidence Check](#)
- [Verification Kit](#)

[See other Calibration Topics](#)

Frequency Response of Calibration Standards

In order for the response of a calibration standard to show as a dot on the [smith chart display format](#), it must have no phase delay with respect to frequency. The only standards that exhibit such "perfect" response are the following:

- 7-mm short (with no offset)
- Type-N male short (with no offset)

There are two reasons why other types of calibration standards show phase delay after calibration:

1. The reference plane of the standard is electrically offset from the mating plane of the test port. Such devices exhibit the properties of a small length of transmission line, including a certain amount of phase shift.
2. The standard is an open termination, which by definition exhibits a certain amount of fringe capacitance and therefore phase shift. Open terminations which are offset from the mating plane will exhibit a phase shift due to the offset in addition to the phase shift caused by the fringe capacitance.

The most important point to remember is that all standards are measured in order to remove [systematic errors](#) from subsequent device measurements. As a result, if calibration standards with delay and fringe capacitance are measured as a device after a calibration, they will NOT appear to be "perfect". This is an indication that your analyzer **is calibrated accurately and working properly**.

Validating a Calibration

At the completion of a calibration or selection of a stored Cal Set, validation can accomplish the following:

Improve Measurement Accuracy – Once a measurement calibration has been performed, its performance should be checked before making device measurements. There are several sources of error that can invalidate a calibration: bad cables, dirty or worn calibration standards that no longer behave like the modeled standards, and operator error.

Verify Accuracy of Interpolation – You should validate the calibration if you are testing a device and the measurements are uncertain because of interpolation. For more information see [Interpolation Accuracy](#).

Verify Accuracy of Cal Standards – To check accuracy, a device with a known magnitude and phase response should be measured.

Quick Check

For this test, all you need are a few calibration standards. The device used should not be one of the calibration standards; a measurement of one of these standards is merely a measure of repeatability.

The following reflection and transmission Quick Check tests can be applied to all test ports.

To verify reflection measurements, perform the following steps:

1. Connect either an OPEN or SHORT standard to port 1. The magnitude of S11 should be close to 0 dB (within a few tenths of a dB).
2. Connect a load calibration standard to port 1. The magnitude of S11 should be less than the specified calibrated directivity of the analyzer (typically less than -30 dB).

To verify transmission measurements:

1. Connect a THRU cable (or known device representative of your measurement) from port 1 to port 2. Verify the loss characteristics are equivalent to the known performance of the cable or device.
2. To verify S21 isolation, connect two loads: one on port 1 and one on port 2. Measure the magnitude of S21 and verify that it is less than the specified isolation (typically less than -80 dB).

Note: To get a more accurate range of expected values for these measurements, consult the analyzer's specifications.

ECal Confidence Check



ECal Confidence Check is a method to check the accuracy of a calibration performed with mechanical standards or an ECal module. The confidence check allows you to measure an impedance state in the ECal module (called the confidence state), and compare it with factory measured data stored in the module.

In order for this test to be valid, the test ports of the ECal module must connect directly to the calibration reference plane (without adapters).

How to Perform ECal Confidence Check:

1. Connect ECal module to the analyzer with the USB cable. See [Connect ECal Module to the PNA](#). **Note:** Terminate any unused ECAL ports with a 50 ohm load.

2. Allow the module to warm up for 15 minutes or until the module indicates **READY**.
3. Do one of the following to start ECal Confidence Check

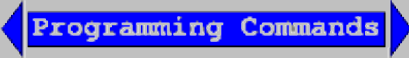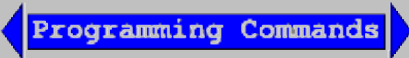Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	<ol style="list-style-type: none"> 1. Click Calibration 2. then ECal Confidence Check
For PNA-X models	
<ol style="list-style-type: none"> 1. Press CAL 2. then [More] 3. then [ECal] 4. then [Confidence Check] 	<ol style="list-style-type: none"> 1. Click Response 2. then Cal 3. then More 4. then ECal 5. then Confidence Check


On the following [ECal Confidence Check dialog box](#):

4. Click **Read Module Data**. The following occurs:
 - ECal module is set to "confidence state".
 - PNA reads and displays stored data.
 - PNA measures and displays "confidence state".
5. If you want to view a different parameter, select **Change Measurement** and select the check box for the desired parameter. (The default is the active channel parameter).
6. Select the viewing option in the Trace View Options block.
7. Compare the stored and measured data for each measurement parameter.

Notes:

- If the two traces show excessive difference, there may be a loose or dirty connection at the test ports or damage to the test cables. Carefully inspect the cables and connections. Then clean and gage each connector, and re-calibrate if needed.
- The User Characterization setting selects the user-characterization data instead of the factory

characterization data (available when a User-Characterization is stored in the ECal module).

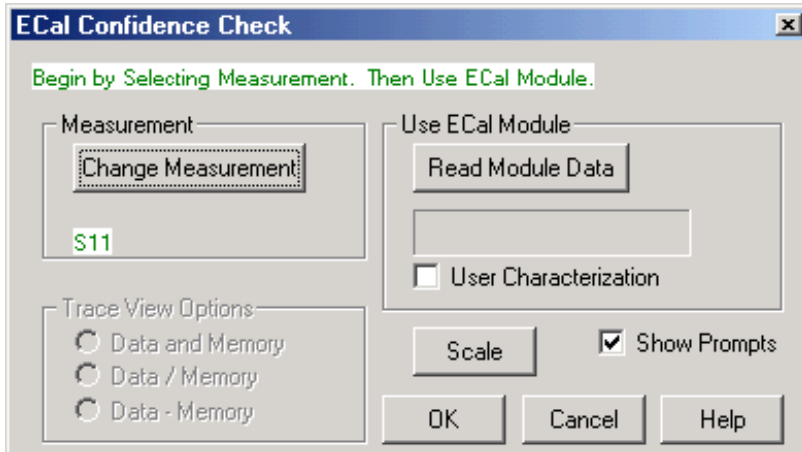

ECal Confidence Check dialog box help

Compares the accuracy of corrected (calibrated) data with stored data in the ECal module. For the check to be valid, the module test ports must connect directly to the calibration reference plane (without an adapter). [Learn more about ECal Confidence Check.](#)

Measurement

Change Measurement Opens the Measure dialog box.

Use ECal Module

Read Module Data

- Copies stored data from the ECal module to Memory.
- Changes state of ECal module to confidence state.
- Measures and displays confidence state and Memory trace.

User Characterization Selects the user-characterization data (stored in the module) instead of the factory characterization data (available when a User-Characterization is stored in the ECal module).

Scale Opens the Scale dialog box.

Show Prompts Check to show a reminder for the connection (default).

Trace View Options

Data and Memory Trace Displays current measurement data and Memory trace.

Data / Memory Performs an operation where the current measurement data is divided by the data in memory.

Data + Memory Performs an operation where the current measurement data is added to the data in memory.

Verification Kit

Measuring known devices, other than calibration standards, is a straightforward way of verifying that the network analyzer system is operating properly. Verification kits use accurately known verification standards with well-defined magnitude and phase response. These kits include precision airlines, mismatch airlines, and precision fixed attenuators. Traceable measurement data is shipped with each kit on disk and verification kits may be re-certified by Agilent.

See [Analyzer Accessories](#) for a list of Agilent verification kits.

Last modified:

December 3, 2007 MX Added UI

9/12/06 Added link to programming commands

Using ECal

This topic discusses all aspects of performing an ECal:

- [ECal Overview](#)
- [Connect ECal Module to the PNA](#)
- [How to Perform a Calibration Using ECal](#)

See Also:

[ECal User-Characterization](#)

[Restore ECal Module Memory](#)

[See other Calibration Topics](#)

ECal Overview

ECal is a complete solid-state calibration solution. Every ECal module contains electronic standards that are automatically switched into position during a PNA measurement calibration. These electronic standards have been measured at the factory and the data stored within the memory of the ECal module. The PNA uses this stored data, along with the PNA-measured data, to calculate the error terms for a measurement calibration.

ECal modules are available in 2-port and 4-port models and a variety of connector types, covering many frequency ranges. See [Analyzer Accessories](#) for more about available ECal modules and ordering information.

You can perform the following calibrations with ECal:

- 1-Port Reflection calibration
- Full 2-Port calibration
- Full 3-Port calibration
- Full 4-Port calibration

Verify the validity of a mechanical or ECal calibration with [ECal confidence check](#).

Care and Handling of ECal Modules

You can improve accuracy, repeatability, and avoid costly repair of equipment in the following ways.

- Practice proper connector care. See [Connector Care](#).
- Protect equipment against ESD damage. Read [Electrostatic Discharge Protection](#).
- Do not apply excess power to ports. Refer to specifications provided with your ECal module.

Connect ECal Module to the PNA

ECal modules are controlled and powered through a USB connection to the PNA. When you connect the module, the PNA automatically recognizes the type of module, frequency range, and connector type.

"First Time" Note

When you connect an ECal module that has a serial number never before seen by that PNA, the **Welcome to the Found New Hardware Wizard** will appear.

If "Can Windows connect to Windows Update to search for software?" appears, select **"No, not this time"**.


Click **Next** or **Finish** at the remaining dialog prompts.

You must be logged on to the PNA with [Administrator privileges](#) to complete the first time registration process. This occurs automatically unless you change your default User Account.


ECal modules connect to the USB port on the front or rear panel of the PNA.

1. Wear a grounded wrist strap when making connections.
2. Connect the USB cable **Type B** connector to the ECal module and the USB cable **Type A** connector to the front or rear panel USB connector of the analyzer, as shown in the following graphics.

ECal Module USB Port

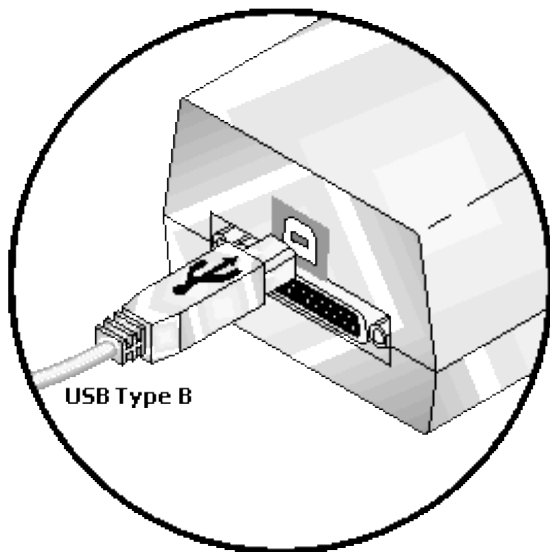

Analyzer Front Panel USB Port

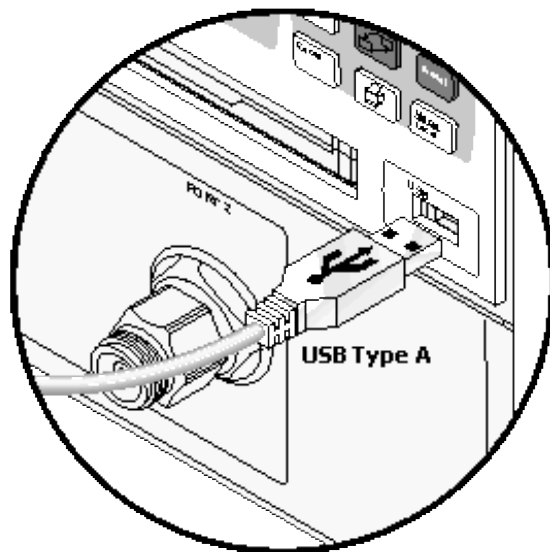

Notes:

- Unused ECal modules that have completed a calibration may remain connected to the USB port.
- You can connect and disconnect the ECal module while the analyzer is operating. However, DO NOT connect or disconnect the module while data transfer is in progress. This can result in damage or at least corrupted data.
- A USB hub may be used to connect more than one USB device to the analyzer. See [Analyzer Accessories](#) for more information about USB peripheral equipment.



How to Perform a Calibration Using ECal


Select an ECal module that has connectors of the same type and gender as the DUT. If such an ECal module is not available, a module with connectors different from the DUT can be used by using [Advanced Settings](#) or [User Characterization](#).

Connect the ECal module ports to the PNA ports. During the calibration process the PNA can either automatically detect how the ECal module is connected, or the orientation can be performed manually.

Note: Terminate any unused ECal ports with a 50 ohm load.

1. Connect the ECal module USB cable to the analyzer USB. See [Connect ECal Module USB to PNA USB](#).
2. Allow the module to warm up until it indicates **READY**.
3. Enter the analyzer settings. See [Set Up Measurements](#).
4. Do one of the following to start the [Calibration Wizard](#)

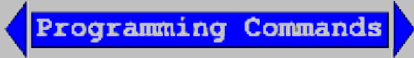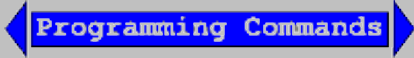Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Cal Wizard
For PNA-X models	
1. Press CAL 2. then [Start Cal] 3. then [Cal Wizard]	1. Click Response 2. then Cal 3. then Cal Wizard
5. In the Calibration Wizard Begin dialog box, click Use Electronic Cal (ECal)	
Note: To calibrate with more than one ECal module, select SmartCal , then choose the ECal modules as your Cal Kits.	

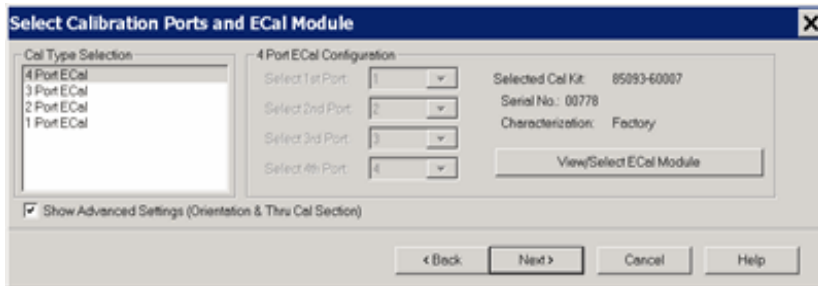

Select Calibration Ports and ECal Module dialog box help

Allows you to select calibration type and settings.

Cal Type Selection / Configuration Select the number of ports to calibrate. Then select the port number configuration.

4 Port ECal Available only if using a 4-port PNA. No additional configuration necessary.

3 Port ECal Available only if using a 4-port or 3-port PNA.

2 Port ECal


1 Port ECal- (Reflection) Advanced Settings are not available.

View/Select ECal Module Click to [Select the ECal module](#) if more than one ECal module is connected to the PNA. Click to also choose a different [Characterization](#) within the module to support various connector type. Learn more about [User Characterization](#).

Show Advanced Settings Check to display the [Advanced Settings](#) when **Next** is clicked.

Back Return to [Cal Wizard Begin](#) dialog. If checked, you can clear the [Save Preferences](#) checkbox to see the Begin page when the Cal Wizard begins.

Note: The PNA no longer allows ECal isolation to be performed. The inherent isolation of the PNA is better than that attained with correction using an ECal module.

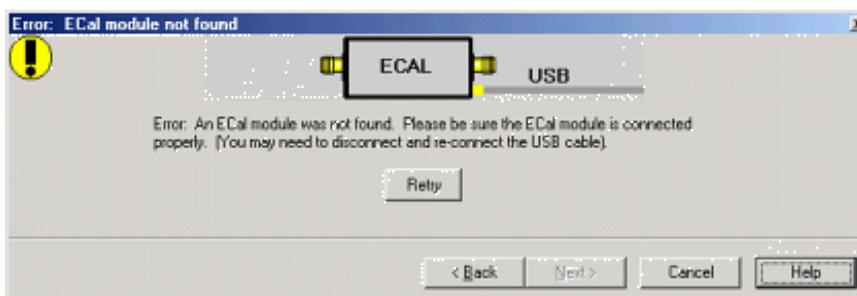


ECal module not found dialog box help

Displays an error message indicating the ECal module is not connected or has not been recognized by the network analyzer.

Retry Check the USB connections and click to continue.

Notes:

- If your ECal module is not detected, try to unplug, then reconnect the USB connector to the PNA.
- When the ECal module is connected to the network analyzer for the first time, it may take approximately 30 seconds for the analyzer to recognize the module and make it available for calibration.
- For best accuracy, allow the ECal module to warm-up until it indicates READY.
- Agilent 8509x and N4431 ECal modules, when first connected, draw significantly more current than other modules. This could cause the USB to stop working in certain situations. [See USB limitations](#).
- See [Connect ECal Module USB to PNA USB](#).

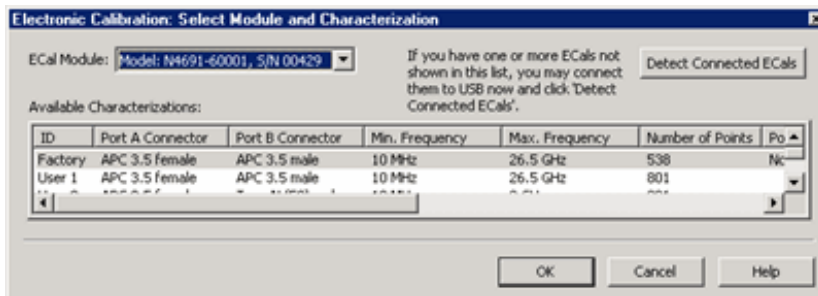


Select Module and Characterization dialog box help

ECal Module Select one of the ECal modules that are connected to the PNA.

Detect Connected ECals Click to rescan the USB for ECal modules.

Available Characterizations Select either the Factory Characterization of your ECal module or a [User Characterization](#). Once selected, that characterization becomes the default selection until the PNA is turned OFF and restarted. When restarted, **Factory** again becomes the default selection.

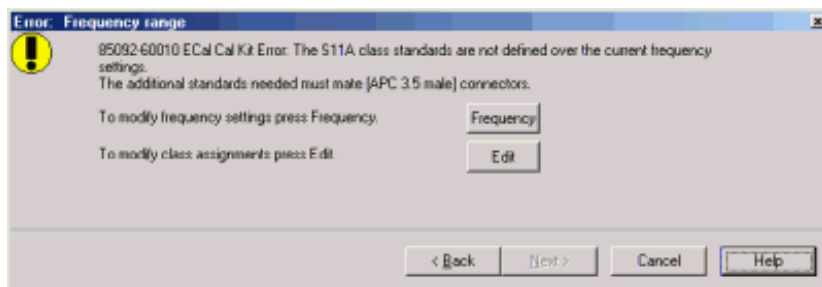

Error: Frequency Range dialog box help


The current cal standards (or ECal module) does not cover the current frequency range of the measurement. Do one of the following to correct the problem:

Frequency Change the frequency range of the active channel.

Edit This selection is not relevant to ECal modules.

Back Select a different characterization that covers the required frequency range.

Cancel Re-characterize the module with an increased frequency range.

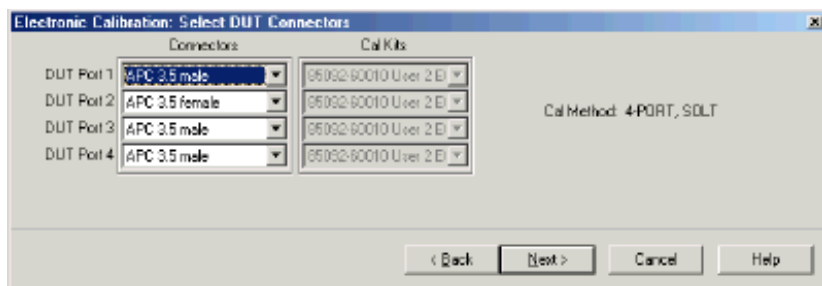


Select DUT Connectors and Cal Kits dialog box help

If the ECal module or selected User Characterization has more than one connector type, then the following dialog box is presented which allows you to choose the DUT connector type.

Connectors

The available connector types are listed for each DUT port.

Click **Next>** to proceed to [Advanced Settings](#) (if checked) or [ECal Steps](#).

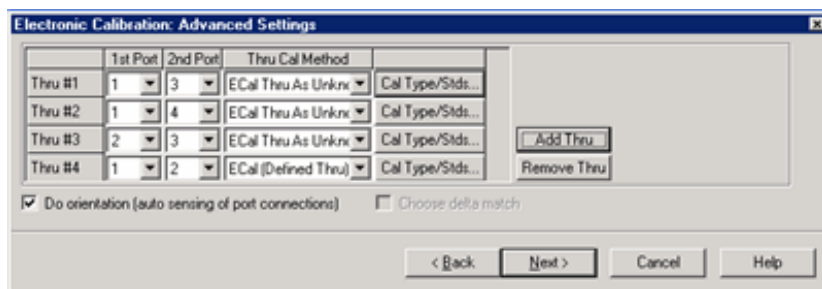

Advanced Settings dialog box help

Thru #n

Lists the proposed Thru connections to be made during the calibration process. You can change these Thru connections to better suit your test setup.

- The proposed Thru connections are listed automatically.
- Additional Thru connections can be selected for higher accuracy. [Learn more](#).

Add Thru

Click to add a Thru connection. [Learn more](#)

Remove Thru

Select a Thru by clicking the "Thru #N" field or the "1st Port / 2nd Port" field. Then click "Remove Thru". This selection is NOT available if the selected Thru is required for the calibration.

1st Port / 2nd Port

Click to change the two ports to be included in the Thru connection. The order of the port numbers (1st or 2nd) is not critical.

Thru Cal Method

Lists the available Thru Cal methods for the specified port pairs.

[Learn about ECal Thru Methods](#)

Cal Type/ Stds

Click to invoke the [View / Modify Properties of Cal dialog box](#)

Do orientation


When this box is checked (default) the PNA automatically senses the model and direction in which an ECal module port is connected to the PNA ports. If power to the ECal module is too low, it will appear as if there is no ECal module connected. If you use low power and are having this problem, clear this check box to provide the orientation manually.

Orientation occurs first at the middle of the frequency range that you are calibrating. If a signal is not detected, it tries again at the lowest frequency in the range. If you have an **E8361A** or **E836xB** PNA and do an ECal completely within 10 - 20 MHz OR 60 - 67 GHz, you may need to do orientation manually. There may not be sufficient power to orient the ECal module at those frequencies.

Choose delta match


Available only when a Delta Match Cal is required.

- Check, then click **Next** to invoke the [Select Cal Set for Delta Match](#) dialog box.
- Clear - The Cal Wizard uses the [Global Delta Match Cal](#) if available.

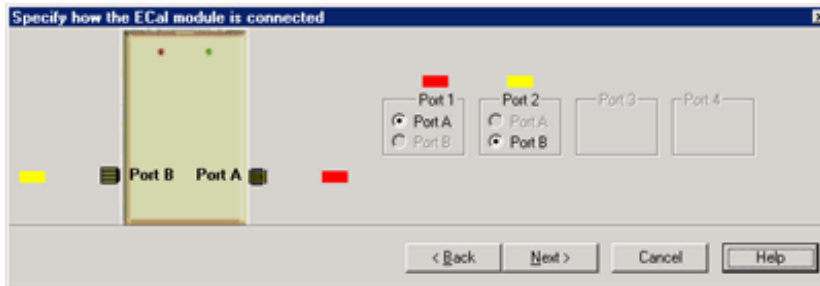

Specify how the ECal module is connected dialog box help

This dialog box appears when the **Do orientation** checkbox in the previous dialog box is cleared.
Click the ECal Port that is connected to each PNA port.

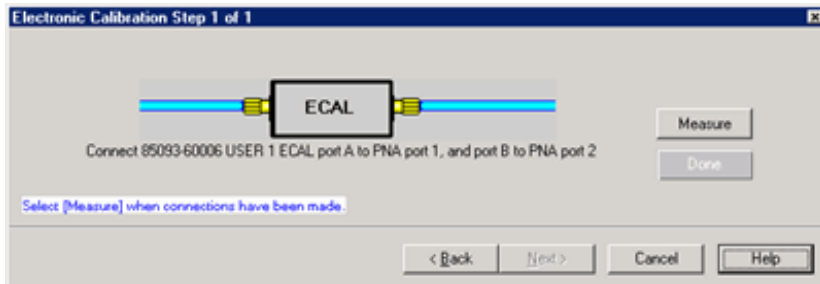

Electronic Calibration Steps dialog box help

Note: Beginning in PNA Rev. 6.0, ECal can be performed with External triggers. [Learn more.](#)

Displays the instructions for each measurement required for calibration.

Measure Measures the ECal standards.

Done Click when last standard has been measured.

Saving an ECal Calibration

When complete, you can save the new calibration. [Learn how.](#)

Last modified:

- 4-Sep-2007 Added First time note
- 14-Sep-2007 MX Added UI
- Sept. 12, 2006 MQ Modified images for multiport

ECal User Characterization

- [Overview](#)
- [How to Perform a User Characterization](#)
- [Restore ECal Module Memory](#)

See also [Using ECal](#)

Other [Calibration Topics](#)

Overview

A user-characterized ECal module allows you to add adapters to the ECal module, re-measure the standards in the ECal module, INCLUDING the adapters, then add that data to ECal memory. This extends the reference plane from the module test ports to the adapters.

Why perform a user characterization?

- If you need to use adapters with your ECal module, you could characterize your ECal module with the adapters attached and perform subsequent ECals in a single step.
- If you have a 4-port ECal module, you could configure the module with adapters of different connector types, then perform a user characterization of the module. When you need to test a DUT with a pair of the connector types on your module, calibrate the PNA with a 1-step ECal using the same two connectors on the User-characterized module.
- If you test devices in a fixture, you could embed the characterization of the fixture in the characterization of the module. To do this, during the mechanical calibration portion of the user characterization, calibrate at the reference plane of the device as you would normally calibrate. Then remove the fixturing to be embedded and insert the ECal module to be characterized. When measuring the ECal module, the PNA removes the effects of the fixturing and stores the measurement results in the user characterized ECal module. Subsequent calibrations with that user characterized module will also remove the fixture effects.

Notes:


- User Characterization does not delete the factory characterization data. The factory data is saved in the ECal module in addition to the user characterization data.
- You can save up to five different user characterizations in a single ECal module. There are memory limitations; the PNA will determine if the contents of a user characterization will fit inside the module before it is performed. **Note:** This is a new feature with PNA Rev. 3.0. Previous versions of PNA will NOT recognize more than one user characterization.
- Both 2-port and 4-port ECal modules support user characterization.
- With PNA release 6.03, a user characterization can now be performed beyond the frequency range of the ECal module. Although this practice is allowed, calibration accuracy with the extended user characterization

is likely to be degraded. To determine the level of degradation, compare measurements of a variety of devices using a PNA with a mechanical cal kit calibration versus an ECal extended user characterization calibration.


How to Perform a User Characterization

SUMMARY (A [detailed procedure](#) follows.)


1. Select adapters for the module to match the connector configuration of the DUT.

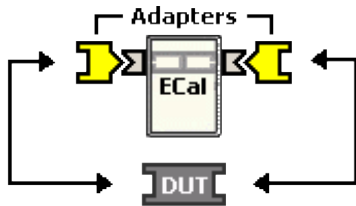


2. Either calibrate the PNA using mechanical standards or recall an existing Cal Set.

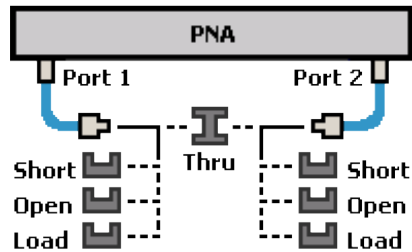

3. Measure the ECal module, including adapters, as though it were a DUT.

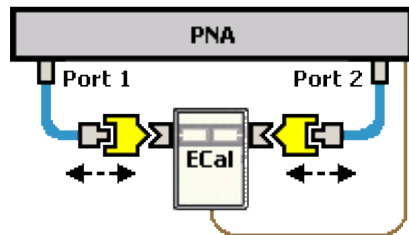

4. The measurement results are the characterization data that then gets stored inside the module.

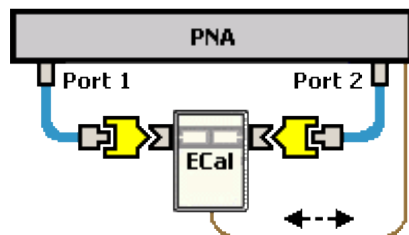

Note

A 2-port PNA can be used to perform a User Characterization on a 4-port ECal module. However, a 4-port ECal module has SIX different port pairs. The PNA must be recalibrated for each port pair that uses unique connector types or gender.


- If all 4 ECal module ports have the same connector type and gender, then only one PNA calibration is required to measure all six port pairs.
- If all 4 ECal module ports have different connector types or gender, then 6 calibrations are required.

When more than one PNA calibration is required during a User Characterization, then ALL calibrations must be performed using the standard Cal Wizard, saved to Cal Sets, and then [recalled from Cal Sets](#) DURING the User Characterization.

Detailed steps to Perform a User Characterization

1. Connect the ECal module to the network analyzer with the USB cable. See [Connect ECal Module USB to PNA USB](#).
2. Allow the module to warm up until it indicates **READY**.
3. **Preset** the analyzer.
4. [Set up the measurement](#). For best accuracy, the **IF bandwidth** should be set to **1 kHz** or less.
5. Start and complete the **Characterize ECal Module** Wizard:

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	No Programming commands
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Characterize ECal module
For PNA-X models	No Programming commands
1. Press CAL 2. then [More] 3. then [ECal] 4. then [Characterize ECal module]	1. Click Response 2. the Cal 3. then More 4. then ECal 5. then Characterize ECal module

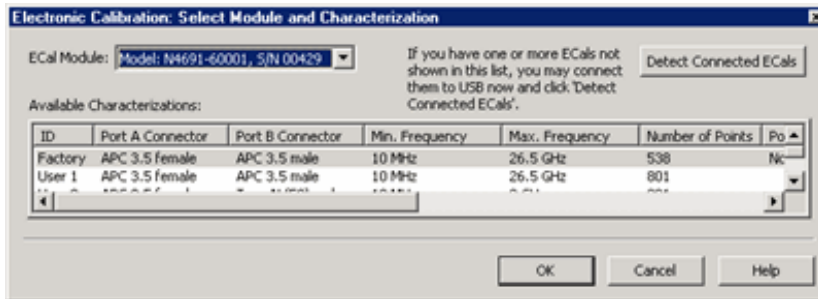

Select Module and Characterization dialog box help

ECal Module Select one of the ECal modules that are connected to the PNA.


Detect Connected ECals Click to rescan the USB for ECal modules.

Available Characterizations Scroll to view all of the parameters of the stored characterizations. Select an empty location or select to overwrite an existing characterization.

Data can NOT be deleted from the ECal module.

Next Click to continue to the [Select Connectors for the Characterization](#) dialog box.

[See note regarding extended frequency use.](#)

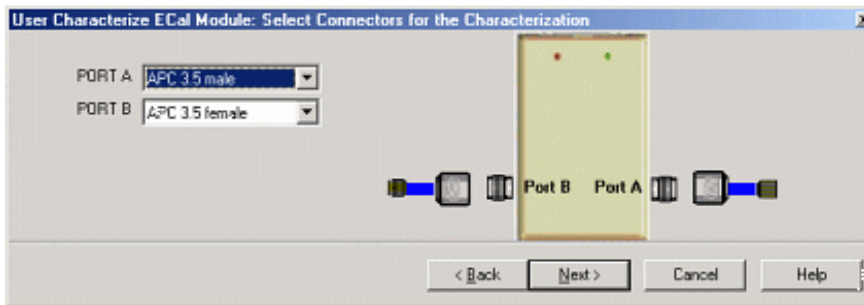

Select Connectors for the Characterization dialog box help

Note: When performing an ECal User Characterization, do NOT use a [custom connector name](#) that you added to this list. If you need to use a custom-defined connector type, select "Type B", or one of the "Type A" variations from the list of connectors for each port.

Allows you to select the adapters for the ECal module test ports. Select **No adapter** if no adapter is used on a port.


PORT A Lists the connector types available for Port A.

PORT B Lists the connector types available for Port B.

PORT C Lists the connector types available for Port C (available with a 4-port ECal module).

PORT D Lists the connector types available for Port D (available with a 4-port ECal module).

Next Click to continue to the [Calibrations to perform or recall](#) dialog box.

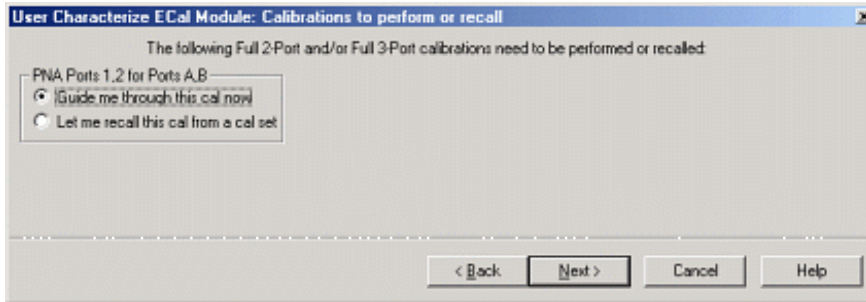

Calibrations to perform or recall dialog box help

The PNA must be calibrated before measuring the ECal module and necessary adapters. This dialog box displays the number and types of mechanical calibrations required for the characterization.


Guide me through this cal now Click to perform a Guided calibration. A calibration kit is required for each connector type.

Note: TRL calibrations can NOT be performed on a 4-port PNA during the calibration portion of a User Characterization. However, this type of Cal can be performed using the Cal Wizard, saved to a Cal Set, then recalled at this point in the User Characterization.

If more than one calibration is required, this selection is not available. [See Note.](#)

Let me recall this cal from a cal set Click to select an existing Cal Set. You cannot select a Cal Set that is currently in use. Learn more about [Using Cal Sets](#).

Next Click to continue to either the [Select Cal Kits](#) or the [Select Cal Set](#) dialog box.

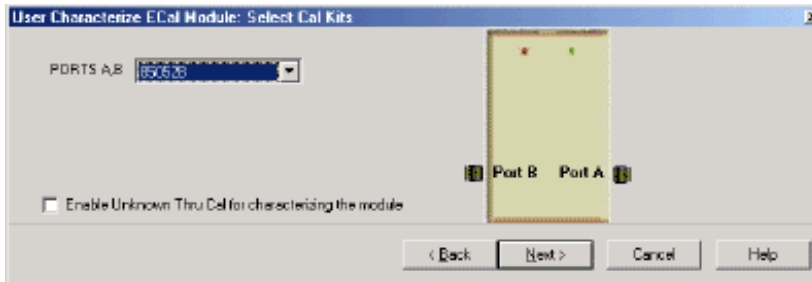


Select Cal Kits dialog box help

Provides a list of calibration kits to perform the calibration. Select the Cal Kit you will use for each port.

Enable Unknown Thru for characterizing the module Check to enable. This reduces the number of steps required to characterize the THRU standard. This setting is available only on PNA models with [one reference receiver per test port](#).

Next Click to continue to the [Select Cal Set](#) dialog box.

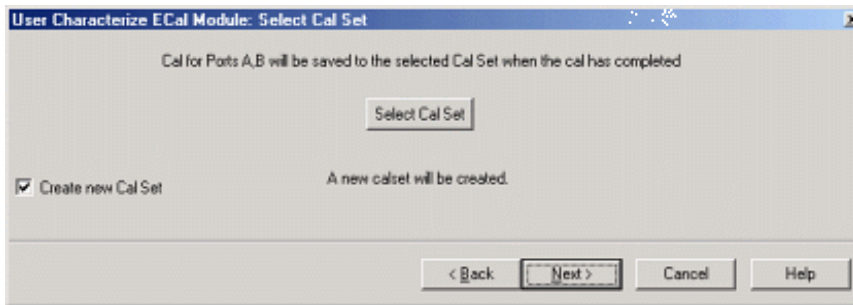

Select Cal Set dialog box help


The calibration that you perform will be written to a Cal Set. This dialog box allows you to select a Cal Set to overwrite, or to write to a new Cal Set. The current choice is visible below the **Select Cal Set** button.

Select Cal Set Click to open the **Select A Cal Set** dialog box.

Create new Cal Set Check to create a new Cal Set to store the calibration. Clear to select and overwrite a stored Cal Set.

Next Click to continue to the [Guided Calibration Steps](#) dialog box.

Note: Remember the Cal Set name for future reference.

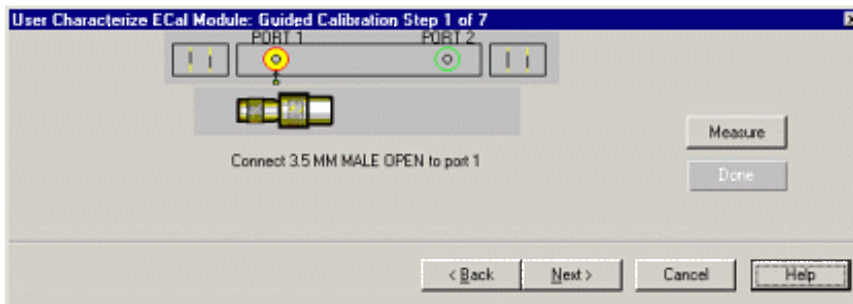

Guided Calibration Steps dialog box help

Instructs you to connect each calibration standard to the measurement port.

Measure Click to measure the standard.


Back Click to repeat one or more calibration steps.

Done Click **after** a standard is re-measured and all measurements for the calibration are complete.

Next Click to continue to the next calibration step. (Does **not** measure the standard.)

Cancel Exits Calibration Wizard.

The **Specify nominal delay** or **Guided Calibration completed** dialog box appears when the steps are completed.

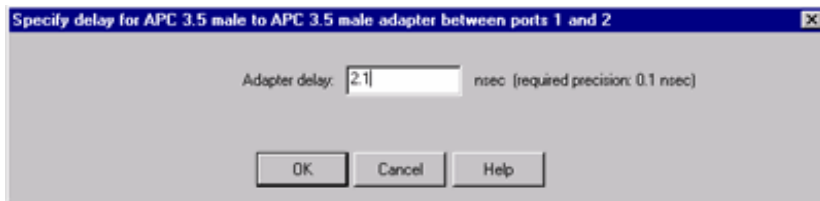

Specify nominal delay dialog box help


This dialog ONLY appears when [Adapter Removal](#) or [Unknown Thru](#) calibrations are performed.

The following values were estimated from the measurement. Most of the time, they are adequate. However, for CW sweep or frequency sweep with large step sizes, the accuracy of the values may be improved.

Adapter delay To improve this value, measure and record the delay of the adapter with a dense step size. Enter that value here. The required precision value is the accuracy that is required to characterize the delay value.

Nominal phase offset (Waveguide ONLY). To improve this value, measure and record the phase offset of the Waveguide adapter with dense step size. Enter that value here.

When one connector is coax and the other connector is waveguide, the phase offset has an ambiguity of 180 degrees. For consistency, the estimate provided here is always between 0 and 180 degrees. You can change this estimate to any value between -180 degrees and +180 degrees.

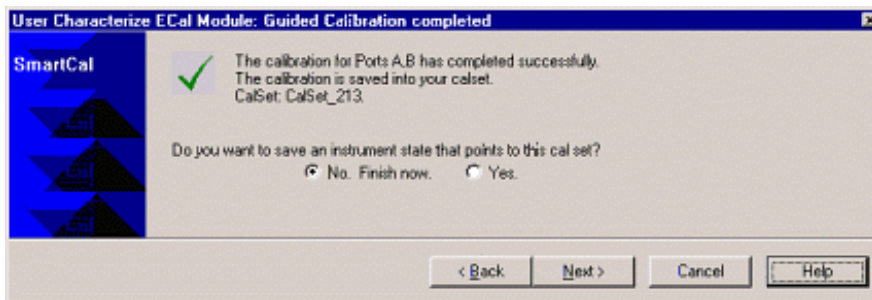


Guided Calibration completed dialog box help

Allows you to finish the calibration and continue to the next characterization steps.

No. Finish now Select to save Cal Set data.

Yes Allows selection of Save options.

Next Click to continue to the [Exit to Inspect Quality of Calibration](#) dialog box.

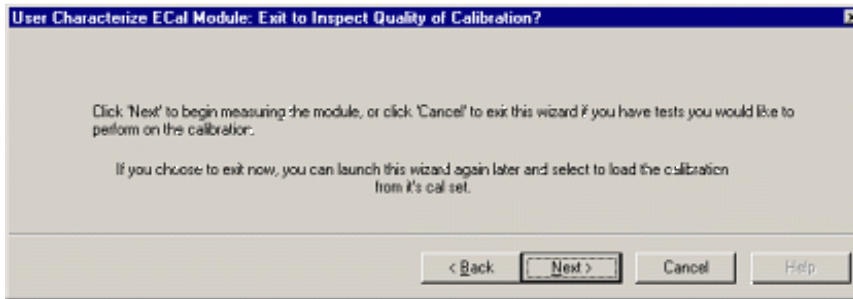

Exit to Inspect Quality of Calibration dialog box help

Allows you to exit User Characterization to [validate the calibration](#) before proceeding with the characterization.


Back Allows you to repeat calibration.

Next Click to continue to the [Characterization Steps](#) dialog box.

Cancel Exits the Calibration.

To return to the current step:

1. Start User Characterization.
2. In the **Select user number for new characterization** dialog box, click **Next**.
3. In the **Select Connectors for Characterization** dialog box, click **Next**. (Previous entry is stored in memory.)
4. In the **Calibrations to perform or recall** dialog box, recall the Cal Set that you just performed.

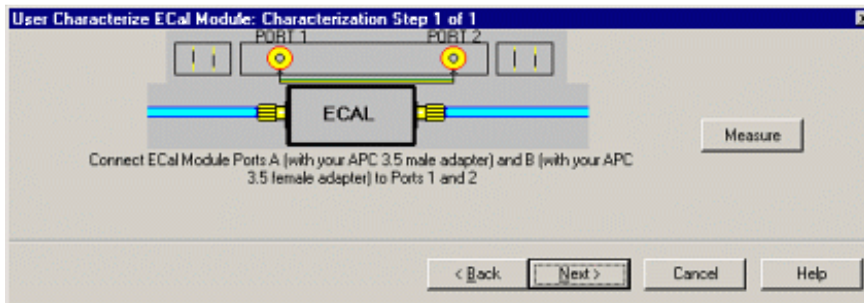

Characterization Steps dialog box help

Describes the instructions for each measurement required for characterization.

Measure Measures the ECal module.

Next Click to continue to the [Information for the New Characterization](#) dialog box when measurements are complete.

User Characterize ECal Module: Information for the New Characterization

Your name or company name:

Description of this network analyzer (to be stored in module):

Description of Port A extension (adapter, cable, fixture, etc.):

Description of Port B extension (adapter, cable, fixture, etc.):

ECal module memory limits the size of these text fields. Click 'Help' for suggestions on abbreviations for connector descriptions.

< Back **Next >** Cancel Help

Information for the New Characterization dialog box help


Allows you to describe the properties of the User Characterization.

Next Click to continue to the [Write Characterized Data to the ECal module](#) dialog box.

To minimize the number of characters, use the following 3-character codes to describe the connectors listed.

Connector Type	3-Character Code
1.0 mm female	10F
1.0 mm male	10M
1.85 mm female	18F
1.85 mm male	18M
2.4 mm female	24F
2.4 mm male	24M
2.92 mm female	29M
2.92 mm male	29F
3.5 mm female	35F
3.5 mm male	35M
7-16 female	16F
7-16 male	16M
Type F female	F7F
Type F male	F7M
N50 female	N5F
N50 male	N5M

N75 female	N7F
N75 male	N7M
APC 7	7MM
K-band waveguide	KBW
P-band waveguide	PBW
Q-band waveguide	QBW
R-band waveguide	RBW
U-band waveguide	UBW
V-band waveguide	VBW
W-band waveguide	WBW
X-band waveguide	XBW

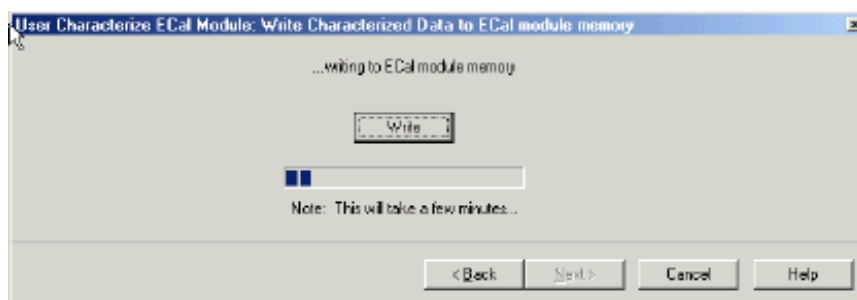


Write Characterized Data to the ECal module memory dialog box help

The PNA writes User Characterization and factory characterization data to the ECal module memory. For more information, see [Restore ECal module memory](#).

Write Click to write data into the ECal module.

The [Summary of new user characterization](#) dialog box opens after data is saved to module.

Data can NOT be deleted from the ECal module.

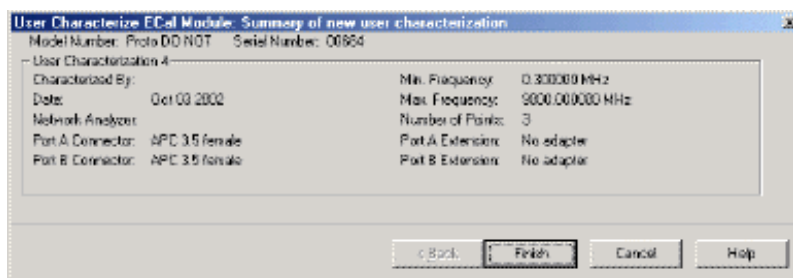

Summary of new user characterization dialog box help

Verify the status of the ECal User Characterization.

- ECal module model number
- summary from user characterization

Cancel Click to exit (characterization complete).

Finish Click to exit (characterization complete).


Restore ECal Module Memory

When user-characterized data is written to the ECal module, the entire contents of ECal memory is also written to the PNA hard drive. In the unlikely event that your ECal module memory is lost, you can restore the user-characterized data to ECal memory.

How to Restore ECal Module Memory

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	No Programming commands
1. Navigate using MENU/DIALOG	1. Click System
	2. then Service
	3. then Utilities
	4. then Restore...
For PNA-X models	No Programming commands
1. Press SYSTEM	1. Click Utility
2. then [Service]	2. then System
3. then [Utilities]	3. then Service
4. then [Restore...]	4. then Utilities

5. then **Restore...**

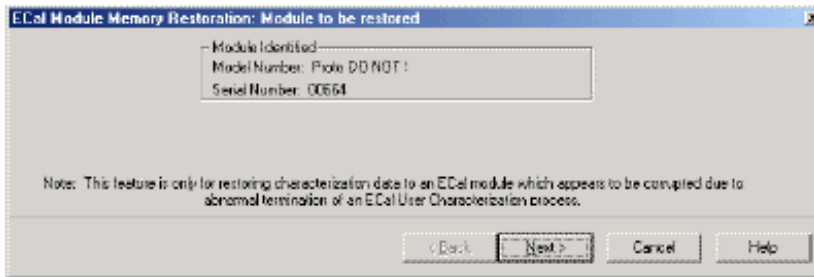

Module to be restored dialog box help

Verify the Serial number of the module to be restored. If two modules are connected to the PNA , choose the one to have data restored.

Next Click to write data to the module.

Last modified:

- 6-Nov-2007 Updated for Adapter delay
- 25-April 25, 2007 Added note about can NOT delete data.
- 20-Sept-2006 MX Modified for cross-browser

TRL Calibration

TRL (Thru, Reflect, Line) represents a **family** of calibration techniques that measure two transmission standards and one reflection standard to determine the 2-port 12-term error coefficients. For example, **TRM** (Thru, Reflect, Match), **LRL** (Line, Reflect, Line), **LRM** (Line, Reflect, Match) are all included in this family.

The traditional SOLT calibration measures one transmission standard (T) and three reflection standards (SOL) to determine the same error coefficients.

- [Why Perform a TRL Cal?](#)
- [The TRL Calibration Process](#)
- [TRL Cal Kits](#)
- [Cal Standards Used in TRL](#)
- [TRL in 4-port PNA a](#)

[See other Calibration Topics](#)

Why Perform a TRL Cal?

TRL calibration is extremely accurate, in most cases more accurate than an SOLT cal. However, very few calibration kits contain TRL standards. TRL Cal is most often performed when you require a high level of accuracy and do not have calibration standards in the same connector type as your DUT. This is usually the case when using test fixtures, or making on-wafer measurements with probes. Therefore, in some cases you must construct and [characterize standards](#) in the same media type as your DUT configuration. It is easier to manufacture and characterize three TRL standards than the four SOLT standards.

Another advantage of TRL calibration is that the TRL standards need not be defined as completely and accurately as the SOLT standards. While SOLT standards are completely characterized and stored as the standard definition, TRL standards are modeled, and not completely characterized. However, TRL cal accuracy is directly proportional to the quality and repeatability of the TRL standards. Physical discontinuities, such as bends in the transmission lines and beads in coaxial structures, will degrade the TRL calibration. The connectors must be clean and allow repeatable connections.

To learn more about Cal Standard requirements, see [Cal Standards Used in TRL](#).

The TRL Cal Process

Although TRL can be performed using the Cal Wizard Unguided Cal selection, the following process uses the easier [SmartCal](#) selection. Both selections require that you already have [TRL calibration standards defined](#) and included in a PNA cal kit.

1. Preset the PNA
2. Set up a S-parameter measurement and the desired stimulus settings.
3. Click **Calibration / Calibration Wizard**

4. Click **SmartCal (Guided Cal)**.
5. [Select the DUT connectors and Cal Kit](#) for each port. The LOWEST port number of each [port pair](#) MUST include TRL standards. TRL appears as the Cal Method.
6. Check **Modify Cal, Next**, then **View/Modify** to change [default TRL options](#) if necessary.
7. Follow the prompts to complete the calibration.
8. [Check the accuracy](#) of the calibration

TRL Cal Kits

Agilent Technologies offers two cal kits that include the required standards to perform a TRL calibration: 85050C (APC 7mm) and 85052C (3.5mm). Both kits include the traditional Short, Open, and Load standards. (The Thru standard, not actually supplied, assumes a [zero-length Thru](#)). In addition, the kits include an airline which is used as the LINE standard. To use the airline, the kits include an airline body, center conductor, and insertion / extraction tools. The APC 7 kit includes an adapter to connect the airline to the APC connector.

Cal Standards Used in TRL

These standards must be defined in your TRL cal kit:

THRU

Note: All [THRU calibration methods](#) are supported in a TRL Cal **EXCEPT** Unknown Thru.

- The THRU standard can be either a zero-length or non-zero length. However, a zero-length THRU is more accurate because it has zero loss and no reflections, by definition.
- The THRU standard cannot be the same electrical length as the LINE standard.
- If the insertion phase and electrical length are well-defined, the THRU standard may be used to [set the reference plane](#).
- Characteristic impedance of the THRU and LINE standards defines the reference impedance of the calibration.

REFLECT

- The REFLECT standard can be anything with a high reflection, as long as it is the same when connected to both PNA ports.
- The actual magnitude of the reflection need not be known.
- The phase of the reflection standard must be known within 1/4 wavelength.
- If the magnitude and phase of the reflection standard are well-defined, the standard may be used to [set the reference plane](#).

LINE

The LINE and THRU standards establish the reference impedance for the measurement after the calibration is completed. TRL calibration is limited by the following restrictions of the LINE standard:

- Must be of the same impedance and propagation constant as the THRU standard.
- The electrical length need only be specified within 1/4 wavelength.
- Cannot be the same length as the THRU standard.
- A TRL cal with broad frequency coverage requires multiple LINE standards. For example, a span from 2 GHz to 26 GHz requires two line standards.
- Must be an appropriate electrical length for the frequency range: at each frequency, the phase difference between the THRU and the LINE should be greater than 20 degrees and less than 160 degrees. This means in practice that a single LINE standard is only usable over an 8:1 frequency range (Frequency Span / Start Frequency). Therefore, for broad frequency coverage, multiple lines are required.
- At low frequencies, the LINE standard can become too long for practical use. The optimal length of the LINE standard is 1/4 wavelength at the geometric mean of the frequency span (square root of $f_1 \times f_2$).

MATCH

If the LINE standard of appropriate length or loss cannot be fabricated, a MATCH standard may be used instead of the LINE.

- The MATCH standard is a low-reflection termination connected to both Port 1 and Port 2.
- The MATCH standard may be defined as an infinite length transmission line OR as a 1-port low reflect termination, such as a load.
- When defined as an infinite length transmission line, both test ports must be terminated by a MATCH standard at the same time. When defined as a 1-port load standard, the loads are measured separately. The loads are assumed to have the same characteristics.
- The impedance of the MATCH standard becomes the reference impedance for the measurement. For best results, use the same load on both ports. The load may be defined using the data-based definition, the arbitrary impedance definition, or the fixed load definition.

See [Modify Calibration Kits](#) for detailed information about creating and modifying Calibration kit definitions.

Find more information about TRL standards at <http://www.tm.agilent.com>. Click "Technical Support". Use "Application Notes" to search for App Note 8510-5A (part number 5956-4352). Although the application note is written for the Agilent 8510 Series Network Analyzers, it also applies to the PNA.

TRL on a 4-port PNA and with an External Test Set

Beginning with the PNA code revision 5.25, TRL CAN be performed on a 4-port PNA and with an [External Test Set](#) enabled. Previously, a TRL calibration required a PNA with a [reference receiver for each test port](#). With the new TRL method, a [Delta Match Calibration](#) is first performed and applied.

The accuracy of this TRL cal greatly depends on the accuracy of the Delta Match Calibration. With an accurate Delta Match Calibration, the difference in accuracy between a traditional TRL cal and this TRL cal is negligible.

How to Perform a TRL Cal on a multiport PNA

1. Click **Calibration, Cal Wizard**.
 2. Select a TRL cal kit for the ports to be calibrated.
 3. During the calibration, the Cal Wizard prompts you for a [valid Delta Match Cal](#).
-

Last modified:

9/12/06 with Ext Test Set

Calibration Preferences Wizard


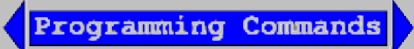
Two Cal Preferences are set from this Wizard:


1. [Whether or not to show the first 'Method' Page of the Cal Wizard](#)
2. [Select and order the Cal Types that are available during a SmartCal with Mechanical Standards](#)

To change either of these choices, you must select **Yes, Enable the calibration preferences** at the first Wizard page.

How to change Cal Preferences

Programming commands are NOT available for the preference settings discussed in this topic, although there are other [Cal Preferences](#) that can be set remotely.

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Cal Preferences
For PNA-X models	
1. Press CAL 2. then [Start Cal] 3. then [Preferences]	1. Click Response 2. then Cal 3. then Start Cal 4. then Preferences

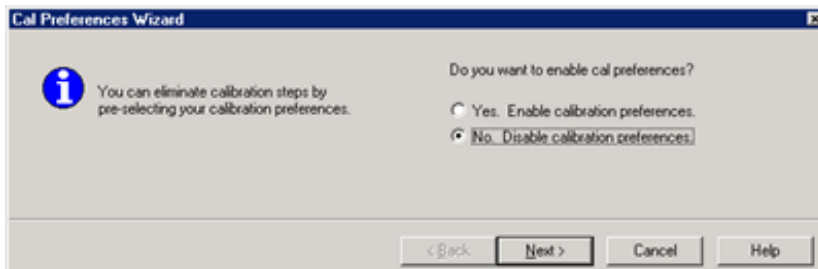


Cal Preferences Wizard dialog box help

Use this dialog to change either of the following preferences:

- Show or Hide the first page of the Cal Wizard
- Select order of calibrations that are offered.

To change either of these choices, you must select **Yes, Enable the calibration preferences**.

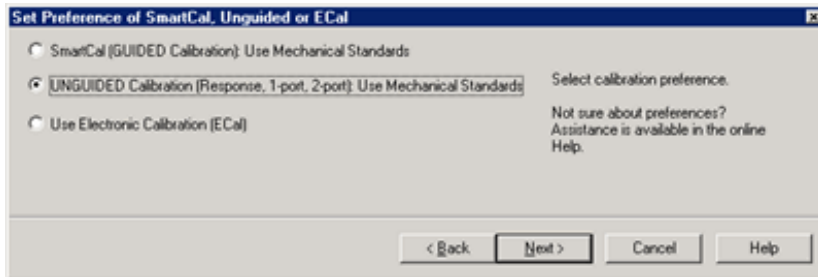


Cal Preferences of... dialog box help

Use this dialog to change which Cal method to perform.

After making this selection, the first page of the Cal Wizard will not be shown on subsequent calibrations.

If you **ONLY** want to change the order of Cal Types that are offered (next page of the Cal Preferences), you must do the following:

1. Select one of these choices and click **Next**.
2. Select and order the Cal Types, then click **Next**
3. Click **Finish**
4. Click **Cal**, then **Cal Wizard**.
5. On the first Cal Wizard page that shows, click **Back**, then clear the **Preferences** checkbox.

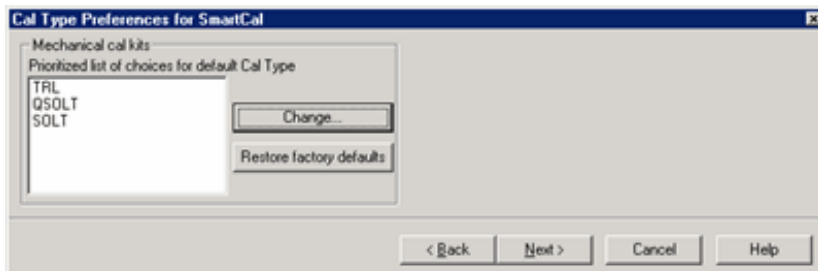

Cal Type Preferences dialog box help

This dialog is used to set which Cal Types are available, and the order in which they are selected as the default choice, during a SmartCal with Mechanical Standards. This setting is also used to set the default Cal Type for Guided calibrations using SCPI or COM.

The specified Cal Type order should allow you to make fewer changes to the Cal Type during a SmartCal with Mechanical Standards.

For example, in the above image, the first Cal Type on the list is TRL. When doing a SmartCal with Mechanical Standards:

- If a TRL Cal Kit is available for the specified DUT connectors, then TRL becomes the default Cal Type.
- If a TRL Cal Kit is NOT available, then the second Cal Type on the list (SOLT) is evaluated for compatibility with the available Cal Kits, and so forth with the Cal Types that remain on the list.
- If TRL is removed from the list, that Cal Type is NOT available for selection during a SmartCal with Mechanical Standards.

[Learn more about Cal Types.](#)

[See where you choose Cal Type during a SmartCal](#)

Prioritized list of choices for default Cal Type Shows the current list of Cal Types and the order in which they will be selected for Mechanical calibrations.

Change Click to invoke the [Modify list of default Cal Types](#) dialog.


Restore factory defaults Returns the list to the original selections and order. The factory defaults are in order of accuracy from highest (TRL) to lowest (QSOLT).

Cancel Closes the dialog without making changes.

Notes:

- Your Cal Type settings are saved only until the PNA application is closed. When re-opened, the factory default settings are restored.

[Learn more about QSOLT Calibration](#)

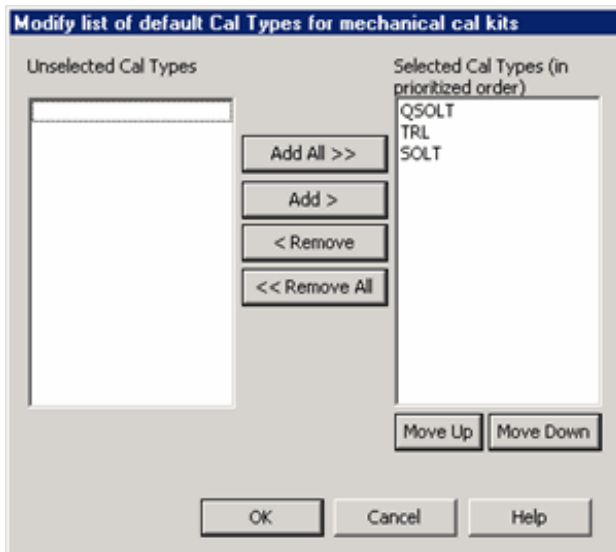

Modify list of default Cal Types dialog box help


Use this dialog to Add, Remove, and re-order the available Cal Types. There must be at least ONE selected Cal Type to perform a SmartCal with Mechanical Standards.

Unselected Cal Types Cal Types in this list will not be presented as a choice during a Calibration.

Selected Cal Types Cal Types in this list will be presented, in order, as the default choice during a Calibration. Click a Cal Type to select it, then click the following buttons to perform that operation.

Add / Remove buttons Click to Add and Remove the selected Cal Types from the Selected Cal Types list.

Move Up / Down Click to re-order the Selected Cal Types list.

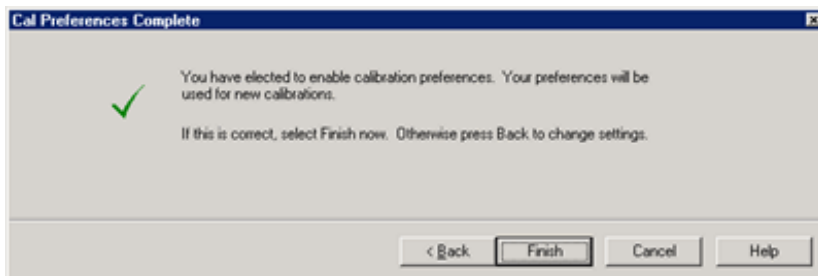

Cal Preferences Complete dialog box help

Either Enable or Disable Cal Preferences.

Do you want to select ONLY [Cal Type Preferences](#) and continue to show the first Cal Wizard page? [Learn how.](#)

Last Modified:

1-Jan-2007 MX added UI

Measurement Errors

You can improve accuracy by knowing how errors occur and how to correct for them. This topic discusses the sources of measurement error and how to monitor error terms.

- [Drift Errors](#)
- [Random Errors](#)
- [Systematic Errors](#)
 - [3-Port Error Terms](#)
 - [4-Port Error Terms](#)
- [Monitoring Error Terms](#)

[See other Calibration Topics](#)

Drift Errors

Drift errors are due to the instrument or test-system performance changing after a calibration has been done.

Drift errors are primarily caused by thermal expansion characteristics of interconnecting cables within the test set and conversion stability of the microwave frequency converter and can be removed by re-calibrating.

The time frame over which a calibration remains accurate is dependent on the rate of drift that the test system undergoes in your test environment.

Providing a stable ambient temperature usually minimizes drift. For more information, see [Measurement Stability](#).

Random Errors

Random errors are not predictable and cannot be removed through error correction. However, there are things that can be done to minimize their impact on measurement accuracy. The following explains the three main sources of random errors.

Instrument Noise Errors

Noise is unwanted electrical disturbances generated in the components of the analyzer. These disturbances include:

- Low level noise due to the broadband noise floor of the receiver.
- High level noise or jitter of the trace data due to the noise floor and the phase noise of the LO source inside the test set.

You can reduce noise errors by doing one or more of the following:

- Increase the [source power](#) to the device being measured - ONLY reduces low-level noise.

- [Narrow the IF bandwidth.](#)
- Apply several measurement [sweep averages.](#)

Switch Repeatability Errors

Mechanical RF switches are used in the analyzer to switch the source attenuator settings.

Sometimes when mechanical RF switches are activated, the contacts close differently from when they were previously activated. When this occurs, it can adversely affect the accuracy of a measurement.

You can reduce the effects of switch repeatability errors by avoiding switching attenuator settings during a critical measurement.

Connector Repeatability Errors

Connector wear causes changes in electrical performance. You can reduce connector repeatability errors by practicing good connector care methods. See [Connector Care.](#)

Systematic Errors

Systematic errors are caused by imperfections in the analyzer and test setup.

- They are repeatable (and therefore predictable), and are assumed to be time invariant.
- They can be characterized during the calibration process and mathematically reduced during measurements.
- They are never completely removed. There are always some residual errors due to limitations in the calibration process. The residual (after measurement calibration) systematic errors result from:
 - imperfections in the calibration standards
 - connector interface
 - interconnecting cables
 - instrumentation

Reflection measurements generate the following three systematic errors:

- [Directivity](#)
- [Source Match](#)
- [Frequency Response Reflection Tracking](#)

Transmission measurements generate the following three systematic errors:

- [Isolation](#)
- [Load Match](#)
- [Frequency Response Transmission Tracking](#)


Notes about the following Systematic Error descriptions:

- The figures for the following six systematic errors show the relevant hardware configured for a forward measurement. For reverse measurements, internal switching in the analyzer makes Port 2 the source and Port 1 the receiver. 'A' becomes the transmitted receiver, 'B' becomes the reflected receiver, and 'R2' becomes the reference receiver. These six systematic errors, times two directions, results in 12 systematic errors for a two port device.
- For simplicity, it may be stated that ONE standard is used to determine each systematic error. In reality, ALL standards are used to determine ALL of the systematic errors.
- The following describes an SOLT calibration. This does not apply to TRL, or other types of calibration.

Directivity Error

All network analyzers make reflection measurements using directional couplers or bridges.

With an ideal coupler, only the reflected signal from the DUT appears at the 'A' receiver. In reality, a small amount of incident signal leaks through the forward path of the coupler and into the 'A' receiver. This leakage path, and any other path that allows energy to arrive at the 'A' receiver without reflecting off the DUT, contributes to directivity error.

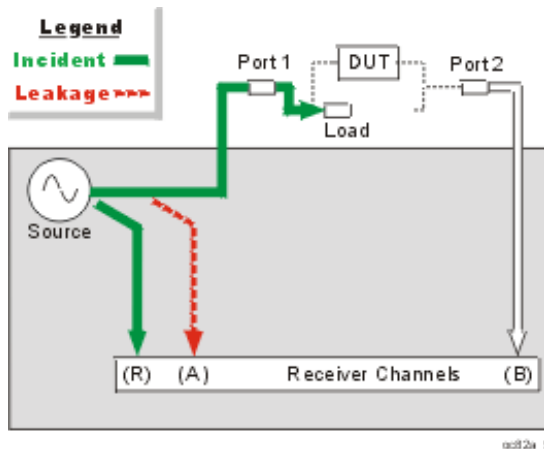

How the Analyzer Measures and Reduces Directivity Error.


1. During calibration, a load standard is connected to Port 1. We assume no reflections from the load.
2. The signal measured at the 'A' receiver results from the incident signal leakage through the coupler and other paths.
3. Directivity error is mathematically removed from subsequent reflection measurements.

Isolation Error

Ideally, only signal transmitted through the DUT is measured at the 'B' receiver.

In reality, a small amount of signal leaks into the 'B' receiver through various paths in the analyzer.

The signal leakage, also known as crosstalk, is isolation error which can be characterized and reduced by the analyzer.

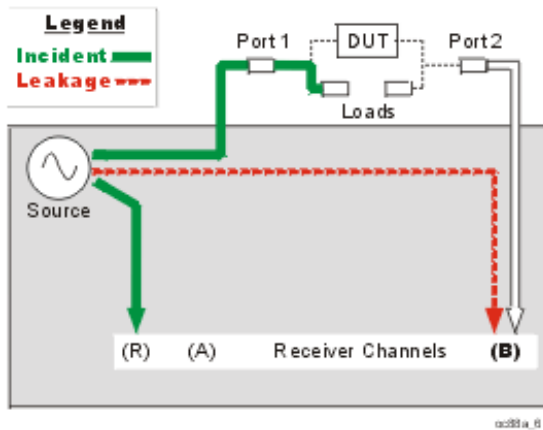

How the Analyzer Measures and Reduces Isolation Error


1. During calibration, load standards are connected to both Port 1 and Port 2.
2. The signal measured at the 'B' receiver is leakage through various paths in the analyzer.
3. This isolation error is mathematically removed from subsequent transmission measurements.

Source Match Error

Ideally in reflection measurements, all of the signal that is reflected off of the DUT is measured at the 'A' receiver.

In reality, some of the signal reflects off the DUT, and multiple internal reflections occur between the analyzer and the DUT. These reflections combine with the incident signal and are measured at the 'A' receiver, but not at the 'R' receiver.

This measurement error is called source match error which can be characterized and reduced by the analyzer.

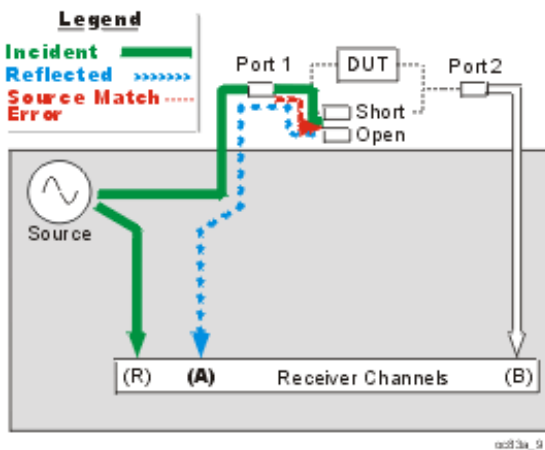

How the Analyzer Measures and Reduces Source Match Error

1. During calibration, all reflection standards are connected to Port 1. Known reflections from the standards are measured at the 'A' receiver.
2. Complex math is used to calculate source match error.


3. Source match error is mathematically removed from subsequent reflection and transmission measurements.

Load Match Error

Ideally in transmission measurements, an incident signal is transmitted through the DUT and is measured at the 'B' receiver.

In reality, some of the signal is reflected off of Port 2 and other components and is not measured at the 'B' receiver.

This measurement error is called load match error which can be characterized and reduced by the analyzer.

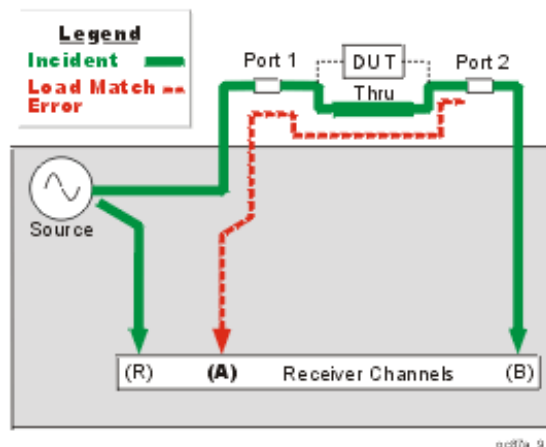

How the Analyzer Measures and Reduces Load Match Error

1. The Port 1 and Port 2 test connectors are mated together for a perfect zero-length thru connection. If this is not possible, a [characterized thru adapter](#) is inserted. This allows a known amount of incident signal at Port 2.
2. The signal measured at the 'A' receiver is reflection signal off of Port 2
3. The resulting load match error is mathematically removed from subsequent transmission and reflection measurements.

Frequency Response Reflection Tracking Error

Reflection measurements are made by comparing signal at the 'A' receiver to signal at the 'R1' receiver. This is called a ratio measurement or "A over R1" (A/R1).


For ideal reflection measurements, the frequency response of the 'A' and 'R1' receivers would be identical.

In reality, they are not, causing a frequency response reflection tracking error. This is the vector sum of all test variations in which magnitude and phase change as a function of frequency. This includes variations contributed by:

- signal-separation devices
- test cables
- adapters


- variations between the reference and test signal paths

Frequency response reflection tracking error can be characterized and reduced by the analyzer.

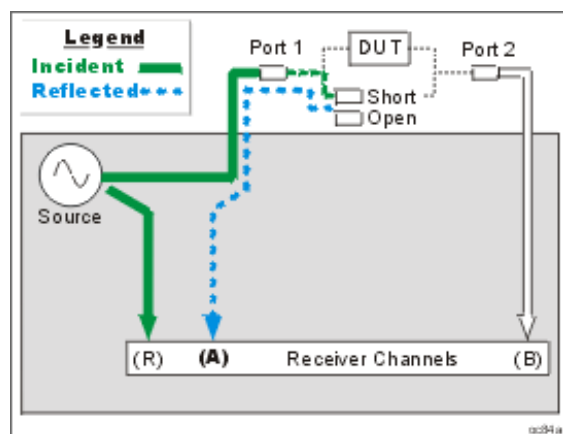

How the Analyzer Measures and Reduces Frequency Response Reflection Tracking Error.

1. During calibration, all reflection standards are used to determine reflection tracking.
2. The average 'A' receiver response is compared with the 'R1' receiver response.
3. Complex math is used to calculate Frequency Response Reflection Tracking Error (see the following diagram). This frequency response reflection tracking error is mathematically removed from subsequent DUT measurements.

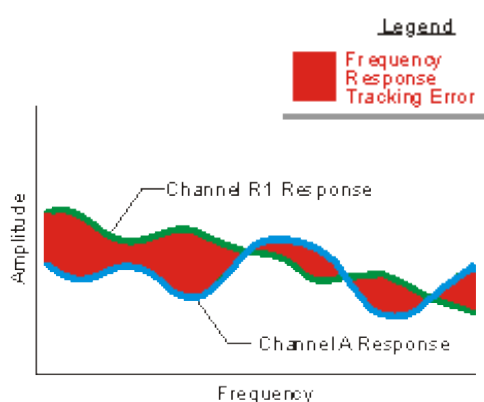

Note: In reflection response calibrations, only a single calibration standard is measured (open or short) and thus only its contribution to the error correction is used.

Frequency Response Transmission Tracking Error

Transmission measurements are made by comparing signal at the 'B' receiver to signal at the 'R1' receiver. This is called a ratio measurement or "B over R1" (B/R1).


For ideal transmission measurements, the frequency response of the 'B' and 'R1' receivers would be identical.

In reality, they are not, causing a frequency response transmission tracking error. This is the vector sum of all test variations in which magnitude and phase change as a function of frequency. This includes variations contributed

by:


- signal-separation devices
- test cables
- adapters
- variations between the reference and test signal paths

Frequency response transmission tracking error can be characterized and reduced by the analyzer.

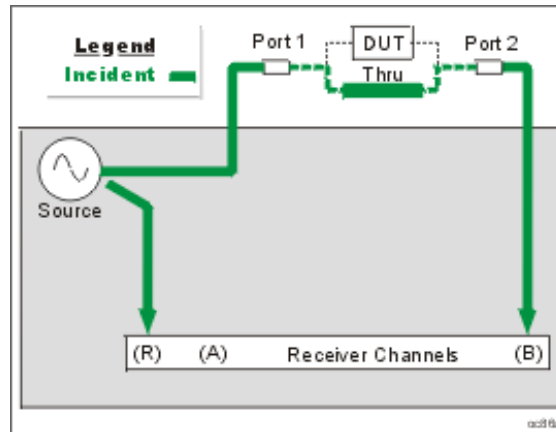


How the Analyzer Measures and Reduces Frequency Response Transmission Tracking Error.

1. During calibration, the Port 1 and Port 2 test connectors are mated together for a perfect zero-length thru connection. If this is not possible, a [characterized thru adapter](#) is inserted. This allows a known amount of incident signal to reach Port 2.
2. Measurements are made at the 'B' and 'R1' receivers.
3. Complex math is used to calculate Frequency Response Transmission Tracking Error (see the following diagram). This frequency response transmission tracking error is mathematically removed from subsequent **DUT** measurements.

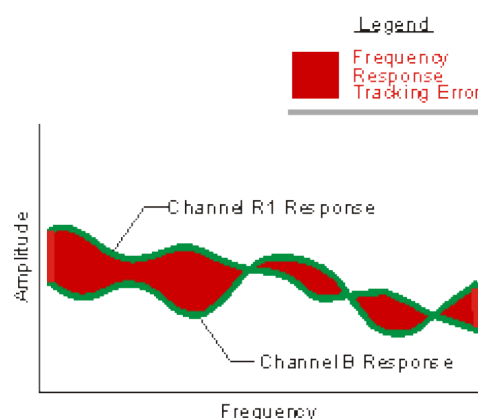

3-Port Error Terms

The following flow diagram displays the 3-port error term model:

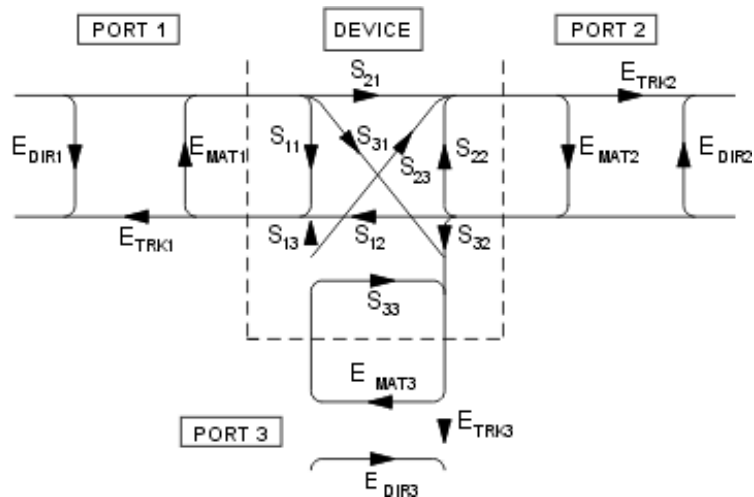

where:

- E = error term
- DIR = Directivity
- MAT = Forward Source Match and Reverse Load Match
- TRK = Forward Reflection Tracking and Reverse Transmission Tracking

4-Port error terms

A full 4-port calibration requires the following terms:

[Learn about the port numbering convention](#) for error terms.

		Source Port			
		1	2	3	4
R e c e i v e	1	DIR 1,1 RTRK 1,1 SRM 1,1	LDM 1,2 TTRK 1,2 XTLK 1,2	LDM 1,3 TTRK 1,3 XTLK 1,3	LDM 1,4 TTRK 1,4 XTLK 1,4
	2	LDM 2,1 TTRK 2,1 XTLK 2,1	DIR 2,2 RTRK 2,2 SRM 2,2	LDM 2,3 TTRK 2,3 XTLK 2,3	LDM 2,4 TTRK 2,4 XTLK 2,4
	3	LDM 3,1	LDM 3,2	DIR 3,3	LDM 3,4

o r t	3	TTRK 3,1 XTLK 3,1	TTRK 3,2 XTLK 3,2	RTRK 3,3 SRM 3,3	TTRK 3,4 XTLK 3,4
	4	LDM 4,1 TTRK 4,1 XTLK 4,1	LDM 4,2 TTRK 4,2 XTLK 4,2	LDM 4,3 TTRK 4,3 XTLK 4,3	DIR 4,4 RTRK 4,4 SRM 4,4

Reflection terms

- DIR: Directivity
- RTRK: Reflection Tracking
- SRM: Source Match

Transmission terms

- LDM: Load Match
- TTRK: Transmission Tracking
- XTLK: Cross Talk

How can we measure only 3 THRU connections?

On a 4-port PNA, a full 4-port cal can be performed while measuring only 3 THRU connections. Measuring more than 3 THRU connections will give higher accuracy.

By measuring all of the reflection terms, and 3 transmission THRU connections, there is adequate information available to calculate the remaining transmission terms. The following is a high level explanation of the concept. The actual calculations are much more complex.

To simplify, let's substitute letters (A,B,C,D) for port numbers from the diagram above so that they can be combined without confusion. Also for simplicity, let's assume that the source match and directivity errors are zero.

	A	B	C	D
A	AA	AB	AC	AD
B	BA	BB	BC	BD
C	CA	CB	CC	CD
D	DA	DB	DC	DD

- The reflection errors are all measured (AA, BB, CC, DD).
- Lets assume we measure a THRU between ports AB, AC, AD. The reverse direction for these THRU's are

also measured at the same time (BA, CA, DA).

- The terms left to calculate are BC, CB, BD, DB, CD, DC.

The following shows how the BC term is calculated from BA and AC:

$$\frac{BA * AC}{AA} = \frac{B * \cancel{AA} * C}{\cancel{AA}} = BC$$

Similarly:

- CB is calculated from CA and AB
- BD is calculated from BA and AD
- DB is calculated from AB and DA
- CD is calculated from CA and AD
- DC is calculated from DA and AC

Monitoring Error Terms using Cal Set Viewer

You can use **Cal Set Viewer** to monitor the measured data and the calculated error term. This will help to determine the health of your PNA and the accuracy of your measurements.

By printing or saving the error terms, you can periodically compare current error terms with previously recorded error terms that have been generated by the same PNA, measurement setup, and calibration kit. If previously generated values are not available, refer to Typical Error Term Data in Appendix A, "Error Terms", of the Service Guide.



Note: The service guide for your PNA is available at <http://www.agilent.com/find/pna>
It is also on the CDROM that was shipped with your PNA.

- A stable system should generate repeatable error terms over about six months.
- A sudden shift in error terms over the same frequency range, power, and receiver settings, may indicate the need for troubleshooting system components. For information on troubleshooting error terms, see Appendix A, "Error Terms", of the Service Guide.
- A subtle, long-term shift in error terms often reflects drift or connector and cable wear. The cure is often as simple as cleaning and gauging connectors or inspecting cables.


Viewing Cal Set Data

- Existing measurement traces are unaffected by the Cal Set Viewer.
- The Cal Set data trace is presented in the highest unused channel number (usually 32) in the active window.
- The Cal Set data trace is labeled as S11 in the status bar regardless of the type of error term or standard.
- Only one Cal Set error term or standard data can be viewed at a time. However, a data trace can be stored into memory and then compared to other data traces.

How to access Cal Set Viewer

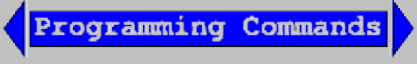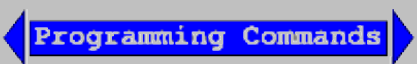Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Cal Set Viewer
For PNA-X models	
1. Press CAL 2. then [Manage Cals] 3. then [Cal Set Viewer]	1. Click Response 2. then Cal 3. then Manage Cals 4. then Cal Set Viewer

 How to use Cal Set Viewer



- Use the down arrow to select a Cal Set. Then click either:
 - Error Terms** - calculated data.
 - Standards** - the raw measurement data of the Standard. **ONLY** available with Unguided Cal (not ECal or Guided Cal).
- Use the down arrow to select an error term or standard to view.
- Select the **Enable** check box to view the data on the PNA screen.

Port numbering convention for error terms is the same as for S-Parameters:

E Term (Receiver, Source) with the following exceptions:

- Load Match (2,1) - The match of port 2 which is measured by making an S11 measurement.
- Load Match (1,2) - The match of port 1 which is measured by making an S22 measurement.
- Transmission Tracking (2,1) - The port 2 receiver relative to the port 1 reference. (source=port 1).
- Transmission Tracking (1,2) - The port 1 receiver relative to the port 2 reference. (source=port 2).

- And so forth for multiport calibrations.
-

Last modified:

December 3, 2007 MX Updated UI

Modify Calibration Kits

You can create or modify calibration kit files using Advanced Modify Cal Kits.

- [About Modifying Calibration Kits](#)
- [Creating a New Cal Kit from an Existing Cal Kit](#)
- [Creating Custom Calibration Kits using a New Connector Family](#)
- [How to Modify Cal Kits](#)
- [Calibration Class Assignments](#)
- [Waveguide Cal Kits](#)

Note: For a detailed discussion of Cal Kits and standards, see [App Note 1287-11](#).

[See other Calibration Topics](#)

About Modifying Calibration Kits

You can modify calibration kit files or create a custom one.

Note: You CAN NOW modify Data-based Cal Kits. [Learn more.](#)

For most applications, the default calibration kit models provide sufficient accuracy for your calibration. However, several situations exist that may require you to create a custom calibration kit:

- Using a connector interface different from those used in the predefined calibration kit models.
- Using standards (or combinations of standards) that are different from the predefined calibration kits. For example, using three offset SHORTs instead of an OPEN, SHORT, and LOAD to perform a 1-port calibration.
- Improving the accuracy of the models for predefined kits. When the model describes the actual performance of the standard, the calibration is more accurate. (Example: A 7 mm LOAD is determined to be 50.40 instead of 50.00.)
- Modifying the THRU definition when performing a calibration for a non-insertable device.
- Performing a [TRL calibration](#).

Creating a New Cal Kit from an Existing Cal Kit

You can create a new custom Cal Kit using a copy of an existing Cal Kit as a starting point. Here is how:

1. From the [Edit PNA Cal Kits](#) dialog, click **Import Kit** to load the Cal Kit you want to use as a starting point. A "Duplicate Name..." message appears. Click **OK** to load a duplicate copy of the Cal kit into the last position of the Edit PNA Cal Kits dialog.

2. Select the imported kit.
3. Click **Edit Kit**, then change the [Cal Kit Name and Description](#).
4. Click **Installed Kits - Save As** to save the new Cal Kit to a .ckt file.
5. Recommended: Also click **Edit PNA Cal Kits - Save As** to save the entire collection of Cal Kits to a .wks file.
6. If using a new or modified connector, click [Change Family](#) to change the connector family.
7. Click **Add or Edit** to change connector descriptions and parameters.
8. Make modifications to your new custom Cal Kit as required. Save your work by clicking **Installed Kits - Save As**

Note: Custom Cal Kits must be imported after a firmware upgrade. [Learn more](#)

Creating Custom Calibration Kits using a New Connector Family

To create a custom calibration kit that uses a new connector type, you must first define the connector family. The connector family is the name of the connector-type of the calibration kit, such as:

- APC7
- 2.4 mm
- Type-N (50O)

Although more than one connector family is allowed, it is best to limit each calibration kit to only one connector family.

If you are using a connector family that has male and female connectors, include definitions of both genders. If you are using a family with no gender, such as APC7, only one connector definition is required.

Use the following steps to create a custom calibration kit:

1. In the [Edit PNA Cal Kits dialog box](#), click **Insert New** to add the new connector family.
2. In the [Edit Kit dialog box](#):
 - Type the Kit Description for the custom cal kit.
 - Click **Add** in the Connectors section of the dialog box.
3. In the [Add Connector dialog box](#):
 - Type a Connector Family name.
 - Type a Description of the connector.
 - Select the Gender of one of the connectors.
 - Type the minimum and maximum Frequency Range.

- Type the Impedance.
- Click the down-arrow to select the Media.
- Type the cut-off frequency.
- Click **Apply**.
- Click **OK**.

4. If you need to add another connector gender, in the [Edit Kit dialog box](#) :

- Click **Add** in the Connectors section again for the next connector gender.

5. If you are adding another connector gender, repeat step 3.

Note: If you have male and female versions of the connector family, you probably do NOT also have a NO GENDER version.

6. Now that the connector family is added to the custom cal kit, you are ready to add new calibration standards. In the [Edit Kit dialog box](#):

- Under the list of standards, click **Add**.

7. In the [Add Standard dialog box](#):

- Select the type of standard (OPEN, SHORT, LOAD, or THRU).
- Click **OK**.

8. In the [Edit/Add Standards dialog box](#):

- Complete the information in the dialog box for the standard you selected. Note that for banded standards, the start and stop frequency may be different than the frequency range of the specified connector. Edit the start and stop frequencies as needed.
- Click **OK** when all the settings are correct.

9. Repeat steps 6 - 8, as necessary, to add all standards and definitions to the new custom cal kit.

10. Assign each of the standards to a calibration class. This is done through the [Modify Calibration Class Assignment](#) dialog box.



11. Click **File, PrintToFile**. PrintToFile will generate a .prn file (ascii file with comma delimiters) that can be imported into a spreadsheet.

12. Import the .prn file into an application such as Microsoft Excel, and print the results.


- Use the spreadsheet to verify that each standard in the kit belongs to the same connector family and the gender of each standard is properly specified. It is important that the connectors and genders for your standards are correctly defined and verified in order for your SmartCal (guided calibrations) to work properly.

How to Modify Cal Kits

The series of dialog boxes that follow allow you to modify the standard definitions or class assignments of calibration kit files.

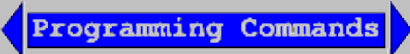Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Advanced Modify Cal Kit
For PNA-X models	
1. Press CAL 2. then [More] 3. then [Cal Kit]	1. Click Response 2. then Cal 3. then More 4. then Cal Kit

Edit PNA Cal Kits

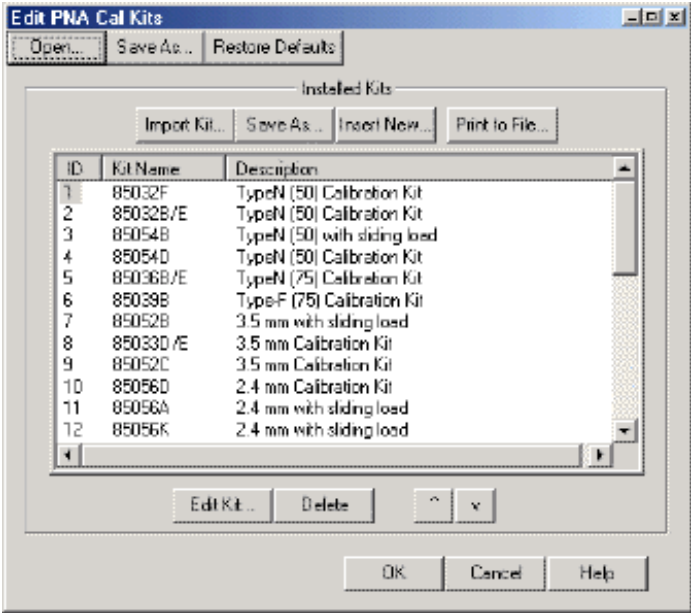

Edit PNA Cal Kits dialog box help

Provides access to all Agilent cal kits and allows modification of their standard definitions.

PNA Cal Kits and Firmware Upgrades

- The default "factory" cal kits are overwritten when new firmware is installed. Your custom cal kits (files with custom filenames) are NOT overwritten. However, the custom cal kits must be imported (click **Import Kit**) into the new firmware.
- All PNA cal kits can only be imported by the current firmware revision and later. They can NOT be imported by PAST firmware revisions. Once a Cal Kit has been imported by a later firmware revision, it cannot be imported by the previous version of firmware from which it originated.
- When a firmware upgrade takes place, ALL cal kits, both factory and custom, that are present on the PNA are saved to a single *.wks file using a unique filename. These files are NOT Excel spreadsheet files. They are opened using the **Open** button (see below). They can be used as archives of cal kits from previous firmware versions.

Open Opens an archive of cal kits from past firmware upgrades and 'Save As' operations.

Save As Saves ALL cal kits in the PNA to a *.wks file.

Restore Defaults Re-installs the default factory contents of all Agilent cal kits from the PNA hard drive. The factory Agilent cal kits are stored on the PNA hard drive at C:/Program Files/Agilent/Network Analyzer/PnaCalKits/factory.

Installed Kits

Import Kit Invokes the [Import Kit](#) dialog box.

Save As Saves the selected calibration kit and definitions (using .ckt file type).

Insert New Invokes a blank [Edit Kit dialog box](#) to create new calibration kit definitions.

Print to File Prints the contents of the selected cal kit to a .prn file.


Edit Kit... Invokes the [Edit Kit dialog box](#) to modify selected calibration kit definitions.

Note: You CAN NOW modify Data-based Cal Kits. [Learn more.](#)

Delete Deletes selected calibration kit file.

^ Selects previous / next calibration kit in list.

For more information see [Creating Custom Calibration Kits using a New Connector Family](#).

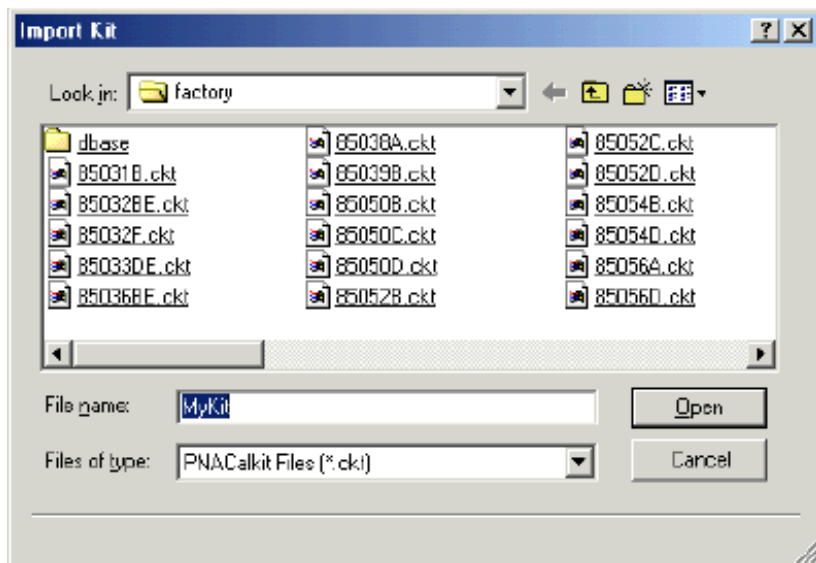

Import Kit dialog box help

Imports calibration kit definitions from hard disk or other drive that are saved in the various formats. With PNA version 4.0 or later, four kit types can be imported.

Note: See [PNA Cal Kits and Firmware Upgrades](#)

Files of type Select the file type of your Cal Kit

Cal Kit Format	File Type
Current PNA Series Cal Kit	*.ckt
Old PNA Series Cal Kit (Version 1)	*.ck1
8510 Cal Kit	CK_*
8753, 8752, 8719, 8720, or 8722 Cal Kit	*.ck

File name Navigate and select your cal kit file.

Open Imports the selected file. The kit is added at the end of the list of cal kits.

Importing Kits other than Current PNA Series Kits

Cal kit files from Agilent "legacy" network analyzers (listed above) may not contain information that the PNA requires. Therefore, the PNA may modify the cal kit name and description, the cal standards, and the cal class assignments in a best effort manner. You may need to correct these modifications after importing your legacy cal kit to meet your specific requirements.

- "Legacy" cal kit files are based on the analyzer test port sex; PNA cal kits are based on the Device Under Test (DUT) connector sex. Therefore, when the kit is imported the standard's label and description are reversed and are noted as F- (female) and M- (male) .

- When a Coaxial standard is detected in the kit file, a pair of male/female connectors is typically created.
- Waveguide standards that are created as connector have no gender.

Edit Kit

Identification

Kit Number: 1 Kit Name: 85052B

Kit Description: 3.5 mm with sliding load

Connectors

Description: APC 3.5 male Add or Edit...

Family: APC 3.5 Change Family...

Class Assignments

SOLT Edit...

ID	Standard	Description
2	OPEN -M-	3.5 mm male open
15	OPEN -F-	3.5 mm female open
1	SHORT -M-	3.5 mm male short
7	3.5 mm female s...	3.5 mm female short
6	LOWBAND LOA...	3.5 mm male lowband load
5	SLIDING LOAD ...	3.5 mm male sliding load
3	BROADBAND L...	3.5 mm male broadband load
12	LOWBAND LOA...	3.5 mm male lowband load

Add... Edit... Delete Delete All

OK Cancel Help

Edit Kit dialog box help

Identification

Kit Number Number of the selected calibration kit.

Kit Name Allows you to change the Name of the selected calibration kit.

Kit Description Allows you to change the description of the selected calibration kit.

Connectors

Note: You can NOT use a connector with a new or modified name to perform an [ECal User Characterization](#).

Click the down arrow to change the connector type.

Add or Edit Invokes the [Add or Edit Connector](#) dialog box which allows you to add new connector type to the calibration kit or edit the connector properties.

Change Family Invokes the [Change Connector Family](#) dialog box which allows you to rename the entire connector family name.

Class Assignments

Click the down arrow to change the Class Assignment.

Edit Invokes the [Modify Calibration Class Assignments](#) dialog box.

Standards in Kit

Lists the current standards and descriptions in the cal kit.

Add... Invokes the [Add Standard](#) dialog box that allows you to add definitions for a standard.

Edit... Invokes the [Edit dialog box](#) that allows you to modify standard definitions for the selected standard: either Open, Short, Load, or Thru.

Delete Deletes selected standard from calibration kit.

Add or Edit Connector

Identification
Connector Family: X-band waveguide
Description: X-band waveguide

Frequency Range
Min: 6555 MHz
Max: 13111 MHz

Gender
☐ Male
☐ Female
☒ No Gender

Impedance
Z0: 1 ohms

Media
Media: WAVEGUIDE
Cutoff Frequency: 6555 MHz
Height/Width Ratio: 0.5

OK Cancel Apply Help

Add or Edit Connector dialog box help

Identification

Note: You can NOT use a connector with a new or modified name to perform an [ECal User Characterization](#).

Connector Family Allows you to Add or Edit a specific connector name. If you change Connector Family to a unique name, the name and selected Gender is ADDED to the list of connectors in that kit.

Note: To change the Connector Family Name of all connectors in the Kit, click [Change Family](#) on the previous dialog box.

Description Displays connector type and gender.

Frequency Range

Min Allows you to define the lowest frequency at which the standard is used for calibration.

Max Allows you to define the highest frequency at which the standard is used for calibration.

Gender

Allows you to define the connector gender.

Impedance

Allows you to define the impedance of the standard.

Media

Allows you to define the medium (or 'geometry') of the connector: COAX or WAVEGUIDE.


Waveguide Cal Kits

If modifying or creating a waveguide cal kit, be sure to make the following settings. You can [create a custom waveguide cal kit](#) using an existing factory waveguide Cal kit as a starting point. The factory cal kits already have these settings.

- Frequency Range: **Min. frequency = Cutoff frequency.**
- Gender: **No Gender**
- Impedance Z0: **1 ohm**
- Media: **Waveguide**
- **Cutoff Frequency** enter the low-end cutoff frequency.
- **Height/Width Ratio** Used to calculate waveguide loss. This value is usually on the data sheet for waveguide devices. For more information see [App Note 1287-11](#).

Other waveguide settings

- If performing an [Unguided Cal](#), change [System Impedance](#) to 1 ohm.
- For waveguide, choose [TRL \(Thru-Reflect-Line\)](#) calibration type . These calibration types are more accurate and take fewer steps than SOLT.

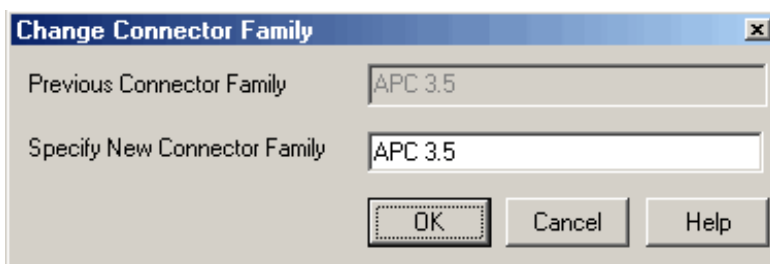

Change Connector Family dialog box help

Note: You can NOT use a connector with a new or modified name to perform an [ECal User Characterization](#).

Performs a text "Search and Replace" function. Within the description field of each of the standards of the current Cal Kit, it searches for the Previous Connector Name and replaces it with the New Connector Name.

Specify New Connector Name Allows you to replace the primary connector-family name from the selected kit with the new connector-family name. The PNA allows multiple connector-families per kit.

Previous Connector Name Displays the primary connector-family name. All occurrences of the previous connector name will be replaced throughout calibration dialog boxes. This includes calibration kit labels and description fields.

Notes:

- String replacement requires an exact match and is case sensitive. For example, "Type N" does not match "type N", and "apc 7" does not match "APC 7".
- Some calibration kits may include connector names that do not match strings within labels or description fields. You may reuse the Change Connector Name dialog to standardize the name within the kit, and then to replace the standard name with the new name.

Example:

Select the 85056A calibration kit. The default connector-family name is "APC 2.4". However, many standard description files are labeled "2.4 mm". You may want to replace the connector family name with a new name and update the standard descriptions to match the new name. For this kit, use a two step procedure.

1. Use the Change Connector Name dialog to replace "APC 2.4" with "2.4 mm".
2. Use the Change Connector Name dialog to replace "2.4 mm" with the new name, "PSC 2.4 mm".

See Also [Creating a New Cal Kit from an existing Cal Kit](#)

P11644A: Modify SOLT Calibration Class Assignments

Calibration Kit Class:

☒ S11A ☐ S22A ☐ FWD TRANS ☐ REV TRANS
☐ S11B ☐ S22B ☐ FWD MATCH ☐ REV MATCH
☐ S11C ☐ S22C ☐ ISOLATION

☒ Link FWD TRANS, FWD MATCH, REV TRANS, and REV_MATCH
☐ Expanded Calibration (applies to reflection classes)
☐ Measure all mateable standards in class
☐ Use expanded math when possible

Calibration Class Label:

S11A Short

Unselected Standards:

ID	Label	Description
1	load	P-band fixed load
2	load	P-band sliding load
3	load	P-band 1/4 wave offs
5	Short Offset	P-band 1/4 offset sho
6	Thru	P-band Thru
7	P-band Delay Li...	P-band Quarter Wave

>>

<<

Selected Standards:

ID	Label	Description
4	Short	P-band short

Move Up Move Down

The order of the selected standards is used to determine which standard is used when multiple standards are valid at a given frequency. Standards listed first have priority.

Modify Calibration Class Assignments dialog box help

Allows you to assign single or multiple standards to Calibration Classes.

There are two ways to get here:

1. Click **Calibration**
2. Click **Advanced Modify Cal Kit..**
3. Select the Cal Kit, then click **Edit Kit**
4. Under Class Assignments, select the Cal Method (SOLT, TRL), then click **Edit**

You can also get here during a [SmartCal Calibration](#).

1. From the [Select DUT Connectors and Cal Kits dialog](#), check **Modify Cal**, then click **Next**.
2. At the Modify Cal dialog, click a **Mod Stds** button.
3. At the View/Modify Properties Dialog, select the Cal Method (SOLT, TRL), then click **View/Modify**

To assign a standard to a calibration class:

1. Select the **Calibration Kit Class**
2. Select the standard from the **Unselected Standards** field
3. Click the right arrow to move the standard to the **Selected Standards** field.

Notes:


- During an Unguided Cal all of the **Selected Standards** are presented. You then choose which of these standards to measure.
- The MATCH standards must be assigned to the FWD MATCH, REV MATCH, and LINE classes. See [TRL calibrations](#) to learn more about TRL standards.
- Use MOVE UP and MOVE DOWN to change the **ORDER** of the standard. The order is used during a [SmartCal](#) to determine overlap priorities when:
 - **Multiple standards are valid for a frequency** - standards are presented in the order in which they appear.
 - **Using two sets of standards** - modify the order in which standards appear to reflect the configuration of your DUT. For example, for a DUT with a male connector on port 1 and a female connector on port 2, order the devices within the S11 classes (A, B, and C) such that the MALE standards are first in the list. Then order the S22 classes specifying the FEMALE standards as the first in the list.

To Add or Edit standards, click Calibration then, click [Advanced Modify Cal Kit](#).

- See [TRL Class Assignments](#)
- [Learn more about Calibration Classes.](#)

Calibration Class Label

The label that appears on the Unguided Cal - Measure Mechanical Standards dialog box. For example, the Calibration Class Label "**Modified OPEN**" would yield the following prompt:

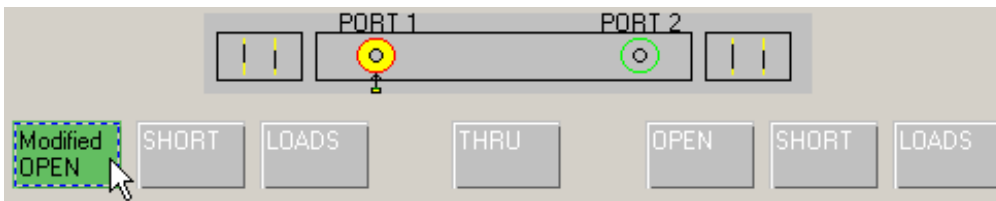

The following selections in this dialog box depend on your Class Assignment selection (**SOLT** or **TRL**) in the [Edit Kit](#) dialog box.

SOLT ONLY

Link FWD TRANS, FWD MATCH, REV TRANS, and REV MATCH Check to automatically assign the standard definition for FWD TRANS to FWD MATCH, REV MATCH, and REV TRANS. Clear to separately assign FWD MATCH, REV MATCH and REV TRANS classes (SOLT calibrations only).

Expanded Calibration

The following two check boxes **apply ONLY during Guided Calibrations**. For Unguided Calibration, these check boxes are ignored, including the case where the multiple standards dialog box is presented.

Measure all mateable standards in class Check this box to attain the very highest accuracy possible. For

example, if a cal kit contains several load standards, during the calibration process you will be prompted to measure each of the standards. This could require a significant amount of calibration time. When checked, the "Use expanded math when possible" box is also checked automatically.

Use expanded math when possible Some kits contain multiple calibration standards of the same type that together cover a very wide frequency range. (For example: multiple shorts, or a lowband load and a sliding load.) If a calibration requires more than one standard to cover the calibration frequency range, there can be regions of overlapping measurements. When this checkbox is selected, the PNA automatically computes the most accurate measurement in the overlap regions using a "weighted least squares fit" algorithm. This function improves accuracy without slowing the calibration speed.

- Manually select this checkbox only when using a cal kit that contains multiple standards of the same type. (For example: multiple shorts, or a lowband load and a sliding load.)
- The checkbox is cleared by default when a [polynomial model](#) is selected from the cal kit menu.
- The checkbox is selected by default when the 85058B or 85058E [data-based model](#) is selected from the cal kit menu.

TRL ONLY

If TRL is selected as Class Assignment in the [Edit Kit](#) dialog box, the following changes appear in this dialog:

The screenshot shows the 'Edit Kit' dialog box with the 'Calibration Kit Class' section set to 'TRL THRU'. The 'Calibration Reference Z0' section has 'LINE Z0' selected. The 'Testport Reference Plane' section has 'THRU STANDARD' selected. The 'LRL line auto characterization' checkbox is checked.

Calibration Kit Class

- Learn more about [TRL standards](#).
- [Isolation calibration](#) is not usually necessary in the PNA.

LRL line auto characterization

Note: This setting ONLY applies if an LRL Cal Kit is being modified **AND** Testport Reference Plane is set to Thru Standard **AND** the TRL Thru class standard and the TRL Line/Match class standard both have the same values for Offset Z0 and Loss. Otherwise, this setting is ignored.

- Check the box to allow the PNA to automatically correct for line loss and dispersion characteristics.
- Clear the box if anomalies appear during a calibrated measurement which may indicate different loss and impedance values for the Line standards.

Calibration Reference Z0 (TRL only)

System Z0 The system impedance is used as the reference impedance. Choose when the desired test port

impedance differs from the impedance of the LINE standard. Also, choose when skin effect impedance correction is desired for coax lines.


Line Z0 The impedance of the line standard is used as the reference impedance, or center of the Smith Chart. Any reflection from the line standard is assumed to be part of the directivity error.

Testport Reference Plane (TRL only)

Thru Standard The THRU standard definition is used to establish the measurement reference plane. Select if the THRU standard is zero-length or very short.

Reflect Standard The REFLECT standard definition is used to establish the position of the measurement reference plane. Select if the THRU standard is not appropriate AND the delay of the REFLECT standard is well defined.

Also, select If a flush short is used for the REFLECT standard because a flush short provides a more accurate phase reference than a Thru standard.

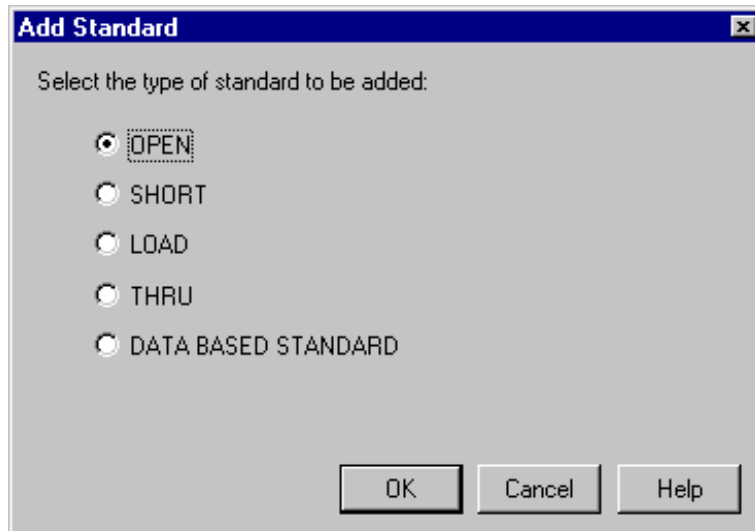

Add Standard dialog box help

Allows you to add standards to the calibration kit file.

OPEN Adds an open to the calibration kit file.

SHORT Adds a short to the calibration kit file.

LOAD Adds a load to the calibration kit file.

THRU Adds a thru to the calibration kit file.

DATA BASED STANDARD Adds a data-based standard to the calibration kit file.

OK Invokes a blank Edit Standards: [Open, Short, Load, Thru, or Data-Based](#) dialog box.

For more information see [Creating Custom Calibration Kits using a New Connector Family](#).

Edit / Add Standards (Open, Short, Load, Thru, or Data-based)

Open

Identification
Standard ID: 5 Label: OPEN M
Open Description: Type N (50) male open

Frequency Range
Min: 0 MHz Max: 999000 MHz

Connector
Type N (50) male

Open Characteristics
C0: 0 F(e-15) C2: 0 F(e-36)/Hz²
C1: 0 F(e-27)/Hz C3: 0 F(e-45)/Hz³

Delay Characteristics
Delay: 0 pSec Loss: 0 Gohms/ft
Z0: 50 ohms

Clear OK Cancel Apply Help

Edit / Add Standards dialog box help

Note: For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

The boxed areas of the previous graphic applies to all standard types.

The other areas change depending on the type of standard selected.

Identification

Standard ID Number in list of standards

Label Type of standard.

Description Description of standard.

Frequency Range

Min Defines the lowest frequency at which the standard is used for calibration.

Max Defines the highest frequency at which the standard is used for calibration.

Connector

Indicates the type and gender (Male, Female, None) of the standard.

Delay Characteristics

Delay Defines the one-way travel time from the calibration plane to the standard in seconds.

Z0 Defines the impedance of the standard.

Loss Defines energy loss in Gohms, due to skin effect, along a one-way length of coaxial cable.

The following applies to standard types [Open](#), [Short](#), [Load](#), [Thru](#), and [Data-based](#)

Open Standard

Open Characteristics					
C0	89.939	F(e-12)	C2	-264.9901	F(e-36)/Hz ²
C1	2536.7999	F(e-27)/Hz	C3	13.4	F(e-45)/Hz ³

C0, C1, C2, C3 Specifies the fringing capacitance.

Short Standard

Short Characteristics					
L0	0.7563	H(e-12)	L2	-52.429	H(e-33)/Hz ²
L1	459.8799	H(e-24)/Hz	L3	1.5846	H(e-42)/Hz ³

L0, L1, L2, L3 Specifies the residual inductance.

Load Standard

Load Type		Complex Impedance	
<input type="radio"/> Fixed Load	<input type="radio"/> Arbitrary Impedance	Real	50
<input type="radio"/> Sliding Load	<input checked="" type="radio"/> Offset Load	Imag	0

Delay Characteristics	
Delay	0 pSec
Loss	0 Gohms/s
Z0	50 ohms

Offset Load Definition	
First Offset Standard	THRU
Second Offset Standard	7-32 Line
Load Standard	ADPTR/LOAD -M-

Allows you to select the type of load.

Load Type

Fixed Load Specifies the load type as Fixed. The fixed load is assumed to be a perfect termination without reflection.

Sliding Load A sliding load is defined by making multiple measurements of the device with the sliding load element positioned at various marked positions of a long transmission line. The transmission line is assumed to have zero reflections and the load element has a finite reflection that can be mathematically removed using a least squares circle fitting method.

A sliding load cal can be very accurate when performed perfectly. It can also be very inaccurate when not using proper technique. **For accurate results, closely follow the users manual instructions for the sliding load.**

Arbitrary Impedance Specifies the load type to be have an impedance value different from system Z0. An arbitrary impedance device is similar to a fixed load except that the load impedance is NOT perfect. Early firmware releases of the PNA series used a fixed resistance value. A complex terminating impedance has

been added to allow for more accurate modeling of circuit board or on-wafer devices.

The following Complex Impedance settings are available **ONLY** when Arbitrary Impedance is selected.

- **Real** The real portion of the impedance value.
- **Imaginary** The imaginary portion of the impedance value.

Offset Load In Jan 2006, Offset Load definitions were added to TRL and Waveguide Cal Kit files. Using an Offset Load standard results in a more accurate calibration than with a Broadband Load. Therefore, when performing a calibration using one of the modified Cal Kit definitions, you may be prompted to connect more standards than before this change. To revert to using the Broadband Load Standard without offset, do the following:

1. Click **Calibration**, then **Advanced Modify Cal Kit**
2. Select the kit, then click **Edit Kit**
3. Under Class Assignments, click **Edit**
4. Select Calibration Kit Class **S11C** (Loads)
5. Under Selected Standards, select **Broadband Load**, then click **Move Up** until the standard is at the top of the list. This will ensure that the Broadband Load is used first.

About Offset Load

An offset load is a compound standard consisting of a load element and two known offset elements (transmission lines) of different length. The shorter offset element can be a zero-length (Flush-thru) offset. The load element is defined as a 1-port reflection standard. An offset load standard is used when the response of the offset elements are more precisely known than the response of the load element. This is the case with waveguide. Measurement of an offset load standard consists of two measurements, one with each of the two offset elements terminated by the load element. The frequency range of the offset load standard should be set so that there will be at least a 20 degree separation between the expected response of each measurement.

To specify more than two offset elements, define multiple offset load standards. In cases where more than two offsets are used, the frequency range may be extended as the internal algorithm at each frequency will search through all of the possible combinations of offsets to find the pair with the widest expected separation to use in determining the actual response of the load element.

The following Offset Load settings are available **ONLY** when Offset Load is selected.

- First Offset Standard
 - Second Offset Standard
 - Load Standard
-

Thru Standard

Connectors

Port Type A (50) female Port Type A (50) female

Connectors

Defines connector type and gender at both ports.

Data-Based Standard

Frequency Range

Min 0 MHz

Max 70000 MHz

Upload Data From File

Browse...

Connectors

☒ One Port Standard Port 1 APC 7

File Information:

Package Name = DATA
 Number of Data Variables = 2
 index =0: Number of Data Variable Values = 4
 Data Variable Name = S11
 index =1: Number of Data Variable Values = 4
 Data Variable Name = U11
 Number of IVars = 1
 index =0: Number of Independent Variable Values = 4
 Independent Variable Name = Freq

Note: To learn how to modify data-based standard files, visit <http://na.tm.agilent.com/pna/dbcal.html>

The modified file can then be uploaded into the PNA.

Upload Data From File

Click Browse to load data from a file.

Connectors

One Port Standard Currently only 1-port standards can be modified.

Port 1 Select the type of connector.

File Information Information about the standard that is read from the uploaded file.

Last modified:

- 26-Oct-2007 Added Height/Width for Add connector.
Moved waveguide settings.
- 2-Feb-2007 MX Added UI
- 9/12/06 Added link to programming commands

Power Calibration

Source and Receiver Power Calibrations work together to provide very accurate power levels from the source, and very accurate power measurements from the PNA receiver.

- [Source Power Calibration Overview](#)
- [How to perform Source Power Calibration](#)
- [Copy a Source Power Calibration to other Channels](#)
- [Saving a Source Power Calibration](#)
- [Reducing Time to Complete a Source Power Calibration](#)
- [Receiver Power Calibration](#)
- [Saving Receiver Cals](#)

[See other Calibration Topics](#)

Source Power Calibration Overview

Perform Source Power Calibration when you need accurate power levels at some point in the measurement path between the PNA test ports. For example, you need to characterize the gain of an amplifier across a frequency range at a specified input power. You would perform a source power cal at the input of the amplifier to ensure the **exact** power level into the amplifier across the frequency range.

Using a Source Power Cal, you can expect the power at the point of calibration to be within the range of the uncertainty of the power meter and sensor that is used.

Note: You may not be allowed to perform a Source Power Cal unless you are logged on to the PNA with an [Administrator user account](#).

Source Power Calibration:

- Is independent of measurement type. It corrects the PNA source regardless of which receivers are being used in a measurement. Therefore, it can be used with both [ratio or non-ratio measurements](#).
- Applies ONLY to those measurements on the selected channel that use the test port that was [specified as the Source](#) for the calibration. For example, if you specify Channel 1 and Port 1 as the source to be calibrated, only those measurements on channel 1 that use port 1 as the source will be corrected.
- Can be used in conjunction with other measurement calibrations, such as a full 2-port calibration. For highest accuracy, perform the measurement calibration AFTER the source calibration.
- Can be used with [Power Sweep](#) type. Source Power Cal will correct the power at all power levels across the power sweep.
- Can be used with [Port Power Uncoupled](#).

- Forces [sweep mode to Stepped](#) on measurements with source power correction turned ON.
- Beginning with PNA Rev. 7.50, an external source can be calibrated using Source Power Cal.

Overview of How it works:

[Click to see the detailed procedure](#)

1. Specify the measurement settings (frequency range, IFBW and so forth).
2. Start Source Power Calibration.
3. Connect a power meter sensor to the point at which you want a known power level. This may be at the input or output of your device, or some other point between the test ports.
4. The PNA source is stepped through the specified frequency range, and power is measured with the power meter. At each data point, the source power is adjusted until the measured power is within your specified accuracy level.
5. When complete, the power meter is preset. The source power calibration can be [saved as part of the instrument state](#).
6. The power meter is removed and the measurement path reconnected.
7. The calibration is automatically applied to the channel. All measurements on that channel using that source port benefit from the source power cal.

Verify the source power calibration using the following procedure.

1. Connect the power meter as it was during the source power calibration.
2. Set the PNA to [Point Trigger](#) mode.
3. Trigger the PNA across the trace. Read about the behavior of the [sweep indicator](#).
4. At each data point, the power meter should read the corrected power level within the specified tolerance.

Test Equipment Supported

Power Meters

The following power meters

All Agilent Power Meters are supported for use in a Source Power Calibration.

- See the current list of power meters at: www.agilent.com/find/powermeters
- See a list of [compatible power meter / sensor combinations](#).

In addition, you can [Create a Custom Power Meter Driver](#) for use with other power meters.

Power Sensors

You can perform a Source Power Calibration with ALL power sensors that are supported by the above power meters. However, Source Power Calibration and [Scalar Mixer Calibration](#), operates slowly with the Agilent E930x and E932x power sensors, as the two calibrations are not optimized for use with those sensors.


Up to two sensors can be used to cover the frequency span of the measurement.

Notes

- The [82357A USB/GPIB Interface](#) can be used to control the power meter.
- [USB power sensors](#) are supported beginning with PNA Rev 7.50. However, only one USB power sensor can be used to cover the entire frequency span. See note about [Zeroing USB Power Sensors](#).
- [LAN connectivity](#) can ONLY be used with the Agilent P-series power meters.

How to perform Source Power Calibration

1. Setup your measurement (sweep type, frequency range, IFBW, and so forth). By default, a Source Power Cal is performed on the source port of the active measurement.
2. Connect coax cable, GPIB cable, and power sensors to the PNA as shown in graphic below.

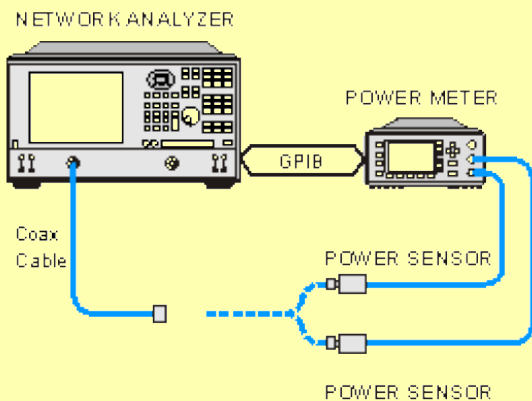

3. Apply power to the power meter and allow 30 minutes warm-up time before beginning calibration.
4. Select **Source Power Cal** as follows:

Using front-panel
HARDKEY [softkey] buttons

Using a mouse with PNA Menus

For PNA-L and E836x models <div> <div>Programming Commands</div> <div>See programming examples in SCPI and COM</div> </div>	
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Source Power Calibration
For PNA-X models <div> <div>Programming Commands</div> <div>See programming examples in SCPI and COM</div> </div>	
1. Press CAL 2. then [Power Cal] 3. then [Source Cal]	1. Click Response 2. then Cal 3. then Power Cal 4. then Source Cal
5. Complete the Source Power Cal dialog box (below), including Loss Compensation and Power Sensor Settings , as needed. 6. When complete, click Take a Cal Sweep in the Source Power Cal dialog box. 7. Follow the prompts to connect the sensors as required. 8. At this time you can change the Source Port setting and perform a Source Power Cal on a different port. 9. When calibration is finished, click OK . Correction is then applied and turned ON for the calibrated ports on the active channel. 10. Remove sensor. 11. SrcPwrCal is displayed in the status bar when Source Power Correction is applied to the Active Measurement.	


To turn Source Power Correction OFF:

- On the **Calibration** menu, point to **Power Calibration**, then click **Source Power Correction on/OFF**.
- ONLY correction for the source port of the ACTIVE MEASUREMENT is turned OFF (regardless of [port power coupling setting](#).)

Interpolation

If the original stimulus settings are changed, Interpolation or EXTRAPOLATION is applied and **SrcPwrCal*** is displayed in the status bar. This is different from [measurement calibration interpolation](#). For example, if the frequency span is increased, the PNA will extrapolate new correction values rather than turn correction off. This is

to protect your test device from being overpowered by the source. If the original settings are restored, then source power calibration returns to full correction.

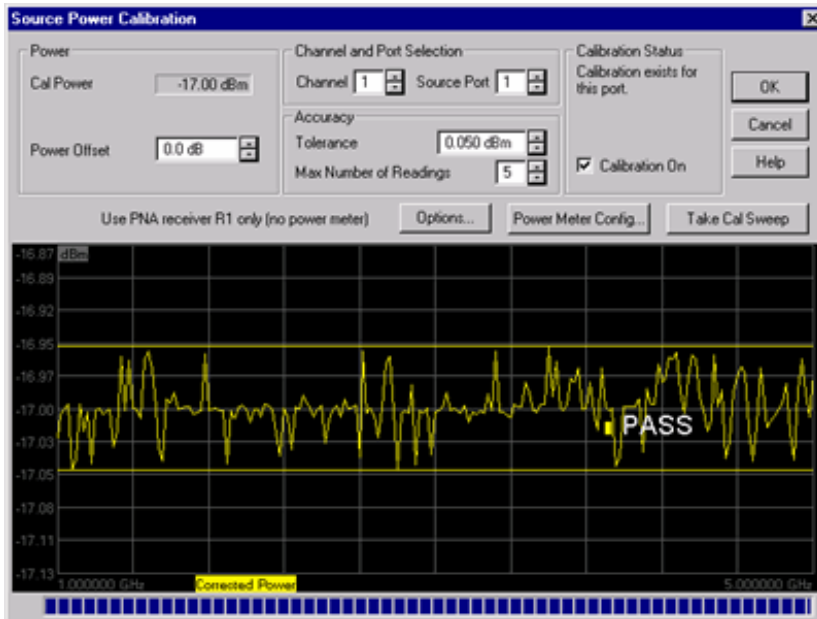

Source Power Cal dialog box help

Note: Be sure that the frequency range of your power sensor covers the frequency range of your measurement. This does NOT occur automatically.

Power

Cal Power The calculated power (in dBm) at the calibration point. This value is the specified PNA source power plus the Power Offset value.

Power Offset Allows you to specify a gain or loss (in dB) to account for components you connect between the source and the reference plane of your measurement. For example, specify 10 dB to account for a 10 dB amplifier in the path to your DUT. Following the calibration, the PNA power readouts are adjusted to this value.

Channel and Port Selection

Channel Specifies the channel on which to perform the calibration. This setting defaults to the active channel.

Source Port Specifies the source port to be corrected. This setting defaults to the source port for the active measurement.

Beginning with PNA Rev. 7.22, external sources can be controlled from this dialog. [Learn more.](#)

Accuracy

At each data point, power is measured using the [specified Power Meter Settling Tolerance](#) and adjusted, until the reading is within this Accuracy **Tolerance** or the **Max Number of Readings** has been met. The **last** power reading is plotted on the screen against the Tolerance limit lines.

Tolerance Sets the maximum desired deviation from the specified **Cal Power** level.

Max Number of Readings Sets the maximum number of readings to take at each data point for iterating the

source power.

Calibration Status

Allows you to turn Source Power Cal ON | OFF and view Cal data for each port, regardless of the active measurement. This feature allows the [Internal Second Source](#) to be calibrated and turned ON | OFF, even when being used as an incidental source in a measurement, such as an LO.

Calibration ON Check to turn Source Power Calibration ON for the specified source port.

The displayed text indicates when [interpolation](#) is applied for the calibration.

Buttons

Options Invokes the [Source Power Cal Options](#) dialog. Label to the left of the button displays the current 'Options' setting.

Power Meter Config Invokes the [Power Meter Settings](#) dialog box


Take Cal Sweep Begins source power calibration measurement.

OK Applies calibration. This button is disabled until the Take Cal Sweep has been pressed.

Cancel If a sweep is in progress, cancels the sweep. Press again to close the dialog.

See Also

- Learn more about [Source Power Cal](#)
- Learn about [External Testsets](#) and Source Power Cal.

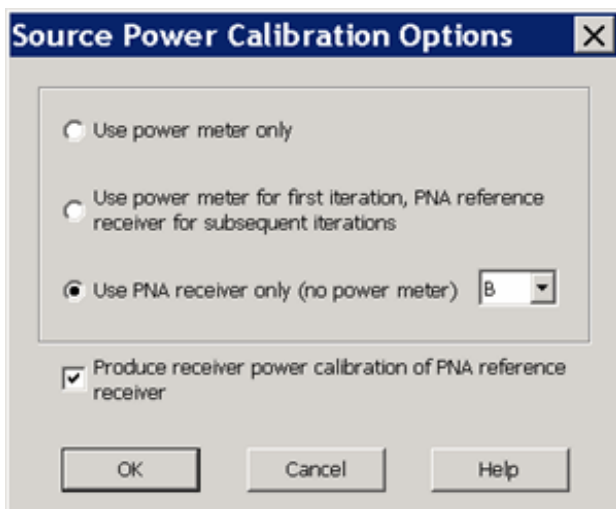

Source Power Calibration Options dialog box help

Provides options for measurement of the source power.

- **Use power meter only** Traditional source power calibration using only a power meter to measure the source power at each data point. Most accurate and slowest method.

Note: Because the following two settings use PNA receivers to make power measurements, they do NOT work correctly when a [Frequency Offset](#) value is being used.

- **Use power meter for first iteration...**When checked, the first reading at each data point uses a power meter to calibrate the reference receiver. Subsequent readings, if necessary to meet your accuracy requirement, are measured using the reference receiver. This technique is much faster than using the power meter with almost no degradation in accuracy.


Note: Do NOT use the "first iteration" feature if there is a component before the power sensor that exhibits non-linear behavior, such as a power amplifier in compression.

- **Use PNA receiver only** This feature assumes that the receiver to be used has already been calibrated by a source power cal using a power meter, then a [receiver cal](#). That receiver can then used to quickly calibrate other PNA source ports, or on another channel with different stimulus settings.

This would be useful, for example, if the power level of the measurement was below the sensitivity of the power sensor. Calibrate the PNA receiver using a source power cal that is within the sensitivity of the sensor. Then, use the calibrated receiver to perform a second source power cal at the reduced power level.

- The receiver is specified using [logical receiver notation](#).
 - It is best to use the reference receiver for the source port to be calibrated. For example, if calibrating source port 2, specify the "a2" receiver.
 - To ensure an accurate source power cal, the frequency range over which the receiver was calibrated must be the same or larger than the "receiver only" source power calibration.
 - All accuracy and settling tolerance and number of reading settings apply just as they do with a power meter reading.

Produce receiver power calibration of PNA reference receiver Check to calibrate the appropriate reference receiver to the power level that is measured at the calibration plane. Do this to make very accurate measurements using the calibrated reference receiver. This cal is done in addition to the standard source power cal using the any of the methods listed above. At the end of the source power cal measurement sweep, you can optionally save the reference receiver cal to a Cal Set to be recalled at a later time. The Cal is saved when the **OK** button is clicked to close the Source Power Cal dialog.

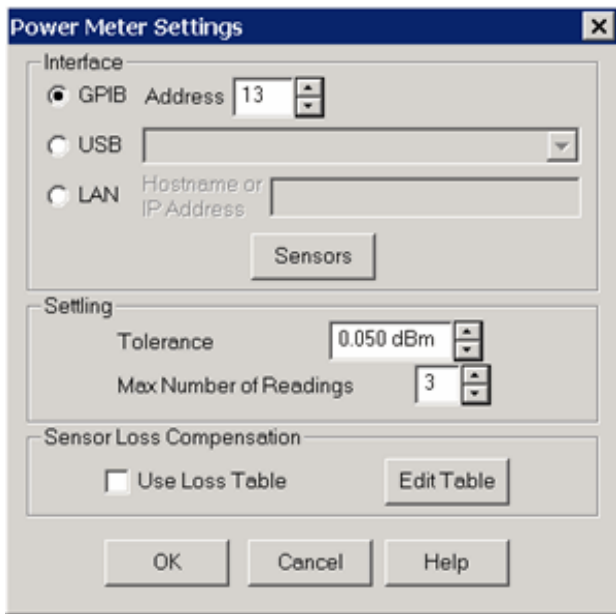

Power Meter Settings dialog box help

This dialog appears when you click the **Power Meter Config** button on the main [Source Power Cal dialog](#).

Communication

- **GPIB / Address** Select GPIB power meter. Then select the address for the power meter. Default is 13. The PNA will search VISA interfaces that are configured in the Agilent IO Libraries on the PNA.
- **USB** PNA scans the USB for connected power sensors. Select a power sensor from the list. Only ONE USB power sensor can be configured to cover the entire frequency range of the calibration.
- **LAN** Specify the Hostname or IP address of the Power Meter. This setting can ONLY be used with the Agilent P-series power meters.

Sensors Invokes the [power sensor settings](#) dialog box.

Settling

These Settling settings do not apply when a PNA receiver is the power measurement device. Each power meter reading is "settled" when either:

- two consecutive meter readings are within this **Tolerance** value or
- when the **Max Number of Readings** has been met.

The readings that were taken are averaged together to become the "settled" reading. The settled reading is then compared to the [Accuracy Tolerance requirements](#) (tolerance and max readings) specified on the Source Power Cal dialog box.

Tolerance When consecutive power meter readings are within this value of each other, then the reading is considered settled.


Max Number of Readings Sets the maximum number of readings the power meter will take to achieve

settling.

Sensor Loss Compensation

Use Loss Table Select this checkbox to apply loss data to Source Power calibration correction (such as for an adapter on the power sensor).

Edit Table Invokes the [Power Loss Compensation](#) dialog box.

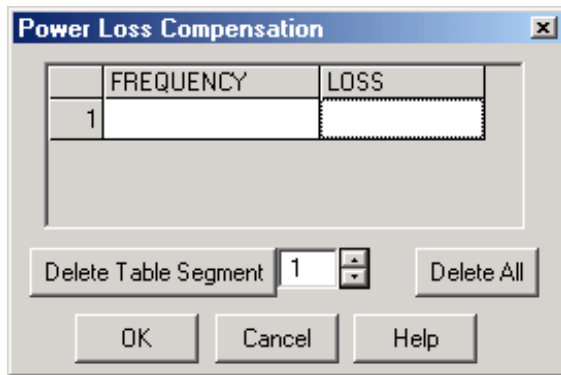

The dialog box titled "Power Loss Compensation" contains a table with two columns: "FREQUENCY" and "LOSS". The first row of the table has the number "1" in the "FREQUENCY" column and an empty field in the "LOSS" column. Below the table, there is a "Delete Table Segment" button, a text field containing the number "1" with up and down arrow buttons, and a "Delete All" button. At the bottom of the dialog are "OK", "Cancel", and "Help" buttons.

	FREQUENCY	LOSS
1		

Delete Table Segment 1 Delete All

OK Cancel Help

Power Loss Compensation dialog box help

Compensates for losses that occur when using an adapter or coupler to connect the power sensor to the measurement port.

Delete Table Segment Deletes row indicated in the field.

Delete All Deletes all data in the table.

Note: To Add a Row to the table, click on a row in the table and press the down arrow on either the PNA front panel or keyboard.

- If you enter a single frequency/loss segment, the analyzer applies that value to the entire frequency range.
- You can enter up to 100 segments to achieve greater accuracy.

Power Sensor Settings

Sensor A
Reference Cal Factor: 99.0 %

	FREQUENCY	CAL FACTOR
1	100.000000 KHz	95.0 %
2	300.000000 KHz	96.8 %
3	1.000000 MHz	98.1 %

Delete Cal Factor: 1 Delete All

Load Cal Factors... Save Cal Factors...

☒ Use this sensor only (no frequency checking) ☐ Use this sensor only (no frequency checking)

Minimum Frequency: 0 Hz Minimum Frequency: 0 Hz

Maximum Frequency: 0 Hz Maximum Frequency: 0 Hz

Zero/Calibrate Sensor Zero/Calibrate Sensor

OK Cancel Help

Power Sensor Settings dialog box help

This dialog appears when you click the **Sensors** button on the [Power Meter Settings dialog](#).

Note: Be sure that the frequency range of your power sensor covers the frequency range of your measurement. This does NOT occur automatically.

Sensor A (B) Displays one of the following messages depending on type of sensor.

- **Not connected** The PNA is not detecting a power sensor.
- **Cal factors are contained within this sensor** The PNA detects an Agilent E-Series power sensor. Reference Cal Factor and Cal Factor data are loaded automatically.
- **Sensor Data** Allows entry for power sensor data:

Reference Cal Factor Specifies the sensor's Reference Cal Factor.

Cal Factor Table Specifies the frequency and corresponding Cal Factor for the sensor.

Delete Cal Factor Deletes the indicated row in the table.

Delete All Deletes all data in the table.

To Add a Row to the table, click on a row in the table and press the down arrow on either the PNA front panel or keyboard. A row is added to the bottom of the table. The table is automatically sorted by frequency when OK is pressed.

Use this sensor only Check this box to use this sensor over the entire frequency span of the measurement, even if two sensors are connected to power meter. Clear to allow entry of minimum and maximum frequencies for the sensor.

Minimum Frequency Specifies the minimum frequency range for the sensor when using dual sensors.

Maximum Frequency Specifies the maximum frequency range for the sensor when using dual sensors.

Perform Sensor Zeroing and Calibration Zero and calibrate the power sensor before taking data.

Note: There is no calibration needed in U2000 Series **USB power sensors**. Zeroing those sensors does NOT require disconnecting them from the source port or DUT except, for highest accuracy, when the power

level is below -30 dBm. For more information, please read the USB power sensor documentation.

Copy a Source Power Calibration to other Channels

A macro application is now available that copies a Source Power Calibration to other channels. Once downloaded and installed on a PNA, the [macro](#) is automatically configured up. To learn more, click **Help** on the application main dialog. Get the application from <http://na.tm.agilent.com/pna/apps/applications.htm>.

Saving a Source Power Calibration

Because Source Power Cal calibrates source hardware, the calibration data is saved as part of the **Instrument State**, in either a .sta file or a .cst file. This correction is applied to all measurements on the channel that uses the calibrated source. See [Save Instrument State](#).

Reducing Time to Complete a Source Power Calibration

The time required to perform a Source Power Calibration depends on source power, number of points, and number of readings taken. You can reduce this measurement time with the following methods:

- **Reduce number of points before calibration.** You can reduce the number of points before the measurement, then return the number of points to its original value after calibration is complete and correction is ON. The analyzer will perform a linear interpolation, although with some loss in accuracy.
- **Use an Agilent E-Series sensor.** You can obtain 40+ readings per second over GPIB with this type of sensor on the PNA.
- **Increase power to the sensor.** Lower power may have longer settling time with some sensors.
- Check [Use Reference Receiver for Iteration](#).

Receiver Power Calibration

Receiver power calibration mathematically removes frequency response errors in the specified PNA receiver, and adjusts readings to the same, or a value offset from, the source power calibration level. It is the same as doing a **Response Cal** or **Data / Memory, (Normalization)** but with the data shifted to the [Cal Power](#) value.

Use Receiver Power Calibration to make very accurate absolute power (amplitude) measurements.

Receiver Power Calibration:

- Is ONLY allowed when making absolute power ([unratioed](#)) measurements.
- Is most accurate when a source power calibration was performed first.
- Applies to all unratioed measurements in the active channel using that receiver.
- Can be saved in a Cal Set and later reapplied to a like measurement.



Interpolation


Like other calibration types, if the original stimulus settings are narrowed, interpolation is applied and **C* Rcvr Pwr** is displayed in the status bar. If the original stimulus settings are made wider, the PNA will turn Receiver Power Correction **OFF**.

If the original settings are restored, then receiver power calibration returns to full correction.

How to perform a Receiver Power Calibration

1. Perform a [Source Power Calibration](#).
2. Set the active measurement to unratioed. [Learn How](#).
3. Connect a THRU line from the source port to the receiver port.
 - When performing a receiver power cal on a reference receiver, no connection is necessary as the receiver is internally connected to the source.
 - When the receiver port and the source port are the same (receiver A, source port 1), then connect an open or short to get maximum power to the receiver. This practice is not recommended. It is best to use different ports for the source and receiver.
4. Ensure correction for Source Power Calibration is ON as indicated by **Src Pwr Cal** or **Src Pwr Cal*** in the status bar.
5. Start the [Calibration Wizard](#)

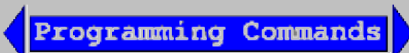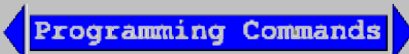Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Cal Set
For PNA-X models	
1. Press CAL 2. then [Power Cal] 3. then [Receiver Cal]	1. Click Response 2. then Cal 3. then Power Cal 4. then Receiver Cal
Complete the following dialog box, then click Next .	

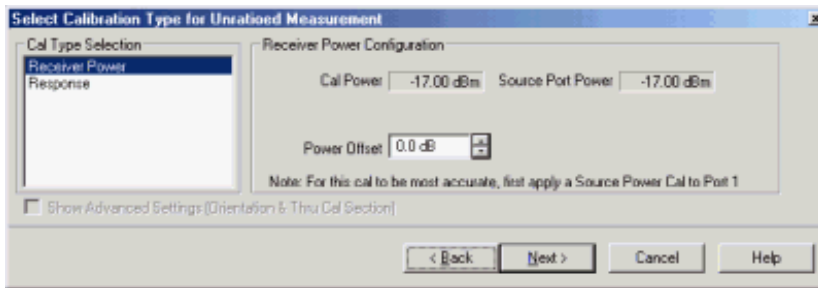

Select Calibration Type for Unratioed Measurement dialog box help

Cal Type Selection Select **Receiver Power**

Receiver Power Configuration

Cal Power Specifies the power level to be displayed on the measurement when complete. (Source Port Power + Power Offset).

Source Port Power Test port Power set for the measurement. [Learn how to change Test Port Power](#)

Power Offset Allows you to specify a gain or loss (in dB) to account for components you connect between the source and the reference plane of your measurement AFTER a source power cal has been performed. Following the calibration, the PNA power readouts are adjusted to the Cal Power value.

Next Click to continue the Calibration Wizard.

Notes:

- When Receiver Power Cal is finished, **C RcvrPwr** is displayed in the status bar and correction data is applied to subsequent sweeps.
- To turn correction **OFF**, click **Calibration**, point to **Power Calibration**, then set **Receiver Power Correction** to **OFF**.

[Learn more about Receiver Power Cal \(scroll up\).](#)

Saving a Receiver Power Calibration

Beginning with PNA Revision 5.0, Receiver Power Cal is saved to a [Cal Register](#) and optionally to a [User Cal Set](#). It can be applied to measurements in the same way as other Cal Types. Previously, Receiver Power Cal data was saved as part of an Instrument State and was only applied to the measurement on which it was performed.

[Learn more about Saving PNA files types.](#)

Last modified:

29-Nov-2007	Added Cal note for USB sensors
30-Oct-2007	Added link to supported Power meters/ sensors
20-Jul-2007	Added USB / LAN support and Apply macro
21-January 21, 2007	MX Added UI
14 Sept-2006	MQ Added Receiver-only SPC.

Fixture Simulator

The following features allow you to mathematically add (embed) or remove (de-embed) circuits to, or from, your PNA measurements. The mathematical models are applied to specific ports for all measurements on the channel.

For more conceptual information on Fixture Simulation, see our ["De-embedding and Embedding S-Parameter Networks Using a Vector Network Analyzer" App note](#).

Note: Before PNA release 5.0, the fixturing features were accessed on the PNA as a macro application.

Order of Fixture Operations

- The fixturing operations are applied to the measurement results in the following order. **This order can NOT be changed.**
- In the [PNA data processing chain](#), the Fixture Simulator functions occur at the same time as the **Apply Error Terms** block.

First, the following **Single-ended** measurement functions are processed in this order:

1. [Port Extensions](#)
2. [2-Port De-embedding](#)
3. [Port Z \(Impedance\) Conversion](#)
4. [Port Matching Circuit Embedding](#)
5. [4-Port Network \(single-ended\) Embed/De-embed](#)

Then, **Balanced** measurement functions are processed in this order:

6. [Balanced Conversion](#)
7. [Differential](#) / [Common Mode](#) Port Z Conversion
8. [Differential Matching Circuit Embedding](#)

Note: Port Impedance (Z) conversion uses values in the following prioritized order:

1. Balanced ([Differential](#) or [Common Mode](#)) - if enabled, these values are always used.
2. [Single Port Impedance](#) - if enabled, this value is used if Balanced is not enabled.
3. [System Impedance](#) - if neither balanced or single port is enabled, this value is used.

[See an example](#) of how these functions can be used to de-embed unwanted effects of a test fixture, and then mathematically embed the DUT in the circuit in which it is used.



How to select Fixturing Simulator

About Fixturing ON/off

BOTH of the following must occur to turn a fixturing selection **ON**.

EITHER ONE will turn a fixturing selection **OFF**.

1. Check **Fixturing ON/off**
Port Extensions is NOT affected by Fixturing ON/off.
2. Check **Enable** on the individual fixturing selection dialog box.

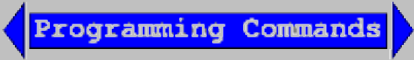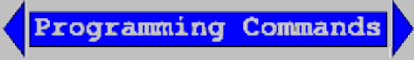Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Fixturing Selections
For PNA-X models	
1. Press CAL 2. then [More] 3. then [Fixtures]	1. Click Cal 2. then More 3. then Fixtures

Port Matching

☐ Enable Port Matching

Choose Circuit Model for Matching

Port 1 None

User S2P File... <None Selected>

Circuit Values

C 1.000 uF

L 1.000 mH

R 50.000 ohms

G 20.000 mS

Reset

Close Help


Port Matching dialog box help

This function specifies a circuit to embed (add) to the measurement results. [See Order of Fixture Operations.](#)


Enable Port Matching Check to apply the settings to the measurement results. Must also enable [Fixturing ON/off](#).

Port - Select Port in which to apply simulation.


Circuit Model for Matching - Choose one of the following that best emulates your fixture at the selected PNA port:

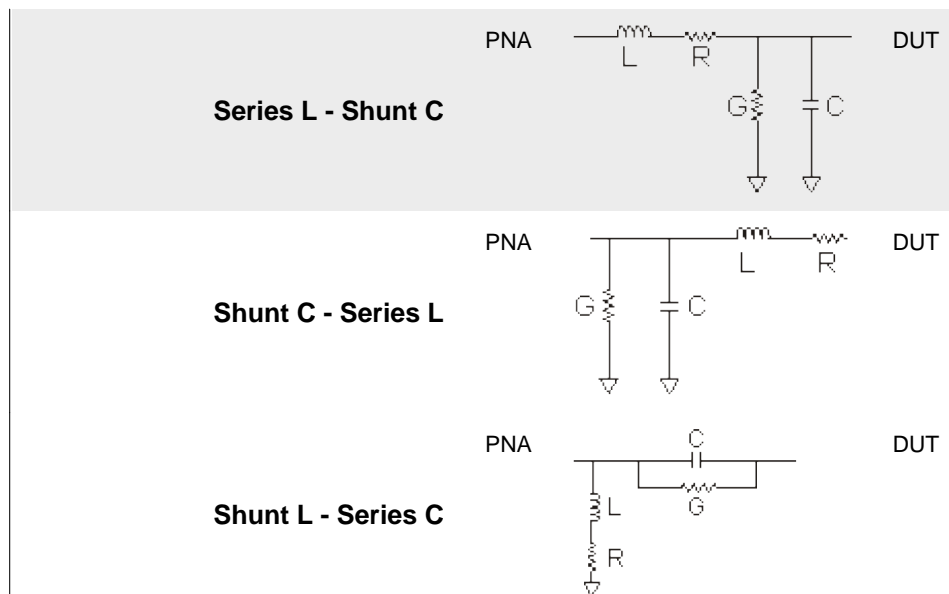

Series C - Shunt L

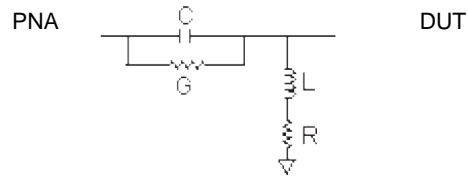

Shunt L - Shunt C

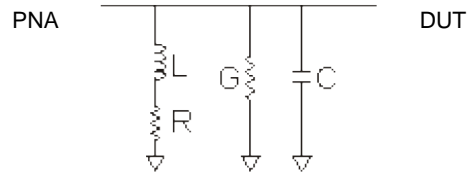

User Defined (S2P File) Load a file that is specified with **User S2P File** button.


None Use no circuit model.

User S2P File Click to specify an S2P file of the circuit model to embed at the selected port. If the normalized impedance value in a recalled User .S2P file is different from the port reference impedance setting of the PNA, the PNA setting is used.

Circuit Values

Capacitance (C), Inductance(L), Resistance(R), Conductance(G) Values for the specific components of the circuit type that models your fixture.

Reset Restores the default values.

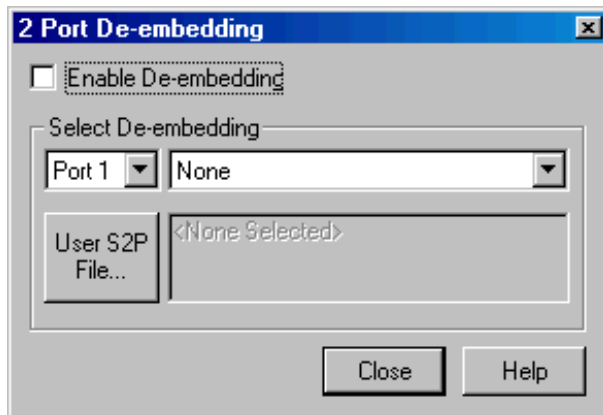


2 Port De-embedding dialog box help

This function **removes** the unwanted effects of a test fixture from the measurement results.

The de-embedding operation recalls an .s2p file (Touchstone format) for a 2-port test fixture. The file includes the electrical characteristics of a supplemental fixture or device. The file can be in any standard format (real-imaginary, magnitude-angle, dB-angle) and can represent any 2-port test fixture.

[See Order of Fixture Operations.](#)

Note: In all cases,
Port 1 of the fixture is assumed to be connected to the PNA
Port 2 of the fixture is assumed to be connected to the DUT.

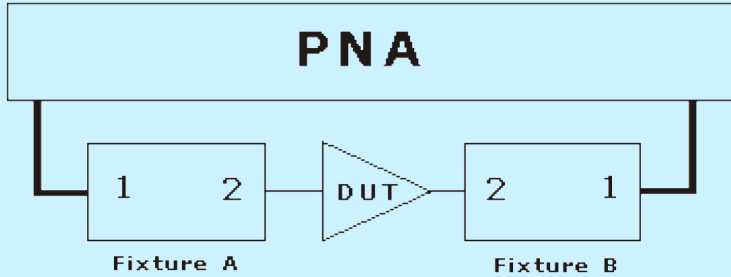


Enable De-embedding Check to apply the settings to the measurement results. Must also enable [Fixturing ON/off](#).

Port - Select Port in which to apply the recalled de-embedding file.

From the drop-down menu, select **User S2P**.

User S2P File Click to specify an existing .S2P file. If the normalized impedance value in a recalled User .S2P file is different from the port reference impedance setting of the PNA, the PNA setting is used.

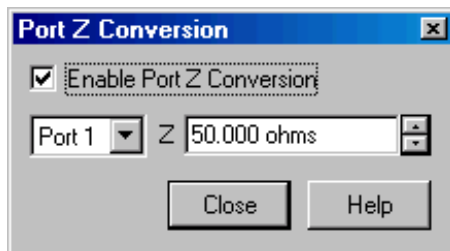

Port Z (Impedance) Conversion dialog box help

This function corrects the measurement and displays the results as if the measurement had been made into the specified impedance value. However, the physical port termination is still approximately 50 ohms.

The specified impedance value is applied to all of the measurements on ONLY the active channel.


[See Order of Fixture Operations.](#)

Enable Port Z Conversion Check to apply the settings to the measurement results. Must also enable [Fixturing ON/off](#).

Z Resistance part of the desired reference impedance for the specified port and channel.

Close Applies the entries and closes the dialog box

[See note about Port Impedance priority.](#)

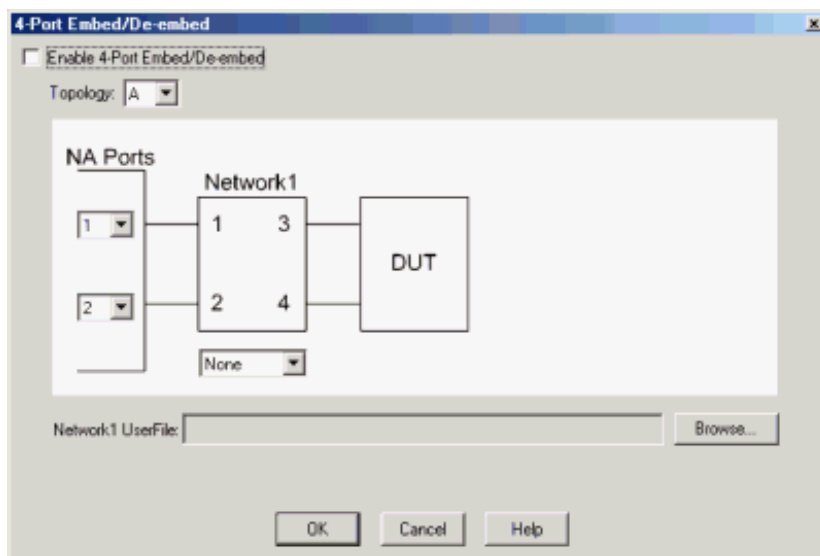

4-Port Embed/De-embed dialog box help

This function specifies a single-ended 4-port circuit (*.S4P file) to embed (add) or de-embed (remove) from the measurement results. Computation takes place BEFORE Balanced conversion. [See Order of Fixture Operations.](#)

There is a single normalized impedance value for each port in the *.S4P file. This impedance value must match the impedance of the previous Port Z setting, or the PNA port impedance.

The PNA will interpolate if the number of data points that are read is different from the current PNA setting.

Enable 4-Port Embed/De-embed Check to apply the settings to the measurement results. Must also enable [Fixturing ON/off](#).

Topology: Select a DUT topology.


Refer to the images on 4-port embed/De-embed dialog box.

- **A** - 2 PNA/DUT Ports
- **B** - 3 PNA/DUT Ports

- **C - 4 PNA/DUT Ports**


Topology configurations that are not addressed with standard images in dialog box:

1. If you have a 4-port DUT; 4-port network on one side; None on the other side.

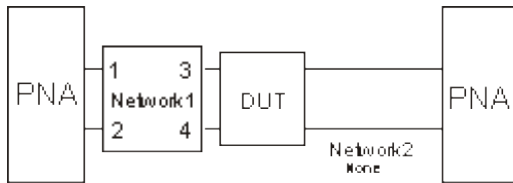

- Specify **Topology C**.
- Use 4-port Network on one side.
- Use 4-port Network on the other side; set to **None**.

2. If you have a 3-port DUT and networks as follows:

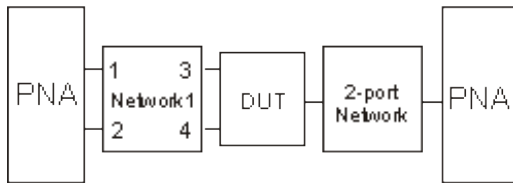

- Specify **Topology B**.
- Use 4-port Network1 on one side.
- Use [2-port network](#) on the other side.

NA Ports - Select the PNA Port that is connected to each circuit port.

Note: The *S4P file always assumes that:
Network ports 1 and 2 are connected to the PNA
Network ports 3 and 4 are connected to the DUT


None, Embed, De-embed For Network1 and Network2, select:

- **None** - The same as disabling.
- **Embed** - Add the specified network circuit to the measurement results.
- **De-embed** - Remove the specified network circuit to the measurement results.

Browse For both Network1 and Network2, navigate to find the *.S4P file to embed or de-embed.

OK Applies the changes and closes the dialog box.

Cancel Does NOT apply the changes and closes the dialog box.

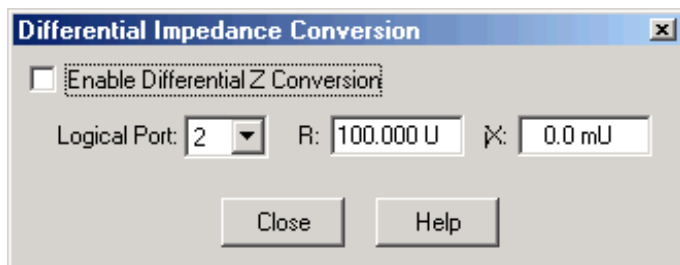

Differential Impedance Conversion dialog box help

This function sets the Differential impedance value for each balanced port.

The default value for **R:** is the SUM of the impedance values for both ports that make the logical port. If [Port Z Conversion](#) is not enabled, then [System Z0](#) values for both ports are summed.

[See Order of Fixture Operations.](#)

Enable Differential Z Conversion Check to apply the settings to the measurement results. Must also enable [Fixturing ON/off](#).


Logical Port Select the logical (balanced) port to receive impedance value. To see logical port numbers, see the [measurement topology](#).

R Real part of the impedance value.

jX Imaginary part of the impedance value.

Close Closes the dialog box.

[See note about Port Impedance priority.](#)

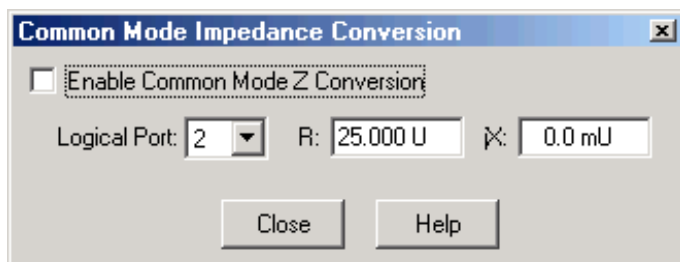

Common Mode Impedance Conversion dialog box help

This function sets Common Mode Impedance value for each balanced port.

The default value for **R**: is calculated as follows.

$$(Z1 * Z2) / (Z1 + Z2)$$

Where ports 1 and 2 comprise the logical port:

Z1 = the Port Impedance values for port 1

Z2 = the Port Impedance values for port 2

If [Port Z Conversion](#) is not enabled, then [System Z0](#) values for port 1 and 2 are used in the calculation.

[See Order of Fixture Operations.](#)

Enable Common Mode Z Conversion Check to apply the settings to the measurement results. Must also enable [Fixturing ON/off](#).


Logical Port Select the logical (balanced) port to receive impedance value. To see logical port numbers, see the [measurement topology](#).

R Real part of the impedance value.

jX Imaginary part of the impedance value.

Close Closes the dialog box.

[See note about Port Impedance priority.](#)

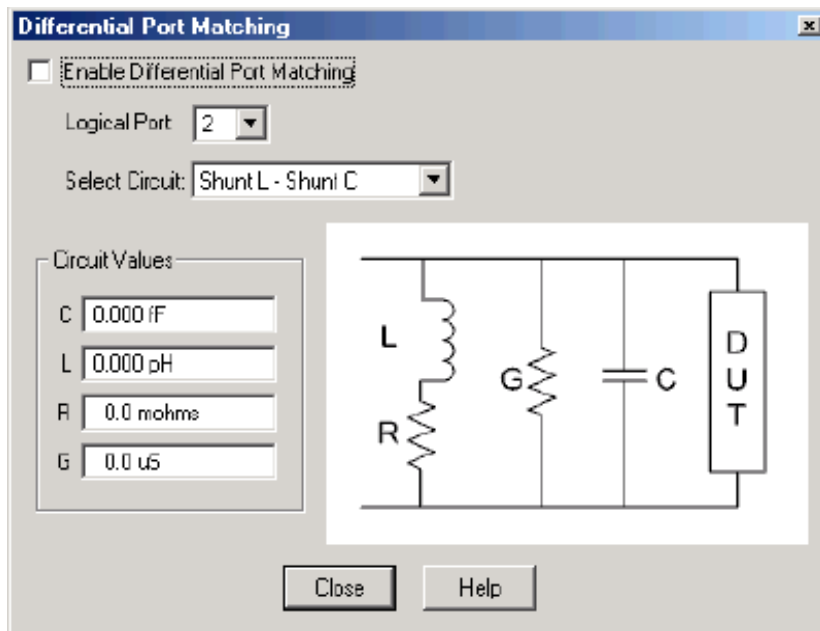

Differential Port Matching dialog box help

This function allows the embedding of a differential matching circuit at a balanced port.


[See Order of Fixture Operations.](#)

Enable Differential Port Matching Check to embed the selected matching circuit to the measurement results. Must also enable [Fixturing ON/off](#).

Logical Port Choose [Logical DUT port](#) to receive the selected matching circuit. To see logical port numbers, see the [measurement topology](#).

Select Circuit Select a matching circuit. Choose from:

- **Shunt L - Shunt C** Predefined circuit.

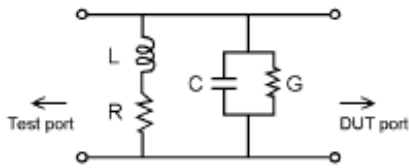

Circuit Values Choose from:

- **C** Capacitance value
 - **G** Conductance value
 - **L** Inductance value
 - **R** Resistance value
- **User defined** Select an *.S2P file that represents the matching circuit. Then click **Browse** to navigate to the *.S2P file.

Note: For the *.S2P file:

Port 1 of the circuit is assumed to be connected to the PNA
Port 2 of the circuit is assumed to be connected to the DUT.

- **None** No embedded circuit on selected port.



Close Closes the dialog box.

Fixture Simulator Example

The following example shows a DUT and the matching circuit with which the DUT will be used in its intended application. When the DUT is tested in a high-volume manufacturing environment, multiple test fixtures are often required. The most accurate way to test the DUT and ensure measurement consistency between the different test

fixtures is to use a simple, repeatable, test fixture without the actual matching elements.

To get the desired performance data, the parasitic effects of the fixture must first be removed (de-embedded) from the measured data. Then a perfect "virtual" matching circuit must be simulated and added mathematically (embedded) to the corrected, measured data. The result is an accurate display of the DUT as though it was actually tested with a physical matching circuit, but without the uncertainties of using real components.

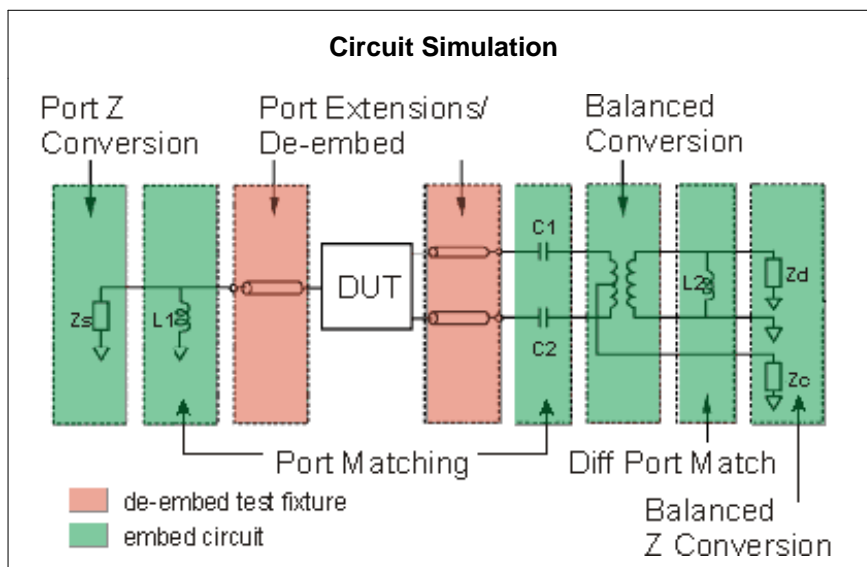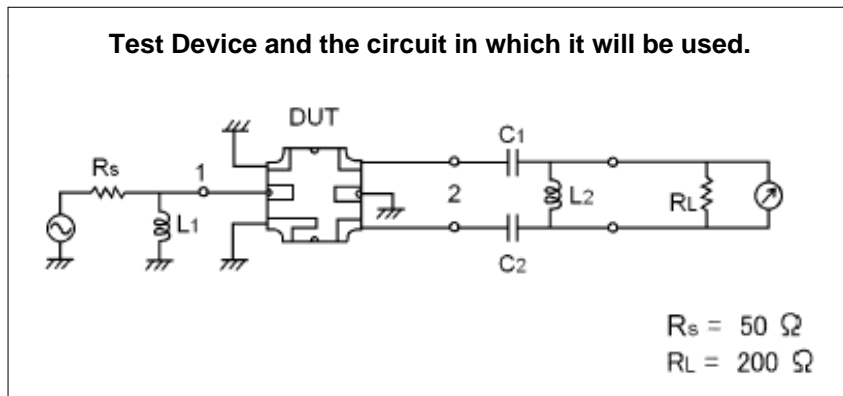

This diagram does NOT refer to the order in which operations are performed.

[See Order of Fixture Operations.](#)

1. [Create a balanced measurement](#) using single-ended to balanced (SE-Bal) [topology](#). Include all relevant measurement settings (IFBW, number of points, and so forth). Once the measurement is created and calibrated, the measurement parameter can be easily changed. For example, Sdd22 to Sds21.
2. Calibrate the measurement at the point where the simple test fixture is connected to the PNA. Use accurate calibration standards and definitions.
3. Remove the effects of the three uncalibrated transmission lines of the simple test fixture. This can be done in several different methods. The easiest is to use manual or automatic [Port Extensions](#) to move the calibration reference plane to the DUT. This removes the electrical length and loss of the fixture's transmission lines, but does not account for fixture mismatch. Another method is to de-embed previously-created *.S2p files of the 3

transmission lines. The files can be created using external ADS modeling software. Another alternative is to create the *.S2P files by independently measuring all 3 ports of the test fixture and [saving the results of each to an S2P file](#).

4. With the test fixture connected to the PNA and a DUT inserted, the measurement results now appear as though calibration was performed at the connections to the DUT, and the device was measured in a 50-ohm single-ended test environment. The following steps will cause the results to reflect the performance of the device as though the device is embedded in the circuit in which it will be used.
5. Port 1 of the device is a single-ended port and sees a source impedance the same as the PNA system impedance, so no change is required. However, if R_s were a value other than 50 ohms, [Port 1 Impedance Conversion](#) would be used to simulate the different impedance.
6. [Port Matching](#) is used to simulate L1 inductance. Select any of the Shunt L circuits to embed (add) to the measurement results. Enter the value of L and R. The C and G values can be entered as 0 (zero).
7. [Port Matching](#) is used to simulate C1 and C2 capacitance. For both port 2 and port 3, select any of the **Series C** circuits to embed (add) to the measurement results. Enter the value of C and G. The L and R values can be entered as 0 (zero).
8. [Balanced Conversion](#) mathematically simulates the measurement in balanced mode.
9. [Differential Port Matching](#) is used to simulate L2 inductance. Select Shunt L- Shunt C and enter the inductance / resistance value. The C and G values can be entered as 0 (zero).
10. Finally, [Differential Z Conversion](#) is used to simulate a circuit termination of 200 ohms. If you are making Common Mode measurements, specify [Common Mode Z Conversion](#).

Last modified:

December 3, 2007 MX Added UI

Sept 12, 2006 Added link to programming commands

Port Extensions

Port extensions allow you to electrically move the measurement **reference plane** after you have performed a calibration. The following two scenarios show how port extensions can be useful.


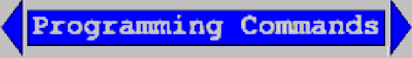
1. You have already performed a calibration, and then decide that you need to add a length of transmission line in the measurement configuration. Use port extensions to "tell" the analyzer you have added the length to a specific port.
2. You are unable to perform a calibration directly at your device because it is in a test fixture. Use port extensions to compensate for the time delay (phase shift), and optionally the loss, caused by the added transmission line of the fixture.

See Also

[Fixture Compensation features](#)

[Phase Accuracy](#)

[Comparing the PNA Delay Functions](#)

How to launch the Port Extensions toolbar	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Port Extension Toolbar
For PNA-X models	
1. Press CAL 2. then [Port Ext Tool]	1. Click Response 2. then Cal 3. then Port Extension Tool



Port Extensions toolbar help
Port extensions settings affect all measurements on the active channel that are associated with a particular port.

Learn about [Port Extensions](#) (scroll up)

- If you know the electrical length of additional transmission line, enter the value directly to the Delay setting.
- If you know the physical length of additional transmission line, increase the Delay setting until the physical length setting (directly above Delay) is achieved.
- If you do not know the electrical or physical length of additional transmission line, you must be able to connect an OPEN or SHORT to the new reference plane at the point of the DUT. In most cases, removing the DUT will leave a suitable OPEN at the new reference plane. Port Extensions can then be added manually (as follows), or by using [Automatic Port Extensions](#).

Manual Port Extensions Procedure

1. Select a calibrated S11 measurement.
2. Select Phase format.
3. With an OPEN or SHORT at the calibration reference plane, verify that the phase across the frequency span is at or near zero.
4. Connect the added transmission line or fixture and attach an OPEN or SHORT in place of the DUT. In most cases, removing the DUT will leave a suitable OPEN at the new reference plane. On the Port Extension toolbar, increase **Delay** until the phase response is flat across the frequency span of interest.
5. If you know the loss of the additional transmission line, enter the [Loss Compensation](#) values using either one or two data points.

Note: Most OPEN and SHORT standards have delay. Therefore, adjusting delay with this method results in a delay equal to two times the delay of the OPEN or SHORT.

Port Extensions Settings

Port Extension Turns ON and OFF port extensions on all ports.

Port Select a PNA port for delay and loss values. Port Extensions settings affect ALL measurements on the active channel that are associated with a particular port.

Delay The amount of port extension delay in time. To compensate for delay in additional transmission line, enter a positive value.

Loss Compensation

The following settings, along with [Loss at DC](#), allows the entire frequency span to be corrected for loss using a curved-fit algorithm.

To compensate for loss in additional transmission line, enter a positive value which causes the trace to shift in the positive (up) direction.

Loss1 Loss in dB at **Freq1**.

Use1 Check calculate and apply port extension Loss1 @Freq1 values. Also, check if using [Loss at DC value](#).

Loss2 Loss in dB at **Freq2**.

Use2 ONLY available if Use1 is checked. Calculate and apply port extension Loss2 @Freq2 values.

Loss is calculated for each frequency data point (f) as follows.

If Use1 is checked and NOT Use2 then:

$$\text{Loss}(f) = \text{Loss1} * (f/\text{Freq1}) ^ 0.5$$

If Use1 AND Use2 are checked, then:

$$\text{Loss}(f) = \text{Loss1} * (f/\text{Freq1}) ^ n$$

Where:

$$n = \log_{10} [\text{abs}(\text{Loss1}/\text{Loss2})] / \log_{10} (\text{Freq1}/\text{Freq2})$$


Note: abs = absolute value

More Invokes the [More Port Extensions Settings](#) dialog box.

Auto Ext. Invokes the [Automatic Port Extensions](#) dialog box

Note: Individual receiver port extensions (A,B, and so forth) can no longer be set. (Sept. 2004)

Learn about [Port Extensions](#) (scroll up)

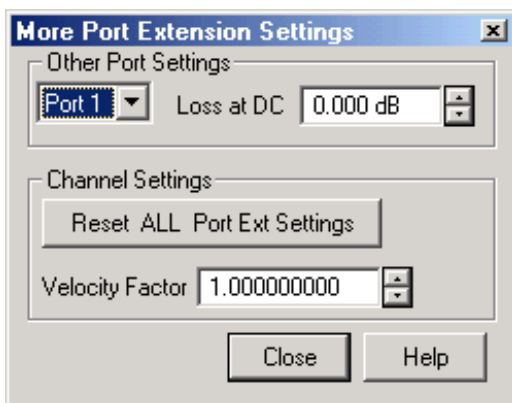

More Port Extensions Settings dialog box help

Note: Port Extensions settings affect ALL measurements on the **active** channel that are associated with a particular port.

Other Port Settings


Port - Loss at DC Offsets the entire frequency span by this value. [Use1](#) on the Port Extension toolbar must also be checked. To compensate for loss at DC, enter a positive value which causes the trace to shift in the positive (up) direction.

Channel Setting

Reset ALL Port Ext Settings All port extensions settings are changed to preset values. Port Extension state (ON / OFF) is unaffected.

Velocity Factor Specifies the velocity factor that applies to the medium of the device that was inserted after the measurement calibration. The value for a polyethylene dielectric cable is 0.66 and 0.7 for PTFE dielectric. 1.0 corresponds to the speed of light in a vacuum.

Learn about [Port Extensions](#) (scroll up)

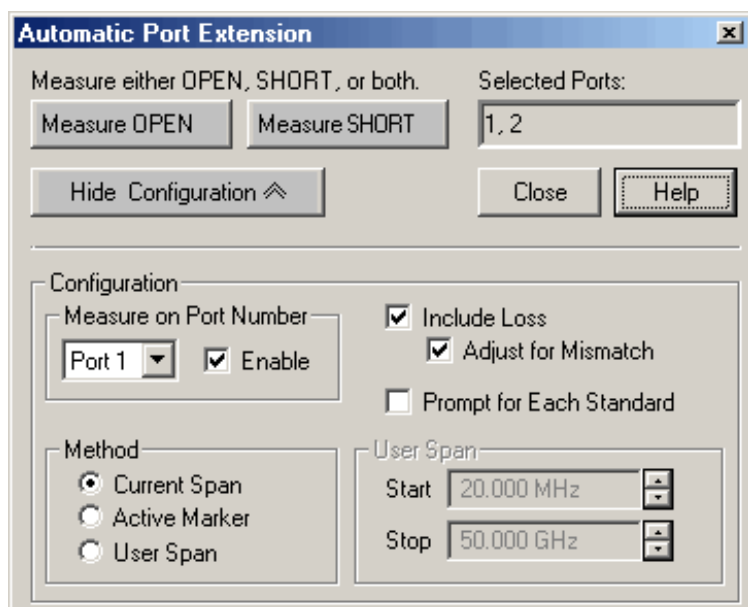

The dialog box is titled "Automatic Port Extension". It has a close button (X) in the top right corner. Below the title bar, there are two main sections. The first section contains the text "Measure either OPEN, SHORT, or both." followed by two buttons: "Measure OPEN" and "Measure SHORT". To the right of these buttons is a text field labeled "Selected Ports:" containing the value "1, 2". Below the "Measure OPEN" button is a button labeled "Hide Configuration ^". To the right of this button are two buttons: "Close" and "Help". The second section is titled "Configuration" and contains two sub-sections. The first sub-section is labeled "Measure on Port Number" and contains a dropdown menu set to "Port 1" and a checked checkbox labeled "Enable". The second sub-section contains three checkboxes: "Include Loss" (checked), "Adjust for Mismatch" (checked), and "Prompt for Each Standard" (unchecked). The third sub-section is labeled "Method" and contains three radio buttons: "Current Span" (selected), "Active Marker", and "User Span". The fourth sub-section is labeled "User Span" and contains two text fields: "Start" set to "20.000 MHz" and "Stop" set to "50.000 GHz", each with a small up/down arrow button to its right.

Automatic Port Extension dialog box help

Automatic Port Extension AUTOMATICALLY performs the same operation as [Manual Port Extension](#). By connecting a SHORT or OPEN, the reference plane is automatically moved to the point at which the standard is connected. In addition, Automatic Port Extension will optionally measure and compensate for the loss of the additional transmission line.

Auto Port Extensions Procedure

1. Connect the added transmission line or fixture. Attach an OPEN or SHORT to all affected ports at the new reference plane. In most cases, removing the DUT will leave a suitable OPEN at the new reference plane.
2. On the Port Extension toolbar, click **Auto Port Ext.** Click **Show Configuration** to make additional settings.
3. Click **Measure** to perform the port extension calculations. The resulting delay and loss settings are entered into the port extension toolbar. These settings are saved with Instrument Save or you can manually record the values and enter them again when required.

Settings

Measure either OPEN, SHORT, or both Press a button to make the measurement of the reflection standard.

Measure either OPEN or SHORT depending on which is most convenient. An ideal OPEN and SHORT, with zero loss and delay, is assumed. Therefore, accuracy is most affected by the quality of the standard. In most cases, removing the DUT will leave a suitable OPEN at the new reference plane. When measuring both OPEN and SHORT standards, the average of the two is used and will slightly improve accuracy.

Selected Ports Indicates the ports that currently have automatic port extension enabled. By default, ALL PNA ports are enabled. To disable a port, see **Measure on Port Number** below.

Note: Port Extensions settings affect ALL measurements on the active channel that are associated with a

particular port.

Show/Hide Configuration Press to either show or hide the following configuration settings in the dialog box.

Measure on Port Number

Select port number to enable or disable automatic port extension.

Enable Check to enable the specified port. All enabled ports will have their reference plane automatically adjusted after performing Automatic Port Extension.

Include Loss Check to automatically measure the loss in the additional transmission line and apply compensation. To calculate loss compensation, frequencies at 1/4 and 3/4 through the frequency range are usually used as Freq1 and Freq2 values. [Learn more about Loss Compensation.](#)

Adjust for Mismatch Only available when **Include Loss** is checked. During the measurement of the OPEN or SHORT standard, mismatch could cause ripple in the magnitude (loss) response. The [Loss compensation curved-fit algorithm](#) allows half of the ripple to be positive and half negative. When measuring low-loss devices, it is possible that some magnitude responses could become slightly positive, indicating gain rather than loss.

Check - Offsets the trace to cause all of the data points to be at or below zero.

Clear - Most accurate application of the curve-fit calculation, but allows positive responses.

Prompt for Each Standard Check to invoke a prompt when the Measure OPEN or SHORT button is pressed. The prompt will indicate which standard to connect to which port.

Method

Select the span of data points which will be used to determine correction values for phase and loss (optional). If a portion of the current frequency span does not have flat or linear response, you can eliminate this portion from the calculations by using a reduced User Span.

To calculate loss compensation, Current Span and User Span methods usually use frequencies at 1/4 and 3/4 through the frequency range as Freq1 and Freq2 values. See [Loss Compensation](#) to learn more about how loss is calculated.

Current Span Use the entire frequency span to determine phase and loss values.

Active Marker Use only the frequency at the active marker, and one data point higher in frequency, to calculate phase and loss values. If a marker is not present, one will be created in the center of the frequency span.

User Span Use the following User Span settings to determine phase and loss values.

User Span

Start Enter start frequency of the user span.

Stop Enter stop frequency of the user span.

Learn about [Port Extensions](#) (scroll up).

See also [Comparing the PNA Delay Functions](#)

Last modified:

December 3, 2007 MX Added UI

9/12/06 Added link to programming commands




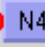
Characterize Adaptor Macro


This external [Macro](#) application creates an S2P file that models a device such as an adaptor, fixture path, or an on-wafer probe head. This is done by calculating the four S-parameters of the device from two 1-port calibrations; one on side A of the device and the other on side B of the device. Such S2P files can be used for embedding (adding) or de-embedding (removing) the device from subsequent S-parameter and FCA measurements.

This application, along with the FCA [Embed/De-embed feature](#), can be especially useful when performing FCA calibrations.

- An SMC calibration requires a [power meter measurement](#) at the port 1 reference plane. This could be very difficult in on-wafer applications where the measurement reference plane is at the tip of a probe. This macro, in conjunction with the Embed/De-embed feature, enables you to model the probe and connect the power sensor at the coax connector where the probe connects.
- Likewise, a VMC calibration requires that a [calibration mixer](#) be used for the Thru standard. Again, this can be very difficult in on-wafer applications where the measurement reference plane is at the tip of a probe. This macro, in conjunction with the Embed/De-embed feature, enables you to model the probe and connect the calibration mixer at the coax connectors where the probe connects.

See [How to Use the Characterize Adaptor Macro with subsequent Embedding or De-embedding](#).

How to start the Characterize Adaptor Macro	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	◀ Programming Commands ▶
1. Press  repeatedly	1. Click System
2. Press   	2. then Macro
	3. then AdaptorChar
For PNA-X models	◀ Programming Commands ▶
1. Press SYSTEM	1. Click Utility
2. then [Macro]	2. then Macro
3. then [AdaptorChar]	3. then AdaptorChar

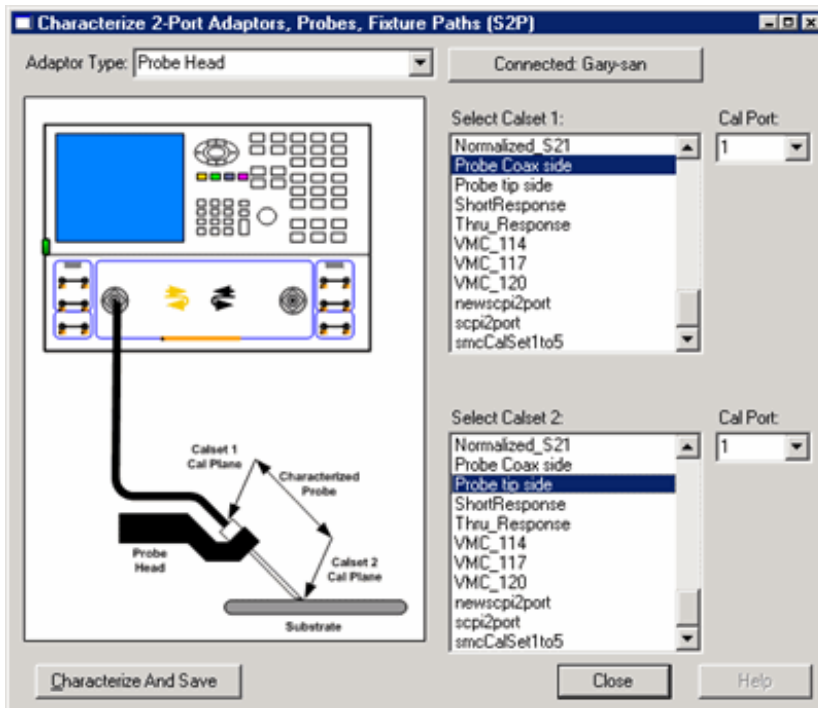

Characterize 2-Port Adaptors, Probes, Fixture Paths (S2P) dialog box help

Important Notes

- The device to be characterized (probe, adapter...) MUST be reciprocal ($S_{21} = S_{12}$).
- Two 1-port cals must be performed and saved to Cal Sets BEFORE using the Characterize Adaptor application.
- The frequencies and number of points of the two Cal Sets MUST be identical.
- **CRITICAL:** The calculations that are performed to create the S2P file require that **Calset 1** ALWAYS be from the side closest to the PNA and **Calset 2** ALWAYS be from the other side of the device.
- If your application that uses the resulting S2P file requires that the ports be reversed, it must be done on the S2P file using an external program such as Microsoft Excel.

[Learn more about the Characterize Adaptor Macro.\(scroll up\)](#)

Connected <PNA host name> The two 1-port Cal Sets can reside in another PNA. Click to connect to another PNA that is DCOM configured. [Learn how to configure DCOM.](#)

Adaptor Type Select the type of device to be characterized.

Note: The image does not influence the calculations. It only appears to help you visualize the measurement reference plane of the Cal Sets.

Select Calset 1 and Calset-2 Select a 1-port Cal Set from each list. Although all Cal sets are listed, only the Cal Sets that have error terms to satisfy a 1-port calibration may be used.

Cal Port Select the port within the selected Cal Set which represents the modeled device. The Cal Ports must

be the same for both selected Cal Sets.

Characterize and Save Calculates four S-parameters, then invokes the [Save As dialog](#) with [S2P file type](#). This button is not available until valid Cal Sets and Cal Ports are selected.

Close Closes the dialog box.

How to Use the Characterize Adaptor Macro with subsequent Embedding or De-embedding.

This procedure characterizes an adapter that is later removed (de-embedded) from subsequent S-parameter measurements. However, it can also be used to characterize a fixture or other device which can later be removed from (de-embedded), or added to (embedded), subsequent S-parameter or FCA measurements.

Save an S2P file using the Characterize Adaptor Macro

1. Configure your PNA measurement (frequency span, power level, IF bandwidth, and number of points).
2. Perform a 1-port SmartCal at the reference plane. Save the cal to a User Cal Set using a descriptive name (for example, **Ref Plane**).
3. Connect the adapter to be characterized to the reference plane.
4. Perform another 1-port SmartCal at the end of the adapter. Save it to a User Cal Set using a different descriptive name (for example, **Adapt End**).
5. [Start the Characterize Adaptor Macro](#).
6. In the **Select Calset1** field of the dialog box, select the Cal Set for the reference plane (from step 2 above).
7. In the **Select Calset2** field of the dialog box, select the Cal Set for the end of the adapter (from step 4 above).
8. Click **Characterize and Save**. In the resulting dialog box, enter the .S2P file name and location.
9. Click **Close**.

To De-embed the adapter (S2P file) from subsequent S-parameter measurements:

Note: Subsequent measurements must have the same or smaller frequency range (within the Start / Stop frequencies) as that of the S2P file.

1. Perform a 2 port SOLT calibration **including** the adapter. Note the port number on which the adapter is calibrated.
2. Click **Calibration**, point to **Fixturing Selection**, then click **2 port De-embedding**.
3. Select the Port that the adapter was on during calibration, then select **User Defined (S2P file)**.
4. Click **Use S2P file** and select the S2P file created using the Characterize Adaptor macro.
5. Check **Enable De-embedding**, then click **Close**.
6. To enable Fixturing, click **Calibration**, then **Fixturing OFF/on**. **Sim** appears in the Status Bar to indicate

that Fixture Simulation is ON.

To Embed the adapter (S2P file) into subsequent S-parameter measurements:

1. Perform a 2 port SOLT calibration **without** the adapter.
2. Click **Calibration**, point to **Fixturing Selection**, then click **Port Matching**.
3. Select the Port to add the adapter to, then select **User Defined (S2P file)**.
4. Click **Use S2P file** and select the S2P file created using the Characterize Adaptor macro.
5. Check **Enable Port Matching**, then click **Close**.
6. To enable Fixturing, click **Calibration**, then **Fixturing OFF/on**. **Sim** appears in the Status Bar to indicate that Fixture Simulation is ON.

To Embed or De-embed the S2P file with FCA measurements:

1. Configure the mixer SMC or VMC measurement (frequency span, power level, IF bandwidth, and number of points).
2. Click **Calibration**, then **Calibration Wizard**.
3. On the Calibration Setup dialog box, check [Waveguide/In-fixture/On-Wafer Setup](#), then click **Next**.
4. On the Waveguide/In-fixture/On-Wafer Setup dialog box, click **Help** to learn how to Embed or De-embed the S2P file.

Last modified:

30-Nov-2007	Clarified and highlight order of calsets.
26-Feb-2007	Fixed " Note: Subsequent measurements...".
Sept.12, 2006	Added link to programming commands

Delta Match Calibration

A [TRL Cal](#), [QSOLT](#), or [Unknown Thru](#) Cal requires a [reference receiver for each test port](#). The 4-port PNA-L model does NOT have a reference receiver for each test port.

A Delta Match Calibration can be thought of as a software method which provides a reference receiver for each test port when not otherwise available in the hardware. The Delta Match Calibration measures the [source match](#) and [load match](#) of the PNA test ports, and then calculates the differences, or "delta", of the two match terms. The results are then used to correct subsequent TRL, QSOLT, or Unknown Thru calibrations.

There are several ways to acquire the Delta Match Calibration:

1. **From an existing User Cal Set** that meets the following Delta Match criteria: (Not allowed for use with [external test sets](#).)
 - Must have been performed using ECal or as a guided mechanical Cal (not Unguided).
 - Must have the same start frequency, stop frequency, and number of points as the channel being calibrated.
 - Must calibrate the ports that require the delta match terms.
2. **From a [Global Delta Match Calibration](#).**
3. **From a 'Self Delta Match'** when other portions of the calibration fully characterize all ports using SOLT with [Defined Thru](#) or [Flush Thru](#). For example, when calibrating all four ports of a PNA-L, perform a SOLT between ports 1 and 2, and also between ports 3 and 4, then Unknown Thru could be used between any combination of the remaining ports. This is allowed with an [external test set](#).

Which to use? When a Delta Match Cal is required, the Cal Wizard will use the Global Delta Match Cal unless you select [Choose Delta Match](#).

Global Delta Match Cal

A Global Delta Match Cal is an "all-inclusive" calibration that can be applied whenever the delta match terms are required.

Note: Global Delta Match is **NOT** allowed for use with [external test sets](#).

A Global Delta Match Cal differs from a standard SOLT Cal in the following ways:

- It is always performed using a Flush Thru, a Known Thru, or an insertable ECal module. You can NOT use an Unknown Thru in the calibration process.
- Only two Thru connections are required to characterize the delta match terms on a 4-port PNA. This is less than the minimum number of Thrus of a standard 4-port Cal.
- Upon completion, the Global Delta Match Cal is stored as a special type of Cal Set and should be used **ONLY** as a Delta Match Cal. It provides Delta Match error terms, but does NOT provide all of the standard error correction terms.
- To attain the highest accuracy, the following settings are automatically used to perform a Global Delta Match

Cal. When applied, it will likely be [interpolated](#).


- Performed over the entire frequency range of the PNA.
- Uses 1601 measurement points.
- Uses 100 Hz IF Bandwidth.

Note: For highest accuracy, perform Global Delta Match Cal using an insertable ECal module and select [Flush-thru](#) as the Calibration Thru method.

How to perform a Global Delta Match Cal


These selections will only be available if the PNA hardware requires a Delta Match Calibration.

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	◀ Programming Commands ▶
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Global Delta Match Cal
For PNA-X models	◀ Programming Commands ▶
1. Press CAL 2. then [Start Cal] 3. then [Global Delta Match	1. Click Response 2. then Cal 3. then Start Cal 4. then Global Delta Match

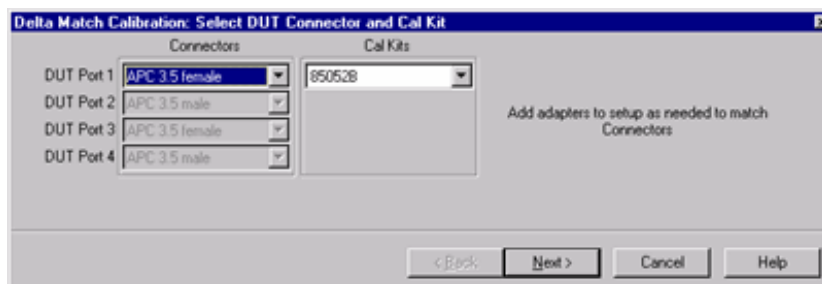

Delta Match Calibration. Select DUT Connectors and Cal Kit dialog box help


- Only one Cal Kit is specified and necessary to perform a Delta Match Cal. However, ALL of the PNA test ports are calibrated in a Delta Match Cal.
- You must configure ALL test ports to terminate in the specified connector / gender using the necessary adapters. The errors from adapters are removed during calibration, but the Thru connections must be made as specified.
- **If you select an ECal module that does NOT cover the entire frequency range of the PNA, your selection will change to a different Cal Kit. The Global Delta Match Cal covers the entire frequency range of the PNA. Your selected Cal Kit or ECal module must also cover the frequency range of the PNA.**

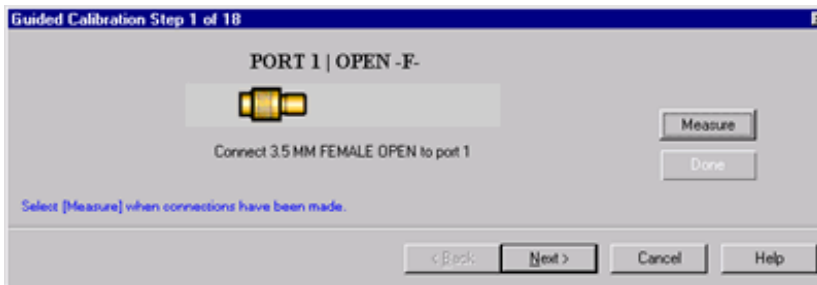

Guided Calibration Steps dialog box help

Click **Measure** for each standard.

When all standards have been measured, click **Done** to complete the measurement steps.

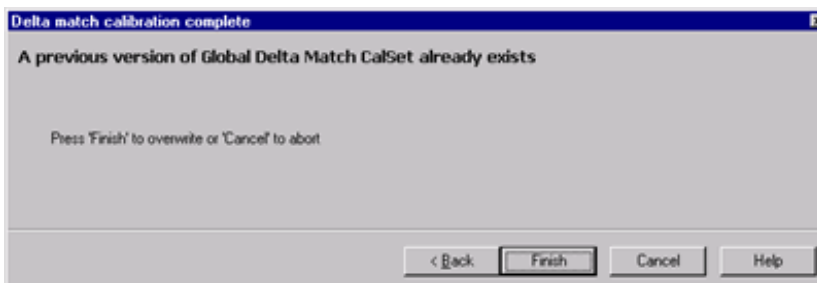

Delta Match Calibration Complete dialog box help

Click **Finish** to store the Global Delta Match Calibration as a special type of Cal Set.

By default, it will be used when a Delta Match Calibration is required.

It should ONLY be used as a Delta Match Cal. It does NOT provide all of the standard error correction terms.

Last modified:

9-Nov-2007	Edits for requirements
23-Feb-2007	Modified requirements for multiport
9/12/06	Added link to programming commands

Markers



Markers provide a numerical readout of measured data, a search capability for specific values, and can change stimulus settings. There are 9 regular markers and one [Reference marker](#) (used with Delta markers) available per trace. This topic discusses all aspects of markers.

Note: Marker Readout can be turned ON / OFF and customized from the **View/Display** menu. See [Marker Readout](#)

- [Creating and Moving Markers](#)
- [Delta Markers](#)
- [Searching with Markers](#)
- [Marker Functions](#) (Change Instrument Settings)
- [Advanced Marker Settings](#)
- [Marker Table](#)

[Other Analyze Data topics](#)

How to Create Markers

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
<ol style="list-style-type: none">1. Press MARKER The first button press creates marker 1.2. To create more markers, use the Active Entry toolbar3. Or use the Marker toolbar	<ol style="list-style-type: none">1. Click Marker2. then Marker
For PNA-X models	
<ol style="list-style-type: none">1. Press MARKER2. then [Marker n]	<ol style="list-style-type: none">1. Click Marker/Analysis2. then Marker3. select a marker number


Moving a Marker

To move a marker, make the marker active by selecting its number in any of the previous 3 methods. The **active marker** appears on the analyzer display as \tilde{N} . All of the other markers are inactive and are represented on the analyzer display as D. Then change the stimulus value using any of the following methods:

- Type a value
- Scroll to a stimulus value using the up / down arrows
- Click the stimulus box, then use the front-panel knob.

Click and Drag Markers - PNA-X ONLY

Markers can also be moved across a trace using a finger (touchscreen) or by left-clicking and holding a marker symbol. Then drag the marker to any point on the trace. This feature is NOT allowed in Smith Chart or Polar [display formats](#) or with a [Fixed Marker type](#).

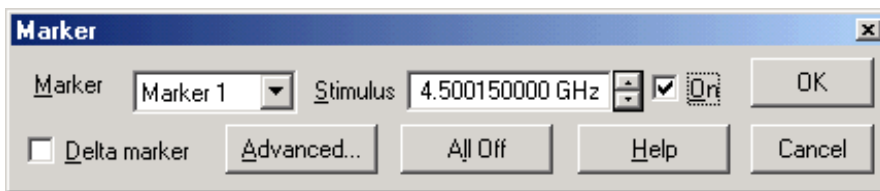

Marker dialog box help

Marker Specifies the current (active) marker number.

Stimulus Specifies the X-axis value of the active marker. To change stimulus value, type a value, use the up and down arrows, or click in the text box and use the front-panel knob.

On Check to display the marker and corresponding data on the screen.

Delta Marker Check to make the active marker display data that is relative to the reference (R) marker. There is only one reference marker per trace. All nine other markers can be regular markers or delta markers. When a delta marker is created, if not already displayed, the reference marker is displayed automatically.

A delta marker can be activated from the [Marker dialog box](#) or the [Marker Toolbar](#).

Advanced... Invokes the [Advanced Markers](#) dialog box.

All Off Switches OFF all markers on the active trace.


Searching with Markers

You can use markers to search measurement data for specific criteria.

If there is no valid data match for any of the search types, the marker will not move from its current position.

How to Search with Markers

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	◀ Programming Commands ▶
<ol style="list-style-type: none"> 1. Press MARKER SEARCH 2. Only Max, Min, Left Peak, and Right Peak search types are available from Active Entry Keys 	<ol style="list-style-type: none"> 1. Click Marker 2. then Marker Search
For PNA-X models	◀ Programming Commands ▶
<ol style="list-style-type: none"> 1. Press SEARCH 	<ol style="list-style-type: none"> 1. Click Marker/Analysis 2. then Marker Search

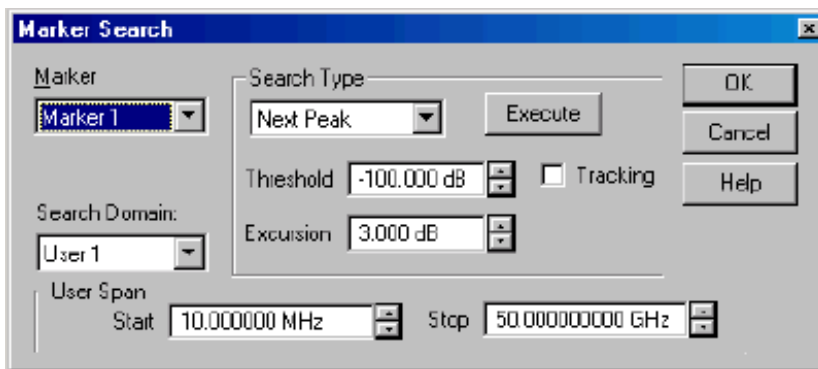

Marker Search dialog box help

Marker Specifies the marker that you are defining.

Search Domain Defines the area where the marker can move or search. For full span, the marker searches for specified values within the full measurement span. For user span, the marker searches for specified values within a measurement span that you define. [Learn more about Search Domain.](#)

Search Type

Maximum Marker locates the maximum (highest) data value.

Minimum Marker locates the minimum (lowest) data value.

Next Peak Marker locates the peak with the next lower amplitude value relative to its starting position.

Peak Right The marker locates the **next valid peak to the right** of its starting position on the X-axis.

Peak Left The marker locates the **next valid peak to the left** of its starting position on the X-axis.

- **Threshold** - Minimum amplitude (dB). To be considered valid, the peak must be **above** the threshold

level. The valley on either side can be below the threshold level.

- **Excursion** The vertical distance (dB) between the peak and the valleys on both sides. To be considered a peak, data values must "fall off" from the peak on both sides by the excursion value.

For more information, see [What is a Peak?](#)

Target Enter the Target value. The marker moves to the first occurrence of the Target value **to the right of its current position**. Subsequent presses of the Execute button cause the marker to move to the next value to the right that meets the Target value. When the marker reaches the upper end of the stimulus range, it will "wrap around" and continue the search from the lower end of the stimulus range (left side of the window).

- If **Discrete Marker** is OFF, the marker locates the interpolated data point that equals the target value.
- If **Discrete Marker** is ON and there are two data points on either side of the target value, the marker locates the data point closest to the Target value

Bandwidth Four markers are automatically generated to find the first negative or positive bandpass in the selected search domain. Specify the level in dB from the peak or valley where bandwidth is measured.


- Bandwidth Search can be used ONLY with [Log Mag display format](#).
- To use Bandwidth Search on a peak or valley other than the maximum or minimum values, change the Search Domain.

Enter a **Negative** number to search for a **Peak** bandpass, such as a filter S21 response:



- Marker 1: Maximum value within the [Search Domain](#).
- Marker 2: Specified level DOWN the left of the peak.
- Marker 3: Specified level DOWN the right of the peak.
- Marker 4: Center frequency between markers 2 and 3.

Enter a **Positive** number to search for a **Valley** bandpass, such as a filter S11 response:

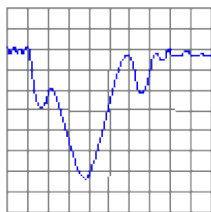

- Marker 1: Minimum value within the [Search Domain](#).
- Marker 2: Specified level UP the left of the valley.
- Marker 3: Specified level UP the right of the valley.
- Marker 4: Center frequency between markers 2 and 3.

The following four values are displayed for Bandwidth Search:

- **BW:** (Marker 3 x-axis value) - (Marker 2 x-axis value) = width of the filter.
- **Center** Mathematical midpoint between markers 2 and 3.

- **Q** Ratio of Center Frequency to Bandwidth (Center Frequency / Bandwidth).
- **Loss** Y-axis value of Marker 4. This is the loss of the filter at its center frequency. The ideal filter has no loss (0 dB) in the passband.

Note You must either press **Execute** or check **Tracking** to initiate all search types.

Execute Click to cause the marker to search for the specified criteria.

Tracking Check to cause the marker to search for the specified criteria with each new sweep. The searches begin with the first sweep after Tracking has been checked, based on the current search type and domain information. Therefore, make sure that the search criteria are in the desired state before using the data. You cannot manually change the stimulus setting for a marker if Tracking is selected for that marker.

What Is a "Peak"?

You define what the analyzer considers a "peak" by selecting the following two peak criteria settings:

- **Threshold** - Minimum amplitude (dB). To be considered valid, the peak must be **above** the threshold level. The valley on either side can be below the threshold level.
- **Excursion** - The vertical distance (dB) between the peak and the valleys on both sides. To be considered a peak, data values must "fall off" from the peak on both sides by the excursion value.


Example:

Threshold Setting: -10dB

Excursion Setting: 1dB

Scale = 1 dB / Division

Mouse over the graphic to find a valid peak.

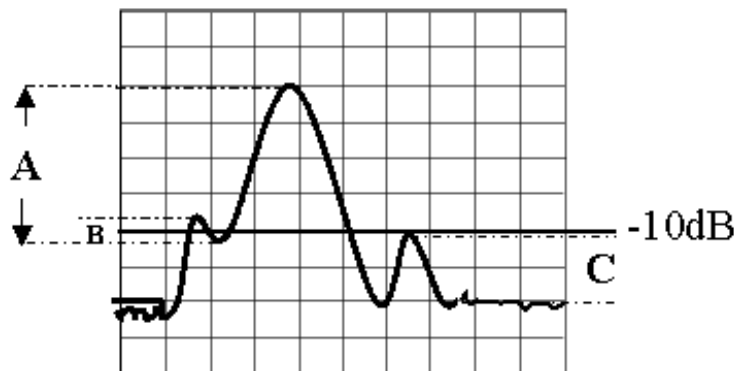


- **Peak A** = Valid Peak (Above Threshold and Excursion Settings)
- **Peak B** = Invalid Peak (Below Excursion Setting)
- **Peak C** = Invalid Peak (Below Threshold Setting)

Search Domain

Search domain settings restrict the stimulus values (X-axis for rectangular format) to a specified span. Set the Start and Stop stimulus settings of these **User** spans. If Start is greater than Stop, the marker will not move.

- The default domain of each new marker is "full span".
- There are 16 user-defined domains for every channel.
- The user-defined domains can overlap.
- More than one marker can use a defined domain.


The graphic below shows examples of search domains.

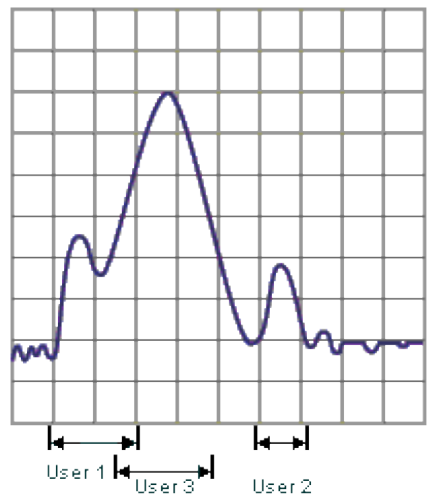

Marker Functions - Change Instrument Settings

The following settings change the relevant PNA settings to the position of the active maker.

How to change instrument setting using markers	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Press MARKER FUNCTION	1. Click Marker
2. Only Center , Ref Level , and Delay are available	2. then Marker Function
For PNA-X models	
1. Press MARKER	1. Click Marker/Analysis
2. then [Marker Function]	2. then Marker Function

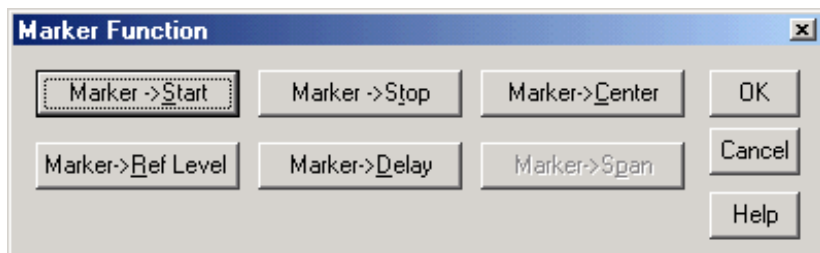

Marker Function dialog box help

Note: Marker Functions do not work with channels that are in [CW](#) or [Segment Sweep](#) mode.

Marker =>Start Sets the start sweep setting to the value of the active marker.

Marker =>Stop Sets the stop sweep setting to the value of the active marker.

Marker =>Center Sets the center of the sweep to the value of the active marker.

Marker =>Ref Level Sets the screen [reference level](#) to the value of the active marker.

Marker =>Delay The phase slope at the **active marker** stimulus position is used to adjust the line length to the receiver input. This effectively flattens the phase trace around the active marker. (Additional [Electrical Delay](#) adjustments are required on devices without constant group delay over the measured frequency span.) You can use this to measure the electrical length or deviation from linear phase.

This feature adds phase delay to a variation in phase versus frequency; therefore, it is only applicable for ratioed measurements. (See [Measurement Parameters](#).)


Marker =>Span Sets the sweep span to the span that is defined by the [delta marker](#) and the marker that it references. Unavailable if there is no delta marker.

How to select Advanced Marker settings

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	◀ Programming Commands ▶
1. Press MARKER	1. Click Marker 2. then Marker 3. then Advanced on the Marker Dialog
For PNA-X models	◀ Programming Commands ▶

1. Press **MARKER**
2. then **[Properties]**
3. then **[Advanced Markers]**

1. Click **Marker/Analysis**
2. then **Marker Function**

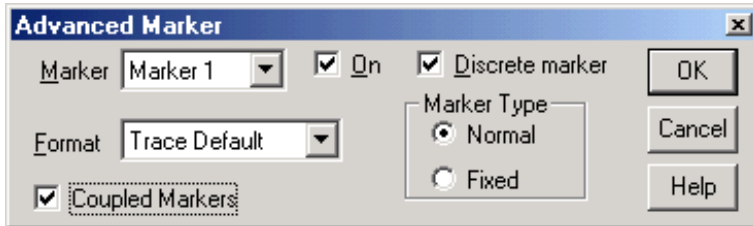

Advanced Marker dialog box help

Marker Specifies the marker number that you are defining.

On Check to display the marker and corresponding data on the screen.

Format Displays the marker data in a format that you choose. The marker format could be different from the grid format. In the default setting, the marker and grid formats are the same.

Discrete Marker Check to display values at only the discrete points where data is measured. Clear to display values that are interpolated from the data points. The interpolated marker will report y-axis data from ANY frequency value between the start and stop frequency.

Coupled Markers Check to couple markers by marker number, 1 to 1, 2 to 2 and so forth. The markers will remain coupled until this box is unchecked. [Learn more about coupled markers.](#)

Marker Type

Normal Has a fixed stimulus position (X-axis) and responds to changes in data amplitude (Y-axis). It can be scrolled left and right on the X-axis by changing the marker stimulus value. Use this marker type with one of the marker search types to locate the desired data.

Fixed Has a fixed X and Y-axis position based on its placement on the trace when it was set to fixed. It does NOT move with trace data amplitude. It can be scrolled left and right on the X-axis by changing the marker stimulus value.


 
 
Use this marker type to quickly monitor "before and after" changes to your test device. For example, you could use fixed markers to record the difference of test results before and after tuning a filter.

Coupled Markers

The coupled markers feature causes markers on different traces to line up with the markers on the selected trace. Markers are coupled by marker number, 1 to 1, 2 to 2, 3 to 3, and so forth. If the x-axis domain is the same (such as frequency or time), coupling occurs across all channels, windows, and traces. Trace markers in a different x-axis domain will not be coupled. If a trace marker has no marker to couple with on the selected trace, the marker remains independent.

Coupled Markers Model

This model simulates the use of coupled markers in the PNA

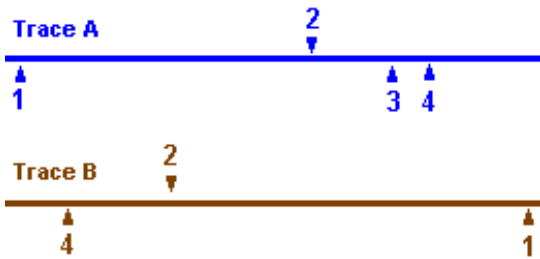

1. Click **Trace A** or **Trace B**
2. Click **Coupled Markers**
3. Notice the following:
 - * Markers on the unselected trace move to the x-axis position of the selected trace.
 - * If a marker number on the unselected trace has no corresponding marker on the selected trace, no movement occurs for that marker.
4. Click **Reset** to run the model again. (There is no Reset for coupled markers on the PNA.)

Set Coupled Markers from the [Advanced Markers](#) dialog box.

Marker Table

You can display a table that provides a summary of marker data for the **active trace**. The marker data is displayed in the specified format for each marker.

How to view the Marker Table	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Marker 2. then Marker Table
For PNA-X models	
1. Press DISPLAY 2. then [More]	1. Click Response 2. then Display

3. then [Tables]	3. then Tables
4. then [Marker Table]	4. then Marker Table

Last Modified:

- 17-Jul-2007 Clarified bandwidth search
- 2-Feb-2007 MX Added UI

Using Math Operations

You can perform four types of math on the active trace versus a memory trace. In addition three statistics (Mean, Standard Deviation and Peak to Peak) can be calculated and displayed for the active data trace.

[Trace Math](#)

[Trace Statistics](#)


Note: Trace Math (described here) allows you to quickly apply one of four math operations using memory traces. [Equation Editor](#) allows you to build custom equations using several types of traces from the same, or different channels.

[Other Analyze Data topics](#)

Trace Math

To perform any of the math operations, you must first store a trace to memory. You can display the memory trace using the [View](#) options.

Trace math is performed on the complex data before it is formatted for display. See the [PNA data processing map](#). Markers can be used while viewing a memory trace.

How to select Trace Math	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	 Programming Commands
<div>1. Press MATH/MEMORY</div> <div>2. Only the following are available from Active Entry<ul style="list-style-type: none">• Data>>Mem (stores Data trace into Memory)• Data/Mem (performs math operation: Data divided by memory)• Data (displays data trace with no math operation applied)• Mem on/OFF (turns Memory trace on or off)</div>	<div>1. Click Trace</div> <div>2. then Math</div>


1. Press **MEMORY**

1. Click **Marker/Analysis**

2. then **Memory**

3. then **Memory**

Normalize, available only from the Memory menu, (not on the Math / Memory dialog), performs the same function as **Data=>Memory**, then **Data / Memory**.

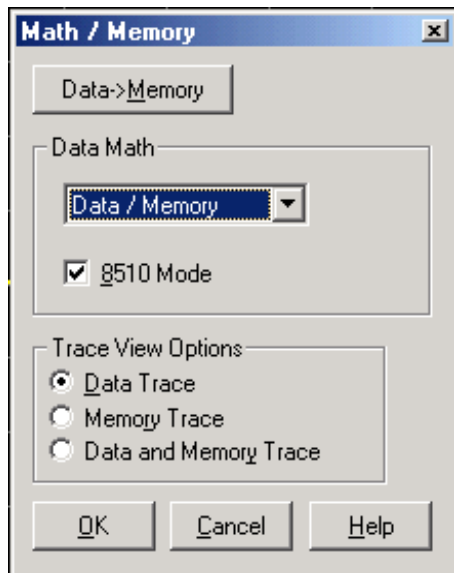

Math / Memory dialog box help

Normalize, available only from the Memory menu, (not on the Math / Memory dialog), performs the same function as **Data=>Memory**, then **Data / Memory**.

Data=>Memory Puts the active data trace into memory. You can store one memory trace for every displayed trace.

Data Math

All math operations are performed on linear (real and imaginary) data before being formatted. See the PNA Data flow (below).

Data Does no mathematical operation.

Data / Memory - Current measurement data is divided by the data in memory. Use for ratio comparison of two traces, such as measurements of gain or attenuation. [Learn more.](#)


Data – Memory - Data in memory is subtracted from the current measurement data. For example, you can use this feature for storing a measured vector error, then subtracting this error from the DUT measurement. [Learn more.](#)

Data + Memory - Current measurement data is added to the data in memory. [Learn more.](#)

Data * Memory - Current measurement data is multiplied by the data in memory. [Learn more.](#)

8510 Mode Check to simulate the Agilent 8510 data processing chain as it pertains to Trace Math and Memory. This setting applies to all channels. When the box is checked or cleared, the PNA performs an [Instrument Preset](#) and retains its setting through subsequent Instrument Presets.

This setting is saved as part of an [instrument state](#). However, when recalled, this setting is assumed only temporarily. When a subsequent PNA Preset is performed, the PNA reverts to the setting that was in effect before the state was recalled.

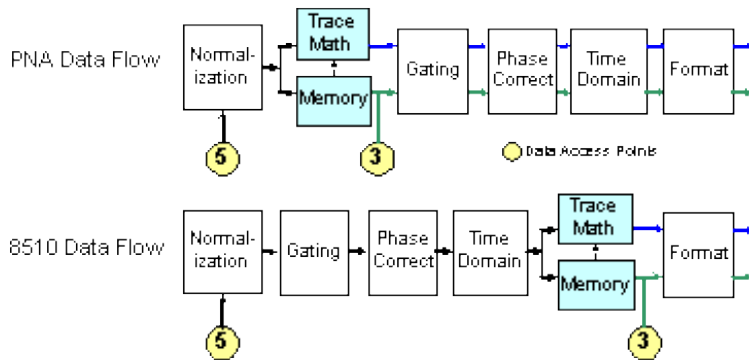

This represents the relevant portion of the data flow. [See the entire PNA data processing chain.](#)

A settings change in any of the operations that occur after the Memory operation on the above **PNA Data Flow** diagram changes both the Data trace and the Memory trace. For example, after storing a data trace to memory, when you change the format for the Data Trace, the format for the Memory Trace is also changed to the same setting.

Trace View Options

Data Trace Displays ONLY the Data trace (with selected math operation applied).

Memory Trace Displays ONLY the trace that was put in memory.

Data and Memory Trace Displays BOTH the Data trace (with selected math operation applied). and the trace that was put in memory.

[Learn more about Trace Math](#) (scroll up)

(Data / Memory) and (Data - Memory)

(Data / Memory) and (Data - Memory) math operations are performed on linear data before it is formatted. Because data is often viewed in log format, it is not always clear which of the two math operations should be used. Remember: dividing linear data is the same as subtracting logarithmic data. The following illustrates, in general, when to use each operation.

Use **Data / Memory** for normalization purposes, such as when comparing S21 traces "before" and "after" a change is made or measurement of trace noise. In the following table, the Data/Mem values intuitively show the differences between traces. It is not obvious what Data-Mem is displaying.

S21 values to compare	Data/Mem	Data-Mem
0.5 dB and 0.6 dB	0.1 dB	-39 dB
0.5 dB and 0.7 dB	0.2 dB	-33 dB

Use **Data - Memory** to show the relative differences between two signals. Use for comparison of very small signals, such as the S11 match of two connectors.

In the following table, Data/Mem shows both pairs of connectors to have the same 2 dB difference. However, the second pair of connectors have much better S11 performance (-50 and -52) and the relative significance is shown in the Data-Mem values.

S11 values to compare	Data/Mem	Data-Mem
-10 dB and -12 dB	2 dB	-24 dB
-50 dB and -52 dB	2 dB	-64 dB

Data * Memory and Data + Memory

Use **Data * Memory** and **Data + Memory** to perform math on an active data trace using data from your own formulas or algorithms rather than data from a measurement. For example, if you want to simulate the gain of a theoretical amplifier placed in series before the DUT, you could do the following:

1. Create an algorithm that would characterize the frequency response of the theoretical amplifier.
2. Enter complex data pairs that correspond to the number of data points for your data trace.
3. Load the data pairs into memory with SCPI or COM commands. The analyzer maps the complex pairs to correspond to the stimulus values at the actual measurement points.
4. Use the **data + memory** or **data * memory** function to add or multiply the frequency response data to the measured data from the active data trace.

Note: The data trace must be configured before you attempt to load the memory.

Trace Statistics

You can calculate and display statistics for the active data trace. These statistics are:

- Mean
- Standard deviation
- Peak-to-peak values

You can calculate statistics for the full stimulus span or for part of it with user ranges.

There are nine user ranges per channel. These user ranges are the same as the search domains specified for a



marker search in that same channel; they use the same memory registers and thus share the same stimulus spans. If you specified search domains with marker search for a channel, you can recall these same spans by selecting the corresponding user ranges. The user ranges for a channel can overlap each other.


A convenient use for trace statistics is to find the peak-to-peak value of passband ripple without searching separately for the minimum and maximum values.

The trace statistics are calculated based on the format used to display the data.

- [Rectangular data formats](#) are calculated from the scalar data represented in the display
- [Polar](#) or [Smith Chart](#) formats are calculated from the data as it would be displayed in [Log Mag](#) format

[See how to make Trace Statistics display settings.](#)

How to activate Trace Statistics	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Trace 2. then Statistics
For PNA-X models	
1. Press ANALYSIS 2. then [Statistics] 3. then [Trace Statistics]	1. Click Marker/Analysis 2. then Analysis 3. then Trace Statistics

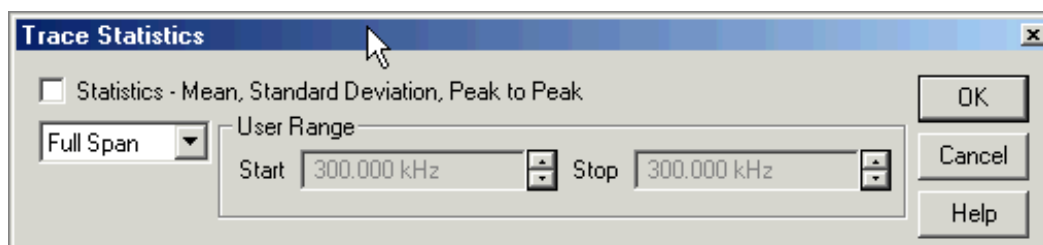

Trace Statistics dialog box help

[See how to make Trace Statistics display settings.](#)

Statistics Check to display mean, standard deviation, and peak to peak values for the active trace.

Span Specifies the span of the active trace where data is collected for a math operation. You can define up to 9 user spans per channel with Start and Stop. You can also define the user spans from the [Marker Search dialog box](#).

Start Defines the start of a user span.

Stop Defines the stop of a user span.

[Learn more about Trace Statistics](#) (scroll up)

Last Modified:

27-Aug-2007 Edited trace display settings

2-Feb-2007 MX added UI

Equation Editor

Equation Editor, new with PNA release 6.03, allows you to enter an algebraic equation that can mathematically manipulate measured data. The results are displayed as a data trace. Data that is used in the equation can be from the same or different channels.

Note: Equation Editor is NOT available with FCA measurements.

[Overview](#)

[How to start Equation Editor](#)

[Using Equation Editor](#)

[Data that is used in Equation Editor](#)

[Trace Settings, Error Correction, and an Example](#)

[Functions and Constants](#)

[Operators](#)

[Example Equations](#)

[Saving Equation Editor Data](#)

[Other 'Analyze Data' topics](#)

Overview

Equation Editor allows you to enter an algebraic equation of standard mathematical operators and functions, referencing data that is available in the PNA. Once a valid equation is entered and enabled, the display of the active trace is replaced with the results of the equation, and updated in real-time as new data is acquired. For equations that can be expressed with Equation Editor's supported functions, operators, and data, there is no need for off-line processing in a separate program.

For example, enter the equation “ $S_{21} / (1 - S_{11})$ ”. The resulting trace is computed as each S_{21} data point divided by one minus the corresponding S_{11} data point. For a 201 point sweep setup, the computation is repeated 201 times, once for each point.

As another example, suppose you want the PNA to make a directivity measurement of your 3-port DUT. This is not a “native” PNA measurement, but can be achieved using the Equation Editor. The desired result is the sum and difference of LogMag formatted traces, expressed as: $S_{12} + S_{23} - S_{13}$.

Because Equation Editor operates on **unformatted complex data**, the required equation is:

```
DIR = S12 * S23 / S13
```

DIR becomes a display label to help you identify the computed data trace.

On the equation trace, set the format to LogMag.

How to start Equation Editor

Using front-panel
HARDKEY [softkey] buttons

Using a mouse with PNA Menus

For [PNA-L](#) and [E836x](#) models

Programming Commands

1. [Navigate using MENU/DIALOG](#)


1. Click **Trace**
2. then **Equation**

For [PNA-X](#) models

Programming Commands

1. Press **ANALYSIS**
2. then **[Equation Editor]**

1. Click **Marker/Analysis**
2. then **Analysis**
3. then **Equation Editor**

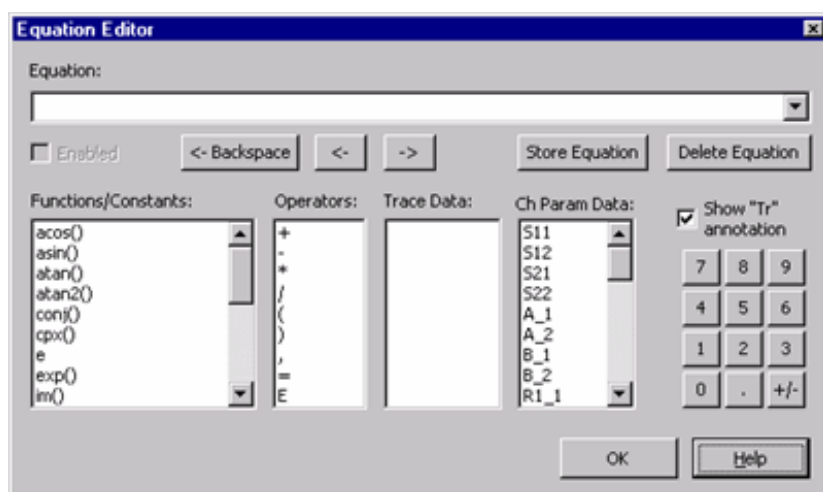

Equation Editor dialog box help

Notes

- **Double-click**, or type, the Functions, Operators, and Data to build an Equation.
- Equation Editor is NOT available with [FCA measurements](#).
- Scroll down to learn more about [Using Equation Editor](#)

Equation: The field in which equations are built. Click the down arrow to the right to use or modify equations that have been previously saved. This is where equations are saved when you press 'Store Equation'.

Enabled Check this box to enable the equation that is currently in the Equation field. If the Enabled box is not available, then the equation is not valid. If a data trace is used that is from a different channel than the Equation trace, the channels MUST have the same number of data points to be valid.

<-Backspace Moves the cursor to the left while erasing characters.

<- Moves the cursor to the left without erasing characters.

-> Moves the cursor to the right without erasing characters.

Store Equation Press to save the current equation. To later recall the equation, click the down arrow to the right of the equation.

Delete Equation Removes the current equation from the drop-down list.

Functions/Constants: See [descriptions of Functions](#).

Operators: See [descriptions of Operators](#).

Trace Data: Select from ALL of the currently **displayed** traces on ALL channels.

Ch Param Data: Select from **undisplayed** data that is available ONLY from the active channel (same channel as the equation trace).

Note: With an external test set enabled, only parameters involving ports 1 through 4 are listed. However, all available parameters can be typed directly into the **Equation** field.

See [Data that is used in Equations](#).

Show "Tr" annotation Check to show the **TrX** annotation on PNA display and [Trace Status](#) buttons.

Keypad: Provided to allow navigation of the entire dialog with a mouse.

Using Equation Editor

1. Pick a trace in which to enter the equation

- Equation Editor works on the active trace.
- Either create a new trace, or click the [Trace Status](#) button on an existing trace to make the trace active.

2. Enter an equation

Start Equation Editor (click **Trace**, then **Equation**)

Note: Equation Editor is NOT available for FCA measurements.

- The equation text can be in the form of an expression $(S21)/(1-S11)$ or an equation $(DIR = S12 * S23 / S13)$. This topic refers to both types as equations.
- Either type, or double-click the Functions, Operators, and Data to build an equation.
- Functions and Constants ARE case-sensitive; Data names are NOT case sensitive.
- [Learn more about referring to data traces.](#)

3. Check for a valid equation

When a valid equation is entered, the Enabled checkbox becomes available for checking. When the Enabled box is checked:

- The Equation Trace becomes computed data.
- The equation is visible on the [Trace Status](#) (up to about 10 characters).
- The equation is visible in the trace [Title](#) area (up to about 45 characters) when the Equation trace is active.
- The equation is visible in the [Status Bar](#) at the bottom of the display. This is updated only after the equation is entered and the [Trace Status](#) button is clicked.
- If an equation is NOT valid, and a trace from a different channel is used, make sure the number of data points is the same for both channels.

Learn more about the [Functions](#), [Operators](#), and [Data](#) that are used in Equation Editor.

Data that is used in Equation Editor

Definitions

- **Equation trace** A trace in which an equation resides.
- **Referred trace** A trace that is used as data in an equation.

Example: $eq=Tr2+S11$ is entered into **Tr1**.

Tr1 becomes an equation trace.

Tr2 and **S11** are both referred traces because they are used in the equation trace.

Notes

- Referred traces are processed one data point at a time. For example, the expression "S11/S21" means that for each data point in S11 and S21, divide point N of S11 by point N of S21.
- Once an equation is enabled, the trace is no longer identified by its original measurement parameter. It becomes an equation trace.

- An equation trace can NOT refer to itself. For example, an equation in Tr1 cannot refer to trace Tr1.
- Referred traces can be selected from S-Parameters, Receiver data, and [Memory traces](#).
- [See note regarding External Test Sets](#).

There are three ways to refer to traces:

The following distinction is important when discussing the three ways to refer to traces/data.

- **Trace** - a sequential collection of data points that are displayed on the PNA screen.
- **Data** - PNA measurements that are acquired but not displayed. When an equation trace refers to data that is not displayed, the PNA will automatically acquire the data.

1. Using **TrX** Trace notation (for example, Tr2).

When a trace is created, check ["Show Tr Annotation"](#) to see the **Tr** number of that trace.

- **Simple** - ALWAYS refers to displayed traces.
- Must be used for referring to traces in a different channel as the equation trace.
- All [trace settings](#) are preserved in the equation trace. If you do NOT want a trace setting to be used in the equation trace, you must disable it in the referred trace.
- If the referred trace is error corrected, then that data is corrected in the equation trace.
- Used to refer to a memory trace (it must already be stored in memory). Append .MEM to the **TrX** trace identifier. For example, **Tr2.mem** refers to the memory trace that is stored for Tr2.

2. Using **S-parameter** notation (for example, S11/S21)

- **Convenient** - ALWAYS refers to data that is NOT displayed.
- Refers to data that resides in the same channel as the equation.
- NOT the same as referring to a displayed S11 trace using **TrX** notation. [See Example](#).
 - The referred data includes NO [trace settings](#).
 - If the channel has error correction available, then it can be applied by turning error correction ON for the Equation trace.

3. Using **Receiver** notation (for example AB_2); NOT case sensitive.

At least one receiver is required, followed by an underscore and a number.

- The **letters** before the underscore refer to the receivers.
 - Letters alone refer to physical receivers.

- Letters immediately followed by numbers refer to logical receivers. [Learn more.](#)
- If two receivers are referenced, they are ratioed.
- The **number** after the underscore refers to the source port for the measurement.

Examples

- AR1_2 = physical receiver A / physical receiver R1 with 2 as the source port.
- a3b4_1 = reference receiver for port 3 / test port receiver for port 4 with 1 as the source port.

[Learn more about ratioed and unratioed receiver measurements.](#)

Receiver notation is like S-parameter notation in that:

- Refers to data that is NOT displayed and resides in the same channel as the equation.
- The referred data includes NO trace settings.
- If the channel has error correction available for that receiver, then it can be applied by turning error correction ON for the Equation trace.


Referring to Traces in a different channel

When the equation trace refers to a trace on a different channel:

- The trace must already be displayed.
- Must refer to the trace using **TrX** notation.
- The Equation trace and the referred trace MUST have the same number of data points or the Enable checkbox will not be available.
- The Equation trace is updated when the last referred data in the same channel is acquired. Therefore, to prevent 'stale' data from being used, the Equation trace must be on a higher numbered channel than the referred trace. This is because the PNA acquires data in ascending channel number order - first channel 1, then channel 2, and so forth. If the Equation trace is on channel 1, and it refers to a trace on channel 2, the Equation trace will update after channel 1 is finished sweeping, using 'old' data for the channel 2 trace.

Trace Settings, Error Correction, and an Example

This discussion highlights the differences between using **S-parameter / Receiver** notation and **TrX** notation when referring to traces. The key to understanding the differences is realizing that **S-parameter / Receiver** notation ALWAYS refers to data that is NOT displayed.

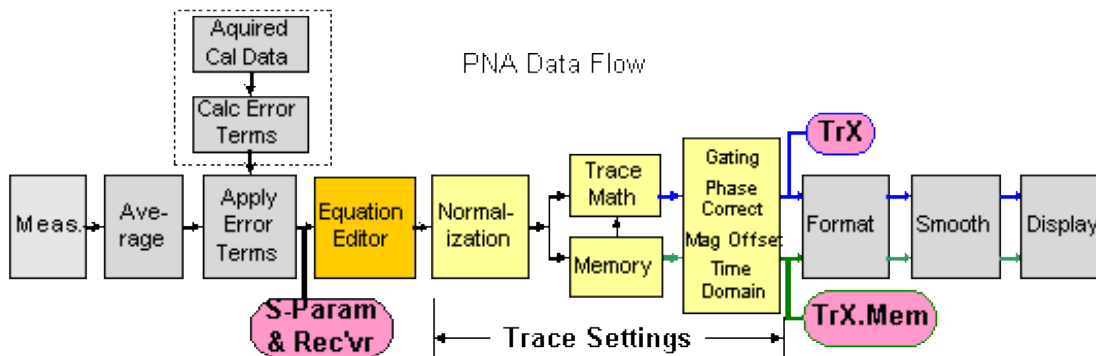

- **Trace Settings** Normalization, Trace Math, Gating, Phase and Mag Offset, Electrical Delay, Time Domain.
- **Equation Editor** processing occurs on the **equation trace** immediately after error correction.
- **Referred Data/Trace** (used in the equation) is taken from the following locations:
 - When using **TrX** notation, data is taken immediately before formatting . These traces are always displayed and include **Trace Settings**.
 - When using **S-parameter / Receiver** notation, data is taken immediately after error correction. This data is NOT displayed and includes **NO** trace settings ([see example](#)).

Error-correction and Equation Editor

Using **TrX** notation:


- The Trace Settings and Error-correction on the referred trace are used in the Equation trace.
- If error correction is NOT ON, then the raw, uncorrected data is used in the equation trace.
- To see if error correction is ON, make the trace active, then see the [Correction level in the status bar](#).
- Turning error correction ON/OFF on the equation trace has no meaning. The referred data that is used in the equation is ALWAYS what determines its level of correction.

Using **S-parameter** and **Receiver** notation:

- Because the data is not displayed, NO trace settings are used in the Equation trace.
- Correction can be turned ON/OFF if corrected data is available for the referred data. Exception: When using S-parameter and Receiver notation to refer to a trace on a channel that has been calibrated with a [Response Cal](#) or Receiver Cal, correction can NOT be turned ON, even though the Status Bar indicates otherwise. For example: Tr1 is an S11 measurement with a Response Cal. Tr2 is an equation trace that refers to S11. The Tr2 equation trace is NOT corrected, even though the Status Bar may indicate that it is corrected. However, if Tr2 refers to Tr1 (not S11), the Tr2 equation trace is corrected.

Example

This example illustrates the differences when referring to a trace using **S-parameter** notation and **TrX** notation:

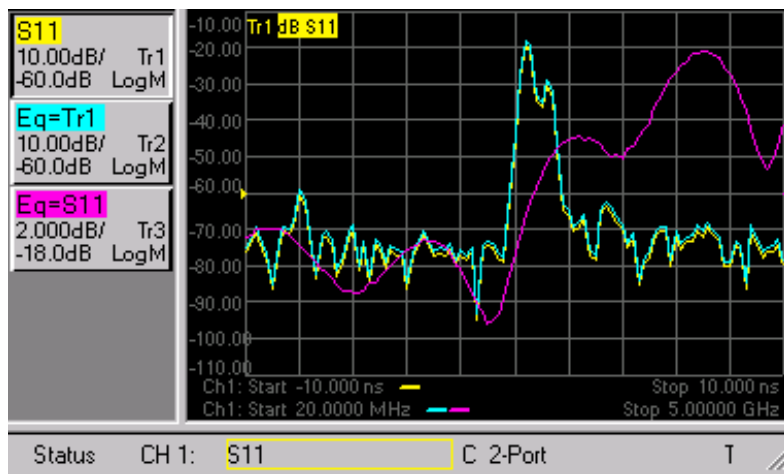

- **Tr1** is an S11 measurement with no equation, 2-port correction ON, and Time Domain transform ON.
- **Tr2** is an equation trace that refers to **Tr1**. Tr2 is corrected because Tr1 is corrected. Tr2 is transformed because Tr1 is transformed. If transform is turned ON for Tr2, the data will be transformed AGAIN, which results in "unusual" data.
- **Tr3** is an equation trace that refers to **S11**. This is NOT the same as referring to Tr1. The S11 trace that is referred to is a different instance of S11 that is NOT displayed, and has NO trace settings. Notice that Tr3 data is NOT transformed, although Tr1 is transformed. Correction for **Tr3** can be turned ON and OFF because a calibration was performed on the channel in which the S11 trace resides.
- **Note:** X- axis annotation of the Equation trace is completely independent of the data that is presented. ONLY the **data values** from a referred trace are used. For example, notice that the Equation trace **Tr2** has Frequency on the X-axis although the referred trace **Tr1** is presented in Time.

Functions and Constants used in Equation Editor

ALL trace data that is used in Equation Editor is unformatted, complex data.

In the following table,

- Function(**scalar** x) means that an automatic conversion from a complex number to its scalar magnitude is performed before passing the value to the function.
- Function(**complex** x) means that the entire complex value is used.
- **a, b, c, d** are arguments that are used in the function.

Function/Constant	Description
acos(scalar a)	returns the arc cosine of a in radians
asin(scalar a)	returns the arc sine of a in radians

atan(scalar a)	returns the arc tangent of a in radians
atan2	returns the phase of complex a = (re,im) in radians has the following two argument sets: <ul style="list-style-type: none"> atan2(complex a) - returns the phase in radians atan2(scalar a, scalar b)
cpx(scalar a, scalar b)	returns a complex value (a+ib) from two scalar values
cos(complex a)	takes a in radians and returns the cosine
e	returns the constant $\approx 2.71828...$
exp(complex a)	returns the exponential of a
im(complex a)	returns the imag part of a as the scalar part of the result (zeroes the imag part)
kfac(complex a, complex b, complex c, complex d) when entered in EE: kfac(S11,S21,S12,S22)	k-factor: $k = (1 - a ^2 - d ^2 + a*d-b*c ^2) / (2 * b*c)$ returns a scalar result - the imaginary part of the complex result is always 0
ln(complex a)	returns the natural logarithm of a
log10(complex a)	returns the base 10 logarithm of a
mag(complex a)	returns $\sqrt{a.re*a.re+a.im*a.im}$
max(complex a, complex b, ...)	returns the complex value that has the largest magnitude of a list of values.
median(complex a, complex b,...)	returns the median of a list of complex values <ul style="list-style-type: none"> The median is determined by sorting the values by magnitude, and returning the middle one. If an even number of values is passed, then the smaller of the two middle values is returned.
min(complex a, complex b, ...)	returns the complex value that has the smallest magnitude of a list of values.
mu1(complex a, complex b, complex c, complex d) when entered in EE: mu1(S11,S21,S12,S22)	$\mu_1 = (1 - a ^2) / (d - \text{conj}(a) * (a*d-b*c) + b*c)$

mu2(complex a, complex b, complex c, complex d)	$\mu_2 = (1 - d ^2) / (a - \text{conj}(d) * (a*d - b*c) + b*c)$
when entered in EE: mu1(S11,S21,S12,S22)	
for both mu1 and mu2 (Usually written with the Greek character μ)	<ul style="list-style-type: none"> • conj is the complex conjugate. For scalars a and b, $\text{conj}(a+ib) = (a-ib)$ • returns a scalar result - the imaginary part of the complex result is always 0
phase(complex a)	returns atan2(a) in degrees
PI	returns the numeric constant pi (3.141592), which is the ratio of the circumference of a circle to its diameter
pow(complex a,complex b)	returns a to the power b
re(complex a)	returns the scalar part of a (zeroes the imag part)
sin(complex a)	takes a in radians and returns the sine
sqrt(complex a)	returns the square root of a , with phase angle in the half-open interval $(-\pi/2, \pi/2]$
tan(complex a)	takes a in radians and returns the tangent

Operators used in Equation Editor

Operator	Description
+	Addition
-	Subtraction
*	Multiplication
/	Division
(Open parenthesis
)	Close parenthesis
,	Comma - separator for arguments (as in S11, S22)
=	Equal (optional)

E	Exponent (as in 23.45E6)
---	--------------------------

Example Equations

The following examples may help you get started with Equation Editor.

Offset each data point in Tr2 from Tr1 by 2dB

Use the function: `pow(complex a, complex b)` -- returns **a** to the power **b**.

$$20\log(a) + 2 = 20\log(x)$$

$$\log(a) + 2/20 = \log(x) \text{ // divide all by 20.}$$

$$x = 10^{(\log(a) + 2/20)} \text{ // swap sides and take 10 to the power of both sides}$$

$$x = 10^{\log(a)} * 10^{(2/20)}$$

$$x = a * 10^{(2/20)}$$

The equation is entered into Tr2 as:

$$\text{Offset} = \text{Tr1} * \text{pow}(10, 2/20)$$

To offset by 5 dB

$$\text{Offset} = \text{Tr1} * \text{pow}(10, 5/20).$$

Balanced Match using a 2-port PNA

$$\text{SDD11} = (\text{S11} - \text{S21} - \text{S12} + \text{S22}) / 2$$

Conversion loss

$$\text{B}_1 / \text{pow}(10, -15/20)$$

- B_1 is a receiver measurement;
- -15 is the input power in dBm

Third-order intercept point (IP3 or TOI)

$$\text{Tr1} * \text{sqrt}(\text{Tr1} / \text{Tr3})$$

- Tr1 = input signal power
- Tr3 = intermodulation power (both traces measured with single receivers)

Harmonics in dBc

$$\text{B}_1 / \text{Tr2}$$

- B_1 is tuned to a harmonic frequency
- Tr2 = power at fundamental frequency, measured with B_1 receiver

PAE (Power Added Efficiency)

Pout - Pin / Pdc

Type the following equation into a new trace with an unratioed measurement, such as AI1. The data format is REAL:

```
PAE = 100 * ( .001*pow(mag(Tr1),2) - (.001*pow(mag(Tr1),2)/pow(mag(Tr2),2)) ) / (Tr3*Tr4)
```

Where:

- Tr1 - a trace that measures unratioed B receiver.
- Tr2 - a corrected S21 trace (amplifier gain)
- Tr3 - a trace that measures [ADC voltage](#) (AI1) across a sensing resistor.
- Tr4 = an equation trace containing Isupp = (Tr3 / value of sensing resistor).

Data is displayed in Real format with units actually being watts.

1-port Insertion Loss

When it is not possible to connect both ends of a cable to the PNA, a 1-port insertion loss measurement can be made. However, the measured loss must be divided by 2 because the result includes the loss going down **and** coming back through the cable. This assumes that the device is terminated with a short to reflect all of the power. The 'divide by 2' operation is performed as follows using Equation Editor:

- Tr1 - an S11 trace
- Tr2 - an equation trace containing $20 * \log_{10}(\text{Tr1}) / 2$

Saving Equation Editor Data

Equation data can be saved to the PNA hard drive in the following formats:

- [Citifile \(.cti\)](#) - Equation data is saved and recalled. The file header indicates the "underlying" s-parameter trace type.
- [Trace \(.prn\)](#) - read by spreadsheet software. Can NOT be recalled by the PNA.
- [Print to File](#) (bmp, jpg, png) - saves image of PNA screen.

Equation data is NOT saved in [.SnP file format](#). When attempting to save an Equation trace in .SnP format, the "underlying" S-parameter data is saved; not Equation data.

Last Modified:

30-Aug-2007	Added 1-port insertion loss
3-Jul-2007	Added PAE and other notes
18-Jun-2007	Added examples

Using Limit Lines

Limit lines allow you to compare measurement data to performance constraints that you define.

[Overview](#)

[Create and Edit Limit Lines](#)

[Display and Test with Limit Lines](#)

[Testing with Sufficient Data Points](#)

[Other Analyze Data topics](#)

Overview

Limit lines are visual representations on the PNA screen of the specified limits for a measurement. You can use limit lines to do the following:

- Give the operator **visual guides** when tuning devices.
- Provide **standard criteria** for meeting device specification.
- Show the **comparison** of data versus specifications.

Limit testing compares the measured data with defined limits, and provides optional **Pass or Fail** information for each measured data point.

You can have up to **100** discrete lines for each measurement trace allowing you to test all aspects of your DUT response.

Limit lines and limit testing are NOT available with **Smith Chart** or **Polar** display format. If limit lines are ON and you change to Smith Chart or Polar format, the analyzer will automatically disable the limit lines and limit testing.

Create and Edit Limit Lines



You can create limit lines for all measurement traces. The limit lines are the same color as the measurement trace.

Limit lines are made up of discrete lines with four coordinates:

- BEGIN and END stimulus - X-axis values.
- BEGIN and END response - Y-axis values.

How to create, edit, and test with Limit Lines

All limit line settings are made with the limit table. Use one of the following methods to show the limit table:

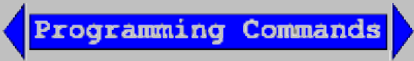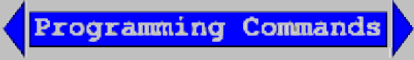Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
<ol style="list-style-type: none"> 1. Press LIMIT TABLE 2. then Active Entry keys 	<ol style="list-style-type: none"> 1. Click Trace 2. then Limit Test
For PNA-X models	
<ol style="list-style-type: none"> 1. Press ANALYSIS 2. then [Limits] 3. then [Limit Test] 	<ol style="list-style-type: none"> 1. Click Marker/Analysis 2. then Analysis 3. then Limit Test

Limit Table

	TYPE	BEGIN STIMULUS	END STIMULUS	BEGIN RESPONSE	END RESPONSE
1	MIN	1.930000 GHz	1.990000 GHz	-5.000000 dB	-5.000000 dB
2	MAX	1.000000 GHz	1.900000 GHz	-60.000000 dB	-50.000000 dB
3	MAX	2.050000 GHz	3.000000 GHz	-50.000000 dB	-60.000000 dB
4	OFF	0.0 Hz	0.000000 Hz	0.000000 dB	0.000000 dB

Note: To ADD a limit line to the table, change the last limit line to either MAX or MIN

1. In the **Type** area of the Limit Table, select **MIN** or **MAX** for Limit Line 1.
 - The MIN value will fail measurements BELOW this limit.
 - The MAX value will fail measurements ABOVE this limit.
2. Click **BEGIN STIMULUS** for Limit Segment 1. Enter the desired value.
3. Click **END STIMULUS** for Limit Segment 1. Enter the desired value.
4. Click **BEGIN RESPONSE** for Limit Segment 1. Enter the desired value.
5. Click **END RESPONSE** for Limit Segment 1. Enter the desired value.
6. Repeat Steps 1-5 for each desired limit line.

Displaying and Testing with Limit Lines

After creating limit lines, you can then choose to **display** or **hide** them for each trace. The specified limits remain valid even if limit lines are not displayed.

Limit testing cannot be performed on memory traces.


You can choose to provide a visual and / or audible PASS / FAIL indication.

With limit testing turned ON:

- Any portion of the measurement trace that **fails** is **displayed in red**.
- Any portion of the measurement trace that does **NOT fail** remains unchanged and silent.

PASS is the default mode of Pass / Fail testing. A data point will FAIL only if a measured point falls outside of the limits.

- If the limit line is set to OFF, the entire trace will PASS.
- If there is no measured data point at a limit line stimulus setting, that point will PASS.

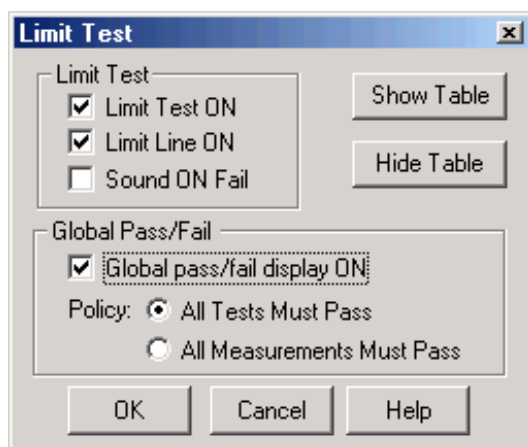

Limit Test dialog box help

Show Table Shows the table that allows you to create and edit limits.

Hide Table Makes the limits table disappear from the screen.

Note: To ADD a limit line to the table, change the last limit line to either MAX or MIN

Limit Test

Limit Test ON Check the box to compare the data trace to the limits and display PASS or FAIL.

Limit Line ON Check the box to make the limits visible on the screen. (Testing still occurs if the limits are not visible.)

Sound ON Fail Check the box to make the PNA beep when a point on the data trace fails the limit test.

Global Pass/Fail

The Pass/Fail indicator provides an easy way to monitor the status of ALL measurements.

Global pass/fail display ON Check to display the Global Pass/Fail status.

Policy: Choose which of the following must occur for the Global Pass/Fail status to display PASS:

- All Tests (with **Limit Test ON**) Must Pass - This setting reads the results from the Limit Tests. If all tests (with **Limit Test ON**) PASS, then the Global Pass/Fail status will PASS.
- All Measurements Must Pass - This more critical setting shows FAIL unless all measured data points fall within established test limits **and** Limit Test is ON. **Note:** In this mode, if one measurement does NOT have **Limit Test ON**, Global Pass/Fail will show FAIL.


[Learn more about displaying and testing with Limits \(scroll up\)](#)

Testing with Sufficient Data Points


Limits are checked only at the actual measured data points. Therefore, It is possible for a device to be out of specification without a limit test failure indication if the data point density is insufficient.

The following image is a data trace of an actual filter using 11 data points (approximately one every vertical graticule). The filter is being tested with a minimum limit line (any data point under the limit line fails).

Although the data trace is clearly below the limit line on both sides of the filter skirts, there is a PASS indication because there is no data point being measured at these frequencies.

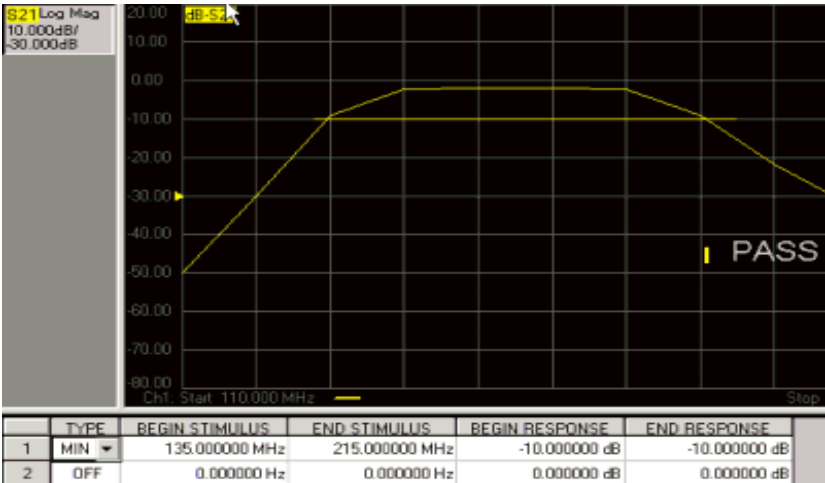

The following image shows the exact same conditions, except the number of data points is increased to 1601. The filter now fails the minimum limit test indicated by the red data trace.

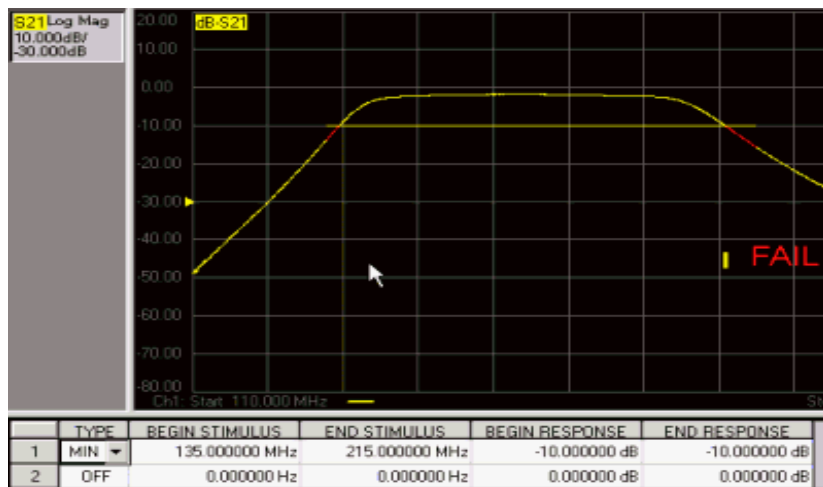

Last Modified:

2-Feb-2007 MX Added UI

Save and Recall a File



The PNA allows you to save and recall files to and from an internal or external storage device in a variety of file formats.

- [How to Save a File](#)
- [How to Recall a File](#)
- [Instrument / Calibration State Files](#) (.csa, .cst, .sta, .cal)
- [Measurement Data Files](#) (.prn, .sNp, .cti)
- [Define Data Saves](#)
- [Managing Files without a Mouse](#)

[Other Data Outputting topics](#)

How to Save a File

Use one of the following methods:

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Press SAVE	1. Click File
2. then Save , Save As , or Auto Save	2. then Save , Save As , or Auto Save
For PNA-X models	
1. Press SAVE	1. Click File
2. then [Save] , [Save As] , or [Auto Save]	2. then Save or Save As


Save Immediately saves the PNA state and possibly calibration data to the filename and extension you used when you last performed a Save. Only [.cst](#), [.sta](#), and [.csa](#) files are remembered when Save is performed. This file will be overwritten the next time you click **Save**. To prevent this, use one of the following methods.

Save As Invokes the [Save As](#) dialog box.

Auto Save (Only available from the [Active Entry](#) keys) Saves state and calibration data to the internal hard disk in the C:\Program Files\Agilent\Network Analyzer\Documents folder. A filename is generated automatically using the syntax "**atxxx.csa**"; where xxx is a number that is incremented by one when a new file is Auto

Saved.

Note: You can NOT save Frequency Converter Application .S2P files using this method. To learn how, see [Using FCA, Save Data.](#)

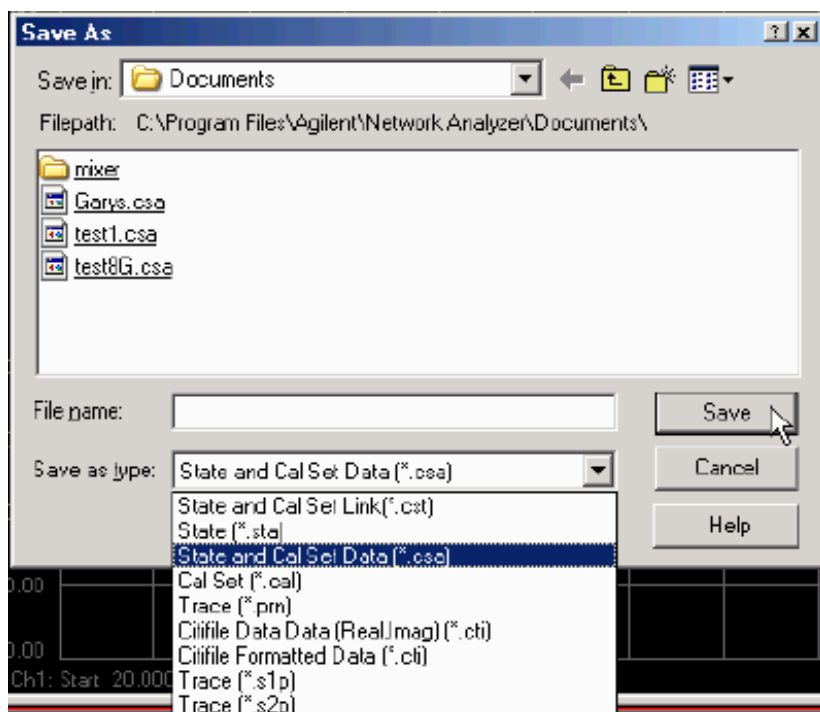

Save As dialog box help

Save in Allows you to navigate to the directory where you want to save the file.

File name Displays the filename that you either typed in or clicked on in the directory contents box.

Save as type

The following file types save **Instrument states and Calibration data**. You can save, and later recall, instrument settings and calibration data for **all channels** currently in use on the PNA.

These file types are only recognized by Agilent PNA Series analyzers. [Learn more about these file types.](#)

- ***.csa** - save Instrument state and actual Cal Set data (cal/state archive) **Default selection.**
- ***.cst** - save Instrument state and a link to the Cal Set data.
- ***.sta** - save Instrument state ONLY (**no** calibration data)
- ***.cal** - save actual Calibration data ONLY (**no** Instrument state)

Note: Before saving a .cst file (Instrument State and link to Cal Set), be sure that a User Cal Set is being used for the calibration; not a Cal Register. Cal Registers are overwritten with new data whenever a calibration is performed, and may not be accurate cal data when the .cst file is recalled. [Learn more about Cal Sets.](#)

The following file types save **Measurement data** for use in spreadsheet or CAE programs. Click to learn more about these file types.

- [*.prn](#)
- [*.sNp](#)
- [*cti \(citifile\)](#)



Note: To save the PNA screen as .bmp, .jpg, or .png graphics file types, click **File / Print to File**. [Learn more.](#)


Save Saves the file to the specified file name and directory.

How to Recall (open) a file

Select a file from the 'most recently used' list. The list is saved when the PNA application exits.

Use one of the following methods:

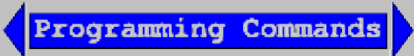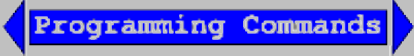Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Press RECALL	1. Click File
2. then Active Entry keys	2. then Recall
For PNA-X models	
1. Press RECALL	1. Click File
2. then [Recall]	2. then Recall

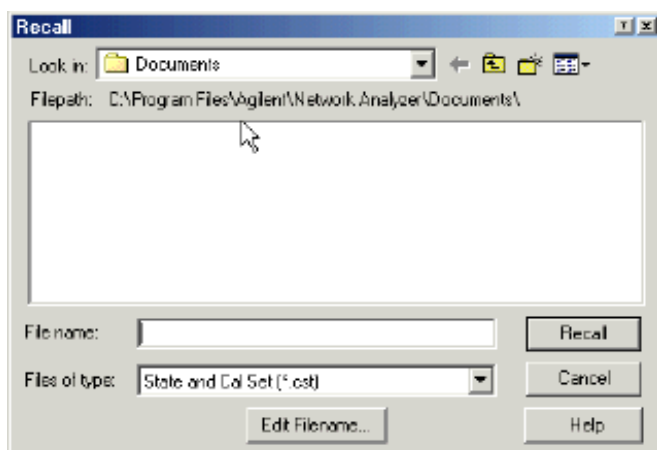

Recall dialog box help

Look in Allows you to select the directory that contains the file that you want to recall.

File name Displays the filename that you either typed in or clicked on in the directory contents box.

Files of type Allows you view and select files that are listed in categories of a file type.

Recall Recalls the file displayed in the file name box.

Note: *.sNp files cannot be recalled by the PNA.

Instrument State / Calibration Files

You can save, and later recall, instrument settings and calibration data **for all channels** currently in use on the PNA.

An **Instrument State** contains almost every PNA setting. The following PNA settings are NOT saved and recalled with Instrument State:


- [GPIB address](#)
- [RF power ON/OFF](#) (depends on current setting)
- [Test set I/O settings](#)

The following file types are used to save and recall instrument states and Cal Set information:

File Types

Information that is stored for each channel

.csa	.cst	.sta	Instrument State Information	
			Channels/Traces	Averaging
			Windows	Markers
			Triggering	Math/memory
			Format	Limits
			Scale	More...
			Stimulus Information:	
			Frequency range	Alternate sweep
			Number of points	Port powers
			IF bandwidth	Source attenuators
Sweep type	Receiver attenuators			
Sweep mode	Test Set port map			
.cal			Cal Set Information	
			GUID (Globally Unique Identifier) provides link to Cal Set	
			Name, Description, Modify date	
			Stimulus Information:	
			Frequency range	Alternate sweep
			Number of points	Port powers

 

IF bandwidth Source attenuators
Sweep type Receiver attenuators
Sweep mode Test Set port map
Error Terms: Directivity, Crosstalk, Source match, Load match, Reflection tracking, Transmission tracking

File Type Descriptions and Recall

The following describes each file type, and what occurs when the file type is recalled.

*.sta files

- Contain ONLY instrument state information.
- When recalled, they always replace the current instrument state immediately.

*.cst files

- Contain BOTH instrument state and a LINK to the Cal Sets.
- The **quickest and most flexible** method of saving and recalling a calibrated instrument state.
- Channels need not have cal data to save as .cst file.
- When recalled, the state information is loaded first. Then the PNA tries to [apply a Cal Set](#) as you would do manually. If the stimulus settings are different between the instrument state and the linked Cal Set, the usual choice is presented ([see Cal Sets](#)). If the linked Cal Set has been deleted, a message is displayed, but the state information remains in place.
- Because only a link to the Cal Set is saved, the Cal Set can be shared with other measurements.

*.cal files

- Contain ONLY Cal Set information.
- When recalled, the Cal Set is NOT automatically applied. Apply the calibration data to a channel as you would [apply any Cal Set](#).
- [Learn about Recalling](#)


*.csa files

- Contain ALL instrument state and the actual Cal Set; not a link to the Cal Set.

- The **safest** method of saving and recalling a calibrated instrument state. However, the file size is larger than a *.cst file, and the save and recall times are longer. In addition, because the actual Cal Set is saved, it is very difficult to share the cal data with other measurements.
- Channels need not be calibrated to save as .cst file.
- The Cal Set that is saved could have been a [Cal Register or a User Cal Set](#).
- [Learn about Recalling](#)

Note: *.pcs files are the internal file format the PNA uses for storing cal sets. There is no reason for users to access or copy these files.

Recalling Cal Sets

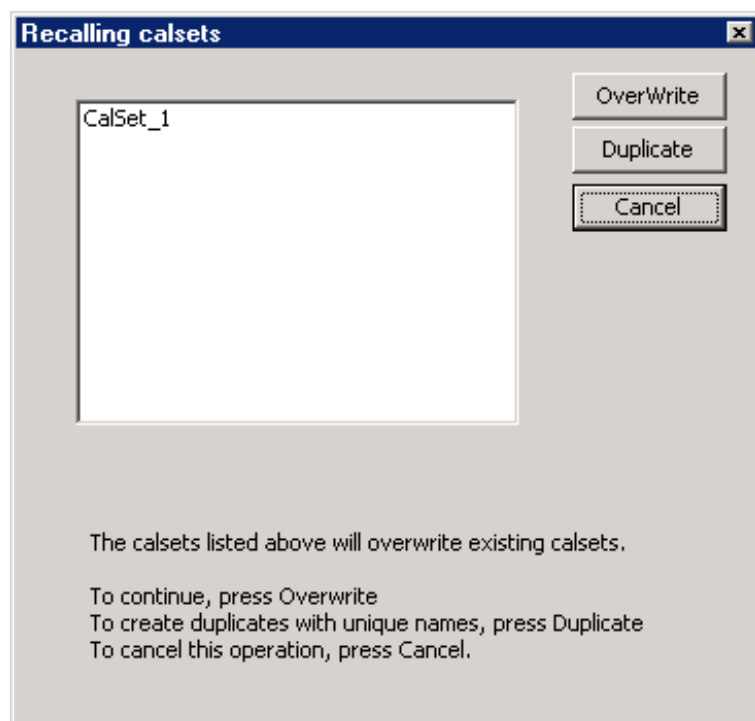

Recalling Cal Sets dialog box help

Both **.cal** and **.csa** file types contain whole Cal Sets. When these file types are recalled, the PNA checks to see if the incoming Cal Set GUID matches an existing PNA Cal Set GUID. If it does, and if the rest of the Cal Set contents are different in any way, then both of these Cal Sets can NOT coexist in the PNA and you are offered the following choices.

Because all PNA channels are saved, there could be more than one Cal Set in either of these file types.

Overwrite The incoming Cal Set will replace the existing Cal Set.

Duplicate (Only available with .cal recalls.) Because the Cal Set is not automatically applied, you can choose to apply either the original or duplicate Cal Set. The original Cal Set remains in the .cal file.

Cancel Abandon the recall operation.

The PNA will offer a choice as described in each file type below. [Learn more about Cal Sets.](#)

Measurement Data Files

Measurement data is saved as ASCII file types for use in a spreadsheet or CAE programs. The following three file types are used by the PNA. You can select the content and the format of *.SnP files and *.cti files through the [Define Data Saves](#) dialog box.

- [*.prn files](#)
- [*.snp \(Touchstone\)](#)
- [*.cti \(Citifile\)](#)

*.prn Files

Prn files have the following attributes:

- Comma-separated data which can be read into rows and columns by spreadsheet software, such as Microsoft® Excel. To avoid the "delimiting" dialog boxes, change the filename extension from .prn to .csv. Then open directly into Microsoft Excel.
- Contain formatted and corrected stimulus and response data for the current active trace ONLY.
- Are Output only - they cannot be read by the analyzer.
- Beginning with Rev 6.2, [FCA](#) and [Cal Set Viewer](#) data can be saved to *.prn files

Example:

"S11 Log Mag"

"Frequency (Hz)",	"dB"
3.000000e+005 ,	-3.528682e+001 ,
4.529850e+007 ,	-2.817913e+001 ,
9.029700e+007 ,	-3.216808e+001 ,
1.352955e+008 ,	-3.101017e+001 ,

.sNp Format (*.s1p, *.s2p, *.s3p, *.s4p, and so forth)

This file format is used by CAE programs such as Agilent's Microwave Design System (MDS) and Advanced Design System (ADS).

Note: Frequency Converter Application .S2P files are saved using a different method. See [Using FCA, Save Data](#).

- .sNp data is Output only; it can ONLY be read by the PNA [embed/de-embed](#) functions.
- .sNp data can be saved in various formats. See [Define Data Saves](#)
- The amount of data that is saved depends on the file type that you specify and the amount of data that is available:
- To save sNp data with an [external test set](#) enabled, at the File, [Save As](#) dialog, select **Snp File(*.s*p)**, then complete the ["Choose Ports "](#) dialog.

File Type	# of Ports	# of S-parameters saved
*.s1p	1	1 S-parameter
*.s2p	2	4 S-parameters
*.s3p	3	9 S-parameters
*.s4p	4	16 S-parameters
...
*.sNp	N	N ² S-parameters

.sNp data is generally used to gather all S-parameters for a fully corrected measurement. The PNA uses the data that is available on the channel of the active measurement.

- If correction is applied, then valid data is returned for all corrected s-parameters.
- If requesting **less** data then is available, the [Choose ports for sNp data](#) dialog appears. Previous to PNA release 6.2, data was returned beginning with the first calibrated ports until your request if fulfilled.

- If correction is NOT applied, the PNA returns as much applicable raw data as possible using S-parameter measurements on the selected channel. Data that is not available is zero-filled. For example, if correction is NOT applied and the active measurement is S11, and an S21 measurement also exists on the channel, then data is returned for the S11 and S21 measurements. Data for S12 and S22 is not available and therefore returned as zeros.
- **IMPORTANT** - ALL valid data is saved using the same format and settings (trace math, offset, delay, and so forth) as the active measurement. This can cause the data that is saved for the non-active measurements to be dramatically different from the data that is displayed. For example, when saving an S2P file, if the active S11 measurement is set to Data/Mem (data divided by memory), then ALL 4 S-parameters are saved using Data/Mem. The memory trace that is used in the Data/Mem operation is the same as that used in the active (S11) measurement.

.sNp Data Output

.sNp files contain header information, stimulus data, a response data pair for EACH S-parameter measurement. The only difference between .s1p, s2p, and so forth, is the number of S-parameters that are saved.

The following is a sample of **Header information**:

```
!Agilent Technologies,E8362B,US42340026,Q.03.54
!Agilent E8362B: Q.03.54
!Date: Friday, April 25, 2003 13:46:41
!Correction: S11(Full 2 Port SOLT,1,2) S21(Full 2 Port SOLT,1,2) S12(Full 2 Port
SOLT,1,2) S22(Full 2 Port SOLT,1,2)
!S2P File: Measurements:S11,S21,S12,S22:
# Hz S R I R 50
```

Note: Although the following shows Real / Imag pairs, the format could also be LogMag / Phase or LinMag / Phase

***.s1p Files**

Each record contains 1 stimulus value and 1 S-parameter (total of 3 values)

Stim Real (Sxx) Imag(Sxx)

***.s2p Files**

Each record contains 1 stimulus value and 4 S-parameters (total of 9 values)

Stim Real (S11) Imag(S11) Real(S21) Imag(S21) Real(S12) Imag(S12) Real(S22) Imag(S22)

***.s3p Files**


Each record contains 1 stimulus value and 9 S-parameters (total of 19 values)

Stim Real (S11) Imag(S11) Real(S12) Imag(S12) Real(S13) Imag(S13)
Real (S21) Imag(S21) Real(S22) Imag(S22) Real(S23) Imag(S23)
Real (S31) Imag(S31) Real(S32) Imag(S32) Real(S33) Imag(S33)

***.s4p Files (and so forth...)**

Each record contains 1 stimulus value and 16 S-parameters (total of 33 values)

Stim Real (S11) Imag(S11) Real(S12) Imag(S12) Real(S13) Imag(S13) Real(S14) Imag(S14)
Real (S21) Imag(S21) Real(S22) Imag(S22) Real(S23) Imag(S23) Real(S24) Imag(S24)
Real (S31) Imag(S31) Real(S32) Imag(S32) Real(S33) Imag(S33) Real(S34) Imag(S34)
Real (S41) Imag(S41) Real(S42) Imag(S42) Real(S43) Imag(S43) Real(S44) Imag(S44)

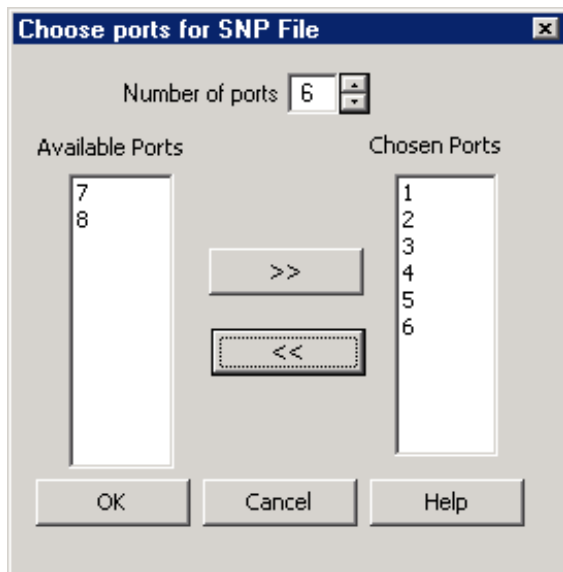

Choose ports for SNP File dialog box help

This dialog appears when selecting File, [Save As](#), Trace sNp, and you request less data than is available, or you want data for more than 4 ports. This dialog allows you to choose which S-parameter data to save.

Number of ports Select the number of ports for which data will be saved.

Arrow buttons Click to Add and Remove ports for the following columns:

Available Ports The PNA / External test set ports. There may NOT be valid data available for all of these ports. [Learn more](#).

Chosen Ports When **OK** is clicked, sNp data is saved for these ports.

OK Becomes available when the number of **Chosen ports** = the **Number of ports** to save. Click to save to sNp file.

With **Number of ports** = 2, .s2p data is saved; with **Number of ports** = 3, .s3p data is saved, and so forth.

[Learn more about sNp files](#)

.cti CitiFiles

Citifile format is compatible with the Agilent 8510 Network Analyzer and Agilent's Microwave Design System (MDS). You can do the following using citifiles :

- save the active trace, or all traces. (see [Define Data Saves](#)
- save formatted or unformatted citifile data

Save Formatted data

1. Set the format using [Define Data Saves](#).
2. Click **File** then **Save As**

3. Select **Citifile Formatted Data (*.cti)**

On the [data access map](#), Formatted data is taken from location 2 or 4.

Save Unformatted data

1. Click File Save As
2. Select **Citifile Data Data (*.cti)**

On the [data access map](#), Unformatted data is taken from the block just before Format.

Recalling Citifiles into the PNA

- To recall citifiles, click **File** then **Recall**. Specify **(*.cti)**
- Recalled citifile data is ALWAYS displayed on the PNA using [LogMag format](#), regardless of how the file was stored.

Citifile traces are recalled into the same window / channel configuration as when they were saved. However, the new recalled channel numbers begin with channel 32 and decrement for each additional channel.

For example, when a citifile is saved, two traces are in window 1, channel 1 and two additional traces are in window 2, channel 2. When recalled into a factory preset condition (1 trace in window 1, channel 1), the first two recalled traces appear in window 2, channel 32, and the second two traces appear in window 3 channel 31.


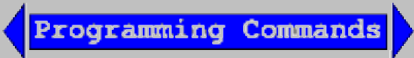
If a channel is in use, you are prompted to create a new channel.


- Yes - skip down to the next available channel.
- No - add recalled data to the existing channel.

See also [Traces, Channels, and Windows on the PNA](#)

Define Data Saves

How to select Define Data Saves

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click File 2. then Define Data Saves
For PNA-X models	
1. Press SAVE 2. then [Define Data Saves]	1. Click File 2. then Define Data Saves

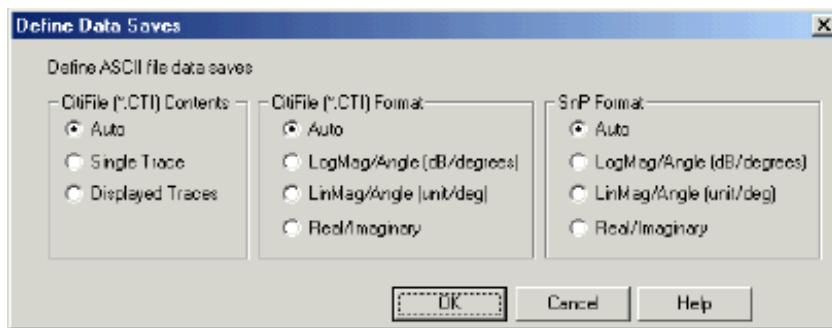

Define Data Saves dialog box help

CitiFile Contents Determines what is saved to a .cti file.

Auto - Saves the active trace. Additional traces are saved if correction is ON and Full 2-port or Full 3-port calibration is performed. For Full 2-port calibration, 4 traces are saved. For Full 3-port calibration, 9 traces are saved.

Single Trace - Saves the active trace in the currently selected window.

Displayed Traces - Saves all displayed data traces

Citifile Formatted Data

Auto - Data is saved in LogMag or LinMag if one of these is the currently selected display format. If format is other than these, then data is saved in Real/Imag.

LogMag, LinMag, Real/Imag - Select output format.

The imaginary portion for all **LogMag** and **LinMag** data is output in degrees.

SnP Formatted Data (.s1p, .s2p, .s3p) [Learn more about SnP files.](#)

Auto - Data is saved in LogMag or LinMag if one of these is the currently selected format. If format is other

than these, then data is saved in Real/Imag.


LogMag, LinMag, Real/Imag - Select output format.

The imaginary portion for all **LogMag** and **LinMag** data is output is in degrees.

Manage Files without a Mouse

The Manage Files dialog box is designed to be used from the front panel. It performs the same function as Windows Explorer, but can be used without the use of a mouse or keyboard.

[Learn more about using the Front-panel interface.](#)

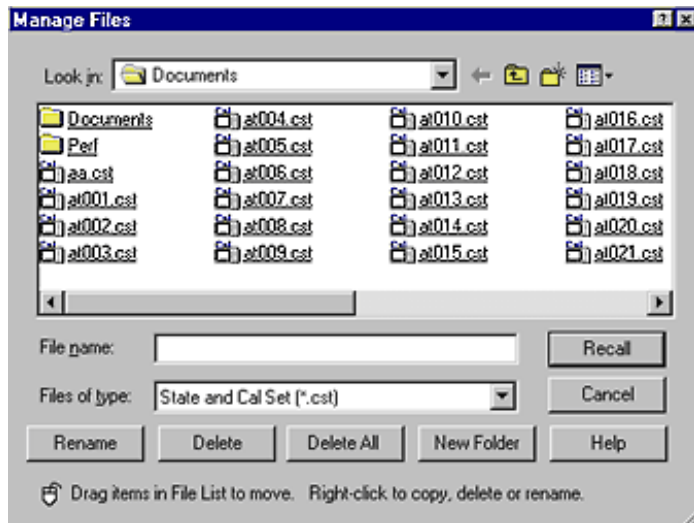

Manage Files dialog box help

 
Recall Opens a Network Analyzer file already stored in memory.

Rename Renames a file that is selected in the open folder.

Delete Removes a selected file from the open folder.

Delete All Removes all files of the file type selected that appear in the open folder.

New folder Create a new folder and give it a name



Last modified:

- 17-Oct-2007 Added note for MM
- 24-Jul-2007 Added clarification to define data save
- 10/23/06 Added pcs note
- 9/18/06 MQ Added choose ports for snp
- 9/12/06 Added link to programming commands

Drive Mapping

Drive mapping allows you to share disk drives between the PNA and an external computer. You can either map from the PNA, or from your PC, to the other.

- [From the PNA, map to a drive on an External PC](#)
- [From an External PC, map to a drive on the PNA](#)

To prepare for Drive Mapping:

1. Both the PC and PNA must be connected to a shared computer network
2. You must know the full computer name of the PC (or analyzer) you are mapping **TO**. [Tell me how](#)
3. Your logon and password on the analyzer must be the same as that on the external PC. You can add your PC logon to the analyzer. [Tell me how](#)

Note: These procedures require a mouse and keyboard. Also, the external PC must have Windows NT 4.0 (or later).

From the Analyzer, map to a drive on the External PC

1. On the external computer desktop, go to **Windows Explorer**. In the listing of drives, right click on the drive you want to share. Click **Sharing**.
2. In the dialog box, select **Shared As**. In the **Share Name** box, use the arrow key or type in a share name for the drive. For example: **C\$**. Click **OK**.
3. On the analyzer desktop, click **Windows Explorer**. From the **Tools** menu, click **Map Network Drive**. (To get to the analyzer desktop, click **View**, then click **Title Bars**)
4. If you would like to connect to your external PC using a different logon, click **Connect using a different Logon**. This logon must be registered on the analyzer and you must be currently logged on the external PC using this logon.
 1. In the **Connect as** box, type your logon name.
The logon name and password must be exactly the same on both the external PC and the analyzer.
 2. In the **Password** box, type the logon password that you use on the external computer. Click **OK**. The logon name and password must be exactly the same on both the external PC and the analyzer.
5. In the **Folder** box, type \ (full computer name of analyzer)\share name (from step 2). (For example: **\SLT1234\C\$**)
6. Click **Finish**.

From an External PC, map to a drive on the Analyzer

1. On the analyzer desktop, click **Windows Explorer**. Right click on the drive you want to share. Click on **Sharing...**
2. In the dialog box, select **Shared this folder**. In the **Share Name** box, type in a share name for the drive. For example: **C\$**. Click **OK**.
3. On the external PC desktop, click **Windows Explorer**. From the **Tools** menu, click **Map Network Drive**.
4. If the current logon on your PC is different from the current logon on the analyzer, click **Connect using a different Logon** to connect to using the current analyzer logon, .This logon must be registered on the external PC. To see the current logon on either the PC or analyzer, hold **Ctrl - Alt**, and press **Delete**.
 1. In the **Connect as** box, type the logon currently being used by the analyzer.
 2. In the **Password** box, type the logon password that you use on the external computer. Click **OK**
5. In the **Folder** box, type \\computername ([prep1](#))\share name (from step 2). (For example: \\SLT1234\C\$)
6. Click **Finish**.

Print a Displayed Measurement

The analyzer allows you to print a displayed measurement to a printer or to a file. The printer can be either networked or local.

- [Connecting a Printer](#)
- [Printing](#)

[Other Outputting Data topics](#)

Connecting a Printer

You can connect your printer to the PNA using three different connector types:

- [Parallel connector](#)
- [Serial connector](#)
- [USB](#)

In addition to connecting the printer directly to the PNA via one of the above interfaces, LAN connected printers are also usable by the PNA.

Note: Early PNAs have a Centronics connector for connecting a printer. An adapter (36-pin male - 1284-C - to 25-pin female) was shipped with those PNAs to allow connection with a standard parallel printer cable.

CAUTION: Do NOT connect your printer to the 25-pin female port labeled **Ext. Test Set Interface**. Voltage levels of signal lines may damage the printer's I/O.

To Add a Printer

Note: If you try to print from the PNA application and the **Add Printer Wizard** appears, click **Cancel** and add the printer using the following procedure.

1. From the PNA application, click **View** then click **Minimize Application**
2. On the Windows taskbar, click **Start**, point to **Settings**, then click **Printers**.
3. Double-click **Add Printer**.
4. Follow the instructions in the **Add Printer** Wizard.


For more information, refer to Microsoft Windows Help or your printer documentation.

Printing

- [Print a Hardcopy](#)

- [Page Setup](#)
- [Print to File](#)

The measurement information on the screen can be printed to any local or networked printer that is connected to the PNA. The graphic below shows an example of how a screen-capture image appears when printed. The [Page Setup](#) settings allows you to customize the printed form of the measurement information.

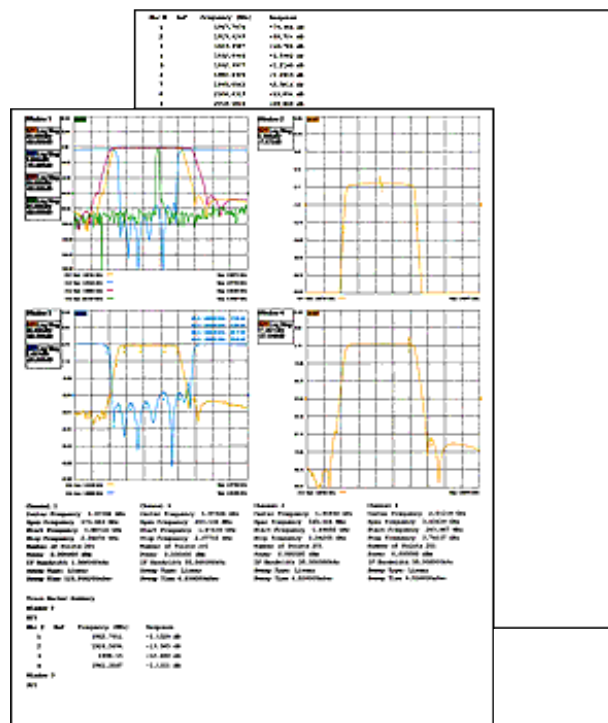

How to Print a Hardcopy

Using front-panel
HARDKEY [softkey] buttons

Using a mouse with PNA Menus

For [PNA-L](#) and [E836x](#) models

Programming Commands


1. Press



1. Click **File**
2. then **Print**

For [PNA-X](#) models

- | | |
|---|--|
| <ol style="list-style-type: none"> 1. Press PRINT 2. then [Print] | <ol style="list-style-type: none"> 1. Click File 2. then Print 3. then Print |
|---|--|

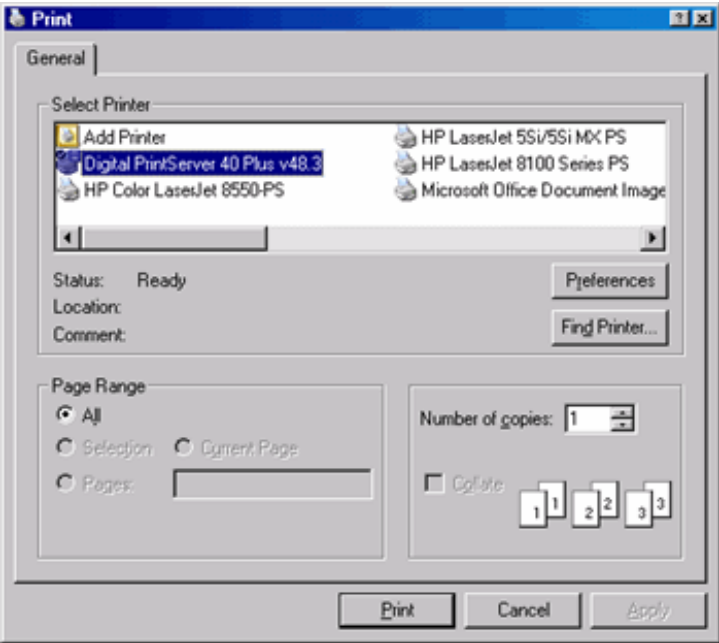

Note: For information on the choices in the Print dialog box, see Windows Help.


Page Setup

The Page Setup dialog allows flexibility in the appearance that measurement data is printed. After setting up the page, click **File**, then **Print...** to obtain a hard-copy.

How to select Page Setup	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	<div>◀ Programming Commands ▶</div>
<ol style="list-style-type: none"> 1. Navigate using MENU/DIALOG 	<ol style="list-style-type: none"> 1. Click File 2. then Page Setup
For PNA-X models	<div>◀ Programming Commands ▶</div>

1. Press **PRINT**
2. then **[Page Setup]**

1. Click **File**
2. then **Print**
3. then **Print Options**

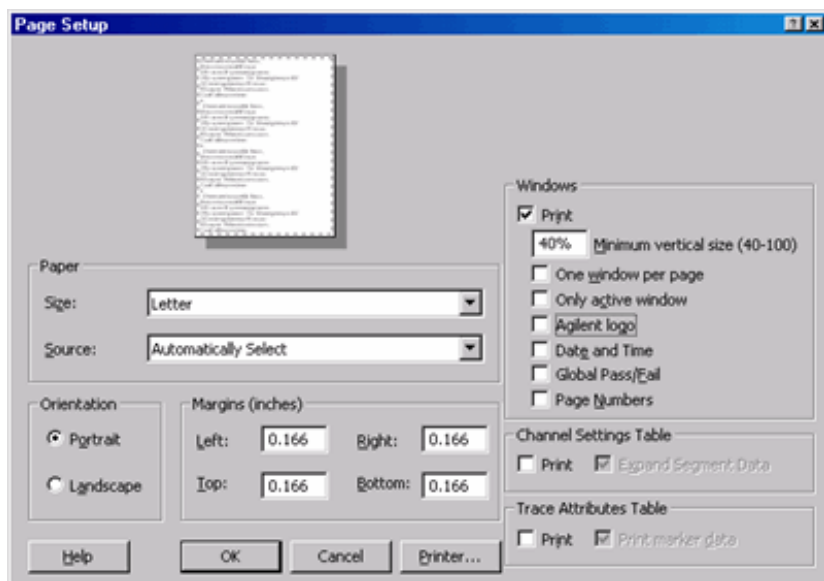

Page Setup dialog box help

Note: See Windows Help for information on the choices on the left side of this dialog.

Windows

Minimum vertical size Adjust to change the amount of a page that the measurement window fills. The adjustment range is from 40 to 100%.

One window per page Check to print one window per page. Clear to print all selected windows without a forced page break.

Only active window Check to print only the active window. Clear to print all windows.

Agilent logo Check to print the Agilent logo to the header.

Data and Time Check to add the current date and time to the header.

Global Pass/Fail Check to add the Global Pass/Fail status to the header.

Page Numbers Check to add page numbers (1 of n) to the header.

Channel Settings Table

Print Check to print the channel settings table.

Expand segment data Check to print segment sweep data.

Trace Attributes Table

Print Check to print the Trace Attributes Table. The Trace Attributes are measurement type, correction factors ON or OFF, smoothing, options, and marker details. The Trace Attributes are listed by Trace ID# for each window.

Each Trace ID# can have multiple entries depending on the number of markers associated with the trace. The marker details are marker number, position and response. If there are multiple markers on a trace, the trace attributes are only shown for the first marker. However, the trace attributes for the first marker apply to all other markers on that trace.

The options column can have one or more options. **D** for Delay, **M** for Marker, **G** for Gating. Multiple options selected would appear as follows: DMG.

Print marker data Check to print all marker data. The amount of data depends on how many markers are created.

Print to a File



The analyzer can save a screen-capture image in any of the following formats:

- **.png** (preferred format)
- **.bmp** (bitmap)
- **.jpg**

The analyzer automatically saves the file to the current path. If not previously defined, the analyzer automatically selects the default path C:/Program Files/Agilent/Network Analyzer/Documents/

A .bmp file, like a .prn file, can be imported into software applications such as Microsoft Excel, Word, or Paint to display a screen-capture image.

[See Save and Recall files for more information.](#)

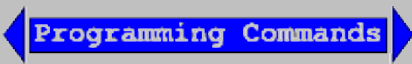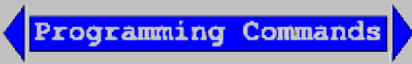How to Print to a File	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click File 2. then Print to File
For PNA-X models	
1. Press PRINT 2. then [Print to File]	1. Click File 2. then Print 3. then Print to File

Last modified:

10/19/06 Modified for new print dialog

PNA Application Notes

The following links require an **Internet connection**.

Note: Check out the multimedia PNA Demo presentations, including '[Network Analyzer Basics](#)'.

Calibrations

[Improving Measurement and Calibration Accuracy Using the Frequency Converter Application \(5988-9642EN\)](#)

[On-Wafer Calibration Using a 4-port, 20 GHz PNA-L Network Analyzer \(N5230A Option 240/245\) \(5989-2287EN\)](#)

New [Specifying Calibration Standards and Kits for Agilent Vector Network Analyzers \(5989-4840EN\)](#)

ECal

[Agilent Electronic vs. Mechanical Calibration Kits: Calibration Methods and Accuracy \(5988-9477EN\)](#)

[User Characterization: Electronic Calibration Feature Allows Users to Customize to Specific Needs \(5988-9478EN\)](#)

Embedding / De-embedding

[De-embedding and Embedding S-Parameter Networks Using a Vector Network Analyzer \(5980-2784EN\)](#)

Amplifier Measurements

[High-power measurements using the PNA \(5989-1349EN\)](#)

[Amplifier Linear and Gain Measurements \(5988-8644EN\)](#)

[Amplifier Swept-Harmonic Measurements \(5988-9473EN\)](#)

[Amplifier and CW Swept Intermodulation-Distortion Measurements \(5988-9474EN\)](#)

Antenna Measurements

[Triggering PNA Microwave Network Analyzers for Antenna Measurements \(5988-9518EN\)](#)

[New Network Analyzer Methodologies in Antenna/RCS Measurements \(5989-1937EN\)](#)

[Pulsed Antenna Measurements Using PNA Network Analyzers \(5989-0221EN\)](#)

Balanced Measurements (Although the following refer to the ENA, they are also relevant to the PNA.)

[On-wafer Balanced Component Measurement with the Cascade Microtech Probing System \(5988-5886EN\)](#)

[Network De-embedding/Embedding and Balanced Measurement \(5988-4923EN\)](#)

Mixer Measurements

[Mixer Transmission Measurements Using the Frequency Conversion Application \(5988-8642EN\)](#)

[Mixer Conversion-Loss and Group Delay Measurement Techniques and Comparisons \(5988-9619EN\)](#)

[Comparison of Mixer Characterization using New Vector Characterization Techniques \(5988-7827EN\)](#)

[Novel Method for Vector Mixer Characterization and Mixer Test System Vector Error Correction \(5988-7826EN\)](#)

[Measuring Absolute Group Delay of Multistage Converters Using PNA Microwave Network Analyzers \(5989-0219EN\)](#)

Pulsed Measurements

[Pulsed-RF S-Parameter Measurements Using Wideband and Narrowband Detection \(AN 1408-12\)](#)

[Accurate Pulsed Measurements \(5989-0563EN\)](#)

[Pulsed Antenna Measurements Using PNA Network Analyzers \(5989-0221EN\)](#)

Other Measurements

New [Time Domain Analysis](#)

[Using the PNA Series to Analyze Lightwave Components \(5989-3385EN\)](#)

[Using the PNA for Banded Millimeter-Wave Measurements \(5989-4098EN\)](#)

[PNA MM-Wave Network Analyzers: Analysis of Cable Length on VNA System Performance \(5989-1941EN\)](#)

[Basics of Measuring the Dielectric Properties of Materials \(5989-2589EN\)](#)

Automation

[Connectivity Advances for Component Manufacturers \(5980-2782EN\)](#)

[Introduction to Application Development using the PNA \(5980-2666EN\)](#)

[The 'Need for Speed' in Component Manufacturing Test \(5980-2783EN\)](#)

Network Analyzer Basics

This self-paced two hour video discusses the basic concepts of Network Analysis.

The files are installed and should work on older PNA models. If the PNA link does not work, then use the internet link, which requires an internet connection.

- **From the PNA:** [Proceed with Network Analyzer Basics](#).
 - **From the Internet:** <http://wireless.agilent.com/networkanalyzers/pnademmo.htm> in both streaming and downloadable format.
-

Last modified:

10/18/06 Added link to pnademmo.

Connector Care

Proper connector care is critical for accurate and repeatable measurements. The following information will help you preserve the precision and extend the life of your connectors - saving both time and money.

- [Connector Care Quick Reference Guide](#)
- [Connector Cleaning Supplies](#)
- [Safety Reminders](#)
- [About Connectors](#)
- [Gaging Fundamentals](#)
- [Connector Care Procedures](#)

See also mmWave Connector Care at http://na.tm.agilent.com/pna/connectorcare/Connector_Care.htm

Preventing Test Port Connector Damage

Handling and Storing Connectors

Do

Keep connectors clean
Protect connectors with plastic end caps
Keep connector temperature same as analyzer

Do Not

Touch mating-plane surfaces
Set connectors contact-end down
Store connectors loose in box or drawer

Visual Inspection

Do

Inspect connectors with magnifying glass.
Look for metal debris, deep scratches or dents

Do Not

Use a connector with a bent or broken center conductor
Use a connector with deformed threads

Cleaning Connectors

Do

Clean surfaces first with clean, dry compressed air
Use lint-free swab or brush
Use minimum amount of alcohol
Clean outer conductor mating surface and threads

Do Not

Use high pressure air (>60 psi)
Use any abrasives
Allow alcohol into connector support beads
Apply lateral force to center conductor

Gaging Connectors

Do

Inspect and clean gage, gage master and device tested
Use correct torque wrench
zero gage before use
Use multiple measurements and keep record of readings

Do Not

Use an out of specification connector
Hold connector gage by the dial

Making Connections

Do

Align connectors first
Rotate only the connector nut
Use correct torque wrench

Do Not

Cross thread the connection
Twist connector body to make connection
Mate different connector types

Connector Care and Cleaning Supplies

Description	Web Site
Swabs	http://www.berkshire.com/swabs.shtml
Lint Free Cloths- Air dusters	http://www.ccrwebstore.com
Isopropyl	http://www.techspray.com
Nitrilite Gloves and Finger Cots	http://www.techni-tool.com

Safety Reminders

When cleaning connectors:

- Always use protective eyewear when using compressed air or nitrogen.
- Keep isopropyl alcohol away from heat, sparks and flame. Use with adequate ventilation. Avoid contact with eyes, skin and clothing.
- Avoid electrostatic discharge (ESD). Wear a grounded wrist strap (having a 1 MΩ series resistor) when cleaning device, cable or test port connectors.
- Cleaning connectors with alcohol shall only be done with the instruments power cord removed, and in a well-ventilated area. Allow all residual alcohol moisture to evaporate, and the fumes to dissipate prior to energizing the instrument.

About Connectors

- [Connector Service Life](#)
- [Connector Grades and Performance](#)
- [Adapters as Connector Savers](#)
- [Connector Mating Plane Surfaces](#)

Connector Service Life

Even though calibration standards, cables, and test set connectors are designed and manufactured to the highest standards, all connectors have a limited service life. This means that connectors can become defective due to wear during normal use. For best results, all connectors should be inspected and maintained to maximize their service life.

Visual Inspection should be performed each time a connection is made. Metal particles from connector threads often find their way onto the mating surface when a connection is made or disconnected. See [Inspection](#) procedure.

Cleaning the dirt and contamination from the connector mating plane surfaces and threads can extend the service life of the connector and improve the quality of your calibration and measurements. See [Cleaning](#) procedure.

Gaging connectors not only provides assurance of proper mechanical tolerances, and thus connector performance, but also indicate situations where the potential for damage to another connector may exist. See [Gaging](#) procedure.

Proper connector care and connection techniques yield:

- Longer Service Life
- Higher Performance
- Better Repeatability

Connector Grades and Performance

The three connector grades (levels of quality) for the popular connector families are listed below. Some specialized types may not have all three grades.

- **Production** grade connectors are the lowest grade and the least expensive. It is the connector grade most commonly used on the typical device under test (DUT). It has the lowest performance of all connectors due to its loose tolerances. This means that production grade connectors should always be carefully inspected before making a connection to the analyzer. Some production grade connectors are not intended to mate with metrology grade connectors.
- **Instrument** grade is the middle grade of connectors. It is mainly used in and with test instruments, most cables and adapters, and some calibration standards. It provides long life with good performance and tighter tolerances. It may have a dielectric supported interface and therefore may not exhibit the excellent match of a metrology grade connector.
- **Metrology** grade connectors have the highest performance and the highest cost of all connector grades. This grade is used on calibration standards, verification standards, and precision adapters. Because it is a high precision connector, it can withstand many connections and disconnections and, thus, has the longest life of all connector grades. This connector grade has the closest material and geometric specifications. Pin diameter and pin depth are very closely specified. Metrology grade uses an air dielectric interface and a slotless female contact which provide the highest performance and traceability.

Note: In general, Metrology grade connectors should not be mated with Production grade connectors.


Adapters as Connector Savers

Make sure to use a high quality (Instrument grade or better) adapter when adapting a different connector type to the analyzer test ports. It is a good idea to use an adapter even when the device under test is the same connector type as the analyzer test ports. In both cases, it will help extend service life, and protect the test ports from damage and costly repair.

The adapter must be fully inspected before connecting it to the analyzer test port and inspected and cleaned frequently thereafter. Because calibration standards are connected to the adapter, the adapter should be the highest quality to provide acceptable RF performance and minimize the effects of mismatch.

Connector Mating Plane Surfaces

An important concept in RF and microwave measurements is the reference plane. For a network analyzer, this is the surface that all measurements are referenced to. At calibration, the reference plane is defined as the plane where the mating plane surfaces of the measurement port and the calibration standards meet. Good connections (and calibrations) depend on perfectly flat contact between connectors at all points on the mating plane surfaces (as shown in the following graphic).

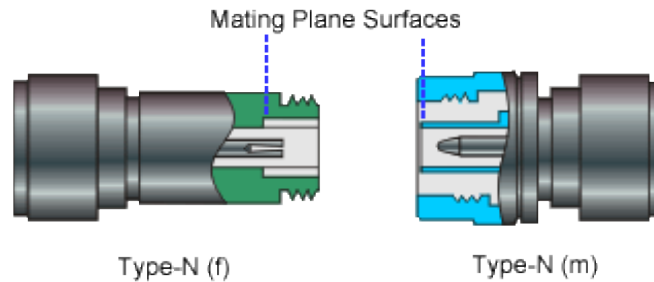


Gaging Fundamentals

Connector gages are important tools used to measure center conductor pin depth in connectors. Connector pin depth, measured in terms of recession or protrusion, is generally the distance between the mating plane and the end of the center conductor, or the shoulder of the center conductor for a stepped male pin.

Typical Connector Gage


RECESSION PROTRUSION

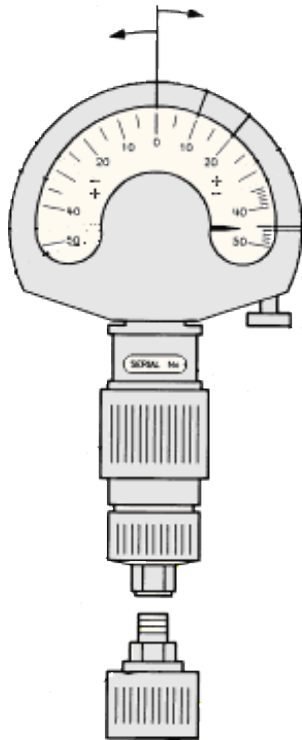

Recession and Protrusion

Pin depth is negative (recession) if the center conductor is recessed below the outer conductor mating plane, usually referred to as the "reference plane". Pin depth is positive (protrusion) if the center conductor projects forward from the connector reference plane.

Pin Depth

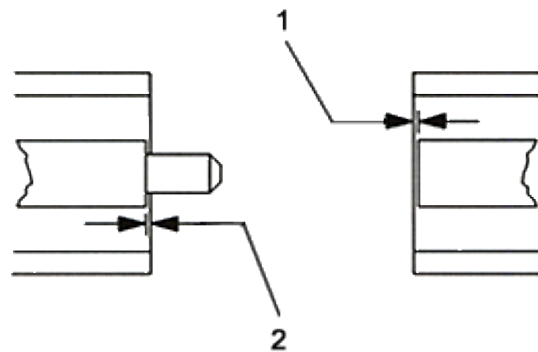

1. Recession of female contact
2. Recession of male pin shoulder

Difference with Type-N Connectors

Type-N connectors have the mating plane of the center conductors offset from the connector reference plane. In this case the zero setting "gage masters" generally offset the nominal distance between the center conductor mating plane and the connector reference plane.

When to Gage Connectors

- Before using a connector or adapter the first time.
- When visual inspection or electrical performance suggests the connector interface may be out of range.
- After every 100 connections, depending on use.

Connector Gage Accuracy

Connector gages (those included with calibration and verification kits), are capable of performing coarse measurements only. This is due to the repeatability uncertainties associated with the measurement. It is important to recognize that test port connectors and calibration standards have mechanical specifications that are extremely precise. Only special gaging processes and electrical testing (performed in a calibration lab) can accurately verify the mechanical characteristics of these devices. The pin depth specifications in the Agilent calibration kit manuals provide a compromise between the pin depth accuracy required, and the accuracy of the gages. The gages shipped with calibration and verification kits allow you to measure connector pin depth and avoid damage from out-of-specification connectors.

Note: Before gaging any connector, the mechanical specifications provided with that connector or device should be checked.

To Gage Connectors

1. Wear a grounded wrist strap (having a 1 M Ω series resistor).
2. Select proper gage for device under test (DUT).
3. Inspect and clean gage, gage master, and DUT.
4. Zero the connector gage.
 - a. While holding gage by the barrel, carefully connect gage master to gage. Finger-tighten connector nut only.
 - b. Use proper torque wrench to make final connection. If needed, use additional wrench to prevent gage master (body) from turning. Gently tap the barrel to settle the gage.
 - c. The gage pointer should line up exactly with the zero mark on gage. If not, adjust "zero set" knob until gage pointer reads zero. On gages having a dial lock screw and a movable dial, loosen the dial lock screw and move the dial until the gage pointer reads zero. Gages should be zeroed before each set of measurements to make sure zero setting has not changed.
 - d. Remove gage master.
5. Gage the device under test.
 - a. While holding gage by the barrel, carefully connect DUT to gage. Finger-tighten connector nut only.
 - b. Use proper torque wrench to make final connection and, if needed, use additional wrench to prevent DUT (body) from turning. Gently tap the barrel to settle the gage.

- c. Read gage indicator dial for recession or protrusion and compare reading with device specifications.

Caution: If the gage indicates excessive protrusion or recession, the connector should be marked for disposal or sent out for repair.

6. For maximum accuracy, measure the device a minimum of three times and take an average of the readings. After each measurement, rotate the gage a quarter-turn to reduce measurement variations.
7. If there is doubt about measurement accuracy, be sure the temperatures of the parts have stabilized. Then perform the cleaning, zeroing, and measuring procedure again.

Connector Care Procedures

- [Inspecting Connectors](#)
- [Cleaning Connectors](#)
- [Making Connections](#)
- [Using a Torque Wrench](#)
- [Handling and Storing Connectors](#)

To Inspect Connectors

Wear a grounded wrist strap (having a 1 M Ω series resistor).


Use a magnifying glass ($\geq 10\times$) and inspect connector for the following:

- Badly worn plating or deep scratches
- Deformed threads
- Metal particles on threads and mating plane surfaces
- Bent, broken, or mis-aligned center conductors
- Poor connector nut rotation


Caution: A damaged or out-of-specification device can destroy a good connector attached to it even on the first connection. Any connector with an obvious defect should be marked for disposal or sent out for repair.

To Clean Connectors

1. Wear a grounded wrist strap (having a 1 M Ω series resistor).
2. Use clean, low-pressure air to remove loose particles from mating plane surfaces and threads. Inspect connector thoroughly. If additional cleaning is required, continue with the following steps.

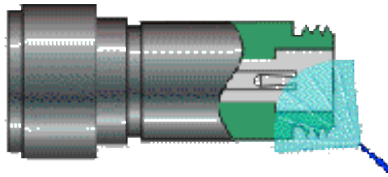

3. Moisten—do not saturate—a lint-free swab with isopropyl alcohol. See [Cleaning Supplies](#) for recommended type.
4. Clean contamination and debris from mating plane surfaces and threads. When cleaning interior surfaces, avoid exerting pressure on center conductor and keep swab fibers from getting trapped in the female center conductor.

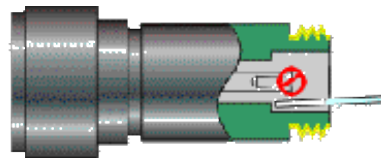


5. Let alcohol evaporate—then use compressed air to blow surfaces clean.
6. Inspect connector. Make sure no particles or residue remains.
7. If defects are still visible after cleaning, the connector itself may be damaged and should not be used. Determine the cause of damage before making further connections.

To Make Connections


1. Wear a grounded wrist strap (having a 1 M Ω series resistor).
2. Inspect, clean, and gage connectors. All connectors must be undamaged, clean, and within mechanical specification.
3. Carefully align center axis of both devices. The center conductor pin—from the male connector—must slip concentrically into the contact finger of the female connector.



4. Carefully push the connectors straight together so they can engage smoothly. Rotate the connector nut (not the device itself) until finger-tight, being careful not to cross the threads.

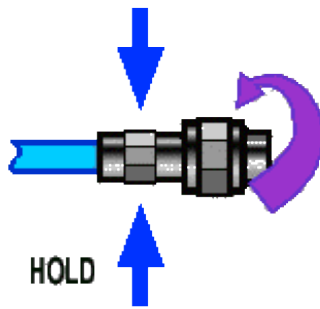

5. Use a torque wrench to make final connection. Tighten until the "break" point of the torque wrench is reached. Do **not** push beyond initial break point. Use additional wrench, if needed, to prevent device body from turning.

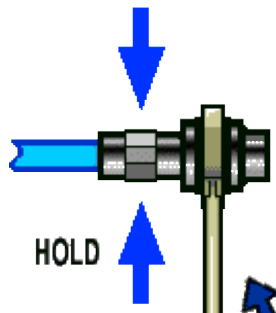


To Separate a Connection

1. Support the devices to avoid any twisting, rocking or bending force on either connector.
2. Use an open-end wrench to prevent the device body from turning.
3. Use another open-end wrench to loosen the connector nut.
4. Complete the disconnection by hand, turning only the connector nut.
5. Pull the connectors straight apart.


To Use a Torque Wrench

1. Make sure torque wrench is set to the correct torque setting.
2. Position torque wrench and a second wrench (to hold device or cable) within 90° of each other before applying force. Make sure to support the devices to avoid putting stress on the connectors.

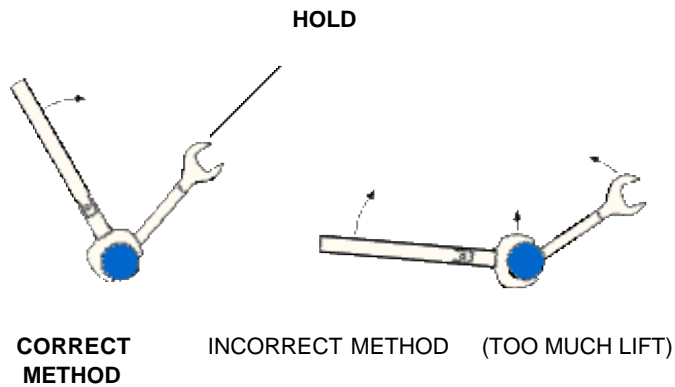

3. Hold torque wrench lightly at the end of handle—then apply force perpendicular to the torque wrench handle. Tighten until the "break" point of the torque wrench is reached. Do **not** push beyond initial break point.

TORQUING DIRECTION

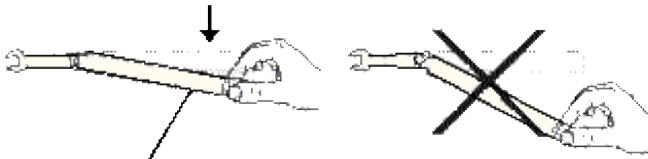

STOP WHEN HANDLE BEGINS TO YIELD

To Handle and Store Connectors

- Install protective end caps when connectors are not in use.
- Never store connectors, airlines, or calibration standards loose in a box. This is a common cause of connector damage.
- Keep connector temperature the same as analyzer. Holding the connector in your hand or cleaning connector with compressed air can significantly change the temperature. Wait for connector temperature to stabilize before using in calibration or measurements.
- Do not touch mating plane surfaces. Natural skin oils and microscopic particles of dirt are difficult to remove from these surfaces.
- Do not set connectors contact-end down on a hard surface. The plating and mating plane surfaces can be damaged if the interface comes in contact with any hard surface.
- Wear a grounded wrist strap and work on a grounded, conductive table mat. This helps protect the analyzer and devices from electrostatic discharge (ESD).

Electrostatic Discharge (ESD) Protection

Protection against electrostatic discharge (ESD) is essential while removing or connecting cables to the network analyzer. Static electricity can build up on your body and can easily damage sensitive internal circuit elements when discharged. Static discharges too small to be felt can cause permanent damage. To prevent damage to the instrument:

- **Always** have a grounded, conductive table mat in front of your test equipment.
- **Always** wear a grounded wrist strap, connected to a grounded conductive table mat, having a 1 MO resistor in series with it, when making test setup connections.
- **Always** wear a heel strap when working in an area with a conductive floor. If you are uncertain about the conductivity of your floor, wear a heel strap.
- **Always** ground yourself before you clean, inspect, or make a connection to a static-sensitive device or test port. You can, for example, grasp the grounded outer shell of the test port or cable connector briefly.
- **Always** ground the center conductor of a test cable before making a connection to the analyzer test port or other static-sensitive device. This can be done as follows:
 1. Connect a short (from your calibration kit) to one end of the cable to short the center conductor to the outer conductor.
 2. While wearing a grounded wrist strap, grasp the outer shell of the cable connector.
 3. Connect the other end of the cable to the test port and remove the short from the cable.

See [Analyzer Accessories](#) for ESD part numbers.

Absolute Output Power

An absolute output-power measurement displays absolute power versus frequency.

- [What is Absolute Output Power?](#)
- [Why Measure Absolute Output Power?](#)
- [Accuracy Considerations](#)
- [How to Measure Absolute Output Power](#)

[See other Amplifier Parameters topics](#)

What is Absolute Output Power?

An absolute-output power measurement displays the power present at the analyzer's input port. This power is absolute—it is not referenced (ratioed) to the incident or source power. In the log mag format, values associated with the grid's vertical axis are in units of dBm, which is the power measured in reference to 1 mW.

- 0 dBm = 1 mW
- -10 dBm = 100 μ W
- +10 dBm = 10 mW

In the linear mag format, values associated with the grid's vertical axis are in units of watts (W).

Why Measure Absolute Output Power?

Absolute output power is measured when the amplifier's output must be quantified as absolute power rather than a ratioed relative power measurement. For example, during a gain compression measurement, it is typical to also measure absolute output power. This shows the absolute power out of the amplifier where 1-dB compression occurs.

Accuracy Considerations

The output power of the amplifier should be sufficiently attenuated if necessary. Too much output power could:

- Damage the analyzer receiver
- Exceed the input compression level of the analyzer receiver, resulting in inaccurate measurements.


Attenuation of the amplifier's output power can be accomplished using either attenuators or couplers

The amplifier may respond very differently at various temperatures. The tests should be done when the amplifier is at the desired operating temperature.

How to Measure Absolute Power

Do the following to measure absolute output power:

1. Preset the analyzer.
2. Select an unratioed power measurement (receiver B).
3. Set the analyzer's source power to 0 dBm.
4. Select an external attenuator (if needed) so the amplifier's output power will be sufficiently attenuated to avoid causing receiver compression or damage to the analyzer's port-2.
5. Connect the amplifier as shown in the following graphic, and provide the dc bias.

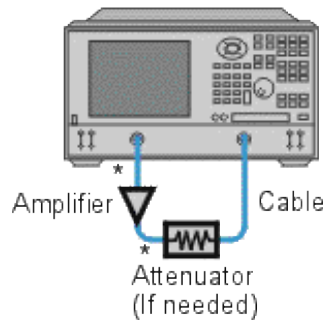

* Direct Connection

6. Select the analyzer settings for your amplifier under test.
7. Remove the amplifier and connect the measurement ports together. Store the data to memory. Be sure to include the attenuator and cables in the test setup if they will be used when measuring the amplifier.
8. Save the instrument state to memory.
9. Reconnect the amplifier.
10. Select the data math function Data/Memory.
11. Scale the displayed measurement for optimum viewing and use a marker to measure the absolute output-power at a desired frequency.
12. Print or save the data to a disk.

AM-PM Conversion

The AM-PM conversion of an amplifier is a measure of the amount of undesired **phase** deviation (PM) that is caused by amplitude variations (AM) inherent in the system.

- [What Is AM-PM Conversion?](#)
- [Why Measure AM-PM Conversion](#)
- [Accuracy Considerations](#)
- [How to Measure AM-PM Conversion](#)

[Other Tutorials topics](#)

What Is AM-PM Conversion?

AM-to-PM conversion measures the amount of undesired phase deviation (PM) that is caused by amplitude variations (AM) of the system. For example, unwanted phase deviation (PM) in a communications system can be caused by:


Unintentional amplitude variations (AM)

- Power supply ripple
- Thermal drift
- Multipath fading

Intentional modulation of signal amplitude

- QAM
- Burst modulation

AM-to-PM conversion is usually defined as the change in output phase for a 1-dB increment in the power-sweep applied to the amplifier's input (i.e. at the 1 dB gain compression point). It is expressed in degrees-per-dB (°/dB). An ideal amplifier would have no interaction between its phase response and the power level of the input signal.

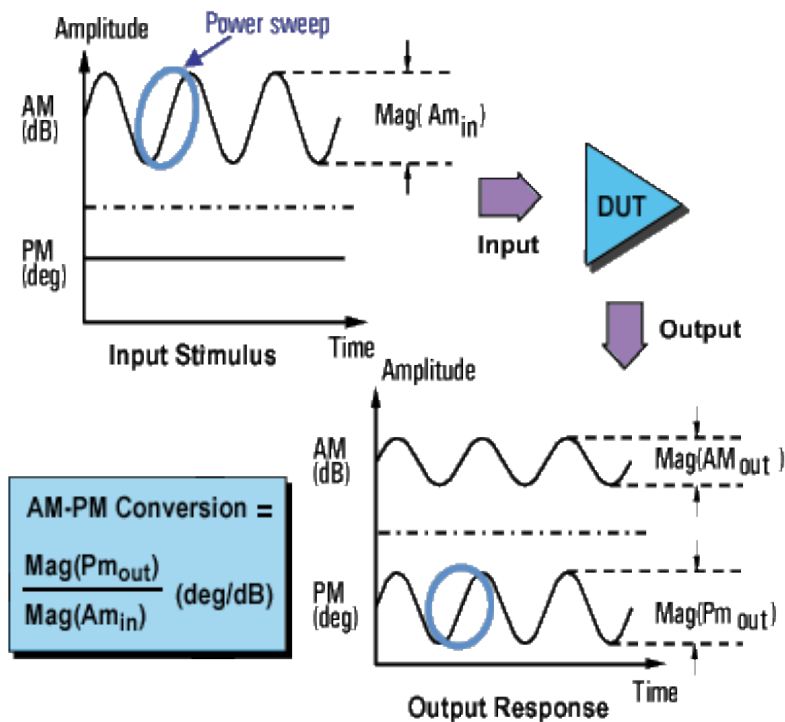


Why Measure AM-PM Conversion

AM-to-PM conversion is a critical parameter in systems where phase (angular) modulation is used, such as:

- FM
- QPSK
- 16QAM

It is a critical parameter because undesired phase deviation (PM) causes analog signal degradation, or increased bit-error rates (BER) in digital communication systems. While it is easy to measure the BER of a digital communication system, this measurement alone does not help you understand the underlying causes of bit errors. AM-to-PM conversion is one of the fundamental contributors to BER, and therefore it is important to quantify this parameter in communication systems.

Refer to the I/Q diagram below for the following discussion on how AM-to-PM conversion can cause bit errors.

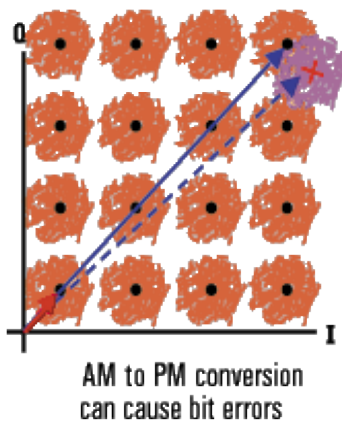

- The desirable state change is from the small solid vector to the large solid vector.
- With AM-to-PM conversion, the large vector may actually end up as shown with the dotted line. This is due to phase shift that results from a change in the input power level.
- For a 64QAM signal as shown (only one quadrant is drawn), we see that the noise circles that surround each state would actually overlap, which means that statistically, some bit errors would occur.

Accuracy Considerations


With this method of measuring AM-to-PM conversion, the modulation frequency is approximately the inverse of the sweep time. Even with the fastest power sweep available on most network analyzers, the modulation frequency ends up being fairly low (typically less than 10 Hz). This could cause a slight temperature change as the sweep progresses, especially if the amplifier has low thermal mass, typical of an unpackaged device. Results using this method could differ slightly if the nonlinear behavior of an amplifier is extremely sensitive to thermal changes. (The PNA series analyzers can make power sweeps <1 ms.)

- The amplifier may respond very differently at various temperatures. The tests should be done when the amplifier is at the desired operating temperature.
- The output power of the amplifier should be sufficiently attenuated if necessary. Too much output power could:
 - damage the analyzer receiver
 - exceed the input compression level of the analyzer receiver, resulting in inaccurate measurements
- Attenuation of the amplifier's output power can be accomplished using:
 - Attenuators
 - Couplers
- The frequency-response effects of the attenuators and couplers must be accounted for during calibration since they are part of the test system. Proper error-correction techniques can reduce these effects.
- The frequency response is the dominant error in an AM-to-PM conversion measurement setup. Performing a

thru-response measurement calibration significantly reduces this error. For greater accuracy, perform a 2-port measurement calibration.

How to Measure AM-PM Conversion

1. Preset the analyzer.
2. Select an S21 measurement in the power-sweep mode.
3. Enter the start and stop power levels for the analyzer's power sweep. The start power level should be in the linear region of the amplifier's response (typically 10-dB below the 1-dB compression point). The stop power should be in the compression region of the amplifier's response.
4. Select an external attenuator (if needed) so the amplifier's output power will be sufficiently attenuated to avoid causing receiver compression or damage to the analyzer's port 2.
5. Connect the amplifier as shown in the following graphic, and provide the dc bias.

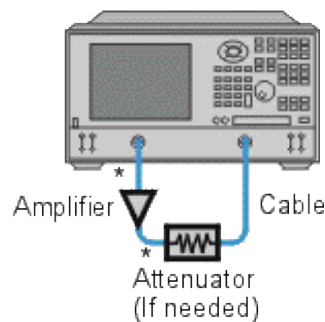

* Direct Connection

6. Select the analyzer settings for your amplifier under test in order to perform a swept-power gain compression measurement at a chosen frequency. See [Gain Compression](#).
7. Remove the amplifier and perform a measurement calibration. Be sure to include the attenuator and cables in the calibration setup if they will be used when measuring the amplifier.
8. Save the instrument state to memory.
9. Reconnect the amplifier.
10. Use a reference marker to target the amplifier's input power at the 1-dB gain compression point. Select a second marker and adjust its stimulus value until its response is 1-dB below the reference marker.
11. Change the S21 measurement from a log magnitude format to a [phase](#) format (no new calibration is required).
12. Find the [phase](#) change between the markers. The value is the AM-to-PM conversion coefficient at the 1-dB gain compression point.
13. Print the data or save it to a disk.

Amplifier Parameters Reference

- [Gain](#)
- [Gain Flatness](#)
- [Reverse Isolation](#)
- [Gain Drift Versus Time](#)
- [Deviation from Linear Phase](#)
- [Group Delay](#)
- [Return Loss \(SWR, r\)](#)
- [Complex Impedance](#)
- [Gain Compression](#)
- [AM-to-PM Conversion](#)

Gain

$$\tau = \frac{V_{\text{trans}}}{V_{\text{inc}}}$$
$$\text{Gain (dB)} = -20 \log_{10} |\tau|$$
$$\text{Gain (dB)} = P_{\text{out}} \text{ (dBm)} - P_{\text{in}} \text{ (dBm)}$$

The ratio of the amplifier's output power (delivered to a Z_0 [load](#)) to the input power (delivered from a Z_0 source). Z_0 is the [characteristic impedance](#), in this case, 50Ω .

For small signal levels, the output power of the amplifier is proportional to the input power. Small signal gain is the gain in this linear region.

As the input power level increases and the amplifier approaches saturation, the output power reaches a limit and the gain drops. Large signal gain is the gain in this nonlinear region. See [Gain Compression](#).

Gain Flatness

The variation of the gain over the frequency range of the amplifier. See [Small Signal Gain and Flatness](#).

Reverse Isolation

The measure of transmission from output to input. Similar to the gain measurement except the signal stimulus is applied to the output of the amplifier. See [Reverse Isolation](#).

Gain Drift versus Time (temperature, bias)

The maximum variation of gain as a function of time, with all other parameters held constant. Gain drift is also observed with respect to other parameter changes such as temperature, humidity or bias voltage.

Deviation from Linear Phase

The amount of variation from a linear **phase** shift. Ideally, the phase shift through an amplifier is a linear function of frequency. See [Deviation from Linear Phase](#).

Group Delay

$$\begin{aligned}\tau_g (\text{sec}) &= - \frac{\Delta \theta}{\Delta \omega} \\ &= - \frac{1}{360} * \frac{\Delta \theta}{\Delta f}\end{aligned}$$

The measure of the transit time through the amplifier as a function of frequency. A perfectly linear phase shift would have a constant rate of change with respect to frequency, yielding a constant group delay. See [Group Delay](#).

Return Loss (SWR, r)

$$\begin{aligned}\Gamma &= \frac{V_{\text{refl}}}{V_{\text{inc}}} = \rho \angle \theta \\ \text{Reflection coefficient} &= \rho \\ \text{Return loss (dB)} &= -20 \log_{10} \rho \\ \text{SWR} &= \frac{1+\rho}{1-\rho}\end{aligned}$$

The measure of the reflection mismatch at the input or output of the amplifier relative to the system **characteristic impedance**.

Complex Impedance

$$\begin{aligned}Z &= \frac{1+\Gamma}{1-\Gamma} * Z_0 \\ &= R + jX\end{aligned}$$

Complex **impedance** (1+G). The amount of reflected energy from an amplifier is directly related to its impedance. Complex impedance consists of both a resistive and a reactive component. It is derived from the characteristic impedance of the system and the reflection coefficient. See [Complex Impedance](#).

Gain Compression

An amplifier has a region of linear gain where the gain is independent of input power level (small signal gain). As the power is increased to a level that causes the amplifier to saturate, the gain decreases.

Gain compression is determined by measuring the amplifier's 1 dB gain compression point (P_{1dB}) which is the output power at which the gain drops 1 dB relative to the small signal gain. This is a common measure of an amplifier's power output capability. See [Gain Compression](#).

AM-to-PM Conversion Coefficient

$$\text{AM/PM} = \frac{\Delta \theta}{\Delta P}$$

The amount of [phase](#) change generated in the output signal of an amplifier as a result of an amplitude change of the input signal.

The AM-to-PM conversion coefficient is expressed in units of degrees/dB at a given power level (usually P_{1dB}, which is the 1 dB gain compression point). See [AM-PM Conversion](#).

Antenna Measurements

This topic describes how to setup the PNA to make S21 measurements on an array of antennas. Measurements can be made on up to 100 antenna arrays (Ports) and up to 15 discrete frequencies

Measurement Sequence

1. The PNA is set to a start frequency.
2. As the antenna moves, the PNA responds to each external trigger signal by measuring an antenna port.
3. When all ports are measured, the PNA increments to the next frequency
4. Again the PNA measures all ports, and so forth until all ports are measured at all frequencies in the forward direction.
5. As the antenna begins moving in the opposite direction, the same sequence occurs, except the PNA decrements in frequency until all ports are measured at all frequencies and the PNA is set back to the original start frequency.

Once setup, only external trigger signals are sent to the PNA. After each trigger, measurement data is stored in internal PNA memory.

How to set up the PNA

See the [Antenna Macro](#) to learn how to do this automatically.

1. On the **System** menu click **Preset**
2. On the **Sweep** menu point to **Trigger** then click **Trigger**
3. In Trigger Source click **External**
4. In Trigger Scope click **Channel**
5. Click **OK**

Forward Sweep

1. On the **Trace** menu click **New Trace**
2. Click **S21** then Channel Number 1
3. On the **Sweep** menu point to **Trigger** then click **Trigger**
4. In Channel Trigger State check **Point Sweep**
5. Click **OK**

6. On the Sweep menu click **Sweep Type:** then **Segment Sweep**
7. Click **OK**
8. On the **View** menu point to **Tables** then click **Segment Table**
9. Do this 15 times - Sweep menu point to **Segment Table** then **Insert Segment**
10. For each Segment in the Segment table:
 1. Click **State:** and select **ON**
 2. Double click both **START** and **STOP** Frequency: (each new segment ascends in frequency)
 3. Double click **Points:** type Number of Ports (elements)

Reverse sweep

Repeat the following steps for each frequency: (up to 15)

- Increment the channel number (**X**) Starting with Channel 2
 - Decrement the frequency (**F**)
1. On the **Trace** menu click **New Trace...**
 2. Click **S21** then Channel Number **X**
 3. When a window contains four traces, check **Create in New Window.**
 4. Click **OK**
 5. On the **Sweep** menu point to **Trigger** then click **Trigger**
 6. In Channel Trigger State check **Point Sweep**
 7. Click **OK**
 8. On the Sweep menu click **Sweep Type:** then **Segment Sweep**
 9. Click **OK**
 10. On the **View** menu point to **Tables** then click **Segment Table**
 11. In the Segment table
 1. Click **State:** and select **ON**
 2. Double click both **START** and **STOP** Frequency **F**
 3. Double click **Points:** type Number of Ports (elements)

Balanced Measurements


- [What are Balanced Devices?](#)
- [Differential and Common Modes Model](#)
- [Measuring Mixed Mode \(Balanced\) S-Parameters](#)
- [Measuring Imbalance Parameters](#)
- [Measuring CMRR](#)
- [Port Mapping](#)
- [How the PNA makes Balanced Measurements](#)

Other [Measurement Setup](#) Topics


New Check out the **True Mode Stimulus Application** being offered at www.agilent.com/find/balanced.

What are Balanced Devices?

Standard **Single-ended devices** generally have one input port and one output port. Signals on the input and output ports are referenced to ground.

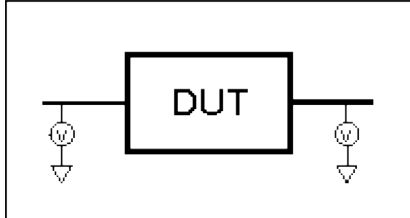

Balanced devices have two pins on either the input, the output, or both. The signal of interest is the difference and average of the two input or output lines, not referenced to ground.

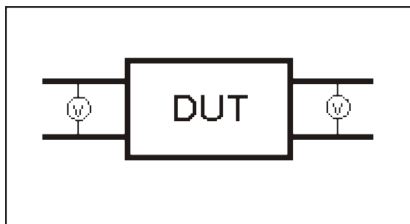


Differential and Common Modes Model

On balanced devices, the signal of interest is the **difference** and **average** of the two input or output lines. In balanced device terminology, these signals are known as the Differential and Common modes.

The following model shows how two signals (A and B) combine to create Differential and Common mode signals:

- **Signal A** is fixed at 1V peak
- **Signal B** is **selectable**
- **Differential** is calculated as **A minus B**
- **Common** is calculated as the **AVERAGE** of **A and B**

Note: Click **Signal B** selections to see various Differential and Common signals.

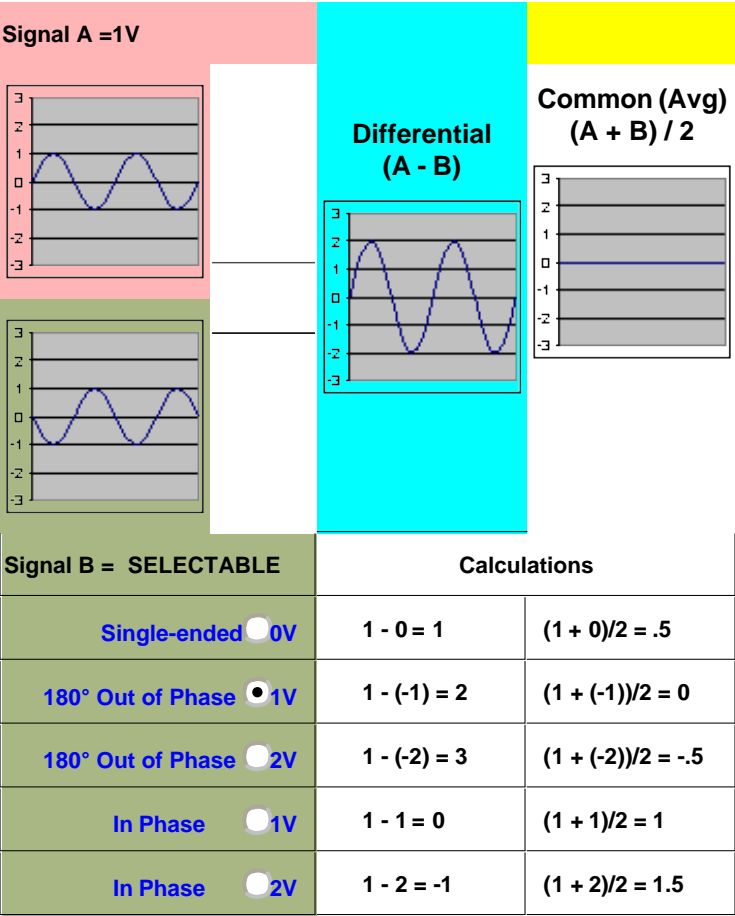

Notes:


- Even when Signal B is 0V, like a Single -ended signal, there is still a unique Differential and Common mode representation of the two individual signals.
- The above model does not show a DUT. The difference and average of two signals can be calculated for both the balanced INPUT and balanced OUTPUT of a device.

Measuring Mixed Mode (Balanced) S-Parameters


Mixed mode S-parameters combine traditional S-parameter notation with balanced measurement terminology.

Some balanced devices are designed to amplify the differential component and reject the common component. This allows noise that is common to both inputs to be virtually eliminated from the output. For example, a balanced device may amplify the differential signal by a factor of 5, and attenuate the common signal by a factor of 5. Using

Imbalance1 and Imbalance2 parameters when measuring a **balanced - balanced** device.

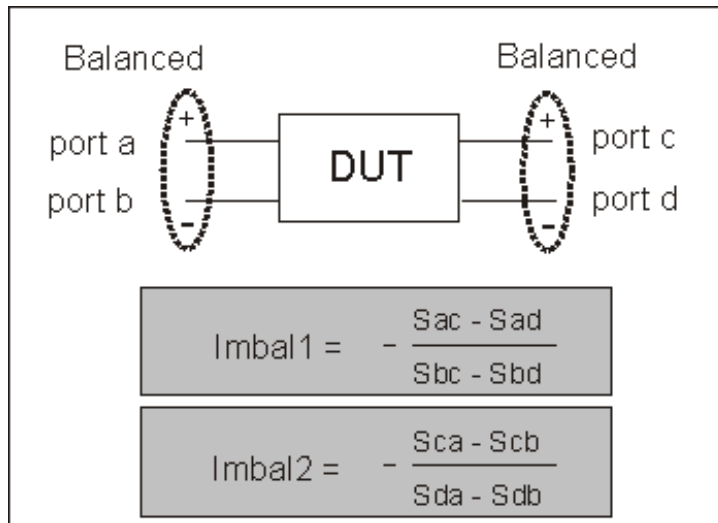

Imbalance1 and Imbalance2 parameters when measuring a **single-ended - single-ended - balanced** device.

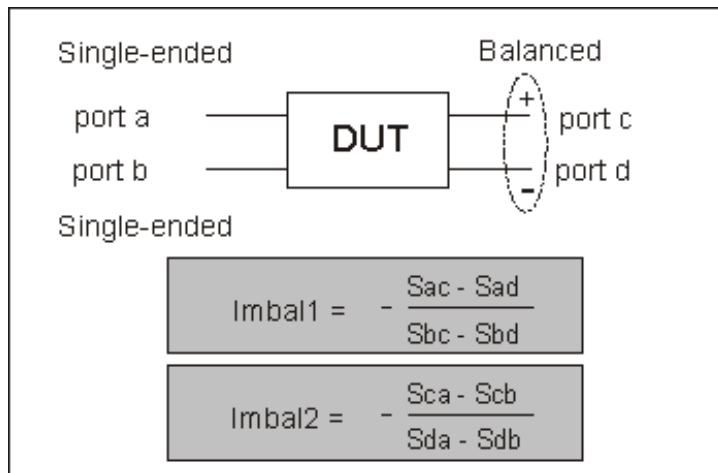

Measuring CMRR (Common Mode Rejection Ratio)

CMRR is a ratio of the transmission characteristic in differential mode over the transmission characteristic in the common mode of the balanced port as the measurement parameter. A high value indicates more rejection of common mode, which is desirable in a device that transmits information in the differential portion of the signal. The table below shows the CMRR parameter you can select when measuring each balanced device.

Single-ended - balanced device	$\frac{S_{ds21}}{S_{cs21}}$ and $\frac{S_{sd12}}{S_{sc12}}$
Balanced - balanced device	$\frac{S_{dd21}}{S_{cc21}}$
Single-ended - single-ended - balanced device	$\frac{S_{ds31}}{S_{cs31}}$ and $\frac{S_{ds32}}{S_{cs32}}$

Device Topology and Port Mapping

As we have seen on balanced inputs and outputs, the signal of interest is the difference or average of two BALANCED input or BALANCED output lines. It is also possible to have single-ended ports AND balanced ports on the same device. The two balanced input or output lines are referred to as a single "logical" port.


When configuring a balanced measurement on the PNA, select a device 'topology'. Then map each PNA test port to the DUT ports. The PNA assigns "logical ports". [See how to set device topology in the PNA.](#)

The screenshot shows the PNA configuration interface with the 'Balanced' tab selected. The 'Sdd21' checkbox is checked and circled in red. The 'Topology / Port Mapping' section at the bottom is also circled in red, showing 'BAL1: 1-2' and 'BAL2: 3-4'.


The following device topologies can be measured by a 4-port PNA.

- **Balanced / Balanced**


(2 logical ports - <4 actual ports>)

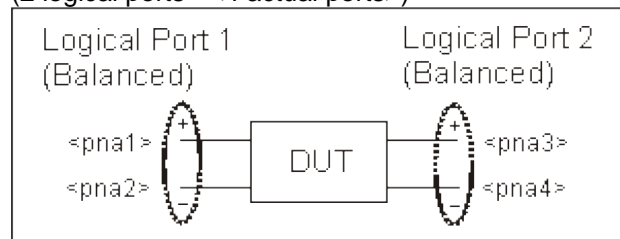

- **Single-ended / Balanced**
(2 logical ports - <3 actual ports>)

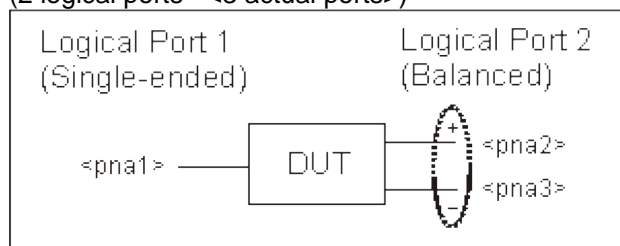

- **Single-ended - Single-ended / Balanced**
(3 logical ports - <4 actual ports>)

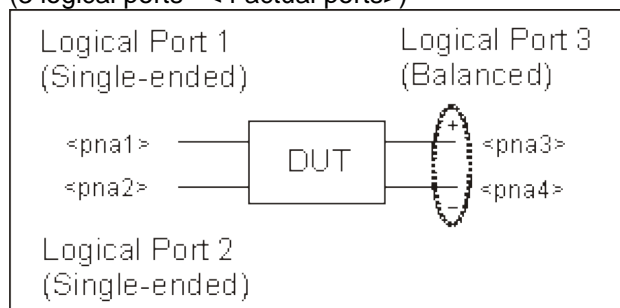

These topologies can be used in the reverse (<==) direction to measure:

- **Balanced / Single-ended** topology
- **Balanced / Single-ended - Single-ended** topology

For example, to measure a **Balanced / Single-ended** topology, measure the S12 (reverse direction) of a **Single-ended / Balanced** topology.

How the PNA makes Balanced Measurements

The PNA does not provide true balanced measurements by stimulating both balanced inputs together and measuring both outputs relative to one another. Instead, the PNA makes only Single-ended measurements. On a Balanced/ Balanced device, it stimulates each input and measures each output individually. From the output data, the PNA calculates the Differential and Common outputs from the DUT using the same math formulas as the above model. However, all measurements and calculations on the PNA are performed in frequency domain using complex (magnitude and phase) data. The Balanced S-parameter display data is then calculated from the Differential and Common inputs and outputs.

Complex Impedance

When making an S₁₁ or S₂₂ measurement of your device under test, you can view complex-impedance data such as series resistance and reactance as well as [phase](#) and magnitude information. Complex impedance data can be viewed using either the Smith Chart format or the Polar format.

- [What Is Complex Impedance?](#)
- [Accuracy Considerations](#)
- [How to Measure Complex Impedance](#)

What Is Complex Impedance?

Complex-impedance data is information that can be determined from an S₁₁ or S₂₂ measurement of your device under test, such as:

- Resistance
- Reactance
- Phase
- Magnitude

The amount of power reflected from a device is directly related to the impedances of both the device and the measuring system. For example, the value of the complex reflection coefficient (Γ) is equal to 0 only when the device impedance and the system impedance are exactly the same (i.e. maximum power is transferred from the source to the [load](#)). Every value for Γ corresponds uniquely to a complex device impedance (as a function of frequency), according to the equation:

$$Z_L = [(1 + \Gamma) / (1 - \Gamma)] \times Z_0$$


where Z_L is your test device impedance and Z_0 is the measuring system's [characteristic impedance](#).

Complex Impedance is best viewed using either [Polar](#) or [Smith Chart](#) format.

Accuracy Considerations

- The Smith chart is most easily understood when used with a full scale value of 1.0.
- For greater accuracy when using markers in the Smith chart or polar formats, activate the discrete marker mode.
- The uncertainty of reflection measurements is affected by:
 - [Directivity](#)
 - Reflection tracking
 - Source match
 - [Load match](#) (with 2-port devices)

With a 2-port [calibration](#), the effects of these factors are reduced. A 1-port calibration provides the same accuracy if the output of the device is well terminated. Refer to the graphic below for the following discussion.

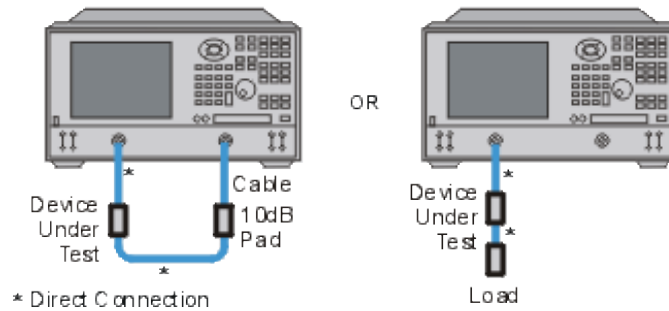

- If you connect the device between both analyzer ports, it is recommended that you use a 10 dB pad on the output of the device to improve measurement accuracy. This is not necessary if you use a 2-port calibration since it corrects for load match.
- If you connect a two-port device to only one analyzer port, it is recommended that you use a high-quality [load](#) (such as a calibration standard) on the output of the device.

How to Measure Complex Impedance

1. Connect the device as shown in the previous graphic.
2. Preset the analyzer.
3. Set up, calibrate, and perform an S11 or S22 measurement.
4. View impedance data:
 - a. Select the Smith Chart format.
 - b. Scale the displayed measurement for optimum viewing.
 - c. Position the marker to read the resistive and reactive components of the complex impedance at any point along the trace.
 - d. Print the data or save it to a disk.
5. View the magnitude and [phase](#) of the reflection coefficient:
 - a. Select the Smith chart format or the Polar format.
 - b. Select either Lin Marker or Log Marker formats.
 - c. Scale the displayed measurement for optimum viewing.
 - d. Position the marker to read the frequency, magnitude, and phase of the reflection coefficient (Γ) at any point along the trace.
 - e. Print the data or save it to a disk.

Comparing the PNA "Delay" Functions

The PNA has three Delay functions which are similar but are used in different ways.

1. **Group Delay format** is used to display the Group Delay of a network. Group Delay is defined as:

$-\frac{d(\phi)}{d(\omega)}$ -- where ϕ is radian angle, and ω is radian frequency.

Since it is defined by a derivative, the value must be determined from an analytic function. However, the PNA makes discrete measurements, so we approximate the group delay by taking the finite difference:

$-(1/360) \cdot \frac{\Delta(\phi)}{\Delta(f)}$ -- where ϕ is degree angle and f is frequency in Hz. The 1/360 does the proper conversion of degrees to radians and Hz frequency to radian frequency.

From this we can see that, if the phase response of a network varies with frequency, then the Group Delay must vary as well. In fact, many filters are specified by the variation of their Group Delay.

If we measure the phase response of a lossless cable, it should be a straight line. But, of course, nothing is perfect. The phase response will have a small amount of noise. This is due to trace noise of the PNA, and the loss with real cables or transmission lines, which causes a small amount of non-linear phase change with frequency. So, if we look at the Group Delay of a cable, we will see a small amount of variation. Also, if the frequency spacing is small enough when you make the measurement, the $\Delta(f)$ in the denominator becomes very small, so the delay can have wide swings with just a little noise.

To overcome this issue, we sometimes add smoothing to a phase trace, which widens the effective $\Delta(f)$, called the aperture, and provides a less noisy Group Delay response. The Group Delay of a device is only valid for a given frequency aperture. [Learn more about Group Delay.](#)

2. **Electrical Delay** function. On many filters, the passband response is specified for a maximum value of "Deviation from Linear Phase". When looking at the passband of a multi-pole filter, one sees the phase changing very rapidly. This makes it difficult to determine the linearity of the phase response. The Electrical Delay function subtracts out a "LINEAR PHASE" equivalent to the delay time value computed as above. When you use this function, you dial in the Linear Delay such that a CONSTANT PHASE SLOPE is removed from the phase trace, until the phase trace is mostly flat. The remaining variation is the deviation from linear phase.

To make this task a little less tedious, the PNA has a marker function called [Marker ==> Delay](#). This function computes the Group Delay value at the marker position, using a 20% smoothing aperture, then changes the Electrical Delay value to this value. Obviously, if the phase trace is not perfectly linear, moving the marker and recomputing the delay will result in different values. The phase slope added by the electrical delay function applies only to the current measurement. That is, each measurement (S11, S22, S12, S21) can have its own value of electrical delay. [Learn more about Deviation from Linear Phase.](#)

3. **Port Extension** is a function that is similar to calibration. It applies to all the traces in a given channel. It compensates for the phase response change that occurs when the calibration reference plane is not the same as the measurement plane of the device.

Let's look at an example of a DUT that is mounted on a PCB fixture with SMA connectors. We can easily calibrate at the SMA connectors. But if we add the fixture to measure the board-mounted device, the apparent phase of the DUT is changed by the phase of the PCB fixture. We use port extensions to add a LINEAR PHASE (constant delay) to the calibration routines to shift the phase reference plane to that of the DUT. This is ONLY valid if the fixture consists of a transmission line with linear phase response, and this limitation is usually met in practice. The main reason that it is NOT met is that there is mismatch at the SMA-to-PCB interface. This mismatch was not removed with the error correction because it occurs AFTER the SMA connector. Ripple can be seen on the display as signals bounce back and forth between the mismatch and the DUT. If the DUT is well matched, the ripple effect is very small. However, when we use Automatic Port Extension (APE), and we leave the fixture open (the DUT removed), the reflection is large and we see larger ripples. That is why APE uses a curve fitting process to remove the effects of the ripple. For best effect, the wider the IF Bandwidth, the better we can "smooth-out" the ripples with

curve fitting. Still, we are fitting a LINEAR PHASE SLOPE to the phase response, and thus we use only a single Port Extension Delay value to represent the phase slope.

The method used by older VNAs to get this same functionality was to add a mechanical line stretcher to the reference channel, which removed a fixed delay amount from the port. Port extensions give 1x the delay for transmission at each port, and 2x the delay for reflection, so it differs somewhat from Electrical Delay above, in that the math function depends upon the measurement being made. The signal passes twice through the fixture for reflection (out and back), but only once for each port on transmission. For S21, the phase slope added is the sum of the port 1 and port 2 Port Extension Delay values.

The "User Range" APE function is used in cases where a fixture has limited bandwidth, perhaps due to tuning elements or bias elements. In this case, the model of constant delay for the fixture over the whole bandwidth is not valid, so a narrower "User Range" of frequencies can be selected to compute the delay. Since the aperture is smaller, there is more uncertainty in the delay computation for port extension. Also, for those who had been using the [Marker ==> Delay](#) function to estimate the delay, we added the "Active Marker" selection to APE, which works exactly the same as Marker->Delay. [Learn more about Automatic Port Extensions.](#)

Deviation from Linear Phase

Deviation from linear phase is a measure of phase distortion. The electrical delay feature of the analyzer is used to remove the linear portion of the phase shift from the measurement. This results in a high-resolution display of the non-linear portion of the phase shift (deviation from linear phase).

- [What Is Linear Phase Shift?](#)
- [What Is Deviation from Linear Phase?](#)
- [Why Measure Deviation from Linear Phase?](#)
- [Using Electrical Delay](#)
- [Accuracy Considerations](#)

See also [Comparing the PNA Delay Functions](#)

[See other Tutorials](#)

What Is Linear Phase Shift?

[Phase](#) shift occurs because the wavelengths that occupy the electrical length of the device get shorter as the frequency of the incident signal increases. *Linear* phase-shift occurs when the phase response of a device is linearly proportional to frequency. Displayed on the analyzer, the phase-versus-frequency measurement trace of this ideal linear phase shift is a straight line. The slope is proportional to the electrical length of the device. Linear phase shift is necessary (along with a flat magnitude response) for distortionless transmission of signals.

What Is Deviation from Linear Phase?

In actual practice, many electrical or electronic devices will delay some frequencies more than others, creating non-linear phase-shift (distortion in signals consisting of multiple-frequency components). Measuring deviation from linear phase is a way to quantify this non-linear phase shift.

Since it is only the deviation from linear phase which causes phase distortion, it is desirable to remove the linear portion of the phase response from the measurement. This can be accomplished by using the [electrical delay](#) feature of the analyzer to mathematically cancel the electrical length of the device under test. What remains is the deviation from linear phase, or phase distortion.

Why Measure Deviation from Linear Phase?


The deviation from linear phase measurement accomplishes the following:

- Presents data in units of phase rather than units of seconds (group delay). For devices that pass modulated signals, units of phase may be most practical.
- Provides a less noisy measurement than a [group delay](#) measurement.

Using Electrical Delay

The electrical delay feature is the electronic version of the mechanical "line stretcher" of earlier analyzers. This feature does the following:

- Simulates a variable-length lossless transmission line, which is effectively added to or removed from the reference signal path.
- Compensates for the electrical length of the device under test.
- Flattens the measurement trace on the analyzer's display. This allows the trace to be viewed at high resolution in order to see the details of the phase nonlinearity.
- Provides a convenient method to view the deviation from linear phase of the device under test. See the following graphic.

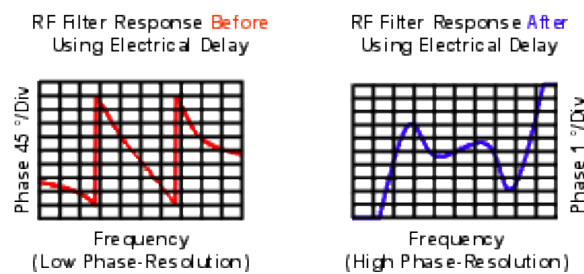


[Learn how to set Electrical Delay.](#)

Accuracy Considerations

The [frequency response](#) of the test setup is the dominant error in a deviation from linear phase measurement. To reduce this error, perform a 2-port measurement calibration.

How to Measure Deviation from Linear Phase:

1. Preset the analyzer.
2. If your device under test is an amplifier, it may be necessary to adjust the analyzer's source power:
 - Set the analyzer's source power to be in the linear region of the amplifier's output response (typically 10-dB below the 1-dB compression point).
 - Select an external attenuator (if needed) so the amplifier's output power will be sufficiently attenuated to avoid causing receiver compression or damage to the analyzer's port 2.
3. Connect the device under test as shown in the following graphic.

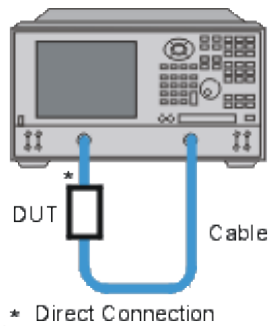

3. Select an S21 measurement.
4. Select the settings for your device under test, including the following:
 - [Format](#): phase
 - [Scale](#): autoscale
5. Remove the device and perform a calibration.
6. Reconnect the device.
7. Scale the displayed measurement for optimum viewing.
8. [Create a marker](#) in the middle of the trace.
9. Press the **>Delay** [Active Entry Key](#) to invoke the [Marker to Electrical Delay](#) function. This flattens the phase trace.
10. If desired, on the **Scale** menu, click [Electrical Delay](#) to fine-tune the flatness of the phase trace.
11. Use the markers to measure the maximum peak-to-peak deviation from linear phase.
12. Print the data or save it to a disk.

Synchronize PNA with an External (PSG) Source

Note: Beginning with PNA Rev. 7.22, this procedure is no longer necessary for FOM measurements. The PNA [External Source Configuration](#) dialog can be used for fast and easy External Source Control.

Many PNA measurements require the use of at least one external source. For example, when measuring the insertion loss of a mixer, the LO must be swept at the same time as the RF input. This requires the PNA and external source to be synchronized.

The following procedure shows how this is done using an Agilent PSG Source. Although the settings will be different, the concept is useful with other sources.

Hardware configuration

- Connect the PNA and PSG Time Base ([PNA 10 MHz OUT](#) to PSG 10 MHz IN)

PNA-L, E836xB Models

Connect the PSG and [PNA Trigger Connectors](#) as follows:

- PNA Trigger IN to Source OUT
- PNA Trigger OUT to Source IN

PNA-X Models

Connect either pair (1 or 2) of the [AUX Trigger I/O connectors](#) as follows:

- PNA AUX Trig IN to Source Trigger OUT
- PNA AUX Trig OUT to Source Trigger IN

[Learn more about the AUX Trigger capabilities.](#)

PNA Settings

- [Number of points](#): **Same as PSG**
- [Frequency span](#): Does **NOT** have to be the same as PSG

[TSetup Trigger Settings](#)

- Trigger Source:
 - PNA-L and E836xB models: **External**
 - PNA-X: **Internal, Manual**
- Trigger Scope: **Channel**

- Channel Trigger State: **Same as PSG Sweep Repeat setting**. ([Continuous or Single](#))
- Point Sweep: **Checked**

External / Auxiliary Trigger Settings

	PNA-L and E836xB	PNA-X
Input		
Where settings are made:	External Tab	Aux Trigger Tab
Level / Edge:	Edge	Same as PSG (Hi or Low)
Accept Trigger Before Armed:	Checked	N/A
Handshake	N/A	Checked
Output		
Where settings are made:	I/O2 Trig Out Tab	Aux Trigger Tab
Enable	Checked	Checked
Polarity:	Same as PSG	Same as PSG
Position:	After	After


PSG Settings

- Number of points: **Same as PNA**
- Sweep: **Step** or **List**
- Sweep Trig: **Free Run**
- Sweep Repeat: **Same as PNA Channel Trigger State** ([Continuous or Single](#))
- Sweep Direction: **UP**
- Point Trig: **Ext**
- Manual Mode: **OFF**
- Trigger In / Out Polarity: **Same as PNA**

What is Happening?

The following is a flow diagram showing the handshake / synchronization process between the PNA and an

External Source.

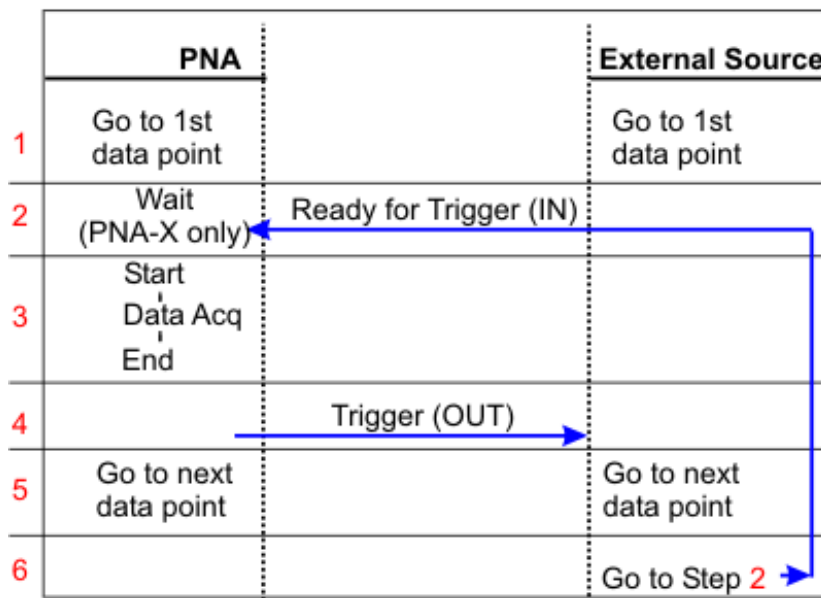

Text Description

1. After the measurement setup is complete, both instruments wait on the first data point of a measurement sweep. Both instruments are configured for Continuous or Single sweep.
2. ([see note below](#)) A trigger signal from the source starts the measurement. This is usually accomplished by a key press on the source front panel.
3. PNA data acquisition (measurement) starts, and then stops AFTER the first data point acquisition.
4. The PNA sends a trigger signal out to the source telling it to move to the next frequency data point. This signal can optionally be sent BEFORE data acquisition if required by your application.
5. The external source and PNA move to the next data point. The source usually takes longer than the PNA.
6. The source sends the Ready for Trigger signal to the PNA.
 - **PNA-L and E836xB models** - If the source arrives first, the **Accept Trigger Before Armed** setting is used to accept the trigger signal even if the PNA is not yet ready to start acquisition.
 - **PNA-X using AUX Triggering** - If enabled, the PNA waits indefinitely for a trigger signal from the source. Although AUX triggering does NOT have the **Accept Trigger Before Armed** setting, the Ready for Trigger signal is latched and has the same effect.

Step 2 Note PNA-X (Aux TRIG IN) The PNA looks for a level trigger at the start of each sweep, and an edge thereafter. This assumes that the external source ready line will remain in the ready state (high or low) until triggered (step 4) and will then transition to the NOT ready state while moving to the next frequency, and then transition again to the ready state.

How do you know when the PNA and PSG are in synch?

The measurement results are the ultimate test of whether the source and PNA are synchronized. However, it is possible to see the PSG and PNA sweeping at exactly the same time.

First, lower the PNA [IFBandwidth](#) or increase the [sweep time](#) so that the sweep is slow enough to watch the sweep indicator moving across the PNA screen. At the same time, watch the PSG "progress bar" as it moves through the entire sweep.

If the PNA is stopped in the middle of a sweep, then retriggered, it returns to the first data point. The PSG continues from where it stopped. Therefore, to re-synch the two instruments, the PSG needs to return to the first data point. There are a number of ways to do this. One way is to press the PSG **Manual** button to ON, then OFF. Then trigger a new sweep.

To trigger a sweep

- **Single** Trigger mode: Both the PNA and PSG Single (trigger) buttons must be pressed (in any order) for each trigger.
- **Continuous** Trigger mode: First, reset the PSG to the first data point, then press the PNA Continuous (trigger) button.

Maintaining Synchronization

In general, the above setup should start the two instruments sweeping simultaneously. However, any interaction with the PNA could cause the PNA sweep to abort or delay, in which case the two instruments will be out of sync. To avoid this, you can use the PNA [Interface Control](#) feature to send an ABORT to the external device after each sweep.

When the PNA ends a sweep, it sends an ABORT to stop the source. A trigger signal is then sent, either Continuous (automatically) or Single (manual). In either case, both instruments start sweeping in synch.

This takes more time to sweep, but maintains synchronization.

For example, to use this feature with Agilent's PSG source, you would add the following:

On the "After Sweep End" tab, type:

```
24 :ABORT
```

Where 24 is the GPIB address of the source.

Last Modified:

1-Jun-2007 Added 7.22 update

1-Jan-2007 MX Updated for PNA-X

Small Signal Gain and Flatness

Small signal gain is the gain in the amplifier's linear region of operation. This is typically measured at a constant input power over a swept frequency. Gain **flatness** is the measure of the variation of gain over a specified frequency range.

- [What Is Gain?](#)
- [What Is Flatness?](#)
- [Why Measure Gain and Flatness?](#)
- [Accuracy Considerations](#)
- [How to Measure Gain and Flatness](#)

[See other Amplifier Parameter topics](#)

What Is Gain?

RF amplifier gain is defined as the difference in power between the amplifier output signal and the input signal. It is assumed that both input and output impedances of the amplifier are the same as the **characteristic impedance** of the system.

- Gain is called S_{21} using S-parameter terminology
- Gain is expressed in dB—a logarithmic ratio of the output power relative to the input power.
- Gain can be calculated by subtracting the input from the output levels when both are expressed in dBm, which is power relative to 1 milliwatt.
- Amplifier gain is most commonly specified as a minimum value over a specified frequency range. Some amplifiers specify both minimum and maximum gain, to ensure that subsequent stages in a system are not under or over driven.

What Is Flatness?

Flatness specifies how much the amplifier's gain can vary over the specified frequency range. Variations in the flatness of the amplifier's gain can cause distortion of signals passing through the amplifier.

Why Measure Small-Signal Gain and Flatness?

Deviations in gain over the **bandwidth** of interest will induce distortion in the transmitted signal because frequency components are not amplified equally. Small-signal gain allows you to quantify the amplifier's gain at a particular frequency in a 50-ohm system. Flatness allows you to view the deviations in the amplifier's gain over a specified frequency range in a 50-ohm system.

Accuracy Considerations

- The amplifier may respond very differently at various temperatures. The tests should be done when the amplifier is at the desired operating temperature.
- The output power of the amplifier should be sufficiently attenuated if necessary. Too much output power could:
 - damage the analyzer receiver
 - exceed the input compression level of the analyzer receiver, resulting in inaccurate measurements.

Attenuation of the amplifier's output power can be accomplished using:


- attenuators
- couplers

The frequency-response effects and mismatches of the attenuators and couplers must be accounted for during calibration since they are part of the test system. Proper error-correction techniques can reduce these effects.

- The frequency response is the dominant error in a small-signal gain and flatness measurement setup. Performing a thru-response measurement calibration significantly reduces this error. For greater accuracy, perform a 2-port measurement calibration.
- Reducing IF bandwidth or using averaging improves measurement dynamic range and accuracy, at the expense of measurement speed.

How to Measure Gain and Flatness

1. Preset the analyzer.
2. Select an S21 measurement parameter.
3. Set the analyzer's source power to be in the linear region of the amplifier's output response (typically 10-dB below the 1-dB compression point).
4. Select an external attenuator (if needed) so the amplifier's output power will be sufficiently attenuated to avoid causing receiver compression or damage to the analyzer's port-2.

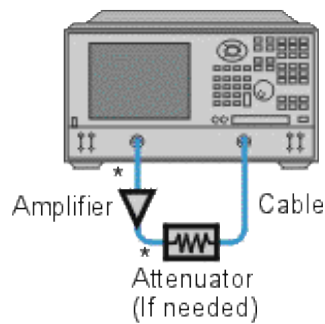

* Direct Connection

5. Connect the amplifier as shown in the following graphic, and provide the dc bias.
6. Select the analyzer settings for your amplifier under test.
7. Remove the amplifier and perform a measurement [calibration](#). Be sure to include the attenuator and cables in the calibration setup if they will be used when measuring the amplifier.
8. Save the instrument-state to memory.
9. Reconnect the amplifier.
10. Scale the displayed measurement for optimum viewing and use a marker to measure the small signal gain at a desired frequency.
11. Measure the gain [flatness](#) over a frequency range by using markers to view the peak-to-peak ripple.
12. Print or save the data to a disk.
13. This type of measurement can be automated.

Gain Compression

Gain compression measures the level of input power applied to an amplifier that will cause a distorted output.


- [What Is Gain Compression?](#)
- [Why Measure Gain Compression?](#)
- [Accuracy Considerations](#)
- [How to Measure Gain Compression](#)

[See other Amplifier Parameter topics](#)

What Is Gain Compression?

Gain compression occurs when the input power of an amplifier is increased to a level that reduces the gain of the amplifier and causes a nonlinear increase in output power.

The analyzer has the ability to do power sweeps as well as frequency sweeps. Power sweeps help characterize the nonlinear performance of an amplifier. Refer to the graphic below (a plot of an amplifier's output power versus input power at a single frequency) for the following discussion.

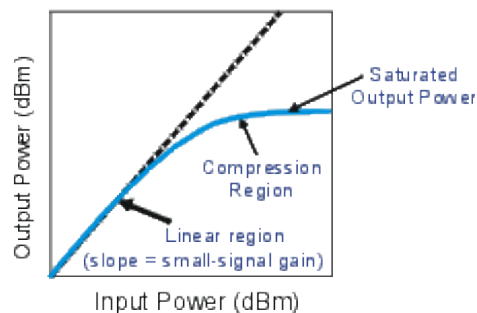

- The amplifier has a linear region of operation where gain is constant and independent of power level. The gain in this region is commonly referred to as "small-signal gain."
- As the input power increases, the amplifier gain appears to decrease, and the amplifier goes into compression.
- The most common measurement of amplifier compression is the 1-dB compression point. This is defined as the input power (or sometimes the output power) which results in a 1-dB decrease in amplifier gain (relative to the amplifier's small-signal gain).

Why Measure Gain Compression?

When driven with a sinusoid, the output of an amplifier is no longer sinusoidal in the compression region. Some of the amplifier output appears in harmonics, rather than occurring only at the fundamental frequency of the input signal.

As input power is increased even more, the amplifier becomes saturated, and output power remains constant. At this point, further increases in amplifier input power result in no change in output power.

In some cases (such as with TWT amplifiers), output power actually decreases with further increases in input power after saturation, which means the amplifier has negative gain.

Since gain is desired in amplifier operation, it is important to know the limit of input signal that will result in gain compression.

Accuracy Considerations

The network analyzer must provide sufficient power to drive the amplifier into saturation. If you need a higher input-power level than the source of the analyzer can provide, use a preamplifier to boost the power level prior to the amplifier under test. (See [High-Power Component Measurements](#).) If using a preamplifier, you can increase measurement accuracy in the following ways:

- Use a coupler on the output of the preamplifier so that a portion of the boosted input signal can be used for the analyzer's reference channel. This configuration removes the preamplifier's [frequency response](#) and drift errors from the measurement (by ratioing).
- Perform a thru-response [calibration](#) including the preamplifier, couplers, and attenuators in the test setup.

The output power of the amplifier should be sufficiently attenuated if necessary. Too much output power could:

- Damage the analyzer receiver
- Exceed the input compression level of the analyzer receiver

[Attenuation](#) of the amplifier's output power can be accomplished using:

- Attenuators
- Couplers

The frequency-response effects of the attenuators and couplers must be considered during calibration since they are part of the test system. Proper error-correction techniques can reduce these effects.

- The frequency response is the dominant error in a gain compression measurement setup. Performing a thru-response measurement calibration significantly reduces this error.
- The amplifier may respond very differently at various temperatures. The tests should be done when the amplifier is at the desired operating temperature.
- Reducing IF [bandwidth](#) or using measurement averages improves accuracy, at the expense of measurement speed.

How to Measure Gain Compression

This procedure shows you how to make the following three measurements used to determine amplifier gain compression:

1. A [Swept-Frequency Gain Compression](#) measurement locates the lowest frequency at which the 1-dB gain


compression first occurs.

2. A [Swept-Power Gain Compression](#) measurement shows the input power at which a 1-dB drop in gain occurs as a power ramp is applied to the amplifier at a particular frequency point (found in measurement 1).
3. An [Absolute Power](#) measurement shows the absolute power out (in dBm) at compression.

Swept-Frequency Gain Compression Measurement

A measurement of swept frequency gain compression locates the frequency point where 1-dB compression first occurs.

1. Preset the analyzer.
2. Select an S_{21} measurement parameter.
3. Set the analyzer's source power to be in the linear region of the amplifier's output response (typically 10-dB below the 1-dB compression point).
4. Select an external attenuator (if needed) so the amplifier's output power will be sufficiently attenuated to avoid causing receiver compression or damage to the analyzer's port-2.
5. Connect the amplifier as shown in the following graphic, and provide the dc bias.
6. Select the analyzer settings for your amplifier under test. To reduce the effects of noise, you may want to specify a narrower IF bandwidth.

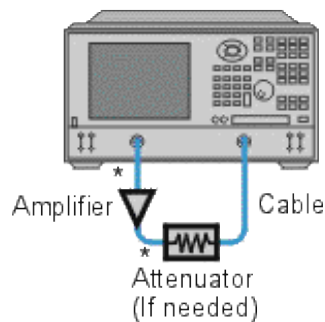

* Direct Connection

7. Remove the amplifier and perform a thru-response [calibration](#). Be sure to include the attenuator and cables in the calibration setup if they will be used when measuring the amplifier.
8. Save the instrument-state to memory.
9. Reconnect the amplifier.
10. Position a marker at approximately mid-span.
11. Adjust the analyzer's scale to 1 dB per division.
12. Store the trace in memory and display Data/Mem.

13. Gradually increase the source power until a 1-dB decrease in gain is observed at the first frequency over some portion of the trace.
14. Use markers to locate the frequency where the 1-dB decrease in gain first occurs. Note this frequency for use in the following measurement.
15. Print the data or save it to a disk.

Swept-Power Gain Compression Measurement

A swept-power gain compression measurement shows the input power resulting in a 1-dB drop in gain as a power ramp at a particular frequency (found in step 13 of the previous measurement) is applied to the amplifier.

1. If not already done, perform the previous measurement of swept-frequency gain compression.
2. Setup an S₂₁ measurement in the power-sweep mode. Include the following settings:
 - Set the **CW** frequency to the frequency noted in step 14 of the previous measurement of swept-frequency gain compression.
 - Enter the start and stop power levels for the sweep. The start power should be in the linear region of the amplifier's response (typically 10 dB below the 1-dB compression point). The stop power should be in the compression region of the amplifier's response.
3. Adjust the scale to 1-dB per division.
4. Use markers (including reference marker) to find the input power where the 1-dB decrease in gain occurs.
5. Print the data or save it to a disk.

Absolute Output Power Measurement

An absolute-power measurement shows the absolute power-out (in dBm) of the amplifier at compression.

1. Select an unratioed (absolute) power measurement. Choose the B input if using the test setup in the previous graphic.
2. Retain the CW frequency used in the previous measurement of swept-power gain compression.
3. Set a marker to the input power level where the 1-dB decrease in gain occurs (found in step 4 of the previous measurement).
4. Scale the displayed measurement for optimum viewing.
5. Read the marker value to find the absolute output power of the amplifier (in dBm) where the 1-dB decrease in gain occurs.
6. Print the data or save it to a disk.

Note: The measurement calibration does not apply to absolute power. Therefore, if there is any attenuation

external to the analyzer, you will have to correct for it manually.

Group Delay

Group delay is a measure of **phase** distortion. Group delay is the actual transit time of a signal through a device under test as a function of frequency. When specifying group delay, it is important to specify the **aperture** used for the measurement.

- [What is Group Delay?](#)
- [Group Delay versus Deviation from Linear Phase](#)
- [What Is Aperture?](#)
- [Accuracy Considerations](#)
- [How to Measure Group Delay](#)

See also [Comparing the PNA Delay Functions](#).


[See other Amplifier Parameter topics](#)

What Is Group Delay?

Group delay is:

- A measure of device phase distortion.
- The transit time of a signal through a device, versus frequency.
- The derivative of the device's phase characteristic with respect to frequency.

Refer to the graphic below for the following discussion:

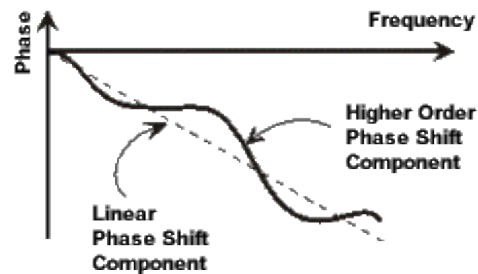

$$\begin{aligned}\text{Group Delay} = t_g &= \frac{-d\phi}{d\omega} \quad \begin{array}{l} \phi \text{ in Radians} \\ \omega \text{ in Radians/Sec} \end{array} \\ &= \frac{-1}{360^\circ} \cdot \frac{d\Theta}{df} \quad \begin{array}{l} \Theta \text{ in Degrees} \\ f \text{ in Hz } (\omega = 2\pi f) \end{array}\end{aligned}$$

The phase characteristic of a device typically consists of both linear and higher order (deviations from linear) phase-shift components.

Linear phase-shift component:

Represents average signal transit time.


Attributed to electrical length of test device.

Higher-order phase-shift component:

Represents variations in transit time for different frequencies.

Source of signal distortion.

Refer to the graphic below for the following discussion:

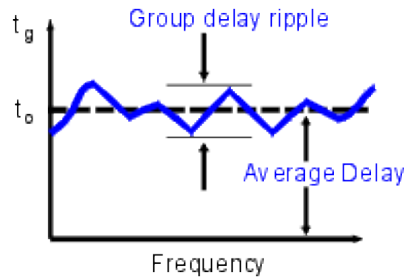

In a group delay measurement:

- The linear phase shift component is converted to a constant value (representing the average delay).
- The higher order phase shift component is transformed into deviations from constant group delay (or group delay ripple).
- The deviations in group delay cause signal distortion, just as deviations from linear phase cause distortion.
- The measurement trace depicts the amount of time it takes for each frequency to travel through the device under test.

Refer to the following equation for this discussion on how the analyzer computes group delay:

$$\begin{aligned}\text{Group Delay} = t_g &= \frac{-d\phi}{d\omega} \\ &= \frac{-1}{360^\circ} \cdot \frac{d\Theta}{df}\end{aligned}$$


ϕ in Radians
 ω in Radians/Sec
 Θ in Degrees
 f in Hz ($\omega = 2\pi f$)

- Phase data is used to find the phase change ($-d\phi$).
- A specified frequency aperture is used to find the frequency change ($d\omega$).
- Using the two values above, an approximation is calculated for the rate of change of phase with frequency.
- This approximation represents group delay in seconds (assuming linear phase change over the specified frequency aperture).

Group Delay versus Deviation from Linear Phase

Group delay is often a more accurate indication of phase distortion than [Deviation from Linear Phase](#).

Deviation from linear phase results are shown in the upper region of the following graphic: Device 1 and device 2 have same value, despite different appearances.

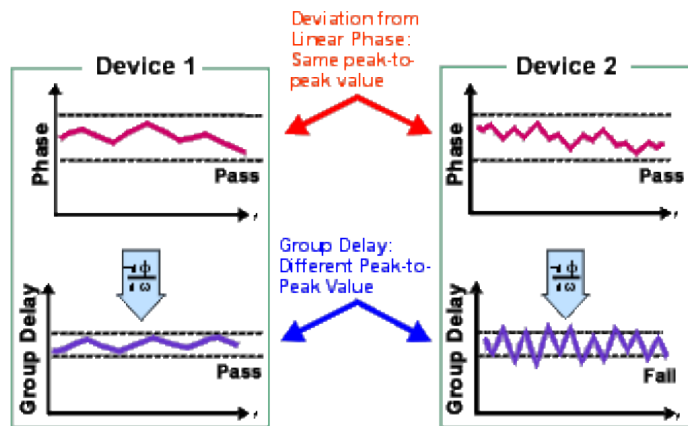


Group Delay results are shown in the lower region:

Device 1 and device 2 have different values of group delay. This is because in determining group delay, the analyzer calculates slope of phase ripple, which is dependent on number of ripples which occur per unit of frequency.

What Is Aperture?

During a group delay measurement, the analyzer measures the phase at two closely spaced frequencies and then computes the phase slope. The frequency interval (frequency delta) between the two phase measurement points is called the **aperture**. Changing the aperture can result in different values of group delay. The computed slope (delta phase) varies as the aperture is increased. This is why when you are comparing group delay data, you must know the aperture that was used to make the measurements.

Refer to the graphic below for the following discussion:

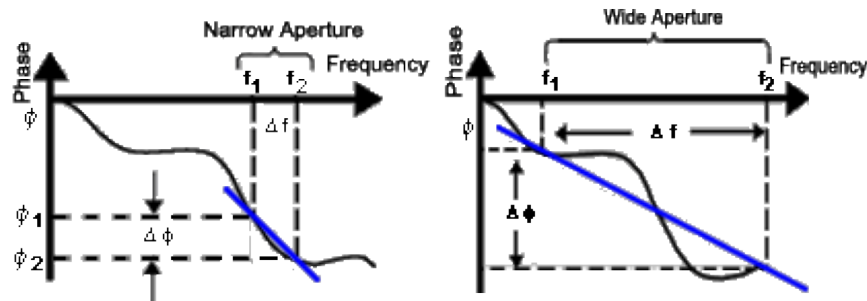

Narrow aperture:

Provides more fine detail in phase linearity.

Makes measurement susceptible to noise (smaller signal-to-noise ratio) and analyzer phase detector resolution.

Wide aperture:

Provides less fine detail in phase linearity because some phase response averaged-out or not measured.

Makes measurement less susceptible to noise (larger signal-to-noise ratio).

The analyzer's default setting for group delay aperture is the **frequency span** divided by the number of points across the display. There are two ways to set the aperture to a different value.

1. Adjust the number of measurement points or the frequency span.

- Increasing the number of points or reducing the frequency span narrows the aperture.
- Decreasing the number of points and/or increasing the frequency span widens the aperture.

Note: if the aperture is too wide (more than 180° of phase shift between adjacent frequency points), errors in group delay data will occur.

2. Use the analyzer's smoothing function.

- Performs a single-sweep, moving average of adjacent data-points over a specified percentage of the frequency span.
- Results in an action similar to changing the frequency interval between points.
- Allows a wider aperture because greater than 180° of phase shift can occur over the smoothing aperture.

Group delay measurements can be made on the following sweep types:

- Linear frequency
- List frequency sweep segment


The group delay aperture varies depending on the frequency spacing and point density, therefore the aperture is not constant in segment sweep. In segment sweep, extra frequency points can be defined to ensure the desired aperture.

Accuracy Considerations

It is important to keep the phase difference between two adjacent measurement points less than 180° (see the following graphic). Otherwise, incorrect phase and delay information may result. Undersampling may occur when measuring devices with long electrical length. You can verify that the phase difference measured between two adjacent points is less than 180° by adjusting the following settings until the measurement trace no longer changes:

- Increase the number of points
- Narrow the frequency span

Electrical delay may also be used to compensate for this effect.

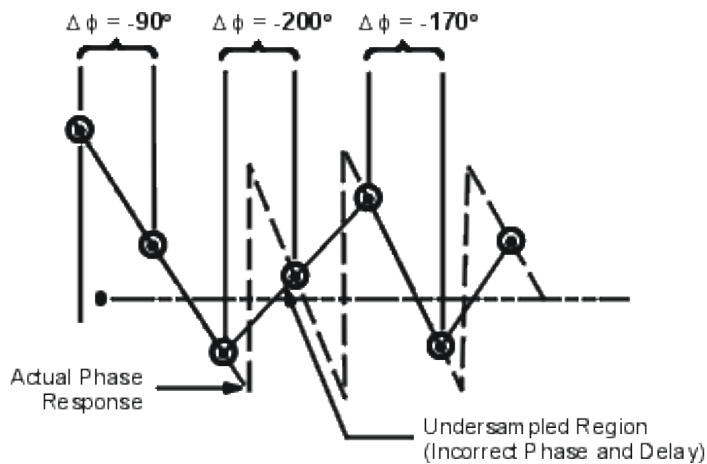


The [frequency response](#) is the dominant error in a group delay test setup. Performing a thru-response measurement [calibration](#) significantly reduces this error. For greater accuracy, perform a 2-port measurement calibration.

Particularly for an amplifier, the response may vary differently at various temperatures. The tests should be done when the amplifier is at the desired operating temperature.

How to Measure Group Delay

1. Preset the analyzer.
2. If your device under test is an amplifier, it may be necessary to adjust the analyzer's source power:
 - Set the analyzer's source power to be in the linear region of the amplifier's output response (typically 10-dB below the 1-dB compression point).
 - Select an external attenuator (if needed) so the amplifier's output power will be sufficiently attenuated to avoid causing receiver compression or damage to the analyzer's port 2.
3. Connect the device under test as shown in the following graphic.

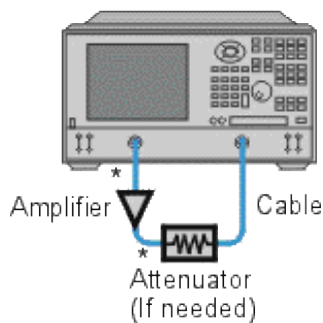

* Direct Connection

4. Select an S_{21} measurement.

5. Select the settings for your device under test, including the following:
 - number of measurement points: maximum
 - format: delay
 - scale: autoscale
6. Remove the device under test and perform a measurement calibration.
7. Reconnect the device under test.
8. Scale the displayed measurement for optimum viewing.
9. Use the analyzer's smoothing feature to increase the aperture, reducing noise on the trace while maintaining meaningful detail. To increase the aperture:
 - Switch on the analyzer's smoothing feature.
 - Vary the smoothing aperture (up to 25% of the span swept).
10. Use the markers to measure group delay (expressed in seconds) at a particular frequency of interest.
11. Print the data or save it to a disk.

High-Power Amplifier Measurements Using a PNA


This topic is now covered in detail in Application Note 1408-10, [High-power measurements using the PNA \(5989-1349EN\)](#) at Agilent.com.

See Also

[High-Power Amplifier Measurements using a PNA-X](#)

High Power Amplifier Measurements with the PNA-X

The following is a block diagram of the [PNA-X Opt 423](#). The configuration displayed here is used to make high power amplifier measurements using a preamplifier at the rear panel. The preamplifier can then be switched (SW1) as needed using the [RF Configurator](#).

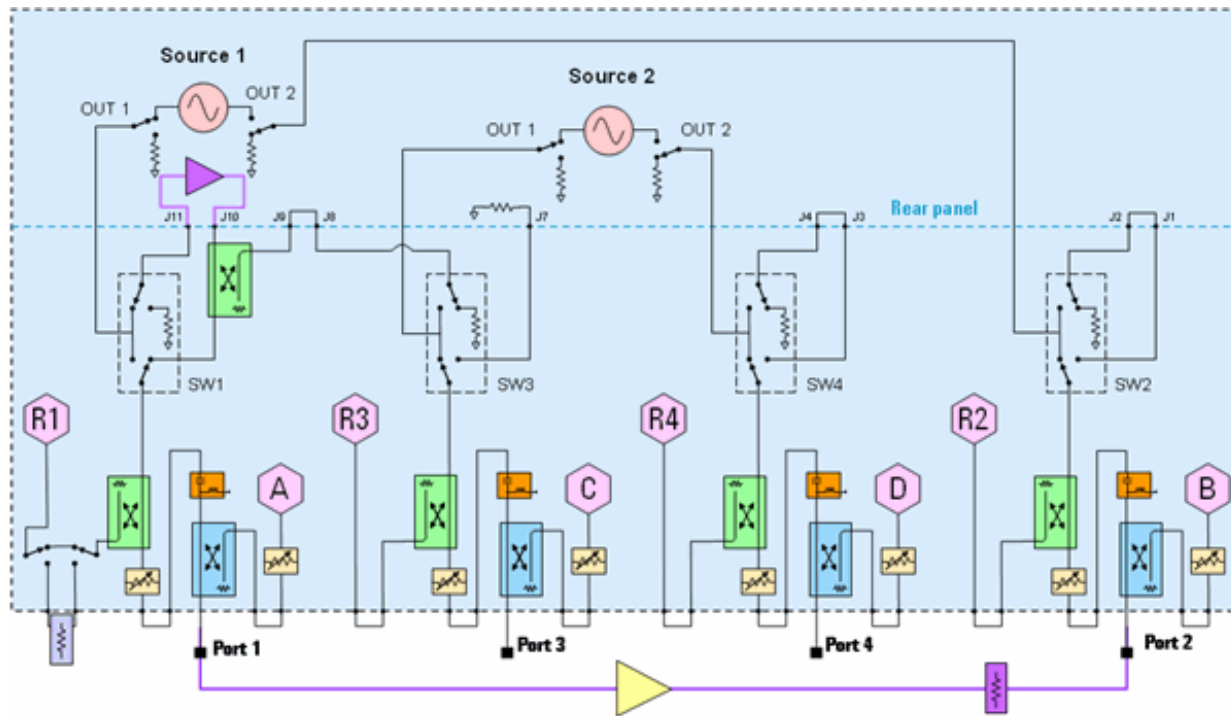

Legend

Color	Component	Damage Level
Green	Bridges	+33 dBm
Blue	Couplers	+43 dBm
Orange	Bias-tees	+30 dBm
Purple	User-supplied pre-amp and high-power attenuator	N/A

Notes

At J11 (rear-panel), max power is 4 dB to 11 dB higher than Source 1 Out at front panel jumper due to loss of the coupler thru arms, bias-tees, and cables.

At J10 max power +33 dBm, which is the damage level of the bridge. With +30 dBm into J10, there will be about +15 dBm at R1, assuming 15 dB coupling factor for the R1 bridge. +15 dBm is the damage level of that receiver. Therefore, it may be necessary to add attenuation in place of the R1 loop, not only to protect the receiver, but to bring it out of compression. The [0.1 dB compression level spec for the R1 receiver](#) is between -3 and -18 dBm, depending on the frequency and option configuration.

At Test Port 2 (DUT output): With the bias-tees (orange), only +30 dBm is allowed into the test port. With Opt H85 (bias-tees removed), +43 dBm is allowed. Add appropriate attenuation to not damage other components.

See Also

- [Front panel jumper specs.](#)
- [RF Path Configurator](#)
- [IF Path Configurator](#)

Last Modified:

10-May-2007 MX New topic

Phase Measurements

Knowledge of both magnitude and phase characteristics is needed for successful higher-level component integration.


- [What are Phase Measurements?](#)
- [Why Measure Phase?](#)
- [Using the Analyzer's Phase Format](#)
- [Types of Phase Measurements](#)

[See other Tutorials](#)

What are Phase Measurements?


Phase measurements are made using S-parameters, just like amplitude measurements. A phase measurement is a relative (ratio) measurement and not an absolute measurement. Phase measurements compare the phase of the signal going into a device (the incident signal) to the phase of the device's response signal. The response signal can be either reflected or transmitted. Assuming an accurate [calibration](#) has been performed, the difference in phase between the two signals (known as phase shift) is a result of the electrical characteristics of the device under test.

The following graphic shows the phase shift (in time or degrees) between an incident signal and a transmitted signal (as might be seen on an oscilloscope display).

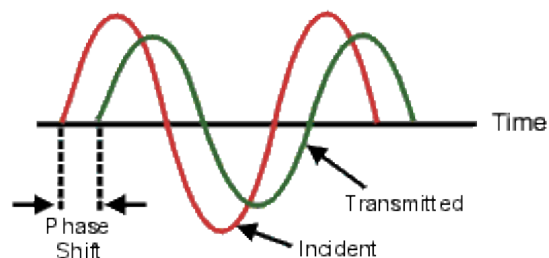

Why Measure Phase?

Measuring [phase](#) is a critical element of network analysis. The following graphic lists five reasons for measuring both magnitude and phase.

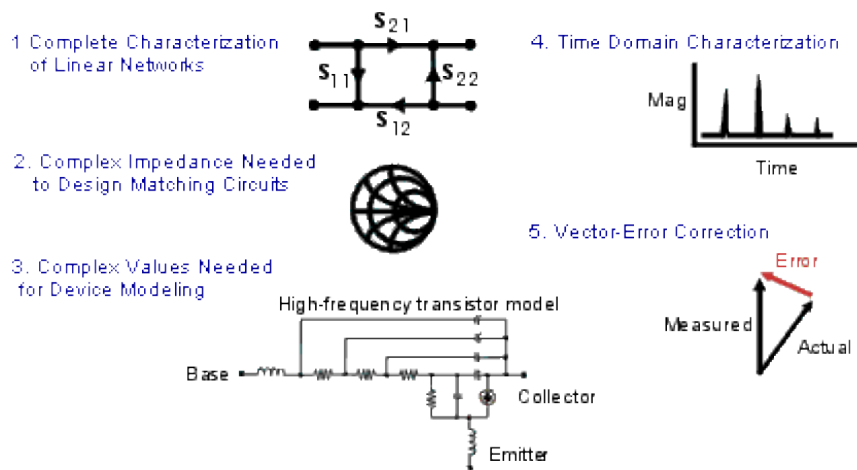


When used in communications systems to pass signals, components or circuits must not cause excessive signal distortion. This distortion can be:

- Linear, where flat magnitude and linear phase shift versus frequency is not maintained over the bandwidth of interest.
- Nonlinear, such as AM-to-PM conversion.

It is important to measure how reflective a component or circuit is, to ensure that it transmits or absorbs energy efficiently. Measuring the complex impedance of an antenna is a good example.

Using the Analyzer's Phase Format

The analyzer's phase format displays a phase-versus-frequency or phase-versus-power measurement. The analyzer does not display more than ± 180 degrees phase difference between the reference and test signals. As the phase value varies between $+180$ degrees and -180 degrees, the analyzer display creates the sawtooth pattern as shown in the following graphic.

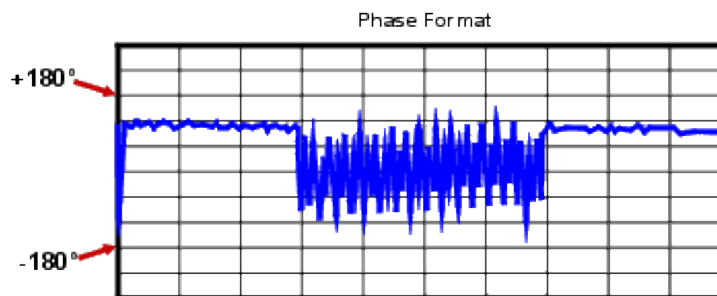

The sawtooth pattern does not always reach $+180$ degrees and -180 degrees. This is because the measurement is made at discrete frequencies, and the data point at $+180$ degrees and -180 degrees may not be measured for the selected sweep.

Types of Phase Measurements

Complex impedance data is information such as resistance, reactance, phase, and magnitude that can be

determined from an S11 or S22 measurement. Complex impedance data can be viewed using either the Smith Chart format or the Polar format.

[AM-to-PM conversion](#) is a measure of the amount of undesired phase deviation (PM) that is caused by amplitude variations (AM) of the system. AM-to-PM conversion is usually defined as the change in output phase for a 1-dB increment in the input power to an amplifier (i.e. at the 1 dB gain compression point). This is expressed in degrees-per-dB (°/dB).

[Deviation from linear phase](#) is a measure of phase distortion caused by a device. Ideally, the phase shift through a device is a linear function of frequency. The amount of variation from this theoretical phase shift is known as its deviation from linear phase (also called phase linearity).

[Group delay](#) is another way to look at phase distortion caused by a device. Group delay is a measure of transit time through a device at a particular frequency. The analyzer computes group delay from the derivative of the measured phase response.

Deviation from Linear Phase Versus Group Delay

Although deviation from linear phase and group delay are similar measurements, they each have their purpose.

The following are the advantages of deviation from linear phase measurements:

- Less noisy than group delay.
- Able to characterize devices that pass phase modulated signals, and show units of phase rather than units of seconds.

The following are the advantages of group delay measurements:

- More easily interpreted indication of phase distortion than deviation from linear phase.
- Able to most accurately characterize a device under test. This is because in determining group delay, the analyzer calculates the slope of the phase ripple, which is dependent on the number of ripples which occur per unit of frequency. Comparing two phase responses with equal peak-to-peak phase ripple, the response with the larger phase slope results in:
 - More group delay variation.
 - More signal distortion.

See also [Comparing the PNA Delay Functions.](#)

Reverse Isolation

Reverse isolation is a measure of amplifier reverse transmission response- from output to input.

- [What is Reverse Isolation](#)
- [Why Measure Reverse Isolation?](#)
- [Accuracy Considerations](#)
- [How to Measure Reverse Isolation](#)

[See other Tutorials](#)

What is Reverse Isolation?

Reverse isolation is a measure of how well a signal applied to the device output is "isolated" from its input.

The measurement of reverse isolation is similar to that of forward gain, except:

- The stimulus signal is applied to the amplifier's output port.
- The response is measured at the amplifier's input port.

The equivalent S-parameter is S_{12} .

Why Measure Reverse Isolation?

An ideal amplifier would have infinite reverse isolation-no signal would be transmitted from the output back to the input. However, reflected signals can pass through the amplifier in the reverse direction. This unwanted reverse transmission can cause the reflected signals to interfere with the desired fundamental signal flowing in the forward direction. Therefore, reverse isolation is important to quantify.

Accuracy Considerations

Since amplifiers often exhibit high loss in the reverse direction, generally there is no need for any [attenuation](#) that may have been used to protect the port 2 receiver during forward transmission measurements. Removing the attenuation will:

- Increase the [dynamic range](#), resulting in improved measurement accuracy.
- Require a new [calibration](#) for maximum accuracy.

The RF source power can be increased to provide more dynamic range and accuracy.

Note: With the attenuation removed and the RF source power increased, a forward sweep could damage the analyzer's port 2 receiver. Do not perform a forward sweep or use 2-port calibration unless the forward power is set low enough to avoid causing port 2 receiver compression or damage.

If the isolation of the amplifier under test is very large, the transmitted signal level may be near the noise floor or crosstalk level of the receiver. To lower the noise floor:


- Use or increase measurement averages.
- Reduce the IF bandwidth of the analyzer.

Note: Reducing IF bandwidth or using averaging improves measurement dynamic range and accuracy, at the expense of reduced measurement speed.

- When crosstalk levels affect the measurement accuracy, reduce the crosstalk error term by performing a response and isolation calibration. When performing the isolation part of the calibration it is important to use the same average factor and IF bandwidth during the calibration and measurement.
- The frequency response of the test setup is the dominant error in a reverse isolation measurement. Performing a thru-response measurement calibration significantly reduces this error. This calibration can be done as part of the response and isolation calibration.
- The amplifier may respond very differently at various temperatures. The tests should be done when the amplifier is at the desired operating temperature.

How to Measure Reverse Isolation

1. Connect the amplifier as shown in the following graphic.

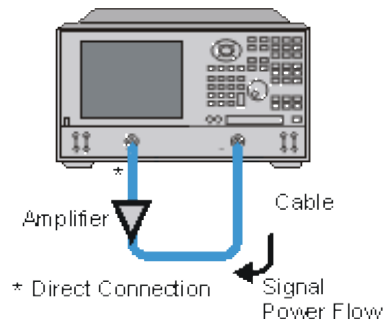

2. Preset the analyzer.
3. Select an S12 measurement.
4. Select the settings for your amplifier under test.
5. Remove the amplifier and perform a thru-response calibration or a response and isolation calibration.
6. Scale the displayed measurement for optimum viewing and use a marker to measure the reverse isolation at a desired frequency.
7. Print or save the data to a disk.

Reflection Measurements


Reflection measurements are an important part of network analysis.

- [What are Reflection Measurements?](#)
- [Why Make Reflection Measurements?](#)
- [Expressing Reflected Waves](#)
 - [Return Loss](#)
 - [VSWR](#)
 - [Reflection Coefficient](#)
 - [Impedance](#)
 - [Summary of Expressions](#)

[See other Tutorials](#)

What are Reflection Measurements?

To understand reflection measurements, it is helpful to think of traveling waves along a transmission line in terms of a lightwave analogy. We can imagine incident light striking some optical component like a clear lens. Some of the light is reflected off the surface of the lens, but most of the light continues on through the lens. If the lens had mirrored surfaces, then most of the light would be reflected and little or none would be transmitted.

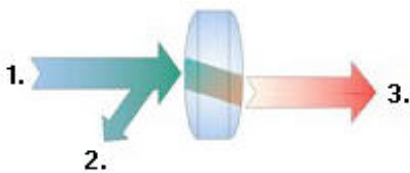

1. Incident 2. Reflected 3. Transmitted


With RF energy, reflections occur when the impedance of two mated devices are not the same. A reflection measurement is the ratio of the reflected signal to the incident signal. Network analyzers measure the incident wave with the R (for reference) channel and the reflected wave with the A channel. Therefore, reflection is often shown as the ratio of A over R (A/R). We can completely quantify the reflection characteristics of our device under test (DUT) with the amplitude and phase information available at both the A and R channel. In S-parameter terminology, S11 is a reflection measurement of port1 of the device (the input port); S22 is a reflection measurement of the port 2 (the output port)

Why Make Reflection Measurements?

One reason we make reflection measurements to assure efficient transfer of RF power. We do this because:

1. RF energy is not cheap. When energy is reflected, that means less energy is transmitted to where it is intended to go.
2. If the reflected energy is large, it can damage components, like amplifiers.

For example, in the following graphic, the radio station on the left is not operating at peak efficiency. The amplifier impedance is not the same as the transmission line, and the transmission line impedance is not the same as the antenna. Both of these conditions cause high reflected power. This condition results in less transmitted power, and the high reflected power could damage the amplifier.

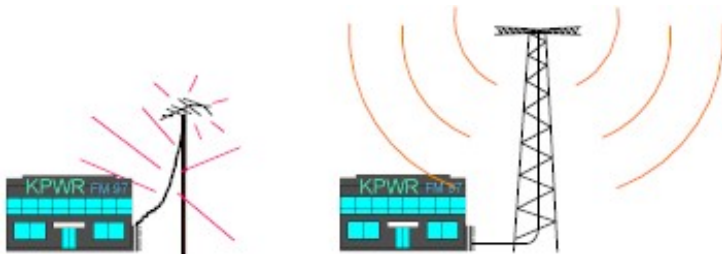

The radio station on the right installed properly "matched" transmission line and antenna. Very little of the transmitted signal is reflected, resulting in increased broadcast power, more listeners, more advertising revenue, and more profit. The amplifier, transmission, and antenna all need to be measured to ensure that reflected power is minimized.

Expressing Reflected Waves

After making a reflection measurement, the reflection data can be expressed in a number of ways, depending on what you are trying to learn. The various expressions are all calculated by the analyzer from the same reflection measurement data. Each method of expressing reflection data can be graphically displayed in one or more formats. For more information, see display formats.

Return Loss

The easiest way to convey reflection data is return loss. Return loss is expressed in dB, and is a scalar (amplitude only) quantity. Return loss can be thought of as the absolute value or dB that the reflected signal is below the incident signal. Return loss varies between infinity for a perfect impedance match and 0 dB for an open or short circuit, or a lossless reactance. For example, using the log magnitude format on the analyzer, the measured reflection value on the screen may be -18dB. The minus sign is ignored when expressing return loss, so the component is said to have 18dB of return loss.

VSWR

Two waves traveling in opposite directions on the same transmission line cause a "standing wave". This condition can be measured in terms of the voltage standing wave ratio (VSWR or SWR for short). VSWR is defined as the maximum reflected voltage over the minimum reflected voltage at a given frequency. VSWR is a scalar (amplitude only) quantity. VSWR varies between one for a perfect match, and infinity for an open or short circuit or lossless reactance.

Reflection Coefficient


Another way of expressing reflection measurements is reflection coefficient gamma (Γ). Gamma includes both

magnitude and phase.


The magnitude portion of gamma is called rho (ρ). Reflection coefficient is the ratio of the reflected signal voltage to the incident signal voltage. The range of possible values for ρ is between zero and one. A transmission line terminated in its characteristic impedance will have all energy transferred to the load; zero energy will be reflected and $\rho = 0$. When a transmission line terminated in a short or open circuit, all energy is reflected and $\rho = 1$. The value of rho is unitless.

Now for the phase information. At high frequencies, where the wavelength of the signal is smaller than the length of conductors, reflections are best thought of as waves moving in the opposite direction of the incident waves. The incident and reflected waves combine to produce a single "standing" wave with voltage that varies with position along the transmission line.


When a transmission line is terminated in its characteristic impedance (Z_0) there is no reflected signal. All of the incident signal is transferred to the load, as shown in the following graphic. There is energy flowing in one direction along the transmission line.

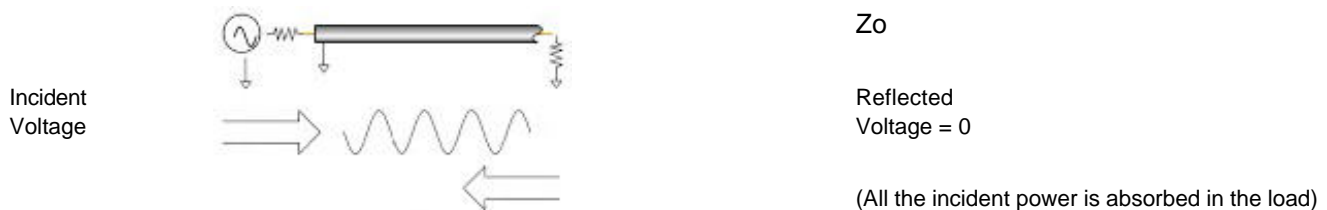


When a transmission line is terminated in a short circuit termination, all of the energy is reflected back to the source. The reflected wave is equal in magnitude to the incident wave ($\rho = 1$). The voltage across any short circuit is zero volts. Therefore, the voltage of the reflected wave will be 180 degrees out of phase with the incident wave, canceling the voltage at the load.

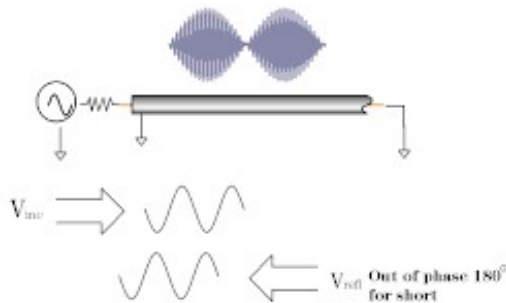

When a transmission line is terminated in an open circuit termination, all of the energy is reflected back to the source. The reflected wave is equal in magnitude to the incident wave ($\rho = 1$). However, no current can flow in an open circuit. Therefore, the voltage of the reflected wave will be in phase with the voltage of the incident wave.

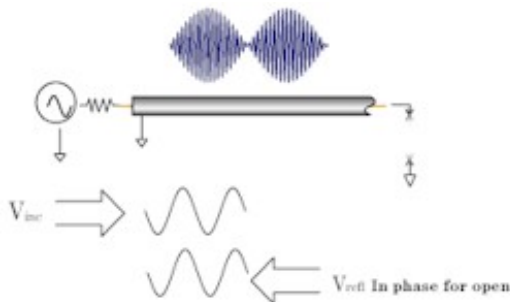

When a transmission line is terminated in a 25 ohm resistor, some but not all of the incident energy will be absorbed, and some will be reflected back towards the source. The reflected wave will have an amplitude 1/3 that of the incident wave and the voltage of the two waves will be out of phase by 180 degrees at the load. The phase relationship will change as a function of distance along the transmission line from the load. The valleys of the standing wave pattern will no longer go to zero, and the peaks will be less than that of the open / short circuit.

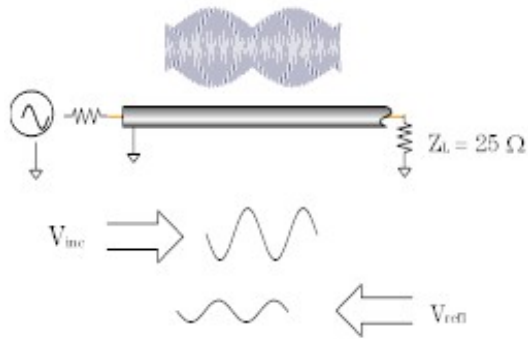


For more information, see [Phase Measurements](#).

Impedance

Impedance is another way of expressing reflection data. For more information on Impedance, see [Smith Charts](#).

Summary of the Expressions of Reflection Measurements:

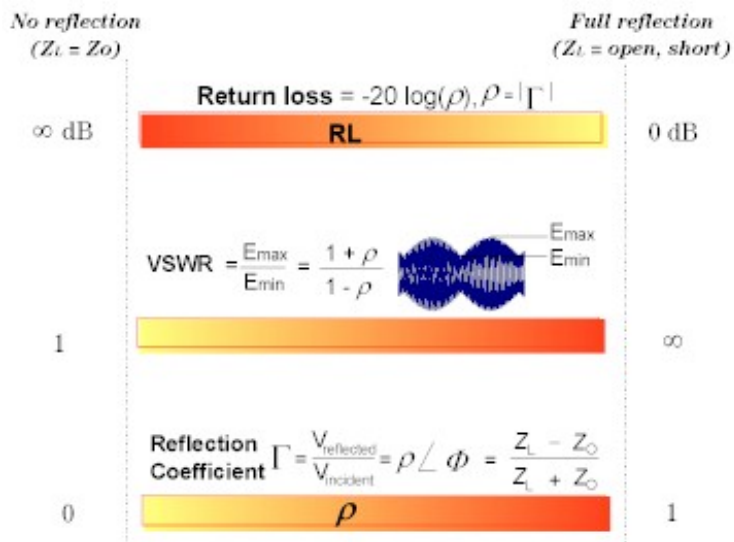

Time Domain

Time Domain allows you to view a device response as a function of time. The following are discussed in this topic:

- [Overview](#)
- [How the PNA Measures in the Time Domain](#)
- [Calibration for Time Domain](#)
- [Transmission Measurements](#)
- [Measurement Response Resolution](#)
- [Measurement Range and Alias Responses](#)
- [How to make Time Domain Settings](#)
- [Gating](#)
- [Window Settings](#)


Note: Time Domain measurements are only available on PNAs with Option 010. See [PNA Options](#)

See the updated **App Note:** [Time Domain Analysis Using a Network Analyzer](#).

Overview

In normal operation, the PNA measures the characteristics of a test device as a function of frequency. With Time Domain (opt 010), the frequency information is used to calculate the inverse Fourier transform and display measurements with time as the horizontal display axis. The response values appear separated in time, allowing a different perspective of the test device's performance and limitations.

The graphic below compares the same cable reflection measurement data in both the frequency and time domain. The cable has two bends. Each bend creates a mismatch or change in the line impedance.

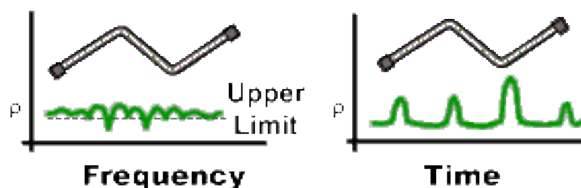


- The frequency domain S11 measurement shows reflections caused by mismatches in the cable. It is impossible to determine where the mismatches physically occur in the cable.
- The time domain response shows both the location and the magnitude of each mismatch. The responses indicate that the second cable bend is the location of a significant mismatch. This mismatch can be [gated out](#), allowing you to view the frequency domain response as if the mismatch were not present. Distance Markers can be used to pinpoint the distance of the mismatch from the reference plane.

How the PNA Measures in the Time Domain

Time domain transform mode simulates traditional Time-Domain Reflectometry (TDR), which launches an impulse or step signal into the test device and displays the reflected energy on the TDR screen. By analyzing the magnitude, duration, and shape of the reflected waveform, you can determine the nature of the impedance variation in the test device.


The PNA does not launch an actual incident impulse or step. Instead, a Fourier Transform algorithm is used to calculate time information from the frequency measurements. The following shows how this occurs.

A single frequency in the time domain appears as a sine wave. In the following graphic, as we add the fundamental frequency (F_0), the first harmonic ($2F_0$), and then the second harmonic ($3F_0$), we can see a pulse taking shape in the Sum waveform. If we were to add more frequency components, the pulse would become sharper and narrower. When the PNA sends discrete frequencies to the test device, it is in effect, sending individual spectral pieces of a pulse separately to stimulate the test device.

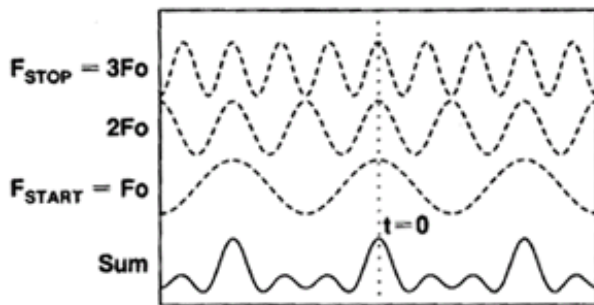


During an S11 reflection measurement, these incident signals reflect from the test device and are measured at the A receiver. This is when the time domain transform calculations are used to add the separate spectral pieces together.

For example, consider a short length of cable terminated with an open. All of the power in the incident signal is reflected, and the reflections are 'in-phase' with the incident signal. Each frequency component is added together, and we see the same pattern as the simulated incident would have looked (above). The magnitude of the reflection is related to the impedance mismatch and the delay is proportional to the distance to the mismatch. The x-axis (time) scale is changed from the above graphic to better show the delay.

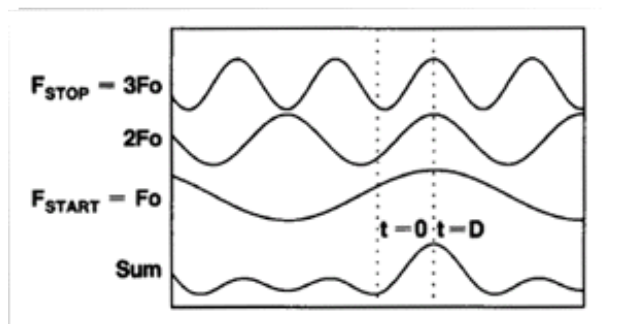

Alternately, the same cable terminated with a short also reflects all of the incident power, but with a phase shift of 180 degrees. As the frequency components from the reflection are added together, the sum appears as a negative impulse delayed in time.

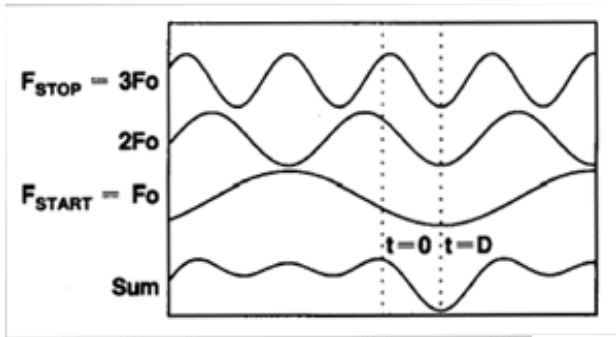

Calibration for Time Domain

For simplicity, we have discussed incident signals reflecting off discontinuities in the test device. By far the most common network analyzer measurement to transform to time domain is a [ratioed](#) S11 measurement. An S11 reflection measurement does not simply display the reflections measured at the A receiver - it displays the ratio (or difference) of the A receiver to the Reference receiver. In addition, the S11 measurement can also be calibrated to remove [systematic errors](#) from the ratioed measurement. This is critical in the time domain as the measurement plane, the point of calibration, becomes zero on the X-axis time scale. All time and distance data is presented in reference to this point. As a result, both magnitude and time data are calibrated and very accurate.

The following shows where the time domain transform occurs in the PNA data flow: (see [Data Access Map](#))


1. Acquire raw receiver (A and R1) data
2. Perform ratio (A/R1)
3. Apply calibration
4. Transform data to time domain
5. Display results

Therefore, although a time domain trace may be displayed, a calibration is always performed and applied to the frequency domain measurement which is not displayed.

Transmission Measurements

The most common type of measurement to transform is an S11 reflection measurement. However, useful information can be gained about a test device from a transformed S21 transmission measurement. The frequency components pass through the test device and are measured at the B receiver. If there is more than one path through the device, they would appear as various pulses separated in time.

For example, the following transmission measurement shows multiple paths of travel within a Surface Acoustic Wave (SAW) filter. The largest pulse (close to zero time) represents the propagation time of the shortest path through the device. It may not be the largest pulse or represent the desired path. Each subsequent pulse represents another possible path from input to output.

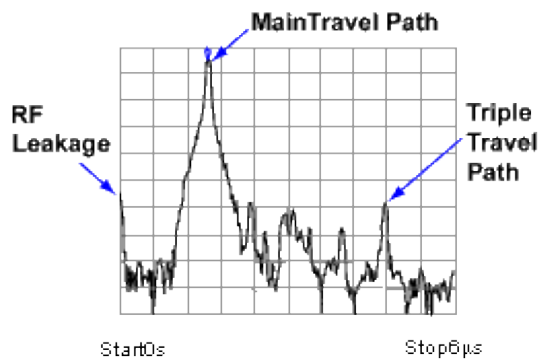


Triple travel is a term used to describe the reflected signal off the output, reflected again off the input, then finally reappearing at the output. This is best seen in a time domain S21 measurement.

Measurement Response Resolution

In the previous paragraphs, we have seen that using more frequency components causes the assembled waveform to show more detail. This is known as measurement response resolution, which is defined as the ability to distinguish between two closely spaced responses.


Note: Adjusting the [transform time settings](#) improves **display** resolution, but not measurement resolution.

The following graphic shows the effect of both a narrow and wide frequency span on the response resolution. The wider frequency span enables the analyzer to resolve the two connectors into separate, distinct responses.

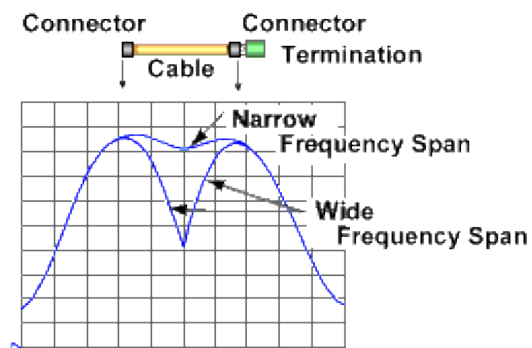

Resolution Formula

For responses of equal amplitude, the response resolution is equal to the 50% (-6 dB) points of the impulse width, or the step rise time which is defined as the 10 to 90% points as shown in the following image.

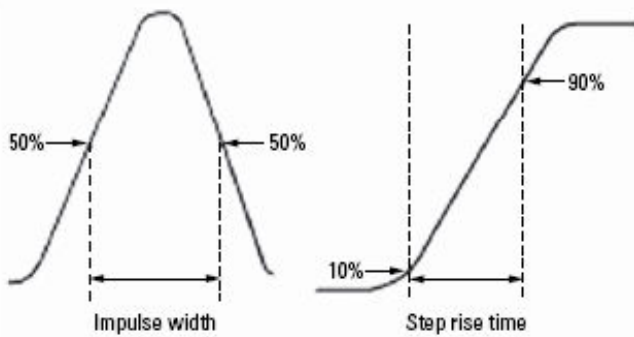

The following table shows the **approximated** relationship between the frequency span and the window selection on response resolution for responses of equal amplitude.

Window	Low-pass step (10% to 90%)	Low-pass impulse (50%)	Bandpass impulse
Minimum	0.45 / f span	0.60 / f span	1.20 / f span
Normal	0.99 / f span	0.98 / f span	1.95 / f span
Maximum	1.48 / f span	1.39 / f span	2.77 / f span

For example, using a 10 GHz wide frequency span and a normal window in Bandpass impulse mode, response resolution (in time) equals:

- Time Res = 1.95 / frequency span
- Time Res = 1.95 / 10 GHz
- Time Res = 195 ps

To calculate the physical separation (in distance) of the responses which can be resolved, multiply this value times the speed of light (c) and the relative velocity (Vf) of propagation in the actual transmission medium. In this case, Vf = 0.66 for polyethylene dielectric.

- Distance Res = 195 ps x c x Vf
- Distance Res = 195 ps x (2.997925 E8 m/s) x .66
- Distance Res = 38 mm

For reflection measurements, because of the 2-way travel time involved, this means that the minimum resolvable separation between discontinuities is half of this value or 19 mm.

Although a wider frequency span causes better measurement resolution, the [measurement range](#) becomes limited. Also, increasing the frequency range can cause a measurement calibration to become invalid. Be sure to adjust the frequency span BEFORE performing a calibration.

Measurement Range and Alias Responses

Measurement range is the length in time in which true time domain responses can be seen. The measurement range should be large enough to see the entire test device response without encountering a repetition (alias) of the response. An alias response can hide a true time domain response.

To increase measurement range in both modes, change either of these settings:

- Increase the number of points
- Decrease the frequency span


Notes:

- After making these settings, you may need to adjust the [transform time settings](#) to see the new measurement range.
- Decreasing the frequency span degrades [measurement resolution](#).
- Make frequency span and number of points settings BEFORE calibrating.
- Maximum range also depends on loss through the test device. If the returning signal is too small to measure, the range is limited regardless of the frequency span.

Alias Responses

An alias response is not a true device response. An alias response repeats because each time domain waveform has many periods and repeats with time (see [How the PNA Measures in the Time Domain](#)). Alias responses occur at time intervals that are equal to $1/\text{frequency}$ step size.

The PNA adjusts the [transform time settings](#) so that you should only see one alias free range on either side (positive and negative) of zero time. However, these settings are updated only when one of the toolbar settings are changed.

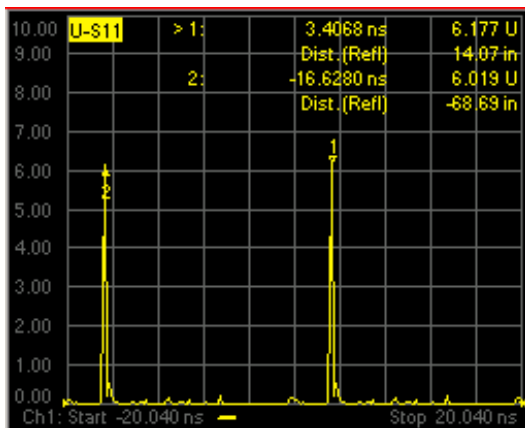

To determine if a response is true, put a marker on the response and change the frequency span. A true device response will not move in time. An alias response will move.

For example, in the above graphic, the marker 1 response occurs at 14.07 inches. When the frequency span is changed, this response remains at 14.07 inches. The marker 2 response moves.

Range Formula

You can calculate the alias-free measurement range (in meters) of the PNA using the following formula for **TDR** (reflection) measurements:

Range (meters) = (1/ f) x Vf x c

Where:

- f = frequency step size (frequency span/number of points-1)
- Vf = the velocity factor in the transmission line
- c = speed of light = 2.997925 E8 m/s

For example: For a measurement with 401 points and a span of 2.5 GHz, using a polyethylene cable (Vf = 0.66)


- Range = (1 / (2.5E9 / 400)) x 2.997925 E8 m/s x 0.66
- Range = 6.25E6 x 2.997925 E8 m/s x 0.66
- Range = 32 meters

In this example, the range is 32 meters in physical length. To prevent the time domain responses from overlapping or aliasing, the test device must be 32 meters or less in physical length for a transmission measurement.



To calculate the one-way distance for a reflection measurement rather than round-trip distance, simply divide the length by 2. In this case, the alias-free range would be 16 meters.

How to make Time Domain Settings


The following launches the [Time Domain toolbar](#)

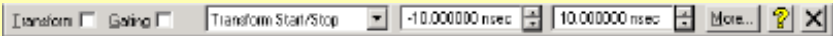

On the toolbar, click **More...** to launch the Time Domain dialog box

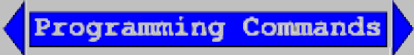Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Trace 2. then Transform
For PNA-X models	
1. Press ANALYSIS 2. then [Transform] 3. then [More]	1. Click Marker/Analysis 2. then Transform

4. then [Transform Tool]

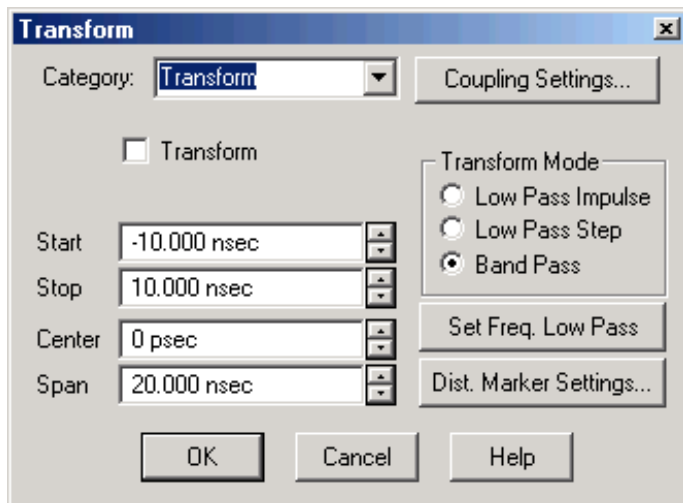

Transform dialog box help

Category Select Transform, Window, or Gating

Transform Turns time domain transform ON and OFF.

Coupling Settings Launches the [Trace Coupling Settings](#) dialog box.

Time Settings

The following settings adjust the **display resolution**, allowing you to zoom IN or OUT on a response. They do NOT adjust [measurement range](#) or [measurement resolution](#).

These settings automatically update (when one of these values are updated) to limit the display to one [alias-free response](#) on either side of zero time.

Start Sets the transform start time that is displayed on the PNA screen.

Note: Zero (0) seconds is always the [measurement reference plane](#). Negative values are useful if moving the reference plane.

Stop Sets the transform stop time that is displayed on the PNA screen.

Center Sets the transform center time that is displayed in the center of the PNA screen.













Span Sets the transform span time that is split on either side of the Center value.

Transform Mode

Transform modes are three variations on how the time domain transform algorithm is applied to the frequency domain measurement. Each method has a unique application.

Mode	Benefit - application	Limitation
Low pass Impulse	Highest resolution. Most useful for seeing small responses in devices that pass low frequencies, such as cables.	In both Low pass modes, frequencies down to DC and negative frequencies are extrapolated. Therefore, the Start frequency is adjusted when you click Set Freq.Low Pass Because this will affect calibration accuracy, be sure to calibrate AFTER completely setting up your time domain measurement.
Low pass Step	Easiest to identify inductive and capacitive discontinuities in devices that pass low frequencies, such as cables.	
Band pass Impulse	Easiest method - can be used with any frequency sweep. Most useful for measuring band limited devices such as filters and DC blocked cables.	Does NOT show capacitive and inductive reactance For the same frequency span and number of points, band pass mode has twice the impulse width, which hides closely spaced responses degrading the response resolution.

The following chart shows how to interpret results from various discontinuity impedances using Low pass Step and either Low pass or Band pass Impulse modes.

IMPEDANCE	STEP RESPONSE	IMPULSE RESPONSE
OPEN	 Unity Reflection	 Unity Reflection
SHORT	 Unity Reflection = 180	 Unity Reflection = 180
RESISTOR $R > Z_0$		
RESISTOR $R < Z_0$		
INDUCTOR		
CAPACITOR		

Effect on Measurement Range

Band pass mode - measurement range is inversely proportional to frequency step size.

Low pass mode - measurement range is inversely proportional to the fundamental (start) frequency AFTER clicking Set Freq. Low Pass.

Set Freq. Low Pass USE ONLY IN LOW PASS MODES

Recomputes the start frequency and step frequencies to be harmonics of the start frequency. Start frequency is computed by the following formula: **Low Pass Start Frequency = Stop Frequency / Number of points.**

The computed value must always be greater than or equal to the analyzer's minimum frequency.

Note: The number of points or stop frequency may be changed in order to compute this value.

Distance Marker Settings Launches the [Distance Marker Settings](#) dialog box.

Gating

Perhaps the most beneficial feature of time domain transform is the Gating function. When viewing the time domain response of a device, the gating function can be used to "virtually" remove undesired responses. You can then simultaneously view a frequency domain trace as if the undesired response did not exist.. This allows you to characterize devices without the effects of external devices such as connectors or adapters.

Note: When a discontinuity in a test device reflects energy, that energy will not reach subsequent discontinuities. This can "**MASK**", or hide, the true response which would have occurred if the previous discontinuity were not present. The PNA Gating feature does NOT compensate for this.

The following measurements images show a practical example how to use and perform gating. The test device is a 10inch cable, then a 6 dB attenuator, terminated with a short. The following four discontinuities are evident in window 2, from left to right:

1. A discontinuity in the test system cable which appeared after calibration. It is identified by marker 2 at -10.74 inches (behind the reference plane).
2. A discontinuity in the 10 inch device cable shortly after the reference plane.
3. The largest discontinuity is the attenuator and short shown by marker 1 at -12.67 dB (6 dB loss in both forward and reverse direction).
4. The last discontinuity is a re-reflection from the device cable.


We will gate IN the attenuator response. All other responses will be gated OUT.

Window 1. Create original S11 frequency domain trace. Shows ripple from all of the reflections.


Window 2. Create a new S11 trace - same channel; new window. Turn Transform ON.

Window 3. On the transformed trace, turn gating ON. Center the gate on the large discontinuity (2.500ns). Adjust gate span to completely cover the discontinuity. Select Bandpass gating type.

Window 4. On the original frequency measurement, turn Gating ON (Transform remains OFF). View the measurement without the effects of the two unwanted discontinuities. The blue trace is a measurement of the 6 dB attenuator with the unwanted discontinuities PHYSICALLY removed. The difference between the two traces in window 4 is the effect of "[masking](#)".

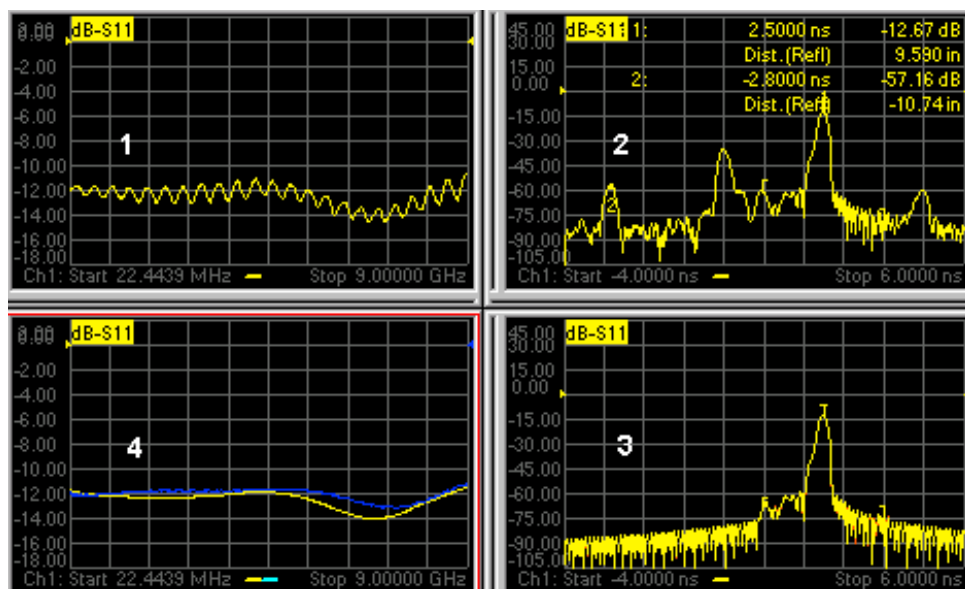

[Learn how to launch the Transform dialog box](#)

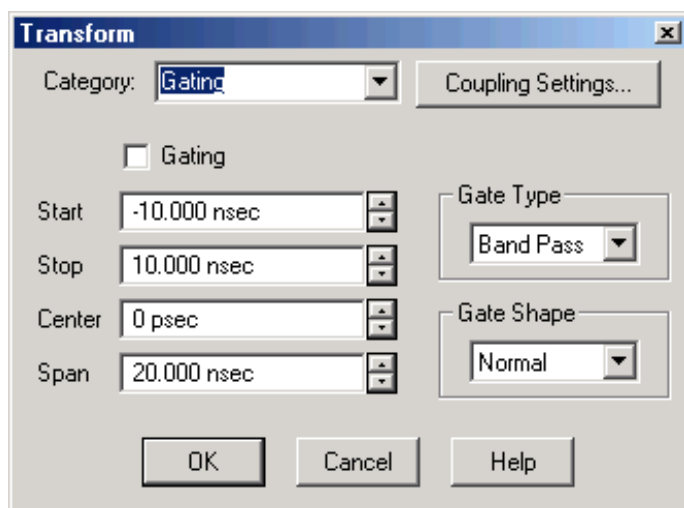

Transform Gating dialog box help

Programming Commands

Gating Turns Gating ON and OFF.

Coupling Settings Launches the [Setup Trace Coupling](#) dialog box.

Start Specifies the start time for the gate.

Stop Specifies the stop time for the gate.

Center Specifies the value at the center of the area that is affected by the gating function. This value can be anywhere in the analyzer range.


Span Specifies the range to either side of the center value of area that is affected by the gating function.

Gate Type Defines the type of filtering that will be performed for the gating function. The gate start and stop

flags on the display point toward the part of the trace you want to keep.

- **Bandpass** - KEEPS the responses within the gate span.
- **Notch** - REMOVES the responses with the gate span.

Gate Shape Defines the filter characteristics of the gate function. Choose from Minimum, Normal, Wide, Maximum

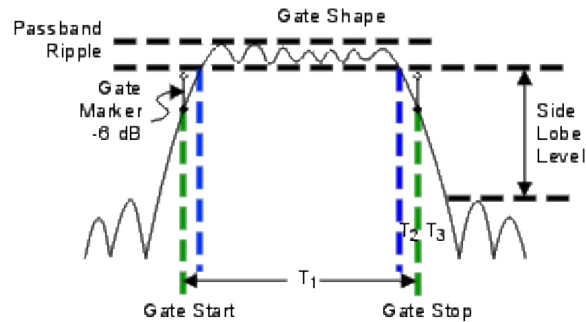

Gate Shape	Passband Ripple	Sidelobe Levels	Cutoff Time	Minimum Gate Span
Minimum	± 0.1 dB	-48 dB	$1.4/\text{Freq Span}$	$2.8/\text{Freq Span}$
Normal	± 0.1 dB	-68 dB	$2.8/\text{Freq Span}$	$5.6/\text{Freq Span}$
Wide	± 0.1 dB	-57 dB	$4.4/\text{Freq Span}$	$8.8/\text{Freq Span}$
Maximum	± 0.01 dB	-70 dB	$12.7/\text{Freq Span}$	$25.4/\text{Freq Span}$

Cutoff time -- is the time between the stop time (-6 dB on the filter skirt) and the peak of the first sidelobe. The diagram below shows the overall gate shape and lists the characteristics for each gate shape.

- T_1 is the gate span, which is equal to the stop time minus the start time.
- T_2 is the time between the edge of the passband and the 6 dB point, representing the cutoff rate of the filter.
- T_3 is the time between the 6 dB point and the edge of the gate stopband.
- For all filter shapes T_2 is equal to T_3 , and the filter is the same on both sides of the center time.

Minimum gate span -- is twice the cutoff time. Each gate shape has a minimum recommended gate span for proper operation. This is a consequence of the finite cutoff rate of the gate. If you specify a gate span that is smaller than the minimum span, the response will show the following effects:


- distorted gate shape that has no passband
- distorted shape
- incorrect indications of start and stop times

- may have increased sidelobe levels


Window Settings

There are abrupt transitions in a frequency domain measurement at the start and stop frequencies, causing overshoot and ringing in a time domain response. The window feature is helpful in lessening the abruptness of the frequency domain transitions. This causes you to make a tradeoff in the time domain response. Choose between the following:

- **Minimum Window = Better Response Resolution** - the ability resolve between two closely spaced responses.
- **Maximum Window = Dynamic Range** - the ability to measure low-level responses.

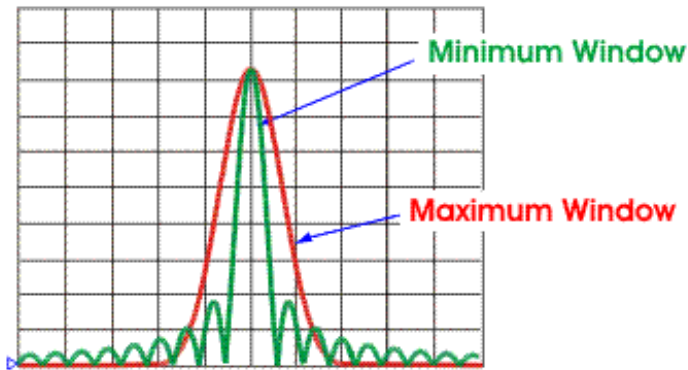

[Learn how to launch the Transform dialog box](#)

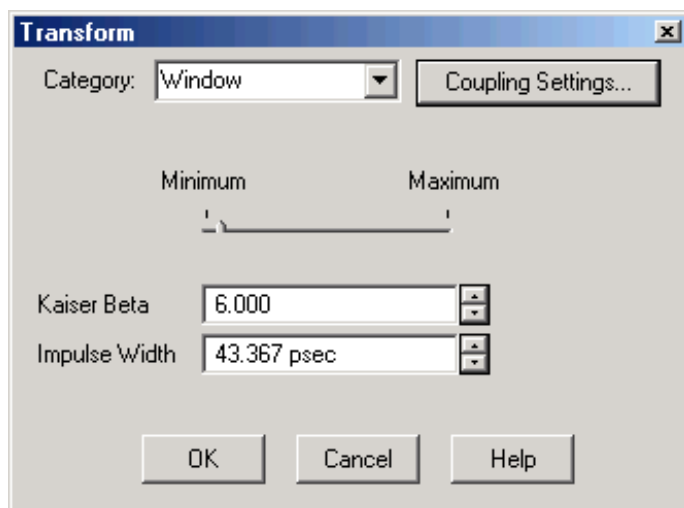

Transform - Window dialog box help

◀ Programming Commands ▶

Coupling Settings Launches the [Setup Trace Coupling](#) dialog box.

The window settings balance response resolution versus dynamic range.

- Minimum Window = Best Response Resolution
- Maximum Window = Best Dynamic Range

The following three methods all the set window size. For best results, view the time domain response while making these settings.

- **Minimum - Maximum** Move the slider with a mouse to change the window size
- **Kaiser Beta** Changes window size using a Kaiser Beta value
- **Impulse Width** Changes window size using an Impulse Width value

Learn more about [Windowing](#) (top)


How to make Trace Coupling Settings

You can launch the **Trace Coupling Settings** dialog box from any of the following dialog boxes:

- [Transform](#)
- [Gating](#)
- [Window](#)

◀ Programming Commands ▶

Learn more about using the [front panel interface](#)

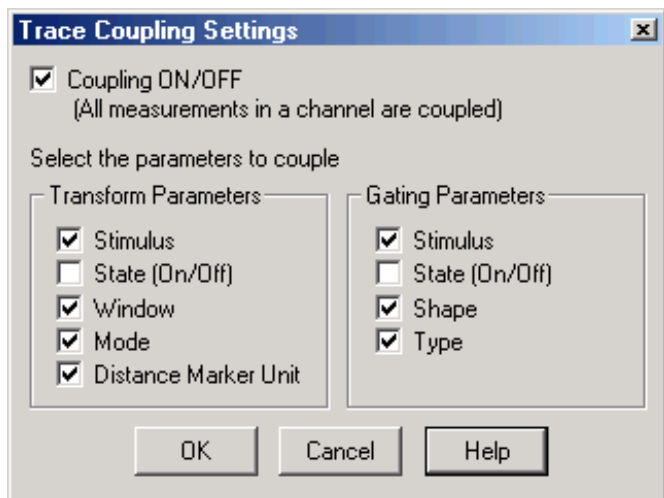

Trace Coupling Settings dialog box help

Trace coupling allows you to change time domain parameters on a measurement, and have the same changes occur for all other measurements in the channel.

For example:

If you are simultaneously viewing a frequency domain measurement and time domain measurement, and **Coupling** is enabled in this dialog box, and ALL **Gating Parameters** are checked in this dialog box, and on the time domain measurement you change the **Gate Span** parameter,

Then the frequency domain measurement will automatically change to reflect the time domain gated span.

Coupling ON/OFF Check to enable coupling. All of the measurements in the active channel are coupled.

The following parameters are available for coupling:

Transform Parameters

Stimulus Start, Stop, Center, and Span TIME settings.

State (On/Off) Transform ON and OFF

[Window](#) Kaiser Beta / Impulse Width

[Mode](#) Low Pass Impulse, Low Pass Step, Band Pass


Gating Parameters

Stimulus Start, Stop, Center, and Span TIME settings.

State (On/Off) Gating ON and OFF

[Shape](#) Minimum, Normal, Wide, and Maximum

[Type](#) Bandpass and Notch

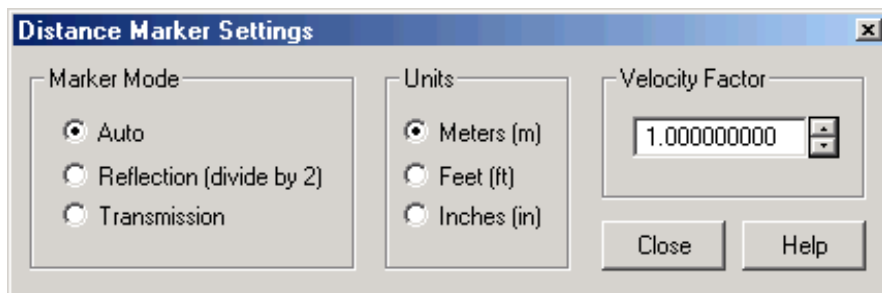

Distance Marker Settings dialog box help

Programming Commands

To launch this dialog box, click **Dist. Marker Settings** on the [Transform](#) dialog box.

When markers are present on a time domain measurement, distance is automatically displayed on the marker readout, [marker table](#), and [print copy](#). To learn how to create markers on your measurement see [marker settings](#).

This dialog box allows you to customize the time domain distance marker readings.

These settings affect the display of ALL markers for only the ACTIVE measurement (unless **Distance Marker Unit** is coupled on the [Trace Coupling dialog box](#).

Marker Mode Specifies the measurement type in order to determine the correct marker distance.

- Select **Auto** for [S-Parameter](#) measurements.
- Select **Reflection** or **Transmission** for [arbitrary ratio](#) or [unratioed](#) measurements.

Auto If the active measurement is an S-Parameter, automatically chooses reflection or transmission. If the active measurement is a non S-Parameter, reflection is chosen.

Reflection Displays the distance from the source to the receiver and back divided by two (to compensate for the return trip.)

Transmission Displays the distance from the source to the receiver.

Units Specifies the unit of measure for the display of marker distance values.


Velocity Factor Specifies the velocity factor that applies to the medium of the device that was inserted after the measurement calibration. The value for a polyethylene dielectric cable is 0.66 and 0.7 for PTFE dielectric. 1.0 corresponds to the speed of light in a vacuum. This is useful in Time Domain for accurate display of time and distance markers.


This setting can also be made from the [Electrical Delay](#) and [Port Extensions](#) dialog boxes.

Last Modified:

11-Sep-2007 Edits to resolution and rage formulas

PNA Object Model

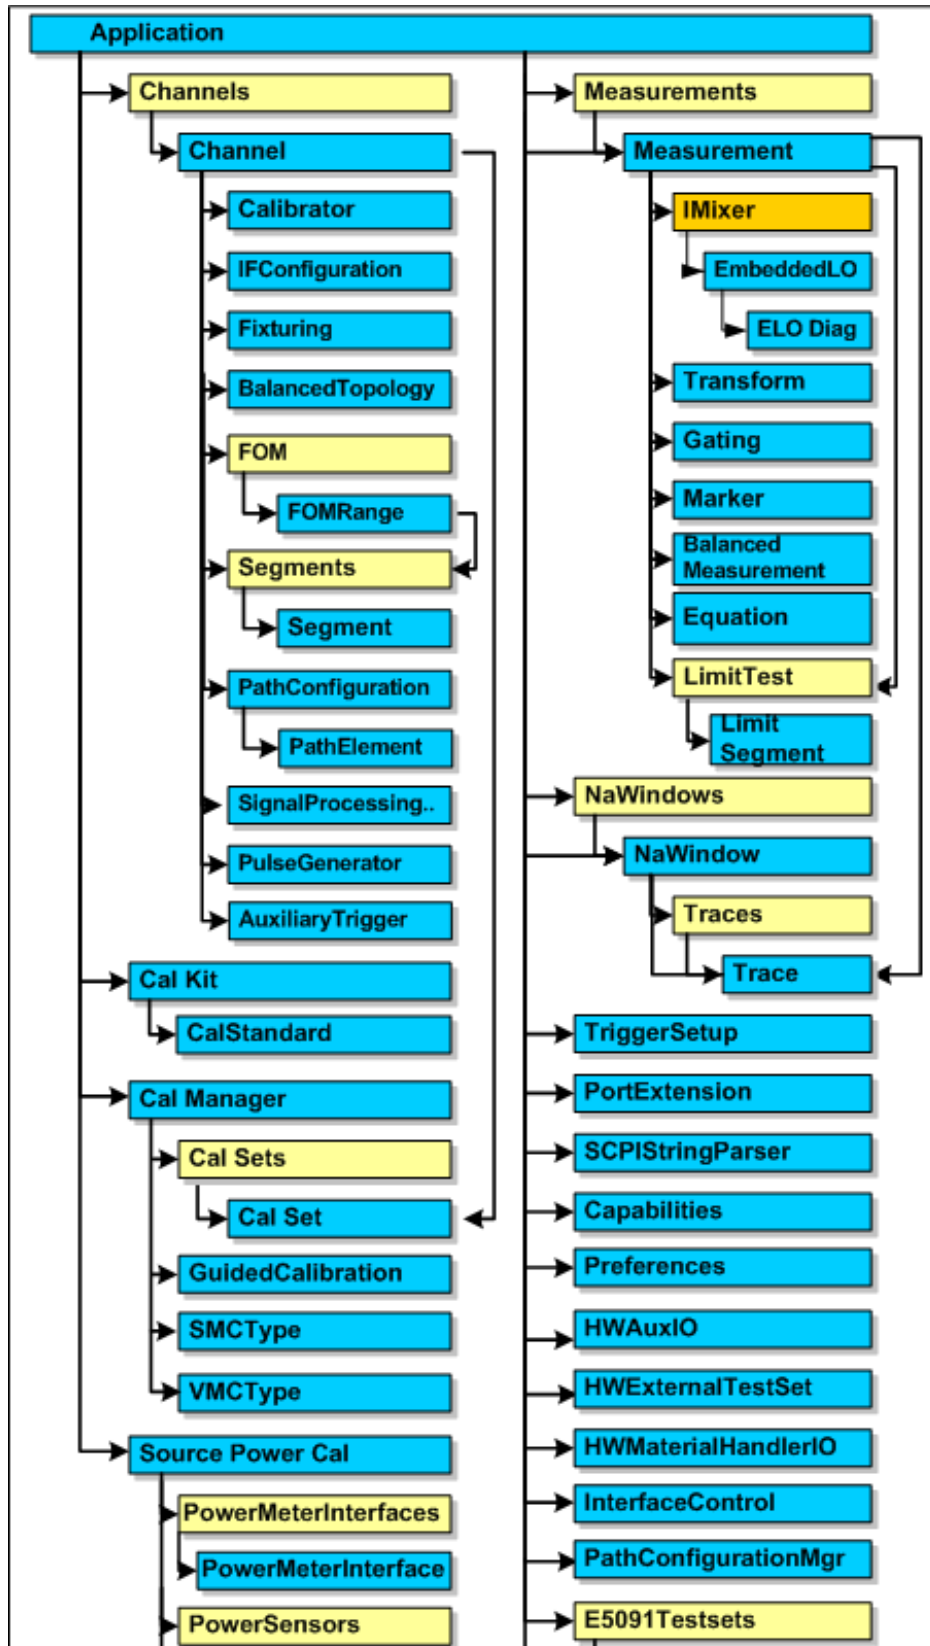

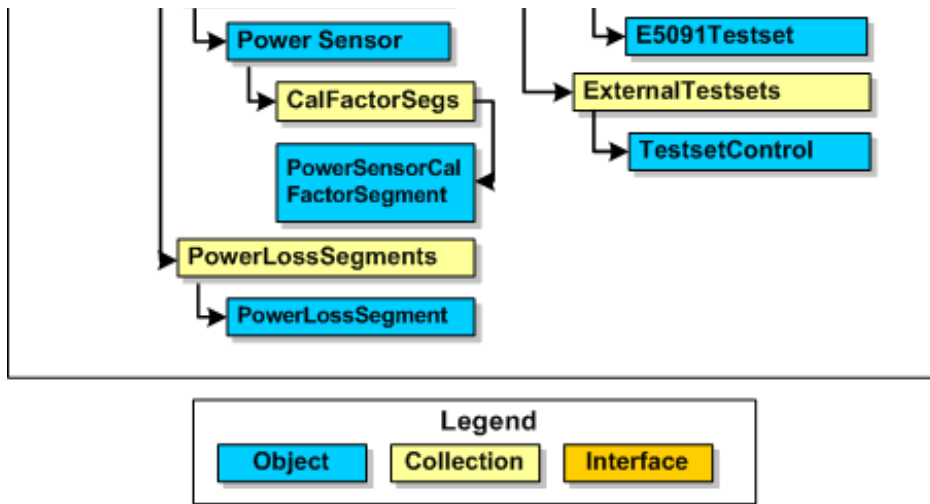

See Also

- [Example Programs](#)
- See a list of [Superseded / Replacement Commands](#).

Last Modified:

9-Jul-2007 Updated for PowerMeterInterface objects

Application Object

Description

The Application object is the highest object in the PNA [object model](#). This object presents methods and properties that affect the entire analyzer, rather than a specific channel or measurement. For example, the application object provides the GetIDString method. There's only one ID string for the instrument, unrelated to the channel or parameter being measured. Likewise, the TriggerSignal Property is global to the instrument. You can elect to use an internally generated (free run) trigger or a manual trigger. Either way, that type of trigger generation will be used on all measurements, on all channels. Therefore, it is under the Application object.

Accessing the Application object

This object is unique in that you must **create** this object rather than just get a handle to it.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)
```

Replace <analyzerName> with the full computer name of your PNA. For example, "My PNA". See [Change Computer Name](#).

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Getting a Handle to an Object](#)
- [Example Programs](#)
- [Superseded commands](#)

(**Bold** Methods or Properties provide access to a child object)

Methods	Interface	Description
	See History	
ActivateWindow	IApplication	Makes a window object the Active Window.
AllowAllEvents	IApplication	Monitors all events
AllowEventCategory	IApplication	Monitors an event category
AllowEventMessage	IApplication	Monitors an event
AllowEventSeverity	IApplication	Monitors an event severity level
BuildHybridKit	IApplication	Defines the user kit as port1kit + port2kit.
Channel	IApplication	Stimulus values like frequency, power, IF bandwidth, and number of points.

CreateCustomMeasurementEx	IAApplication3	Creates a new custom measurement with initialization.
CreateCustomMeasurement	IAApplication	Superseded with CreateCustomMeasurementEx Method
CreateMeasurement	IAApplication	Creates a new measurement.
CreateSParameter	IAApplication	Superseded with Create SParameterEX Method
CreateSParameterEx	IAApplication	Creates a new S-Parameter measurement with a 3-port load.
DeleteShortCut	IAApplication	Removes a macro (shortcut) from the list of macros
DisallowAllEvents	IAApplication	Monitors NO events
DoPrint	IAApplication	Prints the screen to the active Printer.
ExecuteShortcut	IAApplication	Executes a macro (shortcut) stored in the analyzer.
GetAuxIO	IAApplication	Returns a handle to the AuxIO interface
GetCalManager	IAApplication	Returns a handle to the CalManager interface
GetExternalTestSetIO	IAApplication	Returns a handle to the ExternalTestSet IO interface
GetMaterialHandlerIO	IAApplication	Returns a handle to the MaterialHandlerIO interface
GetShortcut	IAApplication	Returns the title and path of the specified macro (shortcut).
LaunchCalWizard	IAApplication	Launches the Cal Wizard
LaunchDialog	IAApplication10	Launches the specified dialog box.
ManualTrigger	IAApplication	Triggers the analyzer when TriggerSignal = naTriggerManual.
Preset	IAApplication	Resets the analyzer to factory defined default settings.
PrintToFile	IAApplication	Saves the screen data to bitmap (.bmp) file of the screen.
PutShortcut	IAApplication	Puts a Macro (shortcut) file into the analyzer.
Quit	IAApplication	Ends the Network Analyzer application.
Recall	IAApplication	Recalls a measurement state, calibration state, or both from the hard drive into the analyzer.
RecallKits	IAApplication	Recalls the calibration kits definitions that were stored with the SaveKits command.
Reset	IAApplication	Removes all existing windows and measurements.
RestoreCalKitDefaults	IAApplication	Restores the factory defaults for the specified kit.

RestoreCalKitDefaultsAll	IApplication	Restores the factory defaults for all kits.
Save	IApplication	Saves files to disk
SaveCitiDataData	IApplication5	Saves UNFORMATTED trace data to .cti file.
SaveCitiFormattedData	IApplication5	Saves FORMATTED trace data to .cti file.
SaveKits	IApplication	Saves all cal kits to disk.
SetFailOnOverRange	IApplication	Causes over range values to return an error code
ShowStatusBar	IApplication	Shows and Hides the Status Bar.
ShowStimulus	IApplication	Shows and Hides Stimulus information.
ShowTitleBars	IApplication	Shows and Hides the Title Bars.
ShowToolBar	IApplication	Shows and Hides the specified Toolbar.
UserPreset	IApplication7	Performs a User Preset.
UserPresetLoadFile	IApplication7	Loads an existing instrument state file (.sta or .cst) to be used for User Preset.
UserPresetSaveState	IApplication7	Saves the current instrument settings as UserPreset.sta.

Properties

Description

ActiveCalKit	IApplication	Returns a pointer to the kit identified by kitNumber.
ActiveChannel	IApplication	Returns a handle to the Active Channel object.
ActiveMeasurement	IApplication	Returns a handle to the Active Measurement object.
ActiveNAWindow	IApplication	Returns a handle to the Active Window object.
ArrangeWindows	IApplication	Sets or returns the arrangement of all the windows.
AuxiliaryTriggerCount	IApplication11	Returns the number of Aux trigger input / output connector pairs in the instrument.
CalKitType	IApplication	Sets or returns the calibration kit type for to be used for calibration or for kit modification. Shared with the CalKit object.
Capabilities	IApplication4	Return capabilities of the remote PNA.
Channels	IApplication	Collection for iterating through the channels

CoupledMarkers	IApplication	Sets (or reads) coupled markers ON and OFF
DisplayAutomationErrors	IApplication2	Enables or disables automation error messages from being displayed on the screen. U
DisplayGlobalPassFail	IApplication6	Shows or hides the dialog which displays global pass/fail results.
E5091Testsets	IApplication8	Collection to control the E5091A testset.
ExternalALC	IApplication	Sets or returns the source of the analyzer leveling control.
ExternalTestsets Collection	IApplication9	Collection to control External Test sets.
GPIBAddress	IApplication8	Sets and returns the PNA GPIB address.
GPIBMode	IApplication	Makes the analyzer the system controller or a talker/listener.
IDString	IApplication	Returns the model, serial number and software revision of the analyzer
InterfaceControl	IApplication8	Control the Interface control features.
LocalLockoutState	IApplication4	Prevents use of the mouse, keyboard, and front panel while your program is running.
Measurements	IApplication	Collection for iterating through the Application measurements.
MessageText	IApplication	Returns text for the specified eventID
NaWindows	IApplication	Collection for iterating through the Application windows.
NumberOfPorts	IApplication	Returns the number of hardware source ports on the PNA
Options	IApplication	Returns the options on the analyzer
PathConfigurationManager	IApplication11	Provides access to hardware configuration.
Port Extensions	IApplication	Superseded with Fixturing Object
Preferences	IApplication5	Preferences for saving citifiles.
ScpiStringParser	IApplication	Provides the ability to send a SCPI command from within the COM command.
SecurityLevel	IApplication4	Turns ON or OFF the display of frequency information.
SICL	IApplication5	Allows control of the PNA via SICL

SICLAddress	IAApplication8	Sets and returns the PNA SICL address
SourcePowerCalibrator	IAApplication2	Allows capability for performing source power calibrations.
SourcePowerState	IAApplication	Turns Source Power ON and OFF.
SystemImpedanceZ0	IAApplication	Sets the analyzer impedance value.
SystemName	IAApplication	Returns the full computer name of the PNA.
Touchscreen	IAApplication12	Enables and disables touchscreen.
TriggerDelay	IAApplication	Sets or returns the delay time for a trigger.
TriggerSetup	IAApplication4	Controls triggering for the entire PNA application.
TriggerSignal	IAApplication	Superseded with Source Property
TriggerType	IAApplication	Superseded with Scope Property
UserPresetEnable	IAApplication7	'Checks' and 'clears' the enable box on the User Preset dialog box.
VelocityFactor	IAApplication	Sets the velocity factor to be used with Electrical Delay, Port Extensions, and Time Domain marker distance calculations.
Visible	IAApplication	Makes the Network Analyzer application visible or not visible.
WindowState	IAApplication	Sets or returns the window setting of Maximized, Minimized, or Normal. Shared with the NAWindow Object

Events	Interface	Description
OnCalEvent	IAApplication	Triggered by a calibration event.
OnChannelEvent	IAApplication	Triggered by a channel event.
OnDisplayEvent	IAApplication	Triggered by a display event.
OnHardwareEvent	IAApplication	Triggered by a hardware event.
OnMeasurementEvent	IAApplication	Triggered by a measurement event.
OnSCPIEvent	IAApplication	Triggered by a SCPI event.
OnSystemEvent	IAApplication	Triggered by a system event.
OnUserEvent	IAApplication	For future use

IApplication History

Interface	Introduced with PNA Rev:
IApplication	1.0
IApplication2	3.0
IApplication3	3.2
IApplication4	3.5
IApplication5	4.0
IApplication6	5.0
IApplication7	5.0
IApplication8	5.2
IApplication9	6.0
IApplication10	7.20
IApplication11	7.20
IApplication12	7.21

Last Modified:

17-Oct-2007 Updated IPathConfigMgr Prop

AuxTrigger Object

Description

These properties setup Auxiliary triggering on a channel.

Accessing the object

Use `chan.AuxTrigger (n)` to access the object.
where **n**= the connector pair to be used for Auxiliary Triggering.

- N5242A models: Use **1** or **2**
- All other PNA models: Use **1**

Use [app.AuxiliaryTriggerCount](#) to determine the number of auxiliary Trigger pairs on the back of a PNA.

```
Dim app as AgilentPNA835x.Application
Dim chan as Channel
Set chan = app.ActiveChannel
Dim AuxTrig as AuxTrigger
Set AuxTrig = chan.AuxTrigger(2)
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Triggering in the PNA](#)
- [Example Programs](#)

Methods	Interface	Description
	See History (below)	

None

Properties		Description
Delay	IAuxTrigger	Specifies the delay that should be applied by the PNA after the Aux trigger input is received and before the acquisition is made
Enable	IAuxTrigger	Turns ON / OFF the trigger output.

HandshakeEnable	IAuxTrigger	Turns handshake ON / OFF.
Number	IAuxTrigger	Reads the number of the Aux I/O pair being used.
TriggerInPolarity	IAuxTrigger	Specifies the polarity of the trigger IN signal to which the PNA will respond.
TriggerInType	IAuxTrigger	Specifies the type of Aux trigger input being supplied to the PNA
TriggerOutDuration	IAuxTrigger	Specifies the width of the pulse or the time that the Aux trigger output will be asserted
TriggerOutInterval	IAuxTrigger	Specifies how often a trigger output signal is sent.
TriggerOutPolarity	IAuxTrigger	Specifies the polarity of the trigger output signal being supplied by the PNA.
TriggerOutPosition	IAuxTrigger	Specifies whether the Aux trigger out signal is sent Before or After the acquisition.

IAuxTrigger History

Interface	Introduced with PNA Rev:
IAuxTrigger	7.2

BalancedMeasurement Object

Description

These properties set the measurement type that is used with balanced topologies.

Use the [BalancedTopology Object](#) to set the topology and port mappings for the DUT,

Accessing the BalancedMeasurement object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim balMeas As BalancedMeasurement
Set balMeas = app.ActiveMeasurement.BalancedMeasurement
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [About Balanced Measurements](#)
- [Example Programs](#)

(**Bold** Methods or Properties provide access to a child object)

Method			Description
None			

Property	Interface	Description
	See History	
BalancedMode	IBalancedMeasurement	Sets and returns whether the balanced transform is ON or OFF.
BalancedTopology	IBalancedMeasurement	Sets and returns the topology of a balanced DUT.
BBalMeasurement	IBalancedMeasurement	Sets and returns the measurement for the Balanced - Balanced topology.
SBalMeasurement	IBalancedMeasurement	Sets and returns the measurement for the Single-Ended - Balanced topology.

[SSBMeasurement](#) IBalancedMeasurement Sets and returns the measurement for the Single-Ended - Single-Ended - Balanced topology

IBalancedMeasurement History

Interface	Introduced with PNA Rev:
IBalancedMeasurement	5.0

BalancedTopology Object

Description

The [DUTTopology](#) property sets and returns the topology of a balanced DUT.

The following methods **set** the port mappings for the DUT.

The remaining properties **return** the port mappings for the DUT.

Use the [BalancedMeasurement object](#) to set the measurement type.

Accessing the BalancedTopology object

```
Dim app as AgilentPNA835x.Application
Dim chan as Channel
Set chan = app.ActiveChannel

Dim balTopology as BalancedTopology
Set balTopology = chan.BalancedTopology
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [About Balanced Measurements](#)
- [Example Programs](#)

Method	Interface	Description
	See History	
SetBBPorts	IBalancedTopology	Sets the physical port mappings for the Balanced - Balanced DUT topology.
SetSBPorts	IBalancedTopology	Sets the physical port mappings for the Single-Ended - Balanced DUT topology.
SetSSBPorts	IBalancedTopology	Sets the physical port mappings for the Single-Ended - Single-Ended - Balanced DUT topology.

Property	Interface	Description
BB_BalPort1Negative	IBalancedTopology	Returns the PNA port number that is connected to the Negative side of the DUT's logical Port 1 .

<u>BB_BalPort1Positive</u>	IBalancedTopology	Returns the first positive balanced port number in the Balanced - Balanced topology
<u>BB_BalPort2Negative</u>	IBalancedTopology	Returns the second negative balanced port number in the Balanced - Balanced topology.
<u>BB_BalPort2Positive</u>	IBalancedTopology	Returns the second positive balanced port number in the Balanced - Balanced topology.
<u>DUTTopology</u>	IBalancedTopology	Sets and returns the device topology setting.
<u>SB_BalPortNegative</u>	IBalancedTopology	Returns the negative balanced port number in the Single-Ended - Balanced topology.
<u>SB_BalPortPositive</u>	IBalancedTopology	Returns the positive balanced port number in the Single-Ended - Balanced topology.
<u>SB_SEPort</u>	IBalancedTopology	Returns the single ended port number in the Single-Ended - Balanced topology.
<u>SSB_BalPortNegative</u>	IBalancedTopology	Returns the negative balanced port number in the Single-Ended - Single-Ended - Balanced topology.
<u>SSB_BalPortPositive</u>	IBalancedTopology	Returns the positive balanced port number in the Single-Ended - Single-Ended - Balanced topology
<u>SSB_SEPort1</u>	IBalancedTopology	Returns the first single ended port in the Single-Ended - Single-Ended - Balanced topology.
<u>SSB_SEPort2</u>	IBalancedTopology	Returns the second single ended port in the Single-Ended - Single-Ended - Balanced topology.

BalancedTopology History

Interface	Introduced with PNA Rev:
IBalancedTopology	5.0

CalFactorSegments Collection

Description

A collection object that provides a mechanism for iterating through the segments of a power sensor cal factor table.

Accessing the CalFactorSegments collection

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim calFact As CalFactorSegments
Set calFact = app.SourcePowerCalibrator.PowerSensors(1).CalFactorSegments
```

See Also:

- [PowerSensorCalFactorSegment Object](#)
- [Collections in the Analyzer](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Description
Add	Adds a PowerSensorCalFactorSegment object to the collection
Item	Use to get a handle to a PowerSensorCalFactorSegment object in the collection.
Remove	Removes an object from the collection.

Properties	Description
Count	Returns the number of objects in the collection.
Parent	Returns a handle to the Parent object (PowerSensor) of this collection.

Calibrator Object

See Also

- [Example Programs](#)
- [Calibrator Methods and Properties](#)
- [ICalData Interface](#) for putting and getting typed Calibration data.
- [Superseded commands](#)

Description

The Calibrator object, a child of the channel, is used to perform an Unguided calibration.

Note: You can NOT perform a full 3 or 4-port using the Calibrator object; you must use the [GuidedCalibration object](#).

There must be a measurement present for the calibrator to use or you will receive a "no measurement found" error. Therefore, to perform a 2-port cal, you must have any S-parameter measurement on the channel. For a 1-port measurement, you must have the measurement (S11 or S22) on the channel. The same is true for a response measurement.

There are a number of approaches to calibration with the calibrator object:

- You can collect data yourself and download it to the ACQUISITION buffer. The acquisition buffer holds the actual measured data for each standard. See the PNA [data map](#).
 1. Calibrator.[SetCalInfo](#)
 2. Connect a standard
 3. Trigger a sweep
 4. Retrieve the data for the standard
 5. Download the data - calibrator.[putStandard](#)
 6. Repeat for each standard
 7. Calibrator.[CalculateErrorCoefficients](#)
- You can tell the calibrator to acquire a standard. In this case, the calibrator collects the data and places it in the ACQUISITION buffer.
 1. Calibrator.[SetCalInfo](#)
 2. Connect a standard
 3. Calibrator.[AcquireCalStandard2](#)
 4. Repeat for each standard
 5. Calibrator.[CalculateErrorCoefficients](#)

- You can put previously-retrieved error terms in the error correction buffer.
 1. [PutErrorTerm](#)
 2. Repeat for each term
 3. Measurement.[Calttype](#) = pick one
- You can also "piece together" a 2-port cal from two 1-port cals (S11 and S22) and four response (thru) cals. The system will detect that all the standards needed for a 2-port cal have been acquired even though they may not have gathered at the same time.

Accessing the Calibrator object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim cal As ICalibrator
Set cal = app.ActiveChannel.Calibrator
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Learn about reading and writing Calibration data.](#)

Methods	Interface	Description
	See History	
AcquireCalConfidenceCheckECAL	ICalibrator	Superseded with AcquireCalConfidenceCheckECALEX
AcquireCalConfidenceCheckECALEX	ICalibrator4	Transfers ECAL confidence data into analyzer memory
AcquireCalStandard	ICalibrator	Superseded with AcquireCalStandard2
AcquireCalStandard2	ICalibrator	Causes the analyzer to measure a calibration standard. Also provides for sliding load.
CalculateErrorCoefficients	ICalibrator	Generates Error Terms from standard and actual data in the error correction buffer.
DoECAL1Port	ICalibrator	Superseded with DoECAL1PortEx
DoECAL1PortEx	ICalibrator4	Completes a 1 port ECAL
DoECAL2Port	ICalibrator	Superseded with DoECAL2PortEx

DoECAL2PortEx	ICalibrator4	Completes a 2 port ECAL
DoneCalConfidenceCheckECAL	ICalibrator	Concludes an ECAL confidence check
DoReceiverPowerCal	ICalibrator5	Perform a receiver power cal.
GetECALModuleInfo	ICalibrator	Superseded with Get ECALModuleInfoEx
Get ECALModuleInfoEx	ICalibrator4	Returns information about the attached module
getErrorTerm	ICalibrator	Superseded with GetErrorTermByString
getStandard	ICalibrator	Superseded with GetStandardByString
putErrorTerm	ICalibrator	Superseded with PutErrorTermByString
putStandard	ICalibrator	Superseded with PutStandardByString
SaveCalSets	ICalibrator	Superseded with CalSet.Save
setCalInfo	ICalibrator	Specifies the type of calibration and prepares the internal state for the rest of the calibration.
Properties	Interface	Description
AcquisitionDirection	ICalibrator	Specifies the direction in a 2-Port cal using one set of standards.
ECALCharacterization	ICalibrator2	Superseded with ECALCharacterizationEx
ECALCharacterizationEx	ICalibrator4	Specifies which set of characterization data within an ECal module will be used for ECal operations with that module.
ECALCharacterizationIndexList	ICalibrator6	Returns a list of characterizations stored in the specified ECal module.
ECAL Isolation	ICalibrator	Specifies whether the acquisition of the ECal calibration should include isolation or not.
ECALModuleNumberList	ICalibrator6	Returns a list of index numbers to be used for referring to the ECal modules that are currently attached to the PNA.
ECALPortMap	ICalibrator3	Superseded with ECALPortMapEx
ECALPortMapEx	ICalibrator4	Specifies which ports of the ECal module are connected to which ports of the PNA.
IsECALModuleFound	ICalibrator	Superseded with IsECALModuleFoundEx

[IsECALModuleFoundEx](#)

ICalibrator4 **Superseded with** [ECALCharacterizationIndexList](#) and [ECALModuleNumberList](#)

[IsolationAveragingIncrement](#)

ICalibrator7 Value to increase the channel's averaging factor.

[OrientECALModule](#)

ICalibrator3 Specifies if the PNA should perform orientation of the ECal module during calibration.

[Simultaneous2PortAcquisition](#)

ICalibrator Allows the use of 2 sets of standards at the same time.

ICalibrator History

Interface	Introduced with PNA Rev:
ICalibrator	1.0
ICalibrator2	3.1
ICalibrator3	3.1
ICalibrator4	3.5
ICalibrator5	5.0
ICalibrator6	5.26
ICalibrator6	7.21

ICalData Interface

Description

Contains methods for putting Calibration data in and getting Calibration data out of the analyzer using typed data. This interface transfers data more efficiently than variant data.

There is also an [ICalData Interface](#) on the CalSet Object

[Learn about reading and writing Calibration data.](#)

Methods	Description
---------	-------------

getErrorTermComplex	Retrieves error term data
getStandardComplex	Retrieves calibration data from the acquisition data buffer (before error-terms are applied).
putErrorTermComplex	Puts error term data
putStandardComplex	Puts calibration data into the acquisition data buffer (before error-terms are applied).

Properties	Description
------------	-------------

None

ICalData History

Interface	Introduced with PNA Rev:
ICalData	1.0

CalKit Object

Description

The calkit object provides the properties and methods to access and modify a calibration kit. The calkitType property can be set from two objects:

- Application object - app.calKitType
- CalKit object - calKit.calKitType

Both of these commands specify or read the calibration kit type. When specified, the cal kit also becomes the Active cal kit.

Accessing a CalKit object

To get a handle to a cal kit, use **app.ActiveCalKit**.

The calKit object behaves differently from other objects in the system in that you can only have a handle to **one** cal kit -- the active calkit. Therefore, when you change the calkitType from either the Application object or the CalKit object, you may also be changing the object to which you may have other references.

For example, the following example specifies two calKit type objects and in turn, assigns them to two different variables: ck1 and ck2.

```
Dim app As AgilentPNA835x.Application
Dim ck1 As calKit
Dim ck2 As calKit

Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)
app.CalKitType = naCalKit_User1
Set ck1 = app.ActiveCalKit
ck1.Name = "My CalKit1"

app.CalKitType = naCalKit_User2
Set ck2 = app.ActiveCalKit
ck2.Name = "My CalKit2"

Print "ck1: " & ck1.Name
Print "ck2: " & ck2.Name
```

When the pointer to each of these kits is read (printed), they each have a pointer to the last kit to be assigned to the Active cal kit:

```
ck1: My CalKit2
ck2: My CalKit2
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)

- [Example Programs](#)

(**Bold** Methods or Properties provide access to a child object)

Methods	Description
getCalStandard	Returns a handle to a calibration standard for modifying its definitions.
GetStandardsForClass	Returns the calibration standard numbers for a specified calibration class.
SetStandardsForClass	Sets the calibration standard numbers for a specified calibration class
Properties	Description
CalKitType	Sets or returns the calibration kit type for to be used for calibration or for kit modification. Shared with the Application object.
Name	Sets and returns the name of the cal kit
PortLabel	Labels the ports for the kit; only affects the cal wizard annotation.
StandardForClass	Superseded with Use GetStandardForClass and SetStandardForClass . Maps a standard device to a cal class.

ICalKit History

Interface	Introduced with PNA Rev:
ICalKit	1.0

CalManager Object

Description

Use this interface to list, save, and delete Cal Sets.

Accessing the CalManager object

Get a handle to a the CalManager with the app.GetCalManager Method.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim mgr as ICalManager
Set mgr = app.GetCalManager
```

See Also:

- PNA Automation Interfaces
- The PNA Object Model
- Example Programs
- Superseded commands

(**Bold** Methods or Properties provide access to a child object)

Methods	Interface	Description
	See History	
CreateCalSet	ICalManager	Creates a new Cal Set
CreateCustomCal	ICalManager2	Creates a custom cal object.
DeleteCalSet	ICalManager	Deletes a Cal Set
EnumerateCalSets	ICalManager4	Returns an array of Cal Set names being stored on the PNA
GetCalSetByGUID	ICalManager	Get a handle to a Cal Set
GetCalSetCatalog	ICalManager	Gets a list of Cal Sets
GetCalSetUsageInfo	ICalManager	Returns the Cal Set ID and Error Term ID currently in use
GetCalTypes	ICalManager2	Query for a list of available calibration types.

GetRequiredEtermNames	ICalManager2	Returns an array of strings specifying the error terms requir
-----------------------	--------------	---

SaveCalSets	ICalManager	Superseded with CalSet::Save
-------------	-------------	-------------------------------------

Properties

Cal Sets	ICalManager	Collection for iterating through all the Cal Sets in the analyz
----------	-------------	---

GuidedCalibration	ICalManager3	Used to perform a Guided Calibration.
-------------------	--------------	---------------------------------------

ICalManager History

Interface	Introduced with PNA Rev:
ICalManager	2.0
CalManager2	3.1
CalManager3	3.5
CalManager4	5.0

CalSet Object

See [ICalData Interface](#) for putting and getting typed Cal Set data.

Description

Use this interface to query and or change the contents of a Cal Set.

Accessing the CalSet object

Get a handle to a CalSet object by using the CalSets collection. This is done through the CalManager object with the app.[GetCalManager](#) Method.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim calst As ICalSet
Set calst = app.GetCalManager.CalSets.Item(1)
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Reading and Writing Calibration data](#)
- [Example Programs](#)
- [Superseded commands](#)

Methods	Interface See History	Description
CloseCalSet	ICalSet	Obsolete - No longer necessary.
ComputeErrorTerms	ICalSet	Computes error terms for the CalType specified by a preceding OpenCal Set call.
Copy	ICalSet	Creates a new Cal Set and copies the current Cal Set data into it.
getErrorTerm	ICalSet	Superseded with getErrorTermByString
getErrorTermByString	ICalSet2	Returns variant error term data by specifying the string name of the error term.
getErrorTermList	ICalSet	Superseded with getErrorTermList2
getErrorTermList2	ICalSet2	Returns a list of error term names found in a calset.

GetGUID	ICalSet	Returns the GUID identifying a Cal Set
getStandard	ICalSet	Superseded with getStandardByString
getStandardByString	ICalSet2	Returns variant standard acquisition data by specifying the string name of the standard.
getStandardsList	ICalSet	Superseded with getStandardList2
getStandardList2	ICalSet2	Returns a list of standard names found in a Cal Set.
HasCalType	ICalSet	Verifies that the Cal Set object contains the error terms required to apply the specified CalType to an appropriate measurement.
OpenCalSet	ICalSet	Obsolete - No longer necessary.
putErrorTerm	ICalSet	Superseded with putErrorTermByString
putErrorTermByString	ICalSet2	Writes variant error term data by specifying the string name of the error term.
putStandard	ICalSet	Superseded with putStandardByString
putStandardByString	ICalSet2	Writes variant standard acquisition data by specifying the string name of the standard.
Save	ICalSet	Saves the current Cal Set to disk.
StringToNACalClass	ICalSet	Converts string values from GetStandardsList into enumeration data
StringToNAErrorTerm2	ICalSet	Converts string values from GetErrorTermList into enumeration data
Properties		
Description		
AlternateSweep	ICalSet3	Reads sweep either alternate or chopped.
Attenuator	ICalSet3	Returns the value of the attenuator control for the specified port number.
AttenuatorMode	ICalSet3	Returns the mode of operation (auto or manual) of the attenuator control for the specified port number.
CouplePorts	ICalSet3	Returns state of couple ports (ON or OFF)
CWFrequency	ICalSet3	Returns CW Frequency

Description	ICalSet	Set or return the descriptive string assigned to the Cal Set
DwellTime	ICalSet3	Returns the dwell time for the channel.
FrequencyOffsetCWOverride	ICalSet3	Reads state of CW Override (ON or OFF)
FrequencyOffsetDivisor	ICalSet3	Reads Frequency Offset Divisor value
FrequencyOffsetFrequency	ICalSet3	Reads Offset Frequency
FrequencyOffsetMultiplier	ICalSet3	Reads Frequency Offset Multiplier value
FrequencyOffsetState	ICalSet3	Reads Frequency Offset state (ON or OFF)
IFBandwidth	ICalSet3	Reads IF Bandwidth of the channel
LastModified	ICalSet3	Reads the time stamp of when the file was last modified
Name	ICalSet4	Sets and returns the Cal Set name.
NumberOfPoints	ICalSet3	Returns the Number of Points of the channel.
PowerSlope	ICalSet3	Returns the Power Slope value.
ReceiverAttenuator	ICalSet3	Returns the value of the specified receiver attenuator control.
StartFrequency	ICalSet3	Returns the start frequency of the channel.
StartPower	ICalSet3	Returns the start power of the PNA when sweep type is set to Power Sweep.
StimulusValues	ICalSet3	Returns x-axis values for stimulus or response frequencies
StopFrequency	ICalSet3	Returns the stop frequency of the channel.
StopPower	ICalSet3	Returns the stop power of the PNA when sweep type is set to Power Sweep.
SweepGenerationMode	ICalSet3	Returns the method being used to generate a sweep: analog or stepped.
SweepTime	ICalSet3	Returns the sweep time of the analyzer.
SweepType	ICalSet3	Returns the type of X-axis sweep that is performed on a channel.
TestPortPower	ICalSet3	Returns the RF power level for the channel.

ICalSet History

Interface	Introduced with PNA Rev:
ICalSet	2.0
ICalSet2	3.0
ICalSet3	3.2
ICalSet4	6.0

ICalData Interface

Description

Use this interface as an alternative to the ICalSet Interface to avoid using variants when transmitting data to and from the Cal Set

[Learn about reading and writing Calibration data.](#)

Methods	Interface See History	Description
getErrorTermComplex	ICalData2	Superseded with getErrorTermComplexByString
getErrorTermComplexByString	ICalData3	Returns typed error term data by specifying the string name of the error term.
getStandardComplex	ICalData2	Superseded with getStandardComplexByString
getStandardComplexByString	ICalData3	Returns typed standard acquisition data by specifying the string name of the standard.
putErrorTermComplex	ICalData2	Superseded with putErrorTermComplexByString
putErrorTermComplexByString	ICalData3	Writes typed error term data by specifying the string name of the error term.
putStandardComplex	ICalData2	Superseded with putStandardComplexByString
putStandardComplexByString	ICalData3	Writes typed standard acquisition data by specifying the string name of the standard.
Properties	Description	

None

History

Interface	Introduced with PNA Rev:
-----------	--------------------------

The original ICalData Interface was introduced with PNA 1.0 on the [Calibrator](#) Object.

ICalData2	2.0
-----------	-----

ICalData3	3.1
-----------	-----

Last modified:

Nov. 1, 2006 New start and stop freq commands added

Cal Sets Collection

Description

A collection object that provides a mechanism for iterating through all the Cal Sets in the analyzer. There is no ordering to the items in the collection. Therefore make no assumptions about the formatting of the collection.

For the Item and Remove methods, you can specify either the Cal Set string name, or the integer item of the Cal Set in the collection.

Accessing the CalSets collection

Get a handle to the CalSets collection through the CalManager object with the app.[GetCalManager](#) Method.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim calsts As CalSets
Set calsts = app.GetCalManager.CalSets
```

See Also:

- [Cal Set Object](#)
- [Collections in the Analyzer](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Description
Item	Returns a handle to a Cal Set object in the collection.
Remove	Deletes the Cal Set residing at position index in the collection.
Properties	Description
Count	Returns the number of Cal Sets in the collection.

Last Modified:

30-Oct-2007 added item and remove note.

CalStandard Object

Description

Contains all of the settings that are required to modify a calibration standard.

Accessing the CalStandard object

Get a handle to a standard with the calkit.[GetCalStandard](#) Method.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim std As ICalStandard
Set std = app.ActiveCalKit.GetCalStandard(1)
std.Delay = 0.00000003
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Reading and Writing Calibration data](#)
- [Example Programs](#)

Methods

None

Properties	Interface	Description
	See History	
C0	ICalStandard	Sets and Returns the C0 (C-zero) value (the first capacitance value) for the calibration standard, when the Type is set to "naOpen".
C1	ICalStandard	Sets and Returns the C1 value (the second capacitance value) for the calibration standard, when the Type is set to "naOpen".
C2	ICalStandard	Sets and Returns the C2 value (the third capacitance value) for the calibration standard, when the Type is set to "naOpen".
C3	ICalStandard	Sets and Returns the C3 value (the fourth capacitance value) for the calibration standard, when the Type is set to "naOpen".
Delay	ICalStandard	Sets and Returns the electrical delay value for the calibration standard.

L0	ICalStandard	Sets and Returns the L0 (L-zero) value (the first inductance value) for the calibration standard, when the Type is set to "naShort".
L1	ICalStandard	Sets and Returns the L1 value (the second inductance value) for the calibration standard, when the Type is set to "naShort"..
L2	ICalStandard	Sets and Returns the L2 value (the third inductance value) for the calibration standard, when the Type is set to "naShort"..
L3	ICalStandard	Sets and Returns the L3 value (the third inductance value) for the calibration standard, when the Type is set to "naShort"..
Label	ICalStandard	Sets and Returns the label for the calibration standard.
loss	ICalStandard	Sets and Returns the insertion loss for the calibration standard.
Maximum Frequency	ICalStandard	Sets and Returns the maximum frequency for the calibration standard.
Medium	ICalStandard	Sets and Returns the media type of the calibration standard.
Minimum Frequency	ICalStandard	Sets and Returns the minumum frequency for the calibration standard.
Type	ICalStandard	Sets and Returns the type of calibration standard. Selections are: naOpen, naShort, naLoad, naThru, naArbitraryImpedance and naSliding.
TZReal	ICalStandard2	Sets and Returns the TZReal value (the Real Terminal Impedance value) for the calibration standard, when the Type is set to "naArbitraryImpedance".
TZImag	ICalStandard2	Sets and Returns the TZImag value (the Imaginary Terminal Impedance value) for the calibration standard, when the Type is set to "naArbitraryImpedance".
Z0	ICalStandard	Sets and Returns the characteristic impedance for the calibration standard.

ICalStandard History

Interface	Introduced with PNA Rev:
CalStandard	1.0
CalStandard2	3.0

Capabilities Object

Description

These properties return capabilities of the remote PNA.

Accessing the Capabilities object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim cap As Capabilities
Set cap = app.Capabilities
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [ICapabilities History](#)
- [Example Programs](#)

Methods	Interface
	See History

GetPortNumber Method	ICapabilities4	Returns the port number for the specified string port name.
--------------------------------------	----------------	---

Properties		Description
FirmwareMajorRevision	ICapabilities	Returns integer portion of firmware revision number.
FirmwareMinorRevision	ICapabilities	Return decimal portion of firmware revision number.
FirmwareSeries	ICapabilities	Returns the Alpha portion of the firmware revision number.
GPIBPortCount	ICapabilities3	Returns the number of GPIB ports (1or 2)
InternalTestsetPortCount	ICapabilities	Returns the number of PNA test ports.
IsFrequencyOffsetPresent	ICapabilities	Returns the presence of Frequency Offset Option 080 (True or False).
IsReceiverStepAttenuatorPresent	ICapabilities	Returns the presence of receiver step attenuators (True or False).

<u>IsReferenceBypassSwitchPresent</u>	ICapabilities	Returns the presence of the reference switch (True or False).
<u>MaximumFrequency</u>	ICapabilities	Returns the maximum frequency of the PNA.
<u>MaximumNumberOfChannels</u>	ICapabilities2	Returns the maximum possible number of Channels
<u>MaximumNumberOfPoints</u>	ICapabilities	Returns the maximum possible number of data points.
<u>MaximumNumberOfTracesPerWindow</u>	ICapabilities2	Returns the maximum possible number of traces per window
<u>MaximumNumberOfWindows</u>	ICapabilities2	Returns the maximum possible number of windows
<u>MaximumReceiverStepAttenuator</u>	ICapabilities	Returns the maximum amount of receiver attenuation.
<u>MaximumSourceALCPower</u>	ICapabilities	Returns the maximum amount of source ALC power.
<u>MaximumSourceStepAttenuator</u>	ICapabilities	Returns the maximum amount of source attenuation.
<u>MinimumFrequency</u>	ICapabilities	Returns the minimum frequency of the PNA.
<u>MinimumNumberOfPoints</u>	ICapabilities	Returns the minimum possible number of data points.
<u>MinimumReceiverStepAttenuator</u>	ICapabilities	Returns the minimum amount of receiver attenuation.
<u>MinimumSourceALCPower</u>	ICapabilities	Returns the minimum amount of source ALC power.
<u>ReceiverCount</u>	ICapabilities	Returns the number of receivers in the PNA.
<u>ReceiverStepAttenuatorStepSize</u>	ICapabilities	Returns the step size of the attenuator.
<u>SourceCount</u>	ICapabilities	Returns the number of sources.
<u>SourcePortCount</u>	ICapabilities4	Returns the number of source ports.
<u>SourcePortNames</u>	ICapabilities4	Returns the string names of source ports.

ICapabilities History

I Interface	Introduced with PNA Rev:
ICapabilities	3.5
ICapabilities2	5.23
ICapabilities3	6.0
ICapabilities4	7.20

Channel Object

See [SourcePowerCalData Interface](#) for putting and getting typed source power calibration data.

Description

The channel object is like the engine that produces data. Channel settings consist of stimulus values like frequency, power, IF bandwidth, and number of points.

Accessing the Channel object

You can get a handle to a channel in a number of ways. But first you have to make sure that the channel exists. When you first startup the analyzer, there is one S11 measurement on channel 1. Thus there is only one channel in existence. You can do the following:

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim chan As IChannel
Set chan = app.ActiveChannel
```

or

```
Set chan = app.Channels(2)
```

The first method returns the channel object that is driving the active measurement. If there is no measurement, there may not be a channel. Once a channel is created, it does not go away. So if there once was a measurement (hence a channel), the channel will still be available.

If there is no channel you can create one in a couple ways. You can do the following:

```
Pna.CreateMeasurement( ch1, "S11", port1, window2)
```

or

```
Pna.Channels.Add(2)
```

The latter will have no visible effect on the analyzer. It will simply create channel 2 if it does not already exist.

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Reading and Writing Calibration data.](#)
- [Example Programs](#)
- [Superseded commands](#)

(**Bold** Methods or Properties provide access to a child object)

Methods	Interface	Description
	See History	

Abort	IChannel	Aborts the current measurement sweep on the channel.
-----------------------	----------	--

ApplySourcePowerCorrectionTo	IChannel11	Copies an existing Source Power Calibration to another channel.
AveragingRestart	IChannel	Clears and restarts averaging of the measurement data.
Continuous	IChannel	The channel continuously responds to trigger signals.
CopyToChannel	IChannel	Sets up another channel as a copy of this objects channel.
GetErrorCorrection	IChannel8	Returns the channel error correction state.
GetNumberOfGroups	IChannel3	Returns the number of groups a channel has yet to acquire.
getSourcePowerCalData	IChannel	Superseded with Get SourcePowerCalDataEx
getSourcePowerCalDataEx	IChannel4	Returns requested source power calibration data, if it exists.
GetSupportedALCModes	IChannel10	Returns a list of supported ALC modes
GetXAxisValues	IChannel	Returns the channel's X-axis values into a dimensioned Variant array.
GetXAxisValues2	IChannel	Returns the channel's X-axis values into a dimensioned NON-Variant array.
Hold	IChannel	Puts the Channel in Hold - not sweeping.
Next_IFBandwidth	IChannel	A function that returns the Next higher IF Bandwidth value.
NumberOfGroups	IChannel	Sets the Number of trigger signals the channel will receive.
Preset	IChannel	Resets the channel to factory defined settings.
PreviousIFBandwidth	IChannel	Returns the previous IF Bandwidth value.
putSourcePowerCalData	IChannel	Superseded with Put SourcePowerCalDataEx Method
putSourcePowerCalDataEx	IChannel4	Inputs source power calibration data to this channel for a specific source port.
SelectCalSet	IChannel	Specifies the Cal Set to use for the Channel
Single	IChannel	Channel responds to one trigger signal from any source (internal, external, or manual). Then channel switches to Hold.
Properties	Interface	Description
ALCLevelingMode	IChannel10	Set or return the ALC leveling mode.
AlternateSweep	IChannel	Sets sweeps to either alternate or chopped.

<u>Attenuator</u>	IChannel	Sets or returns the value of the attenuator control for the specified port number.
<u>AttenuatorMode</u>	IChannel	Sets or returns the mode of operation of the attenuator control for the specified port number.
<u>AuxiliaryTrigger</u>	IChannel10	Used to configure AuxiliaryTriggering
<u>Averaging</u>	IChannel	Turns trace averaging ON or OFF for all measurements on the channel.
<u>AveragingCount</u>	IChannel	Returns the number of sweeps that have been averaged into the measurements.
<u>AveragingFactor</u>	IChannel	Specifies the number of measurement sweeps to combine for an average.
<u>BalancedTopology</u>	IChannel6	Sets and returns the topology of a balanced DUT.
<u>Calibrator</u>	IChannel4	Used to perform an Unguided calibration.
<u>CalSet</u>	IChannel	Change the contents of a Cal Set
<u>centerFrequency</u>	IChannel	Sets or returns the center frequency of the channel. Shared with the Segment Object
<u>channelNumber</u>	IChannel	Returns the Channel number. Shared with the Measurement Object
<u>CoupleChannelParams</u>	IChannel5	Turns ON and OFF Time Domain Trace Coupling.
<u>CouplePorts</u>	IChannel	Turns ON and OFF port power coupling.
<u>CWFrequency</u>	IChannel	Set the Continuous Wave (CW) frequency.
<u>DwellTime</u>	IChannel	Sets or returns the dwell time for the channel. Shared with the Segment Object
<u>ErrorCorrection</u>	IChannel7	Attempts to sets error correction ON or OFF for all of the measurements on the channel.
<u>ExternalTriggerDelay</u>	IChannel6	Sets or returns the external trigger delay value for the channel.
<u>Fixturing</u>	IChannel6	Port Ext, Embedding, and De-embedding functions.
<u>FOM Collection</u>	IChannel9	Configure Frequency Offset Measurements
<u>FrequencyOffsetDivisor</u>	IChannel2	

FrequencyOffsetFrequency	IChannel2	
FrequencyOffsetMultiplier	IChannel2	Superseded with FOM and FOMRange
FrequencyOffsetCWOVERRIDE	IChannel2	
FrequencyOffsetState	IChannel2	
FrequencySpan	IChannel	Sets or returns the frequency span of the channel. Shared with the Segment Object.
IFBandwidth	IChannel	Sets or returns the IF Bandwidth of the channel. Shared with the Segment Object.
IFConfiguration	IChannel4	Control the IF gain and source path settings for the H11 Option.
IsContinuous	IChannel3	Returns whether or not a channel is in continuous mode.
IsHold	IChannel3	Returns whether or not a channel is in hold mode.
NumberOfPoints	IChannel	Sets or returns the Number of Points of the channel. Shared with the Segment Object.
Parent	IChannel	Returns a handle to the parent object of the channel.
PowerSlope	IChannel	Sets or returns the Power Slope value.
R1InputPath	IChannel2	Throws internal reference switch (option 081).
ReceiverAttenuator	IChannel	Sets or returns the value of the specified receiver attenuator control.
ReduceIFBandwidth	IChannel5	Sets or returns the state of the Reduced IF Bandwidth at Low Frequencies setting.
Segments	IChannel	Collection for iterating through the sweep segments of a channel.
SourcePortMode	IChannel9	Sets the state of the PNA sources. (AUTO ON OFF)
SourcePowerCalPowerOffset	IChannel4	Sets or returns a power level offset from the PNA test port power.
SourcePowerCorrection	IChannel	Turns source power correction ON or OFF for a specific source port.
StartFrequency	IChannel	Sets or returns the start frequency of the channel. Shared with the Segment Object

StartPower	IChannel	Sets the start power of the analyzer when sweep type is set to Power Sweep.
StopFrequency	IChannel	Sets or returns the stop frequency of the channel. Shared with the Segment Object
StopPower	IChannel	Sets the Stop Power of the analyzer when sweep type is set to Power Sweep.
SweepGenerationMode	IChannel	Sets the method used to generate a sweep: continuous ramp (analog) or discrete steps (stepped).
SweepTime	IChannel	Sets the Sweep time of the analyzer.
SweepType	IChannel	Sets the type of X-axis sweep that is performed on a channel.
TestPortPower	IChannel	Sets or returns the RF power level for the channel. Shared with the Segment Object
TriggerMode	IChannel	Determines the measurement that occurs when a trigger signal is sent to the channel.
UserRangeMax	IChannel	Sets the stimulus stop value for the specified User Range.
UserRangeMin	IChannel	Sets the stimulus start value for the specified User Range.
XAxisPointSpacing	IChannel	Sets X-Axis point spacing for the active channel.

IChannel History

Interface	Introduced with PNA Rev:
IChannel	1.0
IChannel2	3.0
IChannel3	4.0
IChannel4	4.0
IChannel5	4.2
IChannel6	5.0
IChannel7	5.2
IChannel8	6.0
IChannel9	7.0

IChannel10 7.2

IChannel11 7.5

ISourcePowerCalData Interface

Description

Contains methods for putting source power calibration data in and getting source power calibration data out of the analyzer using typed data. The methods in this interface transfer data more efficiently than methods that use variant data.

Note: Interface **ISourcePowerCalData** is abbreviated as **ISPCD** in the following table.

Methods	Interface	Description
	See History	
getSourcePowerCalDataScalar	ISPCD	Superseded with - use PutSourcePowerCalDataScalarEx Method
getSourcePowerCalDataScalarEx	ISPCD2	Returns requested source power calibration data, if it exists.
putSourcePowerCalDataScalar	ISPCD	Superseded with - use PutSourcePowerCalDataEx Method
putSourcePowerCalDataScalarEx	ISPCD2	Inputs source power calibration data to a channel, for a specific source port.
Properties	Description	

None

ISourcePowerCalData History

Interface	Introduced with PNA Rev:
ISourcePowerCalData	2.0
ISourcePowerCalData2	4.0

Channels Collection

Description

A collection object that provides a mechanism for iterating through the channels

Collections are, by definition, unordered lists of like objects. You cannot assume that Channels.Item(1) is always Channel 1.

Accessing the Channels collection

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim chans As Channels
Set chans = app.Channels
```

See Also:

- [Channel Object](#)
- [Collections in the Analyzer](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Interface	Description
Add	IChannels	An alternate way to create a measurement.
Hold	IChannels	Places all channels in Hold trigger mode.
Item	IChannels2	Use to get a handle on a channel in the collection.
Resume	IChannels2	Resumes the trigger mode of all channels that was in effect before sending the channels.Hold method.

Properties		Description
Count	IChannels	Returns the number of channels in the analyzer.
Parent	IChannels	Returns a handle to the current Application.
UnusedChannelNumbers	IChannels2	Returns an array of channel numbers that are NOT in use.
UsedChannelNumbers	IChannels2	Returns an array of channel numbers that are in use.

E5091Testsets Collection

Description

Two testsets can be connected and controlled by the PNA at any time.

The item number in the testsets collection is set by the DIP switches on the testset rear-panel. The valid item numbers are 1 and 2. If the testset DIP switches are set to 1, then item number in the collection is 1, and so forth. See your E5091A documentation for more information.

If the specified testset is not connected to USB or not ON, then setting [Enabled](#) = True will return an error. All other properties can be set when the testset is not connected.

Accessing the E5091Testsets collection

Child of the **Application** Object. Get a handle to one of the [E5091Testset objects](#) by specifying an item of the collection.

```
Dim pna
Set pna = CreateObject("AgilentPNA835x.Application")
Dim testsets As E5091Testsets
Set testsets = pna.E5091Testsets
Dim tset1 As E5091Testset
Set tset1 = testsets(1)
```

See Also:

- [E5091Testset Control COM Example](#)
- [E5091Testset Object](#)
- [Collections in the Analyzer](#)
- [The PNA Object Model](#)

Methods	Description
Item	Use to get a handle to a testset in the collection.

Properties	Description
Count	Returns the number of items in a collection of objects.
Parent	Returns a handle to the current naNetworkAnalyzer application.

E5091Testsets History

Interface	Introduced with PNA Rev:
IE5091Testsets	5.2

E5091Testset Object

Description

There can be two test sets connected and controlled by the PNA at any time.

The item number in the testsets collection is set by the DIP switches on the test set rear-panel. The valid item numbers are 1 and 2. If the test set DIP switches are set to 1, then item number in the collection is 1, and so forth. See your E5091A documentation for more information.

If the specified test set is not connected to USB or not ON, then setting [Enabled](#) = True will return an error. All other properties can be set when the test set is not connected.

Accessing the E5091Testset object

Child of the **Application** Object. Get a handle to a E5091Testset object by specifying an item of the collection.

```
Dim pna
Set pna = CreateObject("AgilentPNA835x.Application")
Dim testsets As E5091Testsets
Set testsets = pna.E5091Testsets
Dim tset1 As E5091Testset
Set tset1 = testsets(1)
```

See Also:

- [E5091Testset Control COM Example](#)
- [E5091 TestSet Control](#)
- [E5091Testsets Collection](#)
- [TestsetControl Object](#) (for different test sets)
- [The PNA Object Model](#)

Methods	Description
None	

Properties	Description
ControlLines	Sets the control lines of the specified E5091A.
Enabled	Enables and disables (ON/OFF) the port mapping and control line output of the specified testset.
ID	Returns the test set ID number.
NumberOfPorts	Reads the number of ports (7 or 9) that are on the specified E5091A test set.

[OutputPort](#)

Switches an input to one of the valid outputs on the specified E5091A.

[ShowProperties](#)

Turns ON and OFF the display of the test set control status bar.

E5091Testset History

Interface		Introduced with PNA Rev:
IE5091Testset		5.2

EmbeddedLO Object

Description

Provides access to the properties that allow measurement of mixers that contain an embedded LO.

Accessing the EmbeddedLO Interface

Access the Interface through the IMixer Object.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application")
app.Preset

' FCA Measurements can't share the channel with standard measurements
' Because preset creates a single measurement in channel 1, we first delete the
standard measurement
Dim standardMeas As IMeasurement
Set standardMeas = app.ActiveMeasurement
standardMeas.Delete

' Create a Measurement object, in this case using the IMeasurement interface
Dim meas As IMeasurement
Set meas = app.CreateCustomMeasurementEx(1, "SMC_Forward.SMC_ForwardMeas", "SC21")

' See if this measurement object supports IMixer
Dim mixer As IMixer
Dim embeddedLO
Set embeddedLO = mixer.EmbeddedLO
```

See an example program that shows how to create and calibrate a standard SMC or VMC measurement or a fixed output SMC measurement.

See Also:

[PNA Automation Interfaces](#)

[The PNA Object Model](#)

[Making Embedded LO Measurements](#)

Methods	Interface	Description
	See History	

ResetLOFrequency	IEmbeddedLO	Reset LO Delta frequency.
ResetTuningParameters	IEmbeddedLO	Resets the tuning parameters to their defaults.

Properties	Description
------------	-------------

BroadbandTuningSpan	IEmbeddedLO	Set broadband sweep span.
EmbeddedLODiagnostic	IEmbeddedLO	Provides access to the status of tuning sweeps.
IsOn	IEmbeddedLO	Set and return Embedded LO ON OFF.
LOFrequencyDelta	IEmbeddedLO	Sets and returns LO delta frequency.
MaxPreciseTuningIterations	IEmbeddedLO	Sets and returns precise tuning iterations.
NormalizePoint	IEmbeddedLO	Sets and returns tuning point.
PreciseTuningTolerance	IEmbeddedLO	Sets and returns precise tuning tolerance.
TuningIFBW	IEmbeddedLO	Sets and returns the IF Bandwidth for tuning sweeps.
TuningMode	IEmbeddedLO	Sets and returns the method used to determine the embedded LO Frequency.
TuningSweepInterval	IEmbeddedLO	Set how often a tuning sweep is performed.

IEmbeddedLO History

Interface	Introduced with PNA Rev:
IEmbeddedLO	7.21

EmbeddedLODiagnostic Object

Description

Allows access to the properties that provide information about the broadband and precise tuning of an embedded LO.

Accessing the EmbeddedLODiagnostic Interface

Access the Interface through the EmbeddedLO Object.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application")
app.Preset

' FCA Measurements can't share the channel with standard measurements
' Because preset creates a single measurement in channel 1, we first delete the
standard measurement
Dim standardMeas As IMeasurement
Set standardMeas = app.ActiveMeasurement
standardMeas.Delete

' Create a Measurement object, in this case using the IMeasurement interface
Dim meas As IMeasurement
Set meas = app.CreateCustomMeasurementEx(1, "SMC_Forward.SMC_ForwardMeas", "SC21")

' See if this measurement object supports IMixer
Dim mixer As IMixer
Dim embeddedLO
Set embeddedLO = mixer.EmbeddedLO

Dim embeddedLODiagnostic
Set embeddedLODiagnostic = embeddedLO.EmbeddedLODiagnostic
```

See an example program that shows how to create and calibrate a standard SMC or VMC measurement or a fixed output SMC measurement.

See Also:

[PNA Automation Interfaces](#)

[The PNA Object Model](#)

[Making Embedded LO Measurements](#)

[EmbeddedLO Object](#)

Methods	Interface	Description
	See History	

Clear	IELODiag	Clear current diagnostic information.
-------	----------	---------------------------------------

Properties		Description
------------	--	-------------

IsMarkerOn	IELODiag	Was a marker was used for a tuning sweep?
------------	----------	---

LODeltaFound	IELODiag	Returns the LO frequency delta from this tuning sweep.
--------------	----------	--

NumberOfSweeps	IELODiag	Get number of tuning sweeps.
----------------	----------	------------------------------

MarkerAnnotation	IELODiag	Get the marker annotation.
------------------	----------	----------------------------

MarkerPosition	IELODiag	Get the marker X-axis position.
----------------	----------	---------------------------------

Parameter	IELODiag	Returns the tuning sweep parameter name.
-----------	----------	--

StatusAsString	IELODiag	Get result of the last tuning sweeps.
----------------	----------	---------------------------------------

StepData	IELODiag	Get a tuning sweep data.
----------	----------	--------------------------

StepTitle	IELODiag	Returns the tuning sweep title.
-----------	----------	---------------------------------

XAxisAnnotation	IELODiag	Get the tuning sweep X axis annotation.
-----------------	----------	---

XAxisStart	IELODiag	Get the Start sweep value.
------------	----------	----------------------------

XAxisStop	IELODiag	Get the Stop sweep value.
-----------	----------	---------------------------

YAxisAnnotation	IELODiag	Get the tuning sweep Y axis annotation.
-----------------	----------	---

History

Interface	Introduced with PNA Rev:
-----------	--------------------------

IEmbeddedLODiagnostic	7.21
-----------------------	------

Equation Object

Description

Provide commands for creating an equation.

[Learn more about Equation Editor](#)

Accessing the Equation object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim eq As Equation
Set eq = app.Equation
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Interface	Description
	See History	

None

Properties	Interface	Description
	See History	

Text	IEquation	Sets the Equation
State	IEquation	Sets the Equation enabled state
Valid	IEquation	Returns whether the equation is presently valid.

IEquation History

Interface	Introduced with PNA Rev:
-----------	--------------------------

IEquation	6.03
-----------	------

ExternalTestsets Collection

Description

ExternalTestsets collection provides access to a TestsetControl object. Only one external testset can be controlled by the PNA at any time.

Accessing the ExternalTestsets collection

The ExternalTestsets collection is a property of the main **Application** Object. You can obtain a handle to a testset by specifying an item in the collection.

Visual Basic Example

```
Dim pna
Dim testsets As ExternalTestsets
Dim tset1 As TestsetControl
Set pna = CreateObject("AgilentPNA835x.Application")
Set testsets = pna.ExternalTestsets
Set tset1 = testsets(1)
' make COM calls on tset1 object
End Sub
```

See Also:

- [ExternalTestset Control COM Example](#)
- [About External TestSet Control](#)
- [TestsetControl Object](#)
- [The PNA Object Model](#)

Methods	Description
Add	Adds a testset to the collection and loads a test set configuration file.
Item	Use to get a handle to a testset in the collection.
TestsetCatalog	Returns a list of supported test sets.
Properties	Description
Count	Returns the number of items in a collection of objects.
Parent	Returns a handle to the current naNetworkAnalyzer application.

ExternalTestsets History

Interface	Introduced with PNA Rev:
IExternalTestsets	6.0
IExternalTestsets	6.2

Fixturing Object

Description

Contains the properties for Embedding and De-embedding test fixtures.

Accessing the Fixturing object

```
Dim app as AgilentPNA835x.Application
Dim chan as Channel
Set chan = app.ActiveChannel
Dim fixt as Fixturing
Set fixt = chan.Fixturing
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [About Fixturing](#)
- [Example Programs](#)

Methods		Description
AutoPortExtMeasure	IFixturing2	Measures either an OPEN or SHORT standard.
AutoPortExtReset	IFixturing2	Clears old port extension delay and loss data.
Properties	Interface	Description
	See History	
AutoPortExtConfig	IFixturing2	Sets the frequency span that is used to calculate Automatic Port Extension.
AutoPortExtDCOffset	IFixturing2	Specifies whether or not to include DC Offset as part of Automatic port extension.
AutoPortExtLoss	IFixturing2	Specifies whether or not to include loss correction as part of Automatic Port Extension.
AutoPortExtSearchStart	IFixturing2	Set the start frequency for custom user span.
AutoPortExtSearchStop	IFixturing2	Set the stop frequency for custom user span.

<u>AutoPortExtState</u>	IFixturing2	Enables and disables automatic port extensions on the specified port.
<u>CmnModeZConvPortImag</u>	IFixturing2	Sets imaginary value for common port impedance conversion.
<u>CmnModeZConvPortReal</u>	IFixturing2	Sets real value for common port impedance conversion.
<u>CmnModeZConvState</u>	IFixturing2	Turns ON/OFF common port impedance conversion.
<u>CmnModeZConvPortZ0</u>	IFixturing2	Sets impedance value for common port impedance conversion.
<u>DiffPortMatch_C</u>	IFixturing2	Sets Capacitance value of the differential matching circuit.
<u>DiffPortMatch_G</u>	IFixturing2	Sets Conductance value of the differential matching circuit.
<u>DiffPortMatch_L</u>	IFixturing2	Sets Inductance value of the differential matching circuit.
<u>DiffPortMatch_R</u>	IFixturing2	Sets Resistance value of the differential matching circuit.
<u>DiffPortMatchMode</u>	IFixturing2	Sets type of circuit to embed.
<u>DiffPortMatchUserFilename</u>	IFixturing2	Specifies the 4-port touchstone file for user-defined differential matching circuit.
<u>DiffPortMatchState</u>	IFixturing2	Turns ON/OFF differential matching circuit function.
<u>DiffZConvPortImag</u>	IFixturing2	Sets imaginary value for differential port impedance conversion.
<u>DiffZConvPortReal</u>	IFixturing2	Sets real value for differential port impedance conversion.
<u>DiffZConvPortZ0</u>	IFixturing2	Sets impedance value for differential port impedance conversion.
<u>DiffZConvState</u>	IFixturing2	Turns ON/OFF differential port impedance conversion.
<u>Embed4PortA</u>	IFixturing2	Returns PNA portA connections.
<u>Embed4PortB</u>	IFixturing2	Returns PNA portB connections.
<u>Embed4PortC</u>	IFixturing2	Returns PNA portC connections.

<u>Embed4PortD</u>	IFixturing2	Returns PNA portD connections.
<u>Embed4PortList</u>	IFixturing2	Specifies all PNA port connections.
<u>Embed4PortNetworkFilename</u>	IFixturing2	Specifies *.s4p filename.
<u>Embed4PortNetworkMode</u>	IFixturing2	Specify embed, de-embed, or none.
<u>Embed4PortState</u>	IFixturing2	Turns ON or OFF 4-port Network Embed/De-embed.
<u>Embed4PortTopology</u>	IFixturing2	Specifies the PNA / DUT topology.
<u>FixturingState</u>	IFixturing	Turns Fixturing ON and OFF on this channel.
<u>Port2PdeembedCktModel</u>	IFixturing	Sets and returns the 2 port De-embedding circuit model for the specified port number.
<u>Port2PdeembedState</u>	IFixturing	Turns 2 port de-embedding ON and OFF on this channel.
<u>PortArbzImag</u>	IFixturing3	Sets and returns the imaginary impedance value for the specified single-ended port number.
<u>PortArbzReal</u>	IFixturing3	Sets and returns the real impedance value for the specified single-ended port number.
<u>PortArbzState</u>	IFixturing	Turns single-ended port impedance ON and OFF on the specified channel.
<u>PortArbzZ0</u>	IFixturing3	Sets and returns the real and imaginary impedance value for the specified single-ended port number.
<u>PortDelay</u>	IFixturing	Sets and returns the Port Delay value for the specified port number.
<u>PortExtState</u>	IFixturing	Turns Port Extension ON and OFF on this channel.
<u>PortExtUse1</u>	IFixturing	Sets and returns the USE1 ON/OFF state for the Loss1 and Freq1 values for the specified port number.
<u>PortExtUse2</u>	IFixturing	Sets and returns the USE2 ON/OFF state for the Loss2 and Freq2 values for the specified port number.
<u>PortFreq1</u>	IFixturing	Sets and returns the 1st Port Frequency value for the specified port number.

<u>PortFreq2</u>	IFixturing	Sets and returns the 2nd Port Frequency value for the specified port number.
<u>PortLoss1</u>	IFixturing	Sets and returns the 1st Port Loss value for the specified port number.
<u>PortLoss2</u>	IFixturing	Sets and returns the 2nd Port Loss value for the specified port number.
<u>PortLossDC</u>	IFixturing	Sets and returns the Port Loss at DC value for the specified port number.
<u>PortMatching_C</u>	IFixturing	Sets and returns the Capacitance, 'C' value for the specified port number.
<u>PortMatching_G</u>	IFixturing	Sets and returns the Conductance, 'G' value for the specified port number.
<u>PortMatching_L</u>	IFixturing	Sets and returns the Inductance, 'L' value for the specified port number.
<u>PortMatching_R</u>	IFixturing	Sets and returns the Resistance, 'R' value for the specified port number.
<u>PortMatchingCktModel</u>	IFixturing	Sets and returns the Port Matching circuit model for the specified port number.
<u>PortMatchingState</u>	IFixturing	Turns Port Matching ON and OFF on this channel.
<u>strPort2Pdeembed_S2PFile</u>	IFixturing	Sets and returns the 2 port De-embedding 'S2P' file name for the specified port number.
<u>strPortMatch_S2PFile</u>	IFixturing	Sets and returns the Port Matching 'S2P' file name for the specified port number.

IFixturing History

Interface	Introduced with PNA Rev:
IFixturing	5.0
IFixturing2	5.2
IFixturing3	5.25

FOM Collection

Description

The FOM collection provides access to the source and receiver range objects which are used for configuring frequency offset measurements.

The FOM range items are typically numbered as follows:

1. Primary
2. Source
3. Receivers
4. Source2 (if present)

Accessing the FOM Collection and [FOMRange](#) objects

```
Dim app as AgilentPNA835x.Application
Dim chan as Channel
Set chan = app.ActiveChannel

Dim ifom as FOM
Set ifom = chan.FOM

ifom.item(2).Coupled = false
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [About FOM](#)
- [Example Programs](#)

Method	Interface	Description
See History		

Item	IFOM
----------------------	------

Property	Interface	Description
----------	-----------	-------------

DisplayRange	IFOM	Sets the range to be displayed on the PNA x-axis.
FOMRange	IFOM	Object
RangeCount	IFOM	Returns the number of FOM ranges available on the PNA.
State	IFOM	Turns Frequency Offset ON and OFF.

FOM History

	Interface	Introduced with PNA Rev:
IFOM		7.10

Last Modified:

8-Mar-2007 Modified Access

FOMRange Object

Description

The FOM Range object provides access to the properties and methods for configuring a specific Range for frequency offset measurements.

Accessing an FOMRange object

Get a handle to a FOM Range by specifying an item in the [FOM collection](#).

The FOM range items are typically numbered as follows:

1. Primary
2. Source
3. Receivers
4. Source2 (if present)

```
Dim app as AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim ranges as FOM
Set ranges = app.ActiveChannel.FOM
ranges.item(2).Coupled = False
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [About FOM](#)
- [Example Programs](#)

Method	Interface	Description
	See History	

None

Property	Interface	Description
Coupled	IFOMRange	Sets and returns the state of coupling (ON or OFF) of this range to the primary range.
CWFrequency	IFOMRange	Set the Continuous Wave (CW) frequency.
Divisor	IFOMRange	Sets and returns the Divisor value to be used when coupling this range to the primary range.
Multiplier	IFOMRange	Sets and returns the Multiplier value to be used when coupling this range to the primary range.
Name	IFOMRange	Returns the name of this FOM range object.
Offset	IFOMRange	Sets and returns the offset value to be used when coupling this range to the primary range.
rangeNumber	IFOMRange	Returns the index number of the range within the FOM collection .
Segments	IFOMRange	Collection - Used to add segment sweep capability to a range.
StartFrequency	IFOMRange	Sets or returns the start frequency of this FOM Range.
StopFrequency	IFOMRange	Sets or returns the stop frequency of this FOM Range.
Start Power	IFOMRange	Sets or returns the start power of this FOM Range.
Stop Power	IFOMRange	Sets or returns the stop power of this FOM Range.
Sweep Type	IFOMRange	Sets the type of range sweep.

FOM History

Interface	Introduced with PNA Rev:
-----------	--------------------------

IFOM	7.10
------	------

Last Modified:

7-Mar-2007	Modified Receivers
------------	--------------------

Gating Object

Description

Contains the methods and properties that control Time Domain Gating.

Accessing the Gating Object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim gate As Gating
Set gate = app.ActiveMeasurement.Gating
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Time Domain Topics](#)
- [Example Programs](#)

Methods

None

Properties	Interface (see History)	Description
Center	IGating	Sets or returns the Center time. Shared with the Transform Object
CoupledParameters	IGating2	Select Gating parameters to couple
Shape	IGating	Specifies the shape of the gate filter.
Span	IGating	Sets or returns the Span time. Shared with the Transform Object
Start	IGating	Sets or returns the Start time. Shared with the Transform Object
State	IGating	Turns an Object ON and OFF.

[Stop](#)

IGating Sets or returns the Stop time.
Shared with the Transform Object

[Type](#)

IGating Specifies the type of gate filter used.

History

Interface	Introduced with PNA Rev:
IGating	1.0
IGating2	4.2

GuidedCalibration Object

Description

Contains the methods and properties used to perform a Guided Calibration.

A Guided Calibration must be performed on the Active Channel. To activate a channel, activate any measurement on that channel. Do this using [meas.Activate](#), which requires you already have a handle to the measurement.

Note: ECal orientation is performed using the [OrientECALModule_Property](#) and [ECALPortMapEx_Property](#) on the [Calibrator Object](#).

Accessing the GuidedCalibration object

```
Dim app as AgilentPNA835x.Application
Dim CalMgr
Set CalMgr = App.GetCalManager
Dim guidedCal
Set guidedCal = CalMgr.GuidedCalibration
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods		Description
AcquireStep	IGuidedCalibration	Acquire data for a cal step.
ApplyDeltaMatchFromCalSet Method	IGuidedCalibration2	Apply a cal as Delta Match Cal.
GenerateErrorTerms	IGuidedCalibration	Generates the error terms for the calibration.
GenerateGlobalDeltaMatchSequence	IGuidedCalibration2	Initiates a global delta match calibration.
GenerateSteps	IGuidedCalibration	Request to generate a connection list and return the number of steps required.
GetIsolationPaths	IGuidedCalibration3	Gets the list of port pairings for which isolation standards will be measured during calibration.
GetStepDescription	IGuidedCalibration	Query description of a step.

Initialize	IGuidedCalibration	Initial setup with channel context for the remote cal object.
SetIsolationPaths	IGuidedCalibration3	Sets the list of port pairings for which isolation standards will be measured during calibration.

Properties	Interface See History	Description
CalKitType	IGuidedCalibration	Sets the cal kit for the port.
CompatibleCalKits	IGuidedCalibration	Returns the list of cal kits for the port.
ConnectorType	IGuidedCalibration	Sets the connector type for the port.
IsolationAveragingIncrement	IGuidedCalibration3	Value by which to increment the channel's averaging factor during measurement of isolation standards.
PathCalMethod	IGuidedCalibration3	Specifies the calibration method for each port pair.
PathThruMethod	IGuidedCalibration3	Specifies the calibration THRU method for each port pair.
PortsNeedingDeltaMatch	IGuidedCalibration2	Returns port numbers that need delta match cal.
ThruCalMethod	IGuidedCalibration	Superseded with PathCalMethod and PathThruMethod
ThruPortList	IGuidedCalibration	Sets the thru connection port pairs.
ValidConnectorTypes	IGuidedCalibration	Get Valid Connector Types.

IGuidedCalibration History

Interface	Introduced with PNA Rev:
IGuidedCalibration	5.0
IGuidedCalibration2	5.25
IGuidedCalibration3	7.11

Last Modified:

9-Nov-2007 Added Activate note

HWAuxIO Object

Description

Contains the methods and properties that control the rear panel Auxiliary Input / Output connector.

Note: PNA-X models do NOT have this connector. However, the get/put Input/Output voltage commands can be used on the PNA-X to control ADC voltages on the Power I/O connector: Sending other Control:AUX commands to a PNA-X may result in unusual behavior.

Accessing the HWAuxIO object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim AuxIO As HWAuxIO
Set AuxIO = app.GetAuxIO
```

See Also:

- [Pinout of the Aux IO Connector](#)
- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Interface See History	Description
get_InputVoltage	IHWAuxIO	Superseded by get_InputVoltageEX
get_InputVoltageEX	IHWAuxIO5	Reads the ADC input voltage
get_OutputVoltage	IHWAuxIO	Reads ADC output voltages.
get_OutputVoltageMode	IHWAuxIO2	Reads mode setting for either DAC output.
get_PortCData	IHWAuxIO	Reads a 4-bit value from Port C
put_OutputVoltage	IHWAuxIO	Writes voltages to the DAC/Analog Output 1 and Output 2
put_OutputVoltageMode	IHWAuxIO2	Writes the mode setting for either DAC output.
put_PortCData	IHWAuxIO	Writes a 4-bit value to Port C

Properties		Description
FootSwitch	IHWAuxIO	Reads the Footswitch Input
FootswitchMode	IHWAuxIO3	Determines the action that occurs when the footswitch is pressed.
PassFailLogic	IHWAuxIO	Sets and reads the logic of the PassFail line Shared with the HWMaterialHandler Object
PassFailMode	IHWAuxIO	Sets and reads the mode of the PassFail line Shared with the HWMaterialHandler Object
PassFailPolicy	IHWAuxIO4	Sets the policy used to determine how global pass/fail is computed. Shared with the HWMaterialHandler Object
PassFailScope	IHWAuxIO	Sets and reads the scope of the PassFail line Shared with the HWMaterialHandler Object
PassFailStatus	IHWAuxIO4	Returns the most recent pass/fail status value. Shared with the HWMaterialHandler Object
PortCLogic	HWAuxIO	Sets and reads the logic mode of Port C
PortCMode	HWAuxIO	Sets and reads the mode of Port C
SweepEndMode	HWAuxIO	Sets and reads the event that causes the Sweep End line to go to a false state. Shared with the HWMaterialHandler Object
IHWAuxIO History		

Interface	Introduced with PNA Rev:
IHWAuxIO	2.0
IHWAuxIO2	3.0
IHWAuxIO3	3.0
IHWAuxIO4	5.0
IHWAuxIO5	7.5

Last Modified:

10-Jul-2007 Added new command

29-Jun-2007 Updated for PNA-X ADC commands

HWExternalTestSetIO Object

Description

Contains the methods and properties that control the rear panel External Test Set Input / Output connector

Accessing the HWExternalTestSetIO object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim ExtTS As HWExternalTestSetIO
Set ExtTS = app.GetExternalTestSetIO
```

See Also:

- [Pinout of the Aux IO Connector](#)
- [Pinout for the External Test Set Connector](#)
- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Description
ReadData	Reads data and generates the appropriate timing signals
ReadRaw	Reads data, but does NOT generate appropriate timing signals
WriteData	Writes data and generates the appropriate timing signals
WriteRaw	Writes data, but does NOT generate the appropriate timing signals

Properties	Description
Interrupt	Returns the state of the Interrupt line
SweepHoldOff	Returns the state of the Sweep Holdoff line

IHWExternalTestSetIO History

Interface	Introduced with PNA Rev:
-----------	--------------------------

HWExternalTestSetIO	2.0
---------------------	-----

HWMaterialHandlerIO Object

Description

Contains the methods and properties that control the rear panel Material Handler Input / Output connector.

Accessing the HWMaterialHandlerIO object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim MatHdlr As HWMaterialHandlerIO
Set MatHdlr = app.GetMaterialHandlerIO
```

See Also:

- [Pinout for the Material HandlerIO Connector](#)
- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Interface	Description
get_Input1	HWMaterialHandlerIO	Reads a hardware latch that captures low to high transition on Input1
get_Output	HWMaterialHandlerIO	Returns the last value written to the selected output pin.
get_Port	HWMaterialHandlerIO	Returns the value from the specified "readable" port.
put_Output	HWMaterialHandlerIO	Writes a TTL HI or TTL Low to output pins 3 or 4.
put_Port	HWMaterialHandlerIO	Writes a value to the specified port.

Properties		Description
IndexState	HWMaterialHandlerIO2	Determines the control of Material Handler connector Pin 20
ReadyForTriggerState	HWMaterialHandlerIO2	Determines the control of Material Handler connector Pin 21

PassFailLogic	HWMaterialHandlerIO	Sets and reads the logic of the PassFail line Shared with the HWAuxIO Object
PassFailMode	HWMaterialHandlerIO	Sets and reads the mode for the PassFail line Shared with the HWAuxIO Object
PassFailPolicy	HWMaterialHandlerIO2	Sets the policy used to determine how global pass/fail is computed. Shared with the HWAuxIO Object
PassFailScope	HWMaterialHandlerIO	Sets and reads the scope for the PassFail line Shared with the HWAuxIO Object
PassFailStatus	HWMaterialHandlerIO2	Returns the most recent pass/fail status value. Shared with the HWAuxIO Object
PortLogic	HWMaterialHandlerIO	Sets and returns the logic mode of data ports A-H
PortMode	HWMaterialHandlerIO	Sets and returns whether Port C or Port D is used for writing or reading data
SweepEndMode	HWMaterialHandlerIO	Sets and reads the event that cause the Sweep End line to go to a low state. Shared with the HWAuxIO Object

HWMaterialHandlerIO History

Interface	Introduced with PNA Rev:
HWMaterialHandlerIO	2.0
HWMaterialHandlerIO2	5.0

IFConfiguration Object

Description

These properties control the IF gain and source path settings for the following:

- E836x Opt H11 - all [IFConfiguration](#) and [IFConfiguration2](#) commands
- PNA-X - [IFConfiguration3](#) commands ONLY

Accessing the IFConfiguration object

```
Dim app as AgilentPNA835x.Application
Dim chan as Channel
Set chan = app.ActiveChannel
Dim cfg as IIFConfiguration
Set cfg = chan.IFConfiguration
```

See Also:

- [SignalProcessingModuleFour Object](#) (PNA-X ONLY)
- [PulseGenerator Object](#) (PNA-X ONLY)
- [IF Path Configuration](#) (PNA-X ONLY)
- [IF Access User Interface Settings](#)
- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Pulsed Application](#)
- [Pulsed Measurement Example](#)

Methods	Description
---------	-------------

None

Properties	Interface See History	Description
------------	--	-------------

IFFilterSampleCount	IFConfiguration2	Sets or returns the number of taps in the IF filter.
IFFilterSamplePeriod	IFConfiguration2	Sets or returns the IF filter sample period time.
IFFilterSamplePeriodList	IFConfiguration2	Returns the list of available IF filter sample periods for the instrument.
IFFilterSamplePeriodMode	IFConfiguration2	Sets or returns the IF filter sample period mode.(Auto or Manual).
IFFilterSource	IFConfiguration2	Sets or retrieves type of IF filter to be used.
IFFrequency	IFConfiguration3	Sets IF frequency in manual mode.
IFFrequencyMode	IFConfiguration3	Sets IF frequency mode to automatic or manual.
IFGainLevel	IFConfiguration	Sets the gain level for the specified receiver.
IFGainMode	IFConfiguration	Sets the gain state for ALL receivers.
IFGateEnable	IFConfiguration2	Sets or retrieves the state of the IF Gate.
IFSourcePath	IFConfiguration	Sets the source path of the specified receiver to Internal or External.
MaximumIFFilterSampleCount	IFConfiguration2	Returns the maximum allowed value for the IFFilterSampleCount.
MinimumIFFilterSampleCount	IFConfiguration2	Returns the minimum allowed value for the IFFilterSampleCount.
MaximumIFFrequency	IFConfiguration3	Returns the maximum IF frequency setting
MinimumIFFrequency	IFConfiguration3	Returns the minimum IF frequency setting

IIFConfiguration History

Interface	Introduced with PNA Rev:
IIFConfiguration	4.0
IIFConfiguration2	4.0
IIFConfiguration3	7.2

IMixer Interface (Option 083)

Description

Contains the methods and properties to setup FCA Mixer measurements. For performing calibrations, use either the SMC Type Object or the VMC Type Object .

Accessing the IMixer Interface

Access the IMixer Interface through the Measurement Object. If the particular type of Measurement that was created supports IMixer, then the program determines this at run time and can access the functionality exposed by IMixer. Because the determination of IMixer support is not made until runtime, the program should handle the case where IMixer is not supported on the object.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", "analyzerName ")
app.Preset

' FCA Measurements can't share the channel with standard measurements
' Because preset creates a single measurement in channel 1, we first delete the
standard measurement
Dim standardMeas As IMeasurement
Set standardMeas = app.ActiveMeasurement
standardMeas.Delete

' Create a Measurement object, in this case using the IMeasurement interface
Dim meas As IMeasurement
Set meas = app.CreateCustomMeasurementEx(1, "SMC_Forward.SMC_ForwardMeas", "SC21")

' See if this measurement object supports IMixer
Dim mixer As IMixer
```

See an example program that shows how to create and calibrate a standard SMC or VMC measurement or a fixed output SMC measurement.

See Also:

- PNA Automation Interfaces
- The PNA Object Model

Methods	Interface	Description
	See History	
Apply	IMixer3	Applies mixer settings.
Calculate	IMixer	Automatically calculate Input and Output frequencies for mixer setup.
LoadFile	IMixer	Loads a previously-configured mixer attributes file (.mxr)

SaveFile	IMixer	Saves the settings for the mixer/converter test setup to a mixer attributes file
----------	--------	--

Properties

Description

ActiveXAxisRange	IMixer3	Sets or returns the swept parameter to display on the X-axis.
AvoidSpurs	IMixer	Sets and returns the state of the avoid spurs feature.
EmbeddedLO	IMixer7	Provides measurements of mixers with an embedded LO.
IFDenominator	IMixer	Sets or returns the denominator value of the IF Fractional Multiplier.
IFNumerator	IMixer	Sets or returns the numerator value of the IF Fractional Multiplier.
IFSideband	IMixer	Sets or returns the value of the IF sideband.
IFStartFrequency	IMixer	Returns the start frequency of the mixer IF.
IFStopFrequency	IMixer	Returns the stop frequency of the mixer IF.
InputDenominator	IMixer	Sets or returns the denominator value of the Input Fractional Multiplier.
InputFixedFrequency	IMixer6	Sets or returns the mixer fixed Input frequency value.
InputNumerator	IMixer	Sets or returns the numerator value of the Input Fractional Multiplier.
InputPower	IMixer	Sets or returns the value of the Input Power.
InputRangeMode	IMixer6	Sets or returns the Input sweep mode.
InputStartFrequency	IMixer	Sets or returns the start frequency of the mixer input.
InputStopFrequency	IMixer	Sets or returns the stop frequency of the mixer input.
IsInputGreaterThanLO	IMixer2	Specifies whether to use the Input frequency that is greater than the LO or the LO.
LODenominator	IMixer	Sets or returns the denominator value of the LO Fractional Multiplier.
LOFixedFrequency	IMixer	Sets or returns the fixed frequency of the specified LO.
LOName	IMixer	Sets or returns the LO name.
LONumerator	IMixer	Sets or returns the numerator value of the LO Fractional Multiplier.
LOPower	IMixer	Sets or returns the value of the LO Power.
LORangeMode	IMixer3	Sets or returns the LO sweep mode to fixed or swept.
LOStage	IMixer	Returns the number of stages.

LOStartFrequency	IMixer3	Sets or returns the start frequency of the specified LO.
LOStopFrequency	IMixer3	Sets or returns the start frequency of the specified LO.
NominalIncidentPowerState	IMixer4	Toggles Nominal Incident Power ON and OFF.
OutputFixedFrequency	IMixer3	Sets or returns the fixed frequency of the mixer output.
OutputRangeMode	IMixer6	Sets or returns the Output sweep mode.
OutputSideband	IMixer	Sets or returns the value of the output sideband.
OutputStartFrequency	IMixer	Sets or returns the start frequency of the mixer output.
OutputStopFrequency	IMixer	Sets or returns the stop frequency of the mixer output.

IMixer History

Interface	Introduced with PNA Rev:
IMixer	1.0
IMixer2	3.5
IMixer3	4.0
IMixer4	4.8
IMixer5	6.04
IMixer6	6.20
IMixer7	7.21

InterfaceControl Object

Description

Contains the methods and properties that support Interface Control.

Accessing the InterfaceControl object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim IntControl As InterfaceControl
Set IntControl = app.InterfaceControl
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Interface Control Feature](#)
- [Example Programs](#)

Methods	Interface	Description
ConfigurationFile	InterfaceControl	Recalls an Interface Control file

Properties	Description
State	InterfaceControl Turns Interface Control ON and OFF

InterfaceControl History

Interface	Introduced with PNA Rev:
InterfaceControl	5.2

Limit Test Collection

Description

Child of the **Measurement** Object. A collection that provides a mechanism for iterating through the Measurement's Limit Segment objects (Limit Lines). The collection has 100 limit lines by default.

Accessing the LimitTest collection

Get a handle to an individual limit segment by specifying an item of the LimitTest collection.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim limSegs As LimitTest
Set limSegs = app.ActiveMeasurement.LimitTest
limSegs.Item(1).BeginResponse = 1000000000#
```

See Also:

- [LimitSegment Object](#)
- [Collections in the Analyzer](#)
- [The PNA Object Model](#)
- [Limit Line Testing Example](#)

Methods	Description
GetTestResult	Retrieves the Pass/Fail results of the Limit Test (State).
Item	Use to get a handle on a limit line in the collection.
Properties	Description
Count	Returns the number of limit lines used in the measurement.
LineDisplay	Displays the limit lines on the screen.
SoundOnFail	Enables a beep on Limit Test fails.
State	Turns ON and OFF limit testing.

LimitTest History

Interface	Introduced with PNA Rev:
-----------	-----------------------------

ILimitTest	1.0
------------	-----

LimitSegment Object

Description

The LimitSegment object is an individual limit line.

Accessing the LimitSegment object

Get a handle to an individual limit line by using the LimitTest collection.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim limSegs As LimitTest
Set limSegs = app.ActiveMeasurement.LimitTest
limSegs(1).BeginResponse = 1000000000#
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Description
---------	-------------

None

Properties	Description
------------	-------------

BeginResponse	Specifies the Y-axis value that corresponds with Begin Stimulus (X-axis) value.
BeginStimulus	Specifies the beginning X-axis value of the Limit Line.
EndResponse	Specifies the Y-axis value that corresponds with End Stimulus (X-axis) value.
EndStimulus	Specifies the End X-axis value of the Limit Line.
Type	Specifies the Limit Line type.

LimitSegment History

Interface	Introduced with PNA Rev:
-----------	--------------------------

ILimitSegment	1.0
---------------	-----

Marker Object

Description

Contains the methods and properties that control Markers. There are 10 markers available per measurement:

- 1 reference marker
- 9 markers for absolute data or data relative to the reference marker (delta markers).

There are two ways to control markers through COM.

1. The [Measurement object](#) has properties that apply to ALL of the markers for that measurement. For example, **meas.MarkerFormat = naLinMag** applies formatting to all markers.
2. Marker object properties override the Measurement object properties. For example, you can then override the format setting for an individual marker by specifying **mark.Format = naLogMag** on the marker object.

Note: [SearchFilterBandwidth](#) is available through the [measurement object](#).

Accessing the Marker object

To turn ON a marker, get a handle to the marker through the [measurement object](#). If not already activated, this command will turn ON marker 1

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

app.ActiveMeasurement.marker(1).Format = naLinMag
```

You can also set the marker object to an object variable:

```
Dim m1 As Marker
Set m1 = app.ActiveMeasurement.Marker(1)
m1.Format = naMarkerFormat_LinMag
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Interface	Description
Activate	IMarker	Makes an object the Active Object. Shared with the Marker Object
SearchMax	IMarker	Searches the marker domain for the maximum value.

SearchMin	IMarker	Searches the marker domain for the minimum value.
SearchNextPeak	IMarker	Searches the marker's domain for the next largest peak value.
SearchPeakLeft	IMarker	Searches the marker's domain for the next VALID peak to the left of the marker.
SearchPeakRight	IMarker	Searches the marker's domain for the next VALID peak to the right of the marker.
SearchTarget	IMarker	Searches the marker's domain for the target value.
SearchTargetLeft	IMarker	Moving to the left of the marker position, searches the marker's domain for the target value.
SearchTargetRight	IMarker	Moving to the right of the marker position, searches the marker's domain for the target value.
SetCenter	IMarker	Changes the analyzer's center frequency to the X-axis position of the marker.
SetCW	IMarker	Changes the analyzer to sweep type CW mode and makes the CW frequency the marker's frequency.
SetElectricalDelay	IMarker	Changes the measurement's electrical delay to the marker's delay value.
SetReferenceLevel	IMarker	Changes the measurement's reference level to the marker's Y-axis value.
SetStart	IMarker	Changes the analyzer's start frequency to the X-axis position of the marker.
SetStop	IMarker	Changes the analyzer's stop frequency to the X-axis position of the marker.

Properties		Description
Bucket Number	IMarker	Marker data point number
DeltaMarker	IMarker	Makes a marker relative to the reference marker
Distance	IMarker2	Sets or returns distance value for time domain trace.
Format	IMarker	Linear, SWR, and so forth
Interpolated	IMarker	Turn marker interpolation ON and OFF
Number	IMarker	Read the number of the active marker
PeakExcursion	IMarker	Sets and reads the peak excursion value for the specified marker.

PeakThreshold	IMarker	Sets peak threshold for the specified marker.
SearchFunction	IMarker	Emulates the Tracking function in the marker search dialog box.
Stimulus	IMarker	Sets and reads the X-Axis value of the marker.
Target Value	IMarker	Sets the target value for the marker when doing Target Searches.
Tracking	IMarker	The tracking function finds the selected search function every sweep.
Type	IMarker	Sets and reads the marker type.
UserRange	IMarker	Assigns the marker to the specified User Range.
UserRangeMax	IMarker	Sets the stimulus stop value for the specified User Range.
UserRangeMin	IMarker	Sets the stimulus start value for the specified User Range.
Value	IMarker	Reads the Y-Axis value of the marker.

Marker History

Interface	Introduced with PNA Rev:
IMarker	1.0
IMarker2	4.2

Measurement Object

See [ArrayTransfer Interface](#) for putting and getting typed data.

See [IMixer Interface](#) (used with [Option 083](#))

Description

The Measurement object is probably the most used object in the PNA Object Model. A measurement object represents the chain of data processing algorithms that take raw data from the channel and make it ready for display, which then becomes the scope of the [Trace object](#).

A Measurement object is defined by its parameter (S11, S22, A/R1, B and so forth). The measurement object is associated with a [channel](#) which drives the hardware that produces the data that feeds the measurement. The root of a measurement is the raw data. This buffer of complex paired data then flows through a number of processing blocks: error-correction, trace math, phase correction, time domain, gating, formatting. All of these are controlled through the measurement object.

The ACTIVE measurement is the measurement that will be acted upon if you make a setting from the front panel. It is the measurement whose "button" is pressed in the window with the red "active window" frame. If you create a new measurement, that measurement becomes the active measurement.

Therefore, all automation methods with the word "Active" in them refer to the object associated with the Active measurement, whether that object is a Channel, Window, Trace or Limit line.

Learn about the [IMeasurement2 Interface](#) for reading stimulus properties.

Accessing the Measurement object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim meas As IMeasurement
Set meas = app.ActiveMeasurement
```

or

```
Set meas = app.Measurements(n)
```

You can access four other objects through the Measurement object: markers, limit test, transform, and gating. For example, because each measurement has its own set of markers, you can set a marker by doing this:

```
Dim meas as measurement
Set meas = app.ActiveMeasurement
meas.marker(1).Stimulus = 900e6
```

IMeasurement2 Interface

Some of the properties and methods for the IMeasurement2 Interface return stimulus values that are set using the channel object. The following is the reason these properties and methods are duplicated.

Every measurement carries with it a snapshot of the stimulus properties of the channel that were in effect when the measurement last acquired data. Therefore, it is the measurement that provides the most accurate stimulus description of its data. Any change made to the channel after the measurement was acquired renders the IChannel interface unreliable in terms of describing the measurement.

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)
- [Superseded commands](#)

(**Bold** Methods or Properties provide access to a child object)

Methods	Interface	Description
Activate	IMeasurement	Makes an object the Active Object. Shared with the Marker Object
ActivateMarker	IMeasurement	Makes a marker the Active Marker.
ChangeParameter	IMeasurement	Changes the parameter of the measurement.
DataToDivisor	IMeasurement	Superseded with DoReceiverPowerCal Method
DataToMemory	IMeasurement	Stores the active measurement into memory.
Delete	IMeasurement	Deletes the measurement object.
DeleteAllMarkers	IMeasurement	Deletes all of the markers from the measurement.
DeleteMarker	IMeasurement	Deletes a marker from the active measurement.
getData	IMeasurement	Retrieves Complex data from analyzer memory
getDataByString	IMeasurement	Retrieves variant data from the specified location in your choice of formats.
GetFilterStatistics	IMeasurement	Returns all four Filter Statistics
GetReferenceMarker	IMeasurement	Returns a handle to the reference marker.
Get SnPData	IMeasurement3	Returns SnP data.
GetSnpDataWithSpecifiedPorts	IMeasurement7	Returns sNp data for the specified ports.
GetTraceStatistics	IMeasurement	Returns the Trace Statistics.
GetXAxisValues	IMeasurement2	Returns the stimulus values for the measurement.
InterpolateMarkers	IMeasurement	Turns All Marker Interpolation ON and OFF for the measurement.
putDataComplex	IMeasurement	Puts complex data into one of five data buffers.

putDataScalar	IMeasurement	Puts formatted variant data into the measurement results buffer.
SearchFilterBandwidth	IMeasurement	Searches the domain with the current BW target.
WriteSnpFileWithSpecifiedPorts	IMeasurement7	Write sNp data for specified ports to a file.

Properties	Interface	Description
ActiveMarker	IMeasurement	Returns a handle to the Active Marker object.
BalancedMeasurement	IMeasurement	Sets the measurement type that is used with balanced topologies.
BandwidthTarget	IMeasurement	The insertion loss value at which the bandwidth of a filter is measured.
BandwidthTracking	IMeasurement	Turns Bandwidth Tracking function ON and OFF.
CalibrationName	IMeasurement2	Returns the name of the cal type.
CalibrationType	IMeasurement	Sets or returns the cal type for the current S-Parameter measurement.
CalibrationTypeID	IMeasurement2	Sets or returns the cal type for the current FCA measurement.
Center	IMeasurement2	Returns the stimulus value of the center point for the measurement.
channelNumber	IIMeasurement	Returns the channel number. Shared with the Channel Object
Domain	IMeasurement2	Returns the domain (frequency, time, power) for the measurement.
ElectricalDelay	IMeasurement	Sets electrical delay.
ElecDelayMedium	IMeasurement2	Sets or returns the characteristic of the electrical delay medium.
ErrorCorrection	IMeasurement	Set or get the state of error correction for the measurement.
FilterBW	IMeasurement	Returns the results of the SearchBandwidth method.
FilterCF	IMeasurement	Returns the Center Frequency result of the SearchBandwidth method.
FilterLoss	IMeasurement	Returns the Loss value of the SearchBandwidth method.

FilterQ	IMeasurement	Returns the Q (quality factor) result of the SearchBandwidth method.
Format	IMeasurement	Sets display format.
Gating	IMeasurement	Controls Time Domain Gating.
InterpolateCorrection	IMeasurement	Turns ON and OFF the calculation of new error terms when stimulus values change.
InterpolateNormalization	IMeasurement	Superseded with DoReceiverPowerCal Method
IsSparameter	IMeasurement2	Returns true if measurement represents an S-Parameter.
LimitTest	IMeasurement	Collection for iterating through the Limit Segment objects (Limit Lines).
LimitTestFailed	IMeasurement	Returns the results of limit testing
LoadPort	IMeasurement	Returns the load port number associated with an S-parameter reflection measurement.
LogMagnitudeOffset	IMeasurement	Superseded with DoReceiverPowerCal Method
MagnitudeOffset	IMeasurment4	Offsets the magnitude of the entire data trace to a specified value.
MagnitudeSlopeOffset	IMeasurment4	Offsets the magnitude of the data trace to a value that changes linearly with frequency.
Marker	IMeasurement	Contains the methods and properties that control Markers.
MarkerFormat	IMeasurement	Sets or returns the format of all the markers in the measurement.
Marker State	IMeasurement3	Sets or returns the ON / OFF state of a marker.
Mean	IMeasurement	Returns the mean value of the measurement.
Name	IMeasurement	Sets or returns the name of the measurement.
NAWindow	IMeasurement	Controls the part of the display that contains the graticule, or what is written on the display.
Normalization	IMeasurement	Superseded with DoReceiverPowerCal Method
Number	IMeasurement	Returns the number of the measurement.

<u>NumberOfPoints</u>	IMeasurement2	Returns the Number of Points of the measurement.
<u>Parameter</u>	IMeasurement	Returns the measurement Parameter.
<u>PeakToPeak</u>	IMeasurement	Returns the Peak to Peak value of the measurement.
<u>PhaseOffset</u>	IMeasurement	Sets the Phase Offset for the active channel.
<u>ReceivePort</u>	IMeasurement2	Returns the receiver port of the measurement.
<u>ReferenceMarkerState</u>	IMeasurement	Turns the reference marker ON or OFF
<u>ShowStatistics</u>	IMeasurement	Displays and hides the measurement statistics (peak-to-peak, mean, standard deviation) on the screen.
<u>Smoothing</u>	IMeasurement	Turns ON and OFF data smoothing.
<u>SmoothingAperture</u>	IMeasurement	Specifies or returns the amount of smoothing as a ratio of the number of data points in the measurement trace.
<u>SourcePort</u>	IMeasurement2	Returns the source port of the measurement.
<u>Span</u>	IMeasurement2	Returns the stimulus span (stop - start) for the measurement.
<u>StandardDeviation</u>	IMeasurement	Returns the standard deviation of the measurement.
<u>Start</u>	IMeasurement2	Returns the stimulus value of the first point for the measurement.
<u>StatisticsRange</u>	IMeasurement	Sets the User Range number for calculating measurement statistics.
<u>Stop</u>	IMeasurement2	Returns the stimulus value of the last point for the measurement.
<u>Trace</u>	IMeasurement	Controls scale, reference position, and reference line.
<u>TraceMath</u>	IMeasurement	Performs math operations on the measurement object and the trace stored in memory.
<u>TraceTitle</u>	IMeasurement8	Writes and reads a trace title.
<u>TraceTitleState</u>	IMeasurement8	Turns trace title ON and OFF
<u>Transform</u>	IMeasurement	Controls Time Domain transforms.
<u>View</u>	IMeasurement	Sets (or returns) the type of trace displayed on the screen

[WGCutoffFreq](#)

IMeasurement2 Sets or returns the value of the waveguide cut off frequency

IMeasurement History

Interface	Introduced with PNA Rev:
IMeasurement	1.0
IMeasurement2	3.0
IMeasurement3	4.0
IMeasurement4	4.2
IMeasurement5	5.0
IMeasurement7	6.2

IArrayTransfer Interface

Description

Contains methods for putting data in and getting data out of the analyzer using typed data. This interface transfers data more efficiently than the IMeasurement Interface.

Methods	Description
getComplex	Retrieves real and imaginary data from the specified buffer.
getNAComplex	Retrieves typed NAComplex data from the specified buffer.
getPairedData	Retrieves magnitude and phase data pairs from the specified buffer.
getScalar	Retrieves scalar data from the specified buffer.
putComplex	Puts real and imaginary data into the specified buffer.
putNAComplex	Puts typed NAComplex data into the specified buffer.
putScalar	Puts scalar data into the measurement result buffer.

Properties	Description
------------	-------------

None

IArrayTransfer History

Interface	Introduced with PNA Rev:
-----------	--------------------------

IArrayTransfer

1.0

Measurement Collection

Description

A collection object that provides a mechanism for iterating through the Application measurements.

Accessing the Measurements collection

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim measments As Measurements
Set measments = app.Measurements
```

See Also:

- [Measurement Object](#)
- [Collections in the Analyzer](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Description
Add	Adds a Measurement to the collection.
Item	Use to get a handle on a measurement in the collection.
Remove	Removes a measurement from the measurements collection.
Properties	Description
Count	Returns the number of measurements in the analyzer.
Parent	Returns a handle to the current Application.

NAWindow Object

Description

The NAWindow object controls the part of the display that contains the graticule, or what is written on the display.

Accessing the NaWindow object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim window As NAWindow
Set window = app.NAWindows(1)
window.AutoScale
```

or

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", "analyzerName")

app.NAWindows(1).AutoScale
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

(**Bold** Methods or Properties provide access to a child object)

Methods	Description
Autoscale	Autoscales all measurements in the window. Shared with the Trace Object
ShowMarkerReadout	Shows and Hides the Marker readout for the active marker in the upper-right corner of the window object.
ShowTable	Shows or Hides the specified table for the active measurement in the lower part of the window object.
Properties	Description
ActiveTrace	Sets a trace to the Active Trace.
MarkerReadout	Sets and reads the state of the Marker readout for the active marker in the upper-right corner of the window object.

<u>MarkerReadoutSize</u>	Specifies the size of font used when displaying Marker readout in the selected window.
<u>OneMarkerReadoutPerTrace</u>	Either show marker readout of only the active trace or all of the traces simultaneously.
<u>Title</u>	Writes or reads a custom title for the window.
<u>TitleState</u>	Turns ON and OFF the window title.
<u>Traces</u>	Collection for getting a handle to a trace or iterating through the traces in a window.
<u>WindowNumber</u>	Reads the number of the active window.
<u>WindowState</u>	Maximizes or minimizes a window. Shared with the Application Object

INaWindow History

Interface	Introduced with PNA Rev:
INaWindow	1.0

NAWindows Collection

Description

A collection object that provides a mechanism for iterating through the Application windows.

Accessing the NAWindows collection

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim windows As NAWindows
Set windows = app.NAWindows
```

See Also:

- [NAWindow Object](#)
- [Collections in the Analyzer](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Description
Add	Adds a window to the NAWindows collection.
Item	Use to get a handle to a window in the collection.
Remove	Removes a window from the NAWindows collection.
Properties	Description
Count	Returns the number of windows on the analyzer.
Parent	Returns a handle to the current Application.

PathConfiguration Object

Description

Provides access to the path configuration currently active on the channel object.
To load, store, or delete a configuration, see [ConfigurationManager](#) Object.

Accessing the PathConfiguration object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim chan as Channel
Set chan = app.ActiveChannel

Dim pathConfig As PathConfiguration
Set pathConfig = chan.PathConfiguration
```

Note:
To learn how to make configuration (element) settings, see this [Path Configuration Example](#)
Also see this [list of configurable elements and settings](#).

See Also:

- [PathConfigurationManager Object](#)
- [PathElement Object](#)
- [Path Configurator](#) UI
- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)

Methods	Interface	Description
	See History	

[Elements](#) IPathConfiguration Elements are the objects that can be configured (switches and so forth). See the [list of elements](#) and settings.

[Store](#) IPathConfiguration Saves the current configuration to the specified name.

Properties	Interface	Description
	See History	

[DescriptiveText](#) IPathConfiguration Write and read descriptive text associated with the configuration.

[Element](#) IPathConfiguration Returns a handle to the [IPathElement](#) object.

[Name](#) IPathConfiguration Returns the name of the current configuration.

[Parent](#) IPathConfiguration Returns a pointer to the parent COM object (Channel).

IPathConfiguration History

Interface	Introduced with PNA Rev:
IPathConfiguration	7.2

PathConfigurationManager Object

Description

These commands allow configurations to be stored, loaded, or deleted on the PNA.

To **make** path configuration settings, see [PathConfiguration Object](#) and the [PathElement Object](#)

Accessing the PathConfigurationManager object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim pathConfig As PathConfigurationManager
Set pathConfig = app.PathConfigurationManager
```

Note:

To learn how to make configuration (element) settings, see this [Path Configuration Example](#)

Also see this [list of configurable elements and settings](#).

See Also:

- [Path Configuration Example](#)
- [Path Configurator](#)
- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Interface	Description
	See History	
Configurations	IPathConfigurationManager	Returns a list of configuration names stored in the PNA.
DeleteConfiguration	IPathConfigurationManager	Deletes the specified configuration from the PNA.
LoadConfiguration	IPathConfigurationManager	Loads the named configuration.
StoreConfiguration	IPathConfigurationManager	Saves the path configuration

Properties	Interface	Description
	See History	

[Parent](#)

IPathConfigurationManager Returns a handle to the Application object.

IPathConfigurationManager History

Interface	Introduced with PNA Rev:
IPathConfigurationManager	7.2

PathElement Object

Description

Provides access to the settings for the PathElement object.

Accessing the PathElement object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim chan as Channel
Set chan = app.ActiveChannel

Dim pathConfig As PathConfiguration
Set pathConfig = chan.PathConfiguration

Dim element as PathElement
Set element = pathConfig.PathElement("Src1")
```

Note:

To learn how to make configuration (element) settings, see this [Path Configuration Example](#)

Also see this [list of configurable elements and settings](#).

See Also:

- [Path Configurator](#)
- [PathConfigurationManager Object](#)
- [PathConfiguration Object](#)
- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Interface	Description
	See History	

None

Properties	Interface	Description
	See History	

Name	IPathElement	Returns the name of the element.
Parent	IPathElement	Returns a pointer to the Parent Object (PathConfiguration)
Value	IPathElement	Read / Write get the current setting for the element.
Values	IPathElement	Returns all valid settings for the element.

IPathElement History

Interface	Introduced with PNA Rev:
IPathElement	7.2

PortExtension Object **Superseded**

ALL methods and properties on the PortExtension Object are Superseded with the [Fixturing Object](#).

Description

Contains the methods and properties that control Port Extensions.

Accessing a PortExtension object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim PortExt As PortExtension
Set PortExt = app.PortExtension
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)
- [Superseded commands](#)

Methods

None

Property	Description
Input A	Sets the Input A extension value.
Input B	Sets the Input B extension value.
Input C	Sets the Input C extension value.
Port 1	Sets the Port 1 extension value.
Port 2	Sets the Port 2 extension value.
Port 3	Sets the Port 3 extension value.
State	Turns Port Extensions ON and OFF.

IPort Extension History

Interface	Introduced with PNA Rev:
-----------	--------------------------

IPort Extension	1.0
-----------------	-----

PowerLossSegment Object

Description

Contains the properties describing a segment of the power loss table used in source power calibration.

You can get a handle to one of these segments through the [segments.Item](#) Method of the PowerLossSegments collection.

Accessing the PowerLossSegment object

You can get a handle to one of these segments through `PowerLossSegments.Item(n)`

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim PwrLossSeg As PowerLossSegment
Set PwrLossSeg = app.SourcePowerCalibrator.PowerLossSegments(1)
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods

None

Properties	Description
Frequency	The frequency (Hz) associated with this segment. Shared with the PowerSensorCalFactorSegment Object
Loss	The loss value (dB) associated with this segment.
SegmentNumber	Returns the number of this segment Shared with the PowerSensorCalFactorSegment Object

IPowerLossSegment History

Interface	Introduced with PNA Rev:
IPowerLossSegment	2.0

PowerLossSegments Collection

Description

A collection object that provides a mechanism for iterating through the segments of the power loss table used in source power calibration.

Accessing the PowerLossSegments collection

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim PwrLossSegs As PowerLossSegments
Set PwrLossSegs = app.SourcePowerCalibrator.PowerLossSegments
```

See Also:

- [PowerLossSegment Object](#)
- [Collections in the Analyzer](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Description
Add	Adds a PowerLossSegment object to the collection.
Item	Use to get a handle to a PowerLossSegment object in the collection.
Remove	Removes an object from the collection.
Properties	Description
Count	Returns the number of objects in the collection.
Parent	Returns a handle to the Parent object (SourcePowerCalibrator) of this collection.

PowerMeterInterface Object

Description

Contains the properties used to select a power meter and sensor to be used for a source power calibration.

Note: This object replaces the [PowerMeterGPIBAddress Property](#).

Accessing the PowerMeterInterface object

Get a handle to a power meter object using the [PowerMeterInterfaces](#) collection.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)
Dim pwrMtrInterfaces As PowerMeterInterfaces
Set pwrMtrInterfaces = app.SourcePowerCalibrator.PowerMeterInterfaces
If pwrMtrInterfaces.Count > 0 Then
    Dim pwrMtrInterface As PowerMeterInterface
    Set pwrMtrInterface = pwrMtrInterfaces(1)
    pwrMtrInterface.Path = naUSB
    pwrMtrInterface.Locator = "Agilent Technologies,U2000A,MY12345678"
End If
```

See Also:

- [Source Power Calibration](#)
- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods

None

Properties	Description
Path	Specifies the interface to use: GPIB, USB, LAN
Locator	Specifies the location (address) of the power meter/sensor.

IPowerMeterInterface History

Interface	Introduced with PNA Rev:
-----------	--------------------------

IPowerMeterInterface	7.50
----------------------	------

Last Modified:

5-Jul-2007 MX New topic

PowerMeterInterfaces Collection

Description

A collection object that provides a mechanism for accessing the PowerMeterInterface objects.

The collection size is limited to one PowerMeterInterface object. By default, that PowerMeterInterface object refers to GPIB, and to the GPIB address that is currently set for the power meter on that PNA.

The power meter is specified by using the [Interface](#) property.

Accessing the PowerMeterInterfaces collection

Get a handle to a power meter object using the PowerMeterInterfaces collection.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)
Dim pwrMtrInterfaces As PowerMeterInterfaces
Set pwrMtrInterfaces = app.SourcePowerCalibrator.PowerMeterInterfaces
If pwrMtrInterfaces.Count > 0 Then
    Dim pwrMtrInterface As PowerMeterInterface
    Set pwrMtrInterface = pwrMtrInterfaces(1)
    pwrMtrInterface.Path = naUSB
    pwrMtrInterface.Locator = "Agilent Technologies,U2000A,MY12345678"
End If
```

See Also:

- [Source Power Calibration](#)
- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods

[Item](#) Use to get a handle to a [PowerMeterInterface](#) object in the collection.

Properties	Description
------------	-------------

Count	Returns the number of objects in the collection.
-----------------------	--

IPowerMeterInterfaces History

Interface	Introduced with PNA Rev:
-----------	--------------------------

IPowerMeterInterfaces	7.50
-----------------------	------

Last Modified:

9-Jul-2007	MX New topic
------------	--------------

PowerSensor Object

Description

Each power sensor connected to the power meter associated with Source Power Calibration will have a PowerSensor object created to represent it. These PowerSensor objects reside in the [PowerSensors](#) collection within the SourcePowerCalibrator object. You cannot directly create PowerSensor objects, but can only retrieve existing ones from the PowerSensors collection.

The PowerSensorCalFactorSegment object is also accessed through the PowerSensor object. These are accessed through the CalFactorSegments collection in the PowerSensor object.

Accessing a PowerSensor object

```
Dim pna As AgilentPNA835x.Application
Set pna = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim powerCalibrator as SourcePowerCalibrator
Dim powerSensor as PowerSensor
Dim calFactorSegment as PowerSensorCalFactorSegment

Set powerCalibrator = pna.SourcePowerCalibrator

' Specify GPIB address of the power meter.
powerCalibrator.PowerMeterGPIBAddress = 13

' Each time the PowerSensors collection is accessed, the power meter is queried to
determine which channels have sensors attached. The collection is updated
accordingly.

If powerCalibrator.PowerSensors.Count > 0 Then
' If channel B of the meter has a sensor attached but channel A does not, then
element 1 of the
' collection is sensor B. Whenever channel A has a sensor, sensor A will be element
1.
Set powerSensor = powerCalibrator.PowerSensors(1)
' Insert one new PowerSensorCalFactorSegment at the beginning of the collection
(index 1).

powerSensor.CalFactorSegments.Add(1)
' Assign our variable to refer to that object.
Set calFactorSegment = powerSensor.CalFactorSegments(1)

' Set property values for that object.
calFactorSegment.Frequency = 300000
' frequency in Hz
calFactorSegment.CalFactor = 98
' cal factor in percent

End If
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

(**Bold** Methods or Properties provide access to a child object)

Methods	Description
---------	-------------

None

Properties	Description
------------	-------------

CalFactorSegments	Collection for iterating through the segments of a power sensor cal factor table.
MinimumFrequency	Minimum usable frequency (Hz) specified for this power sensor.
MaximumFrequency	Maximum usable frequency (Hz) specified for this power sensor.
PowerMeterChannel	Identifies which power sensor this object corresponds to (or which channel of the power meter the sensor is connected to).
ReferenceCalFactor	Reference cal factor (%) associated with this power sensor.

IPowerSensor History

Interface	Introduced with PNA Rev:
IPowerSensor	2.0

PowerSensorCalFactorSegment Object

Description

Contains the properties describing a segment of a power sensor cal factor table.

Accessing the PowerSensorCalFactorSegment object

You can get a handle to one of these segments through [CalFactorSegments](#).Item(n)

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim calFactSeg As CalFactorSegments
Set calFactSeg = app.SourcePowerCalibrator.PowerSensors(1).CalFactorSegments(1)
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods

None

Properties	Description
Frequency	The frequency (Hz) associated with this segment. Shared with the PowerLossSegment Object
CalFactor	The cal factor (%) associated with this segment.
SegmentNumber	Returns the number of this segment. Shared with the PowerLossSegment Object

IPowerSensorCalFactorSegment History

Interface	Introduced with PNA Rev:
IPowerSensorCalFactorSegment	2.0

PowerSensors Collection

Description

A collection object that provides a mechanism for iterating through the PowerSensor objects which are connected to the power meter. Each time this collection object is accessed, the power meter is queried to determine how many sensors are connected to it. The collection size and order of objects is then adjusted accordingly before the requested method or property operation is performed. The power meter is specified by using the [PowerMeterGPIBAddress](#) property of the [SourcePowerCalibrator](#) object.

Accessing the PowerSensors Collection

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim PwrSensors As PowerSensors
Set PwrSensors = app.SourcePowerCalibrator.PowerSensors
```

See Also:

- [PowerSensor Object](#)
- [Collections in the Analyzer](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Description
Item	Use to get a handle to a PowerSensor object in the collection.
Properties	Description
Count	Returns the number of objects in the collection.
Parent	Returns a handle to the Parent object (SourcePowerCalibrator) of this collection.

Preferences Object

Description

Sets the preferences for the behavior of several properties.

Accessing the Preferences object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim pref As Preferences
Set pref = app.Preferences
```

See Also:

- [Citifile Define Data Saves](#)
- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods

None

Properties	Interface	Description
	See History	
AuxTriggerScopelsGlobal	IPreferences5	Sets the External Trigger OUT behavior to have either Global or Channel scope.
CitiContents	IPreferences	Specifies the contents of subsequent citifile saves.
CitiFormat	IPreferences	Specifies the format of subsequent citifile saves.
EnableSourceUnleveledEventsProperty	IPreferences6	Specifies whether or not to report Source Unleveled errors as system events.
OffsetReceiverAttenuator	IPreferences6	Mathematically offset the test port receiver.
OffsetSourceAttenuator	IPreferences6	Mathematically offset the reference receiver.

PowerOnDuringRetraceMode	IPreferences4	Specify whether to turn RF power ON or OFF during a retrace for single-band frequency or segment sweeps ONLY.
PowerSweepRetracePowerMode	IPreferences3	At the end of a power sweep, specifies whether to maintain source power at the start or stop power level.
PreferInternalTriggerOnChannelSingle	IPreferences2	Sets the preference for chan.Single behavior.
PreferInternalTriggerOnUnguidedCal	IPreferences2	Set the preference for the trigger behavior when performing an Unguided calibration.
RemoteCalStoragePreference	IPreferences7	Specifies the default manner in which calibrations performed via SCPI or COM are to be stored.
SnPFormat	IPreferences	Specifies the format of subsequent .S1P, .S2P, .S3P file saves.

IPreferences History

Interface	Introduced with PNA Rev:
IPreferences	4.0
IPreferences2	6.0
IPreferences3	7.2
IPreferences4	6.04
IPreferences5	7.10
IPreferences6	7.20
IPreferences7	7.21

PulseGenerator Object

Description


Contains the properties for configuring the five internal pulse generators in the PNA-X.

Accessing the PulseGenerator object

```
Dim app as AgilentPNA835x.Application
Dim chan as Channel
Set chan = app.ActiveChannel
Dim pulse as PulseGenerator
Set pulse = chan.PulseGenerator
```

Each pulse generator is specified in the Pulse Generator properties. See below.

Pulse Definitions

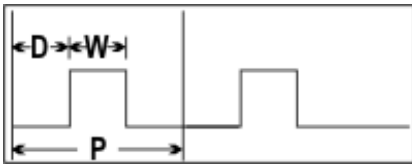

- D = Delay; the time before each pulse begins
- W = Width; the time the pulse is ON
- P = Period; one complete pulse cycle
- W/P = Duty Cycle; the ratio of pulse ON/OFF

Important: If **D + W** is greater than **P**, then undefined PNA behavior results. There is NO error message or warning.

See Also:

- [IF Path Block Diagram.](#)
- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [About PNA-X Pulse Capabilities](#)
- [Example Programs](#)

Methods	Description
---------	-------------

None

Properties	Interface See History	Description
------------	--	-------------

Delay	IPulsedGenerator	Sets the pulse delay.
DelayIncrement	IPulsedGenerator	Sets the pulse delay increment.
Period	IPulsedGenerator	Sets the pulse-period (1/PRF) for ALL PNA-X internal pulse generators.
State	IPulsedGenerator	Turns the specified pulse generator ON and OFF.
Width	IPulsedGenerator	Sets the pulse width for the specified pulse generator.

IPulseGenerator History

Interface	Introduced with PNA Rev:
-----------	-----------------------------

IPulseGenerator	7.2
-----------------	-----

Last Modified:

1-Jan-2007 MX New topic

SCPIStringParser Object

Description

Provides the ability to send a SCPI command from within the COM command. The two commands differ in the following ways:

Execute - will not return an error unless the Execute command itself fails, which is unlikely. Otherwise, you are required to read the SCPI error queue for errors that were caused by the SCPI command. The Execute command operates with minimal interference between you, the programmer, and the SCPI parser. It does not presume how you want to handle errors: handle by ignore, handle by reading the status byte, etc. This command was defined because automation engines like VB throw runtime errors when a COM method returns a failed HRESULT.

Parse - parses the input command, and then reads the SCPI error queue until the queue is empty. If the queue contains errors, Parse returns a failed HRESULT (E_NA_BAD_SCPI_EXECUTE). It then creates an IErrorInfo object and bundles the error numbers and descriptions into the error object. This object is available so that you can detect the failed HRESULT and interrogate the errorInfo object for more details.

[See an example](#) of how to return error information when using the [Parse method](#).

Accessing the ScpiStringParser object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim SCPI As IScpiStringParser
Set SCPI = app.ScpiStringParser
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Interface	Description
Parse	IScpiStringParser	Provides the ability to send a SCPI command from within the COM command.
Execute	IScpiStringParser2	Does not convert scpi errors. Use :SYST:ERR?
Properties		

None

History

Interface	Introduced with PNA Rev:
ISCPStringParser	1.0
ISCPStringParser2	3.0

Segment Object

Description

Contains the methods and properties that affect a sweep segment.

Note: All of these properties are shared with at least one of the following objects: Channel, Cal Set, PowerSensorCalFactorSegment, or PowerLossSegment.

Accessing a Segment object

You can get a handle to a sweep segment through the segments collection.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim segs As ISegments
Set segs = app.ActiveChannel.Segments

segs(2).NumberOfPoints = 30
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Segment Sweep](#)
- [Example Programs](#)

Methods

None

Properties	Interface	Description
centerFrequency	ISegment	Sets or returns the center frequency of the segment. Shared with the Channel Object
DwellTime	ISegment	Dwell time value. Shared with the Channel Object
FrequencySpan	ISegment	Sets or returns the frequency span of the segment. Shared with the Channel Object
IFBandwidth	ISegment	Sets or returns the IF Bandwidth of the segment. Shared with the Channel Object and Cal Set object.

NumberOfPoints	ISegment	Sets or returns the Number of Points of the segment. Shared with the Channel Object
SegmentNumber	ISegment	Returns the number of the current segment.
StartFrequency	ISegment	Sets or returns the start frequency of the segment. Shared with the Channel Object
State	ISegment	Turns On or OFF a segment.
StopFrequency	ISegment	Sets or returns the stop frequency of the segment. Shared with the Channel Object
SweepTime	ISegment2	Sets or returns the sweep time of the segment. Shared with the Channel Object
TestPortPower	ISegment	Sets or returns the RF power level of the segment. Shared with the Channel Object

ISegment History

Interface	Introduced with PNA Rev:
ISegment	1.0
ISegment2	7.1

Last modified:

9/29/06 MQQ Added Sweep time

Segments Collection

Description

A collection object that provides a mechanism for iterating through the sweep segments of a channel. Sweep segments are a potentially faster method of sweeping the analyzer through only the frequencies of interest. Learn more about [Segment Sweep](#).

Accessing the Segments collection

There are two paths to the Segments Collection:

1. From the [Channel](#) object
2. From the [FOMRange](#) object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim segs As ISegments
Set segs = app.ActiveChannel.Segments
```

or

```
Set segs = app.ActiveChannel.FOM.FOMRange(1).Segments
```

See Also:

- [Segment Object](#)
- [Collections in the Analyzer](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Interface See History	Description
Add	ISegments	Adds an item to either the Segments collection.
Item	ISegments	Use to get a handle to a segment in the collection..
Remove	ISegments	Removes an item from a collection of objects.
SetAllSegments	ISegments2	Uploads a segment table to the PNA.
Properties	Description	

AllowArbitrarySegments	ISegments3	Enables the setup of arbitrary segment sweep
Count	ISegments	Returns the number of items in a collection of objects.
IF Bandwidth Option	ISegments	Enables the IFBandwidth to be set on individual sweep segments.
Parent	ISegments	Returns a handle to the current naNetworkAnalyzer application..
Source Power Option	ISegments	Enables setting the Source Power for a segment.
SweepTimeOption	ISegments4	Enables the Sweep time or Dwell time to be set independently on sweep segments.

ISegments History

Interface	Introduced with PNA Rev:
ISegments	1.0
ISegments2	3.5
ISegments3	4.2
ISegments4	7.1


Last modified:

8-Mar-2007	Modified access via fom
9/29/06	Added ISegments4

SignalProcessingModuleFour Object

Description

Contains the properties for configuring the DSP (digital filters) in the PNA-X.

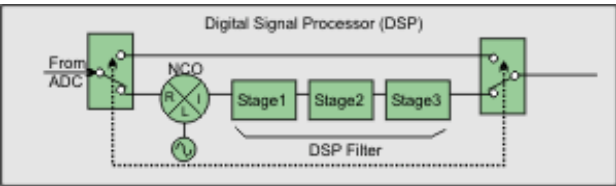

[See the entire IF Path Block diagram.](#)

Accessing the SignalProcessingModuleFour object

```
Dim app as AgilentPNA835x.Application
Dim chan as Channel
Set chan = app.ActiveChannel
Dim digFilter as SignalProcessingModuleFour
Set digFilter = chan.SignalProcessingModuleFour
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [About PNA-X Pulse Capabilities](#)
- [Example Programs](#)

Methods		Description
None		
Properties	Interface	Description
	See History	
ADCCaptureMode	ISPM4	Sets ADC capture mode: auto or manual
FilterErrors	ISPM4	Returns errors with manual digital filter settings
FilterMode	ISPM4	Sets digital filter mode:auto or manual
Stage1Coefficients	ISPM4	Sets Stage1Coefficients

<u>Stage1Frequency</u>	ISPM4	Sets Stage1 NCO frequency
<u>Stage1MaximumCoefficient</u>	ISPM4	Returns the maximum value of any single stage1 coefficient.
<u>Stage1MaximumCoefficientCount</u>	ISPM4	Returns the maximum number of Stage1 coefficients.
<u>Stage1MaximumCoefficientSum</u>	ISPM4	Returns the maximum sum of all Stage1 coefficients.
<u>Stage1MinimumCoefficientCount</u>	ISPM4	Returns the minimum number of Stage1 coefficients
<u>Stage2Coefficients</u>	ISPM4	Sets Stage2 Coefficients
<u>Stage2MaximumCoefficient</u>	ISPM4	Returns the maximum value of any single stage2 coefficient.
<u>Stage2MaximumCoefficientCount</u>	ISPM4	Returns the maximum number of Stage2 coefficients
<u>Stage2MaximumCoefficientSum</u>	ISPM4	Returns the maximum sum of all Stage2 coefficients.
<u>Stage2MinimumCoefficientCount</u>	ISPM4	Returns the minimum number of Stage2 coefficients
<u>Stage3FilterType</u>	ISPM4	Sets and returns stage3 filter type
<u>Stage3FilterTypes</u>	ISPM4	Returns the names of supported types of Stage3 filters.
<u>Stage3Parameter</u>	ISPM4	Sets and returns the parameter value of the current filter type.
<u>Stage3ParameterMaximum</u>	ISPM4	Returns maximum parameter value for the current filter type.
<u>Stage3ParameterMinimum</u>	ISPM4	Returns minimum parameter value for the current filter type.
<u>Stage3Parameters</u>	ISPM4	Returns the names of parameters for the current filter type.

ISignalProcessingModuleFour History

Interface	Introduced with PNA Rev:
-----------	--------------------------

ISignalProcessingModuleFour	7.2
-----------------------------	-----

Last Modified:

5-Jan-2007 MX New topic

SMCType Object

Description

Contains the methods and properties to perform an Scalar Measurement Calibration for the Frequency Converter Application (option 083).

Accessing the SMCType object

See an example which [creates and calibrates an SMC measurement](#).

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Interface See History	Description
AcquireStep	ISMCType	Acquire the measurement data for the specified step in the calibration process.
GenerateErrorTerms	ISMCType	Generates the error terms for the calibration.
GenerateSteps	ISMCType	Returns the number of steps required to complete the calibration.
GetStepDescription	ISMCType	Returns the description of the specified step calibration process.
Initialize	ISMCType	Begins a calibration.

Properties	Description
AutoOrient	ISMCType Sets ECAL module automatic orientation ON or OFF.
CalibrationPort	ISMCType Sets or returns the calibration source port for the calibration.
CalKitType	ISMCType Sets and returns a calibration kit type for calibration.
CompatibleCalKits	ISMCType Returns a list of cal kits that are compatible with the connector type for the specified port.

ConnectorType	ISMCType	Sets or queries the connector type for the specified port.
Do2PortEcal	ISMCType	Specify ECAL or Mechanical calibration.
EcalCharacterization	ISMCType	Specifies the characterization data within an ECal module to be used for the calibration.
EcalOrientation	ISMCType	Specifies which port of the ECal module is connected to which port of the PNA when the AutoOrient property = False.
NetworkFilename	ISMCType2	Specifies the S2P filename to embed or de-embed on the input or output of your mixer measurement.
NetworkMode	ISMCType2	Embed (add) or de-embed (remove) circuit network effects on the input and output of your mixer measurement.
OmitIsolation	ISMCType	Sets and returns whether Isolation portion of the calibration will be performed or not.
ThruCalMethod	ISMCType	Sets and returns the method for performing the thru portion of the calibration.
ValidConnectorTypes	ISMCType	Returns a list of connector types for which there are calibration kits.

ISMCType History

Interface	Introduced with PNA Rev:
ISMCType	3.5
ISMCType2	6.0

SourcePowerCalibrator Object

Description

This object is a child of the Application object and is a vehicle for performing source power calibrations.

Accessing the SourcePowerCalibrator Object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim ispc As ISourcePowerCalibrator
Set ispc = app.SourcePowerCalibrator
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Note: Interface **ISourcePowerCalibrator** is abbreviated as **ISPC** in the following table.

(**Bold** Methods or Properties provide access to a child object)

Methods	Interface See History	Description
AbortPowerAcquisition	ISPC	Aborts a source power cal acquisition sweep that is currently in progress.
AcquirePowerReadings	ISPC	Superseded with AcquirePowerReadingsEx
AcquirePowerReadingsEx	ISPC4	Initiates a source power cal acquisition.
ApplyPowerCorrectionValues	ISPC	Superseded with ApplyPowerCorrectionValuesEx
ApplyPowerCorrectionValuesEx	ISPC5	Applies correction values after completing a source power cal acquisition sweep. Optionally perform a calibration of the reference receiver used in the source power cal.
CheckPower	ISPC2	Measures power at a specific frequency. Used to test power level before and/or after applying a source power calibration.
LaunchPowerMeterSettingsDialog	ISPC2	Launches the Power Meter Settings dialog on the PNA.
SetCallInfo	ISPC	Superseded with SetCallInfoEx Method

SetCallInfo2	ISPC3	Superseded with SetCallInfoEx Method
SetCallInfoEx Method	ISPC4	Specifies the channel and source port to be used for the source power calibration.
SetPowerAcquisitionDevice	ISPC3	Sets the power sensor channel (A or B) to be used. This method is ONLY necessary when performing an SMC calibration.
Properties	Interface	Description
CalPower	ISPC	Specifies the power level that is expected at the desired reference plane.
IterationsTolerance	ISPC3	Sets the maximum desired deviation from the sum of the test port power and the offset value.
MaximumIterationsPerPoint	ISPC3	Specifies maximum number of readings to take at each data point for iterating the source power.
PowerAcquisitionDevice	ISPC2	Specifies the power sensor channel (A or B) that is currently selected for use at a specific frequency.
PowerLossSegments (collection)	ISPC2	Collection for iterating through the segments of the power loss table used in source power calibration.
PowerMeterGPIBAddress	ISPC	Specifies the GPIB address of the power meter.
PowerMeterInterfaces	ISPC6	Collection for getting a handle to the available power meters.
PowerSensors (collection)	ISPC2	Collection for iterating through the PowerSensor objects which are connected to the power meter for a source power cal.
ReadingsPerPoint	ISPC	Specifies the maximum power readings for power meter settling.
ReadingsTolerance	ISPC3	Power meter settling tolerance value.
USBPowerMeterCatalog	ISPC6	Returns a list of USB power meters that are connected to the PNA.
UsePowerLossSegments	ISPC	Specifies if subsequent calls to the AcquirePowerReadings method will make use of the loss table (PowerLossSegments).

[UsePowerSensorFrequencyLimits](#)

ISPC

Specifies if subsequent calls to the `AcquirePowerReadings` method will make use of power sensor frequency checking capability.

ISourcePowerCalibrator History

Interface	Introduced with PNA Rev:
ISourcePowerCalibrator	2.0
ISourcePowerCalibrator2	3.5
ISourcePowerCalibrator3	4.0
ISourcePowerCalibrator4	6.2
ISourcePowerCalibrator5	7.2
ISourcePowerCalibrator6	7.5

TestsetControl Object

Description

A TestsetControl object is used to control one of the [supported test sets](#). Only one external test set can be controlled by the PNA at any time. The Testset Control object appears as an item in the ExternalTestsets collection, which in turn is a property of the main application object.

If the specified test set is not connected to the PNA or is not ON, then setting [Enabled](#) = True will return an error. All other properties can be set even if the test set is not connected.

Note: The ONLY way to load a test set configuration file is by sending the [testsets.Add](#) method. There is no method to query the test set type. See an [example program](#).

Accessing a TestsetControl object

The [ExternalTestsets collection](#) is a property of the main **Application** Object. You can obtain a handle to a testset object by specifying an item in the collection.

Visual Basic Example

```
Dim pna
Dim testsets As ExternalTestsets
Dim tset1 As TestsetControl
Set pna = CreateObject("AgilentPNA835x.Application")
Set testsets = pna.ExternalTestsets
Set tset1 = testsets(1)
' make COM calls on tset1 object
End Sub
```

See Also:

- [E5091A Testset Object](#)
- [About External Testset Control](#)
- [ExternalTestset Control Example](#)
- [ExternalTestsets Collection](#)
- [The PNA Object Model](#)

Methods	Interface (See history)	Description
---------	--	-------------

None

Properties	Description
------------	-------------

ControlLines	IExternalTestset	Sets the control lines of the specified Test set.
Enabled	IExternalTestset	Enables and disables (ON/OFF) the port mapping and control line output of the specified test set.
ID	IExternalTestset	Returns the test set ID number.
Label	IExternalTestset	Returns the label on a given channel for the specified test set.
NumberOfPorts	IExternalTestset	Reads the number of ports that are on the specified test set.
OutputPorts	IExternalTestset	Sets or returns the port mappings for ALL ports.
PortCatalog	IExternalTestset	Returns the selections available for a given logical port.
SelectPort	IExternalTestset	Sets and returns the logical port value.
ShowProperties	IExternalTestset	Turns status bar display of test set properties on or off.
Type	IExternalTestset	Returns the test set model.

ExternalTestset History

	Interface	Introduced with PNA Rev:
	IExternalTestset	6.0
	IExternalTestset	6.0

Trace Object

Description

The Trace object controls how the measurement data is displayed. You can control scale, reference position, and value from the Trace Object.

Accessing a Trace object

There are several ways to get a handle to a trace.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim trace As Trace
```

Then you can do any of the following:

```
Set trace = app.NAWindows(1).traces(1)
```

```
set trace = app.NAWindows.item(1).ActiveTrace
```

```
set trace = app.ActiveNAWindow.traces.item(1)
```

```
set trace = app.ActiveNAWindow.ActiveTrace
```

```
Set trace = app.Measurements(1).trace
```

```
Set trace = app.ActiveMeasurement.trace
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Traces, Channels, and Windows on the PNA](#)
- [Example Programs](#)

Methods	Description
---------	-------------

[Autoscale](#) Autoscales the trace or all of the traces in the selected window.
Shared with the NAWindow Object

Property	Description
----------	-------------

[Name](#) Sets or returns the trace name

[ReferencePosition](#) Sets or returns the Reference Position of the active trace.

[ReferenceValue](#) Sets or returns the value of the Y-axis Reference Level of the active trace.

[YScale](#) Sets or returns the Y-axis Per-Division value of the active trace.

ITrace History

Interface	Introduced with PNA Rev:
-----------	-----------------------------

ITrace	1.0
--------	-----

Traces Collection

Description

Child of the **Application** Object. A collection that provides a mechanism for getting a handle to a trace or iterating through the traces in a window.

Accessing the Traces collection

Get a handle to the traces collection through the NaWindows collection. The following example sets the variable **trcs** to the collection of traces in window 1 of the NaWindows collection.

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim trcs As traces
Set trcs = app.NAWindows(1).traces
```

See Also:

- [Trace Object](#)
- [Collections in the Analyzer](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	
Item	Use to get a handle to a trace
Properties	
Count	Returns the number of traces in the collection.
Parent	Returns a handle to the current Application.

Transform Object

Description

Contains the methods and properties that control Time Domain transforms.

Accessing the Transform Object

```
Dim app As AgilentPNA835x.Application
Set app = CreateObject("AgilentPNA835x.Application", <analyzerName>)

Dim trans As Transform
Set trans = app.ActiveMeasurement.Transform
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Time Domain Topics](#)
- [Example Programs](#)

Note: [Sweep Type](#) must be set to Linear before setting Time Domain Transform (state) ON.

Methods	Interface	Description
SetFrequencyLowPass	ITransform	Sets low frequencies for low pass.
Properties	Description	
Center	ITransform	Sets or returns the Center time. Shared with the Gating Object
CoupledParameters	ITransform2	Select Transform parameters to couple
DistanceMarkerMode	ITransform2	Sets the measurement type in order to determine the correct marker distance.
DistanceMarkerUnit	ITransform2	Sets the unit of measure for the display of marker distance values.
ImpulseWidth	ITransform	Sets or returns the Impulse Width of Time Domain transform windows.
KaiserBeta	ITransform	Sets or returns the Kaiser Beta of Time Domain transform windows.
Mode	ITransform	Sets the type of transform.

Span	ITransform	Sets or returns the Span time. Shared with the Gating Object
Start	ITransform	Sets or returns the Start time. Shared with the Gating Object
State	ITransform	Turns an Object ON and OFF.
StepRiseTime	ITransform	Sets or returns the Rise time of the stimulus in Low Pass Step Mode.
Stop	ITransform	Sets or returns the Stop time. Shared with the Gating Object

ITransform History

Interface	Introduced with PNA Rev:
ITransform	1.0
ITransform2	4.2

TriggerSetup Object

Description

These properties setup Global triggering that effects the entire PNA application.

Accessing the TriggerSetup object

```
Dim app as AgilentPNA835x.Application
Dim trigSetup as ITriggerSetup
Set trigSetup = app.TriggerSetup
```

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Triggering in the PNA](#)
- [Example Programs](#)

Methods	Interface	Description
	See History (below)	

None

Properties		Description
AcceptTriggerBeforeArmed	ITriggerSetup2	Allows a trigger signal to be remembered and then used when the PNA becomes armed (ready to be triggered).
ExternalTriggerConnectionBehavior	ITriggerSetup	Configures the external triggering signal for the PNA
Scope	ITriggerSetup	Determines whether a trigger signal affects a single channel or all channels in the PNA.
Source	ITriggerSetup	Sets or returns the source of triggering in the PNA.
TriggerOutputEnabled	ITriggerSetup2	Enables the PNA to send trigger signals out the rear-panel TRIGGER OUT connector.

ITriggerSetup History

Interface	Introduced with PNA Rev:
ITriggerSetup	4.0
ITriggerSetup2	4.2

VMC Type Object

Description

Contains the methods and properties to perform a Vector Measurement Calibration for the Frequency Converter Application (option 083).

Accessing the VMCType object

See an example which [creates and calibrates a VMC measurement](#).

See Also:

- [PNA Automation Interfaces](#)
- [The PNA Object Model](#)
- [Example Programs](#)

Methods	Interface See History	Description
AcquireStep	IVMCType	Acquire the measurement data for the specified step in the calibration process.
GenerateErrorTerms	IVMCType	Generates the error terms for the calibration.
GenerateSteps	IVMCType	Returns the number of steps required to complete the calibration.
GetStepDescription	IVMCType	Returns the description of the specified step in the calibration process.
Initialize	IVMCType	Begins a calibration.

Properties	Description
AutoOrient	IVMCType Sets ECAL module automatic orientation ON or OFF.
CalKitType	IVMCType Sets and returns a calibration kit type for calibration.
CharacterizeMixerOnly	IVMCType Sets and returns whether to perform a mixer characterization ONLY or full 2-port calibration.
CharFileName	IVMCType Specifies the .S2P mixer characterization file name.

CharMixerReverse	IVMCType2	Specifies the direction in which to characterize the calibration mixer.
CompatibleCalKits	IVMCType	Returns a list of cal kits that are compatible with the connector type for the specified port.
ConnectorType	IVMCType	Sets or queries the connector type for the specified port.
Do1PortEcal	IVMCType	Specify ECAL or Mechanical calibration for the mixer characterization portion of a VMC calibration.
Do2PortEcal	IVMCType	Specify ECAL or Mechanical calibration for the 2-port calibration portion of a VMC calibration.
EcalCharacterization	IVMCType	Specifies the characterization data within an ECal module to be used for the calibration.
EcalOrientation1Port	IVMCType	For Mixer Characterization ONLY - Specifies which port of the ECal module is connected to which port of the PNA
EcalOrientation2Port	IVMCType	For full 2-port VMC cal - Specifies which port of the ECal module is connected to which port of the PNA
LoadCharFromFile	IVMCType	Specifies and loads a mixer characterization (S2P) file.
NetworkFilename	IVMCType3	Specifies the S2P filename to embed or de-embed on the input or output of your mixer measurement.
NetworkMode	IVMCType3	Embed (add) or de-embed (remove) circuit network effects on the input and output of your mixer measurement.
OmitIsolation	IVMCType	Sets and returns whether Isolation portion of the calibration will be performed or not.
ThruCalMethod	IVMCType	Sets and returns the method for performing the thru portion of the calibration.
ValidConnectorTypes	IVMCType	Returns a list of connector types for which there are calibration kits.

IVMCType History

Interface	Introduced with PNA Rev:
IVMCType	3.5
IVMCType2	3.53
IVMCType3	6.0

AcceptTriggerBeforeArmed Property

Description Determines what happens to an EDGE trigger signal if it occurs before the PNA is ready to be triggered. (LEVEL trigger signals are always ignored.) For more information, see [External triggering](#).

VB Syntax *trigsetup.AcceptTriggerBeforeArmed = boolean*

Variable [\(Type\)](#) - Description

trigsetup A [TriggerSetup2](#) (object)

boolean Choose from:

False - A trigger signal is ignored if it occurs before the PNA is ready to be triggered.

True - A trigger signal is remembered and then used when the PNA becomes armed (ready to be triggered). The PNA remembers only one trigger signal.

Return Type Boolean

Default False

Examples `trigsetup.AcceptTriggerBeforeArmed = True 'Write`

`atba = trigsetup.AcceptTriggerBeforeArmed 'Read`

C++ Syntax HRESULT get_AcceptTriggerBeforeArmed(BOOL *pVal);
 HRESULT put_AcceptTriggerBeforeArmed(BOOL newVal);

Interface ITriggerSetup2

AcquisitionDirection Property

Description Specifies the direction of each part of a 2-port calibration.

VB Syntax `cal.AcquisitionDirection = value`

Variable [\(Type\)](#) - Description

cal A Calibrator (**object**)

value (**enum NADirection**) - Choose from:

0 - naForward - measures the forward direction

1 - naReverse - measures the reverse direction

Return Type Long Integer

Default naForward

Examples `cal.AcquisitionDirection = naForward`

C++ Syntax HRESULT AcquisitionDirection(tagNADirection dir);

Interface ICalibrator

ActiveCalKit Property

Description Returns a handle to the Active CalKit object. You can either **(1)** use the handle directly to access CalKit properties and methods, or **(2)** set a variable to the CalKit object. The variable retains a handle to the original object if another CalKit becomes active.

VB Syntax 1) `app.ActiveCalKit.<setting>`
or
2) Set `cKit = app.ActiveCalKit`

Variable [\(Type\)](#) - Description

`app` An [Application](#) (**object**)

`<setting>` A CalKit property (or method) and arguments

`cKit` (**object**) - A CalKit object

Return Type CalKit object

Default None

Examples

```
Public cKit as calKit
Set cKit = app.ActiveCalKit 'read
```

C++ Syntax HRESULT get_ActiveCalKit (ICalKit * kit)

Interface IApplication

ActiveChannel Property

Description Returns a handle to the Active Channel object. You can either **(1)** use the handle directly to access channel properties and methods, or **(2)** set a variable to the channel object. The variable retains a handle to the original channel if another channel becomes active.

VB Syntax (1) *app.ActiveChannel.<setting>*
or
(2) Set *chan* = *app.ActiveChannel*

Variable [\(Type\)](#) - Description

chan A Channel **(object)**

app An [Application](#) **(object)**

<setting> A channel property (or method) and arguments

Return Type Channel object

Default Not applicable

Examples

```
1) app.ActiveChannel.Averaging = 1
2) Public chan as Channel
   Set chan = app.ActiveChannel
```

C++ Syntax HRESULT get_ActiveChannel(IChannel* *pVal)

Interface IApplication

ActiveMarker Property

Description Returns a handle to the Active Marker object. You can either **(1)** use the handle directly to access Marker properties and methods, or **(2)** set a variable to the Marker object. The variable retains a handle to the original object if another Marker becomes active.

VB Syntax 1) *meas.ActiveMarker*.<setting>
or
2) Set *mark* = *meas.ActiveMarker*

Variable [\(Type\)](#) - Description

meas **(object)** - An Measurement object

<setting> A marker property (or method) and arguments

mark **(object)** - A marker object

Return Type marker object

Default None

Examples

```
Public mark as marker
Set mark = meas.ActiveMarker
```

C++ Syntax HRESULT get_ActiveMarker(IMarker** marker)

Interface IMeasurement

ActiveMeasurement Property

Description Returns a handle to the Active Measurement object. You can either **(1)** use the handle directly to access measurement properties and methods, or **(2)** set a variable to the measurement object. The variable retains a handle to the original measurement.

VB Syntax 1) `app.ActiveMeasurement.<setting>`
or
2) Set `meas = app.ActiveMeasurement`

Variable [\(Type\)](#) - Description

`meas` A Measurement **(object)**

`app` An [Application](#) **(object)**

`<setting>` A measurement property (or method) and arguments

Return Type Measurement object

Default None

Examples

```
1) app.ActiveMeasurement.Averaging = 1
2) Public meas as Measurement
   Set meas = app.ActiveMeasurement
```

C++ Syntax HRESULT get_ActiveMeasurement(IMeasurement **ppMeas)

Interface IApplication

ActiveNAWindow Property

Description Returns a handle to the Active Window object. You can either **(1)** use the handle directly to access window properties and methods, or **(2)** set a variable to the window object. The variable retains a handle to the original window if another window becomes active.

VB Syntax 1) `app.ActiveNAWindow.<setting>`
or
2) Set `win = app.ActiveNAWindow`

Variable [\(Type\)](#) - Description

`win` A NAWindow **(object)**

`app` An [Application](#) **(object)**

`<setting>` A NAWindow property (or method) and arguments

Return Type A NAWindow object

Default Not applicable

Examples

```
Public win as NAWindow
Set win = app.ActiveWindow
```

C++ Syntax HRESULT get_ActiveNAWindow(INAWindow **ppWindow)

Interface IApplication

ActiveXAxisRange Property

Description Sets or returns the swept parameter to display on the X-axis for the selected FCA measurement.

VB Syntax *mixer.ActiveXAxisRange = value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(Enum as MixerStimulusRange)** - Parameter to display on the X-axis. Choose from:

- 0 - mixINPUT** - Input frequency span
- 1 - mixOUTPUT** - Output frequency span
- 2 - mixLO_1** - First LO frequency span
- 3 - mixLO_2** - Second LO frequency span

Return Type Enum

Default OUTPUT

Examples

```
mixer.ActiveXAxisRange = 1 'Write
variable = mixer.ActiveXAxisRange 'Read
```

C++ Syntax HRESULT get_ActiveXAxisRange(tagMixerStimulusRange *Val)
 HRESULT put_ActiveXAxisRange(tagMixerStimulusRange newVal)

Interface IMixer3

ADCCaptureMode Property

Description Sets and returns the ADC capture mode modeled as a 2-pole switch in the diagram on the [SignalProcessingModuleFour](#) page. The switch either bypasses or routes the IF through the 3-stage digital filter.

VB Syntax `spm4.ADCCaptureMode = value`

Variable [\(Type\)](#) - Description

spm4 A [SignalProcessingModuleFour](#) (object)

value **(Enum as NAStates)** Capture mode.

naOFF (0) - The digital filters are used to process IF information. The filters can be configured automatically or manually using [FilterMode Property](#).

naON (1) - The digital filters are bypassed and the raw ADC readings are taken directly. A maximum of 4096 data points per sweep can be acquired.

Return Type Enum

Default OFF

Examples `spm4.ADCCaptureMode = 0 'Write`

`mode = spm4.ADCCaptureMode 'Read`

C++ Syntax HRESULT get_ADCCaptureMode(tagNAStates* pCaptureMode);
HRESULT put_ADCCaptureMode(tagNAStates pCaptureMode);

Interface ISignalProcessingModuleFour

Last Modified:

18-Jun-2007 MX New topic

ALCLevelingMode Property

Description	Sets and returns the ALC mode for the specified channel and port. Use GetSupportedALCModes to return a list of valid ALC modes for the PNA. Learn more about ALC mode.
VB Syntax	<i>chan.ALCLevelingMode (sourcePort) = value</i>
Variable	(Type) - Description
<i>chan</i>	(object) - A Channel object
<i>sourcePort</i>	(long integer) - The source port for which to make this setting. If ports are remapped , specify the logical port number. Use GetPortNumber to return the port number of a source that only has a string name, such as an External Source .
<i>value</i>	(enum as naALCLevelingMode) - Choose from: <ul style="list-style-type: none"> • 0 naALCInternal • 1 naALCExternal (E835x Only) • 2 naALCOpenLoop (PNA-X only) • 3 naALCIF (For future use)
Return Type	Enum
Default	naALCInternal
Examples	<pre>chan.ALCLevelingMode(1) = 'Write state = chan.ALCLevelingMode(4) 'Read</pre>
C++ Syntax	HRESULT get_ALCLevelingMode(long port, tagNAALCLevelingMode* pVal); HRESULT put_ALCLevelingMode(long port,tagNAALCLevelingMode newVal);
Interface	IChannel9

Last modified:

30-Apr-2007 Edited for src strings

10/18/06 MX New topic

ActiveTrace Property

Description Returns a handle to the Active Trace object. You can either **(1)** use the handle directly to access trace properties and methods, or **(2)** set a variable to the trace object. The variable retains a handle to the original trace if another trace becomes active.

VB Syntax 1) *win*.ActiveTrace.<setting>
or
2) Set *trce* = *win*.ActiveTrace

Variable [\(Type\)](#) - Description

trce A Trace **(object)**

win An NAWindow **(object)**

<setting> A trace property (or method) and arguments

Return Type An NAWindow object

Default None

Examples

```
1) win.ActiveTrace.Autoscale
2) Public trce as Trace
   Set trce = Application.ActiveNAWindow.ActiveTrace
```

C++ Syntax HRESULT get_ActiveTrace(ITrace* *pVal)

Interface INAWindow

AllowArbitrarySegments Property

Description	Enables you to setup a segment sweep with arbitrary frequencies. The start and stop frequencies of each segment can overlap other segments. Also, each segment can have a start frequency that is greater than its stop frequency which causes a reverse sweep over that segment. Learn more about Arbitrary Segment Sweep .
VB Syntax	<code>segs.AllowArbitrarySegments = value</code>
Variable	(Type) - Description
<code>segs</code>	A Segments collection (object)
<code>value</code>	(boolean) True - Allows the setup of arbitrary segment sweep. False - Prevents the setup of arbitrary segment sweep.
Return Type	Boolean
Default	False
Examples	<pre>segs.AllowArbitrarySegments = True 'Write</pre> <pre>AllowArbSegs = AllowArbitrarySegments 'Read</pre>
C++ Syntax	HRESULT get_AllowArbitrarySegments(VARIANT_BOOL *pVal) HRESULT put_AllowArbitrarySegments(VARIANT_BOOL newVal)
Interface	ISegments3

AlternateSweep Property

Description Sets sweeps to either alternate or chopped.

VB Syntax *object*.AlternateSweep = *value*

Variable [\(Type\)](#) - Description

object Channel (**object**)

or

CalSet (**object**) - Read-only property

value (**boolean**) - Choose either:

False - Sweep mode set to **Chopped** - reflection and transmission are measured on the same sweep.

True - Sweep mode set to **Alternate** - reflection and transmission measured on separate sweeps.
[Learn more.](#)

**Return
Type** boolean

Default False (0)

Examples `chan.AlternateSweep = True 'Write`

`altSwp = chan.AlternateSweep 'Read`

[C++ Syntax](#) HRESULT AlternateSweep(VARIANT_BOOL *pVal)
HRESULT AlternateSweep(VARIANT_BOOL newVal)

Interface IChannel
ICalSet3

Read-only

Application Property

Description Returns the name of the Analyzer making measurements on the channel.

VB Syntax *chan*.**Application**

Variable [\(Type\)](#) - **Description**

chan A [Channel](#) (**object**)

Return Type object

Default None

Examples `rfna = chan.Application 'returns the Analyzer name`

C++ Syntax HRESULT get_Application(IApplication** Application)

Interface IChannel

ArrangeWindows Property

Description Sets the arrangement of all the windows. Overlay, Stack2, Split3 and Quad4 will create windows.

To control the state of one window, use [app.WindowState](#).

VB Syntax `app.ArrangeWindows = value`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

value (enum **NAWindowModes**) - Choose from:

0 - naTile
1 - naCascade
2 - naOverlay
3 - naStack2
4 - naSplit3
5 - naQuad4

Return Type Not Applicable

Default naTile

Examples `app.ArrangeWindow = naTile 'Write`

C++ Syntax HRESULT put_ArrangeWindows(tagNAWindowModes newVal)

Interface IApplication

AttenuatorMode Property

Description Sets or returns the mode of operation of the attenuator control for the specified port number. This command is automatically set to Manual when an Attenuator value is set.

VB Syntax *object*.AttenuatorMode(*portNum*) = *value*

Variable [\(Type\)](#) - Description

object [Channel](#) (object)

or

[CalSet](#) (object) - Read-only property

portNum **(long)** - Port number of attenuator control to be changed.

value **(enum NAModes)** - Choose from:

0 - naAuto - Attenuator control set to automatic. The analyzer will set the attenuator control appropriately to deliver the specified power at the source.

1 - naManual - Specify the attenuator setting using chan.[Attenuator](#) (which automatically sets AttenuatorMode = naManual).

Return Type NAModes

Default 0 - Auto

Examples `chan.AttenuatorMode(1) = naAuto 'Write`

`attn = chan.AttenuatorMode(1) 'Read`

C++ Syntax HRESULT get_AttenuatorMode(long port, tagNAModes* pVal)
HRESULT put_AttenuatorMode(long port, tagNAModes newVal)

Interface IChannel
ICalSet3

Attenuator Property

Description Sets or returns the value of the source attenuator for the specified port number. Sending this command automatically sets [AttenuatorMode](#) to Manual.

VB Syntax *object*.Attenuator(*portNum*) = *value*

Variable [\(Type\)](#) - Description

object [Channel](#) (**object**)

or

[CalSet](#) (**object**) - Read-only property

portNum (**long integer**) - Port number of source attenuator to be changed.

value (**double**) - Attenuation value. The range of settable values depends on the PNA model. To determine the valid settings, do one of the following:

- See [PNA models and options](#) to see the range and step size for each model / option.
- To determine the maximum attenuator value use [MaximumSourceStepAttenuator](#) and . However, this will not tell you the attenuation step size.

If an invalid attenuation setting is entered, the PNA will select the next lower valid value. For example, if 19 is entered, then for an E8361A, 10 dB attenuation will be selected.

Return Type Double

Default 20 dB

Examples `chan.Attenuator(1) = 20 'Write`

`attn = chan.Attenuator(cnum) 'Read`

C++ Syntax HRESULT get_Attenuator(long port, double *pVal)
HRESULT put_Attenuator(long port, double newVal)

Interface IChannel
ICalSet3

Last Modified:

25-Oct-2007 Edit value text

30-Apr-2007 Minor edits

AutoOrient Property

Description Sets ECAL module automatic orientation ON or OFF.

VB Syntax *obj*.**AutoOrient** = *bool*

Variable [\(Type\)](#) - Description

obj [SMCType](#) (object)

or

[VMCType](#) (object)

bool (Boolean)

True - Set AutoOrientation ON

False - Set AutoOrientation OFF

Return Type Boolean

Default True

Examples `Smc.AutoOrient = True`

C++ Syntax HRESULT put_AutoOrient(VARIANT_BOOL bAutoOrient);
HRESULT get_AutoOrient(VARIANT_BOOL *bAutoOrient);

Interface SMCType
VMCType

AutoPortExtConfig Property

Description Sets the frequency span that is used to calculate Automatic Port Extension. [Learn more about calculating Automatic Port Extension.](#)

VB Syntax *fixture.AutoPortExtConfig = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (ENUM as NAAutoPortExtConfig)

0 naAPEC_CSPN - Use current span.

1 naAPEC_AMKR - Use active marker frequency.

2 naAPEC_USPN - Use custom user span. Use [AutoPortExtSearchStart Property](#) and [AutoPortExtSearchStop Property](#) to specify start and stop frequency.

**Return
Type** ENUM

Default **0 naAPEC_CSPN**

Examples `fixture.AutoPortExtConfig = naAPEC_AMKR`

`value = fixture.AutoPortExtConfig 'Read`

C++ Syntax HRESULT get_AutoPortExtConfig(tagNAAutoPortExtConfig *pVal);
HRESULT put_AutoPortExtConfig(tagNAAutoPortExtConfig Val);

Interface IFixturing2

AutoPortExtDCOffset Property

Description Specifies whether or not to include DC Offset as part of automatic port extension. Learn more about [Automatic DC Offset](#). Only allowed when [AutoPortExtLoss Property](#) is set to ON.

VB Syntax *fixture*.AutoPortExtDCOffset = *bool*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

bool **True** - Includes DC Offset correction.

False - Does NOT include DC Offset correction.

**Return
Type** Boolean

Default False

Examples `fixture.AutoPortExtDCOffset = True`

`value = fixture.AutoPortExtDCOffset 'Read`

C++ Syntax HRESULT get_AutoPortExtDCOffset(VARIANT_BOOL *pState);
HRESULT put_AutoPortExtDCOffset(VARIANT_BOOL bState);

Interface IFixturing2

AutoPortExtLoss Property

Description Specifies whether or not to include loss correction as part of automatic port extension. [Learn more about Loss Compensation in port extension.](#)

VB Syntax *fixture*.AutoPortExtLoss = *bool*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

bool **True** - Includes Loss correction.

False - Does NOT include Loss correction.

Return Type Boolean

Default False

Examples `fixture.AutoPortExtLoss = True`

`value = fixture.AutoPortExtLoss 'Read`

C++ Syntax HRESULT get_AutoPortExtLoss(VARIANT_BOOL *pState);
HRESULT put_AutoPortExtLoss(VARIANT_BOOL bState);

Interface IFixturing2

AutoPortExtSearchStart Property

Description Set the start frequency for custom user span. Only applies when [fixture.AutoPortExtConfig](#) = 0 naAPEC_CSPN.

[Learn more about User Span.](#)

VB Syntax *fixture.AutoPortExtSearchStart = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (Double) User span start value. Must be within the frequency range of the active channel and less than the value set by [AutoPortExtSearchStop Property](#)

Return Type Double

Default Start frequency of the current active channel.

Examples `fixture.AutoPortExtSearchStart = 1E9`

`value = fixture.AutoPortExtSearchStart 'Read`

C++ Syntax HRESULT get_AutoPortExtSearchStart(double *pdVal);
HRESULT put_AutoPortExtSearchStart(double dVal);

Interface IFixturing2

AutoPortExtSearchStop Property

Description Set the stop frequency for custom user span. Only applies when [fixture.AutoPortExtConfig](#) = 0 naAPEC_CSPN.

[Learn more about User Span.](#)

Only applies when [fixture.AutoPortExtConfig](#) = 0 naAPEC_CSPN

VB Syntax *fixture.AutoPortExtSearchStop* = *value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (Double) User span stop value. Must be within the frequency range of the active channel and greater than the value set by [AutoPortExtSearchStart Property](#)

Return Type Double

Default Stop frequency of the current active channel.

Examples `fixture.AutoPortExtSearchStop = 1E9`

`value = fixture.AutoPortExtSearchStop 'Read`

C++ Syntax HRESULT get_AutoPortExtSearchStop(double *pdVal);
HRESULT put_AutoPortExtSearchStop(double dVal);

Interface IFixturing2

AutoPortExtState Property

Description Enables and disables automatic port extensions on the specified port. All enabled ports will have their reference plane automatically adjusted after performing Automatic Port Extension.

VB Syntax *fixture*.**AutoPortExtState** (*port*) = *bool*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port (**Integer**) Port number to enable or disable.

bool (Boolean)

True - Enables Auto Port Extensions

False - Disables Auto Port Extensions

**Return
Type** Boolean

Default False

Examples `fixture.AutoPortExtState(1) = True`

`value = fixture.AutoPortExtState(2) 'Read`

C++ Syntax HRESULT get_AutoPortExtConfig(AutoPortExtState(short port, VARIANT_BOOL *pState);
HRESULT put_AutoPortExtConfig(AutoPortExtState(short port, VARIANT_BOOL bVal);

Interface IFixturing2

AuxiliaryTriggerCount Property

Description Returns the number of aux trigger input / output connector pairs in the PNA

VB Syntax *value* = *app.AuxiliaryTriggerCount*

Variable [\(Type\)](#) - Description

value **(Long Integer)** Variable to store the returned value.
2 = N5242A models (PNA-X)
1 = All other PNA models

app An [Application](#) **(object)**

Return Type Long Integer

Default Not Applicable

Examples `ioConns = app.AuxiliaryTriggerCount`

C++ Syntax HRESULT AuxiliaryTriggerCount(long *count);

Interface IApplication11

Last Modified:

14-Dec-2006 MX New topic

AuxTriggerScopelsGlobal Property

Description	<p>Sets the External Trigger OUT behavior to have either Global or Channel scope.</p> <p>This command will cause the PNA to Preset.</p> <p>This setting remains until changed again using this command, or until the hard drive is changed or reformatted.</p> <p>See the AuxTrigger Object.</p>
VB Syntax	<i>pref.AuxTriggerScopelsGlobal = value</i>
Variable	(Type) - Description
<i>pref</i>	A Preferences (object)
<i>value</i>	<p>(Boolean) - Choose from:</p> <p>False - Each External trigger signal sent ALL channels (Global)</p> <p>True - External trigger signals sent individually for each channel.</p>
Return Type	Boolean
Default	<p>True - E836xB and PNA-L models</p> <p>False - PNA-X models</p>
Examples	<pre>pref.AuxTriggerScopeIsGlobal = 1 'Write</pre> <pre>auxTrigPref = pref.AuxTriggerScopeIsGlobal 'Read</pre>
C++ Syntax	<pre>HRESULT get_AuxTriggerScopelsGlobal(VARIANT_BOOL * pref); HRESULT put_AuxTriggerScopelsGlobal(VARIANT_BOOL pref);</pre>
Interface	IPreferences5

Last modified:

Jan 3, 2007 MX New command

AveragingCount Property

Description Returns the number of sweeps that have been acquired and averaged into the measurements on this channel. [AveragingFactor](#) specifies the number of sweeps to average. AveragingCount indicates the progress toward that goal.

VB Syntax *value* = *chan*.**AveragingCount**

Variable [\(Type\)](#) - Description

chan A Channel (**object**)

value (**Long Integer**) - Variable to store the returned count

Return Type Long Integer

Default Not Applicable

Example `avgcount = chan.AveragingCount`

C++ Syntax HRESULT get_AveragingCount(long* count)

Interface IChannel

AveragingFactor Property

Description Specifies the number of measurement sweeps to combine for an average. Must also turn averaging ON by setting *chan.Averaging* = 1. Averaging is only allowed on ratioed measurements; not on single input measurements.

VB Syntax *chan.AveragingFactor* = *value*

Variable [\(Type\)](#) - Description

chan A Channel (**object**)

value (**Long Integer**) - Number of measurement sweeps to average. Choose any number between 1 and 65536 (2¹⁶).

Return Type Long Integer

Default 1

Examples `chan.AveragingFactor = 5 'Write`

```
avgfact = chan.AveragingFactor ' Read
```

C++ Syntax HRESULT get_AveragingFactor(long *pVal)
HRESULT put_AveragingFactor(long newVal)

Interface IChannel

Averaging Property

Description Turns trace averaging ON or OFF for all measurements on the channel. Averaging is only allowed on ratioed measurements; not on single input measurements.

VB Syntax *chan.Averaging* = *state*

Variable [\(Type\)](#) - Description

chan A Channel (**object**)

state (**boolean**)
False - Turns averaging OFF
True - Turns averaging ON

**Return
Type** Boolean

Default False

Examples

```
chan.Average = True 'Write
```

```
averg = chan.Averaging 'Read
```

C++ Syntax HRESULT get_Averaging(BOOL *pVal)
HRESULT put_Averaging(BOOL newVal)

Interface IChannel

AvoidSpurs Property

Description Sets and returns the state of the avoid spurs feature.

VB Syntax *mixer.AvoidSpurs = boolean*

Variable [\(Type\)](#) - **Description**

mixer A [Mixer](#) (object)

value **(Boolean)** - State of avoid spurs feature. Choose from

False Avoid spurs OFF

True Avoid spurs ON

Return Type Boolean

Default False

Examples

```
mixer.AvoidSpurs = True 'Write
variable = mixer.AvoidSpurs 'Read
```

C++ Syntax HRESULT get_AvoidSpurs(Bool *bVal)
HRESULT put_AvoidSpurs(Bool newVal)

Interface IMixer3

BalancedMode Property

Description Sets and returns whether the balanced transform is ON or OFF

VB Syntax *balMeas.BalancedMode = value*

Variable [\(Type\)](#) - Description

balMeas A [BalancedMeasurement](#) (object)

value **(Boolean)** - State of balanced transform. Choose from

False Balanced Transform OFF

True Balanced Transform ON

Return Type Boolean

Default **False**

Examples `balMeas.BalancedMode = True 'Write`

`variable = balMeas.BalancedMode 'Read`

C++ Syntax HRESULT get_BalancedMode(VARIANT_BOOL *bVal)
HRESULT put_BalancedMode(VARIANT_BOOL newVal)

Interface IBalancedMeasurement

BandwidthTarget Property

Description Sets the insertion loss value at which the bandwidth of a filter is measured (using [BandwidthTracking](#) or [SearchFilterBandwidth](#)). For example, if you want to determine the filter bandwidth 3 db below the bandpass peak value, set BandwidthTarget to **-3**.

VB Syntax *meas.BandwidthTarget = value*

Variable [\(Type\)](#) - Description

meas A Measurement (**object**)

value (**single**) - Target value. Choose any number between **-500** and **500**

Return Type Single

Default -3

Examples `meas.BandwidthTarget = -3 'Write`

`fbw = meas.BandwidthTarget 'Read`

C++ Syntax HRESULT put_BandwidthTarget(float target)
HRESULT get_BandwidthTarget(float* target)

Interface IMeasurement

BandwidthTracking Property

Description Searches continually (every sweep) for the current [BandwidthTarget](#) (default is -3). To search the filter bandwidth for ONE SWEEP only (not continually), use `meas.SearchFilterBandwidth`.

This feature uses markers 1-4. To turn off these markers, either turn them off individually or [DeleteAllMarkers](#).

The bandwidth statistics are displayed on the analyzer screen. To get the bandwidth statistics, use either [GetFilterStatistics](#) or [FilterBW](#), [FilterCF](#), [FilterLoss](#), or [FilterQ](#).

The analyzer screen will show either Bandwidth statistics OR Trace statistics; not both.

To restrict the search to a [UserRange](#) with the bandwidth search, first activate marker 1 and set the desired UserRange. Then send the SearchFilterBandwidth command. The user range used with bandwidth search only applies to marker 1 searching for the max value. The other markers may fall outside the user range.

VB Syntax `meas.BandwidthTracking = value`

Variable [\(Type\)](#) - Description

meas A [Measurement](#) (object)

value (boolean)

True - Turns bandwidth tracking ON

False - Turns bandwidth tracking OFF

Return Type Boolean

Default **False**

Examples `meas.BandwidthTracking = False 'Write`

`bwtrack = meas.BandwidthTracking 'Read`

C++ Syntax HRESULT put_BandwidthTracking(VARIANT_BOOL state)
HRESULT get_BandwidthTracking(VARIANT_BOOL* state)

Interface IMeasurement

BB_BalPort1Negative Property

Description With a Balanced - Balanced topology, returns the PNA port number that is connected to the Negative side of the DUT's logical Port 1.

Use [SetBBPorts Method](#) to set the port mapping for a Balanced - Balanced topology.

VB Syntax `var = balTopology.BB_BalPort1Negative`

Variable [\(Type\)](#) - Description

`var` (Long Integer) Variable to store the returned value.

`balTopology` A [BalancedTopology](#) (**object**)

Return Type Long Integer

Default Not Applicable

Examples `variable = balTop.BB_BalPort1Negative` 'Read

C++ Syntax HRESULT get_BB_BalPort1Negative(long *bVal)

Interface IBalancedTopology

BB_BalPort1Positive Property

Description With a Balanced - Balanced topology, returns the PNA port number that is connected to the Positive side of the DUT's logical Port 1.

Use [SetBBPorts Method](#) to set the port mapping for a Balanced - Balanced topology.

VB Syntax `var = balTopology.BB_BalPort1Positive`

Variable [\(Type\)](#) - Description

`var` (Long Integer) Variable to store the returned value.

`balTopology` A [BalancedTopology](#) (**object**)

Return Type Long Integer

Default Not Applicable

Examples `variable = balTop.BB_BalPort1Positive` 'Read

C++ Syntax HRESULT get_BB_BalPort1Positive(long *bVal)

Interface IBalancedTopology

BB_BalPort2Negative Property

Description With a Balanced - Balanced topology, returns the PNA port number that is connected to the Negative side of the DUT's logical Port 2.

Use [SetBBPorts Method](#) to set the port mapping for a Balanced - Balanced topology.

VB Syntax `var = balTopology.BB_BalPort2Negative`

Variable [\(Type\)](#) - Description

`var` (Long Integer) Variable to store the returned value.

`balTopology` A [BalancedTopology](#) (**object**)

Return Type Long Integer

Default Not Applicable

Examples `variable = balTop.BB_BalPort2Negative` 'Read

C++ Syntax HRESULT get_BB_BalPort2Negative(long *bVal)

Interface IBalancedTopology

BB_BalPort2Positive Property

Description With a Balanced - Balanced topology, returns the PNA port number that is connected to the Positive side of the DUT's logical Port 2.

Use [SetBBPorts Method](#) to set the port mapping for a Balanced - Balanced topology.

VB Syntax `var = balTopology.BB_BalPort2Positive`

Variable [\(Type\)](#) - Description

`var` (Long Integer) Variable to store the returned value.

`balTopology` A [BalancedTopology](#) (**object**)

Return Type Long Integer

Default Not Applicable

Examples `variable = balTop.BB_BalPort2Positive` 'Read

C++ Syntax HRESULT get_BB_BalPort2Positive(long *bVal)

Interface IBalancedTopology

BBalMeasurement Property

Description Sets and returns the measurement for the Balanced - Balanced topology.

VB Syntax *balMeas.BBalMeasurement = value*

Variable [\(Type\)](#) - **Description**

balMeas A [BalancedMeasurement](#) (**object**)

value **(String)** - Balanced - Balanced Measurement parameter. Not case sensitive. Choose from:

Sdd11	Sdd12	Sdc11	Sdc12
Sdd21	Sdd22	Sdc21	Sdc22
Scd11	Scd12	Sc11	Sc12
Scd21	Scd22	Sc21	Sc22
lmb1	lmb2	CMRR -(Sdd21/Sc21)	

Return Type String

Default Sdd11

Examples

```
balMeas.BBalMeasurement = "Sdd11" 'Write
```

```
variable = balMeas.BBalMeasurement 'Read
```

C++ Syntax HRESULT get_BBalMeasurement(BSTR *pVal)
HRESULT put_BBalMeasurement(BSTR newVal)

Interface IBalancedMeasurement

BeginResponse Property

Description When constructing a limit line, specifies the amplitude value of the start of a limit segment.

VB Syntax *limtseg.BeginResponse* = *value*

Variable [\(Type\)](#) - **Description**

limtseg A LimitSegment (**object**)

value (**double**) - Amplitude value. No units

Return Type Double

Default 0

Examples

```
Set limtseg = meas.LimitTest(1)
limtseg.BeginResponse = 10 'Write

BegResp = limtseg.BeginResponse 'Read
```

C++ Syntax HRESULT get_BeginResponse(double *pVal)
HRESULT put_BeginResponse(double newVal)

Interface ILimitSegment

BeginStimulus Property

Description When constructing a limit line, specifies the beginning X-axis value.

VB Syntax *limtseg*.**BeginStimulus** = *value*

Variable [\(Type\)](#) - Description

limtseg A LimitSegment (**object**)

value (**double**) - Stimulus value. No units

Return Type Double

Default 0

Examples

```
Set limtseg = meas.LimitTest(1)
limtseg.Type = naLimitSegmentType_Maximum
limtseg.BeginStimulus = 3e9
limtseg.EndStimulus = 4e9
limtseg.BeginResponse = 10
limtseg.EndResponse = 10
```

```
BegStim = limtseg.BeginStimulus 'Read
```

C++ Syntax HRESULT get_BeginStimulus(double *pVal)
HRESULT put_BeginStimulus(double newVal)

Interface ILimitSegment

BroadbandTuningSpan Property

Description Sets and returns the frequency span for the broadband tuning sweep.

VB Syntax *embedLO.BroadbandTuningSpan = value*

Variable [\(Type\)](#) - Description

embedLO An [EmbeddedLO](#) (object)

value **(Double)** Broadband frequency span in Hz.

Return Type **(Double)**

Default 3 MHz

Examples `embedLO.BroadbandTuningSpan = 1E6 'write`

`value = embedLO.BroadbandTuningSpan 'read`

C++ Syntax HRESULT get_BroadbandTuningSpan(double* span);
HRESULT put_BroadbandTuningSpan(double span);

Interface IEmbeddedLO

Last Modified:

13-Apr-2007 MX New topic

BucketNumber Property

Description Sets or returns the bucket number (data point) for the active marker. When the markers are [interpolated \(non-discrete\)](#), the returned value is the nearest marker bucket position.

VB Syntax *mark*.**BucketNumber** = *value*

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

value (**long integer**) - Data point. Choose any number between 0 and the measurement's number of data points - 1. For example, with Number of points = 201, choose between 0 and 200

Return Type Long Integer

Default The first marker is set to the middle of the span. Subsequent markers are set to the bucket number of the previously active marker.

Examples `mark.BucketNumber = 100 'moves the active marker to data point 100 -Write`

```
pointNumber = mark.BucketNumber 'returns the data point number of the
marker object. When the markers are interpolated (non-discrete), the
returned value is the nearest marker bucket position.
```

C++ Syntax HRESULT get_BucketNumber(long *pVal)
HRESULT put_BucketNumber(long newVal)

Interface IMarker

C0 Property

Description Sets and Returns the C0 (C-zero) value (the first capacitance value) for the calibration standard.
To set the other capacitance values, use [C1](#), [C2](#), [C3](#)
For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

VB Syntax *calstd.C0 = value*

Variable [\(Type\)](#) - **Description**

calstd A CalStandard (**object**). Use calKit.[GetCalStandard](#) to get a handle to the standard.

value (**single**) - Value for C0 in femtofarads (1E-15)

Return Type Single

Default Not Applicable

Examples `calstd.C0 = 15 'Write the value of C0 to 15femtofarads`

`cap0 = calstd.C0 'Read the value of C0`

C++ Syntax HRESULT get_C0(float *pVal)
HRESULT put_C0(float newVal)

Interface ICalStandard

C1 Property

Description Sets and Returns the C1 value (the second capacitance value) for the calibration standard.
To set the other capacitance values, use [C0](#), [C2](#), [C3](#).

For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

VB Syntax *calstd.C1 = value*

Variable [\(Type\)](#) - **Description**

calstd A CalStandard **(object)**. Use calKit.[GetCalStandard](#) to get a handle to the standard.

value **(single)** - Value for C1.

Return Type Single

Default Not Applicable

Examples `calstd.C1 = 15 'Write the value of C1.`

`cap1 = calstd.C1 'Read the value of C1.`

C++ Syntax HRESULT get_C1(float *pVal)
HRESULT put_C1(float newVal)

Interface ICalStandard

C2 Property

Description Sets and Returns the C2 value (the third capacitance value) for the calibration standard.
To set the other capacitance values, use [C0](#), [C1](#), [C3](#).
For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

VB Syntax *calstd.C2 = value*

Variable [\(Type\)](#) - **Description**

calstd A CalStandard (**object**). Use calKit.[GetCalStandard](#) to get a handle to the standard.

value (**single**) - Value for C2.

Return Type Single

Default Not Applicable

Examples `calstd.C2 = 15 'Write the value of C2.`

`cap2 = calstd.C2 'Read the value of C2`

C++ Syntax HRESULT get_C2(float *pVal)
HRESULT put_C2(float newVal)

Interface ICalStandard

C3 Property

Description Sets and Returns the C3 value (the fourth capacitance value) for the calibration standard.
To set the other capacitance values, use [C0](#), [C1](#), [C2](#)
For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

VB Syntax *calstd.C3 = value*

Variable [\(Type\)](#) - **Description**

calstd A CalStandard (**object**). Use calKit.[GetCalStandard](#) to get a handle to the standard.

value (**single**) - Value for C3.

Return Type Single

Default Not Applicable

Examples `calstd.C3 = 15 'Write the value of C3.`

`cap3 = calstd.C3 'Read the value of C3`

C++ Syntax HRESULT get_C3(float *pVal)
HRESULT put_C3(float newVal)

Interface ICalStandard

CalFactor Property

Description Sets or returns the cal factor value associated with a power sensor cal factor segment.

VB Syntax *calFactSeg*.**CalFactor** = *value*

Variable [\(Type\)](#) - **Description**

powerCalibrator **(object)** - A PowerSensorCalFactorSegment (object)

value **(double)** – Cal factor in percent. Choose any value between 1 and 150

Return Type Double

Default 0

Examples

```
calFactSeg.CalFactor = 98 'Write  
factor = calFactSeg.CalFactor 'Read
```

C++ Syntax HRESULT put_CalFactor(Double newVal);
HRESULT get_CalFactor(Double *pVal);

Interface IPowerSensorCalFactorSegment

CalibrationType Property **Superseded**

Description **Note:** This command has been replaced by [CalibrationTypeID_property](#), which provides selection of Calibration Type by string.

Specifies the type of calibration to perform or apply to the active S-Parameter measurement. This command determine the ports involved in the CalType by the ports being used by the active measurement.

For example:

- If the measurement is an S23, it uses ports 2 and 3.
- If the measurement is an S22 it will use the legacy load port to figure out which two ports form the caltype. The legacy load port is set using [CreateMeasurement](#).
- If **naCalType_ThreePort_SOLT** is specified on a 4-port PNA, an E_NA_DEPRECATED_COMMAND error is returned. There is no way to determine the intended three ports.
- If **naCalType_FourPort_SOLT** is specified on a 4-port PNA, it is obvious that the ports involved are ports 1,2,3, and 4.

Note: For FCA measurements, use [CalibrationName](#) and [CalibrationTypeID](#).

VB Syntax *meas.CalibrationType = type*

Variable [\(Type\)](#) - Description

meas A [Measurement](#) (object)

type (**enum NACalType**) - Calibration type. Choose from:

- 0 - naCalType_Response_Open
- 1 - naCalType_Response_Short
- 2 - naCalType_Response_Thru
- 3 - naCalType_Response_Thru_And_Isol
- 4 - naCalType_OnePort
- 5 - naCalType_TwoPort_SOLT
- 6 - naCalType_TwoPort_TRL
- 7 - naCalType_None
- 8 - naCalType_ThreePort_SOLT
- 9 - Custom
- 10 - naCalType_FourPort_SOLT

Return Type **NACalType**

Default naCalType_None

Examples `meas.CalibrationType = naCalType_Response_Open 'Write'`
`meascal = meas.CalibrationType 'Read'`

C++ Syntax HRESULT put_CalibrationType (tagNACalType CalType)
HRESULT get_CalibrationType (tagNACalType* pCalType)

Interface IMeasurement

CalibrationName Property

Description Returns the name of the current Cal Type.

VB Syntax *value* = *meas*.**CalibrationName**

Variable [\(Type\)](#) - Description

value **(string)** - Variable to store the returned value.

meas A [Measurement](#) **(object)**

Return Type String

Default Not Applicable

Examples `ct = meas.CalibrationName`

C++ Syntax HRESULT get_CalibrationName(BSTR* CalibrationName);

Interface IMeasurement2

CalibrationPort Property - **Obsolete**

Description	Note: Beginning with Rev 6.0, this command is no longer necessary. Learn more. Because of improved calibration techniques, Both is always selected although a power meter measurement is performed only on port 1. Specifies which SMC port to calibrate.
VB Syntax	<code>SMC.CalibrationPort = value</code>
Variable	(Type) - Description
SMC	SMCType (object)
value	(String) Port number to be calibrated. Choose from: <ul style="list-style-type: none">• 1 - SMC forward• 2 - SMC reverse• Both
Return Type	String
Default	1
Examples	<code>value = SMC.CalibrationPort = "Both"</code>
C++ Syntax	<code>HRESULT put_CalibrationPort(BSTR port);</code> <code>HRESULT get_CalibrationPort(BSTR *port);</code>
Interface	SMCType VMCType

CalibrationTypeID Property

Description **Note:** This command replaces [Calibration Type Property](#).

Sets or returns the current cal type for channel using a Cal Type Name.

This command is used to set the Cal Type after recalling a Cal Set. [Learn more](#)

You can also use the CLSID or GUID associated with the Cal Type.

VB Syntax *meas*.**CalibrationTypeID** = *id*

Variable [\(Type\)](#) - Description

meas A [Measurement](#) (object)

id **(String)** Cal type. Case sensitive. Use one of the following:

For Full Calibrations:

This command does not distinguish between TRL and SOLT. The same number of error terms is applied for both Cal Types.

"Full n Port (x,y,z...)"

where

n = the number of ports to calibrate

x,y,z = the port numbers to calibrate

For example:

```
"Full 7 Port(2,3,4,5,6,7,8)"
```

For Response Calibrations:

"Response(param)" OR

"ResponseAndIsolation(param)"

Where param =

- S-parameter. For example"

- `"Response(S21)"`

- `"ResponseAndIsolation(A/R)"`

- Single or ratioed receivers using either [logical receiver notation](#) or physical receiver notation. For example:

- `"Response(A)"`

- `"ResponseAndIsolation(a3/b4)"`

For FCA Calibrations:

- "Scalar Mixer Cal"
- "SMC with NO Output Match Correction"
- "SMC with NO Input Match Correction"
- "SMC with NO Match Correction"
- "Vector Mixer Cal"
- "Characterize Mixer Only"

You can also use a ClassID or GUID. For example:

- CLSID - "VectorMixerCal.VCMCType"
- GUID - "{2061767B-0FE2-4F6F-86D0-9AB332B18DA5}"

Return Type String

Default Not Applicable

Examples

```
Dim pna
Dim m

Set pna = CreateObject("AgilentPNA835x.Application")
Set m = pna.ActiveMeasurement
m.CalibrationTypeID = "Vector Mixer Cal"
m.ErrorCorrection = True
MsgBox m.CalibrationName
```

C++ Syntax HRESULT get_CalibrationTypeID(BSTR* CalibrationTypeID);
HRESULT put_CalibrationTypeID(BSTR CalibrationTypeID);

Interface IMeasurement2

Last modified:

9/12/06 MQ Added for multiport.

CalKitType Property

Description Sets and returns a calibration kit type for calibration or to be used for kit modification. To get a ha kit, use `app.ActiveCalKit` .

There is also a `CalKitType` property on the `GuidedCalibration`, `SMC`, and `VMC` objects.

VB Syntax `object .CalKitType = value`

Variable (Type) - Description

object calkit (object) or
Application (object)

Note: `app.CalKitType` and `calkit.calKitType` perform exactly the same function.

value **(enum naCalKit)** - Calibration Kit type. Choose from:

1 - naCalKit_User1
2 - naCalKit_User2
3 - naCalKit_User3
4 - naCalKit_User4
..
..
..
49 - naCalKit_User49
50 - naCalKit_User50

These enumerated values correspond with the calibration kit ID on the Advanced Cal Kit Modify
To change the cal kit name, use Name property .

Return Type NACalKit

Default Not Applicable

Examples `calkit.CalKitType = naCalKit_User27`

`kitype = app.CalKitType`

C++ Syntax `HRESULT get_CalKitType(tagNACalKit *pVal);`
`HRESULT put_CalKitType(tagNACalKit newVal);`

Interface IApplication
ICalKit

CalKitType Property

Description Sets and returns a calibration kit type for the specified port number to be used during the calibration.

Note: Sliding loads are not fully supported from the GuidedCalibration object. The **Measure** button must be pressed manually on the PNA.

VB Syntax *object.CalKitType (port) = value*

Variable (Type) - Description

object Any of the following:

[GuidedCalibration](#) (object)

[SMCType](#) (object)

[VMCType](#) (object)

port (Long) Port number to which the cal kit will be assigned.

For All Guided Cals, select port number.

For SMC and VMC calibrations:

1 - Input port of the mixer under test.

2 - Output port of the mixer under test.

For VMC cal only:

Output port of MUT +1 - Output port of the calibration mixer. Generally this is port 3.

[See the user interface \(UI\) equivalent of this command.](#)

value **(string)** - Calibration Kit type.

Use [CompatibleCalKits](#) property for a list of valid Cal Kits.

Return Type String

Default Not Applicable

Examples `SMC.CalKitType(1) = naCalKit_User27`

`value = smc.CalKitType(1)`

C++ Syntax HRESULT get_CalKitType(long port, BSTR *calkit)
 HRESULT put_CalKitType(long port, BSTR calkit)

Interface IGuidedCalibration
SMCType
VMCType

Last Modified:

13-Aug-2007 Added detail for port argument

CalPower Property **Superseded**

Description This command is replaced by [SetCalInfoEx Method](#).
 Specifies the power level that is expected at the desired reference plane (DUT input or output). This is not used for [segment sweep with independent power levels](#) or [power sweeps](#).

VB Syntax *value* = *powerCalibrator*.**CalPower** (*chan*, *sourcePort*)

Variable [\(Type\)](#) - Description

value **(double)** - Variable to store the returned Cal power value in dBm.

powerCalibrator **(object)** - A SourcePowerCalibrator object

chan **(long integer)** - Channel number of the PNA.

sourcePort **(long integer)** - Source port number.
 Use [GetPortNumber](#) to return the port number of a source that only has a string name, such as an [External Source](#).

Return Type None

Default 0

Examples

```
Set powerCalibrator = pna.SourcePowerCalibrator
powerCalibrator.CalPower = -10 'Write

power = powerCalibrator.CalPower 'Read
```

C++ Syntax HRESULT get_CalPower(long channel, long sourcePort, double *pVal);

Interface ISourcePowerCalibrator

Last Modified:

30-Apr-2007 Superseded

Center Property

Description Sets or returns the Center time of either Gating or Time Domain transform windows

VB Syntax *object.Center* = *value*

Variable [\(Type\)](#) - Description

object **(object)** As Gating
or
(object) As Transform

value **(double)** - Center time in seconds. Choose any number between:
 $\pm (\text{points}-1) / \text{frequency span}$

Return Type Double

Default 0

Examples

```
trans.Center = 4.5e-9 'sets the Center time of a transform window
-Write
gate.Center = 4.5e-9 'sets the Center time of a gating window -
Write

cnt = trans.Center 'Read
```

C++ Syntax HRESULT get_Center(double *pVal)
HRESULT put_Center(double newVal)

Interface ITransform
IGating

Read-only

Center Property

Description Returns the stimulus value of the center data point for the measurement. This function does NOT work for segment sweep measurements. To understand how this property is useful, see [IMeasurement2 Interface](#).

VB Syntax *value* = *meas*.**Center**

Variable [\(Type\)](#) - **Description**

value **(Double)** - Variable to store the returned value.

meas A Measurement **(object)**

Return Type Double

Default Not Applicable

Examples `Print meas.Center 'prints the center data point`

C++ Syntax HRESULT get_Center(double * Val);

Interface IMeasurement2

CenterFrequency Property

Description Sets or returns the center frequency of the channel
or
 Sets or returns the center frequency of the segment.
 See the [Measurement2 Interface](#) to learn how this method differs from [meas.Center](#).

VB Syntax *object.CenterFrequency = value*

Variable [\(Type\)](#) - Description

object A [Channel](#) (object)

or

A [Segment](#) (object)

value **(double)** - Center frequency in Hertz. Choose any number between the **minimum** and **maximum** frequencies of the analyzer.

**Return
Type** Double

Default Center of the frequency range

Examples `chan.CenterFrequency = 4.5e9 'sets the center frequency of a linear sweep for the channel object -Write`

`centfreq = chan.CenterFrequency 'Read`

C++ Syntax HRESULT get_CenterFrequency(double *pVal)
 HRESULT put_CenterFrequency(double newVal)

Interface IChannel
 ISegment

ChannelNumber Property

Description Returns the Channel number of the Channel or Measurement object.

VB Syntax *object*.ChannelNumber

Variable [\(Type\)](#) - Description

object A Channel (**object**)
or
A Measurement (**object**)

Return Type Long Integer

Default Not applicable

Examples

```
chanNum = chan.ChannelNumber 'returns the channel number
chanNum = meas.ChannelNumber 'returns the channel number of the
measurement
```

C++ Syntax HRESULT get_ChannelNumber(long *pVal)

Interface IChannel
IMeasurement

CharacterizeMixerOnly Property

Description Sets and returns whether to perform ONLY a mixer characterization.

VB Syntax `VMC.CharacterizeMixerOnly = bool`

Variable [\(Type\)](#) - Description

VMC [VMCType](#) (object)

bool (Boolean)

True - Perform ONLY mixer characterization.

False - Perform both mixer characterization and calibration.

Return Type Boolean

Default **False**

Examples `value = VMC.CharacterizeMixerOnly`

[C++ Syntax](#) `HRESULT put_CharacterizeMixerOnly(VARIANT_BOOL
bCharMixerOnly);
HRESULT get_CharacterizeMixerOnly(VARIANT_BOOL
*bCharMixerOnly);`

Interface VMCType

CharFileName Property

Description Specifies the mixer characterization (.S2P) file and immediately loads the file. Also specify the use of a characterization file with [LoadCharFromFile Property](#)

VB Syntax `VMC.CharFileName = value`

Variable [\(Type\)](#) - Description

VMC [VMCType](#) (object)

value (String) Full path, file name, and extension of the mixer characterization file.

Return Type Not Applicable

Default Not Applicable

Examples `VMC.CharFileName = "C:\Program Files\Agilent\Network Analyzer\Documents\default.S2P"`

C++ Syntax `HRESULT put_CharFileName(BSTR filename);`
`HRESULT get_CharFileName(BSTR *filename);`

Interface `VMCType`

CharMixerReverse Property

Description	Specifies the direction in which to characterize the calibration mixer. Learn more about the calibration mixer.
VB Syntax	<i>VMC.CharMixerReverse</i> = <i>bool</i>
Variable	(Type) - Description
<i>VMC</i>	VMCType (object)
<i>bool</i>	(Boolean) 0 - Characterize the calibration mixer in the SAME direction as that specified in the mixer setup. 1 - Characterize the calibration mixer in the REVERSE direction as that specified in the mixer setup.
Return Type	Boolean
Default	0
Examples	<code>VMC.CharMixerReverse = 0</code>
C++ Syntax	HRESULT put_CharMixerReverse(VARIANT_BOOL bcharReverse); HRESULT get_CharMixerReverse(VARIANT_BOOL *bcharReverse);
Interface	VMCType2

CitiContents Property

Description Specifies the contents of subsequent citifile saves using app.[SaveCitiDataData](#) or app.[SaveCitiFormattedData](#)

VB Syntax *pref.CitiContents = value*

Variable [\(Type\)](#) - Description

pref A [Preferences](#) (object)

value **(string)** - Contents that will be saved with subsequent save commands. Choose from:

"**Single**" - Single trace

"**Displayed**" - All displayed traces

"**Auto**" - All displayed traces

**Return
Type** String

Default "Auto"

Examples `pref.CitiContents = "Single" 'Write`

`content = pref.CitiContents 'Read`

C++ Syntax HRESULT get_CitiContents(BSTR *Contents)
HRESULT put_CitiContents(BSTR Contents)

Interface IPreferences

CitiFormat Property

Description Specifies the format of subsequent citifile saves using app.[SaveCitiFormattedData](#)

VB Syntax *pref.CitiFormat = value*

Variable [\(Type\)](#) - Description

pref A [Preferences](#) (object)

value **(string)** - Format in which the citifile will be saved with subsequent save commands. Choose from:

"MA" - Linear Magnitude / degrees

"DB" - Log Mag / degrees

"RI" - Real / Imaginary

"Auto" - Format in which the trace is already displayed. If other than Log Mag, Linear Magnitude, or Real/Imag, then the format will be in Real/Imag.

**Return
Type** String

Default "Auto"

Examples `pref.CitiFormat = "MA" 'Write`

`format = pref.CitiFormat 'Read`

C++ Syntax HRESULT get_CitiFormat(BSTR *Format)
HRESULT put_CitiFormat(BSTR Format)

Interface IPreferences

CmnModeZConvPortImag Property

Description Sets the imaginary part of the impedance value for the common port impedance conversion function.

VB Syntax *fixture.CmnModeZConvPortImag(portNum) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Balanced (logical) port number. Choose from logical ports 1, 2, or 3. [Learn more about logical ports.](#)

value **(Double)** Imaginary part of the Impedance value. Choose a value between 0 and 1E18.

Return Type Double

Default 0

Examples `fixture.CmnModeZConvPortImag(2) = 75 'Write`

`value = fixture.CmnModeZConvPortImag(1) 'Read`

C++ Syntax HRESULT get_CmnModeZConvPortImag(short portNum, double *pVal)
HRESULT put_CmnModeZConvPortImag(short portNum, double newVal)

Interface IFixturing2

CmnModeZConvPortReal Property

Description Sets the real part of the impedance value for the common port impedance conversion function.

VB Syntax *fixture.CmnModeZConvPortReal(portNum) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Balanced (logical) port number. Choose from logical ports 1, 2, or 3. [Learn more about logical ports.](#)

value **(Double)** Real part of the Impedance value. Choose a value between 0 and 1E18.

**Return
Type** Double

Default See [Common Mode Port Z Conversion Default](#)

Examples `fixture.CmnModeZConvPortReal(2) = 75 'Write`

`value = fixture.CmnModeZConvPortReal(1) 'Read`

C++ Syntax HRESULT get_CmnModeZConvPortImag(short portNum, double *pVal)
HRESULT put_CmnModeZConvPortImag(short portNum, double newVal)

Interface IFixturing2

CmnModeZConvPortZ0 Property

Description Sets the impedance value for the common port impedance conversion function. Set either this single value or set the [real](#) and [imaginary](#) parts separately. The imaginary part is set to 0.0 using this command.

VB Syntax *fixture.CmnModeZConvPortZ0(portNum) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Balanced (logical) port number. Choose from logical ports 1, 2, or 3. [Learn more about logical ports.](#)

value **(Double)** Impedance value. Choose a value between 0 and 1E7.

Return Type Double

Default See [Common Mode Port Z Conversion Default](#)

Examples `fixture.CmnModeZConvPortZ0(2) = 75 'Write`

`value = fixture.CmnModeZConvPortZ0(1) 'Read`

C++ Syntax HRESULT get_CmnModeZConvPortImag(short portNum, double *pVal)
 HRESULT put_CmnModeZConvPortImag(short portNum, double newVal)

Interface IFixturing2

CmnModeZConvState Property

Description Turns ON or OFF 4-port common port impedance conversion function. Must also set the fixture simulator function to ON using [FixturingState Property](#).

VB Syntax *fixture.CmnModeZConvState* = *value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (Boolean)

False - Turns common port impedance conversion OFF

True - Turns common port impedance conversion ON

**Return
Type** Boolean

Default False

Examples `fixture.CmnModeZConvState = False 'Write`

`value = fixture.CmnModeZConvState 'Read`

C++ Syntax HRESULT get_CmnModeZConvState(VARIANT_BOOL *pVal)
HRESULT put_CmnModeZConvState(VARIANT_BOOL newVal)

Interface IFixturing2

CompatibleCalKits Property

Description Returns a list of cal kits that are compatible with the connector type for the specified port.
If two or more identical ECal modules are connected to the PNA, the returned list will include the serial numbers to distinguish the ECal modules.

VB Syntax *value* = *obj*.CompatibleCalKits (*port*)

Variable [\(Type\)](#) - Description

value (Variant) Variable to store the returned list of Cal Kits.

obj Any of the following:

[GuidedCalibration](#) (object)

[SMCType](#) (object)

[VMCType](#) (object)

port (Long) Port number for which you want compatible kits.

Return Type Variant

Default Not Applicable

Examples

```
Dim kits As Variant
kits = MySMC.CompatibleCalKits(1)
```

C++ Syntax HRESULT get_CompatibleCalKits(long port, VARIANT* Kits);

Interface IGuidedCalibration
SMCType
VMCType

ConnectorType Property

Description Sets or queries the connector type for the specified port.

VB Syntax *obj*.**ConnectorType** (*port*) = *value*

Variable [\(Type\) - Description](#)

obj Any of the following:

[GuidedCalibration](#) (object)

[SMCType](#) (object)

[VMCType](#) (object)

port (Long) Port number of the connector type.

value (String) - Connector type.

Use [ValidConnectorType Property](#) to list connector types.

Return Type String

Default None

Examples

```
Dim value As String
Value = MySMC.ConnectorType
```

C++ Syntax HRESULT get_ConnectorType(long port, BSTR
*connector)

HRESULT put_ConnectorType(long port, BSTR
connector)

Interface IGuidedCalibration

SMCType

VMCType

Last Modified:

13-Aug-2007 Added detail to port argument

ControlLines Property

Description Sets the control lines of the specified test set. Control lines, provided through the front panel connector of a test set, are used to control external equipment such as a part handler. See your test set documentation to learn more about control lines.

VB Syntax *tset*.**ControlLines** (*chNum*) = *value*

Variable [\(Type\)](#) - Description

tset A [TestsetControl](#) object.

OR

An [E5091Testset](#) object.

chNum **(Integer)** Channel number of the measurement.

value **(Double)** Data value used to set control lines. Values are obtained by adding weights from the following table that correspond to individual lines.

Line	Weight
1	1
2	2
3	4
4	8
5	16
6	32
7	64
8	128

- The E5091A interprets SENS:MULT1:OUTP 0 as all lines LOW.
- All "Z" and "H" series test sets interpret SENS:MULT1:OUTP 0 as all lines HIGH.

Refer to your test set documentation for setting control line values.

Return Type Variant

Default 0

Examples 'For a Z5623A K64 test set, the following sets line 3 and 4 OFF;
all other lines ON.

```
testset1.ControlLines(2) = 12
```

[See E5091A Example Program](#)

[See External Testset Program](#)

C++ Syntax HRESULT get_ControlLines(long channelNum, VARIANT *stateByte);
HRESULT put_ControlLines(long channelNum, VARIANT stateByte);

Interface ITestsetControl
IE5091Testset

Last Modified:

17-Aug-2007 Added different test sets active High and low

Count Property

Description Returns the number of items in a collection of objects.

VB Syntax *object*.Count

Variable [\(Type\)](#) - Description

object Any of the following **(objects)**:

- [CalFactorSegments collection](#)
- [Cal Sets collection](#)
- [Channels collection](#)
- [E5091Testset Collection](#)
- [ExternalTestsets Collection](#)
- [LimitTest collection](#)
- [Measurements collection](#)
- [NaWindows collection](#)
- [PowerLossSegments collection](#)
- [PowerSensors collection](#)
- [Segments collection](#)
- [Traces collection](#)
- [PowerMeterInterfaces Collection](#)

Return Type Long Integer

Default Not applicable

Examples

```
numofchans = chans.Count 'return the number of channels
-Read
```

C++ Syntax HRESULT get_Count(long *p<interface>)

Interface All listed above

CouplePorts Property

Description Turns ON and OFF port power coupling. ON means the power level is the same for both ports. OFF means the power level may be set independently for each port.

VB Syntax *object.CouplePorts* = *value*

Variable [\(Type\)](#) - Description

object Channel (**object**)
or
 CalSet (**object**) - Read-only property

value (**enum NASTates**) Choose from:
0 - NaOff - Turns coupling OFF
1 - NaOn - Turns coupling ON

Return Type Long Integer
1 - ON
0 - OFF

Default NaON (1)

Examples `chan.CouplePorts = NaOff 'Write`

`coulport = chan.CouplePorts 'Read`

C++ Syntax HRESULT get_CouplePorts(tagNASTates *pState)
 HRESULT put_CouplePorts(tagNASTates newState)

Interface IChannel
 |CalSet3

CoupleChannelParams Property

Description Turns ON and OFF Time Domain Trace Coupling. All of the measurements in the specified channel are coupled.

- To select Transform parameters to couple, use [Trans.CoupledParameters Property](#)
- To select Gating parameters to couple, use [Gate.CoupledParameters Property](#)

VB Syntax *chan.CoupleChannelParams = state*

Variable [\(Type\)](#) - Description

chan A [Channel](#) (object)

state **(boolean)**
False - Turns Trace Coupling OFF
True - Turns Trace Coupling ON

Return Type Boolean

Default True

Examples `chan.CoupleChannelParams = False 'Write`

`couple = chan.CoupleChannelParams 'Read`

C++ Syntax HRESULT get_CoupleChannelParams(VARIANT_BOOL *isCoupled);
 HRESULT put_CoupleChannelParams(VARIANT_BOOL isCoupled);

Interface IChannel5

Coupled Property

Description Sets and returns the state of coupling (ON or OFF) of this range to the primary range.

VB Syntax *FOMRange.Coupled* = *value*

Variable [\(Type\)](#) - Description

object An [FOMRange](#) (object)

value **(boolean)** - State of coupling.

True - Couple range to primary range.

False - Do NOT couple to primary range.

Return Type Boolean

Default True

Examples `fomRange.Coupled = False 'this range is NOT coupled to the
primary range.`

`coup1 = fomRange.Coupled 'Read`

C++ Syntax HRESULT get_Coupled(VARIANT_BOOL *pVal)
HRESULT put_Coupled(VARIANT_BOOL pVal)

Interface IFOMRange

CoupledMarkers Property

Description Sets and Reads the state of Coupled Markers (ON and OFF)

VB Syntax `app.CoupledMarkers = state`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

state **(boolean)**
False (0) - Turns Coupled Markers OFF
True (1) - Turns Coupled Markers ON

Return Type Boolean
False - OFF
True - ON

Default **False**

Examples `app.CoupledMarkers = True 'Write`

`coupl = app.CoupledMarkers 'Read`

C++ Syntax HRESULT put_CoupledMarkers(VARIANT_BOOL bState)
HRESULT get_CoupledMarkers(VARIANT_BOOL *bState)

Interface IApplication

CoupledParameters Property (Gating)

Description Specifies the time domain gating parameters to be coupled. The settings for those parameters will be copied from the active measurement to all other measurements on the channel.

To turn coupling ON and OFF, use [CoupleChannelParams Property](#)

To specify Transform parameters to couple, use [Transform.CoupledParameters Property](#)

VB Syntax *gate.CoupledParameters = value*

Variable [\(Type\)](#) - **Description**

trans A [Gating](#) (object)

value **(Enum As NAGatingCoupledParams)** - Parameters to couple. To specify more than one parameter, add the numbers. Choose from:

1 - naGatingStimulusCoupled (Start, Stop, Center, and Span TIME settings.)

2 - naGateStateCoupled (ON / OFF)

4 - naGatingShapeCoupled (Minimum, Normal, Wide, and Maximum)

8 - naGatingTypeCoupled (Bandpass and Notch)

Return Type Enum

Default 29

Examples `gate.CoupledParameters = 15 'Couple all parameters`

`CP = gate.CoupledParameters 'Read`

C++ Syntax HRESULT get_CoupledParameters(long *IParams);
HRESULT put_CoupledParameters(long IParams);

Interface IGating2

CoupledParameters Property (Transform)

Description Specifies the time domain transform parameters to be coupled. The settings for those parameters will be copied from the active measurement to all other measurements on the channel.

To turn coupling ON and OFF, use [CoupleChannelParams Property](#)

To specify Gating parameters to couple, use [Gate.CoupledParameters Property](#)

VB Syntax *trans.CoupledParameters* = *value*

Variable [\(Type\)](#) - **Description**

trans A [Transform](#) (object)

value **(Enum As NATransformCoupledParams)** - Parameters to couple. To specify more than one parameter, add the numbers. Choose from:

1 - naTransformStimulusCoupled (Start, Stop, Center, and Span TIME settings.)

2 - naTransformStateCoupled (ON / OFF)

4 - naTransformWindowCoupled (Kaiser Beta / Impulse Width)

8 - naTransformModeCoupled (Low Pass Impulse, Low Pass Step, Band Pass)

16 - naTransformDistMkrUnitCoupled (Distance maker Units)

Return Type Enum

Default 29

Examples `trans.CoupledParameters = 31 'Couple all parameters`

`CP = trans.CoupledParameters 'Read`

C++ Syntax HRESULT get_CoupledParameters(long *IParams);
HRESULT put_CoupledParameters(long IParams);

Interface ITransform2

CWFrequency Property

Description Set the Continuous Wave (CW) frequency. Must first send `chan.SweepType = naCWTimeSweep`

VB Syntax `object.CWFrequency = value`

Variable [\(Type\)](#) - Description

object One of the following:

- [Channel](#) (object)
- [FOMRange](#) (object) Range must be [UNCOUPLED](#).
- [CalSet](#) (object) - Read-only property

See also [Measurement2](#) interface.

value **(double)** CW frequency. Choose any number between:
the **minimum** and **maximum** frequency limits of the analyzer
Units are Hz

Return Type Double

Default 1e9

Examples `chan.CWFrequency = 5e9 'Write`

`cwfreq = chan.CWFrequency 'Read`

C++ Syntax HRESULT put_CWFrequency(double newVal)
HRESULT get_CWFrequency(double *pVal)

Interface IChannel
|CalSet3
IFOMRange

Delay Property

Description Sets and Returns the electrical delay value for the calibration standard.

VB Syntax *calstd.Delay (n) = value*

Variable [\(Type\)](#) - Description

calstd A CalStandard **(object)**. Use calKit.[GetCalStandard](#) to get a handle to the standard.

n Pulse Generator number.

value **(single)** - Electrical delay in picoseconds

Return Type Single

Default Not Applicable

Examples `calstd.Delay = 12 'Write 12ps Delay`

`stdDelay = calstd.Delay 'Read the value of Delay`

C++ Syntax HRESULT get_Delay(float *pVal)
HRESULT put_Delay(float newVal)

Interface ICalStandard

Last Modified:

5-Jan-2007 MX New topic

Delay (pulse) Property

Description Sets the pulse delay - the amount of time before a new pulse begins.

VB Syntax *pulse.Delay(n) = value*

Variable [\(Type\)](#) - Description

pulse A [PulseGenerator](#) (object)

n **(Integer)** Pulse generator number. Choose from 0 to 4.
0 is the generator that pulses the ADC.

value **(Double)** Delay value in seconds. Choose a value from about 33ns to about 70 seconds.

Return Type Double

Default 0

Examples

```
pulse.Delay(1) = 1ms 'Write
```

```
value = pulse.Delay(4) 'Read
```

C++ Syntax HRESULT get_Delay(integer pulse, double* delay);
HRESULT put_Delay(integer pulse, double delay);

Interface IPulseGenerator

Last Modified:

1-Jan-2007 MX New topic

Delay Property

Description Specifies the delay that should be applied by the PNA after the aux trigger input is received and before the acquisition is made.

VB Syntax *auxTrig.Delay = value*

Variable [\(Type\)](#) - Description

auxTrig An [AuxTrigger](#) (object)

value **(double)** - Delay value in seconds. Choose a value between 0 and 3.0 seconds.

**Return
Type** Double

Default Not Applicable

Exaamples `auxTrig.Delay = 1.2 'Write 1.2s Delay`

`value = auxTrig.Delay 'Read the value`

[C++ Syntax](#) HRESULT get_Delay(double *val);
HRESULT put_Delay(double val);

Interface IAuxTrigger

Last Modified:

14-Dec-2006 MX New topic


DelayIncrement Property

Description Sets the pulse delay increment. The delay increments with each pulse by the <value> amount.

For example, in this diagram the delay starts as 1. On the second pulse, delay=2. On the third pulse, delay=3.

Important: If **D + W** is greater than **P**, then undefined PNA behavior results. There is NO error message or warning. Delay includes the incremented value.

This is useful for pulse profiling.

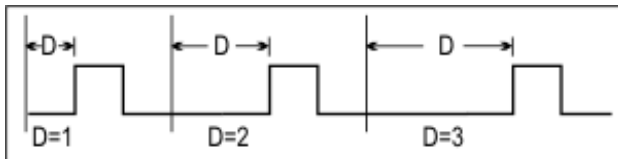

VB Syntax `pulse.DelayIncrement(n) = value`

Variable [\(Type\)](#) - Description

pulse A [PulseGenerator](#) (object)

n **(Integer)** Pulse generator number. Choose from 0 to 4.
0 is the generator that pulses the ADC.

value **(Double)** Delay increment value in seconds.

Return Type Double

Default 0

Examples `pulse.DelayIncrement(1) = 1ms 'Write`

`value = pulse.DelayIncrement(4) 'Read`

C++ Syntax `HRESULT get_DelayIncrement(integer pulse, double* dIncr);`
`HRESULT put_DelayIncrement(integer pulse, double dIncr);`

Interface IPulseGenerator

Last Modified:

18-Jun-2007 MX New topic

DeltaMarker Property

Description Sets a marker as a delta marker. The reference marker must already be turned ON. See [meas.ReferenceMarkerState](#)

VB Syntax *mark*.**DeltaMarker** = *state*

Variable [\(Type\)](#) - **Description**

app A Marker (**object**)

state (**boolean**) -

True - marker is a delta marker

False - marker is NOT a delta marker

**Return
Type** Boolean

Default **False**

Examples `mark.DeltaMarker = True 'Write`

`delta = mark.DeltaMarker 'Read`

C++ Syntax HRESULT get_DeltaMarker(VARIANT_BOOL bState)
HRESULT put_DeltaMarker(VARIANT_BOOL *bState)

Interface IMarker

Description Property

Description Sets or returns the descriptive string assigned to the Cal Set. Change this string so that you can easily identify each Cal Set constructed.

VB Syntax *CalSet.Description = value*

Variable [\(Type\)](#) - Description

CalSet **(object)** - A [Cal Set object](#)

value **(string)** – Description of the Cal Set

Return Type String

Default "CalSet_n" where n is an integer number.

Examples

```
CalSet.Description = "My Cal Set" 'Write  
desc = CalSet.Description 'Read
```

C++ Syntax HRESULT get_Description(BSTR *pVal)
HRESULT put_Description(BSTR newVal);

Interface ICalSet

Last modified:

Dec.12, 2006 MX New topic

DescriptiveText Property

Description Write and read descriptive text associated with the configuration. This text is displayed in the path configuration dialog. Text is generally used to describe external connections that must be made manually to complete the configuration setup.

VB Syntax *pathConfig*.**DescriptiveText** = *text*

Variable [\(Type\)](#) - Description

name **(String)** Variable to store the returned configuration name.

pathConfig A [PathConfiguration](#) **(object)**

text **(String)** Descriptive text enclosed in quotes.

Return Type String

Default Not Applicable

Examples `pathConf.DescriptiveText "here are the instructions for connecting the device for this configuration"`

C++ Syntax `HRESULT get_DescriptionText(BSTR* pConnectionText);`
`HRESULT put_DescriptionText(BSTR connectionText);`

Interface IPathConfiguration

Last Modified:

14-Dec-2006 MX New topic

DiffPortMatch_C Property

Description Sets the Capacitance value of the differential matching circuit.

VB Syntax *fixture.DiffPortMatch_C (portNum) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Balanced (logical) port number. Choose from logical ports 1,2 ,3. [Learn more about logical ports.](#)

value **(Double)** Capacitance value in farads. Choose a value between **-1E18** to **1E18**.

Return Type Double

Default 0

Examples `fixture.DiffPortMatch_C(2) = 1e-6 'Write`

`value = fixture.DiffPortMatch_C(1) 'Read`

C++ Syntax HRESULT get_DiffPortMatch_C(short portNum, double *pVal)
HRESULT put_DiffPortMatch_C(short portNum, double newVal)

Interface IFixturing2

DiffPortMatch_G Property

Description Sets the Conductance value of the differential matching circuit.

VB Syntax *fixture.DiffPortMatch_G(portNum) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Balanced (logical) port number. Choose from logical ports 1, 2, or 3. [Learn more about logical ports.](#)

value **(Double)** Conductance value in siemens. Choose a value between **-1E18** to **1E18**.

**Return
Type** Double

Default 0

Examples `fixture.DiffPortMatch_G(2) = 1e-3 'Write`

`value = fixture.DiffPortMatch_G(1) 'Read`

C++ Syntax HRESULT get_DiffPortMatch_G(short portNum, double *pVal)
HRESULT put_DiffPortMatch_G(short portNum, double newVal)

Interface IFixturing2

DiffPortMatch_L Property

Description Sets the Inductance value of the differential matching circuit.

VB Syntax *fixture.DiffPortMatch_L(portNum) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Balanced (logical) port number. Choose from logical ports 1, 2, or 3. [Learn more about logical ports.](#)

value **(Double)** Inductance value in henries. Choose a value between **-1E18** to **1E18**.

**Return
Type** Double

Default 0

Examples `fixture.DiffPortMatch_L(2) = 1e-3 'Write`

`value = fixture.DiffPortMatch_L(1) 'Read`

C++ Syntax HRESULT get_DiffPortMatch_L(short portNum, double *pVal)
HRESULT put_DiffPortMatch_L(short portNum, double newVal)

Interface IFixturing2

DiffPortMatch_R Property

Description Sets the Resistance value of the differential matching circuit.

VB Syntax *fixture.DiffPortMatch_R(portNum) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Balanced (logical) port number. Choose from logical ports 1, 2, or 3. [Learn more about logical ports.](#)

value **(Double)** Resistance value in ohms. Choose a value between **-1E18** to **1E18**.

**Return
Type** Double

Default 0

Examples

```
fixture.DiffPortMatch_R(2) = 1e3 'Write
```

```
value = fixture.DiffPortMatch_R(1) 'Read
```

C++ Syntax HRESULT get_DiffPortMatch_R(short portNum, double *pVal)
HRESULT put_DiffPortMatch_R(short portNum, double newVal)

Interface IFixturing2

DiffPortMatchMode Property

Description Sets the differential matching circuit type. To select a user-defined circuit, specify IN ADVANCE the 2-port touchstone filename with [DiffPortMatch UserFilename Property](#). If you do not specify the appropriate file and you select USER, an error occurs and naNO_CIRCUIT is automatically selected.

VB Syntax *fixture.DiffPortMatchMode(pNum) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

pNum **(Integer)** Balanced (logical) port number. Choose from logical ports **1, 2, or 3**. [Learn more about logical ports.](#)

value **(Enum as NADiffPortMatchCircuitMode)** Choose from:
0 or **naSHUNT_L_SHUNT_C_CIRCUIT** - Specifies the circuit that consists of shunt L and shunt C.
1 or **naUSER_FILE_CIRCUIT** - Specifies the user-defined circuit.
2 or **naNO_CIRCUIT** - Specifies no-circuit.

Return Type Enum

Default naSHUNT_L_SHUNT_C_CIRCUIT

Examples `fixture.DiffPortMatchMode(2) = naNO_CIRCUIT 'Write`

`value = fixture.DiffPortMatchMode(1) 'Read`

C++ Syntax HRESULT get_DiffPortMatchMode(short port, tagNADiffPortMatchCircuitMode *eVal)
 HRESULT put_DiffPortMatchMode(short port, tagNADiffPortMatchCircuitMode eVal)

Interface IFixturing2

DiffPortMatchState Property

Description Turns ON or OFF 4-port differential port matching function. Must also set the fixture simulator function to ON using [FixturingState Property](#).

VB Syntax *fixture*.DiffPortMatchState = *value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (Boolean)

False - Turns differential port matching OFF

True - Turns differential port matching ON

**Return
Type** Boolean

Default False

Examples `fixture.DiffPortMatchState = False 'Write`

`value = fixture.DiffPortMatchState 'Read`

C++ Syntax HRESULT get_DiffPortMatchState(VARIANT_BOOL *pVal)
HRESULT put_DiffPortMatchState(VARIANT_BOOL newVal)

Interface IFixturing2

DiffPortMatchUserFilename Property

Description Specifies the 2-port touchstone file in which the information on the user-defined differential matching circuit is saved. Following this command, send [DiffPortMatchCircuit Property](#). If the specified file does not exist, an error occurs when you set the type of differential matching circuit to USER.

VB Syntax *fixture.DiffPortMatchUserFilename(pNum) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

pNum **(Integer)** Balanced (logical) port number. Choose from logical ports **1**, **2** or **3**. [Learn more about logical ports.](#)

value **(String)** Full path, file name, and extension (.s2P) of the de-embedding circuit. Files are typically stored in "C:\Program Files\Agilent\Network Analyzer\Documents

Return Type String

Default Not Applicable

Examples `fixture.DiffPortMatchUserFilename(2) = "C:\Program Files\Agilent\Network Analyzer\Documents\myFile.s4p" 'Write`

`value = fixture.DiffPortMatchUserFilename(1) 'Read`

C++ Syntax HRESULT get_DiffPortMatchUserFilename(short port, BSTR *bstrFile)
HRESULT put_DiffPortMatchUserFilename(short port, BSTR bstrFile)

Interface IFixturing2

DiffZConvPortImag Property

Description Sets the imaginary part of the impedance value for the differential port impedance conversion function.

VB Syntax `fixture.DiffZConvPortImag(portNum) = value`

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Balanced (logical) port number. Choose from logical ports 1, 2, or 3. [Learn more about logical ports.](#)

value **(Double)** Imaginary part of the Impedance value. Choose a value between 0 and 1E18

**Return
Type** Double

Default 0

Examples `fixture.DiffZConvPortImag(2) = 75 'Write`

`value = fixture.DiffZConvPortImag(1) 'Read`

C++ Syntax HRESULT get_DiffZConvPortImag(short portNum, double *pVal)
HRESULT put_DiffZConvPortImag(short portNum, double newVal)

Interface IFixturing2

DiffZConvPortReal Property

Description Sets the imaginary part of the impedance value for the differential port impedance conversion function.

VB Syntax `fixture.DiffZConvPortReal(portNum) = value`

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Balanced (logical) port number. Choose from logical ports 1, 2, or 3. [Learn more about logical ports.](#)

value **(Double)** Real part of the Impedance value. Choose a value between 0 and 1E18

**Return
Type** Double

Default See [Differential Port Z Conversion Default](#)

Examples `fixture.DiffZConvPortReal(2) = 75 'Write`

```
value = fixture.DiffZConvPortReal(1) 'Read
```

C++ Syntax HRESULT get_DiffZConvPortReal(short portNum, double *pVal)
HRESULT put_DiffZConvPortReal(short portNum, double newVal)

Interface IFixturing2

DiffZConvPortZ0 Property

Description Sets the impedance value for the differential port impedance conversion function. Set either this single value or set the [real](#) and [imaginary](#) parts separately. The imaginary part is set to 0.0 using this command.

VB Syntax `fixture.DiffZConvPortZ0(portNum) = value`

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Balanced (logical) port number. Choose from logical ports 1, 2, or 3. [Learn more about logical ports.](#)

value **(Double)** Impedance value. Choose a value between 0 and 1E18

Return Type Double

Default See [Differential Port Z Conversion Default](#)

Examples `fixture.DiffZConvPortZ0(2) = 75 'Write`

`value = fixture.DiffZConvPortZ0(1) 'Read`

C++ Syntax HRESULT get_DiffZConvPortZ0(short portNum, double *pVal)
HRESULT put_DiffZConvPortZ0(short portNum, double newVal)

Interface IFixturing2

DiffZConvState Property

Description Turns ON or OFF 4-port differential impedance conversion function. Must also set the fixture simulator function to ON using [FixturingState Property](#).

VB Syntax *fixture*.DiffZConvState = *value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (Boolean)

False - Turns differential impedance conversion OFF.

True - Turns differential impedance conversion ON.

**Return
Type** Boolean

Default False

Examples `fixture.DiffZConvState = False 'Write`

`value = fixture.DiffZConvState 'Read`

C++ Syntax HRESULT get_DiffZConvState(VARIANT_BOOL *pVal)
HRESULT put_DiffZConvState(VARIANT_BOOL newVal)

Interface IFixturing2

Format Property

Description Sets or returns the display format of the measurement.

VB Syntax *meas.Format* = *value*

Variable [\(Type\)](#) - **Description**

meas A Measurement (**object**)

value (**enum NADataFormat**) - Choose from:

0 - naDataFormat_LinMag

1 - naDataFormat_LogMag

2 - naDataFormat_Phase

3 - naDataFormat_Polar

4 - naDataFormat_Smith

5 - naDataFormat_Delay

6 - naDataFormat_Real

7 - naDataFormat_Imaginary

8 - naDataFormat_SWR

9 - naDataFormat_PhaseUnwrapped

10 - naDataFormat_InverseSmith

Return Type Long Integer

Default 1 - naDataFormat_LogMag

Examples `meas.Format = naDataFormat_Real 'Write`

`fmt = meas.Format 'Read`

C++ Syntax HRESULT get_Format(tagDataFormat *pVal)
HRESULT put_Format(tagDataFormat newVal)

Interface IMeasurement

DisplayAutomationErrors Property

Description Enables or disables automation error messages from being displayed on the screen.

VB Syntax `app.DisplayAutomationErrors = value`

Variable [\(Type\)](#) - [Description](#)

app An [Application](#) (object)

value (Boolean)

True allows error to show on display,

False turns error off from display.

Return Type Boolean

Default True

Examples

```
Dim app As Application
Set app = New Application
app.DisplayAutomationErrors = False    'Turns off display
print app.DisplayAutomationErrors     'prints False
```

C++ Syntax HRESULT get_DisplayAutomationErrors(VARIANT_BOOL * Val);
HRESULT put_DisplayAutomationErrors(VARIANT_BOOL Val);

Interface IApplication2

DisplayGlobalPassFail Property

Description Shows or hides the dialog which displays global pass/fail results. [Learn more about Global Pass/Fail.](#)

VB Syntax `app.DisplayGlobalPassFail = value`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

value (Boolean)

True - displays the pass/fail dialog.

False - hides the pass/fail dialog.

Return Type Boolean

Default False

Examples

```
Dim app As Application
Set app = New Application
app.DisplayGlobalPassFail = true 'shows dialog
```

C++ Syntax HRESULT get_DisplayGlobalPassFail(VARIANT_BOOL * Val);
HRESULT put_DisplayGlobalPassFail(VARIANT_BOOL Val);

Interface IApplication6

DisplayRange Property

Description Sets or returns the range to be displayed on the PNA x-axis. All traces in the channel have this same x-axis scaling.

VB Syntax *FOM.DisplayRange = value*

Variable [\(Type\)](#) - Description

object An [FOM](#) (**object**)

value **(string)** - Range to be displayed on the PNA x-axis. Case insensitive.

Return Type String

Default "Receivers"

Examples `fom.DisplayRange = "Source" 'sets the x-axis to the frequency range of "source"`

`disprange = fom.DisplayRange 'Read`

C++ Syntax HRESULT get_DisplayRange(BSTR *pDspRange)
HRESULT put_DisplayRange(BSTR pDspRange)

Interface IFOM

Last Modified:

7-Mar-2007 Changed to receivers

Distance Property

Description Set or query marker distance on a time domain trace.

The Write command moves the marker to the specified distance value. Once moved, you can read the [Y axis](#) value or [read the X-axis time](#) value. (Distance is calculated from the X-axis time value.)

The Read command reads the distance of the marker.

If the marker is set as delta, the WRITE and READ data is relative to the reference marker.

VB Syntax *mark.Distance = value*

Variable [\(Type\)](#) - Description

mark A [Marker](#) (object)

value **(double)** - Marker distance in the unit of measure specified with [DistanceMarkerUnit Property](#)

**Return
Type** Double

Default Not Applicable

Examples `mark.Distance = 3e9 'Write`

`XVal = mark.Distance 'Read`

C++ Syntax HRESULT get_Distance(double *pVal);
HRESULT put_Distance(double newVal);

Interface IMarker2

DistanceMarkerMode Property

Description	<p>Specifies the measurement type in order to determine the correct marker distance.</p> <ul style="list-style-type: none"> • Select Auto for S-Parameter measurements. • Select Reflection or Transmission for arbitrary ratio or unratioed measurements. <p>This settings affects the display of ALL markers for only the ACTIVE measurement.</p>
VB Syntax	<i>trans</i> . DistanceMarkerMode = <i>value</i>
Variable	(Type) - Description
<i>trans</i>	A Transform (object)
<i>value</i>	<p>(enum As NADistanceMarkerMode) - Choose from:</p> <p>0 - naDistanceMarkerModeAuto</p> <p>1 - naDistanceMarkerModeReflection</p> <p>2 - naDistanceMarkerModeTransmission</p>
Return Type	Enum
Default	0 - naDistanceMarkerModeAuto
Examples	<pre>trans.DistanceMarkerMode = naDistanceMarkerModeReflection 'Write</pre> <pre>DMM = trans.DistanceMarkerMode 'Read</pre>
C++ Syntax	<pre>HRESULT get_DistanceMarkerMode(tagNADistanceMarkerMode *pVal); HRESULT put_DistanceMarkerMode(tagNADistanceMarkerMode newVal);</pre>
Interface	ITransform2

DistanceMarkerUnit Property

Description Specifies the unit of measure for the display of marker distance values. This settings affects the display of ALL markers for only the ACTIVE measurement (unless Distance Maker Units are coupled using [CoupledParameters Property](#)).

VB Syntax *trans.DistanceMarkerUnit = value*

Variable [\(Type\)](#) - Description

trans A [Transform](#) (object)

value **(Enum As NADistanceMarkerUnit)** - Distance Marker Units. Choose from
 0 - naDistanceMarkerUnitMeter
 1 - naDistanceMarkerUnitFeet
 2 - naDistanceMarkerUnitInch

Return Type Enum

Default 0 - naDistanceMarkerUnitMeter

Examples `trans.DistanceMarkerUnit = naDistanceMarkerUnitFeet 'sets the`
`U = trans.DistanceMarkerUnit 'Read`

C++ Syntax HRESULT get_DistanceMarkerUnit(tagNADistanceMarkerUnit *pVal);
 HRESULT put_DistanceMarkerUnit(tagNADistanceMarkerUnit newVal);

Interface ITransform2

Divisor Property

Description Sets and returns the Divisor value to be used when coupling this range to the primary range.

This setting is valid only if the specified range is [coupled](#) to the primary range.

VB Syntax *FOMRange.Divisor = value*

Variable [\(Type\)](#) - Description

object An [FOMRange](#) (**object**)

value **(Double)** - Divisor value.-(Unitless)

Return Type Double

Default 0

Examples `fomRange.Divisor = .5 'Write`

`Div = fomRange.Divisor 'Read`

C++ Syntax HRESULT get_Divisor(double *pVal)
HRESULT put_Divisor(double *pVal)

Interface IFOMRange

Do1PortEcal Property

Description Specify ECAL or Mechanical calibration for the mixer characterization portion of a VMC calibration.

VB Syntax `VMC.Do1PortEcal = bool`

Variable [\(Type\) - Description](#)

VMC [VMCType](#) (object)

bool (Boolean)

True - ECAL

False - Mechanical

Return Type Boolean

Default **False**

Examples `value = VMC.Do1PortEcal`

C++ Syntax `HRESULT put_Do1PortEcal(VARIANT_BOOL bDoEcal);`
`HRESULT get_Do1PortEcal(VARIANT_BOOL *bDoEcal);`

Interface VMCType

Do2PortEcal Property

Description Specify ECAL or Mechanical calibration. For VMC, this selection only applies to the 2-port calibration portion. For mixer characterization (VMC), use [Do1PortEcal Property](#)

VB Syntax *object.Do2PortEcal = bool*

Variable [\(Type\) - Description](#)

object [SMCType](#) (object) or
[VMCType](#) (object)

bool (Boolean)

True - ECAL

False - Mechanical

Return Type Boolean

Default **False**

Examples `value = VMC.Do2PortEcal`

C++ Syntax HRESULT put_Do2PortEcal(VARIANT_BOOL bDoEcal);
HRESULT get_Do2PortEcal(VARIANT_BOOL *bDoEcal);

Interface SMCType
VMCType

Domain Property

Description Returns the domain (frequency,time, power) of the measurement. To understand how this property is useful, see [IMeasurement2 Interface](#).

VB Syntax `value = meas.Domain`

Variable [\(Type\)](#) - Description

value (**Enum** as NADomainType) - variable to store the returned value

0 - Frequency

1 - Time

2 - Power

meas A Measurement **(object)**

Return Type Enum as NADomainType

Default Not Applicable

Examples `Print meas.Domain` 'prints the value of the domain enum

C++ Syntax HRESULT get_Domain(tagNADomainType * Val);

Interface IMeasurement2

DUTTopology Property

Description Returns the device topology setting.

VB Syntax *balTopology*.**DUTTopology** = *value*

Variable [\(Type\)](#) - [Description](#)

balTopology A [BalancedTopology](#) (object)

value **(enum NADUTTopology) - Choose either:**

0 naSEBal: Single-Ended - Balanced measurement

1 naSESEBal: Single-Ended - Single-Ended - Balanced measurement

2 naBalBal: Balanced - Balanced measurement

Return Type Enum as NADUTTopology

Default naSEBal

Examples `balTop.DUTTopology = naSESEBal 'Write`

`DutTop = balTop.DUTTopology 'Read`

C++ Syntax HRESULT get_DUTTopology(tagNADUTTopology* pVal)
HRESULT put_DUTTopology(tagNADUTTopology newVal)

Interface IBalancedTopology

DwellTime Property

Description Sets or returns the dwell time at the start of each sweep point for all measurements in a channel. Dwell time is only available with Chan.[SweepGenerationMode](#) = **naSteppedSweep** (not **naAnalogSweep**).

Sets or returns the dwell time of a specified sweep segment.

VB Syntax *object.DwellTime* = *value*

Variable [\(Type\)](#) - Description

object A Channel (object)
or CalSet (object) - Read-only property
or Segment (object)

value **(double)** - Dwell Time in seconds. Choose any number between **0** and **86400**

Return Type Double

Default 0

Examples `chan.DwellTime = 3e-3 'sets the dwell time for the channel -Write`

`segs(3).DwellTime = 1e9 'sets the dwell time of segment 3 -Write`

`dwell = chan.DwellTime 'Read`

C++ Syntax HRESULT get_DwellTime(double *pVal)
 HRESULT put_DwellTime(double newVal)

Interface IChannel
 ISegment
 ICalSet3

ECALCharacterization Property

Description	Specifies the characterization data within an ECal module to be used for the SMC calibration. Learn more about ECal User Characterization .
VB Syntax	<i>SMC.ECALCharacterization(mod) = value</i>
Variable	(Type) - Description
<i>SMC</i>	SMCType (object)
<i>module</i>	1- ECal module
<i>value</i>	<p>(Long) – Characterization data within the ECal module to be used for ECal operations. Choose from:</p> <ul style="list-style-type: none"> 0 – Factory Characterization 1 – UserCharacterization1 2 – UserCharacterization2 3 – UserCharacterization3 4 – UserCharacterization4 5 – UserCharacterization5
Return Type	Long
Default	0 - Factory Characterization
Examples	<code>SMC.ECALCharacterization(1)= 2</code>
C++ Syntax	HRESULT put_ECALCharacterization(long moduleNumber, long characterization); HRESULT get_ECALCharacterization(long moduleNumber, long* characterization);
Interface	ICalibrator2

ECALCharacterization Property

Description Specifies the characterization data within an ECal module to be used, and the portion of the VMC calibration.

Learn more about [ECal User Characterization](#).

VB Syntax `VMC.ECALCharacterization (module,port) = value`

Variable [\(Type\)](#) - Description

VMC [VMCType](#) (object)

module **(long integer)**
1 - ECAL module

port **(boolean)**
True - 2-port calibration portion of the VMC
False - 1-port (mixer characterization portion of the VMC cal

value **(Long)** – Characterization data within the ECal module to be used for ECal operations. Choose from:
0 – Factory Characterization
1 – UserCharacterization1
2 – UserCharacterization2
3 – UserCharacterization3
4 – UserCharacterization4
5 – UserCharacterization5

Return Type Long

Default 0 - Factory Characterization

Examples `VMC.ECALCharacterization (1,True) = 4`

C++ Syntax `HRESULT put_ECALCharacterization(long moduleNumber, long characterization);`
`HRESULT get_ECALCharacterization(long moduleNumber, long* characterization);`

Interface ICalibrator2

ECALCharacterizationEx Property

Description	<p>This property replaces ECALCharacterization Property.</p> <p>Specifies the characterization data within an ECal module to be used for the calibration.</p> <p>Learn more about ECal User Characterization.</p>
VB Syntax	<i>cal.ECALCharacterizationEx (module) = value</i>
Variable	(Type) - Description
<i>cal</i>	Calibrator (object)
<i>module</i>	<p>(long integer) Optional argument. ECal module.</p> <p>Choose from modules 1 through 8</p> <p>Use IsECALModuleFoundEx to determine the number of modules connected to the PNA</p> <p>Use GetECALModuleInfoEx to returns the model and serial number of each module.</p>
<i>value</i>	<p>(Long) – Characterization data within the ECal module to be used for ECal operations.</p> <p>Choose from:</p> <ul style="list-style-type: none"> 0 – Factory Characterization 1 – UserCharacterization1 2 – UserCharacterization2 3 – UserCharacterization3 4 – UserCharacterization4 5 – UserCharacterization5
Return Type	Long
Default	0 - Factory Characterization
Examples	<code>cal.ECALCharacterizationEx (4) = 2</code>
C++ Syntax	<p>HRESULT put_ECALCharacterizationEx(long moduleNumber, long characterization);</p> <p>HRESULT get_ECALCharacterizationEx(long moduleNumber, long* characterization);</p>
Interface	ICalibrator4

ECALIsolation Property

Description **Note:** The inherent isolation of the PNA is better than that attained with this command. ONLY use this command when using an external test set, and ONLY using a 8509x ECal module.

Specifies whether the acquisition of the ECal calibration should include isolation or not.

VB Syntax `cal.ECALIsolation = value`

Variable [\(Type\)](#) - Description

cal A Calibrator (**object**)

value (**boolean**)

False - Exclude Isolation

True - Include Isolation

Return Type Boolean

Default False

Examples

```
Dim oPNA as AgilentPNA835x.Application
Dim oCal as Calibrator
Set oPNA = CreateObject("AgilentPNA835x.Application",
"MachineName")
Set oCal = oPNA.ActiveChannel.Calibrator
' Uncomment the following line to have the cal include isolation
' oCal.ECALIsolation = True
' Uncomment the following line to have the cal omit isolation
'oCal.ECALIsolation = False
oCal.DoECAL2Port ' Do the cal
```

C++ Syntax HRESULT put_ECALIsolation (VARIANT_BOOL bIsolationState);
 HRESULT get_ECALIsolation (VARIANT_BOOL *bIsolationState);

Interface Calibrator

Last Modified:

16-Apr-2007 Un-obsolete

ECALModuleNumberList Property

Description Returns a list of index numbers to be used for referring to the ECal modules that are currently attached to the PNA.

VB Syntax *clist* = *cal*.**ECALModuleNumberList**

Variable [\(Type\)](#) - Description

clist Variable to store the returned list of index numbers.

cal [Calibrator](#) (object)

Return Type Variant

Default Not Applicable

Examples

```
clist = cal.ECALModuleNumberList
'If 2 modules are attached to the PNA
'then the returned list will be:
1,2
```

C++ Syntax HRESULT get_ECALModuleNumberList(VARIANT *modules);

Interface ICalibrator6

EcalOrientation Property

Description Specifies which port of the ECal module is connected to which port of the PNA when the [AutoOrient](#) property = False.

VB Syntax `SMC.EcalOrientation (mod) = value`

Variable [\(Type\)](#) - Description

SMC [SMCType](#) (object)

mod (Long)

1 - Use ECAL Module for the calibration.

value **(string)** -Format this parameter in the following manner:

Aw,Bx,Cy,Dz

where

- A, B, C, and D are literal ports on the ECAL module
- w,x,y, and z are substituted for PNA port numbers to which the ECAL module port is connected.

Ports of the module which are not used are omitted from the string.

For example, on a 4-port ECal module with

- port A connected to PNA port 2
- port B connected to PNA port 3
- port C not connected
- port D connected to PNA port 1

the string would be: A2,B3,D1

Return Type String

Default "A1,B2"

Examples `SMC.EcalOrientation (1) = "A2,B1"`

C++ Syntax `HRESULT put_EcalOrientation(long IModuleNum, BSTR orientation);`
`HRESULT get_EcalOrientation(long IModuleNum, BSTR *orientation);`

Interface SMCType

EcalOrientation1Port Property

Description **For Mixer Characterization ONLY** Specifies which port of the ECal module is connected to which port of the PNA for the [Do1PortECAL](#) property when the [AutoOrient](#) property = False.

VB Syntax `VMC.EcalOrientation1Port (mod) = value`

Variable [\(Type\)](#) - Description

VMC [VMCType](#) (object)

mod (Long)
1 - Use ECAL Module for the calibration.

value **(string)** - Choose from:
"A1" - ECAL module port A is connected to PNA port 1
"B1" - ECAL module port A is connected to PNA port 1

Return Type String

Default "A1"
If anything other than port 1 is specified, "B1" will be used. For example, if "A2" is specified, "B1" is used.

Examples `VMC.EcalOrientation1Port(1) = "B1"`

C++ Syntax HRESULT put_EcalOrientation1Port(long IModuleNum, BSTR orientation);
HRESULT get_EcalOrientation1Port(long IModuleNum, BSTR

Interface VMCType

EcalOrientation2Port Property

Description Specifies which port of the ECal module is connected to which port of the PNA for the [Do2PortECAL](#) property when the [AutoOrient](#) property = False.

VB Syntax `VMC.EcalOrientation2Port (mod) = value`

Variable [\(Type\)](#) - Description

VMC [VMCType](#) (object)

mod (Long) Module being used for the calibration.
Choose from 1 or 2.

value **(string)** -Format this parameter in the following manner:

Aw,Bx,Cy,Dz

where

- A, B, C, and D are literal ports on the ECAL module
- w,x,y, and z are substituted for PNA port numbers to which the ECAL module port is connected.

Ports of the module which are not used are omitted from the string.

For example, on a 4-port ECal module with

- port A connected to PNA port 2
- port B connected to PNA port 3
- port C not connected
- port D connected to PNA port 1

the string would be: A2,B3,D1

Return Type String

Default "A1,B2"

Examples `VMC.EcalOrientation1Port(1) = "A2,B1"`

C++ Syntax HRESULT put_EcalOrientation2Port(long IModuleNum, BSTR orientation);
HRESULT get_EcalOrientation2Port(long IModuleNum, BSTR *orientation);

Interface VMCType

ECALPortMapEx Property

Description This property replaces [ECALPortMap Property](#)

Specifies which ports of the ECal module are connected to which ports of the PNA for the [DoECAL1PortEx](#) and [DoECAL2PortEx](#) methods when the [OrientECALModule](#) property = False.

This setting remains until the PNA is restarted or this command is sent again.

Note: For guided calibrations where Orient is OFF and the same ECal module is used in more than one Connection Step, you are not allowed to specify how the ECal module is connected. Instead, the PNA determines the orientation. The PNA does not verify that you made the connection properly.

This command, and [OrientECALModule Property](#), can be used to perform ECal orientation using the [Guided Calibration](#) interface.

VB Syntax `cal.ECALPortMapEx (module) = value`

Variable [\(Type\)](#) - Description

cal A Calibrator **(object)**

module **(long integer)** Optional argument. ECal module.

Choose from modules **1** through **8**

Use [IsECALModuleFoundEx](#) to determine the number of modules connected to the PNA

Use [GetECALModuleInfoEx](#) to return the model and serial number of each module.

value **(string)** -Format this parameter in the following manner:

Aw,Bx,Cy,Dz

where

- A, B, C, and D are literal ports on the ECAL module
- w,x,y, and z are substituted for PNA port numbers to which the ECAL module port is connected.

Ports of the module which are not used are omitted from the string.

For example, on a 4-port ECal module with

- port A connected to PNA port 2
- port B connected to PNA port 3
- port C not connected
- port D connected to PNA port 1

the string would be: A2,B3,D1

DoECAL1PortEx or **DoECAL2PortEx** methods will fail if the port numbers passed to those methods are not in the string of this property and [OrientECALModule](#) property = False.

Return Type String

Default Not Applicable

Examples

```
Dim cal As Calibrator
Dim sPortMap As String
Set cal = PNAapp.ActiveChannel.Calibrator
cal.ECALPortMapEx = "a2,b1" 'Write
sPortMap = cal.ECALPortMap 'Read
```

C++ Syntax HRESULT put_ECALPortMapEx(long moduleNumber, BSTR strPortMap);
HRESULT get_ECALPortMapEx(long moduleNumber, BSTR *strPortMap);

Interface ICalibrator4

Last Modified:

7-May-2007 Added note about orient

ElecDelayMedium Property

Description Sets or returns the electrical delay medium.

VB Syntax *meas.ElecDelayMedium = value*

Variable [\(Type\)](#) - Description

meas A Measurement **(object)**

value **(enum NACalStandardMedium)** choose from
0 - naCoax
1 - naWaveGuide

Return Type NACalStandardMedium

Default Not Applicable

Examples `Print meas.ElecDelayMedium 'prints the value of the electrical delay medium`

C++ Syntax HRESULT get_ElecDelayMedium(tagNACalStandardMedium *pVal);
HRESULT put_ElecDelayMedium(tagNACalStandardMedium newVal);

Interface IMeasurement2

ElectricalDelay Property

Description Sets the Electrical Delay for the active channel.

VB Syntax *meas.ElectricalDelay* = *value*

Variable [\(Type\)](#) - Description

meas A Measurement **(object)**

value **(double)** - Electrical Delay in seconds. Choose any number between **-9.99** and **9.99**

Return Type Double

Default 0

Examples

```
meas.ElectricalDelay = 1e-3 'Write
```

```
edelay = meas.ElectricalDelay 'Read
```

C++ Syntax HRESULT get_ElectricalDelay(double *pVal)
HRESULT put_ElectricalDelay(double newVal)

Interface IMeasurement

Element Property

Description Returns a handle to the specified [PathElement](#) object. Each element object contains a unique set of values.

The [Value Property](#) is used to set the value for each element.

[See a list of configurable elements](#) and values for various PNA models.

VB Syntax Set elem = *pathConfig*.**Element** (*element*)

Variable [\(Type\)](#) - Description

elem **(Object)** [IPathElement](#)

pathConfig A [PathConfiguration](#) **(object)**

element **(String)** Configurable element. Use [pathConfig.Elements](#) to return a list of configurable elements or [see a list of configurable elements](#) for various PNA models.

Return Type Object

Default Not Applicable

Examples

```
Dim elem as PathElement
Set elem = app.ActiveChannel.PathConfiguration.Element("Src1")
```

C++ Syntax HRESULT Element(BSTR elemName, IPathElement** ppElement);

Interface IPathConfiguration

Last Modified:

14-Dec-2006 MX New topic

Elements Property

Description Returns an array containing the names of configurable elements.

See a [list of configurable elements and settings](#) for various PNA models.

VB Syntax *values* = *pathConfig*.**Elements**

Variable [\(Type\)](#) - **Description**

values **(Variant array)** Variable to store the array of configurable elements.

pathConfig A [PathConfiguration](#) **(object)**

Return Type Variant array

Default Not Applicable

Examples `elems=pathconfig.Elements`

C++ Syntax HRESULT Elements(VARIANT* pElements);

Interface IPathConfiguration

Last Modified:

14-Dec-2006 MX New topic

Embed4PortA Property

Description Returns the PNA port number associated with 'a' based on the device topology.

To see 'a' for all topologies, and to specify the port connections, use

[Embed4PortList Property](#)

Specify topology using [Embed4PortTopology Property](#)

VB Syntax *value* = *fixture*.**Embed4PortA**

Variable [\(Type\)](#) - **Description**

value (Short Integer) Variable to store the returned PNA port number.

fixture A [Fixturing](#) (**object**)

Return Type Integer

Default Not Applicable

Examples `value = fixture.Embed4PortA 'Read`

C++ Syntax HRESULT get_Embed4PortA(short *portA);

Interface IFixturing2

Embed4PortB Property

Description	Returns the PNA port number associated with 'b' based on the device topology. To see 'b' for all topologies, and to specify the port connections, use Embed4PortList Property . Specify topology using Embed4PortTopology Property
VB Syntax	<i>value</i> = <i>fixture</i> . Embed4PortB
Variable	(Type) - Description
<i>value</i>	(Short Integer) Variable to store the returned PNA port number.
<i>fixture</i>	A Fixturing (object)
Return Type	Integer
Default	Not Applicable
Examples	<pre>value = fixture.Embed4PortB 'Read'</pre>
C++ Syntax	HRESULT get_Embed4PortB(short *portB);
Interface	IFixturing2

Embed4PortC Property

Description	Returns the PNA port number associated with 'c' based on the device topology. To see 'c' for all topologies, and to specify the port connections, use Embed4PortList Property . Specify topology using Embed4PortTopology Property
VB Syntax	<i>value</i> = <i>fixture</i> . Embed4PortC
Variable	(Type) - Description
<i>value</i>	(Short Integer) Variable to store the returned PNA port number.
<i>fixture</i>	A Fixturing (object)
Return Type	Integer
Default	Not Applicable
Examples	<pre>value = fixture.Embed4PortC 'Read'</pre>
C++ Syntax	HRESULT get_Embed4PortC(short *portC);
Interface	IFixturing2

Embed4PortD Property

Description	Returns the PNA port number associated with 'd' based on the device topology. To see 'd' for all topologies, and to specify the port connections, use Embed4PortList Property . Specify topology using Embed4PortTopology Property
VB Syntax	<i>value</i> = <i>fixture</i> . Embed4PortD
Variable	(Type) - Description
<i>value</i>	(Short Integer) Variable to store the returned PNA port number.
<i>fixture</i>	A Fixturing (object)
Return Type	Integer
Default	Not Applicable
Examples	<pre>value = fixture.Embed4PortD 'Read</pre>
C++ Syntax	HRESULT get_Embed4PortD(short *portD);
Interface	IFixturing2

Embed4PortList Property



Description Specifies the PNA port connections for ALL topologies. The port assignment is dependent on the DUT topology. All four port numbers are required. However, for:


- Topology A, only the first **two** arguments are valid,
- Topology B, only the first **three** arguments are valid,
- Topology C, **ALL** arguments are valid.

Specify topology using [Embed4PortTopology Property](#).

Read the port assignments using the following commands. A, B, C, and D, refer to the port; NOT the topology.

- [Embed4PortA Property](#)
- [Embed4PortB Property](#)
- [Embed4PortC Property](#)
- [Embed4PortD Property](#)

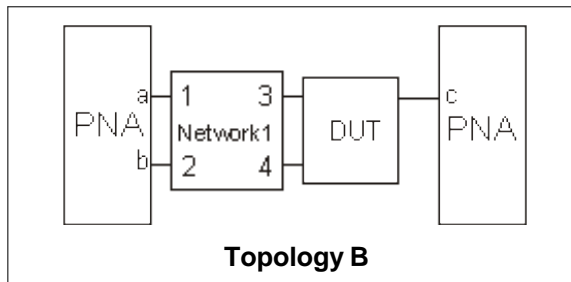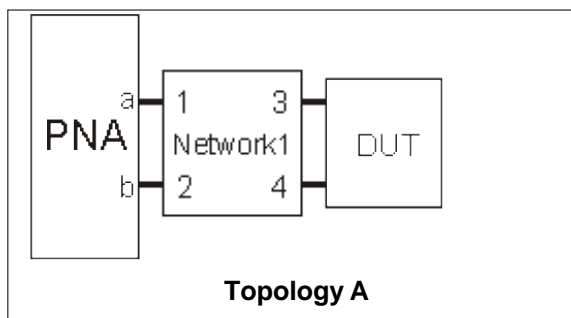

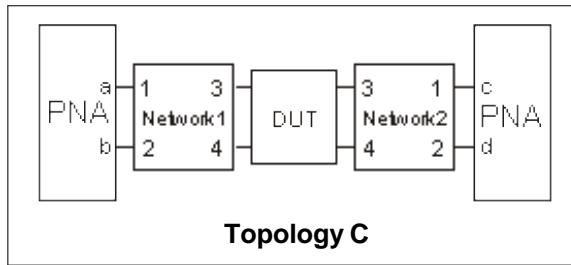

VB Syntax *fixture.Embed4PortList = p1, p2, p3, p4*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

p1 PNA Port number assigned to **a** in above graphic.

p2 PNA Port number assigned to **b** in above graphic.

p3 PNA Port number assigned to **c** in above graphic.

p4 PNA Port number assigned to **d** in above graphic.

Return Type Four Integers

Default 1,2,3,4

Examples `fixture.4PortNetworkTopoCPorts = 4,3,2,1 'Write`

C++ Syntax HRESULT put_4PortNetworkTopoCPorts(short ChannelNum, short pPortA, short pPortB, short pPortC, short pPortD)

Interface IFixturing2

Embed4PortNetworkFilename Property

Description Specifies the 4-port touchstone file (*.s4p) in which the network to embed or de-embed resides. If the specified file does not exist, an error occurs when type command is sent.

Following this command, send [Embed4PortNetworkMode Property](#).

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture*.Embed4PortNetworkFilename(*netNum*) = *value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

netNum **(Integer)** Network position. Choose from **1** or **2**. See [Embed4PortTopology Property](#)

value **(String)** Full path, file name, and extension (.s4P) of the circuit.
Files are typically stored in "C:\Program Files\Agilent\Network Analyzer\Documents"

Return Type String

Default Not Applicable

Examples `fixture.Embed4PortNetworkFilename(2) = "C:\Program Files\Agilent\Network Analyzer\Documents\myFile.s4p" 'Write`

`value = fixture.Embed4PortNetworkFilename(1) 'Read`

C++ Syntax HRESULT get_Embed4PortNetworkFilename(short networkNum, BSTR *filename);
HRESULT put_Embed4PortNetworkFilename(short networkNum, BSTR filename);

Interface IFixturing2

Embed4PortNetworkMode Property

Description Specify the type of processing to take place on the specified 4-port network. First specify the network filename with [FSim.Embed4PortNetworkFilename Property](#).

VB Syntax *fixture*.Embed4PortNetworkMode(*netNum*) = *value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

netNum **(Integer)** Network position. Choose from **1** or **2**. See [Embed4PortTopology Property](#)

value **(Enum as NA4PortEmbedNetworkMode)** Processing mode. Choose from:

- **0** or **naNO_NETWORK** - The same as disabling.
- **1** or **naEMBED_NETWORK** - Add Network circuit.
- **2** or **naDEEMBED_NETWORK** - Remove Network circuit

Return Type Enum

Default naNO_NETWORK

Examples `fixture.Embed4PortNetworkMode(1) = naNO_NETWORK 'Write`

`value = fixture.Embed4PortNetworkMode(2) 'Read`

C++ Syntax HRESULT get_Embed4PortNetworkMode(short networkNum, tagNA4PortEmbedNetworkMode *eVal);
 HRESULT put_Embed4PortNetworkMode(short networkNum, tagNA4PortEmbedNetworkMode eVal);

Interface IFixturing2

Embed4PortState Property

Description Turns ON or OFF 4-port Network embedding for all ports on the channel.

VB Syntax *fixture*.Embed4PortState = *value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (Boolean)

False - Turns Embedding OFF

True - Turns Embedding ON

Return Type Boolean

Default False (OFF)

Examples `fixture.Embed4PortState = False 'Write`

`value = fixture.Embed4PortState 'Read`

C++ Syntax HRESULT get_Embed4PortState(VARIANT_BOOL *pVal)
HRESULT put_Embed4PortState(VARIANT_BOOL newVal)

Interface IFixturing2

Embed4PortTopology Property

Description Specifies the PNA / DUT topology. [Learn more about these and other PNA/DUT configurations.](#)

VB Syntax *fixture.Embed4PortTopology = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (Enum as **NA4PortEmbedTopology**) PNA / DUT topology. Choose from:

0 or **naTOPOLOGY_A** - 2 PNA/DUT Ports

1 or **naTOPOLOGY_B** - 3 PNA/DUT Ports

2 or **naTOPOLOGY_C** - 4 PNA/DUT Ports

Return Type Enum

Default **naTOPOLOGY_A** (2 PNA/DUT Ports)

Examples `fixture.Embed4PortTopology = naTOPOLOGY_A` 'Write

`value = fixture.Embed4PortTopology` 'Read

C++ Syntax HRESULT get_Embed4PortTopology(tagNA4PortEmbedTopology *eVal);
 HRESULT put_Embed4PortTopology(tagNA4PortEmbedTopology eVal);

Interface IFixturing2

Enable Property

Description Turns ON / OFF the trigger output.

VB Syntax *auxTrig.Enable* = *state*

Variable [\(Type\)](#) - Description

auxTrig An [AuxTrigger](#) (object)

state (boolean)

True - Trigger Output ON

False - Trigger Output OFF

Return Type Boolean

Default False

Exaamples `auxTrig.Enable = True 'Write`

`value = auxTrig.Enable 'Read`

C++ Syntax HRESULT get_Enable(VARIANT_BOOL * enable);
HRESULT put_Enable(VARIANT_BOOL enable);

Interface IAuxTrigger

Last Modified:

14-Dec-2006 MX New topic

Enabled Property

Description Enables and disables (ON/OFF) the port mapping and control line output of the specified test set.

If the specified test set is not connected or not ON, then setting Enabled = True will report an error. All other properties can be set when the test set is not connected.

When this command is set to ON or OFF, then the display of the test set status bar ([ShowProperties Property](#)) is also set to ON or OFF.

VB Syntax *tset.Enabled = value*

Variable [\(Type\)](#) - Description

tset A [TestsetControl](#) object

OR

An [E5091Testset](#) object

value **(Boolean)**

True Enables test set control.

False Disables test set control.

Return Type Boolean

Default False

Examples [See E5091A Example Program](#)

[See External Testset Program](#)

C++ Syntax HRESULT get_Enabled(VARIANT_BOOL *state);
HRESULT put_Enabled(VARIANT_BOOL state);

Interface ITestsetControl
IE5091Testsets

EnableSourceUnleveledEvents Property

Description Specifies whether or not to report [Source Unleveled](#) errors as system events. These events can trigger an [OnSystemEvent](#) call.

VB Syntax *pref.EnableSourceUnleveledEvents = bool*

Variable [\(Type\)](#) - Description

pref A [Preferences](#) (object)

bool **(Boolean)** - Choose from:

False - Do NOT report Source Unleveled Errors.

True - Report Source Unleveled Errors.

**Return
Type** Boolean

Default False

Examples `pref.EnableSourceUnleveledEvents = False 'Write`

`prefer = pref.EnableSourceUnleveledEvents 'Read`

C++ Syntax HRESULT put_EnableSourceUnleveledEvents(VARIANT_BOOL bsourcUnlEnable)
HRESULT get_EnableSourceUnleveledEvents(VARIANT_BOOL *bsourcUnlEnable)

Interface IPreferences3

Last modified:

Nov. 15, 2006 MX New command

ErrorCorrection Property

Description Sets (or returns) error correction ON or OFF for the measurement.

VB Syntax *meas*.**ErrorCorrection** = *value*

Variable [\(Type\)](#) - Description

meas A Measurement (**object**)

value (**boolean**)

False - Turns error correction OFF

True - Turns error correction ON

Return Type Boolean

Default See [Error Correction](#)

Examples `meas.ErrorCorrection = True 'Write`

`errcorr = meas.ErrorCorrection 'Read`

C++ Syntax HRESULT put_ErrorCorrection (VARIANT_BOOL bState)
HRESULT get_ErrorCorrection (VARIANT_BOOL *bState)

Interface IMeasurement

ErrorCorrection (Channel) Property

Description	Attempts to sets error correction ON or OFF for all of the measurements on the channel. This setting may not be successful for some measurements because the Cal Set currently in place may not contain the appropriate calibration data. To read the error correction state for a measurement, use Error Correction Property .
VB Syntax	<i>chan</i> . ErrorCorrection = <i>value</i>
Variable	(Type) - Description
<i>chan</i>	A Channel (object)
<i>value</i>	(boolean) False - Turns error correction OFF True - Turns error correction ON
Return Type	Boolean
Default	About Error Correction
Examples	<pre>chan.ErrorCorrection = True</pre>
C++ Syntax	HRESULT put_ErrorCorrection (VARIANT_BOOL bState)
Interface	IChannel7

ExternalALC Property

Description Sets or returns the source of the analyzer leveling control.

VB Syntax `app.ExternalALC = value`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

value (boolean) - Choose from:
True - Leveling control supplied through the rear panel.
False - Leveling control supplied inside the analyzer

Return Type Boolean

Default False

Examples

```
app.ExternalALC = True 'Write
```

```
extALC = app.ExternalALC 'Read
```

C++ Syntax HRESULT get_ExternalALC(VARIANT_BOOL *pVal)
HRESULT put_ExternalALC(VARIANT_BOOL newVal)

Interface IApplication

ExternalTriggerConnectionBehavior Property

Description Configures the external triggering signal for the PNA.

[TriggerSouce Property](#) is automatically set to External when **ExternalTriggerConnectionBehavior** is sent.

Edge triggering is only available on some PNA models. For more information, see [External Triggering](#).

VB Syntax `trigsetup.ExternalTriggerConnectionBehavior (conn) = value`

Variable [\(Type\)](#) - Description

trigsetup A [TriggerSetup](#) (object)

conn **(enum NATriggerConnection)** Rear Panel connector to send or receive trigger signals. Choose from:

Only one of the input connectors is active at a time. When a command is sent to one, the PNA automatically makes the other INACTIVE.

0 - **naTriggerConnectionAUXT** Trigger IN from rear-panel [AUX IO connector Pin 19](#)

1 - **naTriggerConnectionBNC1** Trigger IN from rear-panel [Trigger IN BNC connector](#)

2 - **naTriggerConnectionBNC2** Trigger OUT to rear-panel [Trigger OUT BNC connector](#). Only useful in point sweep mode.

3 - **naTriggerConnectionMATH** Trigger IN from rear-panel [Material Handler connector Pin 18](#)

value **(enum NAExternalTriggerBehavior)** -

0 - **naTriggerInactive** - Disables the specified connector.

Choose from ONLY 1 through 4 when <conn> is set to either **naTriggerConnectionBNC1** or **naTriggerConnectionAUXT**

1 - **naTriggerInEdgeNegative** - Triggers the PNA when receiving a negative going signal

2 - **naTriggerInEdgePositive** - Triggers the PNA when receiving a positive going signal

3 - **naTriggerInLevelLow** - Triggers the PNA when receiving a low level signal

4 - **naTriggerInLevelHigh** - Triggers the PNA when receiving a High-level signal

Choose from ONLY 5 through 8 when <conn> is set to **naTriggerConnectionBNC2**.

In addition to sending this command, you must also use [TriggerOutputEnabled Property](#) to enable the BNC2 output.

5 - **naTriggerOutPulsePositiveAfter** - Sends a POSITIVE going TTL pulse at the END of each point during the sweep.

6 - **naTriggerOutPulsePositiveBefore** - Sends a POSITIVE going TTL pulse at the START of each point during the sweep.

7 - **naTriggerOutPulseNegativeAfter** - Sends a NEGATIVE going TTL pulse at the END of each point during the sweep.

8 - **naTriggerOutPulseNegativeBefore** - Sends a NEGATIVE going TTL pulse at the START of each point during the sweep.

Return Type Enum as NAExternalTriggerBehavior

Default BNC1 = **naTriggerInactive**
BNC2 = **naTriggerInactive**
AUXT = **naTriggerInLevelHigh**

When [Output is enabled](#)

BNC1 = **naTriggerInactive**
BNC2 = **naTriggerOutPulsePositiveAfter**
AUXT = **naTriggerInLevelHigh**

Examples `trigsetup.ExternalTriggerConnectionBehavior (naTriggerConnectionAUXT) = naTriggerInLevelLow 'Write`

```
trigBehav = trigsetup.ExternalTriggerConnectionBehavior
(naTriggerConnectionAUXT) 'Read
```

C++ Syntax HRESULT get_ExternalTriggerConnectionBehavior(tagNATriggerConnection connection,tagNAExternalTriggerBehavior *trigger);
HRESULT put_ExternalTriggerConnectionBehavior(tagNATriggerConnection connection,tagNAExternalTriggerBehavior trigger);

Interface ITriggerSetup

ExternalTriggerDelay Property

Description Sets and reads the trigger delay for all measurements in the CHANNEL. This delay is only applied while in [app.Source = naTriggerSourceExternal](#) and [trigsetup.Scope = naChannelTrigger](#) . After an external trigger is applied, the start of the sweep is delayed for the specified delay value plus any inherent latency.

To apply a trigger delay for all channels (Global), use [TriggerDelay Property](#).

VB Syntax *chan.ExternalTriggerDelay = value*

Variable [\(Type\)](#) - **Description**

chan A [Channel](#) (object)

value **Double**- Trigger delay value in seconds. Range is from 0 to 107 seconds

Return Type Double

Default 0

Examples `chan.ExternalTriggerDelay = .003 'Write`

`delay = chan.ExternalTriggerDelay 'Read`

C++ Syntax HRESULT get_ExternalTriggerDelay(double *delay);
HRESULT put_ExternalTriggerDelay(double delay)

Interface IChannel6

FilterBW Property

Description Returns the results of the SearchBandwidth method.

VB Syntax *filtBW* = *meas*.**FilterBW**

Variable [\(Type\)](#) - Description

filtBW **(single)** - Variable to store bandwidth data

meas A Measurement **(object)**

Return Type Single

Default Not applicable

Examples `filterBW = meas.FilterBW 'Read`

C++ Syntax HRESULT get_FilterBW(float* bw)

Interface IMeasurement

FilterCF Property

Description Returns the Center Frequency result of the SearchBandwidth method.

VB Syntax *filtCF* = *meas*.**FilterCF**

Variable [\(Type\)](#) - **Description**

filtCF **(double)** - Variable to store bandwidth CF data

meas A Measurement **(object)**

Return Type Double

Default Not applicable

Examples `filtCF = meas.FilterCF 'Read`

C++ Syntax HRESULT get_FilterCF(double* centerFrequency)

Interface IMeasurement

FilterLoss Property

Description Returns the Loss value of the SearchBandwidth method.

VB Syntax *filtLoss* = *meas*.**FilterLoss**

Variable [\(Type\)](#) - **Description**

filtLoss **(single)** - Variable to store bandwidth Loss data

meas A Measurement **(object)**

Return Type Single

Default Not applicable

Examples `filterLoss = meas.FilterLoss 'Read`

C++ Syntax HRESULT get_FilterLoss(float* loss)

Interface IMeasurement

FilterQ Property

Description Returns the Q (quality factor) result of the SearchBandwidth method.

VB Syntax *filtQ* = *meas*.**FilterQ**

Variable [\(Type\)](#) - **Description**

filtQ **(single)** - Variable to store bandwidth Q data

meas A Measurement **(object)**

Return Type Single

Default Not applicable

Examples `filtQ = meas.FilterQ 'Read`

C++ Syntax HRESULT get_FilterQ(float* quality)

Interface IMeasurement

FilterErrors Property

Description Returns the error string associated with the digital filters. The return string has three fields separated by commas: "stage1 status, stage2 status, stage3 status"

Each of these fields can contain one or more of the following error codes:

- **NO ERROR**
- ***NUMBER-OF-COEFFICIENTS** - the number of coefficients is excessive for that filter-stage
- ***COEFFICIENT VALUE** - one or more coefficients are out of range for that filter-stage
- ***SUM-OF-COEFFICIENTS** - the sum of all coefficients is excessive for that filter-stage,
- ***FREQUENCY** - the frequency for Stage 1 is out of range (only applies stage1 field),
- ***PARAMETER** - one or more parameters are out of range (only applies to stage 3 field)

VB Syntax *value* = *spm4*.FilterErrors

Variable [\(Type\)](#) - Description

value Variable to store the returned errors.

spm4 A [SignalProcessingModuleFour](#) (object)

Return Type String

Default Not Applicable

Examples

```
mode = spm4.FilterErrors 'Read
'example return strings"
NO ERROR, NO ERROR, NO ERROR
indicates no errors,
*SUM-OF-COEFFICIENTS, NO ERROR, NO ERROR
indicates that the sum of all filter coefficients exceed the
maximum value for the Stage-1 filter,
*COEFFICIENT *SUM-OF-COEFFICIENTS, NO ERROR, *PARAMETER
indicates a problems with Stage 1 coefficients and a problem
with one or more of the parameters associated with the Stage 3
filter.
```

C++ Syntax HRESULT get_FilterErrors(BSTR* dspErrors);

Last Modified:

1-Jan-2007 MX New topic

FilterMode Property

Description Sets and returns whether the PNA configures the 3-stage digital filter settings or they will be configured manually. When making manual settings, also send [ADCCaptureMode Property](#) which routes the IF through the 3-stage filter.

VB Syntax `spm4.FilterMode = value`

Variable [\(Type\)](#) - Description

spm4 A [SignalProcessingModuleFour](#) (object)

value (enum as **NAModes**) Filter mode. Choose from:

naAUTO PNA controls digital filter settings.

naMANUAL You control digital filter settings using other [SignalProcessingModuleFour](#) commands.

**Return
Type** Enum

Default naAUTO

Examples `spm4.FilterMode = naAUTO 'Write`

`mode = spm4.FilterMode 'Read`

C++ Syntax `HRESULT get_FilterMode(tagNAModes* dspMode);`
`HRESULT put_FilterMode(tagNAModes dspMode);`

Interface ISignalProcessingModuleFour

Last Modified:

24-Jan-2007 MX New topic

FirmwareMajorRevision Property

Description Returns the major firmware revision number as an integer. For example, given a firmware revision number A.03.30, this command returns 3.

VB Syntax *value* = *cap.FirmwareMajorRevision*

Variable [\(Type\)](#) - [Description](#)

value (Long) - Variable to store the returned integer value of the firmware revision number.

cap A [Capabilities](#) (object)

Return Type Long

Default Not Applicable

Examples `value = cap.FirmwareMajorRevision 'Read`

C++ Syntax HRESULT get_FirmwareMajorRevision(long * majorRev);

Interface ICapabilities

FirmwareMinorRevision Property

Description Returns the minor firmware revision number as an integer. For example, given a firmware revision number A.03.30, this command returns 30.

VB Syntax `value = cap.FirmwareMinorRevision`

Variable [\(Type\)](#) - [Description](#)

value (Long) - Variable to store the returned decimal value of the firmware revision number.

cap A [Capabilities](#) (object)

Return Type Long

Default Not Applicable

Examples `value = cap.FirmwareMinorRevision 'Read`

C++ Syntax HRESULT get_FirmwareMinorRevision(long * minorRev);

Interface ICapabilities

FirmwareSeries Property

Description Returns the alpha portion of the firmware revision number. For example, given a firmware revision number A.03.30, this command returns A.

VB Syntax *value* = *cap.FirmwareSeries*

Variable [\(Type\)](#) - **Description**

value (String) - Variable to store the returned alpha value of the firmware revision number.

cap A [Capabilities](#) (**object**)

Return Type String

Default Not Applicable

Examples `value = cap.FirmwareSeries 'Read`

C++ Syntax HRESULT get_FirmwareSeries(BSTR * series);

Interface ICapabilities

FixturingState Property

Description Turns all three fixturing functions (de-embedding, port matching, impedance conversion) ON or OFF for all ports on the specified channel. This does NOT affect port extensions.

VB Syntax *fixture.FixturingState = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (boolean)

True - Turns Fixturing ON

False - Turns Fixturing OFF

**Return
Type** Boolean

Default False

Examples `fixture.FixturingState = True 'Write`

`value = fixture.FixturingState 'Read`

C++ Syntax HRESULT get_FixturingState(VARIANT_BOOL *pVal)
HRESULT put_FixturingState(VARIANT_BOOL newVal)

Interface IFixturing

FootSwitch Property

Description Reads the Footswitch Input (pin 20 of the AUX IO connector).

VB Syntax *value* = *AuxIO.Footswitch*

Variable [\(Type\)](#) - **Description**

value **(boolean)** - Variable to store the returned value

False - foot switch is released

True - footswitch is depressed

AuxIO **(object)** - A Hardware Aux I/O object

Return Type Boolean

Default True

Examples `fs = aux.Footswitch`

C++ Syntax HRESULT get_FootSwitch (VARIANT_BOOL* State);

Interface IHWAuxIO

FootswitchMode Property

Description	Determines what occurs when the footswitch is pressed. For more information see the FootSwitch In pin description in the Auxiliary IO connector.
VB Syntax	<i>AuxIo.FootSwitchMode</i> = <i>value</i>
Variable	(Type) - Description
<i>value</i>	<p>(enum NAFootSwitchMode)</p> <p>0 - naIgnoreFootswitch - Footswitch presses are ignored.</p> <p>1 - naSweepTrigger - Footswitch presses trigger a sweep. The PNA must be in Manual Trigger Mode.</p> <p>2 - naRecallNextState - Footswitch presses recall an instrument state. When more than one state is available, then each footswitch press recalls the next state, then starts over from the beginning. It is possible for a recalled state to override the current mode. If the recalled state is IGNore, then mode changes and additional footswitch presses are ignored.</p> <p>3 - naRunMacro - Footswitch presses load and run a macro. When more than one macro is available, then each footswitch press loads and runs the next macro, then starts over from the beginning. It is possible for a Macro to override the current mode. If the macro contains a Preset, then the mode changes to the default setting IGNore and additional footswitch presses are ignored.</p>
<i>AuxIO</i>	(object) - A Hardware Aux I/O object
Return Type	NAFootSwitchMode
Default	0 - naIgnoreFootswitch
Examples	<pre>auxIo.FootSwitchMode = naIgnoreFootSwitch 'Write</pre>
C++ Syntax	<pre>HRESULT get_FootSwitchMode(NAFootSwitchMode *pFootSwitchMode) HRESULT put_FootSwitchMode(NAFootSwitchMode newFootSwitchMode)</pre>
Interface	IHWAuxIO3

Format Property (marker)

Description Sets (or returns) the format of the marker.

VB Syntax *mark.Format* = *value*

Variable [\(Type\)](#) - **Description**

mark A Marker **(object)**

value **(enum NAMarkerFormat)** - Choose from:

- 0 - naMarkerFormat_LinMag
- 1 - naMarkerFormat_LogMag
- 2 - naMarkerFormat_Phase
- 3 - naMarkerFormat_Delay
- 4 - naMarkerFormat_Real
- 5 - naMarkerFormat_Imaginary
- 6 - naMarkerFormat_SWR
- 7 - naMarkerFormat_LinMagPhase
- 8 - naMarkerFormat_LogMagPhase
- 9 - naMarkerFormat_ReallImaginary
- 10 - naMarkerFormat_ComplexImpedance
- 11 - naMarkerFormat_ComplexAdmittance

Return Type NAMarkerFormat

Default 1 - naMarkerFormat_LogMag

Examples

```
mark.Format = naMarkerFormat_SWR 'Write
```

```
fmt = mark.Format 'Read
```

C++ Syntax HRESULT get_Format(tagNAMarkerFormat *pVal)
HRESULT put_Format(tagNAMarkerFormat newVal)

Interface IMarker

Frequency Property

Description	Sets or returns the frequency associated with a PowerSensorCalFactorSegment or Sets or returns the frequency associated with a PowerLossSegment.
VB Syntax	<i>object</i> . Frequency = <i>value</i>
Variable	(Type) - Description
<i>object</i>	(object) - PowerSensorCalFactorSegment or PowerLossSegment
<i>value</i>	(double) – Frequency in units of Hz. This can be any non-negative value (limited by the maximum value of double).
Return Type	Double
Default	0
Examples	<pre>seg.Frequency = 6e9 'Write freq = seg.Frequency 'Read</pre>
C++ Syntax	HRESULT put_Frequency(double newVal); HRESULT get_Frequency(double *pVal);
Interface	IPowerSensorCalFactorSegment IPowerLossSegment

FrequencySpan Property

Description Sets or returns the frequency span of the channel.
Sets or returns the frequency span of the segment.

VB Syntax *object*.**FrequencySpan** = *value*

Variable [\(Type\)](#) - Description

object A Channel (**object**)
or
A Segment (**object**)

value (**double**) - Frequency span in Hertz. Choose any number between the **minimum** and **maximum** frequencies of the analyzer.

Return Type Double

Default Full frequency span of the analyzer

Examples `chan.FrequencySpan = 4.5e9 'sets the frequency span of a linear sweep for the channel object -Write`

`freqspan = chan.FrequencySpan 'Read`

C++ Syntax HRESULT get_FrequencySpan(double *pVal)
HRESULT put_FrequencySpan(double newVal)

Interface IChannel
ISegment

Read / Write

FrequencyList Property

Description

VB Syntax *guidedCal.FrequencyList* = *value*

Variable [\(Type\)](#) - [Description](#)

guidedCal [GuidedCalibration](#) (object)

value (Variant) -

**Return
Type** Variant

Default

Examples

```
Dim value  
value = MySMC.FrequencyList
```

C++ Syntax HRESULT get_FrequencyList(Variant *freqList)
 HRESULT put_FrequencyList(Variant freqList)

Interface IGuidedCalibration

FrequencyOffsetDivisor Property **Superseded**

Description This method is replaced by properties on the [FOMRange Object](#).
 Specifies (along with [FrequencyOffsetMultiplier](#)) the value to multiply by the stimulus.
 See other [Frequency Offset](#) properties

VB Syntax *object.FrequencyOffsetDivisor = value*

Variable [\(Type\)](#) - Description

object Channel (**object**)
or
 CalSet (**object**) - Read-only property

value (**Double**) - Divisor value. Range is 1 to 1000

Return Type Double

Default 1

Examples

```
chan.FrequencyOffsetDivisor = 2 'Write
```

```
fOffsetDiv = chan.FrequencyOffsetDivisor 'Read
```

C++ Syntax HRESULT get_FrequencyOffsetDivisor(double*pval)
 HRESULT put_FrequencyOffsetDivisor(double newVal)

Interface IChannel2
 |CalSet3

FrequencyOffsetFrequency Property **Superseded**

Description This method is replaced by properties on the [FOMRange Object](#).
Specifies an absolute offset frequency in Hz. For mixer measurements, this would be the LO frequency. See other [Frequency Offset](#) properties.

VB Syntax *object.FrequencyOffsetFrequency = value*

Variable [\(Type\)](#) - Description

object Channel (**object**)

or

CalSet (**object**) - Read-only property

value (**Double**) - Offset value. Range is +/- 1000 GHz. (Offsets can be positive or negative.)

**Return
Type** Double

Default 0 Hz

Examples `chan.FrequencyOffsetFrequency = 2 'Write`

`fOffsetFreq = chan.FrequencyOffsetFrequency 'Read`

C++ Syntax HRESULT get_FrequencyOffsetFrequency(double*pval)
HRESULT put_FrequencyOffsetFrequency(double newVal)

Interface IChannel2
|CalSet3

FrequencyOffsetMultiplier Property **Superseded**

Description This method is replaced by properties on the [FOMRange Object](#).
Specifies (along with [FrequencyOffsetDivisor](#)) the value to multiply by the stimulus. See other [Frequency Offset](#) properties.

VB Syntax *object*.FrequencyOffsetMultiplier = *value*

Variable [\(Type\)](#) - Description

object Channel (**object**)
or
CalSet (**object**) - Read-only property
value (**Double**) - Multiplier value. Range is 1 to 1000

Return Type Double

Default 1

Examples

```
chan.FrequencyOffsetMultiplier = 2 'Write
```

```
fOffsetMult = chan.FrequencyOffsetMultiplier 'Read
```

C++ Syntax HRESULT get_FrequencyOffsetMultiplier (double*pval);
HRESULT put_FrequencyOffsetMultiplier (double newVal);

Interface IChannel2
|CalSet3

FrequencyOffsetCWOverride Property **Superseded**

Description This method is replaced by properties on the [FOMRange Object](#).

Establishes a fixed (CW) stimulus frequency while measuring the Response over a swept frequency range. For example, a fixed-frequency PNA stimulus may be applied to the RF input of a mixer whose local oscillator (LO) is being swept. Because the IF output of the mixer will be swept, the PNA receivers must also be swept.

See other [Frequency Offset](#) properties.

VB Syntax *object*.FrequencyOffsetCWOverride = *value*

Variable [\(Type\)](#) - Description

object Channel (**object**)

or

CalSet (**object**) - Read-only property

value (**Enum as NaStates**) - Choose from:

naOFF (0) - Turns CW override OFF

naON (1) - Turns CW override ON

Return Type Enum

Default 0 Hz

Examples

```
chan.FrequencyOffsetCWOverride = 1 'Write
```

```
fOffsetOV = chan.FrequencyOffsetCWOverride 'Read
```

C++ Syntax HRESULT get_FrequencyOffsetCWOverride (tagNAStates *pstate)
 HRESULT put_FrequencyOffsetCWOverride (tag NAStates newState)

Interface IChannel2
 |CalSet3

FrequencyOffsetState Property **Superseded**

Description This method is replaced by properties on the [FOMRange Object](#).

Enables Frequency Offset on ALL measurements that are present on the active channel. This immediately causes the source and receiver to tune to separate frequencies. The receiver frequencies are specified with other channel and offset settings. To make the stimulus settings, use Channel Start, Stop Frequency properties. See other [Frequency Offset](#) properties.

Tip: To avoid unnecessary errors, first make other frequency offset settings. Then turn Frequency Offset ON.

VB Syntax *object*.**FrequencyOffsetState** = *value*

Variable [\(Type\)](#) - Description

object Channel (**object**)

or

CalSet (**object**) - Read-only property

value (**Enum as NaStates**) - Choose from:

naOFF (0) - Turns Frequency Offset OFF

naON (1) - Turns Frequency Offset ON

Return Type Enum

Default naOFF (0)

Examples

```
chan.FrequencyOffsetState = naON 'Write
```

```
Foffset = chan.FrequencyOffsetState 'Read
```

C++ Syntax HRESULT FrequencyOffsetState (tag NAStates *pState);
 HRESULT FrequencyOffsetState (tag NAStates newState)

Interface IChannel2
 ICalSet3

Shape Property

Description Specifies the shape of the gate filter.

VB Syntax *gat.Shape* = *value*

Variable [\(Type\)](#) - Description

gat A Gating **(object)**

value **(enum** NAGateShape) - Choose from:

0 - naGateShapeMaximum

1 - naGateShapeWide

2 - naGateShapeNormal

3 - naGateShapeMinimum

Return Type NAGateShape

Default 2 - Normal

Examples `gat.Shape = naGateShapeMaximum 'Write`

`filterShape = gat.Shape 'Read`

C++ Syntax HRESULT get_Shape(tagNAGateShape *pVal)
HRESULT put_Shape(tagNAGateShape newVal)

Interface IGating

Type (gate) Property

Description Specifies the type of gate filter used.

VB Syntax *gat.Type* = *value*

Variable [\(Type\)](#) - Description

gat A Gating (**object**)

value (**enum NAGateType**) - Choose from:

0 - naGateTypeBandpass - Includes (passes) the range between the start and stop times.

1 - naGateTypeNotch - Excludes (attenuates) the range between the start and stop times.

Return Type NAGateType

Default Bandpass

Examples `gate.Type = naGateTypeNotch 'Write`

`filterType = gate.Type 'Read`

C++ Syntax HRESULT get_Type(tagNAGateType *pVal)
HRESULT put_Type(tagNAGateType newVal)

Interface IGating

GPIBAddress Property

Description Sets and returns the PNA GPIB address bus.

VB Syntax *app.GPIBAddress (bus) = value*

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

bus (Short Integer) GPIB bus. MUST be set to 0.

value (Short Integer) GPIB Address on the PNA. Choose a value between 0 and 30.

Return Type Short Integer

Default 16

Examples `address=app.GPIBAddress(0) 'Read`

`app.GPIBAddress(0)=16 'Write`

C++ Syntax HRESULT get_GPIBAddress(short busIndex, short* address);
HRESULT put_GPIBAddress(short busIndex,short address);

Interface IApplication8

GPIBMode Property

Description Changes the analyzer to a GPIB system controller or a talker/listener on the bus. The analyzer must be the controller if you want to use it to send commands to other instruments. The analyzer must be a talker/listener if you want to send it commands from another PC.

Note: This command has no affect in PNAs with dedicated Controller and Talker/Listener GPIB connectors. [Learn more.](#)

VB Syntax `app.GPIBMode value`

Variable [\(Type\)](#) - **Description**

app An [Application](#) (object)

value **(enum NAGPIBMode)** -Choose either:
0 - naTalkerListener - the analyzer is a talker / listener
1 - naSystemController - the analyzer is the system controller

Return Type Long Integer

Default 0 - naTalkerListener

Examples `app.GPIBMode = naTalkerListener 'Write`

```
mode = app.GPIBMode 'Read
```

C++ Syntax HRESULT get_GPIBMode(tagGPIBModeEnum* eGpibMode)
HRESULT put_GPIBMode(tagGPIBModeEnum eGpibMode)

Interface IApplication

GPBPortCount Property

Description Returns the number of GPB ports that are present on the PNA rear-panel.

- [1.1 GHz CPU board](#) = 2
- All other CPU boards = 1

VB Syntax *value* = *cap*.GPBPortCount

Variable [\(Type\)](#) - Description

value (Long) - Variable to store the returned integer value of the number of GPB ports.

cap A [Capabilities](#) (object)

Return Type Long

Default Not Applicable

Examples `value = cap.GPBPortCount 'Read`

C++ Syntax HRESULT get_GPBPortCount(long * gpibPorts);

Interface ICapabilities3

HandshakeEnable Property

Description Turns handshake ON / OFF.

To enable handshake, the main trigger enable must ALSO be set using [Enable](#).

When ON, PNA acquisition waits indefinitely for the input line to be asserted before continuing with the acquisition.

VB Syntax *auxTrig.HandshakeEnable = state*

Variable [\(Type\)](#) - Description

auxTrig An [AuxTrigger](#) (object)

state (boolean) -

True - Handshake enabled

False - Handshake NOT enabled

**Return
Type** Boolean

Default False

Examples `auxTrig.HandshakeEnable = True 'Write`

`value = auxTrig.HandshakeEnable 'Read`

C++ Syntax HRESULT get_HandshakeEnable(VARIANT_BOOL * enable);
HRESULT put_HandshakeEnable(VARIANT_BOOL enable);

Interface IAuxTrigger

Last Modified:

14-Dec-2006 MX New topic

ID Property

Description Returns the test set ID number. For GPIB testsets, the ID is equivalent to the GPIB address. For testset I/O testsets, the ID is the base address of the testset (0 for the first testset, 1 for the second, and so on).

VB Syntax *value* = *tset.ID*

Variable [\(Type\)](#) - Description

value (Long) variable to store the returned information.

testsets(1) A [TestsetControl](#) object.

OR

An [E5091Testset](#) object.

Return Type Long Integer

Default Not Applicable

Examples `value = testset1.ID`

[See E5091A Example Program](#)

[See External Testset Program](#)

C++ Syntax HRESULT get_ID(long *idNumber);

Interface ITestsetControl
IE5091Testset

IDString Property

Description	Returns the ID of the analyzer, including the Model number, Serial Number, and the Software revision number. Note: Beginning with Rev 6.01, this command now returns the software revision with 6 digits instead of 4. For example, A.06.01.02.
VB Syntax	<i>value</i> = <i>app</i> .IDString
Variable	(Type) - Description
<i>app</i>	An Application (object)
<i>value</i>	(string) - variable to contain the returned ID string
Return Type	String
Default	Not Applicable
Examples	<code>id = app.IDString</code>
C++ Syntax	HRESULT IDString(BSTR* IDString)
Interface	IApplication

IFBandwidthOption Property

Description Enables the IFBandwidth to be set on individual sweep segments. This property must be set True **before** `seg.IFBandwidth = value` is sent. Otherwise, this command will be ignored.

VB Syntax `segs.IFBandwidthOption = value`

Variable [\(Type\)](#) - Description

`segs` A Segments collection (**object**)

`value` (**boolean**)

True - Enables variable IFBandwidth setting for segment sweep

False - Disables variable IFBandwidth setting for segment sweep

**Return
Type** Boolean

Default False

Examples `segs.IFBandwidthOption = True 'Write`

`IFOption = IFBandwidthOption 'Read`

C++ Syntax HRESULT get_IFBandwidthOption(VARIANT_BOOL *pVal)
HRESULT put_IFBandwidthOption(VARIANT_BOOL newVal)

Interface ISegments

IFBandwidth Property

Description Sets or returns the IF Bandwidth of the channel.
Sets or returns the IF Bandwidth of the segment.
Returns the IF Bandwidth used in the Cal Set

VB Syntax *object*.IFBandwidth = *value*

Variable [\(Type\)](#) - Description

object Channel **(object)**

or

Segment **(object)**

or

CalSet **(object)** - Read-only property

value **(double)** - IF Bandwidth in Hz. The list of valid IF Bandwidths is different depending on the PNA model. [\(Click to see the lists.\)](#) If an invalid number is specified, the analyzer will round up to the closest valid number.

Return Type Double

Default See [Preset IFBW](#) for your PNA model.

Examples

```
chan.IFBandwidth = 3e3 'sets the IF Bandwidth of for the channel object
to 3 kHz. -Write
seg.IFBandwidth = 5 'sets the IF Bandwidth of the segment to 5 Hz. -
Write
```

```
ifbw = chan.IFBandwidth -Read
```

C++ Syntax HRESULT get_IFBandwidth(double *pVal);
HRESULT put_IFBandwidth(double newVal);

Interface IChannel
ISegment
|CalSet3

IFDenominator Property

Description Sets or returns the denominator value of the IF Fractional Multiplier.
Only applies to 2 stage mixers!

VB Syntax *mixer*.IFDenominator = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(long)** IF Denominator value.

Return Type Long

Default 1

Examples `Print mixer.IFDenominator` 'prints the value of the IFDenominator

C++ Syntax HRESULT get_IFDenominator(long *pVal)
HRESULT put_IFDenominator(long newVal)

Interface IMixer

IFFilterSampleCount Property

Description	<p>Note: This setting applies only to the E836X Opt. H11.</p> <p>Sets or retrieves the number of taps in the IF filter when the IFFilterSource property is set to <code>nalIFFilterSourceManual</code>.</p>
VB Syntax	<i>IfConfig.IFFilterSampleCount = value</i>
Variable	(Type) - Description
<i>IfConfig</i>	IIFConfiguration (object)
<i>value</i>	(long) – The IF filter sample count. The minimum and maximum allowed values for this property can vary by model number, but can be queried using the MinimumIFFilterSampleCount and MaximumIFFilterSampleCount properties.
Return Type	Long Integer
Default	PNA Model number dependent
Examples	<pre>App.ActiveChannel.IFConfiguration.IFFilterSampleCount = 200 'Write</pre> <pre>variable = App.ActiveChannel.IFConfiguration.IFFilterSampleCount 'Read</pre> <p>See an example program</p>
C++ Syntax	<pre>HRESULT get_IFFilterSampleCount(long * pSampleCount);</pre> <pre>HRESULT put_IFFilterSampleCount (long sampleCount);</pre>
Interface	IIFConfiguration2

IFFilterSamplePeriod Property

Description **Note:** This setting applies only to the E836X Opt. H11.

Sets or returns the IF filter sample period time. This time is only used if the [IFFilterSamplePeriodMode](#) is set to naManual.

VB Syntax *IfConfig.IFFilterSamplePeriod = value*

Variable [\(Type\)](#) - Description

IfConfig [IFConfiguration](#) (object)

value **(double)** – The sample period time in seconds. Valid sample period times can be queried using the [IFFilterSamplePeriodList](#) property.

**Return
Type** Double

Default PNA Model number dependent.

Examples `App.ActiveChannel.IFConfiguration.IFFilterSamplePeriod = .000006 'Write`

`variable = App.ActiveChannel.IFConfiguration.IFFilterSamplePeriod 'Read`

[See an example program](#)

C++ Syntax HRESULT get_IFFilterSamplePeriod(double * pSamplePeriod);
HRESULT put_IFFilterSamplePeriod (double samplePeriod);

Interface IIFConfiguration2

IFFilterSamplePeriodList Property

Description Retrieves the list of available IF filter sample periods for the instrument.

Note: This setting applies only to the E836X Opt. H11.

VB Syntax *variable* = *IfConfig*.IFFilterSamplePeriodList

Variable [\(Type\)](#) - [Description](#)

variable (Array) An array of permissible values that can be passed to the [IFFilterSamplePeriod](#) property.

IfConfig [IFConfiguration \(object\)](#)

Return Type Array

Default Not applicable

Examples

```
Dim Variable
Variable =
App.ActiveChannel.IFConfiguration.IFFilterSamplePeriodList 'Read
MsgBox "First IF Sample Period Value: " & Variable(0)
```

[See an example program](#)

C++ Syntax HRESULT get_IFFilterSamplePeriodList(SAFEARRAY ** ppSamplePeriodList);

Interface IIFConfiguration2

IFFilterSamplePeriodMode Property

Description Sets or returns the IF filter sample period mode.

Note: This setting applies only to the E836X Opt. H11.

VB Syntax *IfConfig.IFFilterSamplePeriodMode = value*

Variable [\(Type\)](#) - Description

IfConfig [IFConfiguration \(object\)](#)

value **(enum NAModes)** -

0 - naAuto - IF filter sample period is chosen automatically.

1 - naManual - the IF filter sample period is the value specified by the [IFSamplePeriod](#) property.

**Return
Type** NAModes

Default 0 - naAuto

Examples `App.ActiveChannel.IFConfiguration.IFFilterSamplePeriodMode = naAuto`
`'Write`

`variable = App.ActiveChannel.IFConfiguration.IFFilterSamplePeriodMode`
`'Read`

[See an example program](#)

C++ Syntax HRESULT get_IFFilterSamplePeriodMode(tagNAModes * pMode);
HRESULT put_IFFilterSamplePeriodMode (tagNAModes mode);

Interface IIFConfiguration2

IFFilterSource Property

Description Sets or retrieves type of IF filter to be used.

Note: This setting applies only to the E836X Opt. H11.

VB Syntax *IfConfig.IFFilterSource* = *value*

Variable [\(Type\)](#) - Description

object [IFConfiguration \(object\)](#)

value **(NAIFFilterSource)** – The type of filter to use. Choose from:

naIFFilterSourceAuto – The IF filter type is automatically chosen.

naIFFilterSourceManual – The IF filter is a predetermined shape where the [IFFilterSampleCount](#) determines the number of taps in the filter.

Return Type NAIFFilterSource

Default naIFFilterSourceAuto

Examples `App.ActiveChannel.IFConfiguration.IFFilterSource =
naIFFilterSourceManual 'Write`

`Variable = App.ActiveChannel.IFConfiguration.IFFilterSource 'Read`

[See an example program](#)

C++ Syntax HRESULT get_IFFilterSource(tagNAIFFilterSource * pFilterSource);
HRESULT put_IFFilterSource(tagNAIFFilterSource filterSource);

Interface IIFConfiguration2

IFGainLevel Property

Description **Note:** This setting applies only to the E836X Opt. H11.

Manually sets the gain level for the specified receiver.

VB Syntax *IfConfig*.**IFGainLevel** (*id*) = *value*

Variable [\(Type\)](#) - Description

IfConfig An [IFConfiguration](#) (object)

id Receiver for which to set the gain level. Choose from: 'A', 'B', 'R1', 'R2'.

Note: The A and R1 receivers are always switched together. B and R2 are also always switched together. For example, if you specify 'A', R1 will also be switched.

value (long Integer) Gain Level. Choose from:

0 - Lowest gain setting

1

2 - Highest gain setting

Return Type Long Integer

Default 0 (Lowest setting)

Examples `IfConfig.IFGainLevel("A") = 1`

C++ Syntax HRESULT get_IFGainLevel (BSTR IDString, *GainLevel)

HRESULT put_IFGainLevel (BSTR IDString, GainLevel)

Interface IFConfiguration

Last Modified:

21-Sep-2007 Fixed example

IFGainMode Property

Description **Note:** This setting applies only to the E836X Opt. H11.

Sets the gain state for ALL receivers to Auto or Manual.

VB Syntax *IfConfig*.**IFGainMode** (*id*) = *value*

Variable [\(Type\)](#) - Description

IfConfig An [IFConfiguration](#) (object)

id Receivers for which to set the state. Choose 'ALL'.

value (enum as NAModes)

Choose from:

0 - naAUTO

1 - naMANUAL (use [IFGainLevel Property](#) to manually set gain level)

Return Type NAModes

Default 0 - naAUTO

Examples `IfConfig.IFGainMode("ALL") = naAUTO`

C++ Syntax HRESULT get_IFGainMode (BSTR IDString, NAModes *gainMode)
 HRESULT put_IFGainMode (BSTR IDString, NAModes gainMode)

Interface IIFConfiguration

IFGateEnable Property

Description Sets or retrieves the state of the IF Gate.

Note: This setting applies only to the E836X Opt. H11.

VB Syntax *IfConfig*.IFGateEnable = *value*

Variable [\(Type\)](#) - Description

IfConfig [IFConfiguration \(object\)](#)

value **(Boolean)** – The state of the IF Gate.

True – The IF Gate is in use.

False – The IF Gate is not in use.

Return Type Boolean

Default False

Examples `App.ActiveChannel.IFConfiguration.IFGateEnable = True 'Write`

`variable = App.ActiveChannel.IFConfiguration.IFGateEnable 'Read`

[See an example program](#)

C++ Syntax HRESULT get_IFGateEnable(VARIANT_BOOL * pGateEnabled);
HRESULT put_IFGateEnable(VARIANT_BOOL gateEnabled);

Interface IIFConfiguration

IFFrequency Property

Description Sets and returns the IF frequency for ALL receiver paths being used for the specified channel. To set this frequency, [IFFrequencyMode Property](#) must be set to OFF (Manual).

VB Syntax *IfConfig.IFFrequency = value*

Variable [\(Type\)](#) - [Description](#)

IfConfig An [IFConfiguration](#) (object)

value (double) IF Frequency. Use [MaximumIFFrequency](#) and [MinimumIFFrequency](#) to determine the range of value for this command.

Return Type Double

Default 9 MHz

Examples `IfConfig.IFFrequency = 9.3e6`

C++ Syntax HRESULT get_IFFrequency (double *pVal);
HRESULT put_IFFrequency (double pVal);

Interface IFConfiguration3

Last Modified:

18-Jun-2007 MX New topic

IFFrequencyMode Property

Description Sets and returns method for specifying the way the IF Frequency is determined.

VB Syntax *IfConfig.IFFrequencyMode = value*

Variable [\(Type\)](#) - Description

IfConfig An [IFConfiguration](#) (object)

value (enum as NAModes) IF Frequency mode. Choose from:

0 - naAUTO PNA determines the setting for the IF frequency.

1 - naMANUAL (use [IFFrequency Property](#) to manually set frequency.

Return Type Enum

Default 0 naAuto

Examples `IfConfig.IFFrequencyMode = naMANUAL`

C++ Syntax HRESULT get_IFFrequencyMode (tagNAModes* pdspMode);
HRESULT put_IFFrequencyMode (tagNAModes* pdspMode);

Interface IFConfiguration3

Last Modified:

18-Jun-2007 MX New topic

IFNumerator Property

Description Sets or returns the numerator value of the IF Fractional Multiplier.
Only applies to 2 stage mixers!

VB Syntax *mixer.IFNumerator = value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(Long)**

Return Type long

Default Not Applicable

Examples `Print mixer.IFNumerator` 'prints the value of the IFNumerator

C++ Syntax HRESULT get_IFNumerator(long *pVal)
HRESULT put_IFNumerator(long newVal)

Interface IMixer

IFSideband Property

Description Sets or returns the value of the IF sideband, high or low.
Only applies to 2 stage mixers!

VB Syntax *mixer*.IFSideband =value

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(enum as FCASideBand)** - Choose from:
0 - LOW
1 - HIGH

Return Type FCASideBand

Default 0 - LOW

Examples `Print mixer.IFSideband` 'prints the value of the IFSideband

C++ Syntax HRESULT get_IFSideband(FCASideBand *pVal)
HRESULT put_IFSideband(FCASideBand newVal)

Interface IMixer

IFSourcePath Property

Description	<p>Note: This setting applies only to the E836X Opt. H11.</p> <p>Sets the source path of the specified receiver. An error is returned if <i><id></i> is not valid, or if <i><value></i> is not valid for the specified <i><id></i>.</p>
VB Syntax	<i>IfConfig</i> . IFSourcePath (<i>id</i>) = <i>value</i>
Variable	(Type) - Description
<i>IfConfig</i>	An IFConfiguration (object)
<i>id</i>	<p>Receiver for which to set the gain level. Choose from: 'A', 'B', 'R1', 'R2'..</p> <p>Note: The A and R1 receivers are always switched together. B and R2 are also always switched together. For example, if you specify "A", R1 will also be switched.</p>
<i>value</i>	<p>(Enum as NAIFSourcePath) Source path. Choose from:</p> <p>0 - naNormalIFPath - the PNA decides the appropriate IF input paths.</p> <p>1 - naExternalIFPath - always use the rear panel IF inputs.</p>
Return Type	NAIFSourcePath
Default	0 - naNormalIFPath
Examples	<code>IfConfig.IFSourcePath('A') = naNormalIFPath</code>
C++ Syntax	<p>HRESULT get_IFSourcePath (BSTR IDString, naIFSourcePath *IFSourcePath)</p> <p>HRESULT put_IFSourcePath (BSTR IDString, naIFSourcePath IFSourcePath)</p>
Interface	IIFConfiguration

IFStartFrequency Property

Description Sets or returns the start frequency value of the mixer IF frequency.
Only applies to 2 stage mixers!

VB Syntax *mixer*.IFStartFrequency = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(double)** - Frequency in Hertz.

Return Type Double

Default Not Applicable

Examples `Print mixer.IFStartFrequency` 'prints the value of the
`IFStartFrequency`

C++ Syntax HRESULT get_IFStartFrequency(double *pVal)
HRESULT put_IFStartFrequency(double newVal)

Interface IMixer

IFStopFrequency Property

Description Sets or returns the stop frequency value of the mixer IF frequency.
Only applies to 2 stage mixers!

VB Syntax *mixer*.IFStopFrequency = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(double)** - IF stop frequency in Hertz.

Return Type Double

Default Not Applicable

Examples `Print mixer.IFStopFrequency` 'prints the value of the
IFStopFrequency

C++ Syntax HRESULT get_IFStopFrequency(double *pVal)
HRESULT put_IFStopFrequency(double newVal)

Interface IMixer

ImpulseWidth Property

Description Sets or returns the Impulse Width of Time Domain transform windows

VB Syntax *trans.ImpulseWidth = value*

Variable [\(Type\)](#) - Description

trans A [Transform](#) (object)

value **(double)** - Impulse Width in seconds. Range of settings depends on the frequency range of your analyzer.

Return Type Double

Default .98 / Default Span

Examples `trans.ImpulseWidth = 200e-12 'sets the Impulse width of a transform window -Write`

`IW = trans.ImpulseWidth 'Read`

C++ Syntax HRESULT get_ImpulseWidth(double *pVal)
HRESULT put_ImpulseWidth(double newVal)

Interface ITransform

IndexState Property

Description Determines the control of Material Handler connector Pin 20.

VB Syntax *handler.IndexState = value*

Variable [\(Type\)](#) - Description

handler **(object)** - A [Handler I/O](#) object

value **(boolean)**
False - Pin 20 is controlled by Output Port B6
True - Pin 20 is controlled by the Index signal

Return Type Boolean

Default False

Examples

```
handler.IndexState = False 'Write  
bState = handler.IndexState 'Read
```

C++ Syntax HRESULT put_IndexState (BOOL *pVal);
HRESULT get_IndexState (BOOL newVal);

Interface IHWMaterialHandlerIO2

InputA Property - **Obsolete**

Description This property has NO replacement and no longer works correctly. (Sept. 2004)

Sets a Port Extension value for Receiver A

VB Syntax `portExt.InputA = value`

Variable [\(Type\)](#) - Description

portExt A Port Extension (**object**)

value (**double**) - Port Extension value in seconds. Choose any number between **-10** and **10**

Return Type Double

Default 0

Examples `portExt.InputA = 10e-6 'Write`

`inA = portExt.InputA 'Read`

C++ Syntax HRESULT get_InputA(double *pVal)
HRESULT put_InputA(double newVal)

Interface IPortExtension

InputB Property - **Obsolete**

Description This property has NO replacement and no longer works correctly. (Sept. 2004)

Sets the Port Extension value for Receiver B

VB Syntax *portExt.InputB = value*

Variable [\(Type\)](#) - Description

portExt A Port Extension (**object**)

value (**double**) - Port Extension value in seconds. Choose any number between **-10** and **10**

Return Type Double

Default 0

Examples `portExt.InputB = 10e-6 'Write`

`inB = portExt.InputB 'Read`

C++ Syntax HRESULT get_InputB(double *pVal)
HRESULT put_InputB(double newVal)

Interface IPortExtension

InputC Property **Obsolete**

Description This property has NO replacement and no longer works correctly. (Sept. 2004)

Sets the Port Extension value for Receiver C

VB Syntax *portExt.InputC = value*

Variable [\(Type\)](#) - Description

portExt A Port Extension (**object**)

value (**double**) - Port Extension value in seconds. Choose any number between **-10** and **10**

Return Type Double

Default 0

Examples `portExt.InputC = 10e-6 'Write`

`inC = portExt.InputC 'Read`

C++ Syntax HRESULT get_InputC(double *pVal)
HRESULT put_InputC(double newVal)

Interface IPortExtension

InputDenominator Property

Description Sets or returns the denominator value of the Input Fractional Multiplier.

VB Syntax *mixer*.InputDenominator = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(Long)** - Input denominator value.

Return Type Long

Default 1

Examples `Print mixer.InputDenominator` 'prints the value of the
`InputDenominator`

C++ Syntax HRESULT get_InputDenominator(long *pVal)
HRESULT put_InputDenominator(long newVal)

Interface IMixer

InputFixedFrequency Property

Description Sets or returns the mixer fixed Input frequency value.

VB Syntax *mixer*.InputFixedFrequency = *value*

Variable [\(Type\)](#) - Description

mixer A [Mixer](#) (object)

value (**double**) - Input Fixed Frequency in Hertz.

Return Type Double

Default Not Applicable

Examples `mixer.InputFixedFrequency = 1e9`

C++ Syntax HRESULT get_InputFixedFrequency(double *pVal)
HRESULT put_InputFixedFrequency(double newVal)

Interface IMixer6

IsInputGreaterThanLO Property

Description Specifies whether to use the Input frequency that is greater than the LO or less than the LO. To learn more, see the [mixer setup dialog box help](#).

VB Syntax *mixer.IsInputGreaterThanLO (LO) = bool*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

LO (Integer) - LO stage number
Choose from 1 (default) or 2

bool **(Boolean)** -
True - Use the Input that is Greater than the specified LO.
False - Use the Input that is Less than the specified LO.

Return Type Boolean

Default True

Examples `mixer.IsInputGreaterThanLO(1) = True`

C++ Syntax HRESULT get_IsInputGreaterThanLO(VARIANT_BOOL * val);
HRESULT put_IsInputGreaterThanLO(VARIANT_BOOL val);

Interface IMixer2

InputNumerator Property

Description Sets or returns the numerator value of the Input Fractional Multiplier.

VB Syntax *mixer*.InputNumerator = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(Long)** - Input numerator value.

Return Type Long

Default 1

Examples `Print mixer.InputNumerator` 'prints the value of the
InputNumerator

C++ Syntax HRESULT get_InputNumerator(long *pVal)
HRESULT put_InputNumerator(long newVal)

Interface IMixer

InputPower Property

Description Sets or returns the value of the Input Power.

VB Syntax *mixer*.InputPower = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(double)** - Input power in dBm.

Return Type Double

Default -17dBm

Examples `Print mixer.InputPower` 'prints the value of the InputPower

C++ Syntax HRESULT get_InputPower(double *pVal)
HRESULT put_InputPower(double newVal)

Interface IMixer

InputRangeMode Property

Description Sets or returns the Input sweep mode.

VB Syntax *mixer*.InputRangeMode = *value*

Variable [\(Type\)](#) - Description

mixer A [Mixer](#) (object)

value **(Enum as MixerRangeMode)** - Input sweep mode. Choose from:

0 - mixSwept

1 - mixFixed

Return Type Enum

Default 0 - mixSwept

Examples `mixer.InputRangeMode = mixSwept`

C++ Syntax HRESULT get_InputRangeMode(long *pVal)
HRESULT put_InputRangeMode(long newVal)

Interface IMixer6

InputStartFrequency Property

Description Sets and returns the start frequency value of the mixer Input frequency.

VB Syntax *mixer*.InputStartFrequency = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(double)** - Input start frequency in Hertz.

Return Type Double

Default Start frequency of the PNA

Examples `mixer.InputStartFrequency = Start_Freq`

C++ Syntax HRESULT get_InputStartFrequency(double *pVal)
HRESULT put_InputStartFrequency(double newVal)

Interface IMixer

InputStopFrequency Property

Description Sets and returns the stop frequency value of the mixer Input frequency.

VB Syntax *mixer*.InputStopFrequency = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(double)** - Input stop frequency in Hertz.

Return Type Double

Default Stop frequency of the PNA

Examples `mixer.InputStopFrequency = Stop_Freq`

C++ Syntax HRESULT get_InputStopFrequency(double *pVal)
HRESULT put_InputStopFrequency(double newVal)

Interface IMixer

InternalTestsetPortCount Property

Description Returns the number of PNA test ports. This does not include the ports on an [external test set](#).

VB Syntax `value = cap.InternalTestsetPortCount`

Variable [\(Type\)](#) - Description

value (Long) - Variable to store the returned number of PNA test ports.

cap A [Capabilities](#) (object)

Return Type Long

Default Not Applicable

Examples `value = cap.InternalTestsetPortCount` 'Read

C++ Syntax HRESULT get_InternalTestsetPortCount(long *numPorts);

Interface ICapabilities

Interpolate Correction Property

Description Turns ON and OFF correction interpolation which calculates new error terms when stimulus values change after calibration.

When this property is ON and error correction is being applied, the calibration subsystem attempts to interpolate the error terms whenever the stimulus parameters are changed.

When this property is OFF under the same circumstances, error correction is turned OFF.

VB Syntax `meas.InterpolateCorrection = value`

Variable [\(Type\)](#) - [Description](#)

meas A [Measurement](#) (object)

value **(boolean)** - Choose from:

True - Turns correction interpolation ON

False - Turns correction interpolation OFF

Return Type Boolean

Default True

Examples `meas.InterpolateCorrection = False`

`calInterpolate = InterpolateCorrection 'Read`

C++ Syntax HRESULT get_InterpolateCorrection(boolean *pVal)
HRESULT put_InterpolateCorrection(boolean newVal)

Interface IMeasurement

Interpolated Property

Description Turns marker Interpolation ON and OFF. Marker interpolation enables X-axis resolution beyond the discrete data values. The analyzer will calculate the x and y-axis data values between discrete data points. Use meas.[Interpolate](#) to change interpolation of **all** markers in a measurement. This command will override the measurement setting.

VB Syntax `mark.Interpolated = value`

Variable [\(Type\)](#) - Description

mark A Marker **(object)**

value **(boolean)**
False - Turns interpolation OFF
True - Turns interpolation ON

**Return
Type** Boolean

Default True

Examples `mark.Interpolated = True 'Write`

`interpolate = mark.Interpolated 'Read`

C++ Syntax HRESULT get_Interpolated(VARIANT_BOOL *pVal)
HRESULT put_Interpolated(VARIANT_BOOL newVal)

Interface IMarker

InterpolateNormalization Property **Superseded**

Description **Note:** This property is replaced by [DoReceiverPowerCal Method](#).

Turns ON and OFF normalization interpolation which calculates new divisor data when stimulus values change after normalization.

When this property is ON and normalization is being applied, the Normalization algorithm attempts to interpolate the divisor data whenever the stimulus parameters are changed.

When this property is OFF under the same circumstances, normalization is turned OFF.

Normalization is currently supported only on measurements of unratiod power for the purpose of performing a receiver power calibration.

VB Syntax *meas.InterpolateNormalization* = *value*

Variable [\(Type\)](#) - Description

meas **(object)** - A Measurement object

value **(boolean)**
 False – Turns normalization interpolation OFF
 True – Turns normalization interpolation ON

Return Type Boolean

Default False -OFF

Examples `meas.InterpolateNormalization = False 'Write`

`normalized = meas.InterpolateNormalization 'Read`

C++ Syntax HRESULT put_InterpolateNormalization(VARIANT_BOOL bState);
 HRESULT get_InterpolateNormalization(VARIANT_BOOL *bState);

Interface IMeasurement

Interrupt Property

Description Reads the boolean that represents the state of the Interrupt In line (pin 13) on the external test set connector.

VB Syntax `value = ExtIO.Interrupt`

Variable [\(Type\)](#) - Description

value **(boolean)** - Variable to store the returned data

ExtIO **(object)** - An ExternalTestSetIO object

Return Type Boolean
False - indicates the line is being held at a TTL High
True - indicates the line is being held at a TTL Low

Default Not Applicable

Examples `value = ExtIO.Interrupt`

C++ Syntax HRESULT get_Interrupt(VARIANT_BOOL* bValue);

Interface IHWExternalTestSetIO

IsContinuous Property

Description Returns whether or not a channel is in continuous mode. To set the channel to continuous mode, use [Continuous Method](#).

VB Syntax *value* = *chan*.**IsContinuous**

Variable [\(Type\)](#) - **Description**

value **(boolean)** - Choose either:

False - Channel trigger is NOT set to continuous.

True - Channel trigger IS set to continuous.

chan Channel **(object)**

Return Type Boolean

Default Not Applicable

Examples `trig = chan.IsContinuous 'Read`

C++ Syntax HRESULT get_IsContinuous (VARIANT_BOOL *bContinuous);

Interface IChannel3

IsECALModuleFoundEx Property

Description	<p>This property replaces IsECALModuleFound Property.</p> <p>Returns true or false depending on whether communication was established between the PNA and the specified ECal module.</p>
VB Syntax	<i>modFound</i> = <i>cal</i> .IsECALModuleFoundEx (<i>module</i>)
Variable	(Type) - Description
<i>modFound</i>	<p>(boolean) - Variable to store the returned test result.</p> <p>True - The PNA identified the presence of the specified ECal module.</p> <p>False - The PNA did NOT identify the presence of the specified ECal module.</p>
<i>cal</i>	(object) - A Calibrator object
<i>module</i>	<p>(long integer) ECal module.</p> <p>Choose from modules 1 through 8</p> <p>Use GetECALModuleInfoEx to return the model and serial number of each module.</p>
Return Type	Boolean
Default	Not applicable
Examples	<pre>Set cal = pna.ActiveChannel.Calibrator moduleFound = cal.IsECALModuleFoundEx(1)</pre>
C++ Syntax	<pre>HRESULT get_IsECALModuleFoundEx(long moduleNumber, VARIANT_BOOL *bModuleFound);</pre>
Interface	ICalibrator4

IsFrequencyOffsetPresent Property

Description Returns a value indicating the presence of Frequency Offset Option 080 in the remote PNA.

VB Syntax `value = cap.IsFrequencyOffsetPresent`

Variable [\(Type\)](#) - Description

value (Boolean) - Variable to store the returned value
True - Frequency Offset Option 080 is present
False - Frequency Offset Option 080 is not present

cap A [Capabilities](#) (object)

Return Type Boolean

Default Not Applicable

Examples `value = cap.isFrequencyOffsetPresent(1)` 'Read

C++ Syntax HRESULT get_IsFrequencyOffsetPresent(VARIANT_BOOL * present);

Interface ICapabilities

IsHold Property

Description Returns whether or not a channel is in hold mode. To set the channel to hold mode, use [Hold Method](#).

VB Syntax *value* = *chan*.**IsHold**

Variable [\(Type\)](#) - **Description**

value **(boolean)** - Choose either:
False - Channel trigger is NOT set to hold.
True - Channel trigger IS set to hold.

chan Channel **(object)**

Return Type Boolean

Default Not Applicable

Examples `trig = chan.IsHold 'Read`

C++ Syntax HRESULT get_IsHold (VARIANT_BOOL *bHold);

Interface IChannel3

IsMarkerOn Property

Description Returns whether or not a marker was used for the specified tuning sweep.

VB Syntax *value* = *embedLODiag*.IsMarkerOn (*n*)

Variable [\(Type\)](#) - Description

value **(Boolean)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) (object)

n Tuning sweep number. Use [NumberOfSweeps](#) to find the number of sweeps taken.

Return Type **(String)**

Default Not Applicable

Examples `data= embedLO.IsMarkerOn 3 'read`

C++ Syntax HRESULT IsMarkerOn(long sweep, VARIANT_BOOL* markerOn);

Interface IEmbeddedLODiagnostic

Last Modified:

13-Apr-2007 MX New topic

IsolationIncrementAveraging Property

Description Value by which to increment (increase) the channel's averaging factor during measurement of isolation in an ECal calibration.

Note: If <value> is greater than 1 and the channel currently has averaging turned OFF, averaging will be turned ON only during the isolation measurements and with the averaging factor equal to <value>.

VB Syntax `cal.IsolationIncrementAveraging = value`

Variable [\(Type\)](#) - Description

cal A [Calibrator](#) (object)

value **(Long)** Incremental Averaging factor. The maximum averaging factor is 65536 (2¹⁶).

Return Type Long Integer

Default 8

Examples `oCal.IsolationAveragingIncrement = 16 'Write`

`avgIncr = oCal.IsolationAveragingIncrement ' Read`

C++ Syntax `HRESULT get_IsolationAveragingIncrement(long *pVal);`
`HRESULT put_IsolationAveragingIncrement(long newVal);`

Interface ICalibrator7

Last Modified:

16-Apr-2007 MX New topic

IsOn Property

Description Sets and returns the ON |OFF state of Embedded LO.

VB Syntax *embedLO.IsOn = value*

Variable [\(Type\)](#) - Description

embedLO An [EmbeddedLO](#) (object)

value **(Boolean)**

False - Turns Embedded LO OFF

True - Turns Embedded LO ON

Return Type **(Boolean)**

Default False (OFF)

Examples `embedLO.IsOn = True 'write`

`data= embedLO.IsOn 'read`

C++ Syntax HRESULT get_IsOn(VARIANT_BOOL* IsOn);
HRESULT put_IsOn(VARIANT_BOOL IsOn);

Interface IEmbeddedLO

Last Modified:

13-Apr-2007 MX New topic

IsReceiverStepAttenuatorPresent Property

Description Returns a value indicating the presence of Receiver step attenuators in the remote PNA.

VB Syntax `value = cap.IsReceiverStepAttenuatorPresent (n)`

Variable [\(Type\)](#) - Description

value **(Boolean)** - Variable to store the returned value.
True - Receiver step attenuators are present.
False - Receiver step attenuators are not present.

cap A [Capabilities](#) (object)

n **(Long)** - port number to query for step attenuators

Return Type Boolean

Default Not Applicable

Examples `value = cap.IsReceiverStepAttenuatorPresent(1) 'Read`

C++ Syntax HRESULT get_IsReceiverStepAttenuatorPresent(long portNumber, VARIANT_BOOL * present);

Interface ICapabilities

IsReferenceBypassSwitchPresent Property

Description Returns a value indicating the presence of a Reference Bypass Switch in the remote PNA.

VB Syntax `value = cap.IsReferenceBypassSwitchPresent (n)`

Variable [\(Type\)](#) - Description

value (Boolean) - Variable to store the returned value.

True - Reference Bypass Switch is present.

False - Reference Bypass Switch is not present.

cap A [Capabilities](#) (object)

n **(Long)** - port number to query for reference bypass switch

Return Type Boolean

Default Not Applicable

Examples `value = cap.IsReferenceBypassSwitchPresent (1) 'Read`

C++ Syntax HRESULT get_IsReferenceBypassSwitchPresent(long portNumber, VARIANT_BOOL * present);

Interface ICapabilities

Read-only

IsSParameter Property

Description Returns true if measurement represents an S-Parameter

VB Syntax *value* = *meas*.IsSparameter

Variable [\(Type\)](#) - Description

meas A Measurement (**object**)

value (**Boolean**)

True - measurement is an S-Parameter

False - measurement is NOT an S-Parameter

Return Type Boolean

Default True

Examples `print app.IsSparameter`

C++ Syntax HRESULT IsSparameter([out, retval] VARIANT_BOOL * bVal);

Interface IMeasurement2

IterationsTolerance Property

Description This command, along with [MaximumIterationsPerPoint Property](#) deal with ADJUSTMENTS made to the source power.

Sets the maximum desired deviation from the sum of the [test port power](#) and the [offset](#) value. Power readings will continue to be made, and source power adjusted, until a reading is within this tolerance value or the [max number of readings](#) has been met. The last value to be read is the valid reading for that data point.

The following two commands allow for settling of power READINGS.

[ReadingsPerPoint Property](#)

[ReadingsTolerance Property](#)

VB Syntax *pwrCal.IterationsTolerance* = *value*

Variable [\(Type\)](#) - Description

pwrCal **(object)** - A [SourcePowerCalibrator](#) (object)

value **(Double)** – Tolerance value in dBm. Choose any number between 0 and 5

Return Type Double

Default .05 dB

Examples

```
Set powerCalibrator = pna.SourcePowerCalibrator
powerCalibrator.IterationsTolerance = .1 'Write
ReadTol = powerCalibrator.IterationsTolerance 'Read
```

C++ Syntax HRESULT get_IterationsTolerance(double *pVal);
 HRESULT put_IterationsTolerance(double newVal);

Interface ISourcePowerCalibrator3

Last Modified:

17-Apr-2007 Clarified verbage

KaiserBeta Property

Description Sets or returns the Kaiser Beta of Time Domain transform windows

VB Syntax *trans*.**KaiserBeta** = *value*

Variable [\(Type\)](#) - Description

trans A Transform (**object**)

value (**single**) - Kaiser Beta. Choose any number between **0** and **13**.

Return Type Single

Default 0

Examples `trans.KaiserBeta = 6 'sets the Kaiser Beta of a transform window
-Write`

`KB = trans.KaiserBeta 'Read`

C++ Syntax HRESULT get_KaiserBeta(float *pVal)
HRESULT put_KaiserBeta(float newVal)

Interface ITransform

L0 Property

Description Sets and Returns the L0 (L-zero) value (the first inductance value) for the calibration standard.
To set the other inductance values, use [L1](#), [L2](#), [L3](#).
For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

VB Syntax *calstd.L0 = value*

Variable [\(Type\)](#) - **Description**

calstd A CalStandard **(object)**. Use calKit.[GetCalStandard](#) to get a handle to the standard.

value **(single)** - Value for L0 in femtohenries(1E-15)

Return Type Single

Default Not Applicable

Examples `calstd.L0 = 15 'Write the value of L0 = 15 femtohenries`

`Induct0 = calstd.L0 'Read the value of L0`

C++ Syntax HRESULT get_L0(float *pVal)
HRESULT put_L0(float newVal)

Interface ICalStandard

L1 Property

Description Sets and Returns the L1 value (the second inductance value) for the calibration standard.
To set the other inductance values, use [L0](#), [L2](#), [L3](#).

For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

VB Syntax *calstd.L1 = value*

Variable [\(Type\)](#) - **Description**

calstd A CalStandard **(object)**. Use calKit.[GetCalStandard](#) to get a handle to the standard.

value **(single)** - Value for L1.

Return Type Single

Default Not Applicable

Examples `calstd.L1 = 15 'Write the value of L1`

`Induct1 = calstd.L1 'Read the value of L1`

C++ Syntax HRESULT get_L1(float *pVal)
HRESULT put_L1(float newVal)

Interface ICalStandard

L2 Property

Description Sets and Returns the L2 value (the third inductance value) for the calibration standard.
To set the other inductance values, use [L0](#), [L1](#), [L3](#).
For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

VB Syntax *calstd.L2 = value*

Variable [\(Type\)](#) - **Description**

calstd A CalStandard **(object)**. Use calKit.[GetCalStandard](#) to get a handle to the standard.

value **(single)** - Value for L2.

Return Type Single

Default Not Applicable

Examples `calstd.L2 = 15 'Write the value of L2.`

`Induct2 = calstd.L2 'Read the value of L2`

C++ Syntax HRESULT get_L2(float *pVal)
HRESULT put_L2(float newVal)

Interface ICalStandard

L3 Property

Description Sets and Returns the L3 value (the third inductance value) for the calibration standard.
To set the other inductance values, use [L0](#), [L1](#), [L2](#).
For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

VB Syntax `calstd.L3 = value`

Variable [\(Type\)](#) - **Description**

calstd A CalStandard **(object)**. Use calKit.[GetCalStandard](#) to get a handle to the standard.

value **(single)** - Value for L3.

Return Type Single

Default Not Applicable

Examples `calstd.L3 = 15 'Write the value of L3.`

`Induct3 = calstd.L3 'Read the value of L3`

C++ Syntax HRESULT get_L3(float *pVal)
HRESULT put_L3(float newVal)

Interface ICalStandard

Label Property

Description Sets and Returns the label for the calibration standard. The label is used to prompt the user to connect the specified standard.

VB Syntax *calstd.Label* = *value*

Variable [\(Type\)](#) - **Description**

calstd A CalStandard (**object**). Use calKit.[GetCalStandard](#) to get a handle to the standard.

value (**string**) - between 1 and 12 characters long. Cannot begin with a numeric.

**Return
Type** String

Default Not Applicable

Examples `calstd.Label = "Short" 'Write`

`stdLabel = calstd.Label 'Read`

[C++ Syntax](#) HRESULT get_Label(BSTR *pVal)
HRESULT put_Label(BSTR newVal)

Interface ICalStandard

Label Property

Description Sets or gets the display label for a given channel/testset combination. The label appears in a status bar at the bottom of the PNA display when the [ShowProperties](#) property is set to TRUE.

VB Syntax `tset.Label(chNum) = value`

Variable [\(Type\)](#) - Description

tset A [TestsetControl](#) object.

Obtained from the [ExternalTestsets](#) collection.

chNum **(Integer)** Channel number of the measurement.

value **(String)** The text of the label.

Return Type String

Default None

Examples 'The following sets the label for channel 5 corresponding to a given testset object.'

```
testset1.label(5) = 'High-power output'
```

[See External Testset Program](#)

C++ Syntax HRESULT get_Label(long channelNum, BSTR *pLabel);
HRESULT put_Label(long channelNum, BSTR label);

Interface ITestsetControl

LastModified Property

Description	Returns the time stamp of the last modification to this Cal Set. This property always returns a time stamp based on the Greenwich Mean Time (GMT) regardless of the local time zone setting of the PNA. The Cal Set properties that are viewed on the PNA user interface are converted to the local time of the PNA.
VB Syntax	<i>value</i> = <i>Object</i> . LastModified
Variable	(Type) - Description
<i>object</i>	Channel (object) or CalSet (object) - Read-only property
<i>value</i>	(Variant) – Variable to store the time stamp.
Return Type	Variant
Default	Not Applicable
Examples	<code>date = CalSet.LastModified 'Read</code>
C++ Syntax	HRESULT get_LastModified(VARIANT* datetime)
Interface	ICalSet3

Last Modified:

25-Apr-2007 Added GMT note

LimitTestFailed Property

Description Returns the results of limit testing for the measurement.

VB Syntax *testFailed* = *meas*.**LimitTestFailed**

Variable [\(Type\)](#) - **Description**

testFailed **(boolean)** Variable to store the returned value

False - Limit Test Passed

True - Limit Test Failed

meas A Measurement **(object)**

Return Type Boolean

Default False returned if there is no testing in progress.

Examples

```
Dim testRes As Boolean
testRes = meas.LimitTestFailed
MsgBox (testRes)
```

C++ Syntax HRESULT get_LimitTestFailed(VARIANT_BOOL*
truelIfFailed)

Interface IMeasurement

EndStimulus Property

Description When constructing a limit line, specifies the stimulus value for the end of the segment.

VB Syntax *limtseg*.**EndStimulus** = *value*

Variable [\(Type\)](#) - **Description**

limtseg A LimitSegment (**object**)

value (**double**) - End Stimulus X-axis value. No units

Return Type Double

Default 0

Examples

```
Set limtseg = meas.LimitTest(1)
limtseg.EndStimulus = 8e9 'Write

EndStim = limtseg.EndStimulus 'Read
```

C++ Syntax HRESULT get_EndStimulus(double *pVal)
HRESULT put_EndStimulus(double newVal)

Interface ILimitSegment

EndResponse Property

Description When constructing a limit line, specifies the amplitude value at the end of the limit segment.

VB Syntax *limtseg*.**EndResponse** = *value*

Variable [\(Type\)](#) - **Description**

limts A LimitSegment (**object**)

value (**double**) - Y-axis value of the End Response limit. No units

Return Type Double

Default 0

Examples

```
Set limtseg = meas.LimitTest(1)
limtseg.EndResponse = 10 'Write

EndResp = limtseg.EndResponse 'Read
```

C++ Syntax HRESULT get_EndResponse(double *pVal)
HRESULT put_EndResponse(double newVal)

Interface ILimitSegment

Type (limit) Property

Description Specifies the Limit Line type.

VB Syntax *limt(index).Type* = value

Variable [\(Type\)](#) - Description

limt A LimitSegment (**object**)

index (**variant**) - Limit line number in the LimitTest collection

value (**enum NALimitSegmentType**) - Limit Line type. Choose from:
0 - naLimitSegmentType_OFF - turns limit line OFF
1 - naLimitSegmentType_Maximum - limit line fails with a data point ABOVE the line
2 - naLimitSegmentType_Minimum - limit line fails with a data point BELOW the line

Return Type Long Integer

Default 0 - OFF

Examples

```
Set limts = meas.LimitTest
limts.Type = naLimitSegmentType_Maximum 'Write

limitType = limts.Type 'Read
```

C++ Syntax HRESULT put_Type(tagNALimitSegmentType *pVal)
 HRESULT get_Type(tagNALimitSegmentType newVal)

Interface ILimitSegment

LineDisplay Property

Description Turns the display of limit lines ON or OFF. To turn limit TESTING On and OFF, use [State Property](#).

Note: Trace data must be ON to view limit lines

VB Syntax *limitst.LineDisplay = state*

Variable [\(Type\)](#) - Description

limitst A LimitTest **(object)**

state **(boolean)**
False - Turns the display of limit lines OFF
True - Turns the display of limit lines ON

Return Type Long Integer

Default **True**

Examples `Limttest.LineDisplay = true 'Write`

`lineDsp = Limttest.LineDisplay 'Read`

C++ Syntax HRESULT get_LineDisplay(VARIANT_BOOL *pVal)
HRESULT put_LineDisplay(VARIANT_BOOL newVal)

Interface ILimitTest

LoadCharFromFile Property

Description Sets and returns whether a Mixer characterization file is to be loaded. Specify and load the filename with [CharFileName Property](#)

VB Syntax `VMC.LoadCharFromFile = bool`

Variable [\(Type\)](#) - Description

VMC [VMCType](#) (object)

bool (Boolean)

True - Load from file

False - Perform mixer characterization

Return Type Boolean

Default False

Examples `value = VMC.LoadCharFromFile`

C++ Syntax HRESULT put_LoadCharFromFile(VARIANT_BOOL bLoadCharFromFile);
HRESULT get_LoadCharFromFile(VARIANT_BOOL *bLoadCharFromFile);

Interface VMCType

LoadPort Property

Description Returns the load port number associated with an S-parameter reflection measurement. If the measurement is not a reflection S-parameter, the number returned by this property will have no meaning.

VB Syntax *loadPort* = *meas*.**LoadPort**

Variable [\(Type\)](#) - Description

loadPort **(long integer)** - The reflection measurement's load port number.

meas A Measurement **(object)**

Return Type Long Integer

Default Not Applicable

Examples

```
Set meas = pna.ActiveMeasurement  
loadPort = meas.LoadPort
```

C++ Syntax HRESULT get_LoadPort(long *pPortNumber);

Interface IMeasurement

Write/Read

LocalLockoutState Property

Description Prevents use of the mouse, keyboard, and front panel while your program is running. Use of these controls while this property is set TRUE causes an error message on the PNA display. To prevent these messages, see [About Error Messages](#).

VB Syntax `app.LocalLockoutState = bool`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

bool **(boolean)** -Choose either:

False - User Interface is NOT locked out.

True - User Interface IS locked out.

Return Type Boolean

Default False

Examples `app.LocalLockoutState = True 'Write`

`block = app.LocalLockoutState 'Read`

C++ Syntax HRESULT get_LocalLockoutState(VARIANT_BOOL *State);
HRESULT put_LocalLockoutState(VARIANT_BOOL *State);

Interface IApplication4

Locator Property

Description Specifies the location of the power meter / sensor that is used during a source power calibration.

Use [Interface Property](#) to specify the type of interface.

VB Syntax *pwrMtrInterface.Locator = value*

Variable [\(Type\)](#) - Description

pwrMtrInterface **(object)** - A [PowerMeterInterface](#) (object)

value **(string)** Location of the power meter / sensor, depending on the type of [Interface](#).

- For **naGPIB**, address of the power meter. Choose any integer between 0 and 30.
- For **naUSB**, the ID string of the power sensor. Use [USBPowerMeterCatalog Property](#) to see a list of ID strings of connected power sensors.
- For **naLAN**, the hostname or IP address of the power meter.

Return Type String

Default Not applicable

Examples

```
pwrMeterInterface.Locator = "13" 'GPIB address
pwrMeterInterface.Locator = "Agilent
Technologies,U2000A,MY12345678,X.01.16" 'USB ID string
pwrMeterInterface.Locator = "mymeter.agilent.com" 'LAN
```

C++ Syntax HRESULT put_Locator(BSTR pValue);
 HRESULT get_Locator(BSTR* pValue);

Locator IPowerMeterInterface

Last Modified:

24-Jul-2007 MX New topic

LODeltaFound Property

Description Returns the LO frequency delta from the specified tuning sweep.

VB Syntax *value* = *embedLODiag*.**LODeltaFound** (*n*)

Variable [\(Type\)](#) - **Description**

value **(Double)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) (**object**)

n (Long) Tuning sweep number. Use [NumberOfSweeps](#) to find the number of sweeps taken.

Default Not Applicable

Examples `data= embedLO.LODeltaFound 3 'read`

C++ Syntax HRESULT LODeltaFound(long sweep, double* deltaLO);

Interface IEmbeddedLODiagnostic

Last Modified:

13-Apr-2007 MX New topic

LODenominator Property

Description Sets or returns the denominator value of the LO Fractional Multiplier.

VB Syntax *mixer.LODenominator* (*n*) = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(Long)** - LO denominator value

n **(Long)** - LO stage number
Choose from 1 or 2

Return Type Long

Default 1

Examples `Print mixer.LODenominator(1)` 'prints the value of the first LODenominator

C++ Syntax HRESULT get_LODenominator(long *pVal)
HRESULT put_LODenominator(long newVal)

Interface IMixer

LOFixedFrequency Property

Description Sets or returns the LO frequency value

VB Syntax *mixer.LOFixedFrequency* (*n*) = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(double)** - LO Frequency in Hertz.

n **(Long)** - LO stage number
Choose from 1 or 2

Return Type Double

Default 0 Hz

Examples Print mixer.LOFixedFrequency(1) 'prints the value of the first LO fixed frequency

C++ Syntax HRESULT get_LOFixedFrequency(double *pVal)
HRESULT put_LOFixedFrequency(double newVal)

Interface IMixer

LOFrequencyDelta Property

Description Sets and returns LO Frequency Delta. There is usually no need to set this value. Read this value to determine the difference between the LO Frequency that is stated in the Mixer dialog box and the last measured LO Frequency.

VB Syntax *embedLO.LOFrequencyDelta = value*

Variable [\(Type\)](#) - Description

embedLO An [EmbeddedLO](#) (object)

value **(Double)** LO Frequency delta in Hertz.

Return Type **(Double)**

Default Not Applicable

Examples `embedLO.LOFrequencyDelta = 0 'write`

`value = embedLO.LOFrequencyDelta 'read`

C++ Syntax HRESULT get_LOFrequencyDelta(double* val);
HRESULT put_LOFrequencyDelta(double val);

Interface IEmbeddedLO

Last Modified:

13-Apr-2007 MX New topic

LogMagnitudeOffset Property **Superseded**

Description **Note:** This property is replaced by [DoReceiverPowerCal Method](#).

For Receiver Calibration - Sets or returns the value to offset the normalized unratioed power measurement data. The unratioed power measurement is effectively calibrated to the power level specified by the value of LogMagnitudeOffset as soon as the [Normalization property](#) is set to ON after calling the [DataToDivisor](#) method.

To offset the data trace magnitude a specified value, use [MagnitudeOffset Property](#)

VB Syntax *meas.LogMagnitudeOffset = value*

Variable [\(Type\)](#) - Description

meas **(object)** - A [Measurement](#) object

value **(double)** - Offset value in dBm.

Return Type Double

Default 0

Examples `meas.LogMagnitudeOffset = -10 'Write (-10 dBm)`

```
calpower = meas.LogMagnitudeOffset 'Read
meas.DataToDivisor 'Store meas data as measurement divisor
meas.Normalize = 1 'Measurement is now calibrated to -10 dBm
```

C++ Syntax HRESULT put_LogMagnitudeOffset(double newVal);
 HRESULT get_LogMagnitudeOffset(double *pVal);

Interface IMeasurement

LOName Property

Description Sets or returns the name of the PNA internal source or external source to use as the LO in an FCA measurement.

See [Remotely Specifying a Source Port](#).

VB Syntax *mixer.LOName (n) =value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

n **(Long)** - LO stage number
Choose from 1 or 2

value **(string)** - LO Source name. Use [SourcePort Property](#) to return a list of valid source ports. An external source must be configured and selected to be valid. [Learn more about external source configuration](#).

Return Type String

Default "Not controlled"

Examples `mixer.LOName(1) = "MySource"`

C++ Syntax HRESULT get_LOName(string *pVal)
HRESULT put_LOName(string newVal)

Interface MIXer

Last Modified:

23-Jul-2007 Updated for external source config.

LONumerator Property

Description Sets or returns the numerator value of the LO Fractional Multiplier.

VB Syntax *mixer.LONumerator* (*n*) = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(Long)** - LO denominator value

n **(Long)** - LO stage number
Choose from 1 or 2

Return Type Long

Default 1

Examples `Print mixer.LONumerator(1)` 'prints the value of the
first LO Numerator

C++ Syntax HRESULT get_LONumerator(long *pVal)
HRESULT put_LONumerator(long newVal)

Interface IMixer

LOPower Property

Description Sets or returns the value of LO Power.

VB Syntax *mixer.LOPower (n) = value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

n **(Long)** - LO stage number
Choose from 1 or 2

value **(double)** - LO Power in dBm.

Return Type Double

Default -10dBm

Examples `Print mixer.LOPower(1)` 'prints the value of the LO Power

C++ Syntax HRESULT get_LOPower(double *pVal)
HRESULT put_LOPower(double newVal)

Interface IMixer

LORangeMode Property

Description Sets or returns the LO sweep mode.

VB Syntax *mixer.LORangeMode (n) = value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

n **(Long)** - LO stage number.
Choose from 1 or 2

value **(Enum as MixerRangeMode)** - LO sweep mode. Choose from:
0 - **mixSwept**
1 - **mixFixed**

Return Type Enum

Default 0 - mixSwept

Examples `mixer.LORangeMode(1)=mixSwept`

C++ Syntax HRESULT get_LORangeMode(long *pVal)
HRESULT put_LORangeMode(long newVal)

Interface IMixer3

Loss Property

Description Sets and Returns the insertion loss for the calibration standard.

VB Syntax *calstd.loss = value*

Variable [\(Type\)](#) - Description

calstd A CalStandard **(object)**. Use calKit.[GetCalStandard](#) to get a handle to the standard.

value **(single)** - Insertion loss in Gohms / sec. (Giga Ohms per second of electrical delay)

Return Type Single

Default Not Applicable

Examples `calstd.loss = 3.5 'Write 3.5 Gohms of loss`

`stdLoss = calstd.loss 'Read the value of Loss`

C++ Syntax HRESULT get_Loss(float *pVal)
HRESULT put_Loss(float newVal)

Interface ICalStandard

Loss (Source Power Cal) Property

Description Sets or returns the loss value associated with a PowerLossSegment.

VB Syntax *lossSeg.Loss = value*

Variable [\(Type\)](#) - Description

lossSeg **(object)** - PowerLossSegment

value **(double)** – Loss value in dB. This can be any value between 0 and 200.

Return Type Double

Default 0

Examples

```
lossSeg.Loss = 0.5 'Write  
lossVal = lossSeg.Loss 'Read
```

C++ Syntax HRESULT put_Loss(Double newVal);
HRESULT get_Loss(Double *pVal);

Interface IPowerLossSegment

LOStage Property

Description Sets or returns the number of LO stages present in the mixer.

VB Syntax *mixer.LOStage = value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(Long)** - Number of LO stages. Choose from **1** or **2**

Return Type Long

Default 1

Examples `mixer.LOStage = 1 'sets the LO Stage value to 1`

C++ Syntax HRESULT get_LOStage(long *pVal)
HRESULT put_LOStage(long newVal)

Interface IMixer

LOStartFrequency Property

Description Sets or returns the LO start frequency value. This command can only be used with SMC (not VMC) measurements.

VB Syntax *mixer.LOStartFrequency (n) = value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(double)** - LO Start Frequency in Hertz.

n **(Long)** - LO stage number

Choose from 1 or 2

Return Type Double

Default

Examples `Print mixer.LOStartFrequency(1) 'prints the value of the first LO start frequency`

C++ Syntax HRESULT get_LOStartFrequency(long id, double *pVal)
HRESULT put_LOStartFrequency(long id, double newVal)

Interface IMixer3

LOStopFrequency Property

Description Sets or returns the LO stop frequency value. This command can only be used with SMC (not VMC) measurements.

VB Syntax *mixer.LOStopFrequency (n) = value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(double)** - LO Stop Frequency in Hertz.

n **(Long)** - LO stage number

Choose from 1 or 2

Return Type Double

Default

Examples `Print mixer.LOStopFrequency(1)` 'prints the value of the first LO stop frequency

C++ Syntax HRESULT get_LOStopFrequency(long id, double *pVal)
HRESULT put_LOStopFrequency(long id, double newVal)

Interface IMixer3

MagnitudeOffset Property

Description Offsets the data trace magnitude by the specified value.
To offset the data trace magnitude to a slope value that changes with frequency, use [MagnitudeSlopeOffset Property](#).
To implement a Receiver Cal offset, use [LogMagnitudeOffset property](#).

VB Syntax *meas.MagnitudeOffset* = *value*

Variable [\(Type\)](#) - Description

meas **(object)** - A [Measurement](#) object

value **(double)** - Offset value in dB.

**Return
Type** Double

Default 0

Examples `meas.MagnitudeOffset = 4 'Write`

`offs = meas.MagnitudeOffset 'Read`

C++ Syntax HRESULT put_MagnitudeOffset(double newVal);
HRESULT get_MagnitudeOffset(double *pVal);

Interface IMeasurement4

MagnitudeSlopeOffset Property

Description Offsets the data trace magnitude to a value that changes linearly with frequency. The offset slope begins at 0 Hz.

To offset the entire data trace magnitude by a specified value, use [MagnitudeOffset Property](#).

VB Syntax *meas.MagnitudeSlopeOffset = value*

Variable [\(Type\)](#) - Description

meas **(object)** - A [Measurement](#) object

value **(double)** - Offset slope value in dB / 1GHz.

**Return
Type** Double

Default 0

Examples `meas.MagnitudeSlopeOffset = 4 'Writes a slope offset of 4dB/1GHz.`

`offs = meas.MagnitudeSlopeOffset 'Read`

C++ Syntax HRESULT put_MagnitudeSlopeOffset(double newVal);
HRESULT get_MagnitudeSlopeOffset(double *pVal);

Interface IMeasurement4

MarkerAnnotation Property

Description Returns the Y-axis marker value from the specified tuning sweep. Use [IsMarkerOn](#) to confirm if a marker was used for the tuning sweep.

VB Syntax *value* = *embedLODiag*.**MarkerAnnotation** (*n*)

Variable [\(Type\)](#) - **Description**

value **(String)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) (**object**)

n (Long) Tuning sweep number. Use [NumberOfSweeps](#) to find the number of sweeps taken.

Default Not Applicable

Examples `data= embedLO.MarkerAnnotation 3 'read`

C++ Syntax HRESULT MarkerAnnotation(long sweep, BSTR* annotation);

Interface IEmbeddedLODiagnostic

Last Modified:

13-Apr-2007 MX New topic

MarkerFormat Property

Description Sets (or returns) the format of all the markers in the measurement. To override this setting for an individual marker, use [mark.Format](#)

VB Syntax *meas.MarkerFormat* = *value*

Variable [\(Type\)](#) - [Description](#)

meas A Measurement (**object**)

value (**enum NAMarkerFormat**) - Choose from:

- 0 - naMarkerFormat_LinMag
- 1 - naMarkerFormat_LogMag
- 2 - naMarkerFormat_Phase
- 3 - naMarkerFormat_Delay
- 4 - naMarkerFormat_Real
- 5 - naMarkerFormat_Imaginary
- 6 - naMarkerFormat_SWR
- 7 - naMarkerFormat_LinMagPhase
- 8 - naMarkerFormat_LogMagPhase
- 9 - naMarkerFormat_ReallImaginary
- 10 - naMarkerFormat_ComplexImpedance
- 11 - naMarkerFormat_ComplexAdmittance

Return Type Long Integer

Default 1 - naMarkerFormat_LogMag

Examples `meas.MarkerFormat = naMarkerFormat_SWR 'Write`

`fmt = mark.Format 'Read`

C++ Syntax HRESULT put_MarkerFormat(tagNAMarkerFormat NewFormat)

Interface IMeasurement

InterpolateMarkers Method

Description Turns **All** Marker Interpolation ON and OFF for the measurement. Marker interpolation enables X-axis resolution between the discrete data values. The analyzer will calculate the x and y-axis data values between discrete data points. To override this property for individual markers, use the [Interpolated](#) property.

VB Syntax *meas.Interpolate = value*

Variable [\(Type\)](#) - Description

meas A Measurement (**object**)

value (**boolean**)
False - Turns interpolation OFF for all markers in the measurement
True - Turns interpolation ON for all markers in the measurement

Return Type Boolean

Default True (ON)

Examples `meas.Interpolate = 1`

C++ Syntax HRESULT InterpolateMarkers(VARIANT_BOOL bNewVal)

Interface IMeasurement

Number Property

Description Returns the number of the marker.

VB Syntax *marknum* = *mark*.**Number**

Variable [\(Type\)](#) - **Description**

marknum **(long)** - Variable to store marker number

mark A Marker **(object)**

**Return
Type** Long Integer

Default Not applicable

Examples `marknum = mark.Number 'Read`

C++ Syntax HRESULT get_Number(long *pVal)

Interface IMarker

MarkerPosition Property

Description Returns the X-axis marker position from the specified tuning sweep.

VB Syntax *value* = *embedLODiag*.**MarkerPosition** (*n*)

Variable [\(Type\)](#) - **Description**

value **(Double)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) (**object**)

n (Long) Tuning sweep number. Use [NumberOfSweeps](#) to find the number of sweeps taken.

Default Not Applicable

Examples `data= embedLO.MarkerPosition 3 'read`

C++ Syntax HRESULT MarkerPosition(long sweep, double *position);

Interface IEmbeddedLODiagnostic

Last Modified:

13-Apr-2007 MX New topic

MarkerReadout Property

Description Enables or disables the readout of markers in the window. To show the marker on the screen use ShowMarkerReadout Method.

VB Syntax *win.MarkerReadout = state*

Variable [\(Type\)](#) - Description

win A NAWindow (object)

state **(boolean)**

True - enables marker readout

False - disables marker readout

Return Type Boolean

Default True

Examples

```
win.MarkerReadout = True 'Write
```

```
State = app.ActiveNAWindow.MarkerReadout 'Read
```

C++ Syntax HRESULT get_MarkerReadout(VARIANT_BOOL *pVal)
HRESULT put_MarkerReadout(VARIANT_BOOL newVal)

Interface INAWindow

MarkerReadoutSize Property

Description Specifies the size of font used when displaying Marker Readout in the selected window.

VB Syntax *win*.MarkerReadoutSize = *value*

Variable [\(Type\)](#) - Description

win A NAWindow (object)

value **(enum NAFontSize)**

0 - naDefault - marker readout appears in default font size

1 - naLarge - marker readout appears in large font size

Return Type Long Integer

Default naDefault

Examples `win.MarkerReadoutSize = naDefault 'write default size for marker readout`

```
Dim Size As NAFontSize
Size = app.ActiveNAWindow.MarkerReadoutSize 'Read
```

C++ Syntax HRESULT get_MarkerReadoutSize(tagNAFontSize *pVal)
HRESULT put_MarkerReadoutSize(tagNAFontSize newVal)

Interface INAWindow

MarkerState Property

Description Sets or returns the ON / OFF state of the specified marker.

VB Syntax *meas.MarkerState* (*n*) = *state*

Variable [\(Type\)](#) - **Description**

meas A Measurement (**object**)

n (Long Integer) Marker number to turn on or off.

state (boolean) -
True - turns the specified marker ON
False - turns the specified marker OFF

Return Type Boolean

Default False

Examples `meas.MarkerState(1) = True`

`reference = meas.MarkerState(2)`

C++ Syntax HRESULT get_MarkerState(long markerNum, VARIANT_BOOL bState)
HRESULT put_MarkerState(long markerNum, VARIANT_BOOL* bState)

Interface IMeasurement3

Type (Marker) Property

Description Sets and reads the marker type.

VB Syntax *mark.Type = value*

Variable [\(Type\)](#) - Description

chan A Marker **(object)**

value **(enum NAMarkerType)** - Marker Type. Choose from:

0 - naMarkerType_Normal - the X-axis value for a normal marker will always be determined by the measurement data of the marker.

1 - naMarkerType_Fixed - retains and keeps its x-axis value at the time the marker type is set.

**Return
Type** Long Integer

Default naMarkerType_Normal

Examples `mark.Type = naMarkerType_Normal 'Write`

`MrkType = mark.Type 'Read`

C++ Syntax HRESULT get_Type(tagNAMarkerType *pVal)
HRESULT put_Type(tagNAMarkerType newVal)

Interface IMarker

Stimulus Property

Description Sets and reads the X-Axis value of the marker. If the marker is a delta marker, the value will be relative to the reference marker.

VB Syntax *mark*.**Stimulus** = *value*

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

value (**double**) - X-Axis value. Choose any number within the full span of the channel or User Range (if set).

Return Type Double

Default First activated Marker turns ON in the middle of the X-axis range. Subsequent markers turn ON at the position of the most recently active marker.

Examples `mark.Stimulus = 3e9 'Write`

`XVal = mark.Stimulus 'Read`

C++ Syntax HRESULT get_Stimulus(double *pVal)
HRESULT put_Stimulus(double newVal)

Interface IMarker

Value Property

Description Reads the Y-axis value of the marker. If the marker is a delta marker, the value will be relative to the reference marker.

You cannot set the Y-axis value of a marker. The marker remains at the position at the time you set [marker.Type](#).

Note: To accurately read the marker Y-axis value with [trace smoothing](#) applied, the requested format must match the [displayed format](#). Otherwise, the returned value is unsmoothed data. For example, to read the smoothed marker value when measuring group delay, both the display format and the marker format must be set to (Group) Delay.

VB Syntax *YValue = mark.Value (format)*

Variable [\(Type\)](#) - **Description**

YValue A variable to store the Y-axis value

mark A Marker **(object)**

format **(enum NAMarkerFormat)** - The format you would like the marker's Y-axis value. The number in parenthesis following the format is the number of values that are returned in a variant array. Choose from:

- 0 - naMarkerFormat_LinMag (1)
- 1 - naMarkerFormat_LogMag (1)
- 2 - naMarkerFormat_Phase (1)
- 3 - naMarkerFormat_Delay (1)
- 4 - naMarkerFormat_Real (1)
- 5 - naMarkerFormat_Imaginary (1)
- 6 - naMarkerFormat_SWR (1)
- 7 - naMarkerFormat_LinMagPhase (2)
- 8 - naMarkerFormat_LogMagPhase (2)
- 9 - naMarkerFormat_ReallImaginary (2)
- 10 - naMarkerFormat_ComplexImpedance (3)
- 11 - naMarkerFormat_ComplexAdmittance (3)

Return Type Variant - The previous list of formats indicates the number of values that are returned in a variant array

Default Not applicable

Examples `YVal = mark.Value 'Read`

C++ Syntax HRESULT get_Value(tagNAMarkerFormat format, VARIANT *pVal)

Interface IMarker

Last modified:

Dec. 4, 2006 Added smoothing note

MaximumFrequency Property

Description Sets and Returns the maximum frequency for the calibration standard.

VB Syntax *calstd.MaximumFrequency = value*

Variable [\(Type\)](#) - Description

calstd A CalStandard (**object**). Use calKit.[GetCalStandard](#) to get a handle to the standard.

value (**double**) - Maximum frequency in Hertz.

Return Type Double

Default Not Applicable

Examples

```
calstd.MaximumFrequency = 9e9 'Write
```

```
maxFrequency = calstd.MaximumFrequency 'Read
```

C++ Syntax HRESULT get_MaximumFrequency(double *pVal)
HRESULT put_MaximumFrequency(double newVal)

Interface ICalStandard

MaximumFrequency Property

Description Returns the maximum frequency of the remote PNA.

VB Syntax `value = cap.MaximumFrequency`

Variable [\(Type\)](#) - Description

value (Double) - Variable to store the returned maximum frequency of the PNA.

cap A [Capabilities](#) (object)

Return Type Double

Default Not Applicable

Examples `value = cap.MaximumFrequency 'Read`

C++ Syntax `HRESULT get_MaximumFrequency(&frequencyMax);`

Interface ICapabilities

MaximumFrequency (Source Power Cal) Property

Description Maximum usable frequency specified for the power sensor.

VB Syntax *pwrSensor.MaximumFrequency = value*

Variable [\(Type\)](#) - Description

pwrSensor **(object)** - A PowerSensor (object)

value **(double)** -Frequency in Hertz.

Return Type Double

Default 0

Examples

```
Set powerCalibrator = pna.SourcePowerCalibrator
powerCalibrator.PowerSensors(1).MaximumFrequency = 6e9
'Write

MaxFreq = powerCalibrator.PowerSensors(1).MaximumFrequency
'Read
```

C++ Syntax HRESULT put_MaximumFrequency(double newVal);
HRESULT get_MaximumFrequency(double *pVal);

Interface IPowerSensor

MaximumIFFilterSampleCount Property

Description Returns the maximum allowed value for the [IFFilterSampleCount](#) property for the queried PNA.

Note: This setting applies only to the E836X Opt. H11.

VB Syntax *value* = *IfConfig*.MaximumIFFilterSampleCount

Variable [\(Type\)](#) - Description

value **(long)** The maximum allowed value that can be applied to the [IFFilterSampleCount](#) property.

IfConfig [IFConfiguration](#) (object)

Return Type Long Integer

Default PNA Model number dependent

Examples

```
variable =  
App.ActiveChannel.IFConfiguration.MaximumIFFilterSampleCount  
'Read
```

[See an example program](#)

C++ Syntax HRESULT get_MaximumIFFilterSampleCount(long * pMaxSampleCount);

Interface IIFConfiguration2

MaximumIFFrequency Property

Description Returns the Maximum allowed value for the [IFFrequency Property](#)

VB Syntax *value* = *IfConfig*.MaximumIFFrequency

Variable [\(Type\)](#) - Description

value **(double)** Variable to store the returned maximum allowed frequency that can be applied to the [IFFrequency Property](#).

IfConfig [IFConfiguration](#) (object)

Return Type Double

Default Not Applicable

Examples `val = App.ActiveChannel.IFConfiguration.MaximumIFFrequency` 'Read

C++ Syntax HRESULT get_MaximumIFFrequency(double * pMaxFreq);

Interface IIFConfiguration3

Last Modified:

18-Jun-2007 MX New topic

MaximumIterationsPerPoint Property

Description This command, along with [IterationsTolerance Property](#) deal with ADJUSTMENTS made to the source power.

Sets the maximum number of readings to take at each data point for iterating the source power. Power readings will continue to made, and source power adjusted, until a reading is within the [IterationsTolerance](#) value or this max number of readings has been met. The last value to be read is the valid reading for that data point.

The following two commands allow for settling of power READINGS.

[ReadingsPerPoint Property](#)

[ReadingsTolerance Property](#)

VB Syntax *pwrCal.MaximumIterationsPerPoint = value*

Variable [\(Type\)](#) - Description

pwrCal **(object)** - A [SourcePowerCalibrator](#) (object)

value **(Long)** – Maximum number of readings. Choose any number between 1 and 100.

Return Type Long Integer

Default 5

Examples

```
Set powerCalibrator = pna.SourcePowerCalibrator
powerCalibrator.MaximumIterationsPerPoint = 5 'Write
MaxReads = powerCalibrator.MaximumIterationsPerPoint 'Read
```

C++ Syntax HRESULT get_MaximumIterationsPerPoint(long *pVal);
 HRESULT put_MaximumIterationsPerPoint(long newVal);

Interface ISourcePowerCalibrator3

Last Modified:

17-Apr-2007 Clarified verbage

MaximumNumberOfChannels Property

Description Returns the maximum possible number of channels that can be used in the PNA.

VB Syntax *value* = *cap*.**MaximumNumberOfChannels**

Variable [\(Type\)](#) - **Description**

value **(Long)** - Variable to store the returned maximum value for number of channels.

cap A [Capabilities](#) **(object)**

Return Type Long

Default Not Applicable

Examples `value = cap.MaximumNumberOfChannels 'Read`

C++ Syntax HRESULT get_MaximumNumberOfChannels(long *
maximumNumberOfChans);

Interface ICapabilities2

MaximumNumberOfTracesPerWindow Property

Description Returns the maximum possible number of traces that can reside in any window.

VB Syntax *value* = *cap*.MaximumNumberOfTracesPerWindow

Variable [\(Type\)](#) - Description

value **(Long)** - Variable to store the returned maximum value for number of traces.

cap A [Capabilities](#) (object)

Return Type Long

Default Not Applicable

Examples `value = cap.MaximumNumberOfTracesPerWindow 'Read`

C++ Syntax HRESULT get_MaximumNumberOfTracesPerWindow(long *
maximumNumberOfTraces);

Interface ICapabilities2

MaximumNumberOfWindows Property

Description Returns the maximum possible number of windows that can be present on the PNA screen.

VB Syntax *value* = *cap*.MaximumNumberOfWindows

Variable [\(Type\)](#) - **Description**

value **(Long)** - Variable to store the returned maximum value for number of windows.

cap A [Capabilities](#) **(object)**

Return Type Long

Default Not Applicable

Examples `value = cap.MaximumNumberOfWindows 'Read`

C++ Syntax HRESULT get_MaximumNumberOfWindows(long * maximumNumberOfWindows);

Interface ICapabilities2

MaximumNumberOfPoints Property

Description Returns the maximum possible number of data points.

VB Syntax *value* = *cap*.MaximumNumberOfPoints

Variable [\(Type\)](#) - Description

value **(Long)** - Variable to store the returned maximum value for number of points.

cap A [Capabilities](#) (object)

Return Type Long

Default Not Applicable

Examples `value = cap.MaximumNumberOfPoints 'Read`

C++ Syntax HRESULT get_MaximumNumberOfPoints(long *
maximumNumberOfPoints);

Interface ICapabilities

MaximumReceiverStepAttenuator Property

Description Returns the maximum amount of receiver attenuation.

VB Syntax *value* = *cap*.MaximumReceiverStepAttenuator (*n*)

Variable [\(Type\)](#) - Description

value **(Double)** - Variable to store the returned value of maximum receiver attenuation.

cap A [Capabilities](#) **(object)**

n **(Long)** - port number to query for step attenuators

Return Type Double

Default Not Applicable

Examples `value = cap.MaximumReceiverStepAttenuator 'Read`

C++ Syntax HRESULT get_MaximumReceiverStepAttenuator(long portNumber, double * attenuation);

Interface ICapabilities

MaximumSourceALCPower Property

Description Returns a value indicating the maximum amount of source ALC power.

VB Syntax *value* = *cap*.MaximumSourceALCPower (*n*)

Variable [\(Type\)](#) - Description

value **(Double)** - Variable to store the returned value for the maximum amount of source ALC power.

cap A [Capabilities](#) **(object)**

n **(Long)** - source number to query for maximum ALC power

Return Type Double

Default Not Applicable

Examples `value = cap.MaximumSourceALCPower 'Read`

C++ Syntax HRESULT get_MaximumSourceALCPower(long sourceNum, double * power);

Interface ICapabilities

MaximumSourceStepAttenuator Property

Description	Returns a value for the maximum amount of source attenuation.
VB Syntax	<i>value</i> = <i>cap</i> .MaximumSourceStepAttenuator (<i>n</i>)
Variable	(Type) - Description
<i>value</i>	(Double) - Variable to store the returned value for the maximum amount of source attenuation.
<i>cap</i>	A Capabilities (object)
<i>n</i>	(Long) - port number to query for the maximum amount of source attenuation
Return Type	Double
Default	Not Applicable
Examples	<pre>value = cap.MaximumSourceStepAttenuator 2 'Read</pre>
C++ Syntax	HRESULT get_MaximumSourceStepAttenuator(long portNumber, double * attenuation);
Interface	ICapabilities

Last Modified:

19-Sep-2007 Added port arg to ex.

MaxPreciseTuningIterations Property

Description Sets and returns the maximum number of tuning iterations to achieve the precise tolerance.

VB Syntax `embedLO.MaxPreciseTuningIterations = value`

Variable [\(Type\)](#) - [Description](#)

`embedLO` An [EmbeddedLO](#) (object)

`value` **(Long)** Maximum number of tuning iterations. Choose a number between

Return Type **(Long)**

Default 5

Examples `embedLO.MaxPreciseTuningIterations = 3 'write`

`value = embedLO.MaxPreciseTuningIterations 'read`

C++ Syntax HRESULT get_MaxPreciseTuningIterations long* iter);
HRESULT put_MaxPreciseTuningIterations long iter);

Interface IEmbeddedLO

Last Modified:

13-Apr-2007 MX New topic

Mean Property

Description Returns the mean value of the measurement . To retrieve all 3 statistics value at the same time, use [meas.GetTraceStatistics](#)

VB Syntax *average* = *meas*.**Mean**

Variable [\(Type\)](#) - **Description**

average **(single)** - Variable to store mean value

meas A Measurement **(object)**

Return Type Single

Default Not applicable

Examples

```
Dim average as Single
average = meas.Mean 'Read
```

C++ Syntax HRESULT get_Mean(float* mean)

Interface IMeasurement

Medium Property

Description Sets and Returns the media type of the calibration standard.

VB Syntax *calstd.Medium = value*

Variable [\(Type\)](#) - Description

calstd A CalStandard (**object**). Use calKit.[GetCalStandard](#) to get a handle to the standard.

value (**enum** NACalStandardMedium) - Medium of the transmission line of the standard. Choose from:
0 - naCoax - Coaxial Cable
1 - naWaveGuide

Return Type Long Integer

Default Not Applicable

Examples `calstd.Medium = naCoax 'Write`

`stdMedium = calstd.Medium 'Read`

C++ Syntax HRESULT get_Medium(tagNACalStandardMedium *pVal)
HRESULT put_Medium(tagNACalStandardMedium newVal)

Interface ICalStandard

MinimumFrequency Property

Description Sets and Returns the minimum frequency for the calibration standard.

VB Syntax *calstd.MinimumFrequency = value*

Variable [\(Type\)](#) - Description

calstd A CalStandard **(object)**. Use calKit.[GetCalStandard](#) to get a handle to the standard.

value **(double)** -Minimum frequency in Hertz.

Return Type Double

Default Not Applicable

Examples

```
calstd.MinimumFrequency = 300e3 'Write
```

```
minFrequency = calstd.MinimumFrequency 'Read
```

C++ Syntax HRESULT get_MinimumFrequency(double *pVal)
HRESULT put_MinimumFrequency(double newVal)

Interface ICalStandard

MinimumFrequency Property

Description Returns the minimum frequency of the remote PNA.

VB Syntax `value = cap.MinimumFrequency`

Variable [\(Type\)](#) - **Description**

value (Double) - Variable to store the returned minimum frequency of the PNA.

cap A [Capabilities](#) (object)

Return Type Double

Default Not Applicable

Examples `value = cap.MinimumFrequency 'Read`

C++ Syntax HRESULT get_MinimumFrequency(double *pVal)

Interface ICapabilities

MinimumFrequency (Source Power Cal) Property

Description Minimum usable frequency specified for the power sensor.

VB Syntax *pwrSensor*.**MinimumFrequency** = *value*

Variable [\(Type\)](#) - [Description](#)

pwrSensor **(object)** - A PowerSensor (object)

value **(double)** -Frequency in Hertz.

Return Type Double

Default 0

Examples

```
Set powerCalibrator = pna.SourcePowerCalibrator
powerCalibrator.PowerSensors(1).MinimumFrequency = 300e3
'Write

MinFreq = powerCalibrator.PowerSensors(1).MinimumFrequency
'Read
```

C++ Syntax HRESULT put_MinimumFrequency(double newVal);
HRESULT get_MinimumFrequency(double *pVal);

Interface IPowerSensor

MinimumIFFilterSampleCount Property

Description Returns the Minimum allowed value for the [IFFilterSampleCount](#) property for the queried PNA.

Note: This setting applies only to the E836X Opt. H11.

VB Syntax *value* = *IfConfig*.MinimumIFFilterSampleCount

Variable [\(Type\)](#) - Description

value **(long)** The minimum allowed value that can be applied to the [IFFilterSampleCount](#) property.

IfConfig [IFConfiguration](#) (object)

Return Type Long Integer

Default PNA Model number dependent

Examples

```
variable =  
App.ActiveChannel.IFConfiguration.MinimumIFFilterSampleCount  
'Read
```

[See an example program](#)

C++ Syntax HRESULT get_MinimumIFFilterSampleCount(long * pMinSampleCount);

Interface IIFConfiguration2

MinimumIFFrequency Property

Description Returns the minimum allowed value for the [IFFrequency Property](#)

VB Syntax *value* = *IfConfig*.**MinimumIFFrequency**

Variable [\(Type\)](#) - **Description**

value **(double)** Variable to store the returned minimum allowed frequency that can be applied to the [IFFrequency Property](#).

IfConfig [IFConfiguration](#) (object)

Return Type Double

Default Not Applicable

Examples `val = App.ActiveChannel.IFConfiguration.MinimumIFFrequency` 'Read

C++ Syntax HRESULT get_MinimumIFFrequency(double * pMinFreq);

Interface IIFConfiguration3

Last Modified:

18-Jun-2007 MX New topic

MinimumNumberOfPoints Property

Description Returns the minimum possible number of data points for a data trace.

VB Syntax *value* = *cap*.MinimumNumberOfPoints

Variable [\(Type\)](#) - Description

value (Long) - Variable to store the returned minimum value for number of points.

cap A [Capabilities](#) (object)

Return Type Long

Default Not Applicable

Examples `value = cap.MinimumNumberOfPoints 'Read`

C++ Syntax HRESULT get_MinimumNumberOfPoints(double *
minimumNumberOfPoints);

Interface ICapabilities

MinimumReceiverStepAttenuator Property

Description Returns a value indicating the minimum amount of receiver attenuation.

VB Syntax *value* = *cap*.MinimumReceiverStepAttenuator (*n*)

Variable [\(Type\)](#) - Description

value **(Double)** - Variable to store the returned minimum value of receiver attenuation.

cap A [Capabilities](#) **(object)**

n **(Long)** - port number to query for minimum value of receiver attenuation

Return Type Double

Default Not Applicable

Examples `value = cap.MinimumReceiverStepAttenuator 'Read`

C++ Syntax HRESULT get_MinimumReceiverStepAttenuator(long portNumber, double * attenuation);

Interface ICapabilities

MinimumSourceALCPower Property

Description Returns a value indicating the minimum amount of source ALC power.

VB Syntax *value* = *cap*.MinimumSourceALCPower (*n*)

Variable [\(Type\)](#) - Description

value **(Double)** - Variable to store the returned minimum value of source ALC power.

cap A [Capabilities](#) **(object)**

n **(Long)** - source number to query for the minimum value of source ALC power

Return Type Double

Default Not Applicable

Examples `value = cap.MinimumSourceALCPower 'Read`

C++ Syntax HRESULT get_MinimumSourceALCPower(long sourceNum, double * power);

Interface ICapabilities

Mode Property

Description Sets the type of transform.

VB Syntax *trans.Mode* = *value*

Variable [\(Type\)](#) - [Description](#)

trans A Transform **(object)**

value **(enum NATransformMode)** - Choose from:

0 - naTransformBandpassImpulse

1 - naTransformLowpassImpulse

2 - naTransformLowpassStep

Return Type NATransformMode

Default **0** - naTransformBandpassImpulse

Examples `trans.Mode = naTransformLowpassStep 'Write`

`transmode = trans.Mode 'Read`

C++ Syntax HRESULT get_Mode(tagNATransformMode *pVal)
HRESULT put_Mode(tagNATransformMode newVal)

Interface ITransform

Multiplier Property

Description Sets and returns the multiplier value to be used when coupling this range to the primary range. Learn more about multiplier value.

This setting is valid only if this range is [coupled](#) to the primary range.

VB Syntax *FOMRange.Multiplier = value*

Variable [\(Type\)](#) - Description

object An [FOMRange](#) (object)

value **(Double)** - Multiplier value.-(Unitless)

Return Type Double

Default 1

Examples `fomRange.Multiplier = 2 'Write`

`Mult = fomRange.Multiplier 'Read`

C++ Syntax HRESULT get_Multiplier(double *pVal)
HRESULT put_Multiplier(double pVal)

Interface IFOMRange

Name Property

Description Sets or returns the Name of the Cal Set.

VB Syntax *CalSet.Name* = *value*

Variable [\(Type\)](#) - Description

CalSet **(object)** - A [Cal Set](#) object

value **(string)** - Name of the Cal Set.

Return Type String

Default Not Applicable

Examples

```
Dim pna
set
pna=CreateObject("AgilentPNA835x.Application")

Dim calsets
set calsets=pna.getcalmanager.calsets

Dim c
for each c in calsets
wscript.echo c.name
'Changes the name of CalSet_1
if c.name="CalSet_1" then c.name="New"
next
```

C++ Syntax HRESULT get_Name(BSTR *name)
HRESULT put_Name(BSTR name);

Interface ICalSet4

Name (CalKit) Property

Description Sets and Returns a name for the selected calibration kit.

VB Syntax *calKit.Name* = *value*

Variable [\(Type\)](#) - **Description**

calKit A CalKit **(object)**.

value **(string)** -Calibration Kit name. Any string name, can include numerics, period, and spaces; any length (although the dialog box display is limited to about 30 characters).

**Return
Type** String

Default Not Applicable

Examples `calKit.Name = "MyCalKit" 'Write`

`KitName = calKit.Name 'Read`

C++ Syntax HRESULT get_Name(BSTR *pVal)
HRESULT put_Name(BSTR newVal)

Interface ICalKit

Name (PathConfig) Property

Description Returns the name of the current configuration only if NO individual element settings had been changed since selecting or storing a configuration. When element settings change, the path configuration name is cleared.

VB Syntax *name* = *pathConfig*.Name

Variable [\(Type\)](#) - Description

name **(String)** Variable to store the returned configuration name.

pathConfig A [PathConfiguration](#) **(object)**

Return Type String

Default 'default' - name of the default factory configuration

Examples `name=pathConf.Name`

C++ Syntax HRESULT get_Name(BSTR* ppName)

Interface IPathConfiguration

Last Modified:

14-Dec-2006 MX New topic

Name Property

Description Returns the name of the current element object

VB Syntax *name* = *pathElement*.**Name**

Variable [\(Type\)](#) - Description

name **(String)** Variable to store the returned element name.

pathElement A [PathElement](#) **(object)**

Return Type String

Default Not Applicable

Examples `name=pathElement.Name`

C++ Syntax HRESULT get_Name(BSTR* ppName)

Interface IPathElement

Last Modified:

15-Dec-2006 MX New topic

Name Property

Description Returns the name of this FOM range object.

VB Syntax *value* = *FOMRange*.Name

Variable [\(Type\)](#) - Description

value **(string)** - Variable to store the returned range name.

FOMRange An [FOMRange](#) **(object)**

Return Type String

Default Not Applicable

Examples `Rname = fomRange.Name 'Read`

C++ Syntax HRESULT get_Name(BSTR *pRName)

Interface IFOMRange

Last Modified:

8-Mar-2007 Major Modifications

Name (Measurement) Property

Description Sets (or returns) the Name of the measurement. Measurement names must be unique among the set of measurements. Measurement names cannot be an empty string.

Note: This is the same name as trace.Name; when one changes, the other changes.

VB Syntax *meas.Name* = *value*

Variable [\(Type\)](#) - Description

meas A Measurement (**object**)

value (**string**) - A user defined name of the measurement

**Return
Type** String

Default "CH1_S11_1" - name of the default measurement

Examples `meas.Name = "Filter BPass" 'Write`

`MName = meas.Name 'Read`

C++ Syntax HRESULT get_Name(BSTR *pVal)
HRESULT put_Name(BSTR newVal)

Interface IMeasurement

Name (trace) Property

Description Sets or returns the name of the Trace. Use the trace name to identify the trace and refer to the trace in the collection.

Note: This is the same name as meas.Name; when one changes, the other changes.

VB Syntax *trac.Name* = *value*

Variable [\(Type\)](#) - Description

trac A Trace **(object)**

value **(String)** Trace name

**Return
Type** String

Default "CH1_S11_1" - name of the default measurement

Examples `trace.Name = "myTrace" 'Write`

`traceName = Name.Trace 'Read`

C++ Syntax HRESULT put_Name(BSTR name)
HRESULT get_Name(BSTR *name)

Interface ITrace

NetworkFilename Property

Description Specifies the S2P filename to embed or de-embed on the input or output of your mixer measurement.

VB Syntax *object.NetworkMode(*n*) = filename*

Variable [\(Type\) - Description](#)

object [SMCType](#) (object) or
[VMCType](#) (object)

n (Integer) Apply network to input or output of mixer. Choose from:

1 - Input of mixer

2 - Output of mixer

filename (String) Filename of the S2P used for embedding or de-embedding. Use the full path name, file name, and .S2P suffix, enclosed in quotes.

Return Type String

Default Not Applicable

Examples `VMC.NetworkMode2 = "C:\Program Files\Agilent\Network Analyzer\Documents\WaveguideAdapt.S2P"`

C++ Syntax HRESULT put_NetworkFilenameMode(short networkNum, BSTR filename);
HRESULT get_NetworkMode(short networkNum, BSTR *filename);

Interface SMCType2
VMCType2

NetworkMode Property

Description Allows you to embed (add) or de-embed (remove) circuit network effects on the input and output of your mixer measurement. [Learn more.](#)

VB Syntax *object.NetworkMode(n) = value*

Variable [\(Type\) - Description](#)

object [SMCType](#) (object) or
[VMCType](#) (object)

n (Integer) Apply network to input or output of mixer. Choose from:
1 - Input of mixer
2 - Output of mixer

value (Enum as ENetworkMode) Choose from:
NO_NETWORK Do nothing with effects of S2P file
EMBED_NETWORK - Add effects of S2P file from the measurement results.
DEEMBED_NETWORK - Remove effects of S2P file from the measurement results.

Return Type Enum

Default NO_NETWORK

Examples `VMC.NetworkMode = EMBED_NETWORK`

C++ Syntax HRESULT put_NetworkMode(short networkNum, enum ENetworkMode networkMode);
HRESULT get_NetworkMode(short networkNum, enum ENetworkMode *networkMode);

Interface SMCType2
VMCType2

NominalIncidentPowerState Property

Description Toggles the Nominal Incident Power setting ON and OFF. This setting is ONLY to be used with SMC measurements, not VMC. [Learn more about Nominal Incident Power.](#)

VB Syntax *mixer.NominalIncidentPowerState* = *bool*

Variable [\(Type\)](#) - [Description](#)

mixer A Mixer **(object)**

bool **(boolean)** - Nominal Incident Power State. Choose from:

1 -(True) Turn nominal incident power ON

0 -(False) Turn nominal incident power OFF

Return Type Boolean

Default 0 -(False)

Examples `mixer.NominalIncidentPowerState = True 'sets
NominalIncidentPowerState to ON`

C++ Syntax HRESULT get_NominalIncidentPowerState(VARIANT_BOOL *pVal)
HRESULT put_NominalIncidentPowerState(VARIANT_BOOL val);

Interface IMixer4

NormalizePoint Property

Description Sets and returns the sweep data point around which to perform broadband and precise tuning.

VB Syntax *embedLO.NormalizePoint = value*

Variable [\(Type\)](#) - Description

embedLO An [EmbeddedLO](#) (object)

value **(Long)** Mixer Sweep data point. Choose a data point number between 1 and the max number of data points in the sweep that has the least amount of expected noise.

Return Type **(Long)**

Default Center point in the sweep span

Examples `embedLO.NormalizePoint = 101 'write`

`value = embedLO.NormalizePoint 'read`

C++ Syntax HRESULT get_NormalizePoint(long *point);
HRESULT put_NormalizePoint(long point);

Interface IEmbeddedLO

Last Modified:

13-Apr-2007 MX New topic

Number (Measurement) Property

Description Returns the Number of the measurement. Measurement numbers are assigned internally.

Note: Measurement numbers are NOT the same as their number in the Measurements collection. Measurement number is used to identify the measurement associated with an event.

This property is used to identify measurements when events occur through the [OnMeasurementEvent](#) callback. For example:

```
OnMeasurementEvent (naEventId_MSG_LIMIT_FAILED, 3)
```

VB Syntax *measNum* = *meas*.**Number**

Variable [\(Type\)](#) - Description

measNum **(long)** - variable to store the measurement number

meas A Measurement **(object)**

Return Type Long Integer

Default "1" - number of the default measurement

Examples `measNum = meas.Number`

C++ Syntax HRESULT get_Number(long *MeasurementNumber)

Interface IMeasurement

Number Property

Description Returns the number of the Auxiliary Trigger connector pair currently being used with the instance of the [AuxTrigger](#) object. Set the trigger pair with the AuxTrig object.

VB Syntax *value* = *auxTrig*.**Number**

Variable [\(Type\)](#) - Description

auxTrig An [AuxTrigger](#) (object)

value **(Long Integer)** - Connector pair. PNA-X returns 1 or 2. E836x returns 1.

Return Type Single

Default Not Applicable

Exaamples `value = auxTrig.Number 'Read the value`

C++ Syntax HRESULT get_Number(long *auxID);

Interface IAuxTrigger

Last Modified:

14-Dec-2006 MX New topic

NumberOfPoints Property

Description Sets or returns the Number of Points of the channel.

Sets or returns the Number of Points of the segment.

See the [Measurement2 Interface](#) to learn how this method differs from [meas.NumberofPoints](#)

VB Syntax *object*.**NumberOfPoints** = *value*

Variable [\(Type\)](#) - Description

object Channel (**object**)

or

CalSet (**object**) - Read-only property

value (**long**) - Number of Points.

For channel, choose any number from **1** to **20001**.

For segment, the total number of points in all segments cannot exceed **20001**. A segment can have as few as 1 point.

Return Type Long Integer

Default 201 for channel
21 for segment

Examples `chan.NumberOfPoints = 201 'sets the number of points for all
measurements in the channel. -Write`

`numofpts = chan.NumberOfPoints 'Read`

C++ Syntax HRESULT get_NumberOfPoints(long *pVal)
HRESULT put_NumberOfPoints(long newVal)

Interface IChannel
ISegment
|CalSet3

Last Modified:

21-Jun-2007 Increased max

NumberOfPoints Property

Description Returns the number of data points of the measurement. To understand how this property is useful, see [IMeasurement2 Interface](#).

VB Syntax *value* = *meas*.**NumberOfPoints**

Variable [\(Type\)](#) - [Description](#)

value **(Long)** - variable to store the returned value

meas A Measurement **(object)**

Return Type Long Integer

Default Not Applicable

Examples `Print meas.NumberOfPoints` 'prints the number of data points

C++ Syntax HRESULT get_NumberOfPoints(long *pVal);

Interface IMeasurement2

Read-only

NumberOfPorts Property

Description Returns the number of hardware source ports on the PNA.

VB Syntax *value* = *app*.NumberOfPorts

Variable [\(Type\)](#) - Description

app An [Application](#) (**object**)

value (**long integer**) - variable to contain the returned value

Return Type (long integer)

Default Not Applicable

Examples `iNumPorts = app.NumberOfPorts`

C++ Syntax HRESULT NumberOfPorts(long* NumPorts)

Interface IApplication

NumberOfPorts Property

Description Returns the number of ports on the specified testset. Returns 0 if no test set is connected.

VB Syntax *value* = *tset*.**NumberOfPorts**

Variable [\(Type\)](#) - **Description**

value (Long) variable to store the returned information.

tset A [TestsetControl](#) object.

OR

An [E5091Testset](#) object.

Return Type Long Integer

Default Not Applicable

Examples `value = testset1.NumberOfPorts`

[See E5091A Example Program](#)

[See External Testset Program](#)

C++ Syntax HRESULT get_NumberOfPorts(long *numberOfPorts);

Interface ITestsetControl

IE5091Testset

NumberOfSweeps Property

Description Returns the number of tuning sweeps used for the latest embedded LO measurement.

VB Syntax *value* = *embedLODiag*.NumberOfSweeps

Variable [\(Type\)](#) - Description

value **(Long)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) **(object)**

Return Type **(Long)**

Default Not Applicable

Examples `data= embedLODiag.NumberOfSweeps 'read`

C++ Syntax HRESULT get_NumberOfSweeps(long * numSweeps);

Interface IEmbeddedLODiagnostic

Last Modified:

12-Apr-2007 MX New topic

Offset Property

Description Sets and returns the offset value to be used when coupling this range to the primary range.

This setting is valid only if the specified range is [coupled](#) to the primary range.

VB Syntax *FOMRange.Offset = value*

Variable [\(Type\)](#) - Description

object An [FOMRange](#) (**object**)

value **(Double)** - Offset value.-(Unitless)

Return Type Double

Default 0

Examples `fomRange.Offset = 1e9 'Write`

`Offs = fomRange.Offset 'Read`

C++ Syntax HRESULT get_Offset(double *pVal)
HRESULT put_Offset(double pVal)

Interface IFOMRange

Last Modified:

8-Mar-2007 Modified links.

OffsetReceiverAttenuator Property

Description Set and return whether to offset the reference receiver by the amount of receiver attenuation. [Learn more.](#)

This setting remains until changed again using this ([or equivalent SCPI](#)) command, or until the hard drive is changed or reformatted.

VB Syntax *pref.OffsetReceiverAttenuator = value*

Variable [\(Type\)](#) - Description

pref A [Preferences](#) (object)

value **(Boolean)** - Choose from:

False Do NOT offset the test port receivers.

True Offset the test port receivers.

Return Type Boolean

Default **True** PNA-X models

False E836xB and PNA-L models

Examples `pref.OffsetReceiverAttenuator = 1 'Write`

`Rcvroffset = pref.OffsetReceiverAttenuator 'Read`

C++ Syntax HRESULT get_OffsetReceiverAttenuator(VARIANT_BOOL * val);
HRESULT put_OffsetReceiverAttenuator(VARIANT_BOOL val);

Interface IPreferences6

Last Modified:

14-Jan-2007 MX New topic

OffsetSourceAttenuator Property

Description Set and return whether to mathematically offset the reference receivers by the amount of source attenuation. [Learn more.](#)

This setting remains until changed again using this ([or equivalent SCPI](#)) command, or until the hard drive is changed or reformatted.

VB Syntax *pref.OffsetSourceAttenuator = value*

Variable [\(Type\)](#) - Description

pref A [Preferences](#) (object)

value **(Boolean)** - Choose from:

False Do NOT offset the reference receivers.

True Offset the reference receivers.

Return Type Boolean

Default **True** PNA-X models

False E836xB and PNA-L models

Examples

```
pref.OffsetSourceAttenuator = 1 'Write
```

```
Rcvroffset = pref.OffsetSourceAttenuator 'Read
```

C++ Syntax HRESULT get_OffsetSourceAttenuator(VARIANT_BOOL * val);
 HRESULT put_OffsetSourceAttenuator(VARIANT_BOOL val);

Interface IPreferences6

Last Modified:

14-Jan-2007 MX New topic

OmitIsolation Property

Description Sets and returns whether Isolation portion of the calibration will be performed or not.

VB Syntax *obj.OmitIsolation = bool*

Variable [\(Type\)](#) - [Description](#)

obj [SMCType](#) (object)

or

[VMCType](#) (object)

bool (Boolean)

True - Isolation is NOT performed

False - Isolation is performed

Return Type Boolean

Default True

Examples `value = SMC.OmitIsolation`

C++ Syntax HRESULT put_OmitIsolation (VARIANT_BOOL bState)
HRESULT get_OmitIsolation (VARIANT_BOOL *bState)

Interface SMCType
VMCType

OneReadoutPerTrace Property

Description Either show marker readout of only the active trace or all of the traces simultaneously.

VB Syntax `win.OneReadoutPerTrace = state`

Variable [\(Type\)](#) - Description

win A [NAWindow](#) (object)

value **(boolean)**

True - Shows the readout of only the active marker for each trace.

False - Shows up to 5 marker readouts per trace, up to 20 total readouts.

Return Type Boolean

Default False

Examples

```
win.OneReadoutPerTrace = True 'Write
State = app.ActiveNAWindow.OneReadoutPerTrace 'Read
```

C++ Syntax HRESULT get_OneReadoutPerTrace(VARIANT_BOOL *pVal)
HRESULT put_OneReadoutPerTrace(VARIANT_BOOL newVal)

Interface INAWindow

Options Property

Description Returns a string identifying the analyzer option configuration.

VB Syntax *value* = *app*.Options

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

value **(string)** - variable to contain the returned string

Return Type String

Default Not Applicable

Examples `availOptions = app.Options`

[C++ Syntax](#) HRESULT Options(BSTR* OptionString)

Interface IApplication

OrientECALModule Property

Description Specifies if the PNA should perform orientation of the ECal module during calibration. Orientation is a technique by which the PNA automatically determines which ports of the module are connected to which ports of the PNA. Orientation begins to fail at very low power levels or if there is much attenuation in the path between the PNA and the ECal module.

Note: For guided calibrations where Orient is OFF and the same ECal module is used in more than one Connection Step, you are not allowed to specify how the ECal module is connected. Instead, the PNA determines the orientation. The PNA does not verify that you made the connection properly.

This setting remains until the PNA is restarted or this command is sent again.

This command, and [ECALPortMapEx](#), can be used to perform ECal using the [Guided Calibration](#) interface.

VB Syntax *cal.OrientECALModule = value*

Variable [\(Type\)](#) - Description

cal A [Calibrator](#) (object)

value (boolean)

False – [DoECAL1PortEx](#) and [DoECAL2PortEx](#) methods will use the value of the [ECALPortMapEx](#) property to determine the port connections.

True - [DoECAL1PortEx](#) and [DoECAL2PortEx](#) methods will use auto Orientation technique to determine port connections.

Return Type Boolean

Default True

Examples

```
Dim cal As Calibrator
Dim bOrient As Boolean
Set cal = PNAapp.ActiveChannel.Calibrator
cal.OrientECALModule = False 'Write
bOrient = cal.OrientECALModule 'Read
```

C++ Syntax HRESULT put_OrientECALModule(VARIANT_BOOL bOrient);
 HRESULT get_OrientECALModule(VARIANT_BOOL *bOrient);

Interface ICalibrator3

Last Modified:

7-May-2007 Added note about Guided Cal.

OutputFixedFrequency Property

Description Sets or returns the mixer output fixed frequency value.

VB Syntax *mixer*.**OutputFixedFrequency** = *value*

Variable [\(Type\)](#) - [Description](#)

mixer A Mixer **(object)**

value **(double)** - Output Fixed Frequency in Hertz.

Return Type Double

Default Not Applicable

Examples `Print mixer.OutputFixedFrequency 'prints the output fixed frequency value of the mixer.`

C++ Syntax HRESULT get_OutputFixedFrequency(double *pVal)
HRESULT put_OutputFixedFrequency(double newVal)

Interface IMixer3

OutputPort Property

Description Switches an input to one of the valid outputs on the specified E5091A. The following are valid input/output combinations. If a combination other than these are sent, an “invalid argument” error will occur.

Input	Valid Outputs
1	A
	T1 - If Port 2 already is connected to T1, then Port 2 will be switched to T2.)
2	T1 - If Port 1 already is connected to T1, then Port 1 will be switched to A.
	T2
3	R1+
	R2+
	R3+ If option 007 (7port), R2 is selected.
4	R1-
	R2-
	R3- If option 007 (7port), R2 is selected.

Note: Do not confuse the similar Testset [OutputPorts Property](#), which sets or gets the port mapping for ALL ports.

VB Syntax `testsets(1).OutputPort (chNum,input) = output`

Variable [\(Type\)](#) - Description

testsets(1) An item from [Testsets](#) (**collection**)
Learn how to [identify a testset in the collection](#).

chNum (**Long**) Channel number of the measurement.

input (**Long**) Testset Input port. Choose from 1|2|3|4.

output (Enum as NAE5091OutputPort) Output port to switch to specified Input. Choose from:
0 or **naE5091PortA** - Port A
1 or **naE5091PortT1** - Port T1
2 or **naE5091PortT2** - Port T2

3 or **naE5091PortR1** - Port R1
4 or **naE5091PortR2** - Port R2
5 or **naE5091PortR3** - Port R3

Return Type Enum

Default Not Applicable

Examples [See Example Program](#)

C++ Syntax HRESULT get_OutputPort(long channelNum, long inputPort, E5091OutputPort *outPort);
HRESULT put_OutputPort(long channelNum, long inputPort, E5091OutputPort outPort);

Interface IE5091Testsets

OutputPorts (Cal Set) Property

Description Returns the port mapping for the Cal Set.

VB Syntax *portMap* = *calset*.**OutputPorts**

Variable [\(Type\)](#) - **Description**

portMap (String) Variable to store the returned string. The returned values are the physical ports. The POSITION of the returned values corresponds to the logical ports.

For example, with an N44xx test set, if the returned string is "PNA 1,TS 2,PNA 2, TS 4" this means:

- PNA 1 is assigned to logical port 1
- TS 2 is assigned to logical port 2
- PNA 2 is assigned to logical port 3
- TS 4 is assigned to logical port 4

calset A [Cal Set](#) object.

Return Type String

Default Depends on the test set.

Example `portMap = calset.OutputPorts`

C++ Syntax HRESULT get_OutputPorts(BSTR *mapping);

Interface ICalses5

Last modified:

9/18/06 MQ Added for multiport

OutputPorts Property

Description Sets or gets the port mappings for ALL ports. An “invalid argument” error will occur if you attempt to set an illegal port combination.

Refer to your testset documentation for valid port combinations.

Note: Do not confuse the similar E5091 [OutputPort Property](#), which sets or gets the port mapping for a single port.

VB Syntax *tset.OutputPorts(chNum) = portList*

Variable [\(Type\)](#) - Description

tset A [TestsetControl](#) object.

chNum **(Long)** Channel number of the measurement.

portList **(String)** A comma-separated list of port mappings. Spaces are ignored at the beginning and end of this text, and before or after commas. Space characters in other locations are not ignored.

Return Type String

Default Not Applicable

Examples [See External Testset Program](#)

C++ Syntax HRESULT get_OutputPorts(long channelNum, BSTR *outPorts);
HRESULT put_OutputPorts(long channelNum, BSTR outPorts);

Interface ITestsetControl

OutputRangeMode Property

Description Sets or returns the Output sweep mode.

VB Syntax *mixer*.**OutputRangeMode** = *value*

Variable [\(Type\)](#) - Description

mixer A [Mixer](#) (object)

value **(Enum as MixerRangeMode)** - Output sweep mode. Choose from:

0 - **mixSwept**

1 - **mixFixed**

Return Type Enum

Default 0 - mixSwept

Examples `mixer.OutputRangeMode = mixSwept`

C++ Syntax HRESULT get_OutputRangeMode(long *pVal)
HRESULT put_OutputRangeMode(long newVal)

Interface IMixer6

OutputSideband Property

Description Sets or returns the value of the output sideband, high or low.

VB Syntax *mixer*.**OutputSideband** = *value*

Variable [\(Type\)](#) - **Description**

mixer A Mixer **(object)**

value **(FCASideBand)** -

Choose from:

0 - LOW

1 - HIGH

Return Type FCASideBand

Default LOW

Examples Print `mixer.OutputSideband` 'prints the value of the `OutputSideband`

C++ Syntax HRESULT get_OutputSideband(FCASideBand *pVal)
HRESULT put_OutputSideband(FCASideBand newVal)

Interface IMixer

OutputStartFrequency Property

Description Sets or returns the mixer output start frequency.

VB Syntax *mixer*.**OutputStartFrequency** = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(double)** - Output Start Frequency in Hertz.

Return Type Double

Default Not Applicable

Examples `Print mixer.OutputStartFrequency` 'prints the value of the
`OutputStartFrequency`

C++ Syntax HRESULT get_OutputStartFrequency(double *pVal)
HRESULT put_OutputStartFrequency(double newVal)

Interface IMixer

OutputStopFrequency Property

Description Sets or returns the mixer Output Stop frequency.

VB Syntax *mixer*.**OutputStopFrequency** = *value*

Variable [\(Type\)](#) - Description

mixer A Mixer **(object)**

value **(double)** - Output stop frequency in Hertz.

Return Type Double

Default Not Applicable

Examples `Print mixer.OutputStopFrequency` 'prints the value of the
`OutputStopFrequency`

C++ Syntax HRESULT get_OutputStopFrequency(double *pVal)
HRESULT put_OutputStopFrequency(double newVal)

Interface IMixer

Read-only

Parameter Property

Description Returns the measurement Parameter. To change the parameter, use `meas.`[ChangeParameter](#)

VB Syntax `measPar = meas.Parameter`

Variable [\(Type\)](#) - **Description**

`measPar` **(string)** - Variable to store Parameter string

`meas` A Measurement **(object)**

Return Type String

Default Not applicable

Examples `measPar = meas.Parameter 'Read`

C++ Syntax HRESULT get_Parameter(BSTR *pVal)

Interface IMeasurement

Parameter (Embedded LO) Property

Description Returns the name of the parameter of the specified tuning sweep.

VB Syntax *value* = *embedLODiag*.**Parameter** (*n*)

Variable [\(Type\)](#) - Description

value **(String)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) (**object**)

n (Long) Tuning sweep number. Use [NumberOfSweeps](#) to find the number of sweeps taken.

Default Not Applicable

Examples `data= embedLO.Parameter 3 'read`

C++ Syntax HRESULT Parameter(long sweep, BSTR * param);

Interface IEmbeddedLODiagnostic

Last Modified:

13-Apr-2007 MX New topic

Parent Property

Description Returns a handle to the parent object of the collection object being referred to in the statement. The parent property allows the user to traverse from an object back up the object hierarchy.

VB Syntax *collection*.**Parent**

Variable [\(Type\)](#) - **Description**

collection

- [CalFactorSegments collection](#)
- [Channels collection](#)
- [E5091Testset Collection](#)
- [ExternalTestsets Collection](#)
- [Measurements collection](#)
- [NaWindows collection](#)
- [PowerLossSegments collection](#)
- [PowerSensors collection](#)
- [Segments collection](#)
- [Traces collection](#)
- [PathConfigurationManager](#)

Return Type Object

Default Not Applicable

Examples `parentobj = chans.Parent 'returns a handle to the parent object (Application) of the chans collection. -Read`

C++ Syntax

```
HRESULT get_Parent(IApplication* *pApplication); //IChannels, IChannel,
IMeasurements and INAWindows
HRESULT get_Parent(IChannel* *pChannel); //ITraces
HRESULT get_Parent(INAWindow* *pWindow); //ISegments
HRESULT get_Parent(IPowerSensor* *pSensor); //ICalFactorSegments
HRESULT get_Parent(ISourcePowerCalibrator* *pCalibrator); //IPowerSensors and
IPowerLossSegments
```

Interface All listed above

PassFailLogic Property

Description Sets and reads the logic of the PassFail line on the [HANDLER IO connector](#) (pin 33) and [AUX IO connector](#) (pin 12). [Learn more about Global Pass/Fail.](#)

Note: This line is connected to both the Handler IO and Aux IO in the PNA. Therefore, this command will affect both of these connectors in the same way.

VB Syntax *object.PassFailLogic = value*

Variable [\(Type\)](#) - Description

object **(object)** - An Aux I/O or Handler I/O object

value **(enum as NARearPanelIOLogic)** Choose from:

0 - naPositiveLogic - Causes the PassFail line to have positive logic (high = pass, low = fail).

1 - naNegativeLogic - Causes the PassFail line to have negative logic (high = fail, low = pass).

Return Type Long Integer

Default naPositiveLogic

Examples

```
aux.PassFailLogic = naNegativeLogic 'Write
Text1.Text = aux.PassFailLogic 'Read
```

C++ Syntax HRESULT put_PassFailLogic (tagNARearPanelIOLogic Mode);
 HRESULT get_PassFailLogic (tagNARearPanelIOLogic* Mode);

Interface IHWAuxIO
 IHWMaterialHandlerIO

PassFailMode Property

Description Sets and reads the mode of the PassFail line on the [HANDLER IO connector](#) (pin 33) and [AUX IO connector](#) (pin 12). [Learn more about Global Pass/Fail.](#)

Note: This line is connected to both the Handler IO and Aux IO in the PNA. Therefore, this command will affect both of these connectors in the same way.

VB Syntax *object.PassFailMode = value*

Variable [\(Type\)](#) - Description

object **(object)** - An Aux I/O or Handler I/O object

value **(enum as NAPassFailMode)**. Choose from:
0 - naDefaultPassNoWaitMode- the line stays in PASS state. When a device fails, then the line goes to fail IMMEDIATELY.
1 - naDefaultPassWaitMode - the line stays in PASS state. When a device fails, then the line goes to fail after the Sweep End line is asserted.
2 - naDefaultFailWaitMode- the line stays in FAIL state. When a device passes, then the line goes to PASS state after the Sweep End line is asserted.

Return Type Long Integer

Default 0 - naDefaultPassNoWaitMode

Examples

```
HWAuxIO.PassFailMode = naDefaultPassNoWaitMode 'Write
mode = HWAuxIO.PassFailMode 'Read
```

C++ Syntax HRESULT put_PassFailMode (tagNAPassFailMode Mode);
 HRESULT get_PassFailMode (tagNAPassFailMode* Mode);

Interface IHWAuxIO
 IHWMaterialHandlerIO

PassFailPolicy Property

Description	Sets the policy used to determine how global pass/fail is computed. Learn more about Global Pass/Fail.
VB Syntax	<i>object</i> .PassFailPolicy = <i>value</i>
Variable	(Type) - Description
<i>object</i>	(object) - An Aux I/O or Handler I/O object
<i>value</i>	(enum as NAPassFailPolicy) Choose from: 0 - naPolicyAllTests - - Pass/Fail Status returns PASS if all tests on all measurements pass. 1 - naPolicyAllMeas - Pass/Fail Status returns PASS if all measurements have associated tests, and all tests pass. FAIL is returned if even one measurement has no associated limit test. Only those measurements which are not in HOLD mode contribute to the pass/fail result.
Return Type	Long Integer
Default	naPolicyAllTests
Examples	<pre>matHndler.PassFailPolicy = naPolicyAllTests 'Write policy = aux.PassFailPolicy 'Read</pre>
C++ Syntax	HRESULT put_PassFailPolicy (tagNAPassFailPolicy Policy); HRESULT get_PassFailPolicy (tagNARearPanelIOLogic* Policy);
Interface	IHWAuxIO4 IHWMaterialHandlerIO2

PassFailScope Property

Description Sets and reads the Scope of the PassFail line on the [HANDLER IO connector](#) (pin 33) and [AUX IO connector](#) (pin 12). [Learn more about Global Pass/Fail.](#)

Note: The PassFail line is connected to both the Handler IO and Aux IO in the PNA. Therefore, this command will affect both of these connectors in the same way.

VB Syntax *object.PassFailScope = value*

Variable [\(Type\)](#) - Description

object **(object)** - An Aux I/O or Handler IO object

value **(enum NAPassFailScope)** Choose from:

0 - naChannelScope - The PassFail line returns to its default state before sweeps on the next channel start. (A channel measurement may require several sweeps.)

1 - naGlobalScope - The PassFail line returns to its default state before the sweeps for the next [triggerable](#) channel start.

The default state of the PassFail line before a measurement occurs and after a failure occurs is set by the [PassFailMode](#) property.

Return Type enum NAPassFailScope

Default 1 - naGlobalScope

Examples

```
HWAuxIO.PassFailScope = naGlobalScope 'Write
scope = HWAuxIO.PassFailScope 'Read
```

C++ Syntax

```
HRESULT put_PassFailScope ( tagNAPassFailScope Scope );
HRESULT get_PassFailScope ( tagNAPassFailScope* Scope );
```

Interface

```
IHWAuxIO
IHWMaterialHandlerIO
```

PassFailStatus Property

Description Returns the most recent pass/fail status value. Use this command as follows:

1. Set the PNA [trigger scope](#) to GLOBAL
2. Set the PNA [trigger source](#) to MANUAL or EXTERNAL.
3. Configure and enable [Limit Testing](#)
4. Trigger the PNA.
5. Use the [*OPC?](#) (with [SCPIStringParser object](#)) to determine when the sweep is complete.
6. Use the **PassFailStatus** property to obtain the global pass/fail result.

[Learn more about Global Pass/Fail.](#)

VB Syntax `var = object.PassFailStatus`

Variable [\(Type\)](#) - Description

var (enum as NAPassFailStatus) Variable to store returned status. One of the following will be returned:

0 - naStatusFail - all measurements not in HOLD mode have been swept, and one or more limit tests failed according to the specified [Pass/Fail policy](#).

1 - naStatusPass - all measurements not in HOLD mode have been swept, and all associated limit tests have passed.

2 - naStatusNone - status cannot be determined because measurements are in progress.

object **(object)** - An [Aux I/O](#) or [Handler I/O](#) object

Return Type Long Integer

Default Not Applicable

Examples `status = aux.PassFailStatus 'Read`

C++ Syntax HRESULT get_PassFailPolicy (tagNAPassFailStatus* status);

Interface IHWAuxIO4
IHWMaterialHandlerIO2

Path Property

Description Specifies an interface to use for the power meter / sensor during a source power calibration.

VB Syntax *pwrMtrInterface.Path = value*

Variable [\(Type\)](#) - Description

pwrMtrInterface **(object)** - A [PowerMeterInterface](#) (object)

value **(enum as NACommunicationPath)** Choose from:

0 - naGPIB - GPIB interface

1 - naUSB - USB interface

2 - naLAN - LAN interface

Return Type Enum

Default naGPIB

Examples [See example](#)

C++ Syntax HRESULT put_Path(tagNACommunicationPath pNewVal);
HRESULT get_Path(tagNACommunicationPath *pVal);

Interface IPowerMeterInterface

Last Modified:

2-Aug-2007 MX New topic

PathCalMethod Property

Description **Note:** This command replaces [ThruCalMethod](#).

(Read-Write) Specifies the calibration method for each port pair.

Note: Before using this command, first do the following:

- Set the connector types: [ConnectorType](#)
- Set cal kit: [CalKitType](#)
- Set or query the thru path pairs: [ThruPortList](#)

After sending or querying this command, send the Thru method: [PathThruMethod](#)

See an example of a [4-port guided calibration using COM](#).

VB Syntax *guidedCal.PathCalMethod (port1, port2) = "caltype1[,caltype2]"*

Variable [\(Type\)](#) - **Description**

guidedCal [GuidedCalibration](#) (object)

port1 First port of the pair to be calibrated.

port2 Second port of the pair to be calibrated.

"caltype1[,caltype2]" (String) Cal types for 1st and 2nd ports of the pair, enclosed in a single pair of quotes. NOT case-sensitive.

caltype1 Cal type for the pair if caltype2 is not specified. Otherwise, Cal type for port 1. Choose from:

- "TRL"
- "SOLT"
- "QSOLTN"
- "EnhRespN"

For the last two arguments, replace **N** with the port to be used as the source port, which MUST be one of the port pair.

[caltype2] Optional argument. Use only when performing an adapter removal cal on the pair. This argument specifies the Cal Type on the second port; **caltype1** then specifies the Cal Type of the first port.

Choose from the same arguments as **caltype1**.

Return Type **String** - Returns comma-separated cal types.

Default Not Applicable

Example

```
guidedCal.PathCalMethod(2,3) = "TRL" 'Write trl for port pair  
guidedCal.PathCalMethod(1,4) = "TRL,SOLT" 'Write adapter removal  
cal, consisting of trl on port 1 and solt on port 4  
  
calmethod = guided.PathCalMethod(1,4) 'Read previous example,  
returns: "TRL,SOLT"
```

C++ Syntax HRESULT get_PathCalMethod(long firstport, long secondport, BSTR *calMethod);
HRESULT put_PathCalMethod(long firstport, long secondport, BSTR calMethod);

Interface IGuidedCalibration3

Last modified:

April 9, 2007 MX New topic

PathConfiguration Property

Description Saves or reads a path configuration file.

This command is valid only on a PNA-X model.

VB Syntax *chan.PathConfiguration = value*

Variable [\(Type\)](#) - Description

chan **(object)** - A [Channel](#) object

value **(String)** - Full path name of the configuration file to read or save.:

Return Type String

Default Not Applicable

Examples

```
chan.PathConfiguration = 'MyConfigFile' 'Write  
config = chan.PathConfiguration 'Read
```

C++ Syntax HRESULT get_PathConfiguration(IPathConfiguration** ppOut);
HRESULT put_PathConfiguration(BSTR pathConfigName);

Interface IChannel9

Last modified:

10/18/06 MX New topic

PathThruMethod Property

Description **Note:** This command replaces [ThruCalMethod](#).

(Read-Write) Specifies the calibration THRU method for each port pair.

Before using this command, first do the following:

- Set the connector types: [ConnectorType](#)
- Set cal kit: [CalKitType](#)
- Set or query the thru path pairs: [ThruPortList](#)
- Set or query the Cal Type: [PathCalMethod](#)

See an example of a [4-port guided calibration using COM](#).

VB Syntax *guidedCal.PathThruMethod (port1, port2) = "ThruType1[,ThruType2]"*

Variable [\(Type\)](#) - [Description](#)

guidedCal [GuidedCalibration](#) (object)

port1 First port of the pair to be calibrated.

port2 Second port of the pair to be calibrated.

"ThruType1[,ThruType2]" (String) Thru methods for 1st and 2nd ports of the pair, enclosed in a single pair of quotes. NOT case-sensitive.

thruType1 Calibration thru method for the pair if thruType2 is not specified. Otherwise, thru method for port 1.

Choose from:

- **“Defined Thru”** A thru type for which there is a stored definition in the Cal Kit.
- **“Zero Thru”** Zero length thru, also known as flush-thru.
- **“Undefined Thru”** A thru type for which there is NOT a stored definition in the Cal Kit. Also known as Unknown Thru. Valid ONLY for SOLT [cal type](#).
- **“Undefined Thru using a Defined Thru”** Using an ECal module, measure the internal thru using the "Undefined Thru" method.

ThruType2 (String) Optional argument. Use only when performing an adapter removal cal on the pair as determined by [PathCalMethod](#). The only valid arguments for ThruType1&2 is "Defined Thru, Defined Thru".

Return Type **String** - Returns comma-separated ThruTypes.

Default Not Applicable

Example

```
guidedCal.PathThruMethod(2,3) = "Zero Thru" 'Write for port pair
guidedCal.PathThruMethod(1,4) = "Defined Thru, Defined Thru"
'Write for adapter removal cal.

calmethod = guided.PathThruMethod(1,4) 'Read previous example,
return: "Defined Thru, Defined Thru"
```

C++ Syntax HRESULT get_PathThruMethod(long firstport, long secondport, BSTR *thruMethod);
HRESULT put_PathThruMethod(long firstport, long secondport, BSTR thruMethod);

Interface IGuidedCalibration3

Last modified:

April 9, 2007 MX New topic

PeakExcursion Property

Description Sets and reads the peak excursion value for the specified marker. The Excursion value determines what is considered a "peak".

VB Syntax *mark*.**PeakExcursion** = *value*

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

value (**single**) - Peak Excursion. Choose any number between **-500** and **500**

Return Type Single

Default 3

Examples `mark.PeakExcursion = 1 'Write`

`PkExcur = mark.PeakExcursion 'Read`

C++ Syntax HRESULT get_PeakExcursion(float *pVal)
HRESULT put_PeakExcursion(float newVal)

Interface IMarker

PeakThreshold Property

Description Sets peak threshold for the specified marker. If a peak (using the criteria set with [PeakExcursion](#)) is below this reference value, it will not be considered when searching for peaks.

VB Syntax *mark*.**PeakThreshold** = *value*

Variable [\(Type\)](#) - **Description**

mark A Marker (**object**)

value (**single**) - Peak Threshold. Choose any number between: **-500** and **500**

Return Type Single

Default -100db

Examples `mark.PeakThreshold = 1 'Write`

`PkThresh = mark.PeakThreshold 'Read`

C++ Syntax HRESULT get_PeakThreshold(float *pVal)
HRESULT put_PeakThreshold(float newVal)

Interface IMarker

PeakToPeak Property

Description Returns the Peak to Peak value of the measurement. To retrieve all 3 statistics value at the same time, use [meas.GetTraceStatistics](#)

VB Syntax *pp* = *meas*.**PeakToPeak**

Variable [\(Type\)](#) - **Description**

pp **(single)** - Variable to store peak-to-peak value

meas A Measurement **(object)**

Return Type Single

Default Not applicable

Examples `pp = meas.PeakToPeak 'Read`

C++ Syntax HRESULT get_PeakToPeak(float* pp)

Interface IMeasurement

Period Property

Description Sets the pulse-period (1/PRF) for ALL PNA-X internal pulse generators.
The resolution of the period is 16.667nS.

VB Syntax *pulse.Period = value*

Variable [\(Type\)](#) - Description

pulse A [PulseGenerator](#) (object)

value **(Double)** Pulse period in seconds. Choose a value from about 33ns to about 70 seconds.

Return Type Double

Default 1e-3 sec

Examples

```
pulse.Period = 1ms 'Write
```

```
value = pulse.Period 'Read
```

C++ Syntax HRESULT get_Period(double* period);
HRESULT put_Period(double period);

Interface IPulseGenerator

Last Modified:

1-Jan-2007 MX New topic

PhaseOffset Property

Description Sets the Phase Offset for the active channel.

VB Syntax *meas.PhaseOffset* = *value*

Variable [\(Type\)](#) - Description

meas A Measurement **(object)**

value **(double)** - PhaseOffset in degrees. Choose any number between:
-360 and **+360**

Return Type Double

Default 0

Examples `meas.PhaseOffset = 25 'Write`

`poffset = meas.PhaseOffset 'Read`

C++ Syntax HRESULT get_PhaseOffset(double *pVal)
HRESULT put_PhaseOffset(double newVal)

Interface IMeasurement

Port1 Property **Superseded**

Description This command is replaced by [PortDelay property](#).

Sets a Port Extension value for Port 1

VB Syntax *portExt.Port1 = value*

Variable [\(Type\)](#) - Description

portExt A Port Extension **(object)**

value **(double)** - Port Extension value in seconds. Choose any number between **-10** and **10**

Return Type Double

Default 0

Examples `portExt.Port1 = 10e-6 'Write`

`prt1 = portExt.Port1 'Read`

C++ Syntax HRESULT get_Port1(double *pVal)
HRESULT put_Port1(double newVal)

Interface IPortExtension

Port2 Property **Superseded**

Description This command is replaced by [PortDelay property](#).

Sets a Port Extension value for Port 2

VB Syntax *portExt.Port2 = value*

Variable [\(Type\)](#) - Description

portExt A Port Extension (**object**)

value (**double**) - Port Extension value in seconds. Choose any number between **-10** and **10**

Return Type Double

Default 0

Examples `portExt.Port2 = 10e-6 'Write`

`prt2 = portExt.Port2 'Read`

C++ Syntax HRESULT get_Port2(double *pVal)
HRESULT put_Port2(double newVal)

Interface IPortExtension

Port3 Property **Superseded**

Description This command is replaced by [PortDelay property](#).

Sets a Port Extension value for Port 3

VB Syntax *portExt.Port3 = value*

Variable [\(Type\)](#) - Description

portExt A Port Extension (**object**)

value (**double**) - Port Extension value in seconds. Choose any number between **-10** and **10**

Return Type Double

Default 0

Examples `portExt.Port3 = 10e-6 'Write`

`prt3 = portExt.Port3 'Read`

C++ Syntax HRESULT get_Port3(double *pVal)
HRESULT put_Port3(double newVal)

Interface IPortExtension

Port2PdeembedCktModel Property

Description Select whether or not to load a 2-port De-embedding circuit model for the specified port number. Circuit model is applied when both "USER" is selected and the filename is specified. To set the filename, use [strPort2Pdeembed_S2PFile Property](#)

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.Port2PdeembedCktModel(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive circuit model.

value **(Enum as NAFixturing2PdeembedCkt)**

0 **naFix2PD_USER** load a 2-port De-embedding circuit model

1 **naFix2PD_NONE** no model

Return Type Long Integer

Default naFix2PD_NONE

Examples `fixture.Port2PdeembedCktModel(2) = naFix2PD_USER 'Write`

`value = fixture.Port2PdeembedCktModel(1) 'Read`

C++ Syntax HRESULT get_Port2PdeembedCktModel(short port tagNAFixturing2PdeembedCkt *pVal)
 HRESULT put_Port2PdeembedCktModel(short port tagNAFixturing2PdeembedCkt newVal)

Interface IFixturing

Port2PdeembedState Property

Description Turns de-embedding ON or OFF for all ports on the channel.

VB Syntax *fixture*.Port2PdeembedState = *value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (Boolean)

False - Turns De-embedding OFF

True - Turns De-embedding ON

Return Type Boolean

Default False

Examples `fixture.Port2PdeembedState = False 'Write`

`value = fixture.Port2PdeembedState 'Read`

C++ Syntax HRESULT get_Port2PdeembedState(VARIANT_BOOL *pVal)
HRESULT put_Port2PdeembedState(VARIANT_BOOL newVal)

Interface IFixturing

PortArbzMImag Property

Description Sets and returns the Imaginary portion of the impedance value for the specified single-ended port. Use [PortArbzReal](#) to set the real value. Or use [PortArbzZ0](#) to set both values together.

VB Syntax *fixture*.PortArbzImag(*portNum*) = *value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Single-ended port number to receive impedance value.

value **(Double)** Real Impedance value. Choose a value between -1E18 and 1E18

Return Type Double

Default 0

Examples `fixture.PortArbzImag(2) = 75 'Write`

`value = fixture.PortArbzImag(1) 'Read`

C++ Syntax HRESULT get_PortArbzImag(short portNum, double *pVal)
HRESULT put_PortArbzImag(short portNum, double newVal)

Interface IFixturing3

PortArbzReal Property

Description Sets and returns the Real portion of the impedance value for the specified single-ended port. Use [PortArbzImag](#) to set the imaginary value. Or use [PortArbzZ0](#) to set both values together.

VB Syntax *fixture*.PortArbzReal(*portNum*) = *value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Single-ended port number to receive impedance value.

value **(Double)** Real Impedance value. Choose a value between 0 to 1E7

**Return
Type** Double

Default 50

Examples `fixture.PortArbzReal(2) = 75 'Write`

`value = fixture.PortArbzReal(1) 'Read`

C++ Syntax HRESULT get_PortArbzReal(short portNum, double *pVal)
HRESULT put_PortArbzReal(short portNum, double newVal)

Interface IFixturing3

PortArbzState Property

Description Turns Port Impedance ON or OFF for all ports on the channel.

VB Syntax *fixture.PortArbzState = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (Boolean)

False - Turns Port Impedance OFF

True - Turns Port Impedance ON

Return Type Boolean

Default False

Examples `fixture.PortArbzState = False 'Write`

`value = fixture.PortArbzState 'Read`

C++ Syntax HRESULT get_PortArbzState(VARIANT_BOOL *pVal)
HRESULT put_PortArbzState(VARIANT_BOOL newVal)

Interface IFixturing

PortArbZ0 Property

Description Sets and returns the Real portion of the impedance value for the specified single-ended port. The imaginary portion is automatically set to 0.0.

To set both values separately, use [PortArbZReal](#) and [PortArbZImag](#).

VB Syntax *fixture.PortArbZ0(portNum) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

portNum **(Integer)** Single-ended port number to receive impedance value.

value **(Double)** Impedance value. Choose a value between 0 to 1E7

**Return
Type** Double

Default 50

Examples `fixture.PortArbZ0(2) = 75 'Write`

`value = fixture.PortArbZ0(1) 'Read`

C++ Syntax HRESULT get_PortArbZ0(short portNum, double *pVal)
HRESULT put_PortArbZ0(short portNum, double newVal)

Interface IFixturing3

PortCatalog Property

Description Returns a comma-separated list of the Output port selections that are available for a given logical input port.

Read the number of input ports for the test set using [NumberOfPorts Property](#).

VB Syntax *value* = *tset*.**PortCatalog**(*logPort*)

Variable [\(Type\)](#) - **Description**

value **(String)** Variable to store the returned information.

tset A [TestsetControl](#) object.

logPort **(Long)** Logical Input port number for which to return valid output ports.

Return Type **String**

Default Not Applicable

Examples `value = testset1.PortCatalog 2`

[See External Testset Program](#)

C++ Syntax HRESULT get_PortCatalog(long inputPort, BSTR *outPort);

Interface ITestsetControl

Last Modified:

18-Jan-2007 Fixed argument

PortCLogic Property

Description Sets and reads the logic mode of Port C on the AUX IO connector and the Handler IO connector.

Note: Port C lines are connected to both the Handler IO and Aux IO in the PNA. Therefore, this command will affect both of these connectors in the same way.

VB Syntax *AuxIO.PortCLogic = value*

Variable [\(Type\)](#) - Description

AuxIO **(object)** - A Hardware Aux I/O object

value **(Enum as NaRearPanelIOLogic)** - Choose from:

0 - naPositiveLogic - The associated data line goes **HIGH** when writing a 1 to a PortC bit.

1 - naNegativeLogic - The associated data line goes **LOW** when writing a 1 to a PortC bit.

When Port C is in Output/Write mode, a change in logic causes the output lines to change state immediately. For example, Low levels change to High levels.

When Port C is in Input/Read mode, a change in logic will not cause the lines to change, but data read from Port C will reflect the change in logic.

Return Type Enum

Default 1 - naNegativeLogic

Examples

```
auxIO.PortCLogic = value 'Write
value = auxIo.PortCLogic 'Read
```

C++ Syntax

```
HRESULT put_PortCLogic ( tagNARearPanelIOLogic Mode );
HRESULT get_PortCLogic ( tagNARearPanelIOLogic* Mode );
```

Interface IHWAuxIO

PortCMode Property

Description Sets and reads whether Port C is setup for writing or reading data on the AUX IO connector and the Handler IO connector.

Note: Port C lines are connected to both the Handler IO and Aux IO in the PNA. Therefore, this command will affect both of these connectors in the same way.

VB Syntax *AuxIO.PortCMode* = *value*

Variable [\(Type\)](#) - **Description**

AuxIO **(object)** - A Hardware Aux I/O object

value **(enum as NaPortMode)** - Choose from:

0 - naInput - set the port for reading

1 - naOutput - set the port for writing

Return Type Enum as NaPortMode

Default 1 - naInput

Examples `auxIo.get_PortCMode = naInput 'Write`

`value = auxIo.get_PortCMode 'Read`

C++ Syntax HRESULT get_PortCMode(tagNAPortMode* pMode);
HRESULT put_PortCMode(tagNAPortMode pMode);

Interface IHWAuxIO

PortDelay Property

Description Sets and returns the Port Extensions Delay value for the specified port number.

Note: This command affects ALL measurements on the channel.

This command replaces [Port 1](#) [Port 2](#) [Port 3](#) Properties.

VB Syntax *fixture.PortDelay(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive delay value.

value **(Double)** Delay value in seconds. Choose a value between -1E18 and 1E18.

Return Type Double

Default 0

Examples `fixture.PortDelay(2) = .002 'Write`

`value = fixture.PortDelay(1) 'Read`

C++ Syntax HRESULT get_PortDelay(short port double *pVal)
HRESULT put_PortDelay(short port double newVal)

Interface IFixturing

PortExtState Property

Description Turns Port Extension ON or OFF for all ports on the channel.

VB Syntax *fixture.PortExtState = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (Boolean)

False - Turns Port Extensions OFF

True - Turns Port Extensions ON

Return Type Boolean

Default False

Examples `fixture.PortExtState = 0 'Write`

`value = fixture.PortExtState 'Read`

C++ Syntax HRESULT get_PortExtState(VARIANT_BOOL *pVal)
HRESULT put_PortExtState(VARIANT_BOOL newVal)

Interface IFixturing

PortExtUse1 Property

Description Sets and returns the Use1 ON/OFF state for the use of the [PortLoss1](#) and [PortFreq1](#) values for the specified port number.

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.PortExtUse1(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive Use1 ON / OFF state.

value **(Boolean)**

False - Turns Use1 OFF

True - Turns Use1 ON

**Return
Type** Boolean

Default False

Examples `fixture.PortExtUse1(2) = False 'Write`

`value = fixture.PortExtUse1(1) 'Read`

C++ Syntax HRESULT get_PortExtUse1(short port VARIANT_BOOL *pVal)
HRESULT put_PortExtUse1(short port VARIANT_BOOL newVal)

Interface IFixturing

PortExtUse2 Property

Description Sets and returns the Use2 ON/OFF state for the use of the [PortLoss2](#) and [PortFreq2](#) values for the specified port number.

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.PortExtUse2(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive Use2 ON / OFF state.

value **(Boolean)**

False - Turns Use1 OFF

True - Turns Use1 ON

**Return
Type** Boolean

Default False

Examples `fixture.PortExtUse2(2) = False 'Write`

`value = fixture.PortExtUse2(1) 'Read`

C++ Syntax HRESULT get_PortExtUse2(short port VARIANT_BOOL *pVal)
HRESULT put_PortExtUse2(short port VARIANT_BOOL newVal)

Interface IFixturing

PortFreq1 Property

Description Sets and returns Frequency1 value for the specified port number.

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.PortFreq1(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive extrapolated loss.

value (Double) Frequency1 value. Choose a frequency within the frequency span of the PNA.

Return Type Double

Default 1 GHz

Examples `fixture.PortFreq1(2) = naFix2PD_USER 'Write`

`value = fixture.PortFreq1(1) 'Read`

C++ Syntax HRESULT get_PortFreq1(short port double *pVal)
HRESULT put_PortFreq1(short port double newVal)

Interface IFixturing

PortFreq2 Property

Description Sets and returns Frequency2 value for the specified port number.

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.PortFreq2(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive extrapolated loss.

value (Double) Frequency2 value. Choose a frequency within the frequency span of the PNA.

Return Type Double

Default 1 GHz

Examples `fixture.PortFreq2(2) = 10E9 'Write`

`value = fixture.PortFreq2(1) 'Read`

C++ Syntax HRESULT get_PortFreq2(short port double *pVal)
HRESULT put_PortFreq2(short port double newVal)

Interface IFixturing

PortLabel Property

Description Sets and returns the label on the calibration kit Port for the calibration wizard.

VB Syntax *calKit.PortLabel (portNum) = value*

Variable [\(Type\)](#) - Description

calKit A CalKit (**object**)

portNum (**long integer**) - number of the port to be labeled. Choose either **1** or **2**

value (**string**) - Label that is visible in the calibration wizard.

Return Type String

Default Depends on the Cal Kit.

Examples `calKit.PortLabel = "MyCalKit" 'Write`

`kitLabel = calKit.PortLabel 'Read`

C++ Syntax HRESULT get_PortLabel(long port, BSTR *pVal)
HRESULT put_PortLabel(long port, BSTR newVal)

Interface ICalKit

PortLogic Property

Description	Sets and returns the logic mode of data ports A-H on the HandlerIO connector. Port C of the Handler IO is connected internally to the Port C of the Aux IO connector. Therefore, it will have the same logic mode.
VB Syntax	<i>handler</i> . PortLogic = <i>value</i>
Variable	(Type) - Description
<i>handler</i>	(object) - A HandlerI/O object
<i>value</i>	<p>(enum as NaRearPanelIOLogic) - Choose from:</p> <p>0 - naPositiveLogic - When a value of one is written, the associated line goes High</p> <p>1 - naNegativeLogic - When a value of one is written, the associated line goes Low</p> <p>For ports that are in output (write) mode, a change in logic causes the output lines to change state immediately. For example, Low levels change immediately to High levels.</p> <p>For ports that are in input (read) mode (C,D,E only), a change in logic will be reflected when data is read from that port. For example, if a line read 0, the next read after a logic change will read 1.</p>
Return Type	Long Integer
Default	1 - naNegativeLogic
Examples	<pre>handler.PortLogic = value 'Write value = handler.PortLogic 'Read</pre>
C++ Syntax	<pre>HRESULT put_PortLogic(tagNARearPanelIOLogic Mode); HRESULT get_PortLogic(tagNARearPanelIOLogic* Mode);</pre>
Interface	IHWMaterialHandlerIO

PortLoss1 Property

Description Sets and returns the Loss1 value for the specified port number.

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.PortLoss1(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive Loss value

value **(Double)** Loss1 value in dB. Choose a value between -90 and 90.

Return Type Double

Default 0

Examples `fixture.PortLoss1(2) = .002 'Write`

`value = fixture.PortLoss1(1) 'Read`

C++ Syntax HRESULT get_PortLoss1(short port double *pVal)
HRESULT put_PortLoss1(short port double newVal)

Interface IFixturing

PortLoss2 Property

Description Sets and returns the Loss2 value for the specified port number.

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.PortLoss2(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive Loss value

value **(Double)** Loss2 value in dB. Choose a value between -90 and 90.

Return Type Double

Default 0

Examples `fixture.PortLoss2(2) = .002 'Write`

`value = fixture.PortLoss2(1) 'Read`

C++ Syntax HRESULT get_PortLoss2(short port double *pVal)
HRESULT put_PortLoss2(short port double newVal)

Interface IFixturing

PortLossDC Property

Description Sets and returns the Loss value at DC for the specified port number.

[Learn about Loss compensation values.](#)

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.PortLossDC(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive Loss value at DC.

value **(Double)** Loss value in ohms. Choose a value between -90 and 90

Return Type Double

Default 0

Examples `fixture.PortLossDC(2) = .002 'Write`

`value = fixture.PortLossDC(1) 'Read`

C++ Syntax HRESULT get_PortLossDC(short port double *pVal)
HRESULT put_PortLossDC(short port double newVal)

Interface IFixturing

PortMatching_C Property

Description Sets and returns the Capacitance value for the specified port number.

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.PortMatching_C(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive capacitance value

value **(Double)** Capacitance value in farads. Choose a value between -1E18 to 1E18.

Return Type Double

Default 0

Examples `fixture.PortMatching_C(2) = .00002 'Write`

`value = fixture.PortMatching_C(1) 'Read`

C++ Syntax HRESULT get_PortMatching_C(short port double *pVal)
HRESULT put_PortMatching_C(short port double newVal)

Interface IFixturing

PortMatching_G Property

Description Sets and returns the Conductance value for the specified port number.

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.PortMatching_G(port) = value*

Variable (Type) - Description

fixture A [Fixturing](#) (object)

port (Integer) Port number to receive conductance value.

value (Double) Conductance value in siemens. Choose a value between -1E18 and 1E18.

Return Type Double

Default 0

Examples `fixture.PortMatching_G = .002 'Write`

`value = fixture.PortMatching_G 'Read`

C++ Syntax HRESULT get_PortMatching_G(short port double *pVal)
HRESULT put_PortMatching_G(short port double newVal)

Interface IFixturing

PortMatching_L Property

Description Sets and returns the Inductance value for the specified port number.

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.PortMatching_L(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive inductance value

value **(Double)** Inductance value in henries. Choose a value between -1E18 and 1E18.

Return Type Double

Default 0

Examples `fixture.PortMatching_L = .002 'Write`

`value = fixture.PortMatching_L 'Read`

C++ Syntax HRESULT get_PortMatching_L(short port double *pVal)
HRESULT put_PortMatching_L(short port double newVal)

Interface IFixturing

PortMatching_R Property

Description Sets and returns the Resistance value for the specified port number.

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.PortMatching_R(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive resistance value.

value **(Double)** Resistance value in ohms. Choose a value between -1E18 and 1E18.

Return Type Double

Default 0

Examples `fixture.PortMatching_R = .1 'Write`

`value = fixture.PortMatching_R 'Read`

C++ Syntax HRESULT get_PortMatching_R(short port double *pVal)
HRESULT put_PortMatching_R(short port double newVal)

Interface IFixturing

PortMatchingCktModel Property

Description Sets and returns the Port Matching circuit model for the specified port number.

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.PortMatchingCktModel(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive circuit model.

value **(Enum as NAFixturingPortMatchCkt)** Circuit model. Choose from

0 **naFixPMC_SLPC** Series L - Parallel C

1 **naFixPMC_PCSL** Parallel C - Series L

2 **naFixPMC_PLSC** Parallel L - Series C

3 **naFixPMC_SCPL** Series C - Parallel L

4 **naFixPMC_PLPC** Parallel L - Parallel C

5 **naFixPMC_USER** Load S2P file - also set filename to load with [strPortMatch_S2PFile Property](#)

6 **naFixPMC_NONE** No circuit model

Return Type Long Integer

Default **naFixPMC_NONE**

Examples `fixture.PortMatchingCktModel(2) = naFixPMC_PLSC 'Write`

`value = fixture.PortMatchingCktModel(1) 'Read`

C++ Syntax HRESULT get_PortMatchingCktModel(short port tagNAFixturingPortMatchCkt *pVal)
HRESULT put_PortMatchingCktModel(short port tagNAFixturingPortMatchCkt newVal)

Interface IFixturing

PortMatchingState Property

Description Sets and returns the Port Matching State on the channel.

VB Syntax *fixture*.PortMatchingState = *value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (boolean)

True - Turns Port Matching ON

False - Turns Port Matching OFF

Return Type Boolean

Default False

Examples `fixture.PortMatchingState = True 'Write`

`value = fixture.PortMatchingState 'Read`

C++ Syntax HRESULT get_PortMatchingState(VARIANT_BOOL *pVal)
HRESULT put_PortMatchingState(VARIANT_BOOL newVal)

Interface IFixturing

PortMode Property

Description Sets and returns whether Port C or Port D is used for writing or reading data on the Handler IO connector. The Handler IO Port C is connected internally to the Port C of the Aux IO connector. Therefore, the Aux IO connector will have the same input/output mode.

VB Syntax *handler.PortMode (port) = value*

Variable [\(Type\)](#) - Description

handler **(object)** - A Handler I/O object

port **(enum as NAMatHandlerPort)** Port to be changed. Choose from:

2 - naPortC

3 - naPortD

value **(enum as NaPortMode)** - Choose from:

0 - naInput - set the port for reading

1 - naOutput - set the port for writing

Return Type Long Integer

Default 1 - naInput

Examples

```
handler.PortMode(naPortC) = naInput 'Write
value = handler.PortMode(naPortD) 'Read
```

C++ Syntax

```
HRESULT put_PortMode ( tagNAMatHandlerPort Port, tagNAPortMode Mode );
HRESULT get_PortMode ( tagNAMatHandlerPort Port, tagNAPortMode* Mode );
```

Interface

IHWMaterialHandlerIO

PortsNeedingDeltaMatch Property

Description	<p>Returns the port numbers for which delta match correction is required. 0 (zero) is returned if the Cal does NOT require Delta Match correction for one of the following reasons:</p> <ul style="list-style-type: none"> • The Cal does NOT involve Unknown Thru or TRL. You specify this using ThruCalMethod Property. • The Cal DOES involve Unknown Thru or TRL, but the delta match data can be calculated by the Unknown Thru or TRL Cal. Learn how this is possible. However, you can force the Cal to use the Delta Match data from a Cal Set.
VB Syntax	<i>value</i> = <i>guided</i> . PortsNeedingDeltaMatch
Variable	(Type) - Description
	<i>value</i> (Variant) Variable to store the returned list of port numbers.
	<i>guided</i> GuidedCalibration (object)
Return Type	Variant
Default	Not Applicable
Examples	<pre>Dim ports As Variant ports = guided.PortsNeedingDeltaMatch</pre>
C++ Syntax	HRESULT get_PortsNeedingDeltaMatch (VARIANT* portList);
Interface	IGuidedCalibration2

PowerSlope Property

Description Sets or returns the Power Slope value. Power Slope function increases or decreases the output power over frequency. Units are db/GHz. For example: PowerSlope = 2 will increase the power 2db/1GHZ.

VB Syntax *object.PowerSlope = value*

Variable [\(Type\)](#) - Description

object [Channel](#) (object)

or

[CalSet](#) (object) - Read-only property

value **(double)** - Power Slope. Choose any number between -2 and 2.
No slope = 0

Return Type Double

Default 0

Examples `chan.PowerSlope = 2 'Write`

`pwrslp = chan.PowerSlope 'Read`

C++ Syntax HRESULT get_PowerSlope(double *pVal)
HRESULT put_PowerSlope(double newVal)

Interface IChannel
|CalSet3

PowerAcquisitionDevice Property

Description Returns the power sensor channel (A or B) that is currently selected for use at a specific frequency.

If [UsePowerSensorFrequencyLimits](#) is set to False, this property will return the sensor channel last used for a source power calibration. This setting corresponds to the **Use this sensor only** checkbox in the [Power Sensor Settings](#) dialog.

When performing an SMC calibration, use [SetPowerAcquisitionDevice Method](#) to set the power sensor channel.

VB Syntax *sensor* = *pwrCal*.**PowerAcquisitionDevice**(*dFreq*)

Variable [\(Type\)](#) - **Description**

sensor (**enum NPowerAcquisitionDevice**) The currently selected sensor channel for the specified frequency. Choose from:

0 – naPowerSensor_A

1 – naPowerSensor_B

pwrCal A SourcePowerCalibrator (object)

dFreq (double) Frequency (Hz) for the power reading of interest.

Return Type enum NPowerAcquisitionDevice

Default Not Applicable

Examples `selectedSensor = pwrCal.PowerAcquisitionDevice(1.E9) 'Write`

C++ Syntax HRESULT get_PowerAcquisitionDevice(double dFreq, tagNPowerAcquisitionDevice* enumAcqDevice);

Interface ISourcePowerCalibrator2

PowerMeterChannel Property

Description Identifies which channel of the power meter the power sensor is connected to.

VB Syntax *chan* = *powerSensor*.**PowerMeterChannel**

Variable [\(Type\)](#) - **Description**

chan **(enum NAPowerAcquisitionDevice)** – Power meter channel identifier for sensor.
Choose from:

0 – naPowerSensor_A

1 – naPowerSensor_B

pwrSensor **(object)** - A PowerSensor (object)

Return Type NAPowerAcquisitionDevice

Default Not Applicable

Examples

```
Set pwrCal = pna.SourcePowerCalibrator
meterChannel = pwrCal.PowerSensors(1).PowerMeterChannel
```

C++ Syntax HRESULT PowerMeterChannel(tagNAPowerAcquisitionDevice *pSensor);

Interface IPowerSensor

PowerMeterGPIBAddress Property **Superseded**

Description This command is replaced with [PowerMeterInterface Object](#).
Specifies the GPIB address of the power meter that will be referenced by the SourcePowerCalibrator object.
When performing a source power cal, the PNA will search VISA interfaces that are configured in the Agilent IO Libraries on the PNA.

VB Syntax *powerCalibrator.PowerMeterGPIBAddress* = *value*

Variable [\(Type\)](#) - Description

powerCalibrator **(object)** - A SourcePowerCalibrator (object)

value **(long integer)** – Power meter GPIB address. Choose any number between 0 and 30.

Return Type Long integer

Default 13

Examples

```
Set powerCalibrator = pna.SourcePowerCalibrator
powerCalibrator.PowerMeterGPIBAddress = 13 'Write

pwrMtrAddress = powerCalibrator.PowerMeterGPIBAddress 'Read
```

C++ Syntax HRESULT put_PowerMeterGPIBAddress(long newVal);
HRESULT get_PowerMeterGPIBAddress(long *pVal);

Interface ISourcePowerCalibrator

Last Modified:

9-Jul-2007 Superseded

PowerOnDuringRetraceMode Property

Description For single-band frequency or segment sweeps ONLY, specify whether to turn RF power ON or OFF during a retrace.

This setting remains until changed using this command, or until the hard drive is changed or reformatted.

VB Syntax *pref.PowerOnDuringRetraceMode = value*

Variable [\(Type\)](#) - Description

pref A [Preferences](#) (object)

value **(Enum)** - Choose from:

0 - **naRetracePowerMode_Auto** Power is left ON during retrace of single-band frequency or segment sweeps ONLY.

1 - **naRetracePowerMode_OFF** Power is turned OFF during retrace of single-band frequency or segment sweeps ONLY.

Return Type Enum

Default 0 - naRetracePowerMode_Auto

Examples

```
pref.PowerOnDuringRetraceMode = naPowerSweepRetraceMode_Start 'Write
psMode = pref.naPowerOnDuringRetraceMode_Start 'Read
```

C++ Syntax HRESULT get_PowerOnDuringRetraceMode (tagNARetracePowerMode* preference);
 HRESULT put_PowerOnDuringRetraceMode (tagNARetracePowerMode val)

Interface IPreferences4

Last modified:

Nov. 16, 2006 New command

PowerSweepRetracePowerMode Property

Description At the end of a power sweep, while waiting to trigger the next sweep, maintain source power at either the start power level or at the stop power level.

VB Syntax *pref.PowerSweepRetracePowerMode = value*

Variable [\(Type\)](#) - Description

pref A [Preferences](#) (object)

value **(Enum)** - Choose from:

0 - **naPowerSweepRetraceMode_Start** - maintain source at start power level.

1 - **naPowerSweepRetraceMode_Stop** - maintain source at stop power level.

Return Type Enum

Default 0 - naPowerSweepRetraceMode_Start

Examples `pref.PowerSweepRetracePowerMode = naPowerSweepRetraceMode_Start 'Write`

`psMode = pref.naPowerSweepRetraceMode_Start 'Read`

C++ Syntax HRESULT get_PowerSweepRetracePowerMode (tagNAPowerSweepRetraceMode* preference);
HRESULT put_PowerSweepRetracePowerMode (tagNAPowerSweepRetraceMode val)

Interface IPreferences3

Last modified:

Oct. 25, 2006 New command

PreciseTuningTolerance Property

Description Sets and returns the tuning tolerance for precise tuning.

VB Syntax *embedLO.PreciseTuningTolerance = value*

Variable [\(Type\)](#) - Description

embedLO An [EmbeddedLO](#) (object)

value **(Double)** Tuning tolerance in Hz. Choose a number between and

Return Type **(Double)**

Default 1 Hz

Examples `embedLO.PreciseTuningTolerance = .5 'write`

`value = embedLO.PreciseTuningTolerance 'read`

C++ Syntax HRESULT get_PreciseTuningTolerance(double* tolerance);
HRESULT put_PreciseTuningTolerance(double tolerance);

Interface IEmbeddedLO

Last Modified:

13-Apr-2007 MX New topic

PreferInternalTriggerOnChannelSingle Property

Description Set and read the preference for the [chan.Single](#) trigger behavior. This setting persists until changed.

These preferences are important when performing a Guided calibration, as the PNA uses the **chan.Single** trigger command to measure standards.

- set `PreferInternalTriggerOnChannelSingle = False` to use an External trigger sweep to measure a cal standard.
- set `PreferInternalTriggerOnChannelSingle = True` to use an External sweep for the measurement, but rely on the PNA to send Internal trigger signals for calibrating.

To set this preference for an **Unguided** Calibration, use [PreferInternalTriggerOnUnguidedCal Property](#)

The **chan.Single** trigger command NEVER respects the Trigger Source = Manual setting. It always switches to Internal for one trigger, then back to Manual, regardless of this preference command.

VB Syntax `pref.PreferInternalTriggerOnChannelSingle = bool`

Variable [\(Type\)](#) - Description

pref A [Preferences](#) (object)

bool (**Boolean**) - Choose from:

0 - False - the Single trigger property does respect the **Trigger Source = External** setting. For example, if [Trigger source = External](#), the single trigger method will wait for the External trigger signal and then allow only one sweep.

1 - True - the Single trigger command does NOT respect the **Trigger Source = External** setting. For example, when the Single method is sent, the PNA immediately switches to Internal sweep, responds to one trigger signal, then switches back to External.

Return Type Boolean

Default 0 - False

Examples `pref.PreferInternalTriggerOnChannelSingle = False 'Write`

`prefer = pref.PreferInternalTriggerOnChannelSingle 'Read`

C++ Syntax `HRESULT put_PreferInternalTriggerOnChannelSingle(VARIANT_BOOL bprefSingle)`
`HRESULT get_PreferInternalTriggerOnChannelSingle(VARIANT_BOOL *bprefSingle)`

Interface IPreferences2

PreferInternalTriggerOnUnguidedCal Property

Description Set and read the preference for the trigger behavior when performing an Unguided calibration.

VB Syntax *pref.PreferInternalTriggerOnUnguidedCal = bool*

Variable [\(Type\)](#) - Description

pref A [Preferences](#) (object)

bool **(Boolean)** - Choose from:

0 - False - The trigger behavior during an Unguided calibration DOES respect the setting of the [Trigger source](#) command. For example, during an Unguided Cal, when Trigger source = External, the PNA will wait for the External trigger signal and then allow only one sweep.

1 - True -The trigger behavior during an Unguided calibration does NOT respect the **Trigger Source = External** setting. For example, during an Unguided Cal, when Trigger source = External, the PNA immediately switches to Internal sweep, measures the standard with one trigger signal, then switches back to External trigger.

Note: When Trigger Source = Manual during a calibration, the PNA ALWAYS switches to Internal for one trigger to measure a standard, then back to Manual, regardless of this preference command.

Return Type Boolean

Default 0 - False

Examples `pref.PreferInternalTriggerOnUnguidedCal = False 'Write`

`prefer = pref.PreferInternalTriggerOnUnguidedCal 'Read`

C++ Syntax HRESULT put_PreferInternalTriggerOnUnguidedCal(VARIANT_BOOL bprefUnguided)
 HRESULT get_PreferInternalTriggerOnUnguidedCal(VARIANT_BOOL *bprefUnguided)

Interface IPreferences2

R1InputPath Property

Description PNA models with option 081 have a switch in the test set that allows access to the port 1 reference receiver through the front panel Reference 1 connectors. This command throws that switch between the internal path to the receiver, or through the external connectors. You could use this feature to make converter measurements relative to a reference ("golden") mixer.

See other [Frequency Offset](#) properties.

VB Syntax `chan.R1InputPath = value`

Variable [\(Type\)](#) - **Description**

chan A Channel (**object**)

value (**Enum as naInputPath**) - Choose from: naPathInternal -
(0) - internal path to the reference receiver naPathExternal
(1) - path through external connectors

Return Type Enum

Default naPathInternal - (0)

Examples

```
chan.R1InputPath = naPathInternal 'Write
```

```
Inpath = chan.R1InputPath 'Read
```

C++ Syntax HRESULT get_R1InputPath (tag NAInputPath *pPath);
 HRESULT put_R1InputPath (tag NAInputPath newPath);

Interface IChannel2

RangeCount Property

Description Returns the number of ranges that are available in the PNA.
To see the range names, query the [Name](#) property of each range in the FOM collection.

VB Syntax *value* = *FOM.RangeCount*

Variable [\(Type\)](#) - Description

object An [FOM](#) (collection object)

value **(long)** - Variable to store the returned number of ranges.

Return Type Long Integer

Default Not Applicable

Examples `NumRanges = fom.RangeCount 'Read`

C++ Syntax HRESULT get_RangeCount(long *count)

Interface IFOM

Last Modified:

8-Mar-2007 Added link to Name property

rangeNumber Property

Description Returns the index number of the range within the [FOM collection](#).

VB Syntax *value* = *FOMRange*.rangeNumber

Variable [\(Type\)](#) - Description

value **(Long)** - Variable to store the returned range number.

object An [FOMRange](#) **(object)**

Return Type Long

Default Not Applicable

Examples `num = fomRange.rangeNumber 'Read`

C++ Syntax HRESULT get_rangeNumber(long *pVal)

Interface IFOMRange

ReadingsPerPoint Property

Description	<p>This command, along with ReadingsTolerance, allows for settling of the power sensor READINGS.</p> <p>Specifies the maximum number of power readings that are taken at each stimulus point to allow for power meter settling. Each reading is averaged with the previous readings at that stimulus point. When this average meets the ReadingsTolerance value or this number of readings has been made, the average is returned as the valid reading.</p> <p>The following two commands deal with the source power ADJUSTMENTS:</p> <p>IterationsTolerance Property</p> <p>MaximumIterationsPerPoint Property</p>
VB Syntax	<i>pwrCal</i> . ReadingsPerPoint = <i>value</i>
Variable	(Type) - Description
<i>pwrCal</i>	(object) - A SourcePowerCalibrator (object)
<i>value</i>	(long integer) – Number of power readings. Choose any number between 3 and 100.
Return Type	Long Integer
Default	3
Examples	<pre>Set powerCalibrator = pna.SourcePowerCalibrator powerCalibrator.ReadingsPerPoint = 3 'Write numReadings = powerCalibrator.ReadingsPerPoint 'Read</pre>
C++ Syntax	<pre>HRESULT put_ReadingsPerPoint(long newVal); HRESULT get_ReadingsPerPoint(long *pVal);</pre>
Interface	ISourcePowerCalibrator

Last Modified:

17-Apr-2007 Clarified verbage

ReadingsTolerance Property

Description	<p>This command, along with ReadingsPerPoint Property allows for settling of the power sensor READINGS.</p> <p>Each power reading is averaged with the previous readings at each stimulus point. When the average meets this tolerance value or the maximum ReadingsPerPoint has been made, the average is returned as the valid reading.</p> <p>The following two commands deal with the source power ADJUSTMENTS:</p> <p>IterationsTolerance Property</p> <p>MaximumIterationsPerPoint Property</p>
VB Syntax	<i>pwrCal</i> . ReadingsTolerance = <i>value</i>
Variable	(Type) - Description
	<i>pwrCal</i> (object) - A SourcePowerCalibrator (object)
	<i>value</i> (Double) – Power meter settling tolerance value in dB. Choose any number between 0 and 5.
Return Type	Double
Default	.05 dB
Examples	<pre>Set powerCalibrator = pna.SourcePowerCalibrator powerCalibrator.ReadingsTolerance = .1 'Write ReadTol = powerCalibrator.ReadingsTolerance 'Read</pre>
C++ Syntax	HRESULT get_ReadingsTolerance(double *pVal); HRESULT put_ReadingsTolerance(double newVal);
Interface	ISourcePowerCalibrator3

Last Modified:

17-Apr-2007 Clarified verbage

ReadyForTriggerState Property

Description Determines the control of Material Handler connector Pin 21.

VB Syntax *handler.ReadyForTriggerState = value*

Variable [\(Type\)](#) - Description

handler **(object)** - A [Handler I/O](#) object

value **(boolean)**

False - Pin 21 is controlled by Output Port B7

True - Pin 21 is controlled by the Ready for Trigger signal

Return Type Boolean

Default False

Examples

```
handler.ReadyForTriggerState = False 'Write  
bState = handler.ReadyForTriggerState 'Read
```

[C++ Syntax](#)

HRESULT put_ReadyForTriggerState (BOOL *pVal);

HRESULT get_ReadyForTriggerState (BOOL newVal);

Interface

IHWMaterialHandlerIO2

ReceiverAttenuator Property

Description Sets or returns the value of the specified receiver attenuator control.

VB Syntax *object*.ReceiverAttenuator(*rec*) = *value*

Variable [\(Type\)](#) - Description

object Channel (**object**)

or

CalSet (**object**) - Read-only property

rec (**long integer**) - Receiver with attenuator control to be changed. Choose from any of the available receivers in your PNA

1 - Receiver A

2 - Receiver B

Receiver attenuation can not be set using [logical receiver notation](#).

value (**double**) - Attenuator value in dB. Choose any Long Integer between 0 and 35 in 5dB steps:

If an invalid value is entered, the analyzer will select the next lower valid value. For example, if 19.9 is entered the analyzer will select 15 dB attenuation.

Return Type Double

Default 0 db

Examples `chan.ReceiverAttenuator(1) = 5 'Write`

`attn = chan.ReceiverAttenuator(2) 'Read`

C++ Syntax HRESULT get_ReceiverAttenuator(long lport, double *pVal)
HRESULT put_ReceiverAttenuator(long lport, double newVal)

Interface IChannel

|CalSet3

ReceiverCount Property

Description Returns the number of receivers in the remote PNA. The returned number includes both test port receivers and reference receivers. [See the number of reference receivers in your PNA.](#)

VB Syntax *value* = *cap*.ReceiverCount

Variable [\(Type\)](#) - Description

value (Long) - Variable to store the returned number of receivers.

cap A [Capabilities](#) (object)

Return Type Long

Default Not Applicable

Examples `value = cap.ReceiverCount 'Read`

C++ Syntax HRESULT get_ReceiverCount(long * receiverCount);

Interface ICapabilities

ReceiverStepAttenuatorStepSize Property

Description Returns a value indicating the step size of the attenuator.

VB Syntax *value* = *cap*.ReceiverStepAttenuatorStepSize (*n*)

Variable [\(Type\)](#) - Description

value **(Double)** - Variable to store the returned value of the attenuator step size.

cap A [Capabilities](#) **(object)**

n **(Long)** - port number to query for the value of the attenuator step size.

Return Type Double

Default Not Applicable

Examples `value = cap.ReceiverStepAttenuatorStepSize 'Read`

C++ Syntax HRESULT get_ReceiverStepAttenuatorStepSize(long portNumber, double * stepSize);

Interface ICapabilities

Read-only

ReceivePort Property

Description Returns the receiver (response) port number of measurement. To understand how this property is useful, see [IMeasurement2 Interface](#).

Note: Returning a receiver port is only supported for S-Parameter measurements. If the measurement is not an S-Parameter, then E_NA_BAD_PARAMETER is returned.

VB Syntax *value* = *meas*.ReceivePort

Variable [\(Type\)](#) - Description

value **(Long)** - Variable to store the returned value

meas A [Measurement](#) (object)

Return Type Long Integer

Default Not Applicable

Examples `rp = meas.ReceivePort`

C++ Syntax HRESULT ReceivePort(Long* rcvPort);

Interface IMeasurement2

ReduceIFBandwidth Property

Description Sets or returns the state of the [Reduced IF Bandwidth at Low Frequencies](#) setting.

VB Syntax *chan.ReduceIFBandwidth = state*

Variable [\(Type\)](#) - Description

chan A [Channel](#) (object)

state (boolean)

False - Turns Reduce IFBW **OFF**

True - Turns Reduce IFBW **ON**

Return Type Boolean

Default True

Examples `chan.ReduceIFBandwidth = False 'Write`

`reduce = chan.ReduceIFBandwidth 'Read`

C++ Syntax HRESULT get_ReduceIFBandwidth(BOOL *pVal)
HRESULT put_ReduceIFBandwidth(BOOL newVal)

Interface IChannel5

Last Modified:

16-Aug-2007 Corrected Interface number

ReferenceCalFactor Property

Description Reference cal factor (%) associated with this power sensor. This property and the CalFactorSegments collection are used to perform source power calibration **only** if the power sensor does not contain cal factors in EPROM (for example, HP/Agilent 848x sensors).

VB Syntax *powerSensor*.**ReferenceCalFactor** = *value*

Variable [\(Type\)](#) - **Description**

pwrSensor **(object)** - A PowerSensor (object)

value **(double)** – Cal factor in units of percent. This can be any value between 1 and 150.

Return Type Double

Default 100

Examples

```
Set powerCalibrator = pna.SourcePowerCalibrator
powerCalibrator.PowerSensors(1).ReferenceCalFactor = 99 'Write

RefFact = powerCalibrator.PowerSensors(1).ReferenceCalFactor
'Read
```

C++ Syntax HRESULT put_ReferenceCalFactor(double newVal);
HRESULT get_ReferenceCalFactor(double *pVal);

Interface IPowerSensor

ReferenceMarkerState Property

Description Turn ON or OFF the reference marker.

VB Syntax *meas.ReferenceMarkerState = state*

Variable [\(Type\)](#) - Description

app A Measurement (**object**)

state (boolean) -

True - turns the reference marker ON

False - turns the reference marker OFF

Return Type Boolean

Default **False**

Examples `meas.ReferenceMarkerState = True`

`reference = meas.ReferenceMarkerState`

C++ Syntax HRESULT get_ReferenceMarkerState(VARIANT_BOOL bState)
HRESULT put_ReferenceMarkerState(VARIANT_BOOL* bState)

Interface IMeasurement

ReferenceValue Property

Description Sets or returns the value of the Y-axis Reference Level of the active trace.

VB Syntax *trce*.**ReferenceValue** = *value*

Variable [\(Type\)](#) - Description

trce A Trace **(object)**

value **(double)** - Reference Value. Units and range depend on the current data format.

Return Type Double

Default Not applicable

Examples `meas.ReferenceValue = 0 'Write`

`rlev = meas.ReferenceValue 'Read`

C++ Syntax HRESULT get_ReferenceValue(double *pVal)
HRESULT put_ReferenceValue(double newVal)

Interface ITrace

ReferencePosition Property

Description Sets or returns the Reference Position of the active trace.

VB Syntax *trce*.ReferencePosition = *value*

Variable [\(Type\)](#) - Description

trce A Trace (**object**)

value (**double**) - Reference position on the screen measured in horizontal graticules from the bottom of the screen. Choose from any number between: **0** and **10**.

Return Type Double

Default 0

Examples `meas.ReferencePosition = 5 'Middle of the screen -Write`

`rpos = meas.ReferencePosition -Read`

C++ Syntax HRESULT get_ReferencePosition(double *pVal)
HRESULT put_ReferencePosition(double newVal)

Interface ITrace

RemoteCalStoragePreference Property

Description Specifies the default manner in which calibrations performed using COM or SCPI are to be stored. Cal data is always stored to the channel's Cal Register regardless of this setting. This setting survives instrument preset and reboot. It remains until changed by another invocation of this property.

VB Syntax `pref.RemoteCalStoragePreference = value`

Variable [\(Type\)](#) - Description

cal A [Preferences](#) (object)

value (Enum) - Choose from:

0 - naPreferCalRegister - Cal is saved ONLY to the channel's Cal Register.

1 - naPreferNewUserCalSet - Cal is automatically saved to a new User Cal Set file when performing a calibration using COM. The Cal Set name is automatically generated. This corresponds to pre-6.0 behavior. Use the [Name](#) property to change the name after the cal is complete.

2 - naPreferReuseCurrentCalSet - The cal is saved to the Cal Set is that is currently selected on the specific channel. This could be the channel's Cal Register. If the channel does not yet have a selected Cal Set, the cal will be saved to a new User Cal Set with an automatically-generated name.

Return Type Enum

Default 0 - naPreferCalRegister

Examples `pref.RemoteCalStoragePreference = naPreferNewUserCalSet 'Write`

`calStorageMode = pref.RemoteCalStoragePreference ' Read`

C++ Syntax `HRESULT get_RemoteCalStoragePreference(enum NARemoteCalStoragePreference* preference);`
`HRESULT put_RemoteCalStoragePreference(enum NARemoteCalStoragePreference val);`

Interface IPreferences7

Last Modified:

16-Apr-2007 MX New topic

SB_BalPortNegative Property

Description With a Single-ended - Balanced topology, returns the PNA port number that is connected to the Negative side of the DUT's Balanced Port.

Use [SetSBPorts Method](#) to set the port mapping for a Single-Ended - Balanced topology.

VB Syntax `var = balTopology.SB_BalPortNegative`

Variable [\(Type\)](#) - Description

`var` (Long Integer) Variable to store the returned value.

`balTopology` A [BalancedTopology](#) (**object**)

Return Type Long Integer

Default Not Applicable

Examples `variable = balTop.SB_BalPortNegative` 'Read

C++ Syntax HRESULT get_SB_BalPortNegative(long *bVal)

Interface IBalancedTopology

SB_BalPortPositive Property

Description With a Single-ended - Balanced topology, returns the PNA port number that is connected to the Positive side of the DUT's Balanced Port.

Use [SetSBPorts Method](#) to set the port mapping for a Single-Ended - Balanced topology.

VB Syntax `var = balTopology.SB_BalPortPositive`

Variable [\(Type\)](#) - Description

`var` (Long Integer) Variable to store the returned value.

`balTopology` A [BalancedTopology](#) (**object**)

Return Type Long Integer

Default Not Applicable

Examples `variable = balTop.SB_BalPortPositive` 'Read

C++ Syntax HRESULT get_SB_BalPortPositive(long *bVal)

Interface IBalancedTopology

SB_SEPort Property

Description With a Single-ended - Balanced topology, returns the PNA port number that is connected to the DUT's Single-ended port.

Use [SetSBPorts Method](#) to set the port mapping for a Single-Ended - Balanced topology.

VB Syntax `var = balTopology.SB_SEPort`

Variable [\(Type\)](#) - Description

`var` (Long Integer) Variable to store the returned value.

`balTopology` A [BalancedTopology](#) (**object**)

Return Type Long Integer

Default Not Applicable

Examples `variable = balTopology.SB_SEPort` 'Read

C++ Syntax HRESULT get_SB_SEPort(long *bVal)

Interface IBalancedTopology

SBalMeasurement Property

Description Sets and returns the measurement for the Single-Ended - Balanced topology.

VB Syntax *balMeas.SBalMeasurement* = *value*

Variable [\(Type\)](#) - [Description](#)

balMeas A [BalancedMeasurement](#) (object)

value **(String)** - Single-ended - Balanced Measurement parameter. Not case-sensitive. Choose from:

Sss11	Ssd12	Ssc12
Sds21	Sdd22	Sdc22
Scs21	Scd22	Sc22
Imb	CMRR1 (Sds21/Scs21)	CMRR2 (Ssd12/Ssc12)

Return Type Sss11

Default Not Applicable

Examples

```
balMeas.SBalMeasurement = "Ssd12" 'Write
variable = balMeas.SBalMeasurement 'Read
```

C++ Syntax HRESULT get_SBalMeasurement(BSTR *pVal)
HRESULT put_SBalMeasurement(BSTR newVal)

Interface IBalancedMeasurement

Scope Property

Description Sets or returns the scope of a trigger signal. This determines whether a trigger signal affects a single channel or all channels in the PNA.

Note: naGlobalTrigger is not compatible with TriggerMode = naTriggerModePoint. If you set Scope = naGlobalTrigger, any channel in naTriggerModePoint will be set to naTriggerModeMeasurement .

VB Syntax *trigsetup.Scope = value*

Variable [\(Type\)](#) - Description

trigsetup A [TriggerSetup](#) (object)

value **(enum NATriggerType)** - Trigger type. Choose from:
0 - naGlobalTrigger - a trigger signal is applied to all triggerable channels
1 - naChannelTrigger - a trigger signal is applied to the current channel. The next trigger signal will be applied to the next channel;not necessarily the next channel in numeric sequence (1-2-3-4 and so forth).

Return Type Long Integer

Default naGlobalTrigger

Examples

```
trigsetup.Scope = naGlobalTrigger 'Write
```

```
trigtyp = trigsetup.Scope 'Read
```

C++ Syntax HRESULT get_Scope(tagNATriggerType *pTrigger)
 HRESULT put_Scope(tagNATriggerType trigger)

Interface ITriggerSetup

SearchFunction Property

Description Emulates the Tracking function in the marker search dialog box. The value you choose for SearchFunction will determine the type of search that takes place when the [Tracking](#) property is set true.

The tracking function finds the selected search function every sweep. In effect, turning Tracking ON is the same as executing one of the "Search..." methods (such as SearchMin, SearchMax) for every sweep.

VB Syntax *mark.SearchFunction = value*

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

value (**enum NAMarkerFunction**) - search function. Choose from:

- 0 - naMarkerFunction_None
- 1 - naMarkerFunction_Min
- 2 - naMarkerFunction_Max
- 3 - naMarkerFunction_Target
- 4 - naMarkerFunction_NextPeak
- 5 - naMarkerFunction_PeakRight
- 6 - naMarkerFunction_PeakLeft

Return Type Long Integer

Default 0 - naMarkerFunction_None

Examples `mark.SearchFunction = naMarkerFunction_Target 'When this marker is set to track, it will track the Target value.`

`searchfunction = mark.SearchFunction 'Read`

C++ Syntax HRESULT get_SearchFunction(tagNAMarkerFunction *pVal)
HRESULT put_SearchFunction(tagNAMarkerFunction newVal)

Interface IMarker

SecurityLevel Property

Description Controls the display of frequency information on the PNA screen and printouts.

VB Syntax `app.SecurityLevel value`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

value (**enum NASecurityLevel**) -Choose from:

0 - naNoSecurity ALL frequency information is displayed.

1 - naLowSecurity NO frequency information is displayed. Frequency information can be redisplayed using the Security Setting dialog box or this command.

2 - naHighSecurity LOW setting plus [GPIB console](#) is disabled. Frequency information can be redisplayed ONLY by performing a Preset, recalling an instrument state with None or Low security settings, or using this command.

3 - naExtraSecurity HIGH setting plus [ASCII data saving](#) is disabled. Same method to redisplay frequency information as HIGH setting.

Return Type Long Integer

Default 0 - None

Examples `app.SecurityLevel = naLowSecurity 'Write`

`level = app.SecurityLevel 'Read`

C++ Syntax `HRESULT get_NASecurityLevel(tagNASecurityLevel *level);
HRESULT put_NASecurityLevel(tagNASecurityLevel level);`

Interface IApplication4

Last Modified:

17-Jul-2007 Add Extra level

SegmentNumber Property

Description Returns the number of the current segment, PowerSensorCalFactorSegment or PowerLossSegment object.

VB Syntax `seg.SegmentNumber`

Variable [\(Type\)](#) - [Description](#)

`seg` **(object)** - A Segment, PowerSensorCalFactorSegment or PowerLossSegment. Get a handle to the object by referring to the item in the appropriate collection (Segments, CalFactorSegments or PowerLossSegments).

Return Type Long Integer

Default Not Applicable

Examples `segNum = seg.SegmentNumber 'returns the segment number -Read`

C++ Syntax HRESULT get_SegmentNumber(long *pVal)

Interface ISegment
IPowerSensorCalFactorSegment
IPowerLossSegment

SelectPort Property

Description Sets and returns a port mapping for a single port. If this command creates a conflict with an existing port, the PNA will resolve the conflict.

Note: This command is currently not supported for the Z5623AK44.

VB Syntax *tset.SelectPort(chNum, portNum) = portValue*

Variable [\(Type\)](#) - Description

tset A [TestsetControl](#) object.

chNum **(Long)** Channel number of the measurement.

portNum **(Long)** Physical port number to map.

portValue **(Long) Logical** port value to assign

Return Type Long

Default Not Applicable

Examples [See External Testset Program](#)

C++ Syntax HRESULT get_SelectPort(long channelNum, long PortNum long *outPort);
HRESULT put_SelectPort(long channelNum, long PortNum long outPort);

Interface ITestsetControl

ShowStatistics Property

Description Displays and hides the measurement (Trace) statistics (peak-to-peak, mean, standard deviation) on the screen. To display measurement statistics for a narrower band of the X-axis, use [StatisticsRange](#).

The analyzer will display either measurement statistics or Filter Bandwidth statistics; not both.

VB Syntax *meas.ShowStatistics = value*

Variable [\(Type\)](#) - Description

meas A Measurement (**object**)

value (**boolean**) - Boolean value:

True - Show statistics

False - Hide statistics

**Return
Type** Boolean

Default **False**

Examples `meas.ShowStatistics = True 'Write`

`showstats = meas.ShowStatistics 'Read`

C++ Syntax HRESULT put_ShowStatistics(VARIANT_BOOL bState)

Interface IMeasurement

ShowProperties Property

Description Turns ON and OFF the display of the test set control status bar. This status bar indicates the test set that is being controlled and the current port mappings.

This setting is turned ON and OFF automatically when the test set is enabled or disabled.

VB Syntax *tset*.**ShowProperties** = *value*

Variable [\(Type\)](#) - Description

tset A [TestsetControl](#) object.

OR

An [E5091Testset](#) object.

value **(Boolean)**

True - Turns display of testset properties ON.

False - Turns display of testset properties OFF.

Return Type Boolean

Default **False** (True when test set control is enabled.)

Examples [See E5091A Example Program](#)

[See External Testset Program](#)

C++ Syntax HRESULT get_ShowProperties(VARIANT_BOOL *state);
HRESULT put_ShowProperties(VARIANT_BOOL state);

Interface IE5091Testsets
ITestsetControl

SICTL Property

Description Allows you to control the PNA via SICTL (standard instrument control library). In this mode, the analyzer can receive SCPI commands from the LAN interface or from a program residing on the PNA itself. This command performs the same function as the [SICTL / GPIB](#) dialog box - **SICTL Enabled** checkbox. [See Configuring the analyzer for SICTL/VISA](#).

With this method you can augment a test program written using SICTL that resides on the PNA so that it will run unattended. An automation script can be written to start the PNA, enable SICTL (using the SICTL property), and then start the SICTL based program.

VB Syntax *app.SICTL value*

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

value **(Boolean)** Choose from:

True - enable SICTL

False - disable SICTL

Return Type Boolean

Default False

Examples

```
Dim Pna as AgilentPNA835x.Application
Dim sictlState as Boolean
Set Pna = CreateObject("AgilentPNA835x.Application")
Pna.SICTL = true           'write
```

```
sictlState = Pna.SICTL     'Read
```

C++ Syntax HRESULT get_SICTL(VARIANT_BOOL *pVal)
 HRESULT put_SICTL(VARIANT_BOOL newVal)

Interface IApplication5

SICLAddress Property

Description Sets and returns the PNA SICL address. This is the address used for SICL over LAN.

VB Syntax `app.SICLAddress = value`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

value (Integer) SICL Address of the PNA. Choose a value between 0 and 30.

Return Type Short Integer

Default 16

Examples `address=app.SICLAddress 'Read`

`app.SICLAddress=16 'Write`

C++ Syntax HRESULT get_SICLAddress(short busIndex, short* address);
HRESULT put_SICLAddress(short busIndex,short address);

Interface IApplication8

Simultaneous2PortAcquisition Property

Description	<p>Specifies whether a 2-port calibration will be done with a single set of standards (one port at a time) or with two sets of standards (simultaneously).</p> <p>The AcquireCalStandard2 command uses the same standard index for each calibration class. To specify the calibration standard gender for each port, you must first ensure that the order of calibration class accurately reflects the configuration of your DUT. For example, for a DUT with a male connector on port 1 and a female connector on port 2, order the devices within the S11 classes (A, B, and C) such that the MALE standards are first in the list. Then order the S22 classes specifying the FEMALE standards as the first in the list.</p>
VB Syntax	<code>cal.Simultaneous2PortAcquisition = state</code>
Variable	(Type) - Description
<code>cal</code>	A Calibrator (object)
<code>state</code>	(boolean) - Choose from: True - measures 2 ports simultaneously False - measures 1 port at a time
Return Type	Boolean
Default	True
Examples	<code>cal.Simultaneous2PortAcquisition = True</code>
C++ Syntax	<code>HRESULT put_Simultaneous2PortAcquisition(VARIANT_BOOL bTwoSetsOfStandards)</code> <code>HRESULT Simultaneous2PortAcquisition(VARIANT_BOOL *bTwoSetsOfStandards)</code>
Interface	ICalibrator

Last modified:

- 9/20/06 Changed default to True
- 9/12/06 Modified for cross-browser

SmoothingAperture Property

Description Specifies or returns the amount of smoothing as a ratio of the number of data points in the measurement trace.

There is no COM command for specifying smoothing by number of aperture points.

VB Syntax *meas.SmoothingAperture = value*

Variable [\(Type\)](#) - Description

meas A [Measurement](#) (object)

value **(double)** - Smoothing Aperture. A ratio of (aperture points / trace points). Choose any number between **.01** and **.25**.

Return Type Double

Default .25

Examples `meas.SmoothingAperture = .10 'Write`

`saperture = meas.SmoothingAperture 'Read`

C++ Syntax HRESULT get_SmoothingAperture(double *pVal)
HRESULT put_SmoothingAperture(double newVal)

Interface IMeasurement

Last modified:

Oct. 25, 2006 Fixed formula for smoothing

Smoothing Property

Description Turns ON and OFF data smoothing.

VB Syntax *meas.Smoothing = state*

Variable [\(Type\)](#) - Description

meas A Measurement **(object)**

state **(boolean)**
True - Turns smoothing ON
False - Turns smoothing OFF

Return Type Boolean

Default **False**

Examples `meas.Smoothing = False 'Write`

`smooth = meas.Smoothing 'Read`

C++ Syntax HRESULT get_Smoothing(VARIANT_BOOL *pVal)
HRESULT put_Smoothing(VARIANT_BOOL newVal)

Interface IMeasurement

SnPFormat Property

Description Specifies the format of .SnP files.

Use either app.[Save](#) (saves data to file) or meas.[GetSnPData](#) (reads data into variant array).

VB Syntax *pref.SnPFormat = value*

Variable [\(Type\)](#) - Description

pref A [Preferences](#) (object)

value **(string)** - Format of the .S1P, .S2P, .S3P, .S4P data. Choose from:

"MA" - Linear Magnitude / degrees

"DB" - Log Mag / degrees

"RI" - Real / Imaginary

"Auto" - Format in which the trace is already displayed. If other than Log Mag, Linear Magnitude, or Real/Imag, then the format will be in Real/Imag.

**Return
Type** String

Default "Auto"

Examples `pref.SnPFormat = "MA" 'Write`

`format = pref.SnPFormat 'Read`

C++ Syntax HRESULT get_SnPFormat(BSTR *Format)
HRESULT put_SnPFormat(BSTR Format)

Interface IPreferences

SoundOnFail Property

Description Turns ON or OFF the audio indicator for limit failures.

VB Syntax *limitst*.SoundOnFail = *state*

Variable [\(Type\)](#) - Description

limitst A LimitTest **(object)**

state **(boolean)**

False - Turns the sound OFF

True - Turns the sound ON

Return Type Long Integer

Default **True**

Examples `Limttest.SoundOnFail = False 'Write`

`sound = Limttest.SoundOnFail 'Read`

C++ Syntax HRESULT get_SoundOnFail(VARIANT_BOOL *pVal)
 HRESULT put_SoundOnFail(VARIANT_BOOL newVal)

Interface ILimitTest

SourceCount Property

Description Returns the number of sources in the remote PNA.

VB Syntax *value* = *cap*.**SourceCount**

Variable [\(Type\)](#) - **Description**

value (Long) - Variable to store the returned number of sources.

cap A [Capabilities](#) (**object**)

Return Type Long

Default Not Applicable

Examples `value = cap.SourceCount 'Read`

C++ Syntax HRESULT get_SourceCount(long * sourceCount);

Interface ICapabilities

Read-only

SourcePort Property

Description Returns the source port of measurement. To understand how this property is useful, see [IMeasurement2 Interface](#).

VB Syntax *value* = *meas*.**SourcePort**

Variable [\(Type\)](#) - Description

meas A Measurement **(object)**

value **(Long)** - Variable to store the returned value

Return Type Long Integer

Default Not Applicable

Examples `sp = meas.SourcePort`

C++ Syntax HRESULT SourcePort([out, retval] Long* srcPort);

Interface IMeasurement2

SourcePortCount Property

Description Returns the number of ports that can output a signal.
To learn more, see [Remotely Specifying a Source Port](#).

VB Syntax *value* = *cap*.SourcePortCount

Variable [\(Type\)](#) - Description

value (Long) - Variable to store the returned integer value of the number of source ports.

cap A [Capabilities](#) (object)

Return Type Long

Default Not Applicable

Examples `value = cap.SourcePortCount 'Read`

C++ Syntax HRESULT get_SourcePortCount(long * count);

Interface ICapabilities4

Last Modified:

14-Jan-2007 MX New topic

SourcePortMode Property

Description Sets the state of the PNA source for the specified port.

VB Syntax *chan.SourcePortMode (sourcePort) = value*

Variable [\(Type\)](#) - [Description](#)

chan **(object)** - A [Channel](#) object

sourcePort **(long integer)** - The source port for which to make this setting.

Use [GetPortNumber](#) to return the port number of a source that only has a string name, such as an [External Source](#).

value **(enum)** - State of the source. Choose from:

0 - naSourcePortAuto Port power is turned on when required for a measurement.

1 - naSourcePortOn Port power is always ON, regardless of the measurement.

2 - naSourcePortOff Port power is always OFF, regardless of the measurement.

Note: ON and OFF are valid only on PNA models with two sources.

Return Type Enum

Default 0 - naSourcePortAuto

Examples

```
chan.SourcePortMode(1) = naSourcePortOn 'Write
state = chan.SourcePortMode(4) 'Read
```

C++ Syntax HRESULT get_SourcePortMode(long sourcePort, enum NASourcePortMode*);
 HRESULT put_SourcePortMode(long sourcePort, enum NASourcePortMode);

Interface IChannel9

Last modified:

April 30, 2007 Edited for src strings

10/18/06 MQQ New topic

SourcePortNames Property

Description Returns the string names of ports that can output a signal.

The following is a list of string names for the PNA-X. Your PNA will NOT have all of these ports. Use [GetPortNumber Method](#) to return the correct port number for the specified port name.

- "Port 1"
- "Port 2"
- "Port 3"
- "Port 4"
- "Src2 Out1"
- "Src2 Out2"
- "Port 1 Src2"

This command also lists the [External Sources](#) that are currently configured and selected.

To learn more, see [Remotely Specifying a Source Port](#).

VB Syntax *value* = *cap*.SourcePortNames

Variable [\(Type\)](#) - Description

value (Variant array) - Variable to store the returned integer value of the number of source ports.

cap A [Capabilities](#) (object)

Return Type Variant array of string names.

Default Not Applicable

Examples `value = cap.SourcePortNames 'Read`

C++ Syntax HRESULT get_SourcePortNames(VARIANT *names) ;

Interface ICapabilities4

Last Modified:

23-Jul-2007 Clarification

14-Jan-2007 MX New topic

Source Property

Description Sets or returns the source of triggering in the PNA.

VB Syntax *trigSetup.Source = value*

Variable [\(Type\)](#) - Description

trigSetup A [TriggerSetup](#) (object)

value (enum NATriggerSource) - Choose from:

0 - naTriggerSourceInternal - free run

1 - naTriggerSourceManual - manual trigger source; use app.[ManualTrigger](#) to send a trigger signal.

2 - naTriggerSourceExternal - a trigger signal is generated when a trigger signal is sensed on the [external trigger pin](#) of the Aux IO connector. Use [ExternalTriggerConnectionBehavior](#) to configure the characteristics of the external trigger signal.

This setting has implications on Calibration. [Learn more.](#)

Return Type Long Integer

Default naTriggerSourceInternal

Examples `trigSetup.Source = naTriggerSourceInternal 'Write`

`trigsource = trigSetup.Source 'Read`

C++ Syntax HRESULT get_Source(tagNATriggerSource *pTrigger);
 HRESULT put_Source(tagNATriggerSource trigger);

Interface ITriggerSetup

SourcePowerCalPowerOffset Property

Description Sets or returns a power level offset from the PNA test port power. This can be a gain or loss value (in dB) to account for components you connect between the source and the reference plane of your measurement. For example, specify 10 dB to account for a 10 dB amplifier at the input of your DUT.

Cal power is the sum of the test port power setting and this offset value. Following the calibration, the PNA power readouts are adjusted to the cal power.

This property performs the same function as the power offset argument on [SetCallInfoEx Method](#), except that this property can read the offset value.

VB Syntax *chan*.SourcePowerCalPowerOffset (*sourcePort*) = *value*

Variable [\(Type\)](#) - [Description](#)

chan **(object)** - A [Channel](#) object

sourcePort **(long integer)** - The source port for which to set this power offset value.

value **(double)** - Gain or loss value in dB. Choose a value between -200 and 200.

Return Type Double

Default 0 dB

Examples

```
chan.SourcePowerCalPowerOffset(1) = 10 'Write
offset = chan.SourcePowerCalPowerOffset(2) 'Read
```

C++ Syntax HRESULT get_SourcePowerCalPowerOffset(long sourcePort, double *pVal);
 HRESULT put_SourcePowerCalPowerOffset(long sourcePort, double newVal);

Interface IChannel4

Last Modified:

1-May-2007 Modified link to EX method.

SourcePowerCorrection Property

Description Sets source power correction ON or OFF for a specific source port on this channel, or returns the current ON or OFF state of correction for that source port.

VB Syntax *chan*.**SourcePowerCorrection** (*srcPort*) = *value*

Variable [\(Type\)](#) - Description

chan **(object)** – A Channel object

srcPort **(long integer)** – Source port for which to set or return the ON or OFF state of source power correction.

Use [GetPortNumber](#) to return the port number of a source that only has a string name, such as an [External Source](#).

value **(boolean)**

False – Turns source power correction OFF for the source port.

True – Turns source power correction ON for the source port.

Return Type Boolean

Default False - Source power correction will turn correction ON

Examples

```
chan.SourcePowerCorrection(1) = False 'Write
calOnPort2 = chan.SourcePowerCorrection(2) 'Read
```

C++ Syntax HRESULT put_SourcePowerCorrection(VARIANT_BOOL bState);
 HRESULT get_SourcePowerCorrection(VARIANT_BOOL *bState);

Interface IChannel

Last Modified:

30-Apr-2007 Modified for src strings

SourcePowerOption Property

Description Enables the source power to be set on individual sweep segments. This property must be set True **before** seg.TestPortPower = *value* is sent. Otherwise, the test port power command will be ignored.

VB Syntax *segs.SourcePowerOption* = *state*

Variable [\(Type\)](#) - Description

segs A Segments collection (**object**)

state (**boolean**)

True - Enables variable TestPortPower to be set segment sweep

False - Disables variable TestPortPower to be set segment sweep

Return Type Boolean

Default False

Examples `segs.SourcePowerOption = True 'Write`

`powerOption = SourcePowerOption 'Read`

C++ Syntax HRESULT get_SourcePowerOption(VARIANT_BOOL *pVal)
HRESULT put_SourcePowerOption(VARIANT_BOOL newVal)

Interface ISegments

SourcePowerState Property

Description Turns Source Power ON and OFF.

[See note about source power state with instrument state save and recall.](#)

VB Syntax `app.SourcePowerState = state`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

state (boolean)

False - Turns Source Power OFF

True - Turns Source Power ON

Return Type Boolean

Default True

Examples `app.SourcePowerState = True 'Write`

`pwr = app.SourcePowerState 'Read`

C++ Syntax HRESULT get_SourcePowerState(VARIANT_BOOL *pVal)
HRESULT put_SourcePowerState(VARIANT_BOOL newVal)

Interface IApplication

Span Property

Description	Sets or returns the Span time of either Gating or Time Domain transform windows
VB Syntax	<i>object</i> . Span = <i>value</i>
Variable	(Type) - Description
<i>object</i>	(object) As Gating or (object) As Transform
<i>value</i>	(double) - Span time in seconds. Choose any number between: 2*[(number of points-1) / frequency span] and 0
Return Type	Double
Default	20ns
Examples	<pre>Trans.Span = 4.5e-9 'sets the time span of a transform window -Write Gate.Span = 4.5e-9 'sets the Span time of a gating window -Write span = Trans.Span 'Read</pre>
C++ Syntax	HRESULT get_Span(double *pVal) HRESULT put_Span(double newVal)
Interface	ITransform IGating

Span Property

Description Returns the stimulus span of the measurement (stop-start data points). To understand how this property is useful, see [IMeasurement2 Interface](#).

VB Syntax *value* = *meas*.**Span**

Variable [\(Type\)](#) - **Description**

value **(Double)** - Variable to store the returned value.

meas A Measurement **(object)**

Return Type Double

Default Not Applicable

Examples `Print meas.Span 'prints the span of the measurement`

C++ Syntax HRESULT get_Span(double * Val);

Interface IMeasurement2

SSB_BalPortNegative Property

Description With a Single-ended - Single-ended - Balanced topology, returns the PNA port number that is connected to the Negative side of the DUT's Balanced Port.

Use [SetSSBPorts Method](#) to set the port mapping for a Single-Ended - Single-Ended - Balanced topology.

VB Syntax `var = balTopology.SSB_BalPortNegative`

Variable [\(Type\)](#) - Description

`var` (Long Integer) Variable to store the returned value.

`balTopology` A [BalancedTopology](#) (**object**)

Return Type Long Integer

Default Not Applicable

Examples `variable = balTopology.SSB_BalPortNegative` 'Read

C++ Syntax HRESULT get_SSB_BalPortNegative(long *bVal)

Interface IBalancedTopology

SSB_BalPortPositive Property

Description With a Single-ended - Single-ended - Balanced topology, returns the PNA port number that is connected to the Positive side of the DUT's Balanced Port.

Use [SetSSBPorts Method](#) to set the port mapping for a Single-Ended - Single-Ended - Balanced topology.

VB Syntax `var = balTopology.SSB_BalPortPositive`

Variable [\(Type\)](#) - Description

`var` (Long Integer) Variable to store the returned value.

`balTopology` A [BalancedTopology](#) (**object**)

Return Type Long Integer

Default Not Applicable

Examples `variable = balTopology.SSB_BalPortPositive` 'Read

C++ Syntax HRESULT get_SSB_BalPortPositive(long *bVal)

Interface IBalancedTopology

SSB_SEPort1 Property

Description With a Single-ended - Single-ended - Balanced topology, returns the PNA port number that is connected to the DUT's Logical Port 1.

Use [SetSSBPorts Method](#) to set the port mapping for a Single-Ended - Single-Ended - Balanced topology.

VB Syntax `var = balTopology.SSB_SEPort1`

Variable [\(Type\)](#) - Description

`var` (Long Integer) Variable to store the returned value.

`balTopology` A [BalancedTopology](#) (**object**)

Return Type Long Integer

Default Not Applicable

Examples `variable = balTopology.SSB_SEPort1` 'Read

C++ Syntax HRESULT get_SSB_SEPort1(long *bVal)

Interface IBalancedTopology

SSB_SEPort2 Property

Description With a Single-ended - Single-ended - Balanced topology, returns the PNA port number that is connected to the DUT's Logical Port 2.

Use [SetSSBPorts Method](#) to set the port mapping for a Single-Ended - Single-Ended - Balanced topology.

VB Syntax `var = balTopology.SSB_SEPort2`

Variable [\(Type\)](#) - Description

`var` (Long Integer) Variable to store the returned value.

`balTopology` A [BalancedTopology](#) (**object**)

Return Type Long Integer

Default Not Applicable

Examples `variable = balTopology.SSB_SEPort2` 'Read

C++ Syntax HRESULT get_SSB_SEPort2(long *bVal)

Interface IBalancedTopology

SSBMeasurement Property

Description Sets and returns the measurement for the Single-Ended - Single-Ended - Balanced topology.

VB Syntax *balMeas*.SSBMeasurement = *value*

Variable [\(Type\)](#) - [Description](#)

balMeas A [BalancedMeasurement](#) (object)

value **(String)** - Single-ended - Single-ended - Balanced Measurement parameter. Not case sensitive. Choose from:

Sss11	Sss12	Ssd13	Scs13
Sss21	Sss22	Ssd23	Scs23
Sds31	Sds32	Sdd33	Sdc33
Scs31	Scs32	Scd33	Scs33
lmb1	lmb2	CMRR1 (Sds31/Scs31)	CMRR2 (Sds32/Scs32)

Return Type String

Default Sss11

Examples

```
balMeas.SSBMeasurement = "Sss11" 'Write
variable = balMeas.SSBMeasurement 'Read
```

C++ Syntax HRESULT get_SSBMeasurement(BSTR *pVal)
HRESULT put_SSBMeasurement(BSTR p newVal)

Interface IBalancedMeasurement

Stage1Coefficients Property

Description Sets and returns the digital filter coefficients of stage1.

VB Syntax `spm4.Stage1Coefficients = value`

Variable [\(Type\)](#) - Description

`spm4` A [SignalProcessingModuleFour](#) (object)

`value` **(Variant Array)** Coefficients. An array of real values.

Return Type Variant

Default Stage dependent.

Examples `spm4.Stage1Coefficients = 0,0.1,0.7,0.7,0.1 'Write`
`mode = spm4.Stage1Coefficients 'Read`

C++ Syntax HRESULT get_Stage1Coefficients(VARIANT* pCoefs);
HRESULT put_Stage1Coefficients(VARIANT pCoefs);

Interface ISignalProcessingModuleFour

Last Modified:

18-Jun-2007 MX New topic

Stage1Frequency Property

Description Sets and returns the Numerically Controlled Oscillator (NCO) frequency of the Stage 1 filter. This command is only used when [FilterMode Property](#) is set to Manual.

VB Syntax `spm4.Stage1Frequency = value`

Variable [\(Type\)](#) - Description

`spm4` A [SignalProcessingModuleFour](#) (object)

`value` **(Double)** Stage 1 Frequency. Min value= 0 Hz, Max value= 15 MHz. Or programmatically use [MinimumIFFrequency Property](#) and [MaximumIFFrequency Property](#) to determine the range of settable values.

Return Type Double

Default 9 MHz

Examples `spm4.Stage1Frequency = 9E6 'Write`

`mode = spm4.Stage1Frequency 'Read`

C++ Syntax `HRESULT get_Stage1Frequency(double *val);`
`HRESULT put_Stage1Frequency(double val);`

Interface ISignalProcessingModuleFour

Last Modified:

18-Jun-2007 MX New topic

Stage1MaximumCoefficient Property

Description Returns the maximum value of any single coefficient.

VB Syntax *value* = *spm4*.**Stage1MaximumCoefficient**

Variable [\(Type\)](#) - Description

value **(Long)** Variable to store the returned Max coefficient.

spm4 A [SignalProcessingModuleFour](#) **(object)**

Default Not Applicable

Examples

```
mode = spm4.Stage1MaximumCoefficient
'Read
```

C++ Syntax HRESULT get_Stage1MaximumCoefficient(long* val);

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage1MaximumCoefficientCount Property

Description Returns the maximum number of coefficients for Stage1.

VB Syntax *value* = *spm4*.**Stage1MaximumCoefficientCount**

Variable [\(Type\)](#) - Description

value **(Long)** Variable to store the returned Max coefficient count.

spm4 A [SignalProcessingModuleFour](#) **(object)**

Default Not Applicable

Examples

```
mode = spm4.Stage1MaximumCoefficientCount
'Read
```

C++ Syntax HRESULT get_Stage1MaximumCoefficientCount(long* val);

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage1MaximumCoefficientSum Property

Description Returns the maximum sum of all Stage1 coefficients.

VB Syntax *value* = *spm4*.**Stage1MaximumCoefficientSum**

Variable [\(Type\)](#) - Description

value (**__int64* val**) Variable to store the returned Max sum of all coefficients.

spm4 A [SignalProcessingModuleFour](#) (**object**)

Default Not Applicable

Examples `mode = spm4.Stage1MaximumCoefficientSum 'Read`

C++ Syntax HRESULT get_Stage1MaximumCoefficientSum(__int64* val);

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage1MinimumCoefficientCount Property

Description Returns the minimum number of coefficients for Stage1

VB Syntax *value* = *spm4*.**Stage1MinimumCoefficientCount**

Variable [\(Type\)](#) - Description

value **(Long)** Variable to store the returned Min coefficient count.

spm4 A [SignalProcessingModuleFour](#) **(object)**

Default Not Applicable

Examples

```
mode = spm4.Stage1MinimumCoefficientCount
'Read
```

C++ Syntax HRESULT get_Stage1MinimumCoefficientCount(long* val);

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage2Coefficients Property

Description Sets and returns Stage2Coefficients.

VB Syntax `spm4.Stage2Coefficients = value`

Variable [\(Type\)](#) - Description

`spm4` A [SignalProcessingModuleFour](#) (object)

`value` **(Variant)** An array of real numbers. Filter coefficients

Return Type Variant

Default Not Applicable

Examples `spm4.Stage2Coefficients = 'Write`

`mode = spm4.Stage2Coefficients 'Read`

C++ Syntax HRESULT get_Stage2Coefficients(VARIANT* pCoefs);
HRESULT put_Stage2Coefficients(VARIANT pCoefs);

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage2MaximumCoefficient Property

Description Returns the maximum value of any single coefficient.

VB Syntax *value* = *spm4*.**Stage2MaximumCoefficient**

Variable [\(Type\)](#) - Description

value **(Long)** Variable to store the returned Max coefficient.

spm4 A [SignalProcessingModuleFour](#) **(object)**

Default Not Applicable

Examples

```
mode = spm4.Stage2MaximumCoefficient
'Read
```

C++ Syntax HRESULT get_Stage2MaximumCoefficient(long* val);

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage2MaximumCoefficientCount Property

Description Returns the maximum number of coefficients for Stage2

VB Syntax *value* = *spm4*.**Stage2MaximumCoefficientCount**

Variable [\(Type\)](#) - Description

value **(Long)** Variable to store the returned Max coefficient count.

spm4 A [SignalProcessingModuleFour](#) **(object)**

Default Not Applicable

Examples

```
mode = spm4.Stage2MaximumCoefficientCount
'Read
```

C++ Syntax HRESULT get_Stage2MaximumCoefficientCount(long* val);

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage2MaximumCoefficientSum Property

Description Returns the maximum sum of all Stage2 coefficients.

VB Syntax `value = spm4.Stage2MaximumCoefficientSum`

Variable [\(Type\)](#) - Description

value (**__int64* val**) Variable to store the returned Max sum of all coefficients.

spm4 A [SignalProcessingModuleFour](#) (**object**)

Default Not Applicable

Examples `mode = spm4.Stage2MaximumCoefficientSum 'Read`

C++ Syntax `HRESULT get_Stage2MaximumCoefficientSum(__int64* val);`

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage2MinimumCoefficientCount Property

Description Returns the minimum number of coefficients for Stage2

VB Syntax *value* = *spm4*.**Stage2MinimumCoefficientCount**

Variable [\(Type\)](#) - Description

value **(Long)** Variable to store the returned Min coefficient count.

spm4 A [SignalProcessingModuleFour](#) **(object)**

Default Not Applicable

Examples

```
mode = spm4.Stage2MinimumCoefficientCount
'Read
```

C++ Syntax HRESULT get_Stage2MinimumCoefficientCount(long* val);

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage3FilterType Property

Description Sets and returns the Stage 3 filter type. This command is only used when [FilterMode](#) is set to Manual.

VB Syntax `spm4.Stage3FilterType = value`

Variable [\(Type\)](#) - Description

spm4 A [SignalProcessingModuleFour](#) (object)

value (String) Filter type. Chose from:

- "RECT" Rectangular Window Filter
- "TUKEY" Tukey Filter
- "PWIN" Pulse window filter

Default TUKEY

Examples `spm4.Stage3FilterType = "PWIN"`

```
mode = spm4.Stage3FilterType 'Read
```

C++ Syntax HRESULT get_Stage3FilterType(BSTR* pFType);
HRESULT put_Stage3FilterType(BSTR GType);

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage3FilterTypes Property

Description Returns a list of strings for the currently supported filter types that can be used for the stage 3 filter. This command is only used when [FilterMode](#) is set to False (Manual). See [Stage3FilterType](#) for a list of currently supported filter types.

VB Syntax *values*= *spm4*.**Stage3FilterTypes**

Variable [\(Type\)](#) - Description

value **(Variant)** Variable to store the returned filter types.

spm4 A [SignalProcessingModuleFour](#) **(object)**

Return Type Variant Array

Default Not Applicable

Examples `mode = spm4.Stage3FilterTypes 'Read`

C++ Syntax HRESULT get_Stage3FilterTypes(VARIANT* pTypes);

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage3Parameter Property

Description Sets and returns the Stage 3 filter parameters.

Must first select the filter type using [Stage3FilterType](#) before setting these parameters

Use [Stage3Parameters](#) to return a list of the available parameters for the currently selected filter type.

VB Syntax `spm4.Stage3Parameter(param) = value`

Variable [\(Type\)](#) - Description

spm4 A [SignalProcessingModuleFour](#) (object)

param **(String)** Filter parameter. Choose from:

"C" - Tap count (Tukey, RECT, PWIN)

"P" - Period (PWIN ONLY)

"D" - Delay (PWIN ONLY)

"W" - Width (PWIN ONLY)

"R" - Ramp Count (PWIN ONLY)

value **(String)** Parameter Value for the specified stage 3 parameter. Use [Stage3ParameterMaximum](#) and [Stage3ParameterMinimum](#) to return a range of values for the specified parameter.

Default **RECT:** C = 1

PWIN: C=1E6, P=10ms, D=50us, W=50us, R=7

TUKEY: C=1

Examples `spm4.Stage3Parameter("C") = 2`

`mode = spm4.Stage3Parameter("pwin") 'Read`

C++ Syntax `HRESULT get_Stage3Parameter(BSTR pName, double* pVal);`

`HRESULT put_Stage3Parameter(BSTR pName, double pVal);`

Interface `ISignalProcessingModuleFour`

Last Modified:

1-Jan-2007 MX New topic

Stage3ParameterMaximum Property

Description Returns maximum parameter value for the current filter type.

VB Syntax *values=* *spm4*.**Stage3ParameterMaximum** (*parameter*)

Variable [\(Type\)](#) - Description

value **(Variant)** Variable to store the maximum parameter value.

spm4 A [SignalProcessingModuleFour](#) **(object)**

parameter **(String)** Parameter name. See [Stage3Parameter Property](#) for a list of parameters.

Return Type Double

Default Not Applicable

Examples `mode = spm4.Stage3ParameterMaximum ("c") 'Read`

C++ Syntax HRESULT get_Stage3ParameterMaximum(BSTR pName, double* pVal);

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage3ParameterMinimum Property

Description Returns minimum parameter value for the current filter type.

VB Syntax *values=* *spm4*.**Stage3ParameterMinimum** (*parameter*)

Variable [\(Type\)](#) - Description

value **(Variant)** Variable to store the minimum parameter value.

spm4 A [SignalProcessingModuleFour](#) **(object)**

parameter **(String)** Parameter name. See [Stage3Parameter Property](#) for a list of parameters.

Return Type Double

Default Not applicable

Examples `mode = spm4.Stage3ParameterMinimum ("c") 'Read`

C++ Syntax HRESULT get_Stage3ParameterMinimum(BSTR pName, double* pVal);

Interface ISignalProcessingModuleFour

Last Modified:

1-Jan-2007 MX New topic

Stage3Parameters Property

Description Returns the names of parameters for the current filter type. Use [Stage3FilterType Property](#) to set the filter type.

VB Syntax *values*= *spm4*.**Stage3Parameters**

Variable [\(Type\)](#) - Description

value **(Variant)** Variable to store the returned parameter names.

spm4 A [SignalProcessingModuleFour](#) **(object)**

Return Type Variant

Default Not Applicable

Examples `mode = spm4.Stage3Parameters 'Read`

C++ Syntax HRESULT get_Stage3Parameters(VARIANT* pNames);

Interface ISignalProcessingModuleFour

Last Modified:

18-Jan-2007 MX New topic

StandardDeviation Property

Description Returns the standard deviation of the measurement.
To retrieve all 3 statistics value at the same time, use [meas.GetTraceStatistics](#)

VB Syntax *stdev* = *meas*.**StandardDeviation**

Variable [\(Type\)](#) - **Description**

stdev **(single)** - Variable to store standard deviation value

meas A Measurement **(object)**

Return Type Single

Default Not applicable

Examples `stdev = meas.StandardDeviation 'Read`

C++ Syntax HRESULT get_StandardDeviation(float* stdDeviation)

Interface IMeasurement

StandardForClass Property - Superseded

Description **Superseded** This command sets a **single** standard to a calibration class. Does NOT set or dictate the order for measuring the standards.

Use [GetStandardForClass](#) and [SetStandardForClass](#). These commands allow up to seven standards to be assigned to a cal class.

VB Syntax *calKit.StandardForClass(class, portNum) = value*

Variable [\(Type\)](#) - Description

calKit A CalKit (**object**). Use calKit.[GetCalStandard](#) to get a handle to the standard.

class (**enum NACalClass**) Standard. Choose from:

- 1 - naClassA
- 2 - naClassB
- 3 - naClassC
- 4 - naClassD
- 5 - naClassE
- 6 - naReferenceRatioLine
- 7 - naReferenceRatioThru

SOLT Standards

- 1 - naSOLT_Open
- 2 - naSOLT_Short
- 3 - naSOLT_Load
- 4 - naSOLT_Thru
- 5 - naSOLT_Isolation

TRL Standards

- 1 - naTRL_Reflection
- 2 - naTRL_Line_Reflection
- 3 - naTRL_Line_Tracking
- 4 - naTRL_Thru
- 5 - naTRL_Isolation

portNum **(long)** - The port number the standard will be connected to. For example, you may have a 3.5mm connector designated for port 1, and Type N designated for port 2.

value **(long)** - Calibration class number. Choose a number between **1** and **8**. The *<value>* numbers are associated with the following calibration classes:

<i><value></i>	Class	Description
1	S11A	Reflection standard
2	S11B	Reflection standard
3	S11C	Reflection standard
4	S21T	Thru standard
5	S22A	Reflection standard
6	S22B	Reflection standard
7	S22C	Reflection standard
8	S21T	Thru standard

Return Type Long Integer

Default Not Applicable

Examples `calKit.StandardForClass(naSOLT_Short, 1) = 1`

`Kclass = calKit.StandardForClass(naSOLT_Short, 1)`

C++ Syntax HRESULT put_StandardForClass (NACalClass item, long pNum);
HRESULT get_StandardForClass (NACalClass* item, long *pNum);

Interface ICalKit

StartFrequency (Cal Set) Property

Description Returns the start frequency that is stored in the Cal Set.

VB Syntax *value* = *CalSet*.**StartFrequency** (*range*)

Variable [\(Type\)](#) - **Description**

value **(double)** - returned Start frequency in Hertz.

CalSet [CalSet](#) **(object)**

range **(Long)** Choose from:
0 - Source and receiver frequency

Return Type Double

Default Not Applicable

Examples `start = calset.StartFrequency(1)` 'Reads the start frequency stored in the cal set.

C++ Syntax HRESULT get_StartFrequency(double *pVal)

Interface |CalSet3

Last modified:

Nov. 1, 2006 New command - split from ch.StartFreq

StartFrequency Property

Description Sets or returns the start frequency of the channel.
or
 Sets or returns the start frequency of the segment.
or
 Sets or returns the start frequency of the FOM Range.
 See also [Measurement2](#) interface

VB Syntax *object*.**StartFrequency** = *value*

Variable [\(Type\)](#) - Description

object Any of the following:

[Channel](#) (**object**)

[Segment](#) (**object**)

[FOMRange](#) (**object**)

value (**double**) - Start frequency in Hertz. Choose any number between the **minimum** and **maximum** frequencies of the analyzer.

Return Type Double

Default Channel - Minimum frequency of the analyzer
 Segment - 0
 FOMRange - Minimum frequency of the analyzer

Examples `chan.StartFrequency = 4.5e9 'sets the start frequency of a linear sweep for the channel object -Write`

`startfreq = Chan.StartFrequency 'Read`

C++ Syntax HRESULT get_StartFrequency(double *pVal)
 HRESULT put_StartFrequency(double newVal)

Interface IChannel
 ISegment
 IFOMRange

Last modified:

8-Mar-2007 Added FOMRange

Nov. 1, 2006 Removed Cal Set object. There is now a new [cs.StartFreq](#)

StartPower Property

Description Sets the start power of the analyzer when [sweep type](#) is set to Power Sweep. Frequency of the measurement is set with chan.[CWFrequency](#).

VB Syntax *object*.StartPower = *value*

Variable [\(Type\)](#) - Description

object One of the following:

- [Channel](#) (object)
- [FOMRange](#) (object) Range must be [UNCOUPLED](#). Only applies to source ranges; not receiver ranges.
- [CalSet](#) (object) - Read-only property

value **(double)** - Start Power in dBm.

Note: The range of settable power values depends on the PNA model and if source attenuators are installed. To determine the range of values, use [cap.MaximumSourceALCPower](#) and [cap.MinimumSourceALCPower](#)

Auto attenuation is not allowed in Power Sweep.

Return Type Double

Default 0

Examples `Chan.StartPower = -10 'Write`

`strtpwr = Chan.StartPower 'Read`

C++ Syntax HRESULT get_StartPower(double *pVal)
HRESULT put_StartPower(double newVal)

Interface IChannel
|CalSet3
IFOMRange

Last Modified:

8-Mar-2007 Added FOMRange

Start Property

Description Sets or returns the start time of either Gating or Time Domain transform windows

VB Syntax *object*.**Start** = *value*

Variable [\(Type\)](#) - Description

object **(object)** As Gating
or
(object) As Transform

value **(double)** - Start time in seconds. Choose any number between:
± (number of points-1) / frequency span

Return Type Double

Default -10ns

Examples

```
Trans.Start = 4.5e-9 'sets the start time of a transform window
-Write
Gate.Start = 4.5e-9 'sets the start time of a gating window -
Write
```

```
strt = Trans.Start 'Read
```

C++ Syntax HRESULT get_Start(double *pVal)
HRESULT put_Start(double newVal)

Interface ITransform
IGating

Start Property

Description Returns the stimulus value of the first data point for the measurement. To understand how this property is useful, see [IMeasurement2 Interface](#).

VB Syntax *value* = *meas*.**Start**

Variable [\(Type\)](#) - **Description**

value **(Double)** - Variable to store the returned value

meas A Measurement **(object)**

Return Type Double

Default Not Applicable

Examples `Print meas.Start` 'prints the stimulus value of the first data point

C++ Syntax HRESULT get_Start (double * Val);

Interface IMeasurement2

State Property

Description Turns an Object ON and OFF.

VB Syntax *object.State* = *value*

Variable [\(Type\)](#) - **Description**

object Applies to any of the following objects:

[FOM](#)

[Gating](#)

[InterfaceControl](#)

[LimitTest](#)

Port Extension- Superseded [\(See Fixturing Object\)](#)

[Segment](#)

[Transform](#)

[Equation](#)

Notes:

- **LimitTest.State** - If using Global Pass/Fail status, trigger the PNA AFTER turning Limit testing ON.
- **Segment.State** - At least ONE segment must be ON or [Sweep Type](#) is automatically set to **Linear**.

value **(boolean)** -

False - Turns *obj* OFF

True - Turns *obj* ON

Return Type Boolean

Default Depends on the object:

0 - FOM

0 - Gating

0 - InterfaceControl

0 - LimitTest

0 - Port Extension

1 - Segment

0 - Transform

0 - Equation

Examples `Seg.State = 1 'Turns the segment object ON -Write`

`tran = Trans.State 'returns the state of Transform -Read`

C++ Syntax `HRESULT get_State(VARIANT_BOOL *pVal)`
`HRESULT put_State(VARIANT_BOOL newVal)`

Interface `ISegment`
`IInterfaceControl`
`ITransform`
`IGating`
`ILimitTest`
`IPortExtension`
`IFOM`
`IEquation`
`IEmbeddedLO`

Last Modified:

13-Apr-2007 Added EmbeddedLO

State Property

Description Turns the specified pulse generator ON and OFF.

VB Syntax *pulse.State (n) = value*

Variable [\(Type\)](#) - Description

pulse A [PulseGenerator](#) (object)

n **(Integer)** Pulse generator number. Choose from 0 to 4.
0 is the generator that pulses the ADC.

value ON (or 1) - turns pulse output ON.
OFF (or 0) - turns pulse output OFF.

Return Type Boolean

Default OFF (0)

Examples `pulse.State(1) = True 'Write`

`value = pulse.State(4) 'Read`

C++ Syntax HRESULT get_State(integer pulse, bool* on_off);
HRESULT put_State(integer pulse, bool on_off);

Interface IPulseGenerator

Last Modified:

2-Jan-2007 MX New topic

Statistics Range Property

Description Sets the User Range number for calculating measurement statistics. Set the start and stop values for a User Range with [chan.UserRangeMin](#) and [chan.UserRangeMax](#).

There are 16 User Ranges per channel. User ranges are applied independently to any measurement.

VB Syntax *meas.StatisticsRange* = *value*

Variable [\(Type\)](#) - Description

meas A Measurement (**object**)

value (**long integer**) - Range Number. Choose any number between 0 and 16

0 is Full Span

1 - 16 are user-defined ranges

**Return
Type** Long Integer

Default 0

Examples `meas.StatisticsRange = 2 'Write`

`statrange = meas.StatisticsRange 'Read`

C++ Syntax HRESULT get_StatisticsRange(long* rangeNumber)
HRESULT put_StatisticsRange(long rangeNumber)

Interface IMeasurement

StatusAsString Property

Description Returns a string that describes the result of the last tuning sweeps.

VB Syntax *value* = *embedLODiag*.**StatusAsString**

Variable [\(Type\)](#) - **Description**

value **(String)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) (**object**)

Return Type **(String)**

Default Not Applicable

Examples `data= embedLO.StatusAsString 'read`

C++ Syntax HRESULT get_StatusAsString(BSTR* status);

Interface IEmbeddedLODiagnostic

Last Modified:

12-Apr-2007 MX New topic

StepRiseTime Property

Description Sets or returns the Rise time of the stimulus in Low Pass Step Mode.

VB Syntax *trans*.**StepRiseTime** = *value*

Variable [\(Type\)](#) - Description

trans A Transform (**object**)

value (**double**) - Rise time in seconds. Choose any number between **5.0e-13** and **1.63e-14**.

Return Type Double

Default 0

Examples `trans.StepRiseTime = 1.0e-14 'sets the step rise time to 100
psec. -Write`

`rt = trans.StepRiseTime 'Read`

C++ Syntax HRESULT get_StepRiseTime(double *pVal)
HRESULT put_StepRiseTime(double newVal)

Interface ITransform

StepData Property

Description Returns an array of data from the specified tuning sweep.

VB Syntax *value* = *embedLODiag*.**StepData** (*n*)

Variable [\(Type\)](#) - **Description**

value **(Variant Array)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) (**object**)

n (Long) Tuning sweep number. Use [NumberOfSweeps](#) to find the number of sweeps taken.

Default Not Applicable

Examples `data= embedLO.StepData 3 'read`

C++ Syntax HRESULT StepData(long sweep,VARIANT* pArray);

Interface IEmbeddedLODiagnostic

Last Modified:

12-Apr-2007 MX New topic

StepTitle Property

Description Returns the title of the specified tuning sweep.

VB Syntax *value* = *embedLODiag*.**StepTitle** (*n*)

Variable [\(Type\)](#) - Description

value **(String)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) (**object**)

n (Long) Tuning sweep number. Use [NumberOfSweeps](#) to find the number of sweeps taken.

Default Not Applicable

Examples `data= embedLO.StepTitle 3 'read`

C++ Syntax HRESULT StepTitle (long sweep, BSTR * title);

Interface IEmbeddedLODiagnostic

Last Modified:

13-Apr-2007 MX New topic

StimulusValues Property

Description Returns multiple X-axis frequency arrays (source and response) needed by frequency offset measurements. The arrays contain one frequency value for each data point.

VB Syntax *value* = *calSet*.**StimulusValues** (*range*)

Variable [\(Type\)](#) - [Description](#)

calSet [CalSet](#) (**object**)

range **(Long)**
Specify **0** to return source frequencies.
Specify **1** to return response frequencies.

Return Type 1-dimensional variant array

Default Not Applicable

Examples `array = CalSet.StimulusValues 'Read`

C++ Syntax HRESULT get_StimulusValues (long range, VARIANT* vals)

Interface ICalSet3

Last Modified:

19-Oct-2007 Fixed title and syntax

StopFrequency Property

Description Sets or returns the stop frequency of the channel
or
 Sets or returns the stop frequency of the segment.
or
 Sets or returns the stop frequency of the FOMRange.
 see also [Measurement2](#) interface

VB Syntax *object*.**StopFrequency** = *value*

Variable [\(Type\)](#) - Description

object Any of the following:

[Channel](#) (**object**)

[Segment](#) (**object**)

[FOMRange](#) (**object**)

value (**double**) - Stop frequency in Hertz. Choose any number between the **minimum** and **maximum** frequencies of the analyzer.

**Return
Type** Double

Default Channel - Maximum frequency of the analyzer.
 Segment - 0
 FOMRange - Maximum frequency of the analyzer.

Examples `chan.StopFrequency = 4.5e9 'sets the stop frequency for the channel
 object -Write`

`stopfreq = Chan.StopFrequency 'Read`

C++ Syntax HRESULT get_StopFrequency(double *pVal)
 HRESULT put_StopFrequency(double newVal)

Interface IChannel
 ISegment
 IFOMRange

Last modified:

8-Mar-2007 Added FOMRange

Nov. 1, 2006 Removed Cal Set object - created cs.stopfreq

StopFrequency (Cal Set) Property

Description Returns the stop frequency that is stored in the Cal Set.

VB Syntax *value* = *CalSet*.**StopFrequency** (*range*)

Variable [\(Type\)](#) - **Description**

value **(double)** - returned Stop frequency in Hertz.

CalSet [CalSet](#) **(object)**

range **(Long)** Choose from:
0 - Source and receiver frequency

Return Type Double

Default Not Applicable

Examples `stop = calset.StopFrequency(1)` 'Reads the stop frequency stored in the cal set.

C++ Syntax HRESULT get_StopFrequency(double *pVal)

Interface |CalSet3

Last modified:

Nov. 1, 2006 New command - split from ch.StopFreq

StopPower Property

Description Sets the Stop Power of the analyzer when [sweep type](#) is set to Power Sweep. Frequency of the measurement is set with [chan.CWFrequency](#).

VB Syntax *object*.**StopPower** = *value*

Variable [\(Type\)](#) - **Description**

object One of the following:

- [Channel](#) (object)
- [FOMRange](#) (object) Range must be [UNCOUPLED](#). Only applies to source ranges; not receiver ranges.
- [CalSet](#) (object) - Read-only property

value **(double)** - Stop Power in dB. Start Power in dB.

Note: The range of settable power values depends on the PNA model and if source attenuators are installed. To determine the range of values, use [cap.MaximumSourceALCPower](#) and [cap.MinimumSourceALCPower](#)

Auto attenuation is not allowed in Power Sweep.

Return Type Double

Default 0

Examples `Chan.StopPower = -10 'Write`

`stppwr = Chan.StopPower 'Read`

C++ Syntax HRESULT get_StopPower(double *pVal)
HRESULT put_StopPower(double newVal)

Interface IChannel
|CalSet3
IFOMRange

Last Modified:

8-Mar-2007 Added FOMRange

Stop Property

Description Sets or returns the Stop time of either Gating or Time Domain transform windows

VB Syntax *object*.**Stop** = *value*

Variable [\(Type\)](#) - Description

object **(object)** As Gating
or
(object) As Transform

value **(double)** - Start time in seconds. Choose any number between:
± (number of points-1) / frequency span

Return Type Double

Default 10 ns

Examples

```
Trans.Stop = 4.5e-9 'sets the stop time of a transform window -Write
Gate.Stop = 4.5e-9 'sets the stop time of a gating window -Write

stp = Trans.Stop 'Read
```

C++ Syntax HRESULT get_Stop(double *pVal)
HRESULT put_Stop(double newVal)

Interface ITransform
IGating

Stop Property

Description Returns the stimulus value of the last data point for the measurement. To understand how this property is useful, see [IMeasurement2 Interface](#).

VB Syntax *value* = *meas*.**Stop**

Variable [\(Type\)](#) - **Description**

value **(Double)** Variable to store the returned value

meas A Measurement **(object)**

Return Type Double

Default Not Applicable

Examples `Print meas.Stop 'prints the stimulus value of the last data point`

C++ Syntax HRESULT get_Stop(double * Val);

Interface IMeasurement2

strPort2Pdeembed_S2PFile Property

Description Sets and returns the 2 port De-embedding .S2P file name for the specified port number. Model is applied when both the file name is specified and **User** is specified using [Port2PdeembedCktModel Property](#).

[Learn more about S2P files.](#)

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.strPort2Pdeembed_S2PFile(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive circuit model.

value **(String)** Full path, file name, and extension (.s2P) of the de-embedding circuit.
Files are typically stored in "C:\Program Files\Agilent\Network Analyzer\Documents

Return Type String

Default Not Applicable

Examples `fixture.strPort2Pdeembed_S2PFile(2) = "C:\Program Files\Agilent\Network Analyzer\Documents\myFile.s2p" 'Write`

`value = fixture.strPort2Pdeembed_S2PFile(1) 'Read`

C++ Syntax HRESULT get_strPort2Pdeembed_S2PFile(short port BSTR *bstrFile)
HRESULT put_strPort2Pdeembed_S2PFile(short port BSTR bstrFile)

Interface IFixturing

strPortMatch_S2PFile Property

Description Sets and returns the Port Matching 'S2P' file name for the specified port number. Model is applied when both the file name is specified and **User** is specified using [PortMatchingCktModel Property](#).

[Learn more about S2P files.](#)

Note: This command affects ALL measurements on the channel.

VB Syntax *fixture.strPort2PMatch_S2PFile(port) = value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

port **(Integer)** Port number to receive circuit model.

value **(String)** Full path, file name, and extension (.s2p) of the matching circuit.
Files are typically stored in "C:\Program Files\Agilent\Network Analyzer\Documents".

Return Type String

Default Not Applicable

Examples `fixture.strPort2PMatch_S2PFile(2) = "C:\Program Files\Agilent\Network Analyzer\Documents\myFile.s2p" 'Write`

`value = fixture.strPort2PMatch_S2PFile(1) 'Read`

C++ Syntax HRESULT get_strPort2PMatch_S2PFile(short port BSTR *bstrFile)
HRESULT put_strPort2PMatch_S2PFile(short port BSTR bstrFile)

Interface IFixturing

SweepEndMode Property

Description Sets and reads the event that will cause the Sweep End line to go to a low state. The line will return to a high state after the appropriate calculations are complete.

Note: This line is connected to the following pins on the [HANDLER IO connector](#) and [AUX IO connector](#) in the PNA. Therefore, this command will affect both of these connectors in the same way.

VB Syntax *object.SweepEndMode = value*

Variable [\(Type\)](#) - Description

object **(object)** - A HandlerIO or AuxIO object

value (enum as NASweepEndMode) Choose from:

- 0 - naSweep - the line goes low when each sweep is complete
- 1 - naChannelSweep - the line goes low when all the sweeps for each channel is complete.
- 2 - naGlobalSweep - the line goes low when all sweeps for all [triggerable](#) channels are complete.

Return Type Long Integer

Default 0 - naSweep

Examples

```
HWAuxIO.PassFailMode = naSweep 'Write
value = HWAuxIO.PassFailMode 'Read
```

C++ Syntax HRESULT put_SweepEndMode (tagNASweepEndMode Mode);
 HRESULT get_SweepEndMode (tagNASweepEndMode* Mode);

Interface IHWAuxIO
 IHWMaterialHandlerIO

SweepHoldOff Property

Description Returns a boolean that represents the state of SweepHoldoff line (pin2) of the External Test Set connector.

VB Syntax *value* = *ExtIO*.**SweepHoldOff**

Variable [\(Type\)](#) - Description

value **(boolean)** - Variable to store the returned data

ExtIO **(object)** - An External IO object

Return Type Boolean
False - indicates the line is being held at a TTL Low
True - indicates the line is being held at a TTL High

Default Not Applicable

Examples `value = ExtIO.SweepHoldOff`

C++ Syntax HRESULT get_SweepHoldOff(VARIANT_BOOL* bValue);

Interface IHWExternaTestSetIO

SweepGenerationMode Property

Description Sets the method used to generate a sweep: continuous ramp (analog) or discrete steps (stepped).

VB Syntax *object*.**SweepGenerationMode** = *value*

Variable [\(Type\)](#) - Description

object Channel (**object**)

or

CalSet (**object**) - Read-only property

value (**enum NASweepGenerationModes**) - Choose either:

0 - naSteppedSweep - source frequency is CONSTANT during measurement of each displayed point. More accurate than Analog. Dwell time can be set in this mode.

1 - naAnalogSweep - source frequency is continuously RAMPING during measurement of each displayed point. Faster than Stepped. Sweep time (not dwell time) can be set in this mode.

Return Type Long Integer

Default Analog

Examples `Chan.SweepGenerationMode = naAnalogSweep 'Write`

`swpgen = Chan.SweepGenerationMode 'Read`

C++ Syntax HRESULT get_SweepGenerationMode(tagNASweepGenerationModes* pVal)
 HRESULT put_SweepGenerationMode(tagNASweepGenerationModes newVal)

Interface IChannel
 |CalSet3

SweepTime Property

Description Sets the Sweep time of the analyzer. If sweep time accuracy is critical, use ONLY the values that are attained using the up and down arrows next to the sweep time entry box. [See Sweep Time.](#)

VB Syntax *object.SweepTime = value*

Variable [\(Type\)](#) - Description

object [Channel](#) (**object**)

or

[Segment](#) (**object**) first set [SweepTimeOption](#) to true.

or

[CalSet](#) (**object**) - Read-only property

value (**double**) - Sweep time in seconds. The maximum sweep time of the PNA is 86400 seconds (1 day).

To set the fastest sweep speed possible, set this value to 0.

Return Type Double

Default 0

Examples `chan.SweepTime = 3e-3 'Write`

`swptme = chan.SweepTime 'Read`

C++ Syntax HRESULT get_SweepTime(double *pVal)
HRESULT put_SweepTime(double newVal)

Interface IChannel
CalSet3
ISegment2

SweepTimeOption Property

Description Enables the Sweep time or Dwell time to be set on individual sweep segments. This property must be set True **before** the sweep or dwell time commands are sent. Otherwise, those commands will be ignored.

VB Syntax `segs.SweepTimeOption = state`

Variable [\(Type\)](#) - [Description](#)

segs A [Segments](#) collection (**object**)

state (**boolean**)

True - Enables Sweep or Dwell time to be set independently.

False - Disables Sweep or Dwell time from being set independently.

Return Type Boolean

Default False

Examples `segs.SweepTimeOption = True 'Write`

`timeOption = SweepTimeOption 'Read`

C++ Syntax HRESULT get_SweepTimeOption(VARIANT_BOOL *pVal)
HRESULT put_SweepTimeOption(VARIANT_BOOL newVal)

Interface ISegments3

Last modified:

9/29/06 MQQ New command

SweepType Property

Description Sets and returns the type of sweep.

VB Syntax *object*.SweepType = *value*

Variable [\(Type\)](#) - Description

object One of the following:

- [Channel](#) (object)
- [FOMRange](#) (object) Must be an [UNCOUPLED](#) range.
- [CalSet](#) (object) - Read-only property

value **(enum NASweepTypes)** - Choose from:

0 - naLinearSweep

1 - naLogSweep

2 - naPowerSweep

3 - naCWTimeSweep

4 - naSegmentSweep

Note: Sweep type cannot be set to Segment sweep if there are no segments turned ON. A segment is automatically turned ON when a application is created.

Return Type Long Integer

Default naLinearSweep

Examples `chan.SweepType = naPowerSweep 'Write`

`swptyp = chan.SweepType 'Read`

C++ Syntax HRESULT get_SweepType(tagNASweepTypes* pVal)
HRESULT put_SweepType(tagNASweepTypes newVal)

Interface IChannel
|CalSet3
IFOMRange

Last Modified:

8-Mar-2007 Added FOMRange

SystemImpedanceZ0 Property

Description Sets and returns the impedance for the analyzer.

VB Syntax *app*.**SystemImpedanceZ0** = *value*

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

value (double) Analyzer Impedance. Choose any number between 0 and 1000 ohms.

Return Type Double

Default 50

Examples `app.SystemImpedanceZ0 = 75 'Write`

`z0 = app.SystemImpedanceZ0 'Read`

C++ Syntax HRESULT get_SystemImpedanceZ0(double dSystemZ0)
HRESULT put_SystemImpedanceZ0(double *pdSystemZ0)

Interface IApplication

SystemName Property

Description Returns the computer name of the PNA.

VB Syntax *name* = *app*.**SystemName**

Variable [\(Type\)](#) - **Description**

name (String) Variable to store the returned computer name.

app An [Application](#) (**object**)

Return Type String

Default Not Applicable

Examples `name = app.SystemName`

C++ Syntax HRESULT SystemName(BSTR* computerName)

Interface IApplication

TargetValue Property

Description Sets the target value for the marker when doing Target Searches ([SearchTargetLeft](#), [SearchTarget](#), [SearchTargetRight](#)).

VB Syntax *mark.TargetValue* = *value*

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

value (**single**) - Target value. Choose any number between: **-500** and **500**

Return Type Single

Default 0

Examples

```
mark.TargetValue = 10.5 'Write
```

```
target = mark.TargetValue 'Read
```

C++ Syntax HRESULT get_TargetValue(float *pVal)
HRESULT put_TargetValue(float newVal)

Interface IMarker

TestPortPower Property

Description Sets or returns the RF power level for the channel
or
 Sets or returns the RF power level of the segment.

VB Syntax *object*.TestPortPower(*srcPort*) = *value*

Variable [\(Type\)](#) - Description

object A [Channel](#) (**object**) - to set coupled power, use chan.[CouplePorts](#). If CouplePorts = False, then each port power can be set independently. Otherwise, chanTestPortPower (1) = value sets power level at both ports.

or

A [CalSet](#) (**object**)

or

A [Segment](#) (**object**)

srcPort (**long integer**) - Source Port number.

Use [GetPortNumber](#) to return the port number of a source that only has a string name, such as an [External Source](#).

value (**double**) - RF Power in dBm.

Note: The range of settable power values depends on the PNA model and if source attenuators are installed. To determine the range of values, use [cap.MaximumSourceALCPower](#) and [cap.MinimumSourceALCPower](#)

Actual achievable leveled power depends on frequency.

Return Type Double

Default 0

Examples

```
chan.TestPortPower(1) = 5 'sets the port 1 RF power level for the channel object -Write
```

```
powerlev = Chan.TestPortPower(1) 'Read
```

C++ Syntax HRESULT get_TestPortPower(long port, double *pVal)
 HRESULT put_TestPortPower(long port, double newVal)

Interface IChannel
 ICalSet3
 ISegment

Last Modified:

30-Apr-2007 Edited for src strings

TestSetType Property

Description Returns the Test Set Type (model) that was used for the Cal Set.

VB Syntax *TSType* = *calset*.**TestSetType**

Variable [\(Type\)](#) - **Description**

TSType (String) Variable to store the returned test set model.

calset A [Cal Set](#) object.

Return Type String

Default Depends on the test set.

Example `TSType = calset.TestSetType`

C++ Syntax HRESULT get_OutputPorts(BSTR *mapping);

Interface ICals5

Last modified:

9/18/06 MQ Added for multiport

Text Property

Description Specifies an equation or expression to be used on the measurement.

VB Syntax `eq.Text = eqText`

Variable [\(Type\)](#) - Description

`eq` [Equation](#) (object)

`eqText` **(String)** - Any valid equation or expression.

Return Type String

Default Not Applicable

Examples `eq.Text = "foo=S11/S21"`

`equation = eq.Text 'Read`

C++ Syntax HRESULT get_Text(BSTR *equation)
HRESULT put_Text(BSTR equation)

Interface IEquation

ThruCalMethod Property

Description Sets and returns the method for performing the thru portion of the calibration.

VB Syntax *obj*.**ThruCalMethod** = *value*

Variable [\(Type\)](#) - **Description**

obj [SMCType](#) (object)

or

[VMCType](#) (object)

value (String) Specifies the Thru method. Case insensitive - include spaces.
Choose from:

"Default"

"Flush Thru" **or** "FLUSH"

"Unknown Thru" **or** "UNKN"

"Adapter Removal" **or** "ADAP"

Return Type String

Default Default

Examples `SMC.ThruCalMethod = "UNKN"`

C++ Syntax HRESULT put_ThruCalMethod(enum NAThruCalMethod thruMethod);
HRESULT get_ThruCalMethod(enum NAThruCalMethod *thruMethod);

Interface SMCType
VMCType

ThruCalMethod Property **Superseded**

Description	<p>This command is replaced by PathThruMethod Property .</p> <p>Sets and returns the method for performing the Cal Method and the THRU portion of the calibration.</p>
VB Syntax	<i>guidedCal</i> . ThruCalMethod = <i>value</i>
Variable	(Type) - Description
<i>guidedCal</i>	GuidedCalibration (object)
<i>value</i>	<p>(Enum as NAThruCalMethod) Choose from:</p> <p>0 - naDefaultCalMethod - allow the PNA to choose the best possible method (from the following) depending on whether the device or ECal module is insertable or non-insertable and given the model number of the PNA. (default selection if omitted.)</p> <p>1 - naAdapterRemoval - Perform Adapter removal calibration.</p> <p>2 - naFlushThru - Perform Flush Thru calibration.</p> <p>3 - naDefinedThru - Perform Defined Thru calibration. If performing an ECal, this is the Thru standard in the ECal module.</p> <p>4 - naUnknownThru - Perform Unknown Thru calibration.</p> <p>5 - naSOLT - Perform SOLT calibration</p> <p>6 - naTRL - Perform TRL calibration</p> <p>7 - naQSOLT - Perform QSOLT calibration.</p> <p>Learn more about Cal Methods</p>
Return Type	Enum
Default	0 - naDefaultCalMethod
Examples	<code>guided.ThruCalMethod = naDefinedThru</code>
C++ Syntax	<pre>HRESULT get_ThruCalMethod(enum NAThruCalMethod *thruMethod); HRESULT put_ThruCalMethod(enum NAThruCalMethod thruMethod);</pre>
Interface	IGuidedCalibration

Last Modified:

30-Apr-2007 MX Superseded

ThruPortList Property

Description **Note:** Available only on PNA releases 5.0 and greater.

Sets and returns the thru connection port pairs for the calibration.

- For 3-port cals, specify at least two pairs.
- For 4-port cals, specify at least three pairs.
- For highest accuracy, specify more than the minimum pairs.
- For a 2-port cal, there is only one port pair. It is the only pair in the list and it is required.

Learn more about [Thru method and port pairings](#).

See an example of a [4-port guided calibration using COM](#).

VB Syntax *guidedCal.ThruPortList = t1a, t1b, t2a, t2b, t3a, t3b*

Variable [\(Type\) - Description](#)

guidedCal [GuidedCalibration](#) (object)

t1a, t1b... **(Variant)** Port numbers in pairs - a one-dimensional array of Long integers.

t1a, t1b (Thru1 - port A and port B)

t2a, t2b (Thru2 - port A and port B)

t3a, t3b (Thru3 - port A and port B)

Return Type **Variant** - a one-dimensional array of Long integers.

Default Not Applicable

Example `thruList = Array(1,2,1,3,1,4)`

`guided.ThruPortList = thruList`

'Sets the following three thru connections for a 4-port calibration:

Thru 1 - ports 1 and 2

Thru 2 - ports 1 and 3

Thru 3 - ports 1 and 4

C++ Syntax HRESULT get_ThruPortList(VARIANT* portList);

HRESULT put_ThruPortList(VARIANT portList);

Interface IGuidedCalibration

Title Property

Description Writes or reads a custom title for the window. Newer entries replace (not append) older entries. Turn the title ON and OFF with [TitleState](#)

VB Syntax *win.Title = string*

Variable [\(Type\)](#) - Description

win A NaWindow **(object)**

string **(long)** - Title limited to 50 characters.

**Return
Type** String

Default Null

Examples `win.Title = "Hello World" 'Write`

`titl = win.Title 'Read`

[C++ Syntax](#) HRESULT get_Title(BSTR *title)
HRESULT put_Title(BSTR title)

Interface INAWindow

TitleState Property

Description Turns ON and OFF the window title. Write a window title with [Title](#)

VB Syntax *win.TitleState = state*

Variable [\(Type\)](#) - Description

win A NaWindow **(object)**

state **(boolean)**

True - Title ON

False - Title OFF

Return Type Boolean

Default False

Examples

```
win.TitleState = True 'Write
```

```
titlestate = win.TitleState 'Read
```

C++ Syntax HRESULT get_TitleState(VARIANT_BOOL* bState)
HRESULT put_TitleState(VARIANT_BOOL bState)

Interface INAWindow

Touchscreen Property

Description Sets and reads the state of the PNA-X Touchscreen (ON and OFF).
This setting remains until changed again from the front-panel or remote command.

VB Syntax `app.Touchscreen = state`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

state (boolean)

False (0) - Disables use of Touchscreen

True (1) - Enables use of Touchscreen

Return Type Boolean

False - OFF

True - ON

Default **TRUE** when shipped from factory.

Examples `app.Touchscreen = True 'Write`

`coupl = app.Touchscreen 'Read`

C++ Syntax HRESULT put_Touchscreen(VARIANT_BOOL bState)
HRESULT get_Touchscreen(VARIANT_BOOL *bState)

Interface IApplication12

Last Modified:

23-Feb-2007 MX New topic

TraceMath Property

Description Performs math operations on the measurement object and the trace stored in memory. (There MUST be a trace stored in Memory to perform math. See [Meas.DataToMemory](#) method.)

VB Syntax *meas.TraceMath = value*

Variable [\(Type\)](#) - Description

meas A measurement (**object**)

value (**enum NAMathOperation**) - Choose from:

- 0** - naDataNormal
- 1** - naDataMinusMemory
- 2** - naDataPlusMemory
- 3** - naDataDivMemory
- 4** - naDataTimesMemory

Return Type NAMathOperation

Default Normal (0)

Examples `meas.TraceMath = naDataMinusMemory 'Write`

`mathOperation = meas.TraceMath 'Read`

C++ Syntax HRESULT get_TraceMath(tagNAMathOperation* pMathOp)
 HRESULT put_TraceMath(tagNAMathOperation mathOp)

Interface IMeasurement

TraceTitle Property

Description Writes and reads data for the trace title area.
The trace title is embedded in the [trace status field](#).
The title is turned ON and OFF using [TraceTitleState](#).

VB Syntax *meas.TraceTitle = value*

Variable [\(Type\)](#) - Description

meas A [Measurement](#) (object)

value **(string)** - Title to be displayed. Any characters (no spaces), enclosed with quotes.

Return Type String

Default Not Applicable

Examples `meas.TraceTitle = "My new s11 measurement"`

`title = TraceTitle 'Read`

C++ Syntax HRESULT get_TraceTitle(BSTR *title);
HRESULT put_TraceTitle(BSTR title);

Interface IMeasurement8

Last Modified:

16-Jan-2007 MX New topic

TraceTitleState Property

Description Turns display of the Trace Title ON or OFF. When turned OFF, the previous trace title returns. Create a trace title using [TraceTitle Property](#)

VB Syntax *meas.TraceTitleState = value*

Variable [\(Type\)](#) - Description

meas A [Measurement](#) (object)

value **(boolean)** - Choose from:

True - Turns the trace title ON

False - Turns the trace title OFF

**Return
Type** Boolean

Default False

Examples `meas.TraceTitleState = False`

`title = TraceTitleState 'Read`

C++ Syntax HRESULT get_TraceTitleState(VARIANT_BOOL *isTitleON);
HRESULT put_TraceTitleState(VARIANT_BOOL isTitleON);

Interface IMeasurement8

Last Modified:

18-Jun-2007 MX New topic

Tracking Property

Description This property, when on, executes the search function ([marker.SearchFunction](#)) every sweep. In effect, turning Tracking ON is the same as executing one of the immediate, one-time, "Search..." methods (such as [SearchMin](#), [SearchMax](#)) for every sweep.

VB Syntax *mark.Tracking = state*

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

state (**boolean**) - Tracking state. Choose from:

False - Tracking OFF

True - Tracking ON

**Return
Type** Boolean

Default False

Examples `mark.Tracking = False 'Write`

`markTracking = mark.Type 'Read`

C++ Syntax HRESULT put_Tracking(VARIANT_BOOL bOn)
HRESULT get_Tracking(VARIANT_BOOL * pbOn)

Interface IMarker

TriggerDelay Property

Description Sets and reads the trigger delay for all measurements (GLOBAL). This delay is only applied while in [app.Source = naTriggerSourceExternal](#) and [trigsetup.Scope = naGlobalTrigger](#) . After an external trigger is applied, the start of the sweep is delayed for the specified delay value plus any inherent latency.

To apply a trigger delay for a channel only, use [ExternalTriggerDelay Property](#).

VB Syntax `app.TriggerDelay = value`

Variable [\(Type\)](#) - **Description**

app An [Application](#) (object)

value **Double**- Trigger delay value in seconds. Range is from 0 to 107

Return Type Double

Default 0

Examples `app.TriggerDelay = .003 'Write`

`delay = app.TriggerDelay 'Read`

C++ Syntax HRESULT get_TriggerDelay(double *delay);
HRESULT put_TriggerDelay(double delay)

Interface IApplication

TriggerInPolarity Property

Description Specifies the polarity of the trigger IN signal to which the PNA will respond.

VB Syntax *auxTrig.TriggerInPolarity = value*

Variable [\(Type\)](#) - Description

auxTrig An [AuxTriger](#) (object)

value (enum NATriggerPolarity) - Choose from:

naTriggerPositive PNA responds to leading edge or HIGH level

naTriggerNegative PNA responds to trailing edge or LOW level.

Set Edge or Level triggering using [TriggerInType Property](#)

Return Type Enum

Default NEGative

Exaamples `auxTrig.TriggerInPolarity = naTriggerPositive 'Write`

`value = auxTrig.TriggerInPolarity 'Read the value`

C++ Syntax HRESULT get_TriggerInPolarity(enum NATriggerPolarity *val);
HRESULT put_TriggerInPolarity(enum NATriggerPolarity val);

Interface IAuxTrigger

Last Modified:

14-Dec-2006 MX New topic

TriggerInType Property

Description Specifies the type of aux trigger input being supplied to the PNA.

VB Syntax *auxTrig.TriggerInType* = *value*

Variable [\(Type\)](#) - [Description](#)

auxTrig An [AuxTrigger](#) (object)

value (enum NATriggerSignalType) Choose from:

naTriggerEdge PNA responds to the leading edge of a signal

naTriggerLevel PNA responds to the level (HIGH or LOW) of a signal

Return Type Enum

Default

Exaamples `auxTrig.TriggerInType = naTriggerEdge 'Write`

`value = auxTrig.TriggerInType 'Read the value`

C++ Syntax HRESULT get_TriggerInType(enum NATriggerSignalType *val);
HRESULT put_TriggerInType(enum NATriggerSignalType val);

Interface IAuxTrigger

Last Modified:

14-Dec-2006 MX New topic

TriggerOutDuration Property

Description Specifies the width of the output pulse, which is the time that the Aux trigger output will be asserted.

VB Syntax *auxTrig*.TriggerOutDuration = *value*

Variable [\(Type\)](#) - Description

auxTrig An [AuxTrigger](#) (object)

value **(single)** - Duration value in seconds. Choose a value between 1E-6 and 1.

Return Type Double

Default 1E-6 sec

Exaamples `auxTrig.TriggerOutDuration = 1e-3 'Write`

`value = auxTrig.TriggerOutDuration 'Read the value`

C++ Syntax HRESULT get_TriggerOutDuration(double *val);
HRESULT put_TriggerOutDuration(double val);

Interface IAuxTrigger

Last Modified:

14-Dec-2006 MX New topic

TriggerOutInterval Property

Description Specifies how often a trigger output signal is sent.

VB Syntax *auxTrig.TriggerOutInterval = value*

Variable [\(Type\)](#) - Description

auxTrig An [AuxTrigger](#) (object)

value **(single)** - Choose from:

0 - naTriggerModePoint - a single data point is measured with each trigger signal the channel receives. Subsequent trigger signals continue to go to the channel in Point mode until the channel measurements are complete. This is effectively the same as [trigger point mode](#).

1 - naTriggerModeMeasurement - entire traces are swept with a trigger signal. which and how many traces depends on the Scope setting.

Return Type Enum

Default 1 - naTriggerModeMeasurement

Exaamples `auxTrig.TriggerOutInterval = naTriggerModeMeasurement 'Write`

`value = auxTrig.TriggerOutInterval 'Read the value`

C++ Syntax HRESULT get_TriggerOutInterval(enum NATriggerMode *val);
HRESULT put_TriggerOutInterval(enum NATriggerMode val);

Interface IAuxTrigger

Last Modified:

14-Dec-2006 MX New topic

TriggerOutPolarity Property

Description Specifies the polarity of the trigger output signal being supplied by the PNA.

VB Syntax *auxTrig.TriggerOutPolarity = value*

Variable [\(Type\)](#) - Description

auxTrig An [AuxTrigger](#) (object)

value (enum NATriggerPolarity) - Choose from:

naTriggerPositive PNA sends positive going (active HIGH) pulse.

naTriggerNegative PNA sends negative going (active LOW) pulse.

Return Type Enum

Default

Exaamples `auxTrig.TriggerOutPolarity = naTriggerPositive 'Write`

`value = auxTrig.TriggerOutPolarity 'Read the value`

C++ Syntax HRESULT get_TriggerOutPolarity(enum NATriggerPolarity *val);
HRESULT put_TriggerOutPolarity(enum NATriggerPolarity val);

Interface IAuxTrigger

Last Modified:

14-Dec-2006 MX New topic

TriggerOutPosition Property

Description Specifies whether the Aux trigger out signal is sent Before or After the acquisition.

VB Syntax *auxTrig*.TriggerOutPosition = *value*

Variable [\(Type\)](#) - Description

auxTrig An [AuxTrigger](#) (object)

value (enum NATriggerPosition) Choose from:

naTriggerOutBeforeAcquire Use if the external device needs to be triggered before the data is acquired, such as a power meter.

naTriggerOutAfterAcquire Use if the external device needs to be triggered just after data has been acquired, such as an external source. This could be more efficient since it allows the external device to get ready for the next acquisition at the same time as the PNA.

Return Type Enum

Default naTriggerOutAfterAcquire

Exaamples `auxTrig.TriggerOutPosition = naTriggerOutAfterAcquire 'Write`

`value = auxTrig.TriggerOutPosition 'Read the value`

C++ Syntax HRESULT get_TriggerOutPosition(enum NATriggerPosition *val);
HRESULT put_TriggerOutPosition(NATriggerPosition val);

Interface IAuxTrigger

Last Modified:

14-Dec-2006 MX New topic

TriggerOutputEnabled Property

Description Enables the PNA to send trigger signals out the [rear-panel TRIGGER OUT](#) connector. For more information, see [External triggering](#).

VB Syntax *trigsetup.TriggerOutputEnabled = boolean*

Variable [\(Type\)](#) - Description

trigsetup A [TriggerSetup2](#) (object)

boolean Choose from:
False - PNA does NOT send output trigger signals.
True - PNA sends output trigger signals.

Return Type Boolean

Default False

Examples `trigsetup.TriggerOutputEnabled = True 'Write`

`atba = trigsetup.TriggerOutputEnabled 'Read`

C++ Syntax HRESULT get_TriggerOutputEnabled(BOOL *pVal);
 HRESULT put_TriggerOutputEnabled(BOOL newVal);

Interface ITriggerSetup2

TuningIFBW Property

Description Set the IF Bandwidth for Broadband and Precise tuning sweeps.

VB Syntax *embedLO.TuningIFBW = value*

Variable [\(Type\)](#) - Description

embedLO An [EmbeddedLO](#) (object)

value **(Double)** IF Bandwidth

Return Type **(Double)**

Default 30 kHz

Examples `embedLO.TuningIFBW = 10e3 'write`

`value = embedLO.TuningIFBW 'read`

C++ Syntax HRESULT get_TuningIFBW(double* ifbw);
HRESULT put_TuningIFBW(double ifbw);

Interface IEmbeddedLO

Last Modified:

18-Apr-2007 MX New topic

TuningMode Property

Description Sets and returns the method used to determine the embedded LO Frequency.

VB Syntax *embedLO.TuningMode = value*

Variable [\(Type\)](#) - Description

embedLO An [EmbeddedLO](#) (object)

value **(Enum as NAEmbeddedLOTuningMode)**

Tuning mode. Choose from:

0 - naEmbeddedLOTuningMode_Broadband_And_Precise

1 - naEmbeddedLOTuningMode_Precise_Only

2 - naEmbeddedLOTuningMode_None

Return Type **(Enum)**

Default 0 - naEmbeddedLOTuningMode_Broadband_And_Precise

Examples `embedLO.TuningMode = naEmbeddedLOTuningMode_None 'write`

`value = embedLO.TuningMode 'read`

C++ Syntax HRESULT get_TuningMode(enum NAEmbeddedLOTuningMode* mode);

HRESULT put_TuningMode(enum NAEmbeddedLOTuningMode mode);

Interface IEmbeddedLO

Last Modified:

13-Apr-2007 MX New topic

TuningSweepInterval Property

Description Set how often a tuning sweep is performed.

VB Syntax *embedLO.TuningSweepInterval = value*

Variable [\(Type\)](#) - Description

embedLO An [EmbeddedLO](#) (object)

value **(Long)** Tuning sweep interval.

Return Type **(Long)**

Default 1

Examples `embedLO.TuningSweepInterval = 3 'write .. tuning is performed
every third measurement sweep`

`value = embedLO.TuningSweepInterval 'read`

C++ Syntax HRESULT get_TuningSweepInterval(long* interval);
HRESULT put_TuningSweepInterval(long interval);

Interface IEmbeddedLO

Last Modified:

18-Apr-2007 MX New topic

TriggerMode Property

Description Each trigger signal will cause either:
all measurements in the channel to be made **or**
only a single data point in the channel at a time.

VB Syntax `chan.TriggerMode = value`

Variable [\(Type\)](#) - Description

chan A Channel (**object**)

value (**enum NATriggerMode**) - Choose from:

0 - naTriggerModePoint - a single data point is measured with each trigger signal the channel receives. Subsequent trigger signals continue to go to the channel in Point mode until the channel measurements are complete.

1 - naTriggerModeMeasurement - all measurements in the channel are made with each trigger signal the channel receives.

Note: Point Mode is not compatible when TriggerType is set to naGlobalTrigger. If you change any channel to TriggerModePoint, TriggerType will be set to naChannelTrigger.

Return Type Long Integer

Default 0 - naTriggerModeMeasurement

Examples `chan.TriggerMode = naTriggerModePoint 'Write`

`trigtyp = chan.TriggerMode 'Read`

C++ Syntax HRESULT get_TriggerMode (tagNATriggerMode *pMode)
HRESULT put_TriggerMode (tagNATriggerMode newMode)

Interface IChannel

TriggerSignal Property - Superseded

Description **Note:** This command has been replaced by [Source](#) Property

Sets or returns the trigger source.

VB Syntax `app.TriggerSignal = value`

Variable [\(Type\)](#) - Description

app An Application (**object**)

value (**enum NATriggerSignal**) - Choose from:

0 - naTriggerInternal - free run

1 - naTriggerExternalPositive - a trigger signal is generated when a TTL high is sensed on the [external trigger pin](#) of the Aux IO connector

2 - naTriggerExternalNegative - a trigger signal is generated when a TTL low is sensed on the [external trigger pin](#) of the Aux IO connector.

3 - naTriggerManual - manual trigger source; use `app.ManualTrigger` to send a trigger signal.

4 - naTriggerExternalHigh - a trigger signal is generated when a TTL high is sensed on the [external trigger pin](#) of the Aux IO connector

5 - naTriggerExternalLow - a trigger signal is generated when a TTL low is sensed on the [external trigger pin](#) of the Aux IO connector

Return Type Long Integer

Default naTriggerInternal

Examples `app.TriggerSignal = naTriggerExternalPositive 'Write`

`trigsign = app.TriggerSignal 'Read`

C++ Syntax HRESULT get_TriggerSignal(tagNATriggerSignal *pSignal)
 HRESULT put_TriggerSignal(tagNATriggerSignal signal)

Interface IApplication

TriggerType Property - Superseded

Description	Note: This property has been replaced with Scope Property. Sets or returns the trigger type which determines the scope of a trigger signal.
VB Syntax	<i>app.TriggerType = value</i>
Variable	(Type) - Description
<i>app</i>	An Application (object)
<i>value</i>	(enum NATriggerType) - Trigger type. Choose from: 0 - naGlobalTrigger - a trigger signal is applied to all triggerable channels 1 - naChannelTrigger - a trigger signal is applied to the current channel. The next trigger signal will be applied to the next channel; not necessarily channel 1-2-3-4.
Return Type	Long Integer
Default	naGlobalTrigger
Examples	<pre>app.TriggerType = naGlobalTrigger 'Write</pre> <pre>trigtyp = app.TriggerType 'Read</pre>
C++ Syntax	HRESULT get_TriggerType(tagNATriggerType *pTrigger) HRESULT put_TriggerType(tagNATriggerType trigger)
Interface	IApplication

Type (calstd) Property

Description Sets and Returns the type of calibration standard.

VB Syntax *calstd.Type* = *value*

Variable [\(Type\)](#) - Description

calstd A CalStandard (**object**). Use calKit.[GetCalStandard](#) to get a handle to the standard.

value (**enum** NACalStandardType) -Choose from:
0 - naOpen
1 - naShort
2 - naLoad
3 - naThru

Return Type Long Integer

Default Not Applicable

Examples `calstd.Type = naOpen 'Write`

`standardtype = calstd.Type 'Read`

C++ Syntax HRESULT get_Type(tagNACalStandardType *pVal)
HRESULT put_Type(tagNACalStandardType newVal)

Interface ICalStandard

Type (testset) Property

Description Returns the testset model number.

VB Syntax *tset.Type* *model*

Variable [\(Type\)](#) - Description

model **(String)** Variable to return the Test set model

tset A [TestsetControl](#) object.
Obtained from the [ExternalTestsets](#) collection.

**Return
Type** String

Default None

Examples `testset.type` `model`

[See External Testset Program](#)

C++ Syntax HRESULT get_Type(BSTR *pType);

Interface ITestsetControl

TZImag Property

Description Sets and Returns the TZImag value (the Imaginary Terminal Impedance value) for the calibration standard. Only applicable when "[Type](#)" is set to **naArbitraryImpedance**.

To set the other resistance values, use [TZReal](#)

VB Syntax `calstd.TZImag = value`

Variable [\(Type\)](#) - Description

calstd A CalStandard (**object**). Use calKit.[GetCalStandard](#) to get a handle to the standard.

value (**single**) - Value for TZImag in Ohms

Return Type Single

Default Not Applicable

Examples `calstd.TZImag = 15 'Write the value of TZImag to 15 Ohms`

`imp0 = calstd.TZImag 'Read the value of TZImag`

C++ Syntax HRESULT get_TZImag(float *pVal);
HRESULT put_TZImag(float newVal);

Interface ICalStandard2

TZReal Property

Description Sets and Returns the TZReal value (the real Terminal Impedance value) for the calibration standard. Only applicable when "[Type](#)" is set to **naArbitraryImpedance**.

To set the other resistance values, use [TZImag](#)

VB Syntax *calstd.TZReal = value*

Variable [\(Type\)](#) - Description

calstd A CalStandard **(object)**. Use calKit.[GetCalStandard](#) to get a handle to the standard.

value **(single)** - Value for TZReal in Ohms

Return Type Single

Default Not Applicable

Examples `calstd.TZReal = 15 'Write the value of TZReal to 15 Ohms`

`imp0 = calstd.TZReal 'Read the value of TZReal`

C++ Syntax HRESULT get_TZReal(float *pVal);
HRESULT put_TZReal(float newVal);

Interface ICalStandard2

Read-only

UnusedChannelNumbers Property

Description Returns an array of channel numbers that are NOT in use. An unused channel has NO measurements subscribed to it.

VB Syntax *chanNumbers* = *chans*.UnusedChannelNumbers (*NumberOfChannels*)

Variable [\(Type\)](#) - Description

chanNumbers Variable array to store the returned channel numbers

chans A [Channel collection](#) (object)

NumberOfChannels **(Long Integer)** Number of channels that you are requesting.

Return Type One-dimensional array of long integers. The size of the array is specified by the *NumberOfChannels* parameter.

Default Not Applicable

Examples `chanNumbers = chans.UnusedChannelNumbers(5)`

C++ Syntax HRESULT get_UnusedChannelNumbers(long numberRequested,VARIANT* channelNumbers);

Interface IChannels2

USBPowerMeterCatalog Property

Description Returns the ID string of power meters / sensors that are connected to the PNA USB. Use the list to select a power sensor for a source power cal.

VB Syntax *list* = *pwrCal*.**USBPowerMeterCatalog**

Variable [\(Type\)](#) - Description

list **(String)** Variable to store the returned list of USB power meters.

pwrCal **(object)** – [A SourcePowerCalibrator](#) (object)

Return Type Comma-delimited strings

Default Not Applicable

Examples

```
Set pwrCal = pna.SourcePowerCalibrator
list = pwrCal.USBPowerMeterCatalog'Read
```

C++ Syntax HRESULT get_USBPowerMeterCatalog(BSTR *pUSBList);

Interface ISourcePowerCalibrator6

Last Modified:

11-Jul-2007 MX New topic

Read-only

UsedChannelNumbers Property

Description Returns an array of channel numbers that are in use. A used channel has at least one measurement subscribed to it

VB Syntax *chanNumbers* = *chans*.UsedChannelNumbers

Variable [\(Type\)](#) - **Description**

chanNumbers Variable array to store the returned channel numbers

chans A [Channel collection](#) (**object**)

Return Type One-dimensional array of long integers

Default Not Applicable

Examples `chanNumbers = chans.UsedChannelNumbers`

C++ Syntax HRESULT get_UsedChannelNumbers(VARIANT* channelNumbers);

Interface IChannels2

UsePowerLossSegments Property

Description Specifies if subsequent calls to the [AcquirePowerReadings](#) method will make use of the loss table (PowerLossSegments).

VB Syntax *pwrCal.UsePowerLossSegments = value*

Variable [\(Type\)](#) - Description

pwrCal **(object)** – A SourcePowerCalibrator (object)

value **(boolean)**

False – Do not use loss table

True – Use loss table

Return Type Boolean

Default False

Examples

```
Set powerCalibrator = pna.SourcePowerCalibrator
powerCalibrator.UsePowerLossSegments = 1 'Write
lossTableState = powerCalibrator.UsePowerLossSegments 'Read
```

C++ Syntax HRESULT put_UsePowerLossSegments(VARIANT_BOOL bState);
HRESULT get_UsePowerLossSegments(VARIANT_BOOL *bState);

Interface ISourcePowerCalibrator

UsePowerSensorFrequencyLimits Property

Description Specifies if subsequent calls to the [AcquirePowerReadings](#) method will observe frequency values of the [MinimumFrequency](#) and [MaximumFrequency](#) properties.

VB Syntax *pwrCal.UsePowerSensorFrequencyLimits = value*

Variable [\(Type\)](#) - **Description**

pwrCal **(object)** – A SourcePowerCalibrator (object)

value **(boolean)** -

False – Do not use power sensor frequency limits. An acquisition will use just one power sensor for the entire sweep, regardless of frequency.

True – Use power sensor frequency limits. A requested acquisition will only succeed for those frequency points which fall between the MinimumFrequency and MaximumFrequency values of that PowerSensor. An acquisition will pause in mid-sweep if the frequency is about to exceed the MaximumFrequency value. When the sweep is paused in this manner, a sensor connected to the other channel input of the power meter can be connected to the measurement port in place of the previous sensor, and then the sweep completed by another call to AcquirePowerReadings. However, the MaximumFrequency specified for the second sensor would need to be sufficient for the sweep to complete.

Return Type Boolean

Default False

Examples

```
Set powerCalibrator = pna.SourcePowerCalibrator
powerCalibrator.UsePowerSensorFrequencyLimits = True 'Write
FreqCheck = powerCalibrator.UsePowerSensorFrequencyLimits 'Read
```

C++ Syntax HRESULT put_UsePowerSensorFrequencyLimits(VARIANT_BOOL bState);
 HRESULT get_UsePowerSensorFrequencyLimits(VARIANT_BOOL *bState);

Interface ISourcePowerCalibrator

UserRange Property

Description Assigns the marker to the specified User Range. This restricts the marker's x-axis travel to the User Range span, specified with [Start](#) and [Stop](#) values.

- Each channel has **16** user ranges.
- Markers and trace statistics can be restricted to any user range.
- More than one marker can occupy a user range.
- User ranges can overlap. For example:
 - User range 1 - 3GHz to 5GHz
 - User range 2 - 4GHz to 6GHz

Note: User ranges are especially useful in restricting marker searches to specific areas of the measurement.

VB Syntax *mark*.**UserRange** = *value*

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

value (**long integer**) - User Range. Choose any number between 0 and 16 (0=Full Span)

Return Type Long Integer

Default 0 - Full Span

Examples `mark.UserRange = 1 'Write`

`UseRnge = mark.UserRange 'Read`

C++ Syntax HRESULT get_UserRange(long *pRangeNumber)
HRESULT put_UserRange(long IRangeNumber)

Interface IMarker

UserRangeMax Property

Description Sets the stimulus stop value for the specified User Range.
This property uses different arguments for the channel and marker objects.

VB Syntax *chan*.UserRangeMax(*domainType*,*Mnum*) = *value*
or
mark.UserRangeMax(*mum*) = *value*

Variable [\(Type\) - Description](#)

chan A Channel **(object)**

mark A Marker **(object)**
To assign a marker to a User Range, use the [UserRange Property](#).

Note: The Marker object does not require the "domainType" argument.

domainType **(enum NADomainType)** - Choose from:

0 - naDomainFrequency
1 - naDomainTime
2 - naDomainPower

Mnum **(long integer)** - User Range number. Choose any number between 1 and 16 (0=Full Span)

value **(double)** - Stop value. Choose any number within the full span of the channel

Return Type Double

Default The current stimulus setting for the channel

Examples

```
mark.UserRangeMax(1) = 3e9 'Write
chan.UserRangeMax(naDomainFrequency,1) = 3e9 'Write
```

```
UserRngeMax = mark.UserRangeMax 'Read
UserRngeMax = chan.UserRangeMax 'Read
```

C++ Syntax HRESULT put_UserRangeMax(tagNADomainType domain, long rangeNumber, double maxValue)
HRESULT get_UserRangeMax(tagNADomainType domain, long rangeNumber, double *maxValue)

Interface IChannel

UserRangeMin Property

Description Sets the stimulus start value for the specified User Range.
This property uses different arguments for the channel and marker objects.

VB Syntax *chan.UserRangeMin(domainType,range) = value*
or
mark.UserRangeMin(range) = value

Variable [\(Type\) - Description](#)

chan A Channel (**object**)

mark A Marker (**object**)
To assign a marker to a User Range, use the [UserRange Property](#).

Note: The Marker object does not require the domainType argument

domainType (**enum NADomainType**) Type of sweep currently implemented on the channel - Choose from:
0 - naDomainFrequency
1 - naDomainTime
2 - naDomainPower

range (**long**) - User Range number. Choose any number between **1** and **16** (0=Full Span)

value (**double**) - Start value. Choose any number within the full span of the analyzer

Return Type Double

Default The current stimulus setting for the channel

Examples

```
mark.UserRangeMin(1) = 3e9 'Write
chan.UserRangeMin(naDomainFrequency,1) = 3e9 'Write

UseRngeMin = mark.UserRangeMin 'Read
UseRngeMin = chan.UserRangeMin 'Read
```

C++ Syntax HRESULT put_UserRangeMin(tagNADomainType domain, long rangeNumber, double minValue)
HRESULT get_UserRangeMin(tagNADomainType domain, long rangeNumber, double *minValue)

Interface IChannel

UserPresetEnable Property

Description 'Checks' and 'clears' the enable box on the User Preset dialog box. This only affects subsequent Presets from the front panel user interface.

Regardless of the state of the User Preset Enable checkbox, the [app.Preset](#) command will always preset the PNA to the factory preset settings, and [app.UserPreset](#) will always perform a User Preset.

VB Syntax `app.UserPresetEnable = state`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

state (**boolean**) Front Panel User Preset State. Choose from:
False – User Preset OFF
True – User Preset ON

Return Type Boolean

Default False

Examples `app.UserPresetEnable = True 'Write`

`upreset = app.UserPresetEnable 'Read`

C++ Syntax HRESULT get_UserPresetEnable(VARIANT_BOOL *pVal)
HRESULT put_UserPresetEnable(VARIANT_BOOL newVal)

Interface IApplication6

Valid Property

Description Returns a boolean value to indicate if the current equation on the measurement is valid. For equation processing to occur, the equation must be valid and ON.

VB Syntax *IsValid* = *eq.Valid*

Variable [\(Type\)](#) - Description

good **(Boolean)** Variable to store the returned value.

True (1) - equation is valid

False (0) - equation is NOT valid

eq [Equation](#) **(object)**

Return Type Boolean

Default Not Applicable

Examples `IsValid = eq.Valid 'Read`

C++ Syntax HRESULT get_Valid(Boolean *equation)

Interface IEquation

Last Modified:

18-Jun-2007 New topic

Read only

ValidConnectorTypes Property

Description Returns a list of connector types for which there are calibration kits.

VB Syntax *value* = *obj*.ValidConnectorTypes

Variable [\(Type\)](#) - [Description](#)

value (Variant) List of connector types

obj Any of the following:

[GuidedCalibration](#) (object)

[SMCType](#) (object)

[VMCType](#) (object)

Return Type Variant

Default Not Applicable

Examples `value = SMC.ValidConnectorTypes`

[C++ Syntax](#) HRESULT get_ValidConnectorTypes(VARIANT* connectorTypes);

Interface IGuidedCalibration
SMCType
VMCType

Value Property

Description Write or read a value (setting) for the current element.

See a [list of configurable elements and settings](#) for various PNA models.

VB Syntax *pathElement.Value = value*

Variable [\(Type\)](#) - Description

pathElement A [PathElement](#) (object)

value **(String)** Value for the element. Use pathElement.Values to return a list of valid settings for this element.

Return Type String

Default Not Applicable

Examples `' Set the "Combiner" element to value "Reversed"`

```
chan.PathConfiguration.Element("Combiner").Value = "Reversed"
```

```
setting=pathElement.Value
```

C++ Syntax HRESULT get_Value(BSTR* pValue);
HRESULT put_Value(BSTR value);

Interface IPathElement

Last Modified:

14-Dec-2006 MX New topic

Values Property

Description Returns an array of valid settings that can be used with the element object.

See a [list of configurable elements and settings](#) for various PNA models.

VB Syntax *values* = *pathElement*.**Values**

Variable [\(Type\)](#) - Description

values **(Variant array)** Variable to store the array of valid settings for the element.

pathElement A [PathElement](#) **(object)**

Return Type Variant array

Default Not Applicable

Examples `settings=pathElement.Values`

C++ Syntax HRESULT Values(VARIANT* pValues);

Interface IPathElement

Last Modified:

14-Dec-2006 MX New topic

VelocityFactor Property

Description Sets the velocity factor to be used with Electrical Delay, Port Extensions, and Time Domain marker distance calculations.

VB Syntax `app.VelocityFactor = value`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

value **(double)** - Velocity factor. Choose a number between: **0** and **10**
(.66 polyethylene dielectric; .7 PTFE dielectric)

**Return
Type** Double

Default 1

Examples `app.VelocityFactor = .66 'Write`

`RelVel = app.VelocityFactor 'Read`

C++ Syntax HRESULT get_VelocityFactor(double *pVal)
HRESULT put_VelocityFactor(double newVal)

Interface IApplication

View Property

Description Sets (or returns) the type of trace displayed on the screen.

VB Syntax *meas.View = value*

Variable [\(Type\)](#) - Description

meas A measurement (**object**)

value (**enum NAView**) - Type of trace. Choose from:

0 - naData

1 - naDataAndMemory

2 - naMemory

3 - naNoTrace

Note: The **naData** trace may reflect the result of a [TraceMath](#) operation.

Return Type NAView

Default naData

Examples `meas.View = naData 'Write`

`trceview = meas.View 'Read`

C++ Syntax HRESULT get_View(tagNAView* pView)
HRESULT put_View(tagNAView newView)

Interface IMeasurement

Visible Property

Description Makes the Network Analyzer application visible or not visible. In the Not Visible state, the analyzer cycle time for making measurements can be significantly faster because the display does not process data.

VB Syntax `app.Visible = state`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

state (boolean)

False - Network Analyzer application **NOT** visible

True - Network Analyzer application **IS** visible

**Return
Type** Boolean

Default True

Examples `app.Visible = False 'Write`

`vis = app.Visible 'Read`

C++ Syntax HRESULT get_Visible(VARIANT_BOOL * bVisible)
HRESULT put_Visible(VARIANT_BOOL bVisible)

Interface IApplication

WGCutoffFreq Property

Description Sets or returns the value of the waveguide cut off frequency.

VB Syntax *meas.WGCutoffFreq = value*

Variable [\(Type\)](#) - Description

meas A Measurement **(object)**

value **(double)** - Frequency in Hertz.

Return Type Double

Default Not Applicable

Examples `Print meas.WGCutoffFreq 'prints the value of the waveguide cut off frequency`

C++ Syntax HRESULT get_WGCutoffFreq(double *pVal);
HRESULT put_WGCutoffFreq(double newVal);

Interface IMeasurement2

Width Property

Description Sets the pulse width - the amount of time that the pulse is ON.

VB Syntax *pulse.Width (n) = value*

Variable [\(Type\)](#) - Description

pulse A [PulseGenerator](#) (object)

n **(Integer)** Pulse generator number. Choose from 0 to 4.
0 is the generator that pulses the ADC.

value **(Double)** Pulse width in seconds. Choose a value from about 33ns to about 70 seconds.

Return Type Double

Default 1e-4 sec

Examples

```
pulse.Width = 1ms 'Write
```

```
value = pulse.Width 'Read
```

C++ Syntax HRESULT get_Width (integer pulse, double* width);
HRESULT put_Width (integer pulse, double width);

Interface IPulseGenerator

Last Modified:

2-Jan-2007 MX New topic

Read-only

WindowNumber Property

Description Returns the window number. You might use this property to identify a particular window so that you can create a new Measurement in that window.

VB Syntax *value* = *win*.**WindowNumber**

Variable [\(Type\)](#) - Description

win A NAWindow (object)

value **(long integer)** - Variable to store the returned window number

Return Type Long Integer

Default Not Applicable

Examples `value = app.ActiveNAWindow.WindowNumber`

[C++ Syntax](#) HRESULT (long* windowNumber);

Interface INAWindow

WindowState Property

Description Sets or returns the window setting of Maximized, Minimized, or Normal. To arrange all of the windows, use app.[ArrangeWindows](#).

VB Syntax *object*.**WindowState** = *value*

Variable [\(Type\)](#) - **Description**

object An [Application](#) (object) - main window
or
A NaWindow (**object**) - data windows

value (**enum NAWindowStates**) - The window state. Choose from:
0 - naMinimized - Minimizes the window to an Icon on the lower toolbar
1 - naMaximized - Maximizes the window
2 - naNormal - changes the window size to the user defined setting (between Max and Min).

Return Type Long Integer

Default naMaximized

Examples

```
app.WindowState = naMinimized 'changes the Network Analyzer application
window to an icon. -Write
win.WindowState = naNormal 'changes the window defined by the win object
variable to user defined settings. -Write

winstat = app.WindowState 'Read
```

C++ Syntax HRESULT get_WindowState(tagNAWindowStates *pVal)
HRESULT put_WindowState(tagNAWindowStates newVal)

Interface INAWindow
IApplication

XAxisAnnotation Property

Description Returns the X-Axis annotation of the specified tuning sweep.

VB Syntax *value* = *embedLODiag.XAxisAnnotation* (*n*)

Variable [\(Type\)](#) - Description

value **(String)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) (**object**)

n (Long) Tuning sweep number. Use [NumberOfSweeps](#) to find the number of sweeps taken.

Default Not Applicable

Examples `data= embedLO.XAxisAnnotation 3 'read`

C++ Syntax HRESULT XAxisAnnotation (long sweep, BSTR* annotation);

Interface IEmbeddedLODiagnostic

Last Modified:

13-Apr-2007 MX New topic

XAxisPointSpacing Property

Description Sets X-axis Point Spacing for the displaytraces measured with segment sweeps on the active channel.

VB Syntax *chan.XAxisPointSpacing = value*

Variable [\(Type\)](#) - Description

chan A Channel (**object**)

value (**Enum as naStates**) - Choose from:

0 - naOFF - Turns X-axis Point Spacing OFF

1 - naON - Turns X-axis Point Spacing ON

Return Type Enum

Default 0 - naOFF

Examples `chan.XAxisPointSpacing = naOFF 'Write`

`xspac = chan.XAxisPointSpacing 'Read`

C++ Syntax HRESULT get_XAxisPointSpacing (tagNAStates *pState);
HRESULT put_XAxisPointSpacing (tagNAStates newState);

Interface IChannel2

XAxisStart Property

Description Returns the X-Axis start value of the specified tuning sweep.

VB Syntax *value* = *embedLODiag*.**XAxisStart** (*n*)

Variable [\(Type\)](#) - **Description**

value **(Double)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) **(object)**

n (Long) Tuning sweep number. Use [NumberOfSweeps](#) to find the number of sweeps taken.

Default Not Applicable

Examples `data= embedLO.XAxisStart 3 'read`

C++ Syntax HRESULT XAxisStart (long sweep, double* start);

Interface IEmbeddedLODiagnostic

Last Modified:

13-Apr-2007 MX New topic

XAxisStop Property

Description Returns the X-Axis stop value of the specified tuning sweep.

VB Syntax *value* = *embedLODiag.XAxisStop* (*n*)

Variable [\(Type\)](#) - Description

value **(Double)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) **(object)**

n (Long) Tuning sweep number. Use [NumberOfSweeps](#) to find the number of sweeps taken.

Default Not Applicable

Examples `data= embedLO.XAxisStop 3 'read`

C++ Syntax HRESULT XAxisStop (long sweep, double* start);

Interface IEmbeddedLODiagnostic

Last Modified:

13-Apr-2007 MX New topic

YAxisAnnotation Property

Description Returns the Y-Axis annotation of the specified tuning sweep.

VB Syntax *value* = *embedLODiag*.YAxisAnnotation (*n*)

Variable [\(Type\)](#) - Description

value **(String)** Variable to store the returned data.

embedLODiag An [EmbeddedLODiagnostic](#) (**object**)

n (Long) Tuning sweep number. Use [NumberOfSweeps](#) to find the number of sweeps taken.

Default Not Applicable

Examples `data= embedLO.YAxisAnnotation 3 'read`

C++ Syntax HRESULT YAxisAnnotation (long sweep, BSTR* annotation);

Interface IEmbeddedLODiagnostic

Last Modified:

13-Apr-2007 MX New topic

YScale Property

Description Sets or returns the Y-axis Per-Division value of the active trace.

VB Syntax *trace*.**YScale** = *value*

Variable [\(Type\)](#) - Description

trace A Trace **(object)**

value **(double)** - Scale /division number. Units and range depend on the current data format.

Return Type Double

Default 10 (db)

Examples `trac.YScale = 5 'Write`

`yscl = trac.YScale 'Read`

C++ Syntax HRESULT get_YScale(double *pVal)
HRESULT put_YScale(double newVal)

Interface ITrace

Z0 Property

Description Sets and Returns the characteristic impedance for the calibration standard.

VB Syntax *calstd.Z0* = *value*

Variable [\(Type\)](#) - Description

calstd A CalStandard **(object)**. Use calKit.[GetCalStandard](#) to get a handle to the standard.

value **(single)** -Impedance in Ohms

Return Type Single

Default Not Applicable

Examples `calstd.Z0 = 50 'Write`

`impedance = calstd.Z0 'Read`

C++ Syntax HRESULT get_Z0(float *pVal)
HRESULT put_Z0(float newVal)

Interface ICalStandard

Abort Method

Description Ends the current measurement sweep on the channel.

VB Syntax *chan.Abort* [*sync*]

Variable [\(Type\)](#) - Description

chan **(object)** - A [Channel](#) object

sync **(boolean)** - wait (or not) for the analyzer to stop before processing subsequent commands. Optional argument; if unspecified, value is set to False. Choose from:
True - synchronize - the analyzer will not process subsequent commands until the current measurement is aborted.
False - continue processing commands immediately

Return Type None

Default None

Examples

```
chan.abort True  
chan.abort
```

C++ Syntax HRESULT Abort(VARIANT_BOOL bSynchronize);

Interface IChannel

AbortPowerAcquisition Method

Description Aborts a source power cal acquisition sweep that is currently in progress.

VB Syntax *powerCalibrator*.**AbortPowerAcquisition**

Variable [\(Type\)](#) - Description

powerCalibrator **(object)** - A [SourcePowerCalibrator](#) object

Return Type None

Default Not Applicable

Examples `powerCalibrator.AbortPowerAcquisition`

C++ Syntax HRESULT AbortPowerAcquisition();

Interface ISourcePowerCalibrator

AcquireCalStandard Method - Superseded

Description **Note:** This command has been replaced by [AcquireCalStandard2 Method](#), which provides for acquisition of sliding load standards. All other functionality is identical.

VB Syntax `cal.AcquireCalStandard std[,index]`

Variable [\(Type\) - Description](#)

cal A Calibrator **(object)**

std **(enum NACalClass)** Standard to be measured. Choose from:

- 1 - naClassA
- 2 - naClassB
- 3 - naClassC
- 4 - naClassD
- 5 - naClassE
- 6 - naReferenceRatioLine
- 7 - naReferenceRatioThru

SOLT Standards

- 1 - naSOLT_Open
- 2 - naSOLT_Short
- 3 - naSOLT_Load
- 4 - naSOLT_Thru
- 5 - naSOLT_Isolation

TRL Standards

- 1 - naTRL_Reflection
- 2 - naTRL_Line_Reflection
- 3 - naTRL_Line_Tracking
- 4 - naTRL_Thru
- 5 - naTRL_Isolation

index **(long integer)** number of the standard. Optional argument - Used if there is more than one standard required to cover the necessary frequency range. If unspecified, value is set to 1.

Note The behavior has changed with PNA revisions as follows:

- Before 6.01: Accepted 0 and changed it to 1
- 6.01 to 6.04: Did NOT accept 0
- 6.04.11 and higher: Accepts 0 and changes it to 1

Return Type None

Default Not Applicable

Examples `Cal.AcquireCalStandard naSOLT_Thru 'Write`

C++ Syntax HRESULT AcquireCalStandard(tagNACalClass enumClass, short standardNumber)

Interface ICalibrator

Last modified:

10/05/06 Modified Index argument.

AcquireCalStandard2 Method

Description Measures the specified standard from the selected calibration kit. The calibration kit is selected using [app.CalKitType](#).

For 2-port calibration, it is also necessary to specify direction with [AcquisitionDirection](#).

To omit Isolation from a 2-port calibration, do not Acquire a cal standard for naSOLT_Isolation.

For using two sets of standards, see [Simultaneous2PortAcquisition Property](#).

Note: This command replaces [AcquireCalStandard](#). This command provides for the acquisition of a sliding load cal. All other functionality is identical.

VB Syntax `cal.AcquireCalStandard2 std[,index][,slide]`

Variable [\(Type\)](#) - Description

cal A [Calibrator](#) (object)

std (**enum NACalClass**) Standard to be measured. Choose from:

1 - naClassA

2 - naClassB

3 - naClassC

4 - naClassD

5 - naClassE

6 - naReferenceRatioLine

7 - naReferenceRatioThru

SOLT Standards

1 - naSOLT_Open

2 - naSOLT_Short

3 - naSOLT_Load

4 - naSOLT_Thru

5 - naSOLT_Isolation

TRL Standards

1 - naTRL_Reflection

2 - naTRL_Line_Reflection

3 - naTRL_Line_Tracking

4 - naTRL_Thru

5 - naTRL_Isolation

[index] **(long integer)** Number of the standard. Optional argument - Used if there is more than one standard required to cover the necessary frequency range. If unspecified, value is set to 1.

Note The behavior has changed with PNA revisions as follows:

- Before 6.01: Accepted 0 and changed it to 1
- 6.01 to 6.04: Did NOT accept 0
- 6.04.11 and higher: Accepts 0 and changes it to 1

[slide] **(enum as NACalStandardSlidingState)** Optional argument. State of the sliding load. The slide should be set a minimum of five times. Seven is the maximum that can be stored. Choose from:

0 - **naNotSlidingStd** - not using a sliding load - Default if not specified.

1 - **naSlidelsSet** - slide is set for acquisition

2 - **naSlidelsDone** - this next acquisition will be the last. Calculations will then be performed.

Return Type None

Default Not Applicable

Examples

```
Cal.AcquireCalStandard2 naSOLT_Thru
Cal.AcquireCalStandard2 naSOLT_Thru,2,naNotSlidingStd
'measures the second standard listed in the class of naSOLT_Thru
```

C++ Syntax HRESULT AcquireCalStandard2(NACalClass enumClass, long standardPosition, NACalStandardSlidingState slidingStandardState)

Interface ICalibrator

Last modified:

10/05/06 Modified Index argument.

AcquireCalConfidenceCheckECALEX Method

Description	<p>This method replaces AcquireCalConfidenceCheckECAL.</p> <p>Transfers confidence data from the specified ECal module into the measurement's memory trace. The data is transferred to the specified S-parameter on the same channel as this Calibrator object.</p> <p>The characterization within the ECal module that the confidence data will be read from is specified by ECALCharacterizationEx. The default value is 0.</p>
VB Syntax	<code>cal.AcquireCalConfidenceCheckECALEX Sparam [,ecalModule]</code>
Variable	(Type) - Description
<i>cal</i>	A Calibrator (object)
<i>Sparam</i>	(String) S-parameter to transfer confidence data to. This parameter must be present on the same channel as the calibrator object.
<i>ecalModule</i>	<p>(Integer) – Optional argument. ECal module.</p> <p>Choose from modules 1 through 8</p> <p>Use IsECALModuleFoundEx to determine the number of modules connected to the PNA</p> <p>Use GetECALModuleInfoEx to return the model and serial number of each module.</p>
Return Type	None
Default	Not applicable
Examples	<code>Cal.AcquireCalConfidenceCheckECALEX "S11", 2</code>
C++ Syntax	<code>HRESULT AcquireCalConfidenceCheckECALEX(BSTR strParameter, long moduleNumber = 1);</code>
Interface	ICalibrator4

AcquireStep Method

Description Acquire the measurement data for the specified step in the calibration process.

Note: Guided Cal allows you to measure standards in any order. [See an example.](#)

VB Syntax *obj.AcquireStep* (*n*)

Variable [\(Type\)](#) - Description

obj Any of the following:
[GuidedCalibration](#) (object)
[SMCType](#) (object)
[VMCType](#) (object)

n Step number in the calibration process.
Use [GenerateSteps](#) to determine the total number of steps.
Use [GetStepDescription](#) to read the description of each step.

Return Type Not Applicable

Default Not Applicable

Examples `VMC.AcquireStep (3)`

C++ Syntax HRESULT put_AcquireStep([in] long step);

Interface SMCType
VMCType
IGuidedCalibration

Last Modified:

20-Jan-2007 Added any order note.

AcquirePowerReadingsEx Method

Description	This command replaces AcquirePowerReadings Method Initiates a source power cal acquisition.
VB Syntax	<i>powerCalibrator</i> . AcquirePowerReadingsEx <i>calMethod</i> , <i>acqdevice</i> [, <i>sync</i>]
Variable	(Type) - Description
<i>powerCalibrator</i>	(object) - A SourcePowerCalibrator object
<i>calMethod</i>	(enum NASourcePowerCalMethod) Selects the calibration method to be used for the source power cal acquisition. 0 – naPowerMeter Use power meter for all readings. 1 - naPowerMeterAndReceiver Power meter for the first iteration; then use the reference receiver for remaining readings if necessary. 2 - naReceiver Use PNA measurement receiver for all readings.
<i>acqdevice</i>	(String) The specific acquisition device to be used. NOT case sensitive. Choose from: If <i>calMethod</i> = naPowerMeter or naPowerMeterAndReceiver , choose from: "ASEN" -- Sensor on power meter channel A. "BSEN" -- Sensor on power meter channel B. To use the sensor that currently corresponds to the frequency of interest, use the value from the PowerAcquisitionDevice property. If <i>calMethod</i> = naReceiver , choose from the receiver names for your specific PNA using either physical receiver notation or logical receiver notation . For example, "a1" or "A".
[<i>sync</i>]	(boolean) Optional argument. If not specified, value is set to False. Choose from: True (1) – The method does not return until this acquisition has completed (the program calling this method is halted while waiting for the method to return). False (0) – The method initiates an acquisition then returns immediately (while the acquisition still proceeds). The program calling this method can then perform other operations during the acquisition.
Return Type	None
Default	Not Applicable
Examples	<pre>powerCalibrator.AcquirePowerReadingsEx naPowerMeter, "asen", True powerCalibrator.AcquirePowerReadingsEx naReceiver, "b2"</pre>
C++ Syntax	HRESULT AcquirePowerReadingsEx (tagNASourcePowerCalMethod enumCalMethod, BSTR bstrAcqDevice, VARIANT_BOOL bSync);

Last modified:

9/12/06 MQ New command to accommodate receiver only SPC

Activate Method

Description	<p>Makes an object the Active Object. When making a measurement active, the channel and window the measurement is contained in becomes the active channel and active window.</p> <p>In order to change properties on any of the active objects, you must first have a "handle" to the active object using the Set command. For more information, See Getting a Handle to an Object.</p> <p>You do not have to make an object "Active" to set or read its properties remotely. But an object must be "Active" to change its values from the front panel.</p>
VB Syntax	<i>object</i> . Activate
Variable	(Type) - Description
<i>object</i>	Measurement (object) or Marker (object)
Return Type	Not Applicable
Default	Not Applicable
Examples	<pre>meas.Activate mark.Activate</pre>
C++ Syntax	HRESULT Activate()
Interface	IMeasurement IMarker

ActivateMarker Method

Description Makes a marker the Active Marker. Use meas.[ActiveMarker](#) to read the number of the active marker.

VB Syntax *meas*.**ActivateMarker**(*Mnum*)

Variable [\(Type\)](#) - Description

meas A [Measurement](#) (object)

Mnum **(long integer)** - the number of the marker to make active. Choose any marker number from **1** to **9**.

Return Type None

Default Not Applicable

Examples `meas.ActivateMarker(1) 'Write`

C++ Syntax HRESULT ActivateMarker(long IMarkerNumber)

Interface IMeasurement

Remarks Use [ReferenceMarkerState](#) to control the Reference marker.

ActivateWindow Method

Description Makes a window object the Active Window.

In order to change properties on any of the active objects, you must first have a "handle" to the active object using the **Set** command. For more information, See [Programming the Analyzer Object Model](#).

You do not have to make an object "Active" to set or read its properties remotely. But an object must be "Active" to change its values from the front panel.

VB Syntax `app.ActivateWindow n`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

n (**long**) Number of the window to make active

Return Type Window Object

Default Not Applicable

Examples `app.ActivateWindow 4`

C++ Syntax HRESULT ActivateWindow(long WindowNumber)

Interface IApplication

[See the PNA Object Model](#)

Add (channels) Method

Description Creates a channel and returns a handle to it. If the channel already exists, it returns the handle to the existing channel.

VB Syntax *chans.Add (item)*

Variable [\(Type\)](#) - Description

chans A [Channel collection](#) (**object**)

item (**variant**) - Channel number.

Return Type Channel

Default Not Applicable

Examples `chans.Add 3 'Creates channel 3`

C++ Syntax HRESULT Add(VARIANT numVal, IChannel** pChannel)

Interface IChannels

Add (measurement) Method

Description Adds a Measurement to the collection.

VB Syntax `meas.Add channel,param,source[,window]`

meas A [Measurements](#) collection (**object**)

channel (**long**) - Channel number of the new measurement.

param (**string**) - New parameter. Case insensitive.

For S-parameters:

[Any S-parameter that can be measured by your PNA.](#)

Single-digit port numbers can be separated by "_" (underscore). For example: "**S21**" or "**S2_1**"

Double-digit port numbers MUST be separated by underscore. For example: "**S10_1**"

For Ratioed measurements:

Any two receivers in your PNA separated by "/". For example: "**A/R1**"

See the [block diagram](#) showing the receivers in YOUR PNA.

For Unratioed (absolute power) measurements:

Any receiver in the PNA. For example: "**A**"

See the [block diagram](#) showing the receivers in YOUR PNA

With PNA Rev 6.2, **Ratioed** and **Unratioed** measurements can also use **logical receiver notation** to refer to receivers. This notation makes it easy to refer to receivers with an [external test set](#) connected to the PNA. You do not need to know which physical receiver is used for each test port. [Learn more.](#)

For ADC measurements

Any ADC receiver in the PNA followed by a comma, then the source port.

For example: "**AI1_2**" indicates the Analog Input1 with source port of 2.

[Learn more about ADC receiver measurements.](#)

For Balanced S-parameter measurements:

`"topology:Sabxy"`

topology - Choose from:

- **sbal** - single-ended to balanced
- **ssb** - single-ended / single-ended to balanced
- **bbal** - balanced to balanced

Sabxy -

Where

a - device output (receive) mode

b - device input (source) mode

(choose from the following for both a and b:)

- **d** - differential
- **c** - common
- **s** - single ended

x - device output (receive) logical port number

y - device input (source) logical port number

For example: "**sbal:sdd42**"

[See an example program](#)

For [Imbalance](#) and [Common Mode Rejection](#) measurements:

"*topology:parameter*" Choose from:

Choose this:	To get this:	
	Topology	Parameter
" SBAL:IMBSB "	single-ended to balanced	imbalance
" SBAL:CMRRSB1 "	single-ended to balanced	common mode rejection (Sds21/Scs21)
" SBAL:CMRRSB2 "	single-ended to balanced	common mode rejection (Ssd12/Scs12)
" SSB:IMB1SSB "	single-ended / single-ended to balanced	imbalance 1
" SSB:IMB2SSB "	single-ended / single-ended to balanced	imbalance 2
" SSB:CMRRSSB1 "	single-ended / single-ended to balanced	common mode rejection (Sds31/Scs31)
" SSB:CMRRSSB2 "	single-ended / single-ended to balanced	common mode rejection (Sds32/Scs32)
" BBAL:IMB1BB "	balanced to balanced	imbalance 1

"BBAL:IMB2BB"	balanced to balanced	imbalance 2
"BBAL:CMRRBB"	balanced to balanced	common mode rejection (Sdd21/Sc21)

source **(long integer)** - Source port number; if unspecified, value is set to 1. Only used for non-s-parameter measurements; ignored if s-parameter.

window **(long integer)** - Optional argument. Window number of the new measurement. If unspecified, the S-Parameter will be created in the Active Window. Choose between 1 and the [maximum number of windows allowed on the PNA](#). If unspecified, the measurement will be created in the Active Window.

See also [Traces, Channels, and Windows on the PNA](#)

Return Type None

Default None

Examples `meass.Add 3,"A/R1",1,1` 'Adds A/R1 measurement to channel 3 in window 1

C++ Syntax HRESULT Add(long ChannelNum, BSTR strParameter, long srcPort, VARIANT_BOOL bNewWindow)

Interface IMeasurements

Last modified:

9/12/06 MQ Added logical receiver notation and number of windows.

Add (NAWindows) Method

Description Add a window to the display. Does not add a measurement. The window number must not already exist.

VB Syntax *wins.Add [item]*

Variable [\(Type\)](#) - Description

wins A [NAWindow](#) collection (**object**)

item (**variant**) - optional argument; Window number. Choose between 1 and the [maximum number of windows allowed on the PNA](#).. If unspecified, the measurement will be created in the Active Window.

See also [Traces, Channels, and Windows on the PNA](#)

Return Type Object

Default Not Applicable

Examples `wins.Add 3 'Creates a window number 3`

C++ Syntax HRESULT Add(long windowNumber)

Interface INAWindows

Last modified:

9/12/06 Modified for number of windows

Add (PowerLossSegment) Method

Description	Adds a PowerLossSegment to the PowerLossSegments collection. To ensure predictable results, it is best to remove all segments before defining a new list of segments. For each segment in the collection, do a seg. Remove .
VB Syntax	<code>segs.Add (item [size])</code>
Variable	(Type) - Description
<i>segs</i>	(object) - A PowerLossSegments collection (object)
<i>item</i>	(variant) - Number of the new segment. If it already exists, a new segment is inserted at the requested position.
<i>size</i>	(long integer) - Optional argument. The number of segments to add, starting with item. If unspecified, value is set to 1.
Return Type	None
Default	Not Applicable
Examples	<code>segs.Add 1, 4 'Adds segments 1,2,3 and 4</code>
C++ Syntax	HRESULT Add(VARIANT index, long size);
Interface	IPowerLossSegments

Add (PowerSensorCalFactorSegment) Method

Description	Adds a PowerSensorCalFactorSegment to the CalFactorSegments collection. To ensure predictable results, it is best to remove all segments before defining a new list of segments. For each segment in the collection, do a seg. Remove .
VB Syntax	<code>segs.Add (item [size])</code>
Variable	(Type) - Description
<i>segs</i>	(object) - A CalFactorSegments collection (object)
<i>item</i>	(variant) - Number of the new segment. If it already exists, a new segment is inserted at the requested position.
<i>size</i>	(long integer) - Optional argument. The number of segments to add, starting with item. If unspecified, value is set to 1.
Return Type	None
Default	Not Applicable
Examples	<code>segs.Add 1, 4 'Adds segments 1,2,3 and 4</code>
C++ Syntax	HRESULT Add(VARIANT index, long size);
Interface	ICalFactorSegments

Add (segment) Method

Description Adds segments to the Segments collection, but does not turn the segments ON.

VB Syntax `segs.Add (item, [size])`

segs A [segments](#) collection (**object**)

item (**variant**) Number of the new segment. If it already exists, a new segment is inserted at the requested position.

size (**long integer**) Optional argument. The number of segments to add, starting with *item*. If unspecified, value is set to 1.

Return Type None

Default None

Examples `Segs.Add 1, 4 'Adds segments 1,2,3,and 4. (does NOT automatically turn segments ON)`

C++ Syntax `HRESULT Add(VARIANT index, long size);`

Interface ISegments

Remarks To ensure predictable results, it is best to remove all segments before defining a segment list. For each segment in the collection, do a seg.[Remove](#).

Add (Testset) Method

Description Adds a testset to the ExternalTestsets Collection and loads the configuration file.

VB Syntax *testsets.Add (model,address)*

Variable [\(Type\)](#) - Description

testsets An [ExternalTestsets](#) (collection)

model **(String)** Model of the testset to be added, NOT case-sensitive.

There is no COM command to read a list of currently-supported test sets. However, the following SCPI command can be used with the following format:

```
string = SCPIStringParser.Execute ( "SENSe:MUlTIplexer:CATalog?" )
```

address **(Integer)** Address of the testset to be added.

Return Type Not Applicable

Default Not Applicable

Examples

```
testsets.Add("Z5623AK66",12) ' add Z5623AK66 test at address 12
to testsets collection
```

[See an example program](#)

C++ Syntax HRESULT Add(BSTR typename, long address)

Interface [IExternalTestsets](#)

AllowAllEvents Method

Description Sets event filtering to monitor all events in the analyzer. This is the default setting when subscribing to events. This could slow the measurement speed of the analyzer significantly.

VB Syntax `app.AllowAllEvents`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

Return Type Not Applicable

Default Not Applicable

Examples `app.AllowAllEvents`

C++ Syntax HRESULT AllowAllEvents()

Interface IApplication

AllowEventCategory Method

Description Sets event filtering to monitor a category of event.

VB Syntax *app.AllowEventCategory, category, state*

Variable [\(Type\)](#) - Description

app An [Application](#) (**object**)

category Category to monitor. Choose from list in [Working with the Analyzer's Events](#)

state **(boolean)**
True - monitor
False - do not monitor

Return Type Not Applicable

Default Not Applicable

Examples `app.AllowEventCategory`

C++ Syntax HRESULT AllowEventCategory(tagNAEventCategory category, VARIANT_BOOL bAllow)

Interface IApplication

AllowEventMessage Method

Description Sets event filtering to monitor specific events.

VB Syntax *app.AllowEventMessage event*

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

event Event to monitor. Refer to list in [Working with the Analyzer's Events](#)

state **(boolean)**
True - monitor
False - do not monitor

Return Type Not Applicable

Default Not Applicable

Examples `app.AllowEventMessage`

C++ Syntax HRESULT AllowEventMessage(tagNAEventID eventID, VARIANT_BOOL bAllow)

Interface IApplication

AllowEventSeverity Method

Description Sets event filtering to monitor levels of severity.

VB Syntax `app.AllowEventSeverity severity,state`

Variable [\(Type\)](#) - Description

app An [Application](#) (**object**)

severity (**enum naEventSeverity**) Choose from:naEventSeverityERROR
naEventSeverityINFORMATIONAL
naEventSeveritySUCCESS
naEventSeverityWARNING

state (**boolean**)
True - monitor
False - do not monitor

Return Type Not Applicable

Default Not Applicable

Examples `app.AllowEventSeverity`

C++ Syntax HRESULT AllowEventSeverity(tagNAEventSeverity severity, VARIANT_BOOL bAllow)

Interface IApplication

Apply Method

Description Applies the mixer setup to the mixer object and turns the channel ON. (Performs the same function as the Apply button on the [mixer setup dialog box](#).)

VB Syntax *mxr*.**Apply**

Variable [\(Type\)](#) - **Description**

mxr Mixer Interface pointer to the [Measurement](#) (object)

Return Type Not Applicable

Default Not Applicable

Examples `mxr.Apply`

C++ Syntax HRESULT Apply()

Interface IMixer3

ApplyDeltaMatchFromCalSet Method

Description Specifies a Cal Set as a source of delta match correction.

If 'GUID' is not supplied then the Global Delta Match Cal Set is assumed. An error is returned if the specified Cal Set does not meet the following Delta Match criteria. The Global Delta Match Cal can ALWAYS be applied.

- Must have been performed using ECal or as a guided mechanical cal (not Unguided).
- Must have the same start freq, stop freq, and number of points as the channel being calibrated.
- Must calibrate the ports that are required by the TRL or Unknown Thru Cal as indicated by [PortsNeedingDeltaMatch Property](#).

[Learn more about Delta match calibration.](#)

See example of a complete Delta Match calibration.

VB Syntax *guided*.**ApplyDeltaMatchFromCalSet** [*GUID*]

Variable [\(Type\)](#) - Description

guided [GuidedCalibration](#) (object)

GUID Optional Argument. GUID of the Cal Set to use. If unspecified, the Global Delta Match Cal Set is used.

Return Type Not Applicable

Default Not Applicable

Examples `guided.ApplyDeltaMatchFromCalSet "{2B893E7A-971A-11d5-8D6C-00108334AE96}"`

C++ Syntax HRESULT ApplyDeltaMatchFromCalSet(BSTR calsetGUID);

Interface IGuidedCalibration2

ApplyPowerCorrectionValuesEx Method

Description This command replaces [ApplyPowerCorrectionValues Method](#).

Applies the array of power correction values to the channel memory and turns correction ON. Perform after completing a source power cal acquisition sweep.

This command does NOT save the correction values. To save correction values, save an [instrument / calibration state \(*.cst file\)](#) after performing a source power cal.

Optionally, as part of the source power calibration, perform calibration of the reference receiver used in the power calibration. [Learn more.](#)

VB Syntax *powerCalibrator*.**ApplyPowerCorrectionValuesEX** [*rRec*]

Variable [\(Type\)](#) - **Description**

powerCalibrator **(object)** - A [SourcePowerCalibrator](#) object

rRec (Enum as NASourcePowerApplyCorrectionOption) Optional argument. Choose from:

0 - naSourcePowerApplyCorrectionDefault Do NOT perform and save a calibration of the reference receiver. (Default if not specified).

1 - naIncludeReferenceReceiverPowerCal Perform and save a calibration of the reference receiver. The Cal Set, which includes only the reference receiver cal, is saved to the destination specified by [RemoteCalStoragePreference](#).

Return Type None

Default Not Applicable

Examples

```
powerCalibrator.ApplyPowerCorrectionValuesEX
powerCalibrator.ApplyPowerCorrectionValuesEX
(naIncludeReferenceReceiverPowerCal)
```

C++ Syntax HRESULT ApplyPowerCorrectionValuesEx(enum
NASourcePowerApplyCorrectionOption option);

Interface ISourcePowerCalibrator5

Last Modified:

23-Apr-2007 MX New topic

ApplySourcePowerCorrectionTo Method

Description Copies and applies an existing Source Power Calibration to another channel.

VB Syntax *chan*.**ApplySourcePowerCorrectionTo** (*fromPortNum*, *targetChan*, *targetPortNum*);

Variable [\(Type\)](#) - Description

chan A [Channel](#) (object)

fromPortNum (Long) Port number of the existing source power correction.

targetChan (Long) Channel number to which the source power correction will be copied.

targetPortNum (Long) Port number to which the source power correction will be applied.

Return Type Not Applicable

Default Not Applicable

Examples `chan.ApplySourcePowerCorrectionTo 1,2,1`

C++ Syntax HRESULT ApplySourcePowerCalibrationTo (long fromPortNumber, long otherChannelNumber, long portNumber);

Interface IChannel11

Last Modified:

20-Jul-2007 MX New topic

AutoPortExtMeasure Method

Description Measures either an OPEN or SHORT standard. When this command is sent, the PNA acquires the measurement with which to set automatic port extensions. [Learn more about choosing which standard to measure.](#)

VB Syntax *fixture*.AutoPortExtMeasure *value*

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

value (Enum as NAAutoPortExtMeasure)
0 - naAPEM_OPEN - Measure OPEN
1 - naAPEM_SHORT - Measure SHORT

Return Type ENUM

Default Not Applicable

Examples `fixture.AutoPortExtMeasure naAPEM_OPEN`

C++ Syntax HRESULT get_AutoPortExtMeasure(tagNAAutoPortExtMeasure *pVal);

Interface IFixturing2

AutoPortExtReset Method

Description Clears old port extension delay and loss data in preparation for acquiring new data. Send this command prior to sending a new series of measurements using [AutoPortExtMeasure Method](#). If acquiring both OPEN and SHORT standards, do not send this command between those acquisitions.

VB Syntax *fixture*.AutoPortExtReset

Variable [\(Type\)](#) - Description

fixture A [Fixturing](#) (object)

Return Type Not Applicable

Default Not Applicable

Examples `fixture.AutoPortExtReset`

C++ Syntax HRESULT AutoPortExtReset();

Interface IFixturing2

Autoscale Method

Description	Trace Object - Autoscales only the ONE trace on which Autoscale is being called. NAWindow Object - Autoscales ALL of the traces in the Window on which Autoscale is being called.
VB Syntax	<i>object</i> .Autoscale
Variable	(Type) - Description
	<i>object</i> Trace (object) or NAWindow (object)
Return Type	Not Applicable
Default	Not Applicable
Examples	<pre>Trac.Autoscale 'Autoscales the trace Win.Autoscale 'Autoscales all the traces in the window -Write</pre>
C++ Syntax	HRESULT AutoScale()
Interface	INAWindow ITrace

AveragingRestart Method

Description Clears and restarts averaging of the measurement data.

VB Syntax *chan*.**AveragingRestart**

Variable [\(Type\)](#) - Description

chan A [Channel](#) (object)

Return Type Not Applicable

Default Not Applicable

Examples `chan.AveragingRestart`

[C++ Syntax](#) HRESULT AveragingRestart()

Interface IChannel

BuildHybridKit Method

Description	Use this method when you have different port connectors. This is a convenient way to combine two kits that match the connectors on your DUT.
VB Syntax	<i>app</i> . BuildHybridKit <i>port1Kit,p1sex,port2Kit,p2sex,adapter,user kit</i>
Variable	(Type) - Description
<i>app</i>	An Application (object)
<i>port1Kit</i> <i>port2Kit</i>	(enum NACalKit) - Specifies the two kits to be used to build the hybrid kit. Choose from: naCalKit_85032F_N50 naCalKit_85033E_3_5 naCalKit_85032B_N50 naCalKit_85033D_3_5 naCalKit_85038A_7_16 naCalKit_85052C_3_5_TRL naCalKit_User7 naCalKit_User8 naCalKit_User9 naCalKit_User10
<i>p1sex</i> <i>p2sex</i>	(enum NAPortSex) - Specifies the sex of the connector at that port. Choose from: naMale naFemale naDon'tCare
<i>adapter</i>	(enum NAAadapter) -Choose from: naUserkit - the electrical length of the adapter in the userKit specifications naZeroLength - no adapter
<i>userKit</i>	(enum NACalKit) - The Hybrid kit - Choose from the previous list of kits
Return Type	Not Applicable
Default	Not Applicable
Examples	<pre>app.BuildHybridKit naCalKit_85033E_3_5,naMale,naCalKit_85038A_7_16 ,naFemale,naUserkit,naCalKit_User8</pre>
C++ Syntax	HRESULT BuildHybridKit(tagNACalKit port1Kit, tagNAPortSex port1Sex, tagNACalKit port2Kit, tagNAPortSex port2Sex, tagNAAadapter adapter, tagNACalKit userKit)
Interface	IApplication

CalculateErrorCoefficients Method

Description This method is the final call in a calibration process. It calculates error-correction terms, turns error-correction ON and saves the error-correction terms to the channel's Cal Register or a User Cal Set.

Do NOT use this command during an ECAL.

Note: The destination (Cal Register or User Cal Set) is determined by the setting of the [RemoteCalStoragePreference](#) property.

VB Syntax `cal.CalculateErrorCoefficients`

Variable [\(Type\)](#) - Description

`cal` [Calibrator](#) (object)

Return Type Not Applicable

Default Not Applicable

Examples `Cal.CalculateErrorCoefficients`

C++ Syntax HRESULT CalculateErrorCoefficients()

Interface ICalibrator

Last Modified:

16-Apr-2007 MX Added link to Remote...

Calculate Method

Description Calculates the Input or Output frequencies of the mixer setup, applies the mixer setup to the mixer object, and turns the channel ON.

VB Syntax *mxr.Calculate* (*port*)

Variable [\(Type\)](#) - **Description**

mxr Mixer Interface pointer to the [Measurement](#) (object)

port (enum as MixerCalculation) Port of the mixer for which to calculate start and stop frequencies. Choose from:

enum		1st or only stage requires:	In addition, 2nd stage requires:
0	mixCalculateINPUT	<ul style="list-style-type: none"> Output Start and Stop frequencies LO frequency Output sideband (High or Low) 	<ul style="list-style-type: none"> IF Start and Stop frequencies 2nd LO frequency IF sideband (High or Low)
1	mixCalculateINPUT AndOUTPUT (2 stage mixers ONLY)	NA	<ul style="list-style-type: none"> IF Start and Stop frequencies Both LO frequencies
2	mixCalculateOUTPUT	<ul style="list-style-type: none"> Input Start and Stop frequencies LO frequency Output sideband (High or Low) 	<ul style="list-style-type: none"> IF Start and Stop frequencies 2nd LO frequency IF sideband (High or Low)
3	mixCalculateLO1	<ul style="list-style-type: none"> Input Start and Stop frequencies Output frequency Output sideband (High or Low) 	<ul style="list-style-type: none"> IF Start and Stop frequencies 2nd LO frequency IF sideband (High or Low)
4	mixCalculateLO2	NA	<ul style="list-style-type: none"> Input Start and stop frequencies 1st LO start and stop

	frequencies
	<ul style="list-style-type: none"> • Output frequency • IF sideband(High or Low) • Output sideband(High or Low)

Return Type Not Applicable

Default Not Applicable

Examples `mxr.Calculate (mixCalculateOUTPUT)`

C++ Syntax HRESULT Calculate()

Interface IMixer

ChangeParameter Method

Description Changes the parameter of the measurement.

VB Syntax `meas.ChangeParameter(param,src)`

Variable [\(Type\)](#) - Description

meas A [Measurement](#) (object)

param **(string)** - New parameter. Case insensitive.

For S-parameters:

[Any S-parameter that can be measured by your PNA.](#)

Single-digit port numbers can be separated by "_" (underscore). For example: "S21" or "S2_1"

Double-digit port numbers MUST be separated by underscore. For example: "S10_1"

For Ratioed measurements:

Any two receivers in your PNA separated by "/". For example: "A/R1"

See the [block diagram](#) showing the receivers in YOUR PNA.

For Unratioed (absolute power) measurements:

Any receiver in the PNA. For example: "A"

See the [block diagram](#) showing the receivers in YOUR PNA

With PNA Rev 6.2, **Ratioed** and **Unratioed** measurements can also use **logical receiver notation** to refer to receivers. This notation makes it easy to refer to receivers with an [external test set](#) connected to the PNA. You do not need to know which physical receiver is used for each test port. [Learn more.](#)

For ADC measurements

Any ADC receiver in the PNA.

For example: "AI1" indicates the Analog Input1.

[Learn more about ADC receiver measurements.](#)

For Balanced S-parameter measurements:

"*topology:Sabxy*"

topology - Choose from:

- **sbal** - single-ended to balanced
- **ssb** - single-ended / single-ended to balanced

- **bbal** - balanced to balanced

Sabxy -

Where

a - device output (receive) mode

b - device input (source) mode

(choose from the following for both a and b:)

- **d** - differential
- **c** - common
- **s** - single ended

x - device output (receive) logical port number

y - device input (source) logical port number

For example: "**sbal:sdd42**"

[See an example program](#)

For [Imbalance](#) and [Common Mode Rejection](#) measurements:

"*topology:parameter*" Choose from:

Choose this:	To get this:	
	Topology	Parameter
" SBAL:IMBSB "	single-ended to balanced	imbalance
" SBAL:CMRRSB1 "	single-ended to balanced	common mode rejection (Sds21/Scs21)
" SBAL:CMRRSB2 "	single-ended to balanced	common mode rejection (Ssd12/Scs12)
" SSB:IMB1SSB "	single-ended / single-ended to balanced	imbalance 1
" SSB:IMB2SSB "	single-ended / single-ended to balanced	imbalance 2
" SSB:CMRRSSB1 "	single-ended / single-ended to balanced	common mode rejection (Sds31/Scs31)
" SSB:CMRRSSB2 "	single-ended / single-ended to balanced	common mode rejection (Sds32/Scs32)

"BBAL:IMB1BB"	balanced to balanced	imbalance 1
"BBAL:IMB2BB"	balanced to balanced	imbalance 2
"BBAL:CMRRBB"	balanced to balanced	common mode rejection (Sdd21/Sc21)

src **(long integer)**

- Ignored if *param* is an S-Parameter
- Source port if *param* is a ratioed or unratioed measurement (including ADC measurements).

Use [GetPortNumber](#) to return the port number of a source that only has a string name, such as an [External Source](#).

Return Type Not Applicable

Default Not Applicable

Examples

```
meas.ChangeParameter "S11",2 '2 is the source port
meas.ChangeParameter "A/R1",2 '2 is the source port
meas.ChangeParameter "a1/b1",1 '1 is the source port
meas.ChangeParameter "R1",2 '2 is the source port
```

C++ Syntax HRESULT ChangeParameter(BSTR parameter, long lPort)

Interface IMeasurement

Last Modified:

30-Apr-2007 Modified for ADC and src strings

CheckPower Method

Description Measures power at a specified frequency. Use this method to test power level before and/or after applying a source power calibration.

VB Syntax *pow* = *pwrCal*.**CheckPower** (*device*, *freq* [, *unit*])

Variable [\(Type\)](#) - **Description**

pow **(double)** Variable to store power value returned by this method.

pwrCal A [SourcePowerCalibrator](#) **(object)**

device **(enum NAPowerAcquisitionDevice)** The specific sensor on the power meter to be used for the acquisition. Choose from:

0 – naPowerSensor_A

1 – naPowerSensor_B

To use the sensor that currently corresponds to the frequency of interest, use the value from the [PowerAcquisitionDevice](#) property.

freq **(double)** Frequency (Hz) at which the sensor is to read the power.

unit **(enum NAPowerUnit)**

Optional argument. Choose from:

naDBM – Returns the power in dBm.(default)

naWATT – Returns the power in Watts.

Return Type Double

Default Not Applicable

Examples `watt = powerCalibrator.CheckPower(naPowerSensor_A, 1E9, naWATT)`

C++ Syntax HRESULT put_CheckPower(tagNAPowerAcquisitionDevice enumAcqDevice, double dFreq, tagNAPowerUnit enumPowerUnit, double *pdPower);

Interface ISourcePowerCalibrator2

Clear Method

Description Clears the current diagnostic information.

VB Syntax *embedLODiag*.Clear

Variable [\(Type\)](#) - Description

embedLODiag An [EmbeddedLODiagnostic](#) (object)

Default Not Applicable

Examples embedLO.Clear 'write

C++ Syntax HRESULT Clear();

Interface IEmbeddedLODiagnostic

Last Modified:

12-Apr-2007 MX New topic

CloseCalSet Method **Superseded**

Description	<p>This command is no longer necessary. The CalSet.get... and put... commands that required this command have been replaced,</p> <p>Closes read/write access to the Cal Set.</p> <p>See OpenCalSet for an explanation of gaining access to the Cal Set.</p> <p>When you are finished reading and writing data from or to the Cal Set, close the Cal Set. Subsequent read/writes will require a new OpenCal Set call.</p> <p>Reading and writing Cal Set data is performed with the PutStandard, GetStandard, PutErrorTerm, GetErrorTerm method calls. These methods are provided by the ICal Set and ICalData2 interfaces.</p>
VB Syntax	<i>CalSet</i> . CloseCalSet
Variable	(Type) - Description
<i>CalSet</i>	(object) - A Cal Set object
Return Type	Not Applicable
Default	Not Applicable
Examples	<code>CSet.CloseCalSet</code>
C++ Syntax	HRESULT CloseCalSet
Interface	ICalSet

ComputeErrorTerms Method

Description	<p>Computes error terms for the caltype specified by a preceding OpenCal Set call.</p> <p>The Cal Set must first be opened using OpenCalSet. If this call has not been made, the following error is issued:</p> <p>E_NA_Cal Set_ACCESS_DENIED</p> <p>The standards data required for the CalType must be available in the Cal Set or this error will be returned: E_NA_STANDARD_NOT_FOUND.</p> <p>Note: Error term computation requires data for the actual calibration kit standards from the current kit definition. ComputeErrorTerms assumes that the standards were acquired using only one standard per class.</p>
VB Syntax	<i>CalSet</i> . ComputeErrorTerms
Variable	(Type) - Description
<i>CalSet</i>	(object) - A Cal Set object
Return Type	Not Applicable
Default	Not Applicable
Examples	<code>CalSet.ComputeErrorTerms</code>
C++ Syntax	HRESULT ComputeErrorTerms()
Interface	ICalSet

ConfigEnhancedNB2 Method

Description **Note:** This command replaces [ConfigEnhancedNB Method](#).

This subroutine determines, then returns, the proper configuration for pulsed measurements on the **PNA-X ONLY** using the spectral nulling technique. The configuration returned needs to be sent to the PNA and any other related external equipment.

The routine will take a desired Pulse Repetition Frequency (PRF) and measurement IFBW and return a possibly modified PRF and IFBW for proper pulsed operation on the PNA.

VB Syntax *Pulsed.ConfigEnhancedNB2 (PRF, BW, PhysicalIF, NCO, ClockFreq, Stage1TapArray, Stage2TapArray, Stage3TapArray, FixedPRF, GateDelay, GateWidth, SWGateDelay, SWGateWidth, SWGateRamp)*

Variable [\(Type\) - Description](#)

Pulsed **(interface)** An interface to the agilentpnapulsed.dll application interface.

PRF **(Double)** The Pulse Repetition Frequency.

[out] The pulse repetition frequency that has been optimized for use with the PNA.
NOTE: This value may be different from the value requested.

[in] The desired pulse repetition frequency.

BW **(Long)** The PNA IF Bandwidth.

[out] The PNA IF bandwidth that has been optimized for use with the PNA. NOTE: This value may be different from the value requested. Zero (0) is returned if no solution is found for the specified *PRF* and *BW*.

[in] The desired PNA IF bandwidth.

PhysicalIF **(Double)**

[out] Returns physical intermediate frequency.

NCO **(Double)**

[out] Returns numeric controlled oscillator frequency.

ClockFreq **(Double)**

[out] Returns the clock frequency (in Hz) of the PNA-X.

Stage1TapArray **(Long array)**

[out] Returns the stage 1 filter coefficients

Stage2TapArray **(Long array)**

[out] Returns the stage 2 filter coefficients

Stage3TapArray **(Long array)**

[out] Returns the stage 3 filter coefficients

FixedPRF **(Boolean)**

[in]

- **1 (True)** Signals the .DLL routine to NOT adjust the PRF value; rather adjust ONLY the IF Bandwidth. This is the default setting.
- **0 (False)** Adjust both the PRF and IF Bandwidth values as necessary.

GateDelay **(Double)**

[in] Highest delay value in seconds used in any of the receiver gates.

GateWidth **(Double)**

[in] Widest pulse width value in seconds used in any of the receiver gates.

SWGateDelay **(Double)**

[out] Returns the SW gate delay in seconds.

SWGateWidth **(Double)**

[out] Returns the SW Gate width in seconds.

SWGateRamp **(Long)**

[out] Returns the SW Gate ramp

Return Type Not Applicable

Default Not Applicable

Example [See an example using this command.](#)

C++ Syntax HRESULT **ConfigEnhancedNB2**(double *pPRF, long *pBW, double *pIF, double *pNCO, double *clock, double *pStg1, double *pStg2, double *pStg3, VARIANT_BOOL fixPRF, double gateDelay, double gateWidth, double *SWgateDelay, double *SWgateWidth, long *SWgateRamp)

Interface AgilentPNAPulsed.Application

Last Modified:

28-Mar-2007 MX New topic

ConfigEnhancedNBIFAtten Method

Description Sets PNA-X receivers to auto gain setting.

VB Syntax *Pulsed*.**ConfigEnhancedNBIFAtten** (*PRF*, *RxWidth*, *IFAtten*)

Variable [\(Type\)](#) - **Description**

Pulsed **(interface)** An interface to the agilentpnapulsed.dll application interface.

PRF **(Double)**

[in] The Pulse Repetition Frequency.

RxWidth **(Double)**

[in] Receiver gate width.

IFAtten **(Long Integer)**

[out] IF attenuation value.

Return Type Not Applicable

Default Not Applicable

Example [See an example using this command.](#)

C++ Syntax HRESULT **ConfigEnhancedNBIFAtten**(double *pPRF, double *pWidth, long *pIF)

Interface AgilentPNAPulsed.Application

Last Modified:

18-Jun-2007 MX New topic

ConfigNarrowBand3 Method

Description **Note:** This method replaces [ConfigNarrowBand2 Method](#). The BW argument now returns 0 if no solution is found for the specified PRF and BW. In addition, adjustments were made to the filter finder algorithm

This subroutine determines, then returns, the proper configuration for pulsed measurements on the PNA using the spectral nulling technique. The configuration returned needs to be sent to the PNA and any other related external equipment such as pulse generators. The routine will take a desired Pulse Repetition Frequency (PRF) and measurement IFBW and return a possibly modified PRF and IFBW for proper pulsed operation on the PNA. The routine will also return the Sample Rate, Number of Taps, and Offset that must be sent to the PNA to configure it in pulsed mode using the spectral nulling technique.

Although the example below uses COM programming to communicate with the PNA, these commands can be replaced with [SCPI equivalents](#).

Note: The pulsed application may set the offset frequency (option 080) of the PNA to some value other than zero (the default value). If the stop frequency is set to the maximum of the PNA model, then an error message may appear on the PNA stating that the response frequency has exceeded the maximum allowed frequency. To fix this, set the stop frequency to a value that is at least 2 KHz less than the maximum allowed. For example, if you have a 20 GHz PNA, and the stop frequency is set to 20 GHz, and the error message appears, then set the stop frequency to 19.999998 GHz

VB Syntax *Pulsed*.**ConfigNarrowBand** (*PRF, NumTaps, BW, OffSet, SampleRate, Precision, FixedPRF, PG81110*)

Variable [\(Type\)](#) - **Description**

Pulsed **(interface)** An interface to the agilentpnapulsed.dll application interface.

PRF **(Double)** The Pulse Repetition Frequency.

[out] The pulse repetition frequency that has been optimized for use with the PNA.
NOTE: This value may be different from the value requested.

[in] The desired pulse repetition frequency.

NumTaps **(Long)** The number of taps to send to the PNA for pulsed operation.

BW **(Long)** The PNA IF Bandwidth.

[out] The PNA IF bandwidth that has been optimized for use with the PNA. NOTE: This value may be different from the value requested. Zero (0) is returned if no solution is found for the specified *PRF* and *BW*.

[in] The desired PNA IF bandwidth.

Offset **(Double)** The offset value to send to the PNA for pulsed operation. The offset value is used to adjust the PNA for the two different possible sample rates that may be returned.

SampleRate **(Double)**

[out] The sample rate to send to the PNA for pulsed operation.

[in] Passing a value of 6.2 us will make sure that the offset frequency is not shifted and therefore could be used with converter measurements. Otherwise enter 0.

Precision **(Double)** The precision variables sets the precision that will be used to decrement the PRF when running the configuration routines. This variable can be set to the precision required by the external pulse generators so that the configuration routine will not return a PRF that is not within the precision limits of the pulse generators.

FixedPRF **(Boolean)**

1 (True) Signals the .DLL routine to NOT adjust the PRF value; rather adjust ONLY the IF Bandwidth. This is the default setting.

0 (False) Adjust both the PRF and IF Bandwidth values as necessary.

PG81110 **(Boolean)**

1 (True) You are using an Agilent 81110 as the pulse generator. This allows increased accuracy in adjustments for offset and PRF.

0 (False) Not using an Agilent 81110.

Return Type Not Applicable

Default Not Applicable

Example [See an example using this command.](#)

C++ Syntax HRESULT ConfigNarrowBand(double *pPRF, long *pNumTaps, long *pBW, double *pOffset, double *pSampleRate, int Precision)

Interface AgilentPNAPulsed.Application

Last Modified:

21-Sep-2007 Modified sample rate and

ConfigurationFile Method

Description Recalls an Interface Control file from the hard drive into the analyzer.

VB Syntax *IntControl*.**ConfigurationFile** (*filename*)

Variable [\(Type\)](#) - Description

IntControl An [InterfaceControl](#) (**object**)

filename (**string**) - Full path, file name, and extension (.xml) of the file to recall.
Files are typically stored in "C:\Program Files\Agilent\Network Analyzer\Documents"

Return Type Not Applicable

Default Not Applicable

Examples `IntControl.ConfigurationFile ("C:\Program Files\Agilent\Network Analyzer\Documents\MySettings.xml")`

C++ Syntax HRESULT ConfigurationFile(BSTR bstrFile)

Interface IInterfaceControl

Configurations Method

Description Returns an array of stored configuration names that can be used with [DeleteConfiguration Method](#) and [LoadConfiguration Method](#)

VB Syntax *names* = *pathMgr*.**Configurations**

Variable [\(Type\)](#) - **Description**

names **(Variant array)** Variable to store the returned configuration names.

pathMgr [PathConfigurationManager](#) **(object)**

Return Type Variant array

Default Not Applicable

Examples `names = path.Configurations`

C++ Syntax HRESULT Configurations (VARIANT* configurations);

Interface IPathConfigurationManager

Last Modified:

14-Dec-2006 MX New topic

Configure Method

Description Restarts as an "N-port" PNA using the specified multiport test set.

[See other commands to configure multiport test sets.](#)

VB Syntax `app.Configure (model, address)`

Variable [\(Type\)](#) - Description

app An [Application](#) (**object**)

model **String** - Model of the test set with which to restart.

Use "**Native**" to restart without a test set.

To see a list of supported test sets, use

address **Integer** - GPIB Address of the test set. Use 0 for native restart.

Return Type Not Applicable

Default Not Applicable

Examples [See an example using this command.](#)

```
app.Configure ("N44xx",18)
```

C++ Syntax HRESULT Configure(BSTR model, long address);

Interface IApplication9

Continuous Method

Description The channel continuously responds to trigger signals.

Note: This command does **NOT** change [TriggerSignal](#) to Continuous.

VB Syntax *chan*.Continuous

Variable [\(Type\)](#) - Description

chan A [Channel](#) (object)

Return Type Not Applicable

Default Not Applicable

Examples `chan.Continuous`

[C++ Syntax](#) HRESULT Continuous()

Interface IChannel

Copy Method

Description Creates a new Cal Set and copies the current Cal Set data into it. Therefore, you now have a clone Cal Set with a different ID. Use this command to manipulate data on a Cal Set without corrupting the original cal data.

VB Syntax *CalSet.Copy*

Variable [\(Type\)](#) - [Description](#)

CalSet **(object)** - A [Cal Set](#) object

Return Type Not Applicable

Default Not Applicable

Examples

```
Dim mgr As CalManager
Dim ocalset As CalSet
Dim newcalset As CalSet
Set mgr = pna.GetCalManager
'Create a new (empty) Cal Set.
Set ocalset = mgr.CreateCalSet(1)
ocalset.Description = "original calset"
pna.Channel(1).SelectCalSet ocalset.GetGUID, True

'Launch the cal wizard and allow the user to perform the
calibration.
If pna.LaunchCalWizard(False) Then
'If the Launch returns true then the calibration finished.
ocalset.Save

'Copy the Cal Set to the new one.
Set newcalset = ocalset.Copy
newcalset.Description = "copy of original calset"

Else
'If the cal doesn't finish, delete the old Cal Set
'so it isn't taking up unnecessary memory.
mgr.DeleteCalSet ocalset.GetGUID
End If
```

As a result, the programmer can manipulate the data in the new Cal Set and always revert back to the old Cal Set as needed.

C++ Syntax HRESULT Copy(ICalSet** pCalSet);

Interface ICalSet

CopyToChannel Method

Description Sets up another channel as a copy of this object's channel.

VB Syntax `chan.CopyToChannel(ICChanNum)`

Variable [\(Type\)](#) - Description

chan A [Channel](#) (object)

ICChanNum **(long integer)** – Number of the channel to become a copy of this channel.

Return Type None

Default Not Applicable

Examples

```
Dim chan As Channel
Set chan = PNAapp.ActiveChannel
Const INEW_CHAN_NUM As Long = 2
chan.CopyToChannel(INEW_CHAN_NUM)
```

C++ Syntax `HRESULT CopyToChannel(long ICChanNum);`

Interface IChannel2

CreateSParameterEx Method

Description	Creates a new S-Parameter measurement in an existing or new window and specifies the load port for 3-port devices.
VB Syntax	<i>app.CreateSParameterEx chan,recvr,source[,loadPort][,window]</i>
Variable	(Type) - Description
<i>app</i>	Application (object)
<i>chan</i>	(long integer) - Channel number of the new measurement.
<i>recvr</i>	(long integer) - Port number of the test port receiver.
<i>source</i>	(long integer) - Port number of the source. Use GetPortNumber to return the port number of a source that only has a string name, such as an External Source . To learn more see Remotely Specifying a Source Port .
<i>loadPort</i>	(long integer) - Port number of the load. Required for reflection measurements of 3-port devices on multiport PNA models.
<i>window</i>	(long integer) - Optional argument. Choose between 1 and the maximum number of windows allowed on the PNA . See also Traces, Channels, and Windows on the PNA . If unspecified, the S-Parameter will be created in the Active Window.
Return Type	Not Applicable
Default	Not Applicable
Examples	<pre>app.CreateSParameterEx 1,2,1,1 'Creates a new S21 measurement in channel 1 and New window(1) app.CreateSParameterEx 2,1,1,3,1 'Creates a new S11 measurement on channel 2 with port 3 as the load. Create in the active window</pre>
C++ Syntax	HRESULT CreateSParameterEx(long ChannelNum, long RcvPort, long SrcPort, long LoadPort, long windowNumber)
Interface	IApplication

Last modified:

9/12/06 Modified for number of windows

CreateCalSet Method

Description Creates a new Cal Set.

The new cal set is initialized with the stimulus settings from the channel whose number is passed as the argument to this method. Stimulus settings include frequency, bandwidth, number of points, and so forth.

Use this method when you want to manually upload data to the Cal Set using the returned ICal Set interface handle..

The channel number does not restrict the usage of this Cal Set on any other channel. It simply provides a link to the originating channel so that the stimulus values can be stored in the Cal Set.

Note: Be sure to SAVE the CalSet you are creating. Use [ICalSet::Save](#).

VB Syntax *calMgr*.CreateCalSet (*chan*)

Variable [\(Type\)](#) - Description

calMgr **(object)** - A [CalManager](#) object

chan **(long)** - channel number of the new Cal Set.

Return Type ICal Set Interface

Default Not Applicable

Example `calMgr.CreateCalSet 1`

C++ Syntax HRESULT CreateCalSet(long ChannelNumber, ICal Set** pCal Set);

Interface ICalManager

CreateCustomMeasurementEx Method

Description Creates a new custom measurement.

VB Syntax `app.CreateCustomMeasurementEx chanNum,ID,initData [,window]`

Variable [\(Type\)](#) - **Description**

app **(object)** - An Application object

chanNum **(long)** -Channel number used by the new measurement; can exist or be a new channel.

ID **(string)** - Identifier of the new custom measurement object. The new custom measurement must be installed and registered on the PNA. Choose from the following:

- "Vector Mixer/Converter"
- "Scalar Mixer/Converter"

These arguments are new with PNA release 6.0. The old arguments are still supported.

InitData **(variant)** Measurement specific data for passing initialization data to the new measurement. The variant type and content of the initialization value is defined by the type of measurement being created.

ID	Choose from:
Vector Mixer/Converter	"S11" "VC21" "S22"
Scalar Mixer/Converter	"S11" "SC21" "SC12" "S22" "Ipwr" "RevIPwr" "Opwr" "RevOPwr"

window **(long)** Optional argument. Number of the window the new custom measurement will be placed in. Choose between 1 and the [maximum number of windows allowed on the PNA..](#) If unspecified, the measurement is placed in the active window.

Return Type IMeasurement

Default Not Applicable

Examples `'To create a scalar mixer measurement in channel 2:
Dim MyMeas as Agilent835x.Measurement
Set MyMeas = app.CreateCustomMeasurementEx (2, "Scalar
Mixer/Converter", "SC21")`

`'To create a vector mixer measurement in channel 2:
Dim MyMeas as Agilent835x.Measurement
Set MyMeas = app.CreateCustomMeasurementEx (2, "Vector
Mixer/Converter", "VC21")`

C++ Syntax HRESULT put_CreateCustomMeasurementEx (long ChannelNum, BSTR guid, VARIANT initData, long windowNumber, IMeasurement** ppMeasurement);

Interface IApplication3

CreateCustomCal Method

Description Creates a custom cal object.

VB Syntax *calmgr*.CreateCustomCal(*CalType*)

Variable [\(Type\)](#) - [Description](#)

calMgr [Cal Manager](#) (Object)

CalType **(String)** Name of the calibration. Choose from:

"VMC" or "VectorMixerCal.VMCType"

"SMC" or "ScalarMixerCal.SMCType"

See Also

[SMCType](#) Object

[VMCType](#) Object

Return Type Not Applicable

Default Not Applicable

Examples

```
Dim CalMgr As ICalManager2
Dim SMC As ISMCType
Set SMC = CreateCustomCal("SMC")
```

See [SMC](#) and [VMC](#) examples using this command.

C++ Syntax HRESULT CreateCustomCal(BSTR CustomCal)

Interface ICalManager2

CreateMeasurement Method

Description Creates a new measurement.

VB Syntax `app.CreateMeasurement chanNum,param,lPort[,window]`

Variable [\(Type\)](#) - Description

app Application (**object**)

chanNum (**long**) - Channel number of the new measurement; can exist or be a new channel

param (**string**) - New parameter. Case insensitive.

For S-parameters:

[Any S-parameter that can be measured by your PNA.](#)

Single-digit port numbers can be separated by "_" (underscore). For example: "S21" or "S2_1"

Double-digit port numbers MUST be separated by underscore. For example: "S10_1"

For Ratioed measurements:

Any two receivers in your PNA separated by "/". For example: "A/R1"

See the [block diagram](#) showing the receivers in YOUR PNA.

For Unratioed (absolute power) measurements:

Any receiver in the PNA. For example: "A"

See the [block diagram](#) showing the receivers in YOUR PNA

With PNA Rev 6.2, **Ratioed** and **Unratioed** measurements can also use **logical receiver notation** to refer to receivers. This notation makes it easy to refer to receivers with an [external test set](#) connected to the PNA. You do not need to know which physical receiver is used for each test port. [Learn more.](#)

For ADC measurements

Any ADC receiver in the PNA.

For example: "AI1" indicates the Analog Input1.

[Learn more about ADC receiver measurements.](#)

For Balanced S-parameter measurements:

"*topology:Sabxy*"

topology - Choose from:

- **sbal** - single-ended to balanced

- **ssb** - single-ended / single-ended to balanced
- **bbal** - balanced to balanced

Sabxy -

Where

a - device output (receive) mode

b - device input (source) mode

(choose from the following for both a and b:)

- **d** - differential
- **c** - common
- **s** - single ended

x - device output (receive) logical port number

y - device input (source) logical port number

For example: "**sbal:sdd42**"

[See an example program](#)

For Imbalance and Common Mode Rejection measurements:

"*topology:parameter*" Choose from:

Choose this:	To get this:	
	Topology	Parameter
" SBAL:IMBSB "	single-ended to balanced	imbalance
" SBAL:CMRRSB1 "	single-ended to balanced	common mode rejection (Sds21/Scs21)
" SBAL:CMRRSB2 "	single-ended to balanced	common mode rejection (Ssd12/Scs12)
" SSB:IMB1SSB "	single-ended / single-ended to balanced	imbalance 1
" SSB:IMB2SSB "	single-ended / single-ended to balanced	imbalance 2
" SSB:CMRRSSB1 "	single-ended / single-ended to balanced	common mode rejection (Sds31/Scs31)

"SSB:CMRRSSB2"	single-ended / single-ended to balanced	common mode rejection (Sds32/Scs32)
"BBAL:IMB1BB"	balanced to balanced	imbalance 1
"BBAL:IMB2BB"	balanced to balanced	imbalance 2
"BBAL:CMRRBB"	balanced to balanced	common mode rejection (Sdd21/Scs21)

*I*Port (long)

- **Ignored** if *param* is an S-Parameter, balanced, imbalance, or CMRR parameter.
- **Source port** if *param* is ratioed or unratioed (including [ADC](#)) measurements. Use [cap.getPortNumber](#) to get the number of named source. To learn more see [Remotely Specifying a Source Port](#).

window (long) Optional argument. Window number of the new measurement. Choose between 1 and the [maximum number of windows allowed on the PNA](#). If unspecified, the measurement will be created in the Active Window.

See also [Traces, Channels, and Windows on the PNA](#)

Return Type Not Applicable

Default Not Applicable

Examples

```
app.CreateMeasurement(1,"A/R1",1,0)
app.CreateMeasurement(1,"a1/b1",1,0)
app.CreateMeasurement(1,"bba1:Sdd21",1)
app.CreateMeasurement(1,"AI2",2)
```

[See a Balanced Measurements example program.](#)

C++ Syntax HRESULT CreateMeasurement(long ChannelNum, BSTR strParameter, long IPort, long windowNumber)

Interface IApplication

Last modified:

July 23, 2007 Added source port link

April 25, 2007 Updated for ADC measurements.

9/12/06 MQ Updated for logical receiver notation.

DataToMemory Method

Description Stores the active measurement data into memory creating a memory trace. The memory can then be displayed or used in calculations with the measurement data.

VB Syntax *meas*.**DataToMemory**

Variable [\(Type\)](#) - Description

meas A Measurement (**object**)

Return Type Not Applicable

Default Not Applicable

Examples `meas.DataToMemory`

C++ Syntax HRESULT DataToMemory()

Interface IMeasurement

Delete Method

Description Deletes the measurement.

VB Syntax *meas.Delete*

Variable [\(Type\)](#) - Description

meas The Measurement object to delete (**object**)

**Return
Type** Not Applicable

Default Not Applicable

Examples `meas.Delete`

C++ Syntax HRESULT Delete()

Interface IMeasurement

DeleteMarker Method

Description Deletes a marker from the measurement.

VB Syntax *meas.DeleteMarker(Mnum)*

Variable [\(Type\)](#) - Description

meas A Measurement **(object)**

Mnum **(long)** - Any existing marker number in the measurement

Return Type Not Applicable

Default Not Applicable

Examples `meas.DeleteMarker(1)`

C++ Syntax HRESULT DeleteMarker(long IMarkerNumber)

Interface IMeasurement

DeleteAllMarkers Method

Description Deletes all of the markers from the measurement.

VB Syntax *meas*.DeleteAllMarkers

Variable [\(Type\)](#) - Description

meas **(object)** - The Measurement object from which markers will be deleted.

Return Type Not Applicable

Default Not Applicable

Examples `meas.DeleteAllMarkers`

C++ Syntax HRESULT DeleteAllMarkers()

Interface IMeasurement

DeleteCalSet Method

Description Deletes a Cal Set from the set of available Cal Sets. This method immediately updates the Cal Set file on the hard drive. If the Cal Set is currently being used by a channel, this request will be denied and an error is returned.

Errors returned by this method:

E_NA_CAL_SET_IN_USE
 E_NA_Cal Set_NOT_FOUND
 E_NA_Cal Set_SAVE_FAILED

Using the [Cal Sets collection](#) is a convenient way to manage Cal Sets.

VB Syntax *calMgr.DeleteCalSet (GUID)*

Variable [\(Type\)](#) - **Description**

calMgr **(object)** - A CalManager object

GUID **(string)** - GUID number of the Cal Set to be deleted

Return Type Not Applicable

Default Not Applicable

Example

```
dim cs As CalSet ' the collection
dim strGUID as string

strGUID = cs.GetGUID
calMgr.DeleteCalSet strGUID
```

C++ Syntax HRESULT DeleteCalSet(BSTR strGUID);

Interface ICalManager

DeleteConfiguration Method

Description Deletes the specified configuration name from the PNA. The factory configurations cannot be deleted. This is the only method of programmatically distinguishing a factory configuration from a user-named configuration.

VB Syntax *pathMgr.DeleteConfiguration name*

Variable [\(Type\)](#) - Description

pathMgr [PathConfigurationManager](#) (object)

name **(String)** Configuration name to be deleted.

Return Type Not Applicable

Default Not Applicable

Examples `path.DeleteConfiguration "myMixer"`

C++ Syntax HRESULT StoreConfiguration (long channelNum, BSTR configName);

Interface IPathConfigurationManager

Last Modified:

14-Dec-2006 MX New topic

DeleteShortCut Method

Description Removes a macro from the list of macros in the analyzer. Does not remove the file.

Note: There are always 12 macro positions. They do not have to be sequential. For example, you can have number 7 but no numbers 1 to 6.

VB Syntax `app.DeleteShortCut item`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

item **(long integer)** number of the macro to be deleted.

Return Type Not Applicable

Default Not Applicable

Examples `app.DeleteShortCut 2`

C++ Syntax HRESULT DeleteShortcut(long Number)

Interface IApplication

DisallowAllEvents Method

Description Sets event filtering to monitor NO eventst.

VB Syntax *app*.DisallowAllEvents

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

**Return
Type** Not Applicable

Default Not Applicable

Examples `app.DisallowAllEvents`

C++ Syntax HRESULT DisallowAllEvents()

Interface IApplication

DoPrint Method

Description Prints the screen to the default Printer.

VB Syntax *app*.DoPrint

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

**Return
Type** Not Applicable

Default Not Applicable

Examples `app.DoPrint`

[C++ Syntax](#) HRESULT DoPrint()

Interface IApplication

DoECAL1PortEx Method

Description This method replaces [DoECAL1Port Method](#).
 Does a 1-Port calibration using an ECAL module. You must first have a 1-port measurement active to perform the calibration.
 The characterization within the ECal module that will be used for the calibration is specified by [ECALCharacterizationEx](#). The default value is 0.

VB Syntax *cal.DoECAL1PortEx [port][,module]*

Variable [\(Type\)](#) - Description

cal A Calibrator (**object**)

port (**long integer**) Optional argument - Port number to calibrate. Choose from:
 1 - Calibrate port 1 (default if unspecified)
 2 - Calibrate port 2

module (**long integer**) Optional argument. ECal module.
 Choose from modules **1** through **8**
 Use [IsECALModuleFoundEx](#) to determine the number of modules connected to the PNA
 Use [GetECALModuleInfoEx](#) to returns the model and serial number of each module.

Return Type None

Default Not Applicable

Examples `cal.DoECAL1PortEx,2,2`

C++ Syntax HRESULT DoECAL1PortEx(long port, long moduleNumber = 1);

Interface ICalibrator4

DoECAL2PortEx Method

Description	<p>This method replaces DoECAL2Port Method.</p> <p>Does a 2-port calibration using an ECal module.</p> <p>2-port refers to the number of ports to calibrate; NOT to the number of ECal module ports.</p> <p>You must first have a measurement active to perform the calibration.</p> <p>The characterization within the ECal module that will be used for the calibration is specified by ECalCharacterizationEx. The default value is 0.</p>
VB Syntax	<i>cal</i> .DoECAL2PortEx [<i>portA</i>][<i>,portB</i>][<i>,module</i>]
Variable	(Type) - Description
<i>cal</i>	A Calibrator (object)
<i>portA</i>	<p>(long integer) Optional argument - Number of the receive port to calibrate. Choose from:</p> <ul style="list-style-type: none"> 1 - Calibrate port 1 (default, if unspecified) 2 - Calibrate port 2 3 - Calibrate port 3 <p>And so forth for all available PNA / test set ports.</p>
<i>portB</i>	<p>(long integer) Optional argument - Number of the source port to calibrate. Choose from:</p> <ul style="list-style-type: none"> 1 - Calibrate port 1 2 - Calibrate port 2 (default, if unspecified) 3 - Calibrate port 3 <p>And so forth for all available PNA / test set ports.</p>
<i>module</i>	<p>(long integer) Optional argument. ECal module.</p> <p>Choose from modules 1 through 8</p> <p>Use IsECALModuleFoundEx to determine the number of modules connected to the PNA</p> <p>Use GetECALModuleInfoEx to returns the model and serial number of each module.</p>
Return Type	None
Default	Not Applicable
Examples	<i>cal</i> .DoECAL2PortEx,1,2,3
C++ Syntax	HRESULT DoECAL2PortEx(long portA = 1, long portB =2, long moduleNumber = 1);
Interface	ICalibrator4

Last Modified:

1-Jan-2007 Corrected Port B default

DoneCalConfidenceCheckECAL Method

Description Concludes the Confidence Check and sets the ECal module back into the idle state.

VB Syntax *cal*.DoneCalConfidenceCheckECAL

Variable [\(Type\)](#) - Description

cal A Calibrator (**object**)

Return Type None

Default None

Examples *cal*.DoneCalConfidenceCheckECAL

C++ Syntax HRESULT DoneCalConfidenceCheckECAL();

Interface ICalibrator

DoReceiverPowerCal Method

Description **Note:** This command replaces [DataToDivisor](#), [LogMagnitudeOffset](#), [Normalization](#), [InterpolateNormalization](#).

Immediately performs a receiver power calibration. The connection to the receiver must be in place when this command is sent.

A Receiver Power Cal requires that the active measurement be an [Unratioed](#) power measurement.

VB Syntax `cal.DoReceiverPowerCal(param, srcPort [,pwrOffset])`

Variable [\(Type\)](#) - Description

cal A [Calibrator](#) (object)

param **(string)** – Receiver to be calibrated. Choose any receiver in your PNA. [See a block diagram of your PNA.](#)

With PNA Rev 6.2, receivers can also be referred to using **logical receiver notation**. This notation makes it easy to refer to receivers with an [external test set](#) connected to the PNA. You do not need to know which physical receiver is used for each test port. [Learn more.](#)

srcPort **(long integer)** – Number of the port which will supply source power to the receiver during this cal.

Use [GetPortNumber](#) to return the port number of a source that only has a string name, such as an [External Source](#).

pwrOffset **(double)** – Optional argument. Offset value in dB. Adjusts a receiver power cal to account for components or adapters that are added between the source port and receiver while performing this cal. Specify loss as a negative number; and gain as a positive number.

Return Type None

Default Not Applicable

Examples `cal.DoReceiverPowerCal "B", 1, -10`

C++ Syntax `HRESULT DoReceiverPowerCal(BSTR parameter, long lSrcPort, double dPowerOffset);`

Interface ICalibrator5

Last Modified:

30-Apr-2007 Edited for src strings

EnumerateCalSets Method

Description Returns an array of Cal Set names being stored on the PNA.

VB Syntax *value* = *calMgr*.EnumerateCalSets

Variable [\(Type\)](#) - Description

value **(variant)** - Variable to store the returned Cal Set names

calMgr **(object)** - A [CalManager](#) object

Return Type VARIANT array

Default Not Applicable

Example

```
Dim pna
set
pna=CreateObject("AgilentPNA835x.Application")

Dim catalog
catalog=pna.getcalmanager.EnumerateCalSets
for i=lbound(catalog) to Ubound(catalog)
wscript.echo catalog(i)
next
```

[C++ Syntax](#) HRESULT EnumerateCalSets(VARIANT* names);

Interface ICalManager4

Execute Method

Description Allows the use of COM to send a SCPI command.
This method can be used with :SYST:ERR? to convert scpi errors into text.
[See an example](#) of how to return error information when using the [Parse method](#).

VB Syntax Scpi.**Execute** (*SCPI_Command*)

Variable [\(Type\)](#) - **Description**

scpi A [ScpiStringParser](#) (**Object**)

SCPI_Command (**String**) - Any valid SCPI command

Return Type String

Default Not Applicable

Examples

```
Dim scpi As ScpiStringParser
Set scpi = app.ScpiStringParser
scpi.Execute("SYST:PRES");
ErrorString = scpi.Execute("SYST:ERRor?");
```

C++ Syntax Execute(BSTR SCPI_Command, BSTR * pQueryResponse);

Interface IScpiStringParser2

ExecuteShortcut Method

Description Executes a Macro (shortcut) stored in the analyzer. Use [app.getShortcut](#) to list existing macros. Use `app.putShortcut` to associate the macro number with the file.

VB Syntax `app.ExecuteShortcut index`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

index **(long integer)** - Number of the macro stored in the analyzer.

Return Type Not Applicable

Default Not Applicable

Examples `app.ExecuteShortcut 1`

C++ Syntax HRESULT ExecuteShortcut(long index)

Interface IApplication

GenerateGlobalDeltaMatchSequence Method

Description Initiates a global delta match calibration.

[Learn more about Delta match calibration.](#)

See example of a complete Delta Match calibration.

VB Syntax *numSteps* = *guided*.**GenerateGlobalDeltaMatchSequence** *conn*,*cKit*

Variable [\(Type\)](#) - **Description**

numSteps **Long Integer** - Variable to store the returned number of connection steps required by the Global Delta Match Cal.

guided [GuidedCalibration](#) (object)

conn **String** Connector Type for port 1.

cKit **String** Cal Kit for all ports.

Return Type Not Applicable

Default Not Applicable

Examples `guided.GenerateGlobalDeltaMatchSequence "APC 3.5 female", "85052B"`

C++ Syntax HRESULT GenerateGlobalDeltaMatchSequence(BSTR port_1_conn, BSTR cal_kit, long *num_steps);

Interface IGuidedCalibration2

GenerateErrorTerms Method

Description Generates the error terms for the specified calibration type, stores the error terms in a Cal Set, saves the Cal Set, and returns the Cal Set GUID.

If ALL the data for the cal type has NOT been acquired an error message is returned.

Note: The manner in which the calibration is assigned to a Cal Set (Cal Register or User Cal Set) is determined by the setting of [RemoteCalStoragePreference](#).

VB Syntax *value* = *obj*.**GenerateErrorTerms**

Variable [\(Type\)](#) - **Description**

value (String) - Variable to store the returned GUID or error message.

obj Any of the following:
[GuidedCalibration](#) (object)
[SMCType](#) (object)
[VMCType](#) (object)

Return Type String

Default Not Applicable

Examples `string = SMC.GenerateErrorTerms`

C++ Syntax HRESULT put_GenerateErrorTerms(BSTR* calsetGUID);

Interface IGuidedCalibration
 SMCType
 VMCType

GenerateSteps Method

Description Returns the number of steps required to complete the calibration type.

VB Syntax *value* = *obj*.**GenerateSteps**

Variable [\(Type\)](#) - Description

value (long) - Variable to store the returned number of steps

obj Any of the following:

[GuidedCalibration](#) (object)

[SMCType](#) (object)

[VMCType](#) (object)

Return Type Long

Default Not Applicable

Examples `value = SMC.GenerateSteps`

C++ Syntax HRESULT put_GenerateSteps(long* steps);

Interface IGuidedCalibration
SMCType
VMCType

GetAuxIO Method

Description This method returns the [IAuxIO](#) interface.

VB Syntax *app*.GetAuxIO

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

**Return
Type** IHWAuxIO

Default Not Applicable

Example

```
Dim app As AgilentPNA835x.Application
Dim aux As IHWAuxIO
Set aux = app.GetAuxIO
```

C++ Syntax HRESULT GetAuxIO (IHWAuxIO **pAux);

Interface IApplication

GetCalStandard Method

Description	Returns a handle to a calibration standard for modifying its definitions. To select a standard for performing a calibration (use Calibrator. AquireCalStandard).
VB Syntax	<i>calkit</i> . GetCalStandard (<i>index</i>)
Variable	(Type) - Description
<i>calkit</i>	A calKit (object)
<i>index</i>	(long) - Number of calibration standard. Choose 1 to 30 ; (there are 30 cal standards in every kit).
Return Type	calStandard
Default	Not Applicable
Examples	<pre>Dim short As CalStandard Set short = calKit.getCalStandard(1) short.label = "myShort"</pre>
C++ Syntax	HRESULT GetCalStandard(long standardNumber, ICalStandard **pCalStd)
Interface	ICalKit

GetCalManager Method

Description This method returns the [ICalManager](#) interface.

VB Syntax *app*.GetCalManager

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

**Return
Type** ICalManager*

Default Not Applicable

Example

```
dim app as AgilentPNA835x.Application
dim mgr as CalManager
set mgr = app.GetCalManager
```

C++ Syntax HRESULT GetCalManager(ICalManager **mgr);

Interface IApplication

Get CalSetByGUID Method

Description Requests a Cal Set by GUID. Returns an ICal Set interface.

VB Syntax *calMgr*.**GetCalSetByGUID** (*GUID*)

Variable [\(Type\)](#) - Description

calMgr **(object)** - A CalManager object

GUID **(string)** - GUID of the Cal Set being requested.

Return Type Interface object

Default Not Applicable

Example `calMgr.GetCalSetByGUID (2B893E7A-971A-11d5-8D6C-00108334AE96)`

C++ Syntax HRESULT GetCalSetByGUID(BSTR* strGUID, ICal Set* pCalSet);

Interface ICalManager

GetCalSetCatalog Method

Description Returns a string containing a list of comma-separated GUIDs in the following format:

```
{FD6F863E-9719-11d5-8D6C-00108334AE96},  
{1B03B2CE-971A-11d5-8D6C-00108334AE96},  
{2B893E7A-971A-11d5-8D6C-00108334AE96}
```

VB Syntax *value* = *calMgr*.**GetCalSetCatalog**

Variable [\(Type\)](#) - **Description**

value **(string)** - Variable to store the returned GUID list

calMgr **(object)** - A CalManager object

Return Type String

Default Not Applicable

Example `value = calMgr.GetCalSetCatalog`

C++ Syntax HRESULT GetCalSetCatalog(BSTR);

Interface ICalManager

GetCalSetUsageInfo Method

Description	<p>Returns a string identifying the Cal Set currently in use by the specified channel.</p> <p>This method identifies the Cal Set being used by returning its GUID.</p> <p>This method also identifies the "Error Term set" within the Cal Set.</p> <p>Error term sets are identified by integers, with set 0 belonging to the original (non-interpolated) terms. As stimulus values for a channel are changed causing interpolation to be required, a new Error Term set is constructed within the Cal Set to hold the interpolated Error Terms. The sets are sequentially numbered 1, 2, 3, and so forth. These Error Term sets are destroyed when they are no longer being used.</p> <p>If there is no Cal Set in use for the given channel, the <GUID> argument is set to the empty string.</p>
VB Syntax	<i>calMgr</i> . GetCalSetUsageInfo (<i>chan</i> , <i>GUID</i> , <i>setNumber</i>)
Variable	(Type) - Description
<i>calMgr</i>	(object) - A CalManager object
<i>chan</i>	(long [in]) - channel of the Cal Set being requested
<i>GUID</i>	(string [out]) - variable to store the GUID of the Cal Set being requested. If there is no Cal Set in use for the given channel, the <GUID> argument is set to the empty string.
<i>setNumber</i>	(long [out]) - variable to store the error term ID being requested. If the returned argument is greater than 0, the set is being interpolated.
Return Type	String , Long Integer
Default	Not Applicable
Example	<code>calMgr.GetCalSetUsageInfo (1, GUID, EtermID)</code>
C++ Syntax	HRESULT GetCalSetUsageInfo (long IChannel, BSTR* CalSetGUID, long* etermSetID);
Interface	ICalManager

GetCalTypes Method

Description Returns a list of available calibration types known to the PNA. The Standard CalTypes are the same on all PNA's, but the Custom CalTypes are not necessarily the same. They are dependent on the custom measurement in the PNA. [Learn more about applying Cal Types.](#)

See also [CalibrationTypeID](#) to apply a Cal Type containing in a Cal Set.

VB Syntax `v = mgr.GetCalTypes`

Variable [\(Type\)](#) - Description

mgr A [CalManager](#) (Object)

v Name/GuidPair that contains the calibration type name and associated GUID for each cal type known to the PNA.

Return Type (variant) Two dimensional array.

Default Not Applicable

Examples `v =CalManager.GetCalTypes`

C++ Syntax HRESULT GetCalTypes(VARIANT * NameGuidPair)

Interface ICalManager2

GetComplex Method

Description	Retrieves complex data from the specified location. See also getNAComplex , getData , and getPairedData Methods
VB Syntax	<i>measData</i> . getComplex <i>location</i> , <i>numPts</i> , <i>real()</i> , <i>imag()</i>
Variable	(Type) - Description
<i>measData</i>	An IArrayTransfer interface which supports the Measurement object
<i>location</i>	(enum NADataStore - IArrayTransfer) - Where the data you want is residing. Choose from: 0 - naRawData 1 - naCorrectedData 2 - naMeasResult 3 - naRawMemory 4 - naMemoryResult 5 - naDivisor - When reading data from, or writing data to, the normalization divisor, you must first create a divisor trace using DataToDivisor Method .
<i>numPts</i>	(long integer) - Number of data points requested [out] - specifies number of data elements returned [in] - specifies the data being requested or the capacity of the arrays
<i>real</i>	(single) - Array to store the real values
<i>imag</i>	(single) - Array to store the imaginary values
Return Type	Single
Default	Not Applicable
Examples	<pre>Dim real(201) AS Single Dim imag(201) AS Single Dim pts as Integer Dim measData As IArrayTransfer Set measData = app.ActiveMeasurement measData.getComplex naCorrectedData, pts, real(0), imag(0)</pre>
C++ Syntax	IArrayTransfer - HRESULT getComplex(tagNADataStore DataStore, long* pNumValues, float* pReal, float* plmag)
Interface	IArrayTransfer

getDataByString Method

Description Retrieves variant data from the specified location in your choice of formats.
The PNA returns gather complex trace data which is ratioed if required by the measurement parameter, such as S11 or A/B. Otherwise it is raw receiver data, such as A or B.

VB Syntax *data = meas.**getDataByString** location, format*

Variable [\(Type\) - Description](#)

data **(variant)** - Array to store the data.

meas **(object)** - A Measurement object

location **(string)** – Name of the buffer to be read. Choose from:

"naRawData"

"naCorrectedData"

"naMeasResult"

"naRawMemory"

"naMemoryResult"

"naDivisor" - When reading data from, or writing data to, the normalization divisor, you must first create a divisor trace using [DataToDivisor Method](#).

See [Data Access Map](#)

format **(enum NADataFormat)** - Format in which you would like the data. It does not have to be the displayed format. Choose from:

0 - naDataFormat_LinMag

1 - naDataFormat_LogMag

2 - naDataFormat_Phase

3 - naDataFormat_Polar *

4 - naDataFormat_Smith *

5 - naDataFormat_Delay

6 - naDataFormat_Real

7 - naDataFormat_Imaginary

8 - naDataFormat_SWR

9 - naDataFormat_PhaseUnwrapped

10 - naDataFormat_InverseSmith

[Learn more about Data Format.](#)

* Specify **Smith** or **Polar** formats to obtain complex data pairs, which require a two-

dimensional array **varData (numpts, 2)** to accommodate both real and imaginary data.
All scalar formats return a single dimension **varData(numpts)**.

Return Type Variant array

Default Not Applicable

Examples `meas.getDataByString "naMeasResult", naDataFormat_Phase`

C++ Syntax HRESULT getDataByString(BSTR location, tagDataFormat dataFormat, VARIANT *
pData);

Interface IMeasurement

Last Modified:

19-Jul-2007 Corrected example

GetData Method

Description Retrieves variant data from the specified location in your choice of formats. To get smoothed data from any of the specified locations, the format must be the same as the displayed format.

The PNA returns gather complex trace data which is ratioed if required by the measurement parameter, such as S11 or A/B. Otherwise it is raw receiver data, such as A or B.

This method returns a variant which is less efficient than methods available on the [IArrayTransfer interface](#).

If you plan to **Put** this data back into analyzer, [putDataComplex](#) (variant data) method requires complex, two-dimensional data. Therefore, request the data in **Polar** format.

VB Syntax *data = meas.GetData location, format*

Variable (Type) - Description

data Variant array to store the data.

meas A Measurement (**object**)

location (**enum NADataStore**) - Where the data you want is residing. See [Data Access Map](#). Choose from:

0 - naRawData

1 - naCorrectedData

2 - naMeasResult

3 - naRawMemory

4 - naMemoryResult

5 - naDivisor When reading data from, or writing data to, the normalization divisor, you must first create a divisor trace using [DataToDivisor Method](#).

format (**enum NADataFormat**) - Format in which you would like the data. It does not have to be the displayed format. Choose from:

0 - naDataFormat_LinMag

1 - naDataFormat_LogMag

2 - naDataFormat_Phase

3 - naDataFormat_Polar *

4 - naDataFormat_Smith *

5 - naDataFormat_Delay

6 - naDataFormat_Real

7 - naDataFormat_Imaginary

- 8 - naDataFormat_SWR
- 9 - naDataFormat_PhaseUnwrapped
- 10 - naDataFormat_InverseSmith

[Learn more about Data Format.](#)

* **Specify Smith or Polar** formats to obtain complex data pairs, which require a two-dimensional array **varData (numpts, 2)** to accommodate both real and imaginary data.

All scalar formats return a single dimension **varData(numpts)**.

naDataFormat_Phase returns degrees. However, [putDataScalar](#) method accepts data in radians (not degrees) and displays in degrees.

Return Type Variant array - automatically dimensioned to the size of the data

Default Not Applicable

Examples

```
Dim varData As Variant
varData = meas.GetData(naMeasResult,naDataFormat_Phase)
'Print Data
For i = 0 to chan.NumberOfPoints-1
    Print varData(i)
Next i
```

C++ Syntax HRESULT getData(tagNADataStore DataStore, tagDataFormat DataFormat, VARIANT *pData)

Interface IMeasurement

GetECALModuleInfoEx Method

Description This property replaces [Get ECALModuleInfo Method](#).

Returns the following information about the connected ECAL module: model number, serial number, connector type, calibration date, min and max frequency.

The characterization within the ECal module that this information will be read from is specified by [ECALCharacterizationEx](#). The default value is 0.

VB Syntax *moduleInfo* = *cal*.**GetECALModuleInfoEx** (*module*)

Variable [\(Type\)](#) - **Description**

moduleInfo **(string)** - variable to store the module information

cal A Calibrator **(object)**

module **(long integer)** ECal module.

Choose from modules 1 through 8

Use [IsECALModuleFoundEx](#) to determine the number of modules connected to the PNA

Return Type String

Default Not Applicable

Examples `info = cal.GetECALModuleInfoEx(2)`

Example return string:

```
ModelNumber: 85092-60007, SerialNumber: 01386, ConnectorType:
N5FN5F, PortAConnector: Type N (50) female, PortBConnector: Type
N (50) female, MinFreq: 30000, MaxFreq: 91000000000,
NumberOfPoints: 250, Calibrated: July 4 2002
```

C++ Syntax HRESULT GetECALModuleInfoEx(long moduleNumber, BSTR* info);

Interface ICalibrator4

GetErrorCorrection Method

Description	<p>Reads the error correction state for the channel.</p> <p>Use ErrorCorrection Property to set this value.</p> <p>When this command returns true, some measurements on the channel MAY not have error correction ON. This is because the Cal Set currently in place may not contain the appropriate calibration data. To read the error correction state for a measurement, use Error Correction Property.</p>
VB Syntax	<i>chan</i> . GetErrorCorrection (<i>boolean</i>)
Variable	(Type) - Description
<i>chan</i>	A Channel (object)
<i>boolean</i>	(boolean) Variable to store the returned value. False - Error correction has been set OFF True - Error correction has been set ON
Return Type	Boolean
Default	About Error Correction
Examples	<code>chan.GetErrorCorrection(value)</code>
C++ Syntax	HRESULT GetErrorCorrection (VARIANT_BOOL *bState)
Interface	IChannel8

GetErrorTerm Method - Superseded

Description **Note:** This command is replaced by [Get ErrorTermByString Method](#)

Retrieves error term data that is used for error correction. The data is complex pairs. Memory for the returned Variant is allocated by the server. The server returns a variant containing a two-dimensional safe Array.

This method returns a variant which is less efficient than [getErrorTermComplex](#) on the ICalData interface.

[Learn about reading and writing Calibration data.](#)

VB Syntax `data = cal.getErrorTerm term, rcv, src`

Variable [\(Type\)](#) - Description

data Variant array to store the data.

cal A Calibrator **(object)**

term **(enum As NaErrorTerm)**. Choose from:

naErrorTerm_Directivity_Isolation

naErrorTerm_Match

naErrorTerm_Tracking

rcv **(long integer)** - Receiver Port

src **(long integer)** - Source Port

To get this	Specify these parameters:		
Error Term	<i>term</i>	<i>rcv</i>	<i>src</i>
Fwd Directivity	naET_Directivity Isolation	1	1
Rev Directivity	naET_Directivity Isolation	2	2
Fwd Isolation	naET_Directivity Isolation	2	1
Rev Isolation	naET_Directivity Isolation	1	2
Fwd Source Match	naErrorTerm_Match	1	1
Rev Source Match	naErrorTerm_Match	2	2
Fwd Load Match	naErrorTerm_Match	2	1
Rev Load Match	naErrorTerm_Match	1	2
Fwd Reflection Tracking	naErrorTerm_Tracking	1	1
Rev Reflection Tracking	naErrorTerm_Tracking	2	2

Fwd Trans Tracking	naErrorTerm_Tracking	2	1
Rev Trans Tracking	naErrorTerm_Tracking	1	2

Return Type Variant

Default Not Applicable

Examples

```
Dim varError As Variant
varError = cal.getErrorTerm(naErrorTerm_Tracking,2,1)
```

C++ Syntax HRESULT getErrorTerm(tagNAErrorTerm ETerm, long ReceivePort, long SourcePort, VARIANT* pData)

Interface ICalibrator

GetErrorTerm Method **Superseded**

Description	<p>This command has been replaced with GetErrorTermByString</p> <p>Returns error term data from the Cal Set. The returned data is complex pairs.</p> <p>Learn more about Reading and Writing Cal Data</p> <p>See examples of Reading and Writing Cal Set Data</p>
VB Syntax	<i>data</i> = <i>calSet</i> . getErrorTerm (<i>setNumber</i> , <i>term</i> , <i>rcv</i> , <i>src</i>)
Variable	(Type) - Description
<i>data</i>	<p>(Variant) Two-dimensional safe array to store the returned data. Memory for the returned Variant is allocated by the PNA and must be released by client.</p> <p>Note: See also getErrorTermComplex on the ICalData2 interface to avoid using the variant data type.</p>
<i>calSet</i>	A Cal Set (object)
<i>setNumber</i>	<p>(Long) There can be more than one set of error terms in a Cal Set.</p> <ul style="list-style-type: none"> SetNumber 0 contains the original set of error terms for a Cal Set. SetNumbers > 0 contain Interpolated error terms. Interpolated error terms are generated when interpolation is required and destroyed when no longer used. Learn about Interpolation. To determine the SetNumber in use by a channel, see GetCalSetUsageInfo
<i>term</i>	<p>(enum As NaErrorTerm2). Choose from:</p> <p>0 - naET_Directivity (rcv = src)</p> <p>1 - naET_SourceMatch (rcv = src)</p> <p>2 - naET_ReflectionTracking (rcv = src)</p> <p>3 - naET_TransmissionTracking (rcv ≠ src)</p> <p>4 - naET_LoadMatch (rcv ≠ src)</p> <p>5 - naET_Isolation (rcv ≠ src)</p>
<i>rcv</i>	(Long) - Receiver Port
<i>src</i>	(Long) - Source Port
Return Type	Variant
Default	Not Applicable
Examples	<pre>Dim varError As Variant varError = CalSet.getErrorTerm(0,naET_TransmissionTracking,2,1)</pre>

C++ Syntax HRESULT getErrorTerm(long setID, tagNAErrorTerm2 ETerm, long ReceivePort, long SourcePort, VARIANT* pData)

Interface ICalSet

GetErrorTermByString Method

Description Returns error term data from the Cal Set by specifying the string name of the error term.

- Learn more about [Reading and Writing Cal Data](#)
- See examples of [Reading](#) and [Writing](#) Cal Set Data
- See [GetCalSetUsageInfo](#) to determine the setNumber.

VB Syntax `pdata = calset.GetErrorTermByString(setNumber, errorTerm)`

Variable [\(Type\) - Description](#)

pdata **(Variant)** Two-dimensional safe array to store the returned data. Memory for the returned Variant is allocated by the PNA and must be released by client.

Note: See also [getErrorTermComplexByString](#) on the ICalData3 interface to avoid using the variant data type.

calset A [Cal Set](#) (**object**)

setNumber **(Long)** Set number of the required Cal Set data.

See [GetCalSetUsageInfo](#) to determine the setNumber.

- SetNumber **0** contains the original "master" set of error terms for a Cal Set.
- SetNumbers **> 0** refers to the PNA channel number that contains the error terms. When retrieving channel error terms, Correction must be ON.

New beginning PNA Rev 7.2: The channel error term data contains [interpolation](#), [fixturing](#), and [port extension](#) data if each is ON.

- For Balanced Measurements, interpolation, fixturing, and port extensions can be ON independently.
- For Standard S-parameters, to get port extension data, both fixturing and port extensions must be ON.

errorTerm **(String)** The string name used to identify a particular error term in the Cal Set. An example string for port 3 directivity in a full 2 port cal might be "Directivity(3,3)". To determine the string names of error terms, see [GetErrorTermList2](#).

Return Type Variant

Default Not Applicable

Examples [See an Example](#)

C++ Syntax HRESULT GetErrorTermByString (long SetNumber, BSTR bufferName, VARIANT* pdata);

Interface ICalSet2

GetErrorTermComplex Method **Superseded**

Description This command has been replaced by [Get ErrorTermComplexByString](#)

Retrieves error term data from the error correction buffer. The data is in complex pairs.

Learn more about [reading and writing Cal Data using COM](#).

This method exists on a non-default interface. If you cannot access this method, use the [GetErrorTerm](#) Method on ICalibrator.

VB Syntax `eData.GetErrorTermComplex term, rcv, src, numPts, real(), imag()`

Variable (Type) - Description

eData An ICalData pointer to the Calibrator object

term **(enum NAErrorTerm)** - The error term to be retrieved. Choose from:

- **naErrorTerm_Directivity_Isolation**
- **naErrorTerm_Match**
- **naErrorTerm_Tracking**

rcv **(long integer)** - Receiver Port

src **(long integer)** - Source Port

numPts **(long integer)** - on input, max number of data points to return;
on output: indicates the actual number of data points returned.

real() **(single)** - array to accept the **real** part of the error-term. One-dimensional for the number of data points.

imag() **(single)** - array to accept the **imaginary** part of the error-term. One-dimensional for the number of data points.

	To get this	Specify these parameters:		
	Error Term	<i>term</i>	<i>rcv</i>	<i>src</i>
	Fwd Directivity	naET_Directivity Isolation	1	1
	Rev Directivity	naET_Directivity Isolation	2	2
	Fwd Isolation	naET_Directivity Isolation	2	1
	Rev Isolation	naET_Directivity Isolation	1	2
	Fwd Source Match	naErrorTerm_Match	1	1
	Rev Source Match	naErrorTerm_Match	2	2
	Fwd Load Match	naErrorTerm_Match	2	1
	Rev Load Match	naErrorTerm_Match	1	2
	Fwd Reflection Tracking	naErrorTerm_Tracking	1	1
	Rev Reflection Tracking	naErrorTerm_Tracking	2	2
	Fwd Trans Tracking	naErrorTerm_Tracking	2	1
	Rev Trans Tracking	naErrorTerm_Tracking	1	2
Return Type	Single			
Default	Not Applicable			
Examples	<pre> ReDim rel(numpts) ReDim img(numpts) Dim eData As ICalData Set eData = chan.Calibrator eData.getErrorTermComplex naErrorTerm_Directivity_Isolation, 1, 1, 201, rel(0), img(0) </pre>			
C++ Syntax	HRESULT raw_getErrorTermComplex(tagNAErrorTerm ETerm, long ReceivePort, long SourcePort, long* pNumValues, float* pReal, float* plmag)			
Interface	ICalData			

GetErrorTermComplex Method **Superseded**

Description This command is [replaced](#) with [Get ErrorTermComplexByString](#)

Returns error term data from the Cal Set. The data is in complex pairs.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data

Note: This method exists on a non-default interface. If you cannot access this method, use the [GetErrorTerm](#) Method on ICal Set.

VB Syntax *iCalData2*.**GetErrorTermComplex** *setNumber, term, rcv, src, numPts, real(), imag()*

Variable [\(Type\)](#) - **Description**

iCalData2 An [ICalData2](#) pointer to the Cal Set object

setNumber **(Long)** There can be more than one set of error terms in a Cal Set.

- *setNumber* **0** contains the original set of error terms for a Cal Set.
- *setNumbers* **> 0** contain Interpolated error terms. Interpolated error terms are generated when interpolation is required and destroyed when no longer used. [Learn about Interpolation](#).
- To determine the *setNumber* in use by a channel, see [GetCalSetUsageInfo](#)

term **(enum NAErrorTerm2)** - The error term to be retrieved. Choose from:

- 0 - naET_Directivity
- 1 - naET_SourceMatch
- 2 - naET_ReflectionTracking
- 3 - naET_TransmissionTracking
- 4 - naET_LoadMatch
- 5 - naET_Isolation

rcv **(Long)** - Receiver Port

src **(Long)** - Source Port

numPts **(Long)** An In/Out parameter.

On the way **in**, you specify the **max** number of values being requested.

On the way **out**, the PNA returns number of values actually returned.

real() **(single)** - array to accept the **real** part of the error-term. One-dimensional for the number of data points.

imag() **(single)** - array to accept the **imaginary** part of the error-term. One-dimensional for the number of data points.

Return Type Single

Default Not Applicable

Examples

```
dim numpts as long
numpts = ActiveChannel.NumberOfPoints
ReDim r(numpts) ' real part
ReDim i(numpts) ' imaginary part
Dim CalSet as CalSet
set CalSet = pna.GetCalManager.GetCal SetByGUID( txtGUID )
Dim eData As ICalData2
Set eData = CalSet
eData.getErrorTermComplex 0, naET_LoadMatch, 1, 2, numpts,
r(0),i (0)
```

C++ Syntax HRESULT getErrorTermComplex(long setID, tagNAErrorTerm2 ETerm, long ReceivePort, long SourcePort, long* pNumValues, float* pReal, float* plmag)

Interface ICalData2

GetErrorTermComplexByString Method

Description Returns error term data from the Cal Set by specifying the string name.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data

Note: This method exists on a non-default interface. If you cannot access this method, use [GetErrorTermByString](#)

VB Syntax *ICalData3*.**GetErrorTermComplexByString** *setNumber, errorTerm, numPoints, real(0), imag(0)*

Variable [\(Type\)](#) - **Description**

ICalData3 An ICalData3 pointer to a [CalSet](#) (Object)

setNumber **(Long)** There can be more than one set of error terms in a Cal Set.

- setNumber **0** contains the original set of error terms for a Cal Set.
- setNumbers **> 0** contain Interpolated error terms. Interpolated error terms are generated when interpolation is required and destroyed when no longer used. [Learn about Interpolation](#).
- To determine the setNumber in use by a channel, see [GetCalSetUsageInfo](#)

errorTerm **(String)** The string name of error term in the Cal Set. An example string for port 3 directivity in a full 2 port cal might be "Directivity(3,3)".

For a list error term string names, use [Get ErrorTermList2](#)

numPoints **(Long)** An In/Out parameter.

On the way **in**, you specify the **max** number of values being requested.

On the way **out**, the PNA returns number of values actually returned.

real **(Single)** The real component of the complex data.

imag **(Single)** The imaginary component of the complex data.

Return Type Single

Default Not Applicable

Examples [See example](#)

C++ Syntax HRESULT GetErrorTermComplexByString(long etermSetID, BSTR bufferName, long* InumPoints, single* real, single* imag);

Interface ICalData3

GetErrorTermList Method **Superseded**

Description **Note:** This command is replaced by [CalSet.getErrorTermList2](#)

Returns the list of Error Terms contained in this Cal Set for the CalType specified in the [OpenCal Set](#) method. Learn more about [reading and writing Cal Data using COM](#).

The list is a comma separated, textual representation of the error terms with the term name followed by the port path in parentheses:

Term (n, n),
Term (m,n)

Before calling this method you must open the Cal Set with [OpenCal Set](#). If the Cal set is not open, this method returns E_NA_Cal Set_ACCESS_DENIED.

Use [StringToNAErrorTerm2](#) to convert the list entrees to values that can be used with [GetErrorTerm](#) and [PutErrorTerm](#).

Note: The port path designation (m n) indicates the ports that contribute to the error being compensated. Directivity, source match and reflection tracking are single port characteristics, designated in this list by (n n) where n equals the port being characterized.

Other terms characterize the interaction between ports. For example, the load match term is describing the match at port (m) while looking into port (n). Thus the notation (m n) indicates the two ports that contribute to the loadmatch error.

VB Syntax *CalSet*.**GetErrorTermList** (SetID, count, strList)

Variable [\(Type\)](#) - **Description**

CalSet **(object)** - A Cal Set object

SetID (long) - specifies the error term set to query. Use 0 for the master set.

count (long) - the number of error terms in the returned list

strList **(string)** - comma separated list of error terms found in Cal Set

Return Type Not Applicable

Default Not Applicable

Examples

```
dim count as Integer
dim list as string
OpenCalSet (naCalType_TwoPortSOLT 1, 2)
GetErrorTermList( 0, count, list)
CloseCalSet( )
```

Assuming the cal set contained the full set of error terms for this two-port Cal, the returned list would be:

```
"Directivity(1 1),SourceMatch(1 1),ReflectionTracking(1
1),TransmissionTracking(2 1),LoadMatch(2 1),Isolation(2
```

```
1),Directivity(2 2),SourceMatch(2 2),ReflectionTracking(2  
2),TransmissionTracking(1 2),LoadMatch(1 2),Isolation(1 2)"
```

C++ Syntax HRESULT GetErrorTermList (long etermSetID, long* count, BSTR* strList);

Interface ICalSet

GetErrorTermList2 Method

Description Returns a list of error terms names found in the Cal Set containing the specified prefix.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data

VB Syntax *list = CalSet.GetErrorTermList2(setNumber, calTypePrefix)*

Variable [\(Type\)](#) - Description

list **(Variant)** Variant containing a string array of error term names.

CalSet **(object)** - A [CalSet](#) object

setNumber **(Long)** There can be more than one set of error terms in a Cal Set.

- setNumber **0** contains the original set of error terms for a Cal Set.
- setNumbers **> 0** contain Interpolated error terms. Interpolated error terms are generated when interpolation is required and destroyed when no longer used. [Learn about Interpolation](#).
- To determine the setNumber in use by a channel, see [GetCalSetUsageInfo](#)

caltypePrefix **(String)** The string used to identify Cal Set data as belonging to a specific Cal Type. This string is used as a filter so that only the error term names of interest are returned. If the prefix is empty, all terms are returned.

An example prefix for a two port cal on ports 2 and 3 might be: "Full 2 Port Cal (2,3)".

Return Type Variant

Default Not Applicable

Examples [See an Example](#)

C++ Syntax HRESULT GetErrorTermList2 (long SetNumber, BSTR caltypePrefix, VARIANT* list)

Interface ICalSet2

Get ExternalTestSetIO Method

Description This method returns the [IExternalTestSetIO](#) interface.

VB Syntax `app.GetExternalTestSetIO`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

Return Type IHWExternalTestSetIO

Default Not Applicable

Example

```
Dim app As AgilentPNA835x.Application
Dim ets As IHWExternalTestSetIO
Set ets = app.GetExternalTestSetIO
```

C++ Syntax HRESULT GetExternalTestSetIO (IHWExternalTestSetIO
**ptestset);

Interface IApplication

GetFilterStatistics Method

Description Returns all four Filter Statistics resulting from a [SearchFilterBandwidth](#). To retrieve individual filter statistics, use [meas.FilterCF](#), [meas.FilterBW](#), [meas.FilterLoss](#), [meas.FilterQ](#) properties.

VB Syntax *meas*.**GetFilterStatistics** *cf,bw,loss,q*

Variable [\(Type\)](#) - [Description](#)

meas A Measurement (**object**)

cf,bw,loss,q Dimensioned variables to store the returned values

Return Type **(double)** *cf*
(single) *bw,loss,q*

Default Not Applicable

Examples **'Dimension variables**

```
Dim cf as Double  
Dim bw as Single  
Dim loss as Single  
Dim q as Single
```

```
meas.GetFilterStatistics cf,bw,loss,q
```

C++ Syntax HRESULT GetFilterStatistics(double* centerFreq, float* bw, float* loss, float* quality)

Interface IMeasurement

GetGuid Method

Description Returns a string containing the GUID identifying this Cal Set. Each Cal Set is assigned a GUID (global unique ID). GUIDs are used to retrieve and select Cal Sets on the PNA. Learn more about [reading and writing Cal Data using COM](#).

VB Syntax *value* = *CalSet*.**GetGuid**

Variable [\(Type\)](#) - **Description**

value **(string)** - Variable to store the returned GUID

CalSet **(object)** - A Cal Set object

Return Type String

Default Not Applicable

Examples `guid = CalSet.GetGuid 'Read`

C++ Syntax HRESULT GetGUID(BSTR* pGUIDString);

Interface ICalSet

get_InputVoltageEX Method

Description This command replaces [get InputVoltage Method](#)
Reads the ADC voltage from the specified location.

VB Syntax *volts* = *AuxIO*.**get_InputVoltageEX** *loc*

Variable [\(Type\)](#) - **Description**

volts **(double)** - variable to store the return value

AuxIO **(object)** - A [Hardware Auxiliary Input / Output](#) object

loc **(Long)** Location from which to read data.

For PNA-X models:, reads ADC voltages from the [Power I/O connector](#). Choose from:

- 1 Reads voltage on Analog In 1 port (pin 7).
- 2 Reads voltage on Analog In 2 port (pin 8).
- 3 Reads voltage on GndSens (pin 6).
- 4 Reads voltage on Analog Out 1 port (pin 3).
- 5 Reads voltage on Analog Out 2 port (pin 4).

For all other PNA models:

- 1 Reads voltage on the Analog IN (pin 14) of the AUX IO connector.
- 4 Reads voltage on Analog Out 1 port (pin 3).
- 5 Reads voltage on Analog Out 2 port (pin 2).

Return Type Double

Default Not Applicable

Examples

```
Dim aux as HWAuxIO
Set aux = PNA.getAuxIO
volts = aux.get_InputVoltageEX 1
'for PNA-X, read voltage on PowerI/O pin 7
'for all other models, reads voltage on Aux I/O Analog In
(pin 14)
```

C++ Syntax HRESULT get_InputVoltageEX (long muxLoc, double* vtVoltage);

Interface HWAuxIO2

Last Modified:

10-Jul-2007 MX New topic

get_Input1 Method

Description	<p>Reads a hardware latch that captures high to low transitions on Input1 of the Material Handler IO. Reading the latch causes it to reset and is ready for the next transition. The hardware latch is only capable of capturing one transition per query. Additional transitions are ignored until after the next query.</p> <p>Momentarily driving Input1 high, then low, causes a transition to be detected and latched.</p>
VB Syntax	<i>inp1</i> = <i>handlerIo</i> .get_Input1
Variable	(Type) - Description
<i>inp1</i>	(variant) - A variable to store the return value
<i>handlerIo</i>	(object) - A HandlerIO object
Return Type	Variant - 0 - a high to low transition occurred at Input1 since the last time it was queried. 1 - no high to low transition occurred.
Default	Not Applicable
Examples	<pre>input1 = handlerIo.get_Input1 'Read</pre>
C++ Syntax	HRESULT get_Input1 (VARIANT* Data);
Interface	IHWMaterialHandlerIO

GetIsolationPaths Method

Description Gets the list of paths (port pairings) for which isolation standards will be measured during calibration.

VB Syntax *value* = *obj*.**GetIsolationPaths**

Variable [\(Type\)](#) - **Description**

value (Variant) - Variable to store the returned port paths in pairs. One-dimensional array of Long Integers.

obj Any of the following:
[GuidedCalibration](#) (object)

Return Type Variant – Containing one-dimensional array of Long Integers.

Default No port pairs (empty Variant variable)

Examples `pathList = guidedCal.GetIsolationPaths`
`'displaying the paths separated by commas,`
`'with a dash (-) between the pair of port numbers comprising`
`each path`

```
For i = LBound(portList) To UBound(portList) Step 2
    msg = msg + CStr(portList(i)) + "-" + CStr(portList(i+1))
    If i+1 < UBound(portList) Then msg = msg + ","
Next
MsgBox msg, 0, "List of isolation paths"
```

C++ Syntax HRESULT GetIsolationPaths(VARIANT* pathList);

Interface IGuidedCalibration

Last Modified:

16-Apr-2007 MX New topic

Get MaterialHandlerIO Method

Description This method returns the [MaterialHandlerIO](#) interface.

VB Syntax *app*.GetMaterialHandlerIO

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

Return Type IHWMaterialHandlerIO

Default Not Applicable

Example

```
Dim app As AgilentPNA835x.Application
Dim hand As HWMaterialHandlerIO
Set hand = app.GetMaterialHandlerIO
```

C++ Syntax HRESULT GetMaterialHandlerIO (IHWMaterialHandlerIO
**phand);

Interface IApplication

GetNAComplex Method

Description Retrieves complex data from the specified location.
See also [getComplex](#) and [getData](#) Method.

VB Syntax *measData.getNAComplex location, numPts, data*

Variable [\(Type\) - Description](#)

measData An IArrayTransfer interface which supports the Measurement object

location **(enum NADataStore)** - Where the data you want is residing. Choose from:
 0 - naRawData
 1 - naCorrectedData
 2 - naMeasResult
 3 - naRawMemory
 4 - naMemoryResult
 5 - naDivisor - When reading data from, or writing data to, the normalization divisor, you must first create a divisor trace using [DataToDivisor Method](#).

numPts **(long integer)** - Number of data points requested
 [out] - specifies number of data elements returned
 [in] - specifies the data being requested or the capacity of the *dComplex* array

data **(NAComplex)** - A one-dimensional array of NaComplex to store the data.

Return Type NAComplex

Default Not Applicable

Examples

```
Dim dComplex(201) AS NaComplex
Dim measData As IArrayTransfer
Dim pts as Long
Set measData = app.ActiveMeasurement
measData.getNAComplex naCorrectedData, pts, dComplex(0)
```

Notes The data is stored as Real and Imaginary (**Re** and **Im**) members of the NaComplex user defined type. You can access each number individually by iterating through the array.

```
For i = 0 to NumPts-1
    dReal (i) = dcomplex (i).Re
    dImag (i) = dcomplex (i).Im
Next i
```

C++ Syntax HRESULT getNAComplex(tagNADataStore DataStore, long* pNumValues, TsComplex* pComplex)

Interface IArrayTransfer

GetNumberOfGroups Method

Description Returns the number of groups a channel has yet to acquire. To set the number of groups for a channel, use [Number Of Groups Method](#)

VB Syntax *value* = *chan*.**GetNumberOfGroups**

Variable [\(Type\)](#) - Description

value **(Long Integer)** - Number of groups

chan Channel **(object)**

Return Type **(Long Integer)**

Default Not Applicable

Examples `groups = chan.GetNumberOfGroups 'Read`

C++ Syntax HRESULT GetNumberOfGroups(long* numberOfGroups);

Interface IChannel3

get_Output Method

Description [Type 1 and Type2 configurations](#): Returns the last value written to the selected output pin.

[Type3 configuration](#): Returns the current state of the selected output pin. If an Input1 trigger occurs, the state may not be the same value as was written.

All configurations: Data is written using [put_Output](#) Method.

VB Syntax `data = handlerIo.get_Output (pin)`

Variable [\(Type\) - Description](#)

data **(variant)** - A variable to store the return value. The returned value will be one of the following:

0 - TTL Low

1 - TTL High

handlerIo **(object)** - A HandlerIO object

pin **(enum as NAMatHandlerOutput)** - output to read. Choose from:

naOutput1 (0)

naOutput1User (1)

naOutput2 (2)

naOutput2User (3)

[Learn about User Output](#)

Return Type Variant

Default Not Applicable

Examples `data = handlerIo.get_Output(naOutput1)`

C++ Syntax HRESULT get_Output (tagNAMatHandlerOutput Output, VARIANT* Data);

Interface IHWMaterialHandlerIO

get_OutputVoltage Method

Description **E836x and PNA-L:** Reads voltages on the DAC/Analog Output 1|2 of the Auxiliary IO connector.

PNA-X: Reads voltage on the [Power I/O connector](#) AnalogOut1|2.

VB Syntax *volts* = *AuxIO*.**get_OutputVoltage** (*output*)

Variable [\(Type\)](#) - **Description**

volts **(double)** - variable to store the return value

AuxIO **(object)** - A Hardware Auxiliary Input / Output object

output **(variant)** Number of the output DAC from which to read voltage. Choose from:

1 Output 1 (Aux I/O pin 3) and (Power I/O pin 3)

2 Output 2 (Aux I/O pin 2) and (Power I/O pin 4)

Return Type Double

Default Not Applicable

Examples

```
Dim aux as HWAuxIO
Set aux = PNA.getAuxIO
volts = aux.get_OutputVoltage(1)
'read voltage from Analog Out 1 (Aux I/O pin3) or (Power I/O pin 3)
```

C++ Syntax HRESULT get_OutputVoltage(VARIANT Output, double* Voltage);

Interface IHWAuxIO

Last Modified:

10-Jul-2007 Added PNA-X capability

get OutputVoltageMode Method

Description This command returns the mode of the selected "Analog Out" line on the [Auxiliary IO connector](#) and [Power I/O connector](#). The modes give the user the option to have the requested voltage applied immediately or not until the sweep is done. To set the mode, use [put OutputVoltageMode Method](#).

VB Syntax *mode* = *auxIo*.get_OutputVoltageMode (*output*)

Variable [\(Type\)](#) - Description

mode **(enum NAOOutputVoltageMode)** - variable to store the returned mode.

naWaitEOS - While in this mode any voltage changes sent to the selected analog out will only get applied to the output between sweeps.

naNoWait - While in this mode any voltage changes sent to the selected analog out will occur right away without waiting until the end of a sweep, the voltage gets applied immediately.

auxIo **(object)** - A Hardware Auxiliary Input / Output object

output (double) Analog Output. Choose from **1** or **2**

Return Type enum as NAOOutputVoltageMode

Default naWaitEOS

Examples `vOutMode = auxIo.get_OutputVoltageMode (1)`

C++ Syntax HRESULT get_OutputVoltageMode(VARIANT Output, tagNAOutputVoltageMode* pMode);

Interface IHWAuxIO

Last Modified:

10-Jul-2007 Added PNA-X capability

GetPairedData Method

Description Retrieves pairs of data from the specified location.

Note: This method exists on a non-default interface. If you cannot access this method, use the [Get Data](#) Method on IMeasurement.

VB Syntax *measData.getPairedData location, format, numPts, d1, d2*

Variable [\(Type\)](#) - Description

measData An IArrayTransfer interface which supports the Measurement object

location **(enum NADataStore)** - Where the data you want is residing. Choose from:

- 0 - naRawData
- 1 - naCorrectedData
- 2 - naMeasResult
- 3 - naRawMemory
- 4 - naMemoryResult
- 5 - naDivisor - When reading data from, or writing data to, the normalization divisor, you must first create a divisor trace using [DataToDivisor Method](#).

format **(enum NAPairedDataFormat)** - Format in which you would like the Paired data. Choose from:

- **naLinMagPhase** - Linear magnitude and phase
- **naLogMagPhase** - Log magnitude and phase
- **naReallImaginary** - Real and Imaginary

Note: Selecting **naReallImaginary** format is the same as using the [getComplex](#) method

numPts **(long integer)** - Number of data points requested
[out] - specifies number of data elements returned
[in] - specifies the data being requested or the capacity of the *dPaired* array

d1 **(single)** - Array to store the magnitude / real values

d2 **(single)** - Array to store the phase / imaginary values

Return Type Two Single arrays

Default Not Applicable

Examples

```
Dim logm() As Single
Dim phase() As Single
Public measData As IArrayTransfer
```

```

Set measData = app.ActiveMeasurement
Dim numpts As Long
numPoints = app.ActiveChannel.NumberOfPoints
ReDim logm(numPoints)
ReDim phase(numPoints)

measData.getPairedData naCorrectedData, naLogMagPhase,
numPoints, logm(0), phase(0)

Print values(0), values(1)

```

C++ Syntax HRESULT getPairedData(tagNADataStore DataStore, tagNAPairedDataFormat PairFormat, long* pNumValues, float* pReal, float* plmag)

Interface IArrayTransfer

get_Port Method

Description Returns the value from the specified "readable" port.

VB Syntax `data = handlerIo.get_Port (port)`

Variable [\(Type\) - Description](#)

data **(variant)** - A variable to store the return value. The following table shows what the returned data represents:

Port	MSB.....LSB 8.....0
C	C3...C0
D	D3...D0
E	D3...D0 + C3...C0

handlerIo **(object)** - A HandlerIO object

port **(enum as NAmatHandlerPort)** - port to get data from. Choose from:

naPortC - (2)

naPortD - (3)

naPortE - (4)

Note: Reading data from the Write-only ports (A,B,F,G,H) will return an error. Ports C and D must be put in Read mode before reading from C, D, or E using [PortMode Property](#).

Return Type Variant

Default 0

Examples `data = handlerIo.get_Port(naPortC)`

C++ Syntax `HRESULT get_Port (tagNAmatHandlerPort Port, VARIANT* Data);`

Interface IHWMaterialHandlerIO

get_PortCData Method

Description Reads a 4-bit value from Port C of the Aux I/O connector (pins 22-25) and the Material Handler IO (pins 21-24 Anritsu) - (pins 22-25 Avantest).

Note: These lines are connected to both the Handler IO and Aux IO in the PNA.

VB Syntax `value = AuxIO.get_PortCData`

Variable [\(Type\)](#) - Description

`value` **(variant)** - Variable to store the returned data

`AuxIO` **(object)** - A Hardware Auxiliary Input / Output object

Return Type Integer

Default None

Examples `value = auxIo.get_PortCData 'Reading a value of 15 when in Positive Logic indicates Port C lines C0, C1, C2, C3 are High. If in Negative Logic they are Low.`

C++ Syntax `HRESULT get_PortCData(VARIANT* Data);`

Interface IHWAuxIO

GetPortNumber Method

Description Returns the port number that is associated with the specified port name. These numbers are used with several commands to specify a PNA port.

To learn more, see [Remotely Specifying a Source Port](#).

VB Syntax *value* = *cap*.GetPortNumber *PortName*

Variable [\(Type\)](#) - Description

value **(Long)** - Variable to store the returned Port Number integer value.

cap A [Capabilities](#) **(object)**

PortName **(String)** Name of the PNA port.

- Use [SourcePortNames Property](#) to return a list of PNA port (string) names.
- If an external source is selected, specify the external source name that is used in the [Select an External Source dialog](#).

Return Type Long Integer

Default Not Applicable

Examples `value = cap.GetPortNumber 'Read`

C++ Syntax HRESULT GetPortNumber(BSTR name, long *number);

Interface ICapabilities4

Last Modified:

April 30, 2007 Edited for Ext Source Control

GetReferenceMarker Method

Description Returns a handle to the reference marker.

VB Syntax *meas*.**GetReferenceMarker**

Variable [\(Type\)](#) - **Description**

meas A Measurement (**object**)

Return Type Object

Default Not Applicable

Examples `meas.GetReferenceMarker`

C++ Syntax HRESULT GetReferenceMarker(IMarker**
refMarker)

Interface IMeasurement

GetRequiredEtermNames

Description Returns an array of strings specifying the error terms required by the caltype's correction algorithm in order to correct the specified parameter.

This function interrogates a specific caltype (caltypeGUID) for the list of error terms it would need in order to correct the specified parameter. All the standard S Parameter calibration types embed port specifiers in the error term name. The specific port information is gleaned from the passed parameter. For example, to query the error term requirements specific to a two port cal on ports 1 and 3, issue this with a parameter of S13 or S31. The buffer names returned will be formatted in this way:

Full 1 Port SOLT(1,3):TransmissionTracking(3,1)

VB Syntax **EtermNames = GetRequiredEtermNames**(CalTypeGUID As String, Parameter As String)

Variable (Type) - Description

caltypeGUID: [in] the GUID of the desired calibration type

parameter [in] string specifying the parameter to be corrected

EtermNames [out] array of strings containing the error term names.

Note: In C++ Allocated by server. Must be freed by caller using SysFreeString.

Return Type Not Applicable

Default Not Applicable

Examples enames = GetRequiredEtermNames(ctGUID, Parm)

C++ Syntax HRESULT GetRequiredEtermNames(BSTR caltypeGUID, BSTR parameter, VARIANT* EtermNames)

Interface ICalManager2

GetScalar Method

Description Retrieves scalar data (ONE number per data point) from the specified location.

Note: This method exists on a non-default interface. If you cannot access this method, use the [Get Data](#) Method on IMeasurement.

VB Syntax *measData.getScalar location, format, numPts, data*

Variable [\(Type\)](#) - Description

measData An IArrayTransfer interface which supports the Measurement object

location **(enum NADataStore)** - Where the data you want is residing. Choose from:

- 0 - naRawData
- 1 - naCorrectedData
- 2 - naMeasResult
- 3 - naRawMemory
- 4 - naMemoryResult
- 5 - naDivisor - When reading data from, or writing data to, the normalization divisor, you must first create a divisor trace using [DataToDivisor Method](#).

format **(enum NADataFormat)** - Format in which you would like the data. Choose from:

- 0 - naDataFormat_LinMag
- 1 - naDataFormat_LogMag
- 2 - naDataFormat_Phase
- 5 - naDataFormat_Delay
- 6 - naDataFormat_Real
- 7 - naDataFormat_Imaginary
- 8 - naDataFormat_SWR
- 9 - naDataFormat_PhaseUnwrapped

Note: Polar, Smith, and Inverse Smith are invalid formats for this command. See [Get Complex Method](#).

[Learn more about Data Format.](#)

numPts **(long integer)** - Number of data points requested
 [out] - specifies number of data elements returned
 [in] - specifies the data being requested or the capacity of the *dScalar* array

data **(single)** - Array to store the scalar data.

Return Type Single

Default Not Applicable

Examples

```
Dim dScalar() As Single
Dim measData As IArrayTransfer
Set measData = app.ActiveMeasurement
Dim numpts as Long
numpts = app.ActiveChannel.NumberOfPoints
ReDim dScalar(numPoints)

measData.getScalar naCorrectedData, naDataFormat_LogMag, numpts,
dScalar(0)
Print dScalar(0), dScalar(1)
```

C++ Syntax HRESULT getScalar(tagNADataStore DataStore, tagNADataFormat DataFormat, long* pNumValues, float* pVals)

Interface IArrayTransfer

GetShortcut Method

Description Returns the Title, Path, and optional argument strings, of the specified Macro (shortcut). Use this method to list the titles and paths of macros in the analyzer.

VB Syntax *app.GetShortcut index, title, path, arguments*

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

index **(long)** - Number of the macro. Use a number between **1** and **12**.

title **(string)** - **Title** of the specified macro. (Appears in the softkey label)

path **(string)** - **Pathname** of the specified macro.

arguments **(string)** - Arguments for the specified macro

Return Type String

Default Not Applicable

Example

```
Dim t As String
Dim p As String
Dim arg As String
Dim i As Integer
For i = 1 to 12
    app.GetShortcut i,t,p,arg
    Print t,p
Next
```

C++ Syntax HRESULT GetShortcut(long Number, BSTR* title, BSTR* pathname, BSTR* arguments)

Interface IApplication

Remarks Shortcuts can also be defined and accessed using the macro key on the front panel. However, the benefit of this feature is primarily for the interactive user

GetSnPData Method **Superseded**

Description **Note:** this command is replaced by [Get SnpDataWithSpecifiedPorts Method](#).
 Reads SnP data from the selected measurement. [Learn more about SnP that is returned from the PNA.](#)

VB Syntax *data* = *meas*.**GetSnPData** *type*

Variable [\(Type\)](#) - Description

data Variant array to store the data.

meas A Measurement **(object)**

type **(string)** - Type of SnP data to return. If unspecified, <n> is set to 2. Choose from:
"S1P" returns data for the active measurement.
"S2P" returns data for the current 2-port measurement (4 S-parameters).
"S3P" returns data for the current 3 port measurement (9 S-parameters). Valid only on instruments with 3 ports or more.
"S4P" returns data for the current 4 port measurement (16 S-parameters). Valid only on instruments with 4 ports or more.

SnP data can be output using several data formatting options. See [SnPFormat Property](#)

Return Type Variant array - automatically dimensioned to the size of the data

Default Not Applicable

Examples `snp = meas.GetSnPData("s1p")`

C++ Syntax HRESULT GetSnPData(BSTR snptype, VARIANT * response)

Interface IMeasurement3

GetSnPDataWithSpecifiedPorts Method

Description **Note:** This command replaces [Get SnPData](#). This command is more explicit regarding the data to be returned, and works for PNAs with multiport test sets.

Reads SnP data for the measurement by specifying the PNA port numbers. [Learn more about SnP that is returned from the PNA.](#)

VB Syntax *data = meas.***GetSnPDataWithSpecifiedPorts** *ports*

Variable [\(Type\)](#) - Description

data **(Variant)** array to store the data.

meas A [Measurement](#) **(object)**

ports **(Variant Array)** One-dimensional array containing the list of port numbers for which data is required.

Return Type Variant array - automatically dimensioned to the size of the data.

Default Not Applicable

Example 'This VBScript example can be pasted into a notepad file and run on the PNA as a macro. [Learn how.](#)

```
Dim pna
Dim meas
Dim param
Dim point
Dim snp
Dim ports

'List the port numbers for required data
ports = Array(3,4)

Set pna = CreateObject("AgilentPnA835x.application")
Set meas = pna.ActiveMeasurement

'limit amount of data to display
set chan=pna.ActiveChannel
chan.NumberOfPoints=2

snp = meas.GetSnPDataWithSpecifiedPorts (ports)

' returns a 3 dimensional array
' snp(param,point,data pair)
'-----
```

```

' show me the data
For param = LBound(snp, 1) To UBound(snp, 1)
    MsgBox ("Parameter: " & (param + 1))
    For point = LBound(snp, 2) To UBound(snp, 2)
        MsgBox "Point:" & (point + 1) & " " & snp(param, point, 0) &
        "," & snp(param, point, 1)
    Next
Next

```

C++ Syntax HRESULT GetSnpDataWithSpecifiedPorts(VARIANT portsToMeasure,VARIANT* response);

Interface IMeasurement7

Last modified:

9/18/06 MQ Added for multiport

getSourcePowerCalDataEx Method

Description	<p>Note: This method replaces getSourcePowerCalData Method</p> <p>Retrieves (as variant data type) source power calibration data, if it exists, from the channel.</p> <p>If the channel is sweeping the source backwards, then the first data point is the highest frequency value; the last data point is the lowest. Use the Get X-Axis Values command to return the X-axis values in the displayed order.</p> <p>Note: This method returns a variant which is less efficient than methods available on the ISourcePowerCalData interface</p>
VB Syntax	<code>data = chan.getSourcePowerCalDataEx (buffer, sourcePort)</code>
Variable	(Type) - Description
<i>data</i>	(variant) – Array to store the data.
<i>chan</i>	(object) – A Channel object
<i>buffer</i>	(enum NASourcePowerCalBuffer) - The requested source power cal data buffer. 0 - naCorrectionValues This is the only buffer currently available
<i>sourcePort</i>	(long integer) – The source port for which calibration data is being requested. Use GetPortNumber to return the port number of a source that only has a string name, such as an External Source.
Return Type	Variant array – automatically dimensioned to the size of the data.
Default	Not Applicable
Examples	<pre>Dim varData As Variant Const port1 As Long = 1 varData = chan.getSourcePowerCalDataEx (naCorrectionValues, port1) 'Print the data For i = 0 to chan.NumberOfPoints - 1 Print varData(i) Next i</pre>
C++ Syntax	HRESULT getSourcePowerCalDataEx(tagNASourcePowerCalBuffer bufSelect, long sourcePort, VARIANT *pData);
Interface	IChannel4

Last Modified:

27-Jun-2007 Updated for PNA-X source port names

getSourcePowerCalDataScalarEx Method

Description **Note:** This method replaces [getSourcePowerCalDataScalar Method](#)

Retrieves (as scalar values) source power calibration data, if it exists, from this channel.

If the channel is sweeping the source backwards, then the first data point is the highest frequency value; the last data point is the lowest. Use the [Get X-Axis Values2](#) command to return the X-axis values in the displayed order.

Note: This method exists on a non-default interface. If you cannot access this method, use the [getSourcePowerCalDataEx](#) Method on IChannel4.

VB Syntax *chanData.getSourcePowerCalDataScalarEx buffer, sourcePort, numValues, data*

Variable [\(Type\)](#) - Description

chanData **(interface)** – An [ISourcePowerCalData2](#) interface on the Channel object.

buffer **(enum NASourcePowerCalBuffer)** - The requested source power cal data buffer.
0 - naCorrectionValues Currently this is the only buffer available.

sourcePort **(long integer)** – The source port for which calibration data is being requested.
 Use [GetPortNumber](#) to return the port number of a source that only has a string name, such as an External Source.

numValues **(long integer)** – Number of data values.
 [out] – specifies number of data values returned.
 [in] – specifies number of values being requested (this must not be larger than the capacity of the data array).

data **(single)** – Array to store the data.

Return Type Single

Default Not Applicable

Examples

```
Dim numValues As Long
Dim scalarCalValues() As Single
Dim chanData As ISourcePowerCalData2
Const port1 As Long = 1
numValues = app.ActiveChannel.NumberOfPoints
ReDim scalarCalValues(numValues)
Set chanData = app.ActiveChannel

chanData.getSourcePowerCalDataScalarEx naCorrectionValues,
port1, numValues, scalarCalValues(0)
```

```
'Print the data
For i = 0 to numValues - 1
Print scalarCalValues(i)
Next I
```

C++ Syntax HRESULT getSourcePowerCalDataScalarEx(tagNASourcePowerCalBuffer bufSelect,
long sourcePort, long *pNumValues, float *pData);

Interface ISourcePowerCalData2

Last Modified:

27-Jun-2007 Updated for PNA-X source port names

GetStandard Method **Superseded**

Description This command has been replaced with [Get StandardByString](#)

Returns standard acquisition data from the Cal Set. The returned data is complex pairs.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data

VB Syntax `data = CalSet.getStandard (standard, rcv, src)`

Variable (Type) - Description

data **(Variant)** Two-dimensional safe array to store the returned data. Memory for the returned Variant is allocated by the PNA and must be released by client.

Note: See also [getStandardComplex](#) on the ICalData2 interface to avoid using the variant data type.

CalSet A **Cal Set (object)**

standard **(enum NACalClass)** Standard data to be read. Choose from:

- 1 - naClassA
- 2 - naClassB
- 3 - naClassC
- 4 - naClassD
- 5 - naClassE
- 6 - naReferenceRatioLine
- 7 - naReferenceRatioThru

SOLT Standards

- 1 - naSOLT_Open
- 2 - naSOLT_Short
- 3 - naSOLT_Load
- 4 - naSOLT_Thru
- 5 - naSOLT_Isolation

TRL Standards

- 1 - naTRL_Reflection
- 2 - naTRL_Line_Reflection

3 - naTRL_Line_Tracking

4 - naTRL_Thru

5 - naTRL_Isolation

rcv **(long)** - Receiver Port

src **(long)** - Source Port

Return Type **(variant)**

Default Not Applicable

Examples

```
Dim varStd As Variant
Dim varStd2 As Variant

Cal Set.OpenCalSet( naCalType_TwoPortSOLT, 1, 2)
varStd = CalSet.getStandard(naSOLT_Thru,2,1)
varStd2 = Cal Set.getStandard(naSOLT_Thru,1,2)
Cal Set.CloseCalSet( )
```

C++ Syntax HRESULT getStandard(tagNACalClass stdclass, long ReceivePort, long SourcePort, VARIANT* pData)

Interface ICalSet

GetStandardByString Method

Description Returns standard acquisition data from the Cal Set. The returned data is complex pairs. Learn more about [Reading and Writing Cal Data](#)
See examples of [Reading](#) and [Writing](#) Cal Set Data

VB Syntax `data = calSet.GetStandardByString(stdName)`

Variable [\(Type\)](#) - Description

data **(Variant)** Two-dimensional safe array to store the returned data. Memory for the returned Variant is allocated by the PNA and must be released by client.

Note: See also [Get StandardComplexByString](#) on the ICalData2 interface to avoid using the variant data type.

calSet A [CalSet](#) **(Object)**

stdName **(String)** The string used to identify a particular standard in the Cal Set. An example string requesting the data for the Load standard in a full 2 port cal might be "S11C(3,3)".

Return Type Variant

Default Not Applicable

Examples See an [example](#)

C++ Syntax HRESULT GetStandardByString(BSTR bufferName, VARIANT* pdata)

Interface ICalSet2

GetStandardComplex Method **Superseded**

Description This command is [replaced](#) with [GetStandardComplexByString](#)

Returns standard acquisition data from the Cal Set. The returned data is complex pairs.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data

Note: This method exists on a non-default interface. If you cannot access this method, use the [GetStandard](#) Method on ICal Set

VB Syntax *ICalData2.getStandardComplex class, rcv, src, numPts, real(), imag()*

Variable (Type) - Description

ICalData2 An [ICalData2](#) pointer to the Cal Set object

class **(enum NACalClass)** Standard data to be read. Choose from:

- 1 - naClassA
- 2 - naClassB
- 3 - naClassC
- 4 - naClassD
- 5 - naClassE
- 6 - naReferenceRatioLine
- 7 - naReferenceRatioThru

SOLT Standards

- 1 - naSOLT_Open
- 2 - naSOLT_Short
- 3 - naSOLT_Load
- 4 - naSOLT_Thru
- 5 - naSOLT_Isolation

TRL Standards

- 1 - naTRL_Reflection
- 2 - naTRL_Line_Reflection
- 3 - naTRL_Line_Tracking
- 4 - naTRL_Thru

5 - naTRL_Isolation

rcv **(long)** - Receiver Port

src **(long)** - Source Port

numPts **(Long)** An In/Out parameter.

On the way **in**, you specify the **max** number of values being requested.

On the way **out**, the PNA returns number of values actually returned.

real() **(single)** - array to accept the real part of the calibration data. One-dimensional for the number of data points.

imag() **(single)** - array to accept the imaginary part of the calibration data. One-dimensional for the number of data points.

Return Type **(single)**

Default Not Applicable

Examples

```
Dim numpts as long
numpts = ActiveChannel.NumberOfPoints
ReDim r(numpts) ' real part
ReDim i(numpts) ' imaginary part
Dim Cal Set as Cal Set
set Cal Set = pna.GetCalManager.GetCal SetByGUID( txtGUID )
Dim sData As ICalData2
Set sData = Cal Set
sdata.getStandardComplex naSOLT_Open, 1, 1, numpts, r(0), i(0)
```

C++ Syntax HRESULT getStandardComplex(tagNACalClass stdclass, long ReceivePort, long SourcePort, long* pNumValues, float* pReal, float* plmag)

Interface ICalData2

GetStandardComplexByString Method

Description Returns standard acquisition data from the Cal Set.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data

VB Syntax *ICalData3.GetStandardComplexByString stdName, InumPoints, real(0), imag(0)*

Variable [\(Type\)](#) - Description

ICalData3 An [ICalData3](#) pointer to a [CalSet](#) (**Object**)

stdName (**String**) The string used to identify a particular standard in the Cal Set. An example string requesting the data for the Load standard in a full 2 port cal might be "S11C(3,3)".

InumPoints (**Long**) An In/Out parameter.

On the way **in**, you specify the **max** number of values being requested.

On the way **out**, the PNA returns number of values actually returned.

real (**Single**) The real component of the complex data.

imag (**Single**) The imaginary component of the complex data.

Return Value Single

Default Not Applicable

Examples [See example](#)

C++ Syntax HRESULT GetStandardComplexByString(BSTR bufferName, long* InumPoints, float* real, float* imag);

Interface ICalData3

GetStandardsList Method **Superseded**

Description **Note:** This command is replaced by [CalSet.getStandardList2](#).

Returns the list of Standards contained in this Cal Set for the CalType specified in the [OpenCal Set](#) method. Learn more about [reading and writing Cal Data using COM](#).

The list is a comma separated, textual representation of the error terms with the term name followed by the port path in parentheses.

Standard (n, n),
Standard (m, n)

Before calling this method you must open the Cal Set with [OpenCal Set](#). If the Cal Set is not open, this method returns E_NA_Cal Set_ACCESS_DENIED.

Use [StringToNACalClass](#) to convert the list entrees to values that can be used with [GetStandard](#) and [PutStandard](#).

Note: The port path designation (m n) indicates the receive and source ports for the measurement. Shorts, opens and loads are single port devices, designated in this list by (n n) where n equals the port to which the device is connected. These devices are all characterized by reflection measurements.

The dual port thru device is characterized by both transmission and reflection measurements in order to compensate for load match and tracking terms.

The notation (n n) indicates the reflection measurement for this device.

The notation (m n) indicates the transmission measurement, where the source and receive ports are different.

VB Syntax *CalSet*.**GetStandardsList** (*count*, *list*)

Variable [\(Type\)](#) - **Description**

CalSet **(object)** - A Cal Set object

count **(long [out])** - indicates the number of items returned in the list

list **(string)** - Variable to store the returned Comma separated list of items.

Return Type String

Default Not Applicable

Examples

```
dim count as Integer
dim list as string
OpenCalSet (naCalType_TwoPortSOLT, 1, 2)
GetStandardsList( count, list)
CloseCalSet( )
```

Assuming the Cal Set contained the full set of standards for this two port cal, the returned list would be:

```
"Open(1 1),
Short(1 1),
```

```
Load(1 1),  
Thru(1 1),  
Isolation(2 1),  
Open(2 2),  
Short(2 2),  
Load(2 2),  
Thru(2 2),  
Isolation(1 2)  
Thru(2 1),  
Thru(1 2)"
```

C++ Syntax HRESULT GetStandardsList(long* count, BSTR* list);

Interface ICalSet

GetStandardList2 Method

Description Returns a list of standards contained by this Cal Set for the specified Cal Type.

VB Syntax *list* = *calset*.**GetStandardList2**(*calType*)

Variable [\(Type\)](#) - **Description**

calset **(object)** - A [CalSet](#) object

list **(Variant)** Variant containing a string array of standards for the specified calType.

calType **(String)** The string used to identify Cal Set data as belonging to a specific Cal Type. This string is used as a filter so that only the standard names of interest are returned. If the prefix is empty, all names are returned.

An example prefix for a two port cal on ports 2 and 3 might be: "Full 2 Port Cal (2,3)".

Return Type Variant

Default Not Applicable

Examples [See an example](#)

C++ Syntax HRESULT GetStandardList2 (BSTR caltype, VARIANT* list)

Interface ICalSet2

GetStandardsForClass Method

Description Get the calibration standard numbers for a specified calibration class. To set the calibration number use [SetStandardsForClass Method](#)

VB Syntax *calkit*.**GetStandardsForClass** (*calclassorder*, *std1*, *std2*, *std3*, *std4*, *std5*, *std6*, *std7*)

Variable [\(Type\)](#) - Description

calKit A CalKit (**object**)

calclassorder (**enum NACalClassOrder**) Choose from:

- 0 - naRefl_1_S11
- 1 - naRefl_2_S11
- 2 - naRefl_3_S11
- 3 - naTran_1_S21
- 4 - naRefl_1_S22
- 5 - naRefl_2_S22
- 6 - naRefl_3_S22
- 7 - naTran_1_S12
- 8 - naRefl_1_S33
- 9 - naRefl_2_S33
- 10 - naRefl_3_S33
- 11 - naTran_1_S32
- 12 - naTran_1_S23
- 13 - naTran_1_S31
- 14 - naTran_1_S13
- 15 - naTRL_T
- 16 - naTRL_R
- 17 - naTRL_L

std1...std7 (**long**) Calibration Standard Number. Nominal values from **1** through **30**. **0** indicates that a standard number has not been selected.

Return Type Not applicable

Default Not applicable

Examples `calkit.GetStandardsForClass naRef1_3_S11, std1, std2, std3, std4, std5, std6, std7`

C++ Syntax HRESULT GetStandardsForClass(NACalClassOrder calclassorder, long std1, long std2, long std3, long std4, long std5, long std6, long std7)

Interface ICalkKit

GetStepDescription Method

Description Returns the description of the specified step in the calibration process.

VB Syntax *value* = *obj*.**GetStepDescription** (*n*)

Variable [\(Type\)](#) - **Description**

value (string) - Variable to store the returned number of steps.

obj Any of the following:

[GuidedCalibration](#) (object)

[SMCType](#) (object)

[VMCType](#) (object)

n (Long) Step in the calibration process.

Use [GenerateSteps](#) to determine the total number of steps.

Return Type String

Default Not Applicable

Examples `value = SMC.GetStepDescription(5)`

[C++ Syntax](#) HRESULT get_GetStepDescription(long step, BSTR* str);

Interface IGuidedCalibration

SMCType

VMCType

GetSupportedALCModes Method

Description	Returns the valid ALC Modes for the PNA. See ALCLevelingMode for a list of supported ALC Modes.
VB Syntax	<i>value</i> = <i>chan</i> . GetSupportedALCModes (<i>sourcePort</i>)
Variable	(Type) - Description
<i>value</i>	Variant Array variable to store the returned valid ALC Modes.
<i>chan</i>	(object) - A Channel object
<i>sourcePort</i>	(long integer) - Source port. Use GetPortNumber to return the port number of a source that only has a string name, such as an External Source .
Return Type	Variant array
Default	Not Applicable
Examples	<pre>modes = chan.GetSupportedALCModes(4) 'Read</pre>
C++ Syntax	HRESULT get_GetSupportedALCModes(long port, VARIANT * ALCModes);
Interface	IChannel10

Last Modified:

30-Apr-2007 Edited for src strings

16-Jan-2007 MX New topic

GetTestResult Method

Description Returns the result of limit line testing. There are three ways to use this command:

- If neither optional parameter is specified, limit results for ALL data is returned.
- If one parameter is specified (*start*), the limit result for that data point is returned.
- If both parameters are specified, limit results are returned beginning with *start*, and ending with (*start+size*)-1

VB Syntax `testRes = limts.GetTestResult [start,size]`

Variable [\(Type\)](#) - **Description**

testRes **(enum NALimitTestResult)** - A dimensioned variable to store test results. If a limit line is not tested, a PASS is returned.

0 - naLimitTestResult_None

1 - naLimitTestResult_Fail

2 - naLimitTestResult_Pass

limts A LimitTest **(object)**

start **(long)** - Optional argument. A start data point number to return limit test results.

size **(long)** - Optional argument. Number of data points from *start* to return limit test results.

Return Type Long Integer

Default Not Applicable

Examples

```
Dim testRes As NALimitTestResult
testRes = limts.GetTestResult
Select Case testRes

Case 1
Print "Fails"

Case 2
Print "Pass"

End Select
```

C++ Syntax HRESULT GetTestResult(long IStart, long ISize, tagNALimitTestResult *pVal)

Interface ILimitTest

GetTraceStatistics Method

Description Returns all four Trace Statistics. To retrieve individual Trace statistics, use [Mean](#), [PeakToPeak](#), [StandardDeviation](#) properties. Use [ShowStatistics](#) to display the statistics of the screen.

VB Syntax *meas*.GetTraceStatistics *pp,mean,stdv*

Variable [\(Type\)](#) - Description

meas A Measurement (**object**)

pp,mean,stdv (**double**) - Dimensioned variables to store the returned values

Return Type Double

Default Not Applicable

Examples

```
'Dimension variables
Dim pp As Double
Dim mean As Double
Dim stdv As Double
meas.GetTraceStatistics pp, mean, stdv
```

C++ Syntax HRESULT GetTraceStatistics(double* pp, double* mean, double* stdDeviation)

Interface IMeasurement

GetXAxisValues2 Method

Description Returns the channel's X-axis values into a dimensioned Typed array. GetXAxisValues2 is a convenient method for determining the frequency of each point when the points are not linearly spaced - as in segment sweep.

Note: This method will fail if called using a scripting client such as VBScript or Agilent Vee, [\(see remarks\)](#)

Note: In Segment Sweep, chan.[NumberOfPoints](#) will return the total number of data points for the combined segments.

VB Syntax *chan*.GetXAxisValues2 *numPts*,*data*

Variable [\(Type\)](#) - Description

chan **(object)** - A Channel object

numPts **(long integer)** - Number of data points in the channel

data **(double)** Single dimensioned array of data matching the number of points in the channel.

Return Type double

Default Not applicable

Examples

```
Dim App As Application
Set App = New Application
Dim numPoints As Long
Dim values() As Double
numPoints = App.ActiveChannel.NumberOfPoints
ReDim values(numPoints)
App.ActiveChannel.GetXAxisValues2 numPoints, values(0)
Print values(0), values(1)
```

C++ Syntax HRESULT GetXAxisValues2(long* pNumValues, double* stimulus)

Interface IChannel

Remarks:

This method will fail if called using a scripting client such as VBScript or Agilent Vee. Use the [GetXAxisValues](#) method as a replacement for these COM environments.

This method also cannot be called using late-bound typing in Visual Basic. For instance, if, in the example above, the first line were replaced with "Dim App as Object", then this method would fail.

GetXAxisValues Method

Description Returns the stimulus values for the measurement. To understand how this property is useful, see [IMeasurement2 Interface](#).

VB Syntax *data* = *meas*.**GetXAxisValues**

Variable [\(Type\)](#) - [Description](#)

data **(Variant)** Array to store the data.

meas A Measurement **(object)**

Return Type Variant

Default Not Applicable

Examples

```
Dim varData As Variant
Dim i As Integer
varData = meas.GetXAxisValues
'Print Data
For i = 0 To meas.NumberOfPoints - 1
Print varData(i)
Next i
```

[See C++ example](#)

C++ Syntax HRESULT GetXAxisValues(VARIANT* xData);

Interface IMeasurement2

Last Modified:

15-Oct-2007 Added link to C++ example

GetXAxisValues Method

Description Returns the channel's X-axis values. GetXAxisValues is a convenient method for determining the frequency of each point when the points are not linearly spaced - as in segment sweep.

See the [Measurement2 Interface](#) to learn how this method differs from [meas.GetXAxisValues](#).

Note: This method returns a variant which is less efficient than [GetXAxisValues2](#).

Note: In Segment Sweep, chan.NumberOfPoints will return the total number of data points for the combined segments.

VB Syntax `data = chan.GetXAxisValues`

Variable [\(Type\)](#) - Description

`data` Variant array to store the data.

`chan` A Channel (**object**)

Return Type Variant

Default Not Applicable

Examples

```
Dim varData As Variant
Dim i As Integer
varData = chan.GetXAxisValues
'Print Data
For i = 0 To chan.NumberOfPoints - 1
    Print varData(i)
Next i
```

C++ Syntax HRESULT GetXAxisValues (VARIANT* xData)

Interface IChannel

HasCalType Method

Description Verifies that the Cal Set object contains the error terms required to perform the specified correction (CalType) to an appropriate measurement.

The argument list includes specifiers for up to 3 ports. The number of arguments required depends on the CalType specified. The value for each port is set to 0 if not specified.

VB Syntax *check* = *CalSet*.**HasCalType** (*calType*, *p1*, *p2*, *p3*)

Variable [\(Type\) - Description](#)

check **(boolean)** - variable to store the returned value

TRUE (1) - Cal Set has all of the error terms necessary to apply the specified correction CalType.

FALSE(0) - Cal Set DOES NOT have all of the error terms necessary to apply the specified CalType.

CalSet **(object)** - A Cal Set object

calType (enum as naCalType) - type of correction to be applied. Choose from:

Caltype	p arguments required
0 - naCalType_Response_Open	p1
1 - naCalType_Response_Short	p1
2 - *naCalType_Response_Thru	p1 (rcv), p2 (src)
3 - *naCalType_Response_Thru_And_Isol	p1 (rcv), p2 (src)
4 - naCalType_OnePort	p1
5 - naCalType_TwoPort_SOLT	p1, p2
6 - naCalType_TwoPort_TRL	p1, p2
8 - naCalType_ThreePort_SOLT	p1, p2, p3
10 - naCalType_FourPort_SOLT	p1, p2, p3 (port 4 is assumed)

* order of port arguments is significant for these CalTypes

p1 **(long)** - required. This argument must be specified.

This specifies either:

- the one significant port for an open/short response cal or a 1 port cal.
- or one of the ports involved in a 2, 3, or 4 port cal

- or the **receive** port for a thru response / thru-isolation cal.

p2 **(long)** - required for any CalType involving more than one port

This specifies either:

- one of the ports involved in a 2, 3, or 4 port cal (order independent)

- or the **source** port for a thru response / thru-isolation cal

p3 **(long)** - required for 3 and 4-port cal

This specifies one of the ports involved in a 3 or 4 port cal (order independent)

Return Type **VARIANT_BOOL**

Default Not Applicable

Examples `value = CalSet.HasCalType(naCalType_TwoPort_TRL, 1, 2)`

C++ Syntax HRESULT HasCalType(tagNACalType, long port1, long port2, long port3, BOOL *pVal);

Interface ICalSet

Last Modified:

7-Nov-2007 Removed enum 7 and 9

Hold Method

Description Puts the channel in Hold - not sweeping.
See [chans.Hold](#) to put ALL channels in hold.

VB Syntax `chan.Hold [sync]`

Variable [\(Type\)](#) - Description

chan A [Channel](#) (object)

[sync] **(boolean)** - Optional argument - channel object ONLY. A variable set to either True or False.

True - program control waits until the channel is in the Hold state.

False - program control continues immediately. You are not guaranteed the channel is in Hold yet.

Return Type Not Applicable

Default Not Applicable

Examples

```
wait = True
chan.Hold wait
```

C++ Syntax HRESULT Hold(VARIANT_BOOL bWait)

Interface IChannel

Hold (channels) Method

Description Places ALL channels in hold mode.

To resume all channels sweeping, use [chans.Resume](#). (Must be the same instance of chans).

To place a single channel in hold mode, use [channel.Hold](#) Method.

VB Syntax *chans.Hold*

Variable [\(Type\)](#) - Description

chans A [Channel collection](#) (object)

Return Type Not Applicable

Default Not Applicable

Examples `chans.Hold`

[C++ Syntax](#) HRESULT Hold();

Interface IChannels2

Initialize Method

Description	<p>Begins a calibration.</p> <p>Note: <i>chan</i> must be the active channel.</p>
VB Syntax	<i>obj.Initialize</i> (<i>chan</i> , <i>useCalStorPref</i>)
Variable	(Type) - Description
<i>obj</i>	Any of the following: GuidedCalibration (object) SMCType (object) VMCType (object)
<i>chan</i>	(Long) Channel number to calibrate.
<i>useCalStorPref</i>	<p>(boolean)</p> <p>True or 1 - Assignment of Cal Set will be based on the setting of the RemoteCalStoragePreference COM property.</p> <p>False or 0 – If the channel currently has a selected Cal Set, the calibration will be stored to that Cal Set. Otherwise, the assignment of Cal Set is based upon the setting of the RemoteCalStoragePreference COM property.</p>
Return Type	Not Applicable
Default	Not Applicable
Examples	<code>smc.Initialize(2,True)</code>
C++ Syntax	HRESULT put_Initialize(long channelnumber, VARIANT_BOOL bCalPref);
Interface	IGuidedCalibration SMCType VMCType

Item Method

Description Returns an object from the collection of objects.
Note: The order of objects within a collection cannot be assumed.

VB Syntax *Object* [.Item](*n*)

Variable [\(Type\)](#) - Description

Object Any of the following **(collections)**:

- [CalFactorSegments collection](#)
- [Cal Sets collection](#)
- [Channels collection](#)
- [E5091Testset collection](#)
- [ExternalTestsets collection](#)
- [FOM collection](#)
- [LimitTest collection](#)
- [Measurements collection](#)
- [NaWindows collection](#)
- [PowerLossSegments collection](#)
- [PowerSensors collection](#)
- [Segments collection](#)
- [Traces collection](#)
- [PowerMeterInterfaces Collection](#)

[Learn more about collections in the PNA](#)

.Item Optional - Item is the default property of a collections object and therefore can be called implicitly. For example, the following two commands are equivalent:

```
Channels.Item(3).Averaging = 1
Channels(3).Averaging = 1
```

n **(variant)** - number of the item in the collection.

Note: The Measurements, Traces, and FOM collections allow you to specify the name of the measurement as a string. For example:

```
measCollection("CH_S11_1").InterpolateMarkers
```

Return Type **(Object)**

Default Not Applicable

Examples `For i = 1 to Traces.Count -1
 Traces.Item(i).YScale = .5dB
Next i`

C++ Syntax HRESULT Item(VARIANT index, <interface>** pItem)

Interfaces All listed above.

LaunchCalWizard Method

Description Launches the Cal Wizard on the PNA and does not return until the Cal Wizard is dismissed.

Note: The Cal Wizard operates on the active measurement. Therefore, activate the measurement to be calibrated before launching the Cal Wizard.

VB Syntax *success* = *app*.LaunchCalWizard (*newCS*)

Variable [\(Type\)](#) - Description

success **(boolean)** - variable to store the returned value
True - The Cal was completed
False - The Cal was canceled without completing the calibration.

app An [Application](#) (object)

newCS **(boolean)**
True - Cal will be performed on a new Cal Set.
False - Cal will be performed using the existing Cal Set assigned to the channel. If no Cal Set is found, a new Cal Set will be created.

Return Type Boolean

Default Not Applicable

Example

```
dim bSuccess as boolean
dim bNewCalset as boolean
bNewCalSet = false
bSuccess = app.LaunchCalWizard( bNewCalSet)
```

C++ Syntax HRESULT LaunchCalWizard(VARIANT_BOOL bCalsuccess)

Interface IApplication

LaunchDialog Method

Description Launches the specified dialog box.

VB Syntax `app.LaunchDialog dialog, [data]`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

dialog **(String)** Dialog box to launch. Choose from:

"SourcePowerCal" [See this dialog.](#)

"PowerMeterSettings" [See this dialog.](#)

[data] (Optional argument) Reserved for future use.

Return Type Not Applicable

Default Not Applicable

Examples `app.LaunchDialog "SourcePowerCal"`

C++ Syntax `LaunchDialog(BSTR dialog, [defaultvalue(0)] VARIANT dialogData)`

Interface IApplication10

[See the PNA Object Model](#)

Last Modified:

1-Jun-2007 Added optional argument

16-Feb-2007 MX New topic

LaunchPowerMeterSettingsDialog Method

Description Launches the [Power Meter Settings dialog](#) on the PNA. Changing certain values from that dialog will change values of the corresponding properties on this COM object.

VB Syntax *pwrCal*.LaunchPowerMeterSettingsDialog

Variable [\(Type\)](#) - Description

pwrCal A SourcePowerCalibrator (**object**)

Return Type None

Default Not Applicable

Examples `powerCalibrator.LaunchPowerMeterSettingsDialog`

C++ Syntax HRESULT put_LaunchPowerMeterSettingsDialog();

Interface ISourcePowerCalibrator2

LoadConfiguration Method

Description	Loads the named configuration onto the specified channel. Use Configurations Method to return the configuration names that are stored on the PNA.
VB Syntax	<i>pathMgr.LoadConfiguration ch, name</i>
Variable	(Type) - Description
<i>pathMgr</i>	PathConfigurationManager (object)
<i>ch</i>	(Long) Channel number of the configuration to be saved.
<i>name</i>	(String) Configuration name. "Default" is the default factory configuration.
Return Type	Not Applicable
Default	Not Applicable
Examples	<code>path.LoadConfiguration 2, "myMixer"</code>
C++ Syntax	HRESULT LoadConfiguration (long channelNum, BSTR configName);
Interface	IPathConfigurationManager

Last Modified:

14-Dec-2006 MX New topic

LoadFile Method

Description Loads a previously-configured mixer attributes file (.mxr)

VB Syntax *mixer*.**LoadFile** (*filename*)

Variable [\(Type\)](#) - **Description**

mixer A [IMixer](#) Interface pointer to the [Meas](#) **(object)**

filename (String) Full path, file name, and .mxr extension of the mixer attributes file.
Files are typically stored in "C:\Program Files\Agilent\Network Analyzer\Documents".

Return Type String

Default Not Applicable

Examples `mixer.LoadFile ("C:\Program Files\Agilent\Network Analyzer\Documents\myMixer.mxr")`

C++ Syntax HRESULT put_LoadFile(BSTR newVal)

Interface IMixer

ManualTrigger Method

Description Triggers the analyzer when [TriggerSetup.Source](#) = naTriggerManual.

Note: An **SMC Fixed Output** measurement cannot be triggered using this command. For more information, see the [example program](#).

VB Syntax `app.ManualTrigger [sync],[timeout]`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

[sync] **(boolean)** - Optional argument.
A variable set to either True or False.

True - The analyzer waits until the trigger is completed to process subsequent commands.

False - Subsequent commands are processed immediately (the default setting).

timeout **(long)** - Optional argument.
If *sync* is true, *timeout* sets the amount of time the PNA will wait until continuing program execution. Units are milliseconds. A value of -1 (the default setting) causes the PNA to wait indefinitely.

If *sync* is False, the timeout setting is ignored.

Return Type Not Applicable

Default Not Applicable

Examples

```
' After Manual trigger is executed, the PNA will wait 1 second
to continue program execution
Dim wait as Boolean
wait = True
app.ManualTrigger wait, 1000
```

C++ Syntax HRESULT ManualTrigger(VARIANT_BOOL bSynchronize, long timeout)

Interface IApplication

Last Modified:

12-Jul-2007 [Modified link](#)

MessageText Property

Description Returns text for the specified eventID

VB Syntax *app.MessageText,eventID,message*

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

eventID (**enum naEventID**) Choose from the list in [Working with the Analyzer's Events](#)

message (**(string)**) - variable to store the returned message

Return Type String

Default Not Applicable

Examples `RFNA.MessageText naEventID_ARRANGE_WINDOW_EXCEED_CAPACITY,
message`

C++ Syntax HRESULT get_MessageText(tagNAEventID msgID, BSTR* message)

Interface IApplication

NextIFBandwidth Method

Description A function that returns the Next higher IF Bandwidth value. Use to retrieve the list of available IFBandwidth settings.

VB Syntax *chan*.Next_IFBandwidth *bw*

Variable [\(Type\)](#) - Description

chan A Channel (**object**)

bw (**double**) - The argument that you use to send an IFBandwidth. The function uses this argument to return the Next higher IFbandwidth.

Return Type Double

Default Not Applicable

Examples

```
Public pnbw As Double 'declare variable outside of procedure
pnbw = chan.IFBandwidth 'put the current IFBW in pnbw
chan.Next_IFBandwidth pnbw 'function returns the Next higher IFBandwidth.
chan.IFBandwidth = pnbw 'set IFBW to the Next value
```

C++ Syntax HRESULT Next_IFBandwidth (double *pVal)

Interface IChannel

NumberOfGroups Method

Description Sets the number of trigger signals the channel will receive. After the channel has received that number of trigger signals, the channel switches to Hold mode.

VB Syntax *chan*.**NumberOfGroups** *num*, *sync*

Variable [\(Type\)](#) - Description

chan A [Channel](#) (object)

num **(long integer)** Number of trigger signals the channel will receive. Choose any number between 1 and 2 million.

sync **(boolean)**

Variable set to either:

True - subsequent commands are not processed until the groups are complete. Do not use with manual trigger.

False - subsequent commands are processed immediately.

Return Type Not Applicable

Default Not Applicable

Examples `chan.NumberOfGroups 5,False`

C++ Syntax HRESULT NumberOfGroups(long count, VARIANT_BOOL bWait)

Interface IChannel

OpenCalSet Method **Superseded**

Description This command is no longer necessary. The CalSet.get... and put... commands that required this command have been replaced,

Open the Cal Set to read/write a particular **CalType**. Learn more about [reading and writing Cal Data using COM](#).

This method is a prerequisite to several other Cal Set methods.

A Cal Set can contain more than one CalType. This method opens the Cal Set and allows access to a particular set of terms. Subsequent commands like [getErrorTerm](#) use this information to access the correct error terms in the Cal Set. For example:

```
cset.OpenCalSet (naCalType_TwoPortSOLT,3,2)
cset.PutErrorTerm(naDirectivity, 1, 1, Buffer)
```

The directivity error term for port 1 could belong to any number of caltypes: Full1Port (S11), Full2Port (12), Full2Port (13) or Full3Port (123). The **CalType and port** specifiers in OpenCalSet directs the uploaded directivity term to the correct set of error terms.

To close the Cal Set, see [CloseCalSet](#).

VB Syntax *CalSet.OpenCalSet (CalType, p1, p2, p3)*

Variable [\(Type\) - Description](#)

CalSet **(object)** - A Cal Set object

CalType (enum as naCalType) - type of correction to be applied. Choose from:

Caltype	p arguments required
0 - naCalType_Response_Open	p1
1 - naCalType_Response_Short	p1
2 - *naCalType_Response_Thru	p1 (rcv), p2 (src)
3 - *naCalType_Response_Thru_And_Isol	p1 (rcv), p2 (src)
4 - naCalType_OnePort	p1
5 - naCalType_TwoPort_SOLT	p1, p2
6 - naCalType_TwoPort_TRL	p1, p2
7 - naCalType_None	N/A
8 - naCalType_ThreePort_SOLT	p1, p2, p3
9 - Custom	N/A

10 - naCalType_FourPort_SOLT p1, p2, p3
(port 4 is assumed)

* order of port arguments is significant for these CalTypes

p1 **(long)** - required. This argument must be specified.

This specifies either:

- the one significant port for an open/short response cal or a 1 port cal.
- or one of the ports involved in a 2 or 3 port cal
- or the **receive** port for a thru response / thru-isolation cal.

p2 **(long)** - required for any caltype involving more than one port

This specifies either:

- one of the ports involved in a 2 or 3 port cal (order independent)
- or the **source** port for a thru response / thru-isolation cal

p3 **(long)** - required only for 3 port cal

This specifies either:

- one of the ports involved in a 3 port cal (order independent)

Return Type None

Default Not Applicable

Examples `CalSet.OpenCalSet naCalType_ThreePort_SOLT, 3,2,1`

C++ Syntax HRESULT OpenCalSet (naCalType, port1, [optional] port2, [optional]
port3);

Interface ICalSet

Parse Method

Description Allows the use of COM to send a SCPI command. [See a C++ example](#) of how to return error information when using this command.

VB Syntax `scpi.Parse ("SCPI command")`

Variable [\(Type\)](#) - Description

scpi A [ScpiStringParser](#) (object)

SCPI command **(string)** - Any valid SCPI command

Return Type String

Default Not Applicable

Examples

```
Dim scpi As ScpiStringParser
Set scpi = app.ScpiStringParser
Dim startfreq As Double
startfreq = 100e6
'
scpi.Parse "Sens:Freq:Start " & startfreq'Write
```

```
Dim str As String
str = scpi.Parse ("Sens:Freq:Start?") 'Read
```

C++ Syntax HRESULT Parse(BSTR SCPI_Command, BSTR *pQueryResponse)

Interface IScpiStringParser

Last Modified:

1-Jan-2007 Corrected example

Preset Method

Description	<p>Application Object: Deletes all traces and windows. In addition, resets the analyzer to factory defined default settings and creates an S11 measurement named "CH1_S11_1" in window 1.</p> <p>Channel Object: Resets the channel (object) to factory defined default settings. Does NOT delete the current measurements or add a new measurement.</p>
VB Syntax	<i>app</i> .Preset <i>chan</i> .Preset
Variable	(Type) - Description
	<i>app</i> An Application (object)
	<i>chan</i> A Channel (object)
Return Type	Not Applicable
Default	Not Applicable
Examples	<code>app.Preset</code>
C++ Syntax	HRESULT Preset()
Interface	IApplication IChannel

PreviousIFBandwidth Method

Description A function that returns the previous IF Bandwidth value. Use to retrieve the list of available IFBandwidth settings.

VB Syntax *chan.Previous_IFBandwidth bw*

Variable [\(Type\)](#) - Description

chan A Channel (**object**)

bw (**double**) - The argument that you use to send an IFBandwidth. The function uses this argument to return the previous IFbandwidth.

Return Type Double

Default Not Applicable

Examples

```
Public pnbw As Double 'declare variable outside of procedure
PreBW = chan.IFBandwidth 'put the current IFBW in PreBW
chan.Previous_IFBandwidth PreBW 'function returns the Previous
IFBandwidth of the current one.
chan.IFBandwidth = PreBW 'set IFBW to the previous value
```

C++ Syntax HRESULT Previous_IFBandwidth (double *pVal)

Interface IChannel

PrintToFile Method

Description Saves the screen image to a bitmap file.

VB Syntax `app.PrintToFile filename`

Variable [\(Type\)](#) - **Description**

app An [Application](#) (object)

filename **(string)** Full path, file name, and extension of the screen image file.
Files are typically stored in "C:\Program Files\Agilent\Network Analyzer\Documents".
Use one of the following extensions:

- .bmp - not recommended due to large file size
- .jpg - not recommended due to poor quality
- **.png - recommended**

Return Type Not Applicable

Default Not Applicable

Examples `app.PrintToFile "C:\Program Files\Agilent\Network Analyzer\Documents\myfile.png"`

[C++ Syntax](#) HRESULT PrintToFile(BSTR bstrFile)

Interface IApplication

PutComplex Method

Description Puts real and imaginary data into the specified location. This method forces the channel into Hold mode to prevent the input data from being overwritten. Learn more about [reading and writing Cal Data using COM](#).

Data put in the raw data store will be **re-processed** whenever a change is made to the measurement attributes such as format or correction.

Data put in the measurement results store will be **overwritten** by any measurement attribute changes.

See also [putNAComplex](#)

VB Syntax *measData.putComplex location, numPts, real(), imag(), [format]*

Variable [\(Type\)](#) - **Description**

measData An IArrayTransfer interface which supports the Measurement object

location **(enum NADataStore)** Where the Data will be put. Choose from:

0 - naRawData

1 - naCorrectedData

2 - naMeasResult

3 - naRawMemory

4 - naMemoryResult

5 - naDivisor - When reading data from, or writing data to, the normalization divisor, you must first create a divisor trace using [DataToDivisor Method](#).

numPts **(long integer)** - Number of data points in the channel

real() **(single)** - Array containing real data values

imag() **(single)** - Array containing imaginary data values

format **(enum NADataFormat)** optional argument - display format of the real and imaginary data. Only used if destination is naMeasResult or naMemoryResult buffer. If unspecified, data is assumed to be in naDataFormat_Polar

0 - naDataFormat_LinMag

1 - naDataFormat_LogMag

2 - naDataFormat_Phase

3 - naDataFormat_Polar

4 - naDataFormat_Smith

5 - naDataFormat_Delay

6 - naDataFormat_Real

7 - naDataFormat_Imaginary
8 - naDataFormat_SWR
9 - naDataFormat_PhaseUnwrapped
10 - naDataFormat_InverseSmith

[Learn more about Data Format.](#)

Return Type Not Applicable

Default Not Applicable

Examples

```
Dim measData As IArrayTransfer
Set measData = app.ActiveMeasurement

measData.putComplex naMemoryResult, 201,
real(0),imag(0),naDataFormat_SWR
```

C++ Syntax HRESULT putComplex(tagNADataStore DataStore, long lNumValues, float* pReal, float* plmag, tagDataFormat displayFormat)

Interface IArrayTransfer

PutDataComplex Method

Description Puts complex data into the specified location. This method forces the channel into Hold mode to prevent the input data from being overwritten.

VB Syntax *meas.putDataComplex location, data*

Variable [\(Type\)](#) - Description

meas A measurement (**object**)

location (**enum NADataStore**) Where the Data will be put. Choose from:

0 - naRawData

1 - naCorrectedData

2 - naMeasResult

3 - naRawMemory

4 - naMemoryResult

5 - naDivisor - When reading data from, or writing data to, the normalization divisor, you must first create a divisor trace using [DataToDivisor Method](#).

- Data put in 0 - naRawData will be re-processed whenever a change is made to the measurement attributes such as format or correction.
- Data put in 2 - naMeasResult will be overwritten by any measurement attribute changes.
- When putting data into 3 - naRawMemory:
 1. Put the analyzer in hold mode
 2. Call [DataToMemory](#) to initialize a memory buffer
 3. Call putDataComplex(naRawMemory, data)

This ensures that the memory buffer is appropriately initialized before receiving new data.

data (**variant**) - A **two-dimensional** variant array.

Note: All buffers except naMeasResult and naMemoryResult require Complex data

Return Type Not Applicable

Default Not Applicable

Examples

```
' Put 201 points worth of raw (complex) data into the
measurement
' Note that an array of complex numbers is represented by a 2-D
```

array where the first rank is the number of points, and the 2nd rank is always size 2 (max index 1) representing the Real and Imag parts of the complex number.

```
' complex array of data (2nd dimension of size 2 represents  
Re/Im  
Dim data(200,1) )  
For i = 0 to 200  
  ' Set Real part of data point i  
  data(i,0) = i/200;  
  ' Set Imag part of data point i  
  data(i,1) = i/200;  
Next  
app.ActiveMeasurement.putDataComplex naRawData, data
```

C++ Syntax HRESULT putDataComplex(tagNADataStore DataStore, VARIANT complexData)

Interface IMeasurement

PutErrorTerm Method - Superseded

Description **Note:** This command is replaced by [PutErrorTermByString](#)

Puts variant error term data into the error-correction buffer.

[Learn about reading and writing Calibration data.](#)

VB Syntax `cal.putErrorTerm(term,rcv, src, data)`

Variable [\(Type\)](#) - Description

cal A Calibrator **(object)**

term **(enum As NaErrorTerm)**
 naErrorTerm_Directivity_Isolation
 naErrorTerm_Match
 naErrorTerm_Tracking

rcv **(long integer)** - Receiver Port

src **(long integer)** - Source Port

data **(variant)** Error term data in a two-dimensional array (0:1, 0:numpts-1).

To get this	Specify these parameters:		
Error Term	<i>term</i>	<i>rcv</i>	<i>src</i>
Fwd Directivity	naET_Directivity Isolation	1	1
Rev Directivity	naET_Directivity Isolation	2	2
Fwd Isolation	naET_Directivity Isolation	2	1
Rev Isolation	naET_Directivity Isolation	1	2
Fwd Source Match	naErrorTerm_Match	1	1
Rev Source Match	naErrorTerm_Match	2	2
Fwd Load Match	naErrorTerm_Match	2	1
Rev Load Match	naErrorTerm_Match	1	2
Fwd Reflection Tracking	naErrorTerm_Tracking	1	1
Rev Reflection Tracking	naErrorTerm_Tracking	2	2
Fwd Trans Tracking	naErrorTerm_Tracking	2	1
Rev Trans Tracking	naErrorTerm_Tracking	1	2

Fwd Trans Tracking	naErrorTerm_Tracking	2	1
Return Type	Not Applicable		
Default	Not Applicable		
Examples	<pre>Dim varError As Variant varError = cal.putErrorTerm (naErrorTerm_Tracking,2,1,VarData)</pre>		
<u>C++ Syntax</u>	HRESULT putErrorTerm(tagNAErrorTerm ETerm, long ReceivePort, long SourcePort, VARIANT varData)		
Interface	ICalibrator		

PutErrorTerm Method **Superseded**

Description This command is [replaced](#) with [PutErrorTermByString](#)

Puts error term data into the Cal Set.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data

VB Syntax *CalSet.putErrorTerm (term, rcv, src, data)*

Variable [\(Type\)](#) - Description

CalSet **(Object)** A [CalSet](#) Object

term **(enum As NaErrorTerm2)** Error Term. Choose from:

0 - naET_Directivity (src = rcv)

1 - naET_SourceMatch (src = rcv)

2 - naET_ReflectionTracking (src = rcv)

3 - naET_TransmissionTracking (src ≠ rcv)

4 - naET_LoadMatch (src ≠ rcv)

5 - naET_Isolation (src ≠ rcv)

rcv **(long integer)** - Receiver Port

src **(long integer)** - Source Port

data **(variant)** Error term data in a two-dimensional array (0:1, 0:numpts-1). The data must be complex pairs.

Note: See also [PutErrorTermComplex](#) on the ICalData2 interface to avoid using the variant data type.

Return Type Not Applicable

Default Not Applicable

Examples [See an Example](#)

C++ Syntax HRESULT putErrorTerm(tagNAErrorTerm2 ETerm, long ReceivePort, long SourcePort, VARIANT varData)

Interface ICalSet

PutErrorTermByString

Description Puts error term data into the Cal Set.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data

VB Syntax `calSet.PutErrorTermByString(errorName, vdata)`

Variable [\(Type\)](#) - Description

calSet **(Object)** A [CalSet](#) Object

errorName **(String)** The string name used to identify a particular error term in the Cal Set. An example string for port 3 directivity in a full 2 port cal might be "Directivity(3,3)". To determine the string names of error terms, see [GetErrorTermList2](#).

vdata **(Variant)** This data array is usually two dimensional. Each element is a type single. The two elements represent the real and imaginary parts of a complex pair.

Note: This structure is compatible with scripting clients who can only use variants. For alternative methods that use typed arrays, see [ICalData3](#).

Return Type Not Applicable

Default Not Applicable

Examples [See an Example](#)

C++ Syntax `HRESULT PutStandardByString(BSTR bufferName, VARIANT vardata)`

Interface ICalSet2

PutErrorTermComplex Method **Superseded**

Description	Note: This command is replaced by PutErrorTermComplexByString Puts error term data into the error-correction data buffer. Learn more about reading and writing Cal data using COM
VB Syntax	<code>data.putErrorTermComplex term, rcv, src, numPts, real(), imag()</code>
Variable	(Type) - Description
<i>data</i>	An ICalData pointer to the Calibrator object
<i>term</i>	(enum NAErrorTerm) - The error term to be retrieved. Choose from: <ul style="list-style-type: none"> • naErrorTerm_Directivity_Isolation • naErrorTerm_Match • naErrorTerm_Tracking
<i>rcv</i>	(long integer) - Receiver Port
<i>src</i>	(long integer) - Source Port
<i>numPts</i>	(long integer) - number of data points in the array
<i>real()</i>	(single) - array containing the real part of the calibration data. One-dimensional: the number of data points.
<i>imag()</i>	(single) - array containing the imaginary part of the calibration data. One-dimensional: the number of data points.

To get this	Specify these parameters:		
Error Term	<i>term</i>	<i>rcv</i>	<i>src</i>
Fwd Directivity	naET_Directivity Isolation	1	1
Rev Directivity	naET_Directivity Isolation	2	2
Fwd Isolation	naET_Directivity Isolation	2	1
Rev Isolation	naET_Directivity Isolation	1	2
Fwd Source Match	naErrorTerm_Match	1	1
Rev Source Match	naErrorTerm_Match	2	2
Fwd Load Match	naErrorTerm_Match	2	1
Rev Load Match	naErrorTerm_Match	1	2

Fwd Reflection Tracking	naErrorTerm_Tracking	1	1
Rev Reflection Tracking	naErrorTerm_Tracking	2	2
Fwd Trans Tracking	naErrorTerm_Tracking	2	1
Rev Trans Tracking	naErrorTerm_Tracking	1	2
Fwd Trans Tracking	naErrorTerm_Tracking	2	1

Return Type Not Applicable

Default Not Applicable

Examples

```
Dim eData As ICalData
Set eData = chan.Calibrator
eData.putErrorTermComplex naErrorTerm_Directivity_Isolation, 1,
1, 201, rel(0), img(0)
```

C++ Syntax HRESULT putErrorTermComplex(tagNAErrorTerm ETerm, long ReceivePort, long SourcePort, long* pNumValues, float* pReal, float* plmag)

Interface ICalData

PutErrorTermComplex Method **Superseded**

Description This command is [replaced](#) with [PutErrorTermComplexByString](#)

Puts error term data into the Cal Set.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data

VB Syntax `data.putErrorTermComplex term, rcv, src, numPts, real(), imag()`

Variable [\(Type\)](#) - Description

data An [ICalData2](#) pointer to a Cal Set object

term **(enum NAEErrorTerm2)** - The error term to be written. Choose from:

0 - naET_Directivity

1 - naET_SourceMatch

2 - naET_ReflectionTracking

3 - naET_TransmissionTracking

4 - naET_LoadMatch

5 - naET_Isolation

rcv **(long)** - Receiver Port

src **(long)** - Source Port

numPts **(long)** - number of data points in the real and imaginary arrays.

real() **(single)** - array containing the **real** part of the calibration data. One-dimensional: the number of data points.

imag() **(single)** - array containing the **imaginary** part of the calibration data. One-dimensional: the number of data points.

Return Type Not Applicable

Default Not Applicable

Examples

```
Dim eData As ICalData2
Set eData = app.GetCalManager.Cal Sets.Item(1)
eData.putErrorTermComplex naET_LoadMatch, 1, 2, numpts, rel(0),
img(0)
```

C++ Syntax HRESULT putErrorTermComplex(tagNAErrorTerm2 ETerm, long ReceivePort, long SourcePort, long* pNumValues, float* pReal, float* plmag)

Interface ICalData2

PutErrorTermComplexByString Method

Description Puts error term data into the Cal Set.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data

VB Syntax `ICalData3.PutErrorTermComplexByString errorName, InumPoints, real(0), imag(0)`

Variable [\(Type\)](#) - Description

ICalData3 An [ICalData3](#) pointer to a Cal Set object.

errorName **(String)** The string name used to identify a particular error term in the Cal Set. An example string for port 3 directivity in a full 2 port cal might be "Directivity(3,3)". To determine the string names of error terms, see [GetErrorTermList2](#).

InumPoints **(Long)** The number of data points in the real and imaginary arrays.

real **(Single)** The real component of the complex data.

imag **(Single)** The imaginary component of the complex data.

Note: The size of the real and imaginary arrays should be the same.

Return Value Not Applicable

Default Not Applicable

Examples [See example](#)

C++ Syntax `HRESULT PutErrorTermComplexByString(BSTR bufferName, long InumPoints, float* real, float* imag);`

Interface ICalData3

PutScalar Method

Description Puts Scalar data in the Measurement Result buffer. The putScalar array is not processed by the analyzer; it is just displayed. Any change to the measurement state (changing the format, for example) will cause the putScalar data to be overwritten with the data processed from the raw data buffer.

VB Syntax *measData.putScalar, format, numPts, data*

Variable [\(Type\) - Description](#)

measData An IArrayTransfer interface which supports the Measurement object.

format **(enum NADataFormat)** Format of the data. Choose from:

- 0 - naDataFormat_LinMag
- 1 - naDataFormat_LogMag
- 2 - naDataFormat_Phase
- 5 - naDataFormat_Delay
- 6 - naDataFormat_Real
- 7 - naDataFormat_Imaginary
- 8 - naDataFormat_SWR
- 9 - naDataFormat_PhaseUnwrapped

[Learn more about Data Format.](#)

Note: Smith, InverseSmith, and Polar formats are not allowed.

numPts **(integer)** - Number of values. Usually the number of points in the trace (chan.NumberOfPoints).

data **(single)** - A one-dimensional array of Scalar data matching the number of points in the current measurement.

Return Type Not Applicable

Default Not Applicable

Examples

```
Dim measData As IArrayTransfer
Set measData = app.ActiveMeasurement

measData.putScalar naDataFormat_LogMag, 201, dScalar(0)
```

C++ Syntax HRESULT putScalar\(\tagDataFormat eFormat, long INumValues, float* pArrayOfScalar)

Interface IArrayTransfer

PutNAComplex Method

Description Puts complex data into the specified location. This method forces the channel into Hold mode to prevent the input data from being overwritten. The data is processed and displayed.

Data put in the naRawData store will be **re-processed** whenever a change is made to the measurement attributes such as format or correction.

Data put in the naMeasResult store will be **overwritten** by any measurement attribute changes (such as moving a marker).

Note: This method uses NAComplex which is a user-defined data type. If you cannot or prefer not to use this data type, use the [putComplex](#) method.

VB Syntax `measData.putNAComplex location, numPts, data, [format]`

Variable [\(Type\)](#) - **Description**

measData An IArrayTransfer interface which supports the Measurement object

location **(enum NADataStore)** Where the Data will be put. Choose from:

- 0 - naRawData
- 1 - naCorrectedData
- 2 - naMeasResult
- 3 - naRawMemory
- 4 - naMemoryResult
- 5 - naDivisor - When reading data from, or writing data to, the normalization divisor, you must first create a divisor trace using [DataToDivisor Method](#).

numPts **(long integer)** - Number of data points in the channel

data **(NAComplex)** - A one-dimensional array of Complex data matching the number of points in the current measurement.

format **(enum NADataFormat)** - Optional argument. Format of the data. If unspecified, naDataFormat_Polar is assumed. Only used when the destination store is naMeasResult or naMemoryResult.

- 0 - naDataFormat_LinMag
- 1 - naDataFormat_LogMag
- 2 - naDataFormat_Phase
- 3 - naDataFormat_Polar
- 4 - naDataFormat_Smith
- 5 - naDataFormat_Delay
- 6 - naDataFormat_Real

7 - naDataFormat_Imaginary
8 - naDataFormat_SWR
9 - naDataFormat_PhaseUnwrapped
10 - naDataFormat_InverseSmith

[Learn more about Data Format.](#)

Return Type Not Applicable

Default Not Applicable

Examples

```
Dim measData As IArrayTransfer
Set measData = app.ActiveMeasurement

measData.putNAComplex naMemoryResult, 201, dRawComplex(0)
```

C++ Syntax HRESULT putNAComplex(tagNADataStore DataStore, long INumValues, TsComplex* pArrayOfComplex, tagDataFormat displayFormat)

Interface IArrayTransfer

put_Output Method

Description Writes a TTL HI or TTL Low to output pins 3 or 4 of the Material Handler IO connector.

Each pin also has a latched output which is written to with USER. With the latched (USER) outputs, the value is not applied to the associated pin until a positive edge is detected at INPUT1 (pin 2).

VB Syntax *handlerIo.put_Output (pin) = value*

Variable [\(Type\)](#) - Description

handlerIo **(object)** - A HandlerIO object

pin **(enum as NAMatHandlerOutput)** - pin to write data to. Choose from:

naOutput1 - (0) - pin3

naOutput1User (1) - pin3 latched (applied to pin 3 on positive edge of Input1-pin2)

naOutput2 (2) - pin4

naOutput2User (3) - pin4 latched (applied to pin 4 on positive edge of Input1-pin2)

value **(Variant)** Value to write to the selected pin. Choose from

0 - TTL LOW

1 - TTL HIGH

Return Type Not Applicable

Default 0

Examples `handlerIo.put_Output(naOutput1)= 1`

C++ Syntax HRESULT put_Output (tagNAMatHandlerOutput Output, VARIANT Data);

Interface IHWMaterialHandlerIO

put_OutputVoltage Method

Description **E836x and PNA-L:** Sets voltages on the DAC/Analog Output 1|2 of the Auxiliary IO connector.

PNA-X: Sets voltage on the [Power I/O connector](#) AnalogOut1|2.

Read output voltages using [get OutputVoltage Method](#).

VB Syntax *AuxIO.put_OutputVoltage output, voltage*

Variable [\(Type\)](#) - Description

AuxIO **(object)** - A Hardware Auxiliary Input / Output object

output **(variant)** Number of the output DAC to write voltage to. Choose from:

1 Output 1 (Aux I/O pin 3) and (Power I/O pin 3)

2 Output 2 (Aux I/O pin 2) and (Power I/O pin 4)

voltage **(double)** Voltage to write to the output DAC. Choose a voltage from -10 to 10

Return Type None

Default None

Examples `HWAuxIO.put_OutputVoltage 1,9 'set Analog Out1 to +9v`

C++ Syntax HRESULT put_OutputVoltage (VARIANT Output, double Voltage);

Interface IHWAuxIO

Last Modified:

10-Jul-2007 Added PNA-X capability

put_OutputVoltageMode Method

Description This command sets the mode of the selected "Analog Out" line on the [Auxiliary IO connector](#) and [Power I/O connector](#). The modes give the user the option to have the requested voltage applied immediately or not until the sweep is done. To read the mode on each output use [get_OutputVoltageMode Method](#).

VB Syntax `auxIo.put_OutputVoltageMode (output, mode)`

Variable [\(Type\)](#) - Description

auxIo **(Object)** An AuxIO object

output Analog Output to receive mode setting. Choose from **1** or **2**

mode **(enum NAOOutputVoltageMode)**

naWaitEOS - While in this mode any voltage changes sent to the selected analog out will only get applied to the output between sweeps.

naNoWait - While in this mode any voltage changes sent to the selected analog out will occur right away without waiting until the end of a sweep, the voltage gets applied immediately.

Return Type NAOOutputVoltageMode

Default naWaitEOS

Examples `auxIo.put_OutputVoltageMode 1, naWaitEOS` **'Write**

C++ Syntax HRESULT put_OutputVoltageMode(VARIANT Output, tagNAOutputVoltageMode dNewMode);

Interface IHWAuxIO

Last Modified:

10-Jul-2007 Added PNA-X capability

put Port Method

Description Writes a value to the specified port. Use the [get_Port](#) Method to read the settings from the "readable" ports (C, D, E).

VB Syntax *handlerIo.put_Port (port) = value*

Variable [\(Type\) - Description](#)

handlerIo **(object)** - A HandlerIO object

port **(enum as NAmatHandlerPort)** - port to put data into. Choose from:

naPortA - (0)

naPortB - (1)

naPortC - (2)

naPortD - (3)

naPortE - (4)

naPortF - (5)

naPortG - (6)

naPortH - (7)

value The number of the data bits to set. The following table shows what the *value* represents:

Note: When writing to port G, port C must be set to output mode

When writing to port H, both port C and port D must be set to output mode. Use Port Mode Property

Port	Max allowable <num>	MSB.....LSB 23.....0	
A	255	A7...A0	Write-only
B	255	B7...B0	Write-only
C	15	C3...C0	Read-Write
D	15	D3...D0	Read-Write
E	255	D3...D0 + C3...C0	Read-Write
F	65535	B7...B0 + A7...A0	Write-only

G	1048575	C3...C0 + B7...B0 + A7...A0	Write-only
H	16777215	D3...D0 + C3...C0 + B7...B0 + A7...A0	Write-only

Return Type Not Applicable

Default Not Applicable

Examples `handlerIo.put Port(naPortB)= 15`

C++ Syntax HRESULT put_Port (tagNAMatHandlerPort Port, VARIANT Data);

Interface IHWMaterialHandlerIO

put_PortCData Method

Description Writes a 4-bit value to Port C on the Aux I/O connector (pins 22-25) and the Material Handler IO (pins 21-24 Anritsu) - (pins 22-25 Avantest).

Note: These lines are connected to both the Handler IO and Aux IO in the PNA. Therefore, this command will affect both of these connectors in the same way.

VB Syntax *AuxIO.put_PortCData num*

Variable [\(Type\)](#) - Description

AuxIO **(object)** - A Hardware Auxiliary Input / Output object

num **(variant)** - 4 bit binary value. Choose from 0-15

Return Type None

Default None

Examples `HWAuxIO.put_PortCData 15 'If Positive Logic, Port C lines C0, C1, C2, C3 go High. If Negative Logic, they go Low.`

C++ Syntax HRESULT put_PortCData(VARIANT Data);

Interface IHWAuxIO

PutDataScalar Method

Description Puts formatted variant scalar data into the measurement result buffer. The data will be immediately processed and displayed. Subsequent changes to the measurement state will be reflected on the display.

Always precede this command by setting the format on the measurement to be consistent with the format of the data being sent to the analyzer. In this way, the display annotation will be correct.

Execution of this command does not change the display format.

VB Syntax *meas.putDataScalar format, data*

Variable [\(Type\) - Description](#)

meas A measurement (**object**)

format (**enum NADDataFormat**) Format of the data. **This value is presently ignored by the PNA.** Data is always presented in the current format.

Choose from:

0 - naDataFormat_LinMag

1 - naDataFormat_LogMag

2 - naDataFormat_Phase

3 - naDataFormat_Polar

4 - naDataFormat_Smith

5 - naDataFormat_Delay

6 - naDataFormat_Real

7 - naDataFormat_Imaginary

8 - naDataFormat_SWR

Notes:

- The [getData](#) (variant) method includes a "format" argument, which allows scalar (one-dimensional) data. To put data back into the "raw" data buffer using this (putDataComplex) method, specify **Polar** format when using the getData method.
- **Phase** format accepts data in radians (not degrees) and displays in degrees. To convert to degrees: radians * (57.29577951308233) = degrees. The getData method returns degrees if the request is for phase data.

data (**variant**) - A 1-dimension array of single precision floating point numbers.

Return Type Not Applicable

Default Not Applicable

Examples

```
' Put 201 points worth of scalar data into the measurement
' 200 is max index, so 0 to 200 is 201 points
Dim data(200) ' array of 201 (scalar) data points
' Fill the array
For i = 0 to 200
data(i) = i/200;
Next
app.ActiveMeasurement.putDataScalar 0, data
```

C++ Syntax HRESULT putDataScalar(tagNADataStore DataStore, VARIANT scalarArray)

Interface IMeasurement

PutShortcut Method

Description Defines a Macro (shortcut) file in the analyzer. This command links a file name and path to the Macro file. The file must be put in the PNA at the location indicated by this command.

VB Syntax *app.PutShortcut index,title,path*

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

index **(long)** - Number of the macro to be stored in the analyzer. If the index number already exists, the existing macro is replaced with the new macro.

title **(string)** - The name to be assigned to the macro

path **(string)** - Full path, file name, and extension of the existing macro "executable" file.

Return Type Not Applicable

Default Not Applicable

Examples `app.PutShortcut 1,"Test","C:\Automation\MyTest.vbs"`

C++ Syntax HRESULT PutShortcut(long Number, BSTR title, BSTR pathname)

Interface IApplication

putSourcePowerCalDataEx Method

Description	<p>Note: This method replaces putSourcePowerCalData Method</p> <p>Inputs source power calibration data (as variant data type) to this channel for a specific source port.</p> <p>If the channel is sweeping the source backwards, then the first data point is the highest frequency value; the last data point is the lowest. Use the Get X-Axis Values command to return the X-axis values in the displayed order.</p> <p>The calibration is not valid if the current number of points on the channel is not equal to the number of values that were input.</p> <p>Note: This method sends variant data which is less efficient than methods available on the ISourcePowerCalData interface.</p>
VB Syntax	<i>chan.putSourcePowerCalDataEx buffer, sourcePort, data</i>
Variable	(Type) - Description
<i>chan</i>	(object) – A Channel object
<i>buffer</i>	(enum NASourcePowerCalBuffer) - The source power cal data buffer to write to. 0 - naCorrectionValues This is the only data buffer currently available.
<i>sourcePort</i>	(long integer) – The source port for which calibration data is being requested. Use GetPortNumber to return the port number of a source that only has a string name, such as an External Source.
<i>data</i>	(variant) – Array of source power cal data being input.
Return Type	None
Default	Not Applicable
Examples	<code>chan.putSourcePowerCalDataEx naCorrectionValues, 1, varData</code>
C++ Syntax	HRESULT putSourcePowerCalDataEx(tagNASourcePowerCalBuffer bufSelect, long sourcePort, VARIANT varData);
Interface	IChannel4

Last Modified:

27-Jun-2007 Updated for PNA-X source port names

putSourcePowerCalDataScalarEx Method

Description	<p>Note: This method replaces putSourcePowerCalDataScalar Method</p> <p>Inputs source power calibration data (as scalar values) to this channel for a specific source port.</p> <p>If the channel is sweeping the source backwards, then the first data point is the highest frequency value; the last data point is the lowest. Use the Get X-Axis Values2 command to return the X-axis values in the displayed order.</p>
VB Syntax	<i>chanData.putSourcePowerCalDataScalarEx buffer, sourcePort, numValues, data</i>
Variable	(Type) - Description
<i>chanData</i>	(interface) – An ISourcePowerCalData2 interface on the Channel (object)
<i>buffer</i>	(enum NASourcePowerCalBuffer) - The source power cal data buffer to write to. 0 - naCorrectionValues This is the only buffer currently available.
<i>sourcePort</i>	(long integer) – The source port for which calibration data is being input. Use GetPortNumber to return the port number of a source that only has a string name, such as an External Source.
<i>numValues</i>	(long integer) – Number of data values being input. Note: If this does not equal the current number of points on the channel, the calibration will not be valid.
<i>data</i>	(single) – Array of source power cal data being input.
Return Type	None
Default	Not Applicable
Examples	<pre>Dim chanData As ISourcePowerCalData2 Set chanData = app.ActiveChannel chanData.putSourcePowerCalDataScalarEx naCorrectionValues, 1, 201, scalarCalValues(0)</pre>
C++ Syntax	HRESULT putSourcePowerCalDataScalarEx(tagNASourcePowerCalBuffer bufSelect, long sourcePort, long numValues, float *pData);
Interface	ISourcePowerCalData2

PutStandard Method **Superseded**

Description This command is [replaced](#) with [PutStandardByString](#)

Puts standard acquisition data into the Cal Set.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data.

VB Syntax *CalSet.putStandard class, rcv, src, data*

Variable [\(Type\)](#) - Description

CalSet **(object)** - A [Cal Set](#) object

class **(enum NACalClass)** Standard. Choose from:

- 1 - naClassA
- 2 - naClassB
- 3 - naClassC
- 4 - naClassD
- 5 - naClassE
- 6 - naReferenceRatioLine
- 7 - naReferenceRatioThru

SOLT Standards

- 1 - naSOLT_Open
- 2 - naSOLT_Short
- 3 - naSOLT_Load
- 4 - naSOLT_Thru
- 5 - naSOLT_Isolation

TRL Standards

- 1 - naTRL_Reflection
- 2 - naTRL_Line_Reflection
- 3 - naTRL_Line_Tracking
- 4 - naTRL_Thru
- 5 - naTRL_Isolation

rcv **(long)** - Receiver Port

src **(long)** - Source Port

data **(variant)** Error term data in a two-dimensional array (0:1, 0:numpts-1). The data must be complex pairs.

Note: See also [Put Standard Complex](#) on the ICalData2 interface to avoid using the variant data type.

Return Type Not Applicable

Default Not Applicable

Examples [See an Example](#)

[C++ Syntax](#) HRESULT putStandard(tagNACalClass stdclass, long ReceivePort, long SourcePort, VARIANT varData)

Interface ICalSet

PutStandardByString

Description Puts standard acquisition data into the Cal Set.
Learn more about [Reading and Writing Cal Data](#)
See examples of [Reading](#) and [Writing](#) Cal Set Data.

VB Syntax **PutStandardByString**(*stdName*, *vdata*)

Variable [\(Type\)](#) - **Description**

stdName **(String)** The string used to identify a particular standard in the Cal Set. An example string requesting the data for the Load standard in a full 2 port cal might be "S11C(3,3)".

vdata **(Variant)** The variant containing a safearray of variants. This data is usually two dimensional.

Note: The vardata array is a safearray of variants wrapped in a variant. This structure is compatible with scripting clients who can only use variants. For alternative methods that used typed arrays, see ICalData3.

Return Type Not Applicable

Default Not Applicable

Examples [See an Example](#)

C++ Syntax HRESULT PutStandardByString(BSTR bufferName, VARIANT vardata);

Interface ICalSet2

PutStandardComplex Method **Superseded**

Description This command is replaced with [PutStandardComplexByString](#)

Puts standards acquisition data into the Cal Set.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data

VB Syntax *ICalData2.putStandardComplex class, rcv, src, numPts,real(),imag()*

Variable [\(Type\)](#) - **Description**

ICalData2 An [ICalData2](#) pointer to the Cal Set object

class **(enum NACalClass)** Standard. Choose from:

1 - naClassA

2 - naClassB

3 - naClassC

4 - naClassD

5 - naClassE

6 - naReferenceRatioLine

7 - naReferenceRatioThru

SOLT Standards

1 - naSOLT_Open

2 - naSOLT_Short

3 - naSOLT_Load

4 - naSOLT_Thru

5 - naSOLT_Isolation

TRL Standards

1 - naTRL_Reflection

2 - naTRL_Line_Reflection

3 - naTRL_Line_Tracking

4 - naTRL_Thru

5 - naTRL_Isolation

<i>rcv</i>	(long) - Receiver Port
<i>src</i>	(long) - Source Port
<i>numPts</i>	(long) - The number of data points in the real and imaginary arrays.
<i>real()</i>	(single) - one-dimensional array containing the real part of the acquisition data. (0:points-1)
<i>imag()</i>	(single) - one-dimensional array containing the imaginary part of the acquisition data. (0:points-1)
Return Type	Not Applicable
Default	Not Applicable
Examples	<pre>Dim sdata As ICalData2 Set sdata = calmanager.CreateCal Set(1) sdata.putStandardComplex naSOLT_Open, 1, 1, numpts, rel(0), img(0)</pre>
<u>C++ Syntax</u>	HRESULT putStandardComplex(tagNACalClass stdclass, long ReceivePort, long SourcePort, long INumValues, float* pReal, float* plmag)
Interface	ICalData2

PutStandardComplexByString

Description Puts standard acquisition data into the Cal Set.

Learn more about [Reading and Writing Cal Data](#)

See examples of [Reading](#) and [Writing](#) Cal Set Data.

VB Syntax *ICalData3.PutStandardComplexByString(stdName, InumPoints , real(o) , imag(0))*

Variable [\(Type\)](#) - Description

ICalData3 An [ICalData3](#) pointer to a Cal Set object.

stdName **(String)** The string used to identify a particular standard in the Cal Set. An example string requesting the data for the Load standard in a full 2 port cal might be "S11C(3,3)".

Inumpoints **(long)** - The number of data points in the real and imaginary arrays.

real **(Single)** The real component of the complex data.

imag **(Single)** The imaginary component of the complex data.

Return Value Single

Default Not Applicable

Examples [See an Example](#)

C++ Syntax HRESULT PutStandardComplexByString(BSTR bufferName, long InumPoints, float* real, float* imag);

Interface ICalData3

Quit Method

Description Terminates the Network Analyzer application.

VB Syntax `app.Quit`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

Return Type Not Applicable

Default Not Applicable

Examples `app.Quit`

C++ Syntax HRESULT Quit()

Interface IApplication

Remarks Under the rules of COM, the server should not exit until all references to it have been released. This method is a brute force way of terminating the application. Be sure to release all references (or terminate the client program) before attempting to restart the Network Analyzer application.

An alternate approach to terminating the application is to make the application invisible (`app.Visible = False`) and release all references. The server will shutdown.

ReadData Method

Description Reads a 13-bit data word from the specified address. Data is read using the AD0 through AD12 lines of the external test set connector. The instrument generates the appropriate timing signals. It automatically controls timing signals LDS, LAS and RLW to strobe the address, and then read the data, from the external test set. See the [timing diagram](#) for Address and Data I/O read.

VB Syntax *value* = **ExtIO.ReadData** (*address*)

Variable [\(Type\)](#) - **Description**

value **(variant)** - Variable to store the returned data

ExtIO **(object)** - An ExternalTestSetIO object

address **(variant)** - address to read data from.

Return Type Variant

Default Not Applicable

Examples `value = ExtIO.ReadData (15)`

C++ Syntax HRESULT ReadData (VARIANT Address, VARIANT* Data);

Interface IHWExternaTestSetIO

ReadRaw Method

Description Reads a 16-bit value from the external test set. The 16-bit value is comprised of lines AD0 - AD12, Sweep Holdoff In and Interrupt In (inverted).

When this command is used the analyzer does NOT generate the appropriate timing signals; it simply reads the lines. The user needs to first use the [WriteRaw](#) method to do the initial setup. The RLW line (pin25) must be set to the appropriate level in order to read the test set connected.

Below is the format of data that is read with ReadRaw:

Pin	Bit	Signal name
22	0	AD0*
23	1	AD1*
11	2	AD2*
10	3	AD3*
9	4	AD4*
21	5	AD5*
20	6	AD6*
19	7	AD7*
6	8	AD8*
5	9	AD9*
4	10	AD10*
17	11	AD11*
3	12	AD12*
2	13	Sweep Holdoff In
13	14	Interrupt In (inverted internally)
na	15	Always Zero, grounded internally

*These lines are dependent on the state of RLW (pin25).
Writing a 0(low) to RLW will set lines AD0-AD12 to write mode.
Writing a 1(high) to RLW will set lines AD0-AD12 to read mode.

VB Syntax *value* = **ExtIO.ReadRaw** (*address*)

Variable [\(Type\)](#) - Description

value **(variant)** - Variable to store the returned data

ExtIO **(object)** - An External IO object

address **(variant)** - Address to read data from

Return Type Real

Default Not Applicable

Examples **value = ExtIO.ReadRaw (address)**

C++ Syntax HRESULT ReadRaw(VARIANT* Input);

Interface IHWExternalTestSetIO

Recall Method

Description	Recalls a measurement state, calibration state, or both, from the hard drive into the analyzer. Use app. Save to save files.
VB Syntax	<code>app.Recall (filename.ext)</code>
Variable	(Type) - Description
<code>app</code>	An Application (object)
<code>filename.ext</code>	(string) - Full path, file name, and extension, of the file. Files are typically stored in "C:\Program Files\Agilent\Network Analyzer\Documents" Use one of the following extensions: <ul style="list-style-type: none"> • .sta - Instrument State • .cal - Calibration file • .cst - Both Instrument State and Calibration reference • .cti - Citifile (data will always be formatted. See Recalling Citifiles Using the PNA) • .csa - Instrument state and calibration data (not a reference pointer).
Return Type	Not Applicable
Default	Not Applicable
Examples	<pre>app.Recall ("C:\Program Files\Agilent\Network Analyzer\Documents\MyState.cst") 'Recalls "mystate.cst" from the specified folder</pre>
C++ Syntax	HRESULT Recall(BSTR bstrFile)
Interface	IApplication

Recall Kits Method

Description Recalls the calibration kits definitions that were stored with the SaveKits command.

VB Syntax *app*.**RecallKits**

Variable [\(Type\)](#) - Description

app An [Application](#) (**object**)

Return Type Not Applicable

Default Not Applicable

Examples `app.RecallKits`

C++ Syntax HRESULT RecallKits()

Interface IApplication

Remove Method

Description Removes an item from a collection of objects.

VB Syntax *Object*.**Remove** *item*

Variable [\(Type\)](#) - **Description**

Object Any of the following (**objects**)

- [CalFactorSegments collection](#)
- [Cal Sets collection](#)
- [Measurements collection](#)
- [NAWindows collection](#)
- [PowerLossSegments collection](#)
- [Segments collection](#)

Note: Segments, CalFactorSegments, and PowerLossSegments have an OPTIONAL argument [size] referring to the number of segments to remove, starting with the *item* parameter.

Note: Segments - When ALL segments are deleted, [SweepType](#) is automatically set to Linear because there are no segments to sweep.

item (**variant**) - Item number to be removed

Return Type Not Applicable

Default Not Applicable

Examples

```
Measurements.Remove 3 'Removes measurement 3
segments.Remove 2,20 'Removes 20 segments (2 - 21)
```

C++ Syntax

```
HRESULT Remove(VARIANT index); //Measurements
HRESULT Remove(VARIANT index); //Cal Sets
HRESULT Remove(long windowNumber); //NAWindows
HRESULT Remove(VARIANT index, long size); //Segments
HRESULT Remove(VARIANT index, long size); //CalFactorSegments
HRESULT Remove(VARIANT index, long size); //PowerLossSegments
```

Interface

```
IMeasurements
INAWindows
```


ISegments

ICalFactorSegments

ICal Sets

IPowerLossSegments

Reset Method

Description	Removes all existing windows and measurements from the application. (Unlike Preset , does not create a new measurement.)
VB Syntax	<i>app</i> .Reset
Variable	(Type) - Description
<i>app</i>	An Application (object)
Return Type	Not Applicable
Default	Not Applicable
Examples	<code>app.Reset</code>
C++ Syntax	HRESULT Reset()
Interface	IApplication

ResetLOFrequency Method

Description Resets the LO Delta Frequency to 0 (zero) Hz.

VB Syntax *embedLO*.ResetLOFrequency

Variable [\(Type\)](#) - Description

embedLO An [EmbeddedLO](#) (object)

Default Not Applicable

Examples `embedLO.ResetLOFrequency 'write`

C++ Syntax HRESULT ResetLOFrequency();

Interface IEmbeddedLO

Last Modified:

18-Jun-2007 MX New topic

ResetTuningParameters Method

Description Resets the tuning parameters to their default values.

VB Syntax *embedLO*.ResetTuningParameters

Variable [\(Type\)](#) - [Description](#)

embedLO An [EmbeddedLO](#) (object)

Default Not Applicable

Examples `embedLO.ResetTuningParameters 'write`

C++ Syntax HRESULT ResetTuningParameters();

Interface IEmbeddedLO

Last Modified:

13-Apr-2007 MX New topic

RestoreCalKitDefaults Method

Description Restores the original properties of the specified Cal Kit, overwriting the last definition with the factory defaults.

NOTE: ONLY works with PNA releases 1.0 through 1.6.

VB Syntax `app.RestoreCalKitDefaults (calKit)`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

calKit (**enum NACalKit**) - Calibration Kit to restore. Choose from:

1 - naCalKit_85032F_N50
2 - naCalKit_85033E_3_5
3 - naCalKit_85032B_N50
4 - naCalKit_85033D_3_5
5 - naCalKit_85038A_7_16
6 - naCalKit_85052C_3_5_TRL
7 - naCalKit_User7
8 - naCalKit_User8
9 - naCalKit_User9
10 - naCalKit_User10

Return Type Not Applicable

Default Not Applicable

Examples `app.RestoreCalKitDefaults naCalKit_MechKit10`

C++ Syntax HRESULT RestoreCalKitDefaults\(\tagNACalKit kit)

Interface IApplication

RestoreCalKitDefaultsAll Method

Description Restores the original properties of ALL of the Cal Kits, overwriting the last definitions with the factory defaults.

NOTE: ONLY works with PNA releases 1.0 through 1.6.

VB Syntax `app.RestoreCalKitDefaultsAll`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

Return Type Not Applicable

Default Not Applicable

Examples `app.RestoreCalKitDefaultsAll`

C++ Syntax HRESULT RestoreCalKitDefaultsAll()

Interface IApplication

Resume Method

Description	Resumes the trigger mode of all channels that was in effect before sending the channels.Hold method. Channels.Hold must be sent before channels.Resume, using the same instance of the Channels object.
VB Syntax	<i>chans</i> .Resume
Variable	(Type) - Description
<i>chans</i>	A Channel collection (object)
Return Type	Not Applicable
Default	Not Applicable
Examples	<code>chans.Resume</code>
C++ Syntax	HRESULT Resume();
Interface	Channels2

Save Method

Description Saves the appropriate content to the hard drive depending on the extension that is provided.

Some saved files can be recalled using app.[Recall](#). depending on the content.

VB Syntax `app.Save(filename.ext)`

Variable [\(Type\)](#) - Description

<i>app</i>	An Application (object)
<i>filename.ext</i>	<p>(string) - Full path, file name, and extension of the file.</p> <p>Files are typically stored in "C:\Program Files\Agilent\Network Analyzer\Documents"</p> <p>Use one of the following extensions:</p> <ul style="list-style-type: none"> • .cst - Saves both Instrument State and Cal Set reference - Recalls a calibrated measurement. (Recallable) • .sta - Saves Instrument State only - recalls the instrument state without calibration. (Recallable) • .cal - Calibration file – saves the active Cal Sets currently in use by any channel. Use this mode for archival purposes only. All Cal Sets are saved to a Cal Set data file. This mode provides a method of safeguarding calibration data. This data can be restored to the list of Cal Sets available in the instrument. (Recallable) • .csa - Saves both instrument state AND actual calibration data, not a reference pointer to the Cal Set. • .prn - Saves active trace in comma-separated format (not recallable) • .bmp - Saves a Bitmap of the screen (not recallable) • .s1p - Saves 1-port measurement data (not recallable) • .s2p - Saves 2-port measurement data (not recallable) • .s3p - Saves 3-port measurement data (not recallable) • .s4p - Saves 4-port measurement data (not recallable)

Return Type Not Applicable

Default Not Applicable

Examples

```
app.Save("C:\Program Files\Agilent\Network Analyzer\Documents\Newfolder\MyState.cst") 'Saves "mystate.cst" to the specified folder
```


[C++ Syntax](#) HRESULT Save(BSTR bstrFile)

[Interface](#) IApplication

Last Modified:

26-Jun-2007 Corrected example

Save Method

Description Saves the current Cal Set to disk. This is the recommended method for saving a Cal Set.

Learn more about [reading and writing Cal data using COM](#)

VB Syntax *CalSet*.**Save**

Variable [\(Type\)](#) - Description

CalSet **(object)** - A [CalSet](#) object

Return Type Not Applicable

Default Not Applicable

Examples `myCalSet.Save`

See [Copy Method](#) for an example application of this command.

C++ Syntax HRESULT Save();

Interface ICalSet

SaveCalSets Method **Superseded**

Description This command is replaced by [ICalSet::Save](#) which saves the data for **only** the current Cal Set to the disk.

Writes new or changed Cal Sets to disk. All Cal Sets are saved in a single file. This file is updated at the following times:

- When a Cal Set has been deleted.
- When a calibration has been performed through the front panel interface.
- When this method is called.
- When [ICalSet::Save](#) is called.

Learn more about [reading and writing Cal data using COM](#)

VB Syntax *object*.SaveCalSets

Variable [\(Type\)](#) - Description

object **(object)** - A CalManager object or a Calibrator object

Return Type None

Default Not Applicable

Example `calMgr.SaveCalSets`

C++ Syntax HRESULT SaveCalSets();

Interface ICalManager
ICalibrator

SaveCitiDataData Method

Description Saves UNFORMATTED trace data to .cti file. [Learn more about citifiles.](#)

VB Syntax `app.SaveCitiDataData(filename.cti)`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

filename.cti **(string)** - Full path, file name, and .cti extension of the file.
Files are typically stored in "C:\Program Files\Agilent\Network Analyzer\Documents".

Return Type Not Applicable

Default Not Applicable

Examples

```
app.SaveCitiDataData ("C:\Program Files\Agilent\Network Analyzer\Documents\myDDCitifile.cti") 'Saves "myDDCitifile.cti" to the specified folder
```

C++ Syntax HRESULT SaveCitiDataData (BSTR bstrFile)

Interface IApplication5

SaveCitiFormattedData Method

Description Saves FORMATTED trace data to .cti file. [Learn more about citifiles.](#)

VB Syntax `app.SaveCitiFormattedData(filename.cti)`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

filename.cti **(string)** - Full path, file name, and .cti extension of the file.

Files are typically stored in "C:\Program Files\Agilent\Network Analyzer\Documents"

Return Type Not Applicable

Default Not Applicable

Examples `app.SaveCitiFormattedData ("C:\Program Files\Agilent\Network Analyzer\Documents\Newfolder\myFDCitifile.cti") 'Saves "myFDCitifile.cti" to the specified folder`

C++ Syntax HRESULT SaveCitiFormattedData (BSTR bstrFile)

Interface IApplication5

SaveFile Method

Description Saves the mixer/converter test setup to a mixer attributes (.mxr) file.

VB Syntax *mixer*.**SaveFile** (*filename*)

Variable [\(Type\)](#) - **Description**

mixer An [IMixer Interface](#) pointer to a [measurement](#) **(object)**

filename (String) Full path, file name, and .mxr extension of the file.
Files are typically stored in "C:\Program Files\Agilent\Network Analyzer\Documents".

Return Type String

Default Not Applicable

Examples `mixer.SaveFile ("C:\Program Files\Agilent\Network Analyzer\Documents\myMixer.mxr")`

C++ Syntax HRESULT put_SaveFile(BSTR newVal)

Interface IMixer

SaveKits Method

Description Saves the cal kits, typically after modifying a calibration kit. To load a cal kit into the analyzer from the hard drive, use [app.RecallKits](#).

VB Syntax *app*.SaveKits

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

Return Type Not Applicable

Default Not Applicable

Examples `app.SaveKits`

[C++ Syntax](#) HRESULT SaveKits()

Interface IApplication

SearchFilterBandwidth Method

Description	<p>Searches the measurement data with the current BandwidthTarget (default is -3). To continually track the filter bandwidth, use BandwidthTracking.</p> <p>This feature uses markers 1-4. If not already, they are activated. To turn off these markers, either turn them off individually or DeleteAllMarkers.</p> <p>The bandwidth statistics are displayed on the analyzer screen. To get the bandwidth statistics, use either GetFilterStatistics or FilterBW, FilterCF, FilterLoss, or FilterQ.</p> <p>The analyzer screen will show either Bandwidth statistics OR Trace statistics; not both.</p> <p>To search a UserRange with the bandwidth search, first activate marker 1 and set the desired UserRange. Then send the SearchFilterBandwidth command. The user range used with bandwidth search only applies to marker 1 searching for the max value. The other markers may fall outside the user range.</p>
VB Syntax	<code>meas.SearchFilterBandwidth</code>
Variable	(Type) - Description
<code>meas</code>	A Measurement (object)
Return Type	Not Applicable
Default	Not Applicable
Examples	<code>meas.SearchFilterBandwidth</code>
C++ Syntax	<code>HRESULT SearchFilterBandwidth()</code>
Interface	IMeasurement

SearchMax Method

Description Searches the marker domain for the maximum value.

VB Syntax *mark*.**SearchMax**

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

Return Type Not Applicable

Default Not Applicable

Examples `mark.SearchMax`

C++ Syntax HRESULT SearchMax()

Interface IMarker

SearchMin Method

Description Searches the marker domain for the minimum value.

VB Syntax *mark*.**SearchMin**

Variable [\(Type\)](#) - Description

mark A Marker **(object)**

Return Type Not Applicable

Default Not Applicable

Examples `mark.SearchMin`

C++ Syntax HRESULT SearchMin()

Interface IMarker

SearchNextPeak Method

Description Searches the marker's domain for the next peak value.

VB Syntax *mark*.SearchNextPeak

Variable [\(Type\)](#) - Description

mark A Marker **(object)**

Return Type Not Applicable

Default Not Applicable

Examples `mark.SearchNextPeak`

C++ Syntax HRESULT SearchNextPeak()

Interface IMarker

SearchPeakLeft Method

Description Searches the marker's domain for the next [VALID](#) peak to the left of the marker.

VB Syntax *mark*.SearchPeakLeft

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

Return Type Not Applicable

Default Not Applicable

Examples `mark.SearchPeakLeft`

[C++ Syntax](#) HRESULT SearchPeakLeft()

Interface IMarker

SearchPeakRight Method

Description Searches the marker's domain for the next [VALID](#) peak to the right of the marker.

VB Syntax *mark*.SearchPeakRight

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

Return Type Not Applicable

Default Not Applicable

Examples `mark.SearchPeakRight`

[C++ Syntax](#) HRESULT SearchPeakRight()

Interface IMarker

SearchTarget Method

Description Searches the marker's domain for the target value (specified with [mark.TargetValue](#)). Searches to the right; then at the end of the search domain, begins again at the start of the search domain.

VB Syntax *mark*.**SearchTarget**

Variable [\(Type\)](#) - **Description**

mark A Marker (**object**)

Return Type Not Applicable

Default Not Applicable

Examples `mark.SearchTarget`

C++ Syntax HRESULT SearchTarget()

Interface IMarker

SearchTargetLeft Method

Description Moving to the left of the marker position, searches the marker's domain for the target value (specified with [mark.TargetValue](#)).

VB Syntax *mark*.**SearchTargetLeft**

Variable [\(Type\)](#) - Description

mark A Marker **(object)**

Return Type Not Applicable

Default Not Applicable

Examples `mark.SearchTargetLeft`

C++ Syntax HRESULT SearchTargetLeft()

Interface IMarker

SearchTargetRight Method

Description Moving to the right of the marker position, searches the marker's domain for the target value (specified with [mark.TargetValue](#)).

VB Syntax *mark*.**SearchTargetRight**

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

Return Type Not Applicable

Default Not Applicable

Examples `mark.SearchTargetRight`

C++ Syntax HRESULT SearchTargetRight()

Interface IMarker

SelectCalSet Method

Description Selects and applies a Cal Set to the specified channel.

Note: Error Correction is not automatically applied as a result of this command being issued. If there is more than one Cal Type in the Cal Set, you must explicitly choose the Cal Type you want to apply. (See [meas.CalType](#))!

VB Syntax *channel*.**SelectCalSet** *calSet*, *restore*

Variable [\(Type\)](#) - **Description**

channel **(object)** - A [Channel](#) object

calSet **(string)** - Cal Set to make active. Specify the Cal Set by GUID or Name. Use [EnumerateCalSets](#) to list the available Cal Sets.

restore **(boolean)** -

True (1) - The stimulus stored with the cal set will be applied to the channel.

False (0) - If a conflict is detected between the existing channel settings and the Cal Set stimulus settings, then the following will occur:

If interpolation is ON, then interpolation will be attempted. This may fail if the channel frequency is outside the range of the Cal Set.

If interpolation is OFF, the selection will be abandoned and an error is returned:
E_NA_CAL_STIMULUS_VALUES_EXCEEDED

Return Type Not Applicable

Default Not Applicable

Example `channel.SelectCalSet GUID, 1`

`chan.SelectCalSet "MyCalSet", 0`

C++ Syntax HRESULT SelectCalSet (BSTR strCset, bool bRestore);

Interface IChannel

Last Modified:

29-Nov-2007 Modified to accept name

SetAllSegments Method

Description Uploads a segment table to the PNA replacing any existing segment table.

Segments must be ascending in frequency and non-overlapping. If they are not, the segments are 'adjusted' as they are from the User Interface control. The total number of points for all segments cannot exceed the PNA [maximum number of points](#) for a sweep.

VB Syntax `Segs.SetAllSegments (segdata)`

Variable [\(Type\)](#) - Description

`segs` A Segments **(Collections)**

`segdata` (Variant) A 2-dimensional array of Segment data:

- dimension 0 is the number of elements in each segment.
- dimension 1 is the number of segments that will be used.

The following is a list of dimension 0 elements for each segment:

Note: All elements must be **dimensioned** as either ALL Double or ALL Variant.

- 0 = Segment state (Boolean True or False)
- 1 = Number of Points in this segment (Integer)
- 2 = Start Freq (Double)
- 3 = Stop Freq (Double)
- 4 = IFBW (Double)
- 5 = Dwell Time (Double)
- 6 = Power (Double) - see table below.

The [IFBandwidthOption](#) and [SweepTimeOption](#) settings do NOT affect the array size and order-of-element interpretation. The array must always contain elements that contain IFBW and Sweep Time values. The value is ignored if the corresponding 'option' is set to False.

The number of dimension 0 elements depends on the following two settings:

1. [SourcePowerOption](#) = True allows segments to have independent power levels.
2. [CouplePorts](#) = False allows different power levels for each test port.

CouplePorts	SourcePowerOption	Number of Elements
False	False	Each port has its own channel-wide power setting, which is set using TestPortPower . Supply exactly 7 elements per segment. The last element (power) is ignored.
False	True	Supply 6 + total number of ports. The first 7 elements are still interpreted the same. The remaining elements (in-order) are interpreted as the power levels to set on that segment for Ports 2 through N, where N is the total number of ports currently enabled for the PNA or for a PNA with multiport external test set.
True	False	Supply exactly 7 elements per segment. The last element (power) is ignored.
True	True	Supply exactly 7 elements per segment. The last element (power) is honored.

Return Type Not Applicable

Default Not Applicable

Examples [See a VB example using this command](#)
[See a C++ example using this command](#)

C++ Syntax SetAllSegments (VARIANT Segments);

Interface ISegments2

Last Modified:

15-Oct-2007 Major edits and link to C++ example

SetBBPorts Method


Description For a Balanced - Balanced device type, maps the PNA ports to the DUT ports.
Set the Balanced device type using the [DUTTopology Property](#)

VB Syntax *balTopology*.**SetBBPorts** *p1Pos*, *p1Neg*, *p2Pos*, *p2Neg*

Variable [\(Type\)](#) - Description

balTopology A [BalancedTopology](#) (object)

p1Pos, *p1Neg*, *p2Pos*, *p2Neg* **(Long Integer)** PNA port number that connects to each of the following DUT ports:

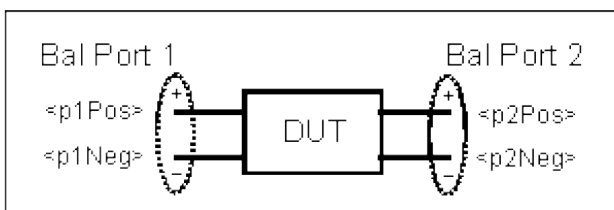

Return Type Not applicable - To read port mappings, use the [BalancedTopology](#) properties.

Default Not Applicable

Examples `balTop.SetBBPorts 1,2,3,4`

C++ Syntax HRESULT SetBBPorts (long p1Pos, long p1Neg, long p2Pos, long p2Neg)

Interface IBalancedTopology

SetCalInfo Method

Description Specifies the type of Unguided calibration. This method should be the first method called on the calibrator object. It prepares the internal state for the rest of the calibration.

Note: You can NOT perform a 3 or 4-port cal using SetCalInfo even though there is enumCalTypes. You must use the [GuidedCalibration](#) object.

Learn more about [reading and writing Cal data using COM](#)

The analyzer can measure both ports simultaneously, assuming you have two of each standard type. For a 2-port cal, See [cal.Simultaneous2PortAcquisition](#)

VB Syntax *cal.SetCalInfo (type,rcvPort,srcPort)*

Variable [\(Type\)](#) - **Description**

cal A Calibrator **(object)**

type **(enum NACalType)** - Calibration type. Choose from:

- 0 - naCalType_Response_Open
- 1 - naCalType_Response_Short
- 2 - naCalType_Response_Thru
- 3 - naCalType_Response_Thru_And_Isol
- 4 - naCalType_OnePort
- 5 - naCalType_TwoPort_SOLT
- 6 - naCalType_TwoPort_TRL
- 7 - naCalType_None
- 8 - naCalType_ThreePort_SOLT
- 9 - Custom
- 10 - naCalType_FourPort_SOLT

Note: For 1-port cals, the source port = receiver port. For 2, 3,4-port SOLT and TRL, it doesn't matter which port is specified as source and receiver

rcvPort **(long integer)** - Receiver Port

srcPort **(long integer)** - Source Port

Return Type NACalType

Default 7-naCalType_None

Examples `cal.setCalInfo(naCalType_Response_Open,1,1)`

C++ Syntax HRESULT SetCalInfo(tagNACalType calType, long portA, long portB)

Interface ICalibrator

SetCallInfoEx Method (for source power cal)

Description	This command replaces SetCallInfo2 Method . Specifies the channel and the source port to be used for the source power calibration about to be performed.
VB Syntax	<i>powerCalibrator</i> . SetCallInfoEx <i>channel</i> , <i>sourcePort</i> , [<i>powerOffset</i> ,] [<i>display</i>]
Variable	(Type) - Description
<i>powerCalibrator</i>	(object) - A SourcePowerCalibrator object
<i>channel</i>	(long integer) - Number of the PNA channel (not power meter channel) on which the source power cal will be performed. If the channel does not already exist, it will be created.
<i>sourcePort</i>	(long integer) - Port number on which the source power cal will be performed. Use GetPortNumber to return the port number of a source that only has a string name, such as an External Source .
[<i>powerOffset</i>]	(double) - Optional argument. Sets or returns a power level offset from the PNA test port power. This can be a gain or loss value (in dB) to account for components you connect between the source and the reference plane of your measurement. For example, specify 10 dB to account for a 10 dB amplifier at the input of your DUT. Following the calibration, the PNA power readouts are adjusted by this value. This argument performs the same function as chan.SourcePowerCalPowerOffset Property
[<i>display</i>]	(boolean) Optional argument. Enables and disables the display of power readings on the PNA screen. After the source power cal data is acquired, this setting is reset to ON. If unspecified, value is set to ON. True - Display of power readings is ON False - Display of power readings is OFF
Return Type	None
Default	Not Applicable
Examples	<code>powerCalibrator.SetCallInfoEx 1, 1, -10, True</code>
C++ Syntax	HRESULT SetCallInfoEx(long Channel, long SourcePort, double PowerOffset = 0., VARIANT_BOOL bDisplay = VARIANT_TRUE);
Interface	ISourcePowerCalibrator4

Last Modified:

30-Apr-2007 Edited for src strings

SetCenter Method

Description Changes the center stimulus to the stimulus value of the marker. The start stimulus stays the same and the stop is adjusted.
This command does not work with channels that are in [CW](#) or [Segment Sweep](#) mode.

VB Syntax *mark*.**SetCenter**

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

Return Type Not Applicable

Default Not Applicable

Examples `mark.SetCenter`

C++ Syntax HRESULT SetCenter()

Interface IMarker

SetCW Method

Description Changes the analyzer to sweep type CW mode and sets the CW frequency to the marker's frequency. Does not change anything if current sweep type is other than a frequency sweep.

VB Syntax *mark*.**SetCW**

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

Return Type Not Applicable

Default Not Applicable

Examples `mark.SetCW`

C++ Syntax HRESULT SetCW()

Interface IMarker

SetElectricalDelay Method

Description Changes the measurement's electrical delay to the marker's delay value.

VB Syntax *mark*.**SetElectricalDelay**

Variable [\(Type\)](#) - **Description**

mark A Marker (**object**)

Return Type Not Applicable

Default Not Applicable

Examples `mark.SetElectricalDelay`

C++ Syntax HRESULT SetElectricalDelay()

Interface IMarker

SetFailOnOverRange Method

Description When set TRUE, configures the analyzer to report outOfRange conditions with an **error** code. Any overrange error will return **E_NA_LIMIT_OUTOFRANGE_ERROR**.

Note: This method is for the benefit of VB clients. The analyzer automatically adjusts overrange conditions to the closest acceptable setting. The VB user will not see that an overrange occurred because the HRESULT is not returned if it has a success code. For more information, see [Events/OverRange](#).

VB Syntax `app.SetFailOnOverRange state`

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

state **(boolean)** -
True (1) - Overrange conditions report an error code
False (0) - Overrange conditions report a success code

Return Type Not Applicable

Default False (0)

VB Example

```
app.SetFailOnOverRange TRUE
On Error Goto ERRHANDLER

'the following overrange will cause ERRHANDLER to be invoked

channel.StartFrequency = 9.9 GHZ
exit

ERRHANDLER:
    print "something failed"
```

C++ Syntax HRESULT put_SetFailOnOverRange(VARIANT_BOOL mode)

Interface IApplication

SetIsolationPaths Method

Description Adjusts the list of paths (port pairings) for which isolation standards will be measured during calibration.

VB Syntax *guidedCal.SetIsolationPaths specifier, pathList*

Variable [\(Type\)](#) - Description

obj Any of the following:
[GuidedCalibration](#) (object)

specifier **(Enum)** - Choose from:

0 - naPathsAll - Measure isolation on all pairings of the ports that are to be calibrated.

1 - naPathsNone - Do not measure isolation on any pairing of the ports to be calibrated.

2 - naPathsAdd - Add one or more specific pairings of ports to the list of port pairings for which isolation will be measured.

3 - naPathsRemove - Remove one or more specific pairings of ports from the list of port pairings for which isolation will be measured.

pathlist **(Variant)** port numbers in pairs. One-dimensional array of Long Integers.

Note: *pathList* is evaluated only when *specifier* is **naPathsAdd** or **naPathsRemove**. For **naPathsAll** and **naPathsNone**, *pathList* is ignored.

Return Type Not Applicable

Default Not Applicable

Examples

```
Dim pathList
'selecting to measure isolation on all possible paths for the
ports about to be calibrated
guidedCal.SetIsolationPaths naPathsAll, pathList

'now removing the paths 1-to-2, 2-to-3 and 2-to-4 from the set
of all paths
pathList = Array(1,2,2,3,2,4)
guidedCal.SetIsolationPaths naPathsRemove, pathList
```

C++ Syntax HRESULT SetIsolationPaths(enum NAPortPathSpecifier specifier, VARIANT pathList);

Interface IGuidedCalibration3

Last Modified:

16-Apr-2007 MX New topic

SetPowerAcquisitionDevice Method

Description Sets the power sensor channel (A or B) to be used. This performs the same function as the **Use this sensor only** checkbox in the Power Sensor Settings dialog.

Note: This method is only necessary when performing an SMC calibration.

VB Syntax *pwrCal* . **SetPowerAcquisitionDevice** *sensor*

Variable (Type) - Description

pwrCal (Object) A SourcePowerCalibrator object

sensor (**enum NAPowerAcquisitionDevice**) The power sensor channel. Choose from:
0 – naPowerSensor_A
1 – naPowerSensor_B

Default Not Applicable

Examples `pwrCal.PowerAcquisitionDevice naPowerSensor_A`

C++ Syntax HRESULT SetPowerAcquisitionDevice(tagNAPowerAcquisitionDevice enumAcqDevice);

Interface ISourcePowerCalibrator3

SetFrequencyLowPass Method

Description Set the start frequencies when **trans.Mode = LowPass**.

VB Syntax *trans*.**SetFrequencyLowPass**

Variable [\(Type\)](#) - **Description**

trans A Transform **(object)**

Return Type Not Applicable

Default Not Applicable

Examples `trans.SetFrequencyLowPass`

C++ Syntax HRESULT SetFrequencyLowPass(void)

Interface ITransform

SetReferenceLevel Method

Description Changes the measurement's reference level to the marker's Y-axis value.

VB Syntax *mark*.**SetReferenceLevel**

Variable [\(Type\)](#) - Description

mark A Marker **(object)**

Return Type Not Applicable

Default Not Applicable

Examples `mark.SetReferenceLevel`

C++ Syntax HRESULT SetReferenceLevel()

Interface IMarker

SetSBPorts Method


Description For a Single-ended - Balanced device type, maps the PNA ports to the DUT ports.
Set the Single-ended - Balanced device type using the [DUTTopology Property](#)

VB Syntax *balTopology*.**SetSBPorts** *se, bPos, bNeg*

Variable [\(Type\)](#) - **Description**

balTopology A [BalancedTopology](#) (**object**)

se, bPos, bNeg PNA port number that connects to each of the following DUT ports:

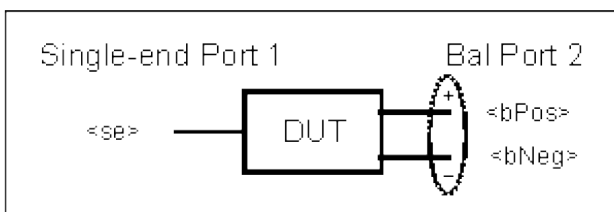

Return Type Not applicable - To read port mappings, use the [BalancedTopology](#) properties.

Default Not Applicable

Examples `balTop.SetSBPorts 1,2,3`

C++ Syntax HRESULT SetSBPorts (long se, long bPos, long bNeg)

Interface IBalancedTopology

SetSSBPorts Method

Description For a Single-ended - Single-ended - Balanced device type, maps the PNA ports to the DUT ports.


Set the Single-ended - Single-ended - Balanced device type using the [DUTTopology Property](#)

VB Syntax *balTopology*.**SetSSBPorts** *se, se2, bPos, bNeg*

Variable [\(Type\)](#) - Description

balTopology A [BalancedTopology](#) (object)

se, se2, bPos, bNeg PNA port number that connects to each of the following DUT ports:

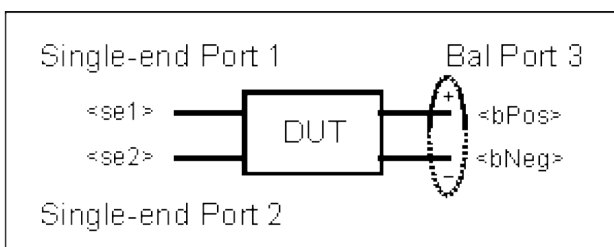

Return Type Not applicable - To read port mappings, use the [BalancedTopology](#) properties.

Default Not Applicable

Examples `balTop.SetSSBPorts 1,2,3,4`

C++ Syntax HRESULT SetSSBPorts (long se, long se2, long bPos, long bNeg)

Interface IBalancedTopology

SetStandardsForClass Method

Description Set the calibration standard numbers for a specified calibration class. To read the cal standard numbers use [GetStandardsForClass Method](#)

VB Syntax *calKit*.**SetStandardsForClass** (*calclassorder*, *std1*, *std2*, *std3*, *std4*, *std5*, *std6*, *std7*)

Variable [\(Type\)](#) - Description

calKit A CalKit (**object**)

calclassorder (**enum NACalClassOrder**) Cal Class. Choose from:

- 0 - naRefl_1_S11
- 1 - naRefl_2_S11
- 2 - naRefl_3_S11
- 3 - naTran_1_S21
- 4 - naRefl_1_S22
- 5 - naRefl_2_S22
- 6 - naRefl_3_S22
- 7 - naTran_1_S12
- 8 - naRefl_1_S33
- 9 - naRefl_2_S33
- 10 - naRefl_3_S33
- 11 - naTran_1_S32
- 12 - naTran_1_S23
- 13 - naTran_1_S31
- 14 - naTran_1_S13
- 15 - naTRL_T
- 16 - naTRL_R
- 17 - naTRL_L

std1...std7 (**long**) Calibration Standard Number. Choose from **1** through **30**. Std2 through Std7 are optional

Return Type Not applicable

Default Not applicable

Examples **calkit.SetStandardsForClass** naRefl_3_S11, 3, 5, 6
calkit.SetStandardsForClass naTran_1_S21, 4

C++ Syntax HRESULT SetStandardsForClass(NACalClassOrder calclassorder, long std1, long std2, long std3, long std4, long std5, long std6, long std7)

Interface ICalkKit

SetStart Method

Description Changes the start stimulus to the stimulus value of the marker. The stop stimulus stays the same and the span is adjusted.

This command does not work with channels that are in [CW](#) or [Segment Sweep](#) mode.

VB Syntax *mark*.**SetStart**

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

Return Type Not Applicable

Default Not Applicable

Examples `mark.SetStart`

C++ Syntax HRESULT SetStart()

Interface IMarker

SetStop Method

Description Changes the stop stimulus to the stimulus value of the marker. The start stimulus stays the same and the span is adjusted.

This command does not work with channels that are in [CW](#) or [Segment Sweep](#) mode.

VB Syntax *mark*.**SetStop**

Variable [\(Type\)](#) - Description

mark A Marker (**object**)

Return Type Not Applicable

Default Not Applicable

Examples `mark.SetStop`

C++ Syntax HRESULT SetStop()

Interface IMarker

ShowMarkerReadout Method

Description Shows and Hides the Marker readout for the active marker in the upper-right corner of the window.

VB Syntax *win.ShowMarkerReadout state*

Variable [\(Type\)](#) - Description

win A NAWindow (**object**)

state (**boolean**) -
True (1) - Show the Marker readout
False (0) - Hide the Marker readout

Return Type Not Applicable

Default Not Applicable

Examples `win.ShowMarkerReadout True`

C++ Syntax HRESULT ShowMarkerReadout(VARIANT_BOOL bState)

Interface INAWindow

ShowStatusBar Method

Description Shows and Hides the Status Bar. The Status Bar is located across the bottom of the display. The following information is shown for the active measurement:

- Channel number
- Parameter
- Correction On or Off
- Remote or Local operation

VB Syntax *app.ShowStatusBar state*

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

state **(boolean)** -
True (1) - Show the Status Bar
False (0) - Hide the Status Bar

Return Type Not Applicable

Default Not Applicable

Examples `app.ShowStatusBar True`

C++ Syntax HRESULT ShowStatusBar (VARIANT_BOOL bState)

Interface IApplication

ShowStimulus Method

Description Shows and Hides the Stimulus (X-axis) information located at the bottom of the display. The start and stop stimulus values are shown for the active measurement.

VB Syntax *app.ShowStimulus state*

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

state **(boolean)** -
True (1) - Show the Stimulus information
False (0) - Hide the Stimulus information

Return Type Not Applicable

Default Not Applicable

Examples `app.ShowStimulus True`

C++ Syntax HRESULT ShowStimulus(VARIANT_BOOL bState)

Interface IApplication

ShowTable Method

Description Shows or Hides the specified table for the window's active measurement in the lower part of the window.

VB Syntax *win.ShowTable value*

Variable [\(Type\)](#) - Description

win A NAWindow (**object**)

value (**enum naTable**) - The table to show or hide. Choose from:

0 - naTable_None
1 - naTable_Marker
2 - naTable_Segment
3 - naTable_Limit

Return Type Not Applicable

Default Not Applicable

Examples `win.ShowTable naTable_limit`

C++ Syntax HRESULT ShowTable (tagNATableType table)

Interface INAWindow

ShowTitleBars Method

Description Shows and Hides the Title Bars. The Title Bars are across the top of the Network Analyzer Window and each of the measurement windows. The Window name is shown in the Title Bar.

VB Syntax *app.ShowTitleBars state*

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

state **(boolean)**
True (1) - Show the Title Bars
False (0) - Hide the Title Bars

Return Type Not Applicable

Default Not Applicable

Examples `app.ShowTitleBars True`

C++ Syntax HRESULT ShowTitleBars\(\VARIANT_BOOL bState)

Interface IApplication

ShowToolbar Method

Description Shows and Hides the specified Toolbar.

VB Syntax *app.ShowToolbar toolbar,state*

Variable [\(Type\)](#) - Description

app An [Application](#) (object)

toolbar **(enum NAToolbarType)** - The toolbar to show or hide. Choose from:

0 - naToolbar_None
1 - naToolbar_ActiveEntry
2 - naToolbar_Markers
3 - naToolbar_Measurement
4 - naToolbar_Stimulus
5 - naToolbar_SweepControl

state **(boolean)** -
True (1) - Show the specified toolbar
False (0) - Hide the specified toolbar

Return Type Not Applicable

Default 1 - naToolbar_ActiveEntry showing; all others hiding.

Examples `app.ShowToolbar 1,1 'shows the active entry toolbar`

C++ Syntax HRESULT ShowToolbar(tagNAToolbarType toolbar, VARIANT_BOOL bState)

Interface IApplication

Single Method

Description Sets the trigger count to 1, which will cause the channel to respond to exactly one trigger signal from an Internal or External [trigger source](#).

If trigger source is set to Manual:

- with *sync* = **True**, trigger source is automatically changed to Internal which sends AND allows one trigger signal, then changed back to Manual.
- with *sync* = **False**, a trigger signal must also be sent using [app.ManualTrigger Method](#).

This setting has implications on Calibration. [Learn more](#).

VB Syntax *chan*.**Single** [*sync*]

Variable [\(Type\)](#) - **Description**

chan A Channel (**object**)

[*sync*] (**boolean**) -Optional argument.

True - The PNA waits until the trigger is completed to process subsequent commands.

False - Subsequent commands are processed immediately (default setting).

Return Type Not Applicable

Default Not Applicable

Examples

```
sync = True
chan.Single sync
```

C++ Syntax HRESULT Single(VARIANT_BOOL bWait)

Interface IChannel

Last Modified:

10-Jul-2007 Corrected for manual mode with sync = True

Store Method

Description Saves the path configuration currently associated with channel (ch) to the specified configuration name.

This command is identical to PathConfigurationManager.[StoreConfiguration Method](#)

VB Syntax *pathMgr.StoreConfiguration ch, name*

Variable [\(Type\)](#) - Description

pathMgr [PathConfigurationManager](#) (object)

ch **(Long)** Channel number of the configuration to be saved.

name **(String)** Configuration name. Factory configurations can NOT be overwritten. Specifying the name of a pre-defined factory configuration will result in an error.

Return Type Not Applicable

Default Not Applicable

Examples `path.StoreConfiguration(2) "myMixer"`

C++ Syntax HRESULT StoreConfiguration(long channelNum, BSTR configName);

Interface IPathConfigurationManager

Last modified:

Dec.12, 2006 MX New Command

StoreConfiguration Method

Description Saves the path configuration currently associated with channel (ch) to the specified configuration name.

VB Syntax *pathMgr.StoreConfiguration ch, name*

Variable [\(Type\)](#) - Description

pathMgr [PathConfigurationManager](#) (object)

ch **(Long)** Channel number of the configuration to be saved.

name **(String)** Configuration name. Factory configurations can NOT be overwritten. Specifying the name of a pre-defined factory configuration will result in an error.

Return Type Not Applicable

Default Not Applicable

Examples `path.StoreConfiguration(2) "myMixer"`

C++ Syntax HRESULT StoreConfiguration(long channelNum, BSTR configName);

Interface IPathConfigurationManager

Last Modified:

14-Dec-2006 MX New topic

StringToNACalClass Method

Description Converts the returned strings from [GetStandardsList](#) into the enumeration (NACalClass) and the port numbers required for [PutStandard](#) and [GetStandard](#) methods that transmit data in and out of the Cal Set.

Learn more about [reading and writing Cal data using COM](#)

VB Syntax *CalSet*.**StringToNACalClass** (*list*, *std*, *rcv*, *src*)

Variable [\(Type\)](#) - **Description**

CalSet **(object)** - A Cal Set object

list **(string)** - a string containing the textual description of the standard.

std **(enum NACalClass)** Choose from:

1 - naClassA

2 - naClassB

3 - naClassC

4 - naClassD

5 - naClassE

6 - naReferenceRatioLine

7 - naReferenceRatioThru

SOLT Standards

1 - naSOLT_Open

2 - naSOLT_Short

3 - naSOLT_Load

4 - naSOLT_Thru

5 - naSOLT_Isolation

TRL Standards

1 - naTRL_Reflection

2 - naTRL_Line_Reflection

3 - naTRL_Line_Tracking

4 - naTRL_Thru

5 - naTRL_Isolation

rcv **(long)** - port number of the receiver

src **(long)** - port number of the source

Return Type Not Applicable

Default Not Applicable

Examples `guid = CalSet.StringToNACalClass(list, std, rcv, src)`

C++ Syntax HRESULT StringtoNACalClass (BSTR* str, NACalClass* item, long *rcv, long *src);

Interface ICalSet

StringToNAErrorTerm2 Method

Description Converts the returned strings from [GetErrorTermList](#) into the enumeration (NAErrorTerm2) and the port numbers required for [PutErrorTerm](#) and [GetErrorTerm](#) methods that transmit data in and out of the Cal Set.

Learn more about [reading and writing Cal data using COM](#)

VB Syntax *Cal Set*.**StringToNAErrorTerm2** (*list, eterm, rcv, src*)

Variable [\(Type\)](#) - **Description**

Cal Set **(object)** - A Cal Set object

list **(string)** - a string containing the textual description of the error term.

eterm **(enum As NAErrorTerm2)**. Choose from:

0 - naET_Directivity (rcv = src)
 1 - naET_SourceMatch (rcv = src)
 2 - naET_ReflectionTracking (rcv = src)
 3 - naET_TransmissionTracking (rcv != src)
 4 - naET_LoadMatch (rcv != src)
 5 - naET_Isolation (rcv != src)

rcv **(long)** - port number of the receiver

src **(long)** - port number of the source

Return Type Not Applicable

Default Not Applicable

Examples `CalSet.StringToNAErrorTerm2 str, term, rcv, src`

C++ Syntax HRESULT StringToNAErrorTerm2 (BSTR* str, NAErrorTerm2* item, long *rcv, long *src);

Interface ICalSet

TestsetCatalog Method

Description Returns a list of supported testsets.

VB Syntax `data = Tsets.TestsetCatalog`

Variable [\(Type\)](#) - Description

`data` **(variant array)** - Variable to store the returned data.

`Tsets` **(object)** - An [ExternalTestSets](#) collection

Return Type Variant

Default Not Applicable

Examples `value = Tsets.TestsetCatalog`

[C++ Syntax](#) HRESULT TestsetCatalog (VARIANT* Data);

Interface IExternaTestSets

UserPreset Method

Description	Performs a User Preset. There must be an active User Preset state file (see UserPresetLoadFile and UserPresetSaveState) or an error will be returned. Regardless of the state of the User Preset Enable checkbox, the app.Preset command will always preset the PNA to the factory preset settings, and app.UserPreset will always perform a User Preset.
VB Syntax	<i>app</i> .UserPreset
Variable	(Type) - Description
<i>app</i>	An Application (object)
Return Type	Not Applicable
Default	Not Applicable
Examples	<code>app.UserPreset</code>
C++ Syntax	HRESULT UserPreset()
Interface	IApplication6

UserPresetLoadFile Method

Description	<p>Loads an existing instrument state file (.sta or .cst) to be used for User Preset. Subsequent execution of app.UserPreset will cause the PNA to assume this instrument state.</p> <p>Regardless of the state of the User Preset Enable checkbox, the app.Preset command will always preset the PNA to the factory preset settings, and app.UserPreset will always perform a User Preset.</p>
VB Syntax	<code>app.UserPresetLoadFile (file)</code>
Variable	(Type) - Description
<i>app</i>	An Application (object)
<i>file</i>	(String) Full path, name, and extension of the file to be loaded.
Return Type	Not Applicable
Default	Not Applicable
Examples	<pre>app.UserPresetLoadFile ("C:\Program Files\Agilent\Network Analyzer\Documents\10MHzto20GHz.sta")</pre>
C++ Syntax	HRESULT UserPresetLoadFile (BSTR bstrFile)
Interface	IApplication6

UserPresetSaveState Method

Description Saves the current instrument settings as UserPreset.sta. Subsequent execution of [app.UserPreset](#) will cause the PNA to assume this instrument state.

Regardless of the state of the [User Preset Enable](#) checkbox, the [app.Preset](#) command will always preset the PNA to the factory preset settings, and [app.UserPreset](#) will always perform a User Preset.

VB Syntax `app.UserPresetSaveState`

Variable [\(Type\)](#) - **Description**

app An [Application](#) (object)

Return Type Not Applicable

Default Not Applicable

Examples `app.UserPresetSaveState`

C++ Syntax HRESULT UserPresetSaveState()

Interface IApplication6

WriteData Method

Description	Writes a 13-bit value to the specified address using the AD0 through AD12 lines of the external test set connector. The PNA generates the appropriate timing signals. It automatically controls timing signals LDS, LAS and RLW to strobe the address, then the data, to the external test set. See the timing diagram for Address and Data I/O read.
VB Syntax	<i>ExtIO.WriteData (address) = value</i>
Variable	(Type) - Description
<i>ExtIO</i>	(object) - An External IO object
<i>address</i>	(variant) - Address to be written to.
<i>value</i>	(variant) - 13-bit word to write
Return Type	Not Applicable
Default	Not Applicable
Examples	<code>ExtIO.WriteData (15) = 12</code>
C++ Syntax	HRESULT WriteData(VARIANT Address, VARIANT Data);
Interface	IHWExternaTestSetIO

WriteRaw Method

Description Writes a 16-bit value to the external test set connector lines AD0 - AD12, RLW, LAS and LDS. The analyzer does NOT generate the appropriate timing signals. The user has control of all 16 lines using this write method.

Note: When RLW (pin25) is set to 1 (high) it causes lines AD0 - AD12 to float. It disables their output latches and sets the hardware for reading. LDS and LAS are not affected by this behavior.

Below is the format of data that is written with WriteRaw:

* This Output will float if RLW (bit-13) is set high

Pin	Bit	Signal name
22	0	AD0*
23	1	AD1*
11	2	AD2*
10	3	AD3*
9	4	AD4*
21	5	AD5*
20	6	AD6*
19	7	AD7*
6	8	AD8*
5	9	AD9*
4	10	AD10*
17	11	AD11*
3	12	AD12*
25	13	RLW
24	14	LDS
8	15	LAS

VB Syntax *ExtIO.WriteRaw value*

Variable [\(Type\)](#) - Description

ExtIO **(object)** - An External IO object

value **(variant)** - Data to be written

Return Type Not Applicable

Default Not Applicable

Examples `ExtIO.WriteRaw 12`

[C++ Syntax](#) HRESULT WriteRaw(VARIANT Output);

Interface IHWExternalTestSetIO

WriteSnpFileWithSpecifiedPorts Method

Description	<p>Note: This command replaces app.Save (.snp). This command is more explicit regarding the data to be saved, and works for PNAs with multiport test sets.</p> <p>Saves SnP data to the specified file. Learn more about SnP data.</p>
VB Syntax	<i>data</i> = <i>meas</i> . WriteSnpFileWithSpecifiedPorts <i>ports</i> , <i>filename</i>
Variable	(Type) - Description
<i>data</i>	(Variant) array to store the data.
<i>meas</i>	A Measurement (object)
<i>ports</i>	(Variant Array) One dimensional array containing a list of port numbers for which snp data is requested.
<i>filename</i>	<p>(string) - Full path, filename, and suffix to store the data.</p> <p>The suffix is not checked for accuracy. If saving 2 ports, specify "filename.s2p"; If saving 3 ports, specify "filename.s3p." and so forth.</p> <p>SnP data can be output using several data formatting options. See SnPFormat Property</p>
Return Type	Variant array - automatically dimensioned to the size of the data.
Default	Not Applicable
Examples	<pre>'This VBScript example can be pasted into a notepad file and run on the PNA as a macro. Learn how. Set pna = CreateObject("AgilentPnA835x.application") Set meas = pna.ActiveMeasurement 'List the port numbers for required data ports = Array(1,2,4) 'specify where to save the data filename="C:\Program Files\Agilent\Network Analyzer\Documents\MyData.s3p" meas.WriteSnpFileWithSpecifiedPorts ports,filename</pre>
C++ Syntax	HRESULT WriteSnpFileWithSpecifiedPorts(VARIANT portsToMeasure,BSTR filename);
Interface	IMeasurement7

Last modified:

9/18/06 MQ Added for multiport

OnCalEvent

Description Triggered by a calibration event. See a list of [CAL Events](#).

Note: Some Severe Events are also used as Error Messages

VB Syntax Sub *app_OnCalEvent*(ByVal *eventID* As Variant, ByVal *chanNum* As Variant, ByVal *measNum* As Variant)

Variable [\(Type\)](#) - Description

app An Application (**object**)

eventID Code number of the event which occurred

chanNum Channel Number of the event

measNum Measurement Number of the event

Return Type Not Applicable

Default Not Applicable

Examples

```
Sub pna_OnCalEvent(ByVal eventID As Variant, ByVal  
channelNumber As Variant, ByVal measurementNumber As Variant)  
'  
MsgBox ("A Calibration event has occurred")  
End Sub
```

C++ Syntax HRESULT OnCalEvent(VARIANT eventID, VARIANT channelNumber, VARIANT measurementNumber)

Interface IApplication

Selected Cal Events

512 [naEventID_CAL_QUESTIONABLE](#)

513 [naEventID_CAL_STD_NEEDED](#)

514 [naEventID_CAL_STATE_NOT_HW_COMPATIBLE](#)

515 [naEventID_CAL_REQUIRED](#)

516 [naEventID_CAL_CORRECTION_TURNED_OFF](#)

517 [naEventID_CAL_CORRECTION_TURNED_OFF_INTERPOLATION_OFF](#)

518 [naEventID_CAL_CORRECTION_RESTORED](#)

519 [naEventID_CAL_CORRECTION_TURNED_OFF_FREQRANGE_EXCEEDED](#)

520 [naEventID_CAL_CALTYPE_SET_TO_NONE](#)
521 [naEventID_CAL_CORRECTION_TURNED_OFF_NOT_AN_SPARAM](#)
524 [naEventID_SOURCE_POWER_CAL_COMPLETED](#)
592 [naEventID_SOURCE_POWER_CAL_NOT_PRESENT](#)
593 [naEventID_SOURCE_POWER_CAL_NOT_COMPLETE](#)
594 [naEventID_SOURCE_POWER_CAL_REMOVE_TRACE](#)
595 [naEventID_SOURCE_POWER_CAL_REMOVE_MEAS](#)
596 [naEventID_SOURCE_POWER_CAL_POWER_CHANGED](#)
598 [naEventID_INSUFFICIENT_SLIDE_MOVEMENT](#)
613 [naEventID_CALSET_NOT_FOUND](#)
615 [naEventID_CALSET_CREATED](#)
617 [naEventID_CALSET_FILE_NOT_VALID](#)
634 [naEventID_CALSET_LOAD_FAILED](#)
635 [naEventID_CALSET_SAVE_FAILED](#)
636 [naEventID_CALSET_DELETED](#)
637 [naEventID_CALSET_FILE_NOT_COMPATIBLE](#)
639 [naEventID_NEW_CALSET_FILE_CREATED](#)
640 [naEventID_CAL_SET_IN_USE](#)
644 [naEventID_CAL_COULD_NOT_TURN_ON](#)
693 [naEventID_ERROR_FIXTURING_S2PFILE_CANNOT_OPEN](#)
696 [naEventID_ERROR_FIXTURING_TURNED_OFF](#)
701 [naEventID_MORE_THRU_PATHS_NEEDED](#)

See Also

[Errors and the SCPIStringParser Object](#)

Last modified:

Nov. 6, 2006 Added events

OnChannelEvent

Description	Triggered by a channel event.
VB Syntax	Sub <i>app_OnChannelEvent</i> (ByVal <i>eventID</i> As Variant, ByVal <i>chanNum</i> As Variant)
Variable	(Type) - Description
<i>app</i>	An Application (object)
<i>eventID</i>	Code number of the event which occurred
<i>chanNum</i>	Channel Number of the event
Return Type	Not Applicable
Default	Not Applicable
Examples	<pre>Sub pna_OnChannelEvent(ByVal eventID As Variant, ByVal channelNumber As Variant) If eventID=naEventID_CHANNEL_CREATED then MsgBox "Channel" + chanelNumber + "was created" End If End Sub</pre>
C++ Syntax	HRESULT OnChannelEvent(VARIANT eventID, VARIANT channelNumber)
Interface	IApplication

Selected Channel Events

- 1792 [naEventID_CHANNEL_SWEEP_COMPLETE](#)
- 1793 [naEventID_CHANNEL_TRIGGER_COMPLETE](#)
- 1796 [naEventID_SET_CHANNEL_DIRTY](#)
- 1797 [naEventID_CLEAR_CHANNEL_DIRTY](#)
- 1801 [naEventID_ALL_SWEEPS_COMPLETED_AND_PROCESSED](#)
- 1805 [naEventID_CHANNEL_CREATED](#)
- 1806 [naEventID_CHANNEL_DELETED](#)
- 1876 [naEventID_NO_SOURCE_ATTEN](#)
- 1879 [naEventID_FREQ_OFFSET_OVERRANGE_SO_TURNED_OFF](#)
- 1883 [naEventID_PORT_NUMBER_OUT_OF_RANGE](#)

See Also

[Errors and the SCPIStringParser Object](#)

Last modified:

March 2, 2007 Added channel create and delete

Nov. 6, 2006 Added events

OnDisplayEvent

Description Triggered by a display event.

VB Syntax Sub *app_OnDisplayEvent*(ByVal *eventID* As Variant, ByVal *winNum* As Variant, ByVal *traceNum* As Variant)

Variable [\(Type\)](#) - Description

app An Application (**object**)

eventID Code number of the event which occurred

winNum Window Number of the event

traceNum Trace Number of the event

Return Type Not Applicable

Default Not Applicable

Examples

```
Sub pna_OnDisplayEvent(ByVal eventID As Variant, ByVal  
windowNumber As Variant, ByVal traceNumber As Variant)  
MsgBox ("A Display event has occurred")  
End Sub
```

C++ Syntax HRESULT OnDisplayEvent(VARIANT eventID, VARIANT windowNumber, VARIANT traceNumber)

Interface IApplication

Selected Display Events

1541 [naEventID_PRINT_SETUP_FAILURE](#)

1542 [naEventID_PRINT_CANCELED](#)

See Also

[Errors and the SCPIStringParser Object](#)

Last modified:

Nov. 6, 2006 Added events

OnHardwareEvent

Description Triggered by a hardware event. See a list of [Hardware Events](#)

Note: Some Severe Events are also used as Error Messages

VB Syntax Sub *app*_**OnHardwareEvent**(ByVal *eventID* As Variant)

Variable [\(Type\)](#) - Description

app An Application (**object**)

eventID Code number of the event which occurred

Return Type Not Applicable

Default Not Applicable

Examples

```
Private Sub pna_OnHardwareEvent(ByVal eventID As Variant)
    MsgBox ("A Hardware event has occurred")
End Sub
```

C++ Syntax HRESULT OnHardwareEvent(VARIANT eventID)

Interface IApplication

Selected Hardware Events

848 [naEventID_PHASELOCK](#)

852 [naEventID_RFPOWEROFF](#)

853 [naEventID_RFPOWERON](#)

855 [naEventID_UNLEVELED](#)

857 [naEventID_OVERLOAD](#)

914 [naEventID_TRIGGER_REQUIRES_EDGE_LEVEL_TRIGGER](#)

915 [naEventID_TRIGGER_REQUIRES_TRIGGER_OUT](#)

See Also

[Errors and the SCPIStringParser Object](#)

Last modified:

Nov. 6, 2006 Added events

OnMeasurementEvent

Description Triggered by a measurement event.

VB Syntax Sub *app_OnMeasurementEvent*(ByVal *eventID* As Variant, ByVal *measNum* As Variant)

Variable [\(Type\)](#) - Description

app An Application (**object**)

eventID Code number of the event which occurred

measNum Measurement Number of the event

Return Type Not Applicable

Default Not Applicable

Examples

```
Private Sub pna_OnMeasurementEvent(ByVal eventID As Variant, ByVal
measurementNumber As Variant)

MsgBox ("A Measurement event has occurred")

End Sub
```

C++ Syntax HRESULT OnMeasurementEvent(VARIANT eventID, VARIANT measurementNumber)

Interface IApplication

Selected Measurement Events

1024 [naEventID_NO_VALID_MEMORY_TRACE](#)

1028 [naEventID_LIMIT_FAILED](#)

1029 [naEventID_LIMIT_PASSED](#)

1034 [naEventID_MEMORY_NOT_SAVED](#)

1035 [naEventID_SET_AVERAGE_COMPLETE](#)

1036 [naEventID_CLEAR_AVERAGE_COMPLETE](#)

1111 [naEventID_MARKER_BANDWIDTH_NOT_FOUND](#)

1112 [naEventID_PEAK_NOT_FOUND](#)

1113 [naEventID_TARGET_VALUE_NOT_FOUND](#)

See Also

[Errors and the SCPIStringParser Object](#)

Last modified:

Nov. 6, 2006 Added events

OnSCPIEvent

Description Triggered by a SCPI event.

Note: Some Severe Events are also used as Error Messages

VB Syntax Sub *app_OnSCPIEvent*(ByVal *eventID* As Variant)

Variable [\(Type\)](#) - Description

app An Application (**object**)

eventID Code number of the event which occurred

Return Type Not Applicable

Default Not Applicable

Examples

```
Private Sub pna_OnSCPIEvent(ByVal eventID As Variant)
    MsgBox ("A SCPI event has occurred")
End Sub
```

C++ Syntax HRESULT OnSCPIEvent(VARIANT eventID)

Interface IApplication

Selected SCPI Parser Events

1281 [naEventID NOTHING TO SAY](#)

1284 [naEventID SCPI_STATUS_BYTE_CHANGE](#)

1360 [naEventID BAD SCPI EXECUTE](#)

1375 [naEventID CALC_MEASUREMENT_SET_TO_NONE](#)

See Also

[Errors and the SCPIStringParser Object](#)

Last modified:

Nov. 6, 2006 Added events

OnSystemEvent

Description Triggered by a system event. See a list of [System Events](#), also known as general events.

See also [EnableSourceUnleveledEvents Property](#)

Note: Some Severe Events are also used as Error Messages

VB Syntax Sub *app*_**OnSystemEvent**(ByVal *eventID* As Variant)

Variable	(Type) - Description
----------	--------------------------------------

<i>app</i>	An Application (object)
------------	----------------------------------

<i>eventID</i>	Code number of the event which occurred
----------------	---

<i>chanNum</i>	Channel Number of the event
----------------	-----------------------------

Return Type Not Applicable

Default Not Applicable

Examples

```
Private Sub pna_OnSystemEvent(ByVal eventID As Variant)
MsgBox ("A System event has occured")
End Sub
```

C++ Syntax HRESULT OnSystemEvent(VARIANT eventID)

Interface IApplication

Selected System Events

2048 [naEventID_OPTION_NOT_INSTALLED](#)

2049 [naEventID_FEATURE_NOT_AVAILABLE](#)

2050 [naEventID_FEATURE_NOT_VALID](#)

2051 [naEventID_SAVEFILE_OK](#)

2063 [naEventID_RECALLFILE_SUCCESS](#)

2130 [naEventID_PRINTER_TROUBLE](#)

2133 [naEventID_TRIGGERDENIED](#)

2134 [naEventID_MACRO_FAILED](#)

2144 [naEventID_NO_LICENSE](#)
2163 [naEventID_PRESET](#)
2166 [naEventID_TRIGGERFAILED](#)

See Also

[Errors and the SCPIStringParser Object](#)

Last modified:

Nov. 6, 2006 Added events

OnUserEvent

Description Reserved for future use.

VB Syntax Sub app_**OnUserEvent**

Reading Cal Set Data using COM

This example iterates over the entire collection of Cal Sets that currently reside in the PNA. It reads the entire list of error term strings from each Cal Set and queries the data for each term. It then does the same for the standards data.

Learn more about [Reading and Writing Calibration data using COM](#).

Learn more about [Cal Sets](#).

[See Other COM Example Programs](#)

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save on the PNA hard drive as CalSets.vbs. [Learn how to setup and run the macro](#).

```
Dim pna
Dim cset
Dim calsets

' create the pna object
' to run on a remote PC, substitute 'name' for the full computer name of your PNA
' to run as a macro on the PNA, remove , "name"
Set pna = CreateObject("AgilentPNA835x.Application", "name")
wscript.echo pna.IDString
' obtain the calset collection
Set calsets = pna.GetCalManager.calsets

' loop thru the calsets
Dim c
For c = 1 To calsets.count
Set cset = calsets.Item(c)

' wscript.echo prints values to a message box
wscript.echo "calset = ", cset.GetGUID, cset.Description

' iterate through error terms data
Dim vterms
vterms = cset.GetErrorTermList2(0, "")
if (Not IsEmpty(vterms)) then
For i = LBound(vterms) To UBound(vterms)
wscript.echo vterms(i)
vdata = cset.GetErrorTermByString(0,vterms(i) )
wscript.echo vdata(1,0), vdata(1,1)
Next
end if

' iterate through standards data
vterms = cset.GetStandardList2("")
if (Not IsEmpty(vterms)) then
For i = LBound(vterms) To UBound(vterms)
```

```
wscript.echo vterms(i)
vdata = cset.GetStandardByString( vterms(i) )
wscript.echo vdata(1,0), vdata(1,1)
Next
end if
Next
```

Getting Trace Data from the Analyzer

This Visual Basic program:

- Retrieves Scalar Data from the Analyzer and plots it.
- Retrieves Paired Data from the Analyzer and plots it.
- Retrieves Complex Data from the Analyzer and plots it.

To use this code, prepare a form with the following:

- Two MSCharts named **MSChart1** and **MSChart2**
- Three buttons named **GetScalar**, **GetPaired**, **GetComplex**

Note: You can get MSChart in Visual Basic by clicking **Project / Components / Microsoft Chart Control**

```
'Put this in a module
Public dlocation As NADataStore
Public numpts As Long
Public fmt As NADataFormat
Public app As Application
Public measData As IArrayTransfer
Public chan As Channel

Sub Form_Load()
'Change analyzerName to your analyzer's full computer name
Set app = CreateObject("AgilentPNA835x.Application", "analyzerName")

Set measData = app.ActiveMeasurement
Set chan = app.ActiveChannel

'To pick a location to get the data from remove the comment from one of these
dlocation = naRawData
'dlocation = naCorrectedData
'dlocation = naMeasResult
'dlocation = naRawMemory
'dlocation = naMemoryResult

'setup MSChart1 and MSChart2
'right click on the chart and select:
' - line chart
' - series in rows
End Sub

Sub GetComplex_Click()
ReDim Data(numpts) As NAComplex
Dim Real(201) As Single
Dim Imag(201) As Single
numpts = chan.NumberOfPoints
```

```

'You cannot change the format of Complex Data
Call trigger
'get data
measData.GetNAComplex dlocation, numpts, Data(0)
'plot data
Dim i As Integer

For i = 0 To numpts - 1
    Real(i) = Data(i).Re
    Imag(i) = Data(i).Im
Next i
MSChart1 = Real()
MSChart2.Visible = True
MSChart2 = Imag()
Call Sweep
End Sub

```

```

Sub GetPaired_Click()
ReDim Real(numpts) As Single
ReDim Imag(numpts) As Single
numpts = chan.NumberOfPoints

```

```

' To pick a format, remove the comment from one of these
fmt = naLogMagPhase
'fmt = naLinMagPhase
Call trigger
'Get data
measData.getPairedData dlocation, fmt, numpts, Real(0), Imag(0)
'Plot Scalar
MSChart1 = Real()
MSChart2.Visible = True
MSChart2 = Imag()
Call Sweep
End Sub

```

```

Sub GetScalar_Click()
ReDim Data(numpts) As Single

```

```

numpts = chan.NumberOfPoints
'To pick a format remove the comment from one of these
fmt = naDataFormat_LogMag
'fmt = naDataFormat_LinMag
'fmt = naDataFormat_Phase
'fmt = naDataFormat_Delay
'fmt = naDataFormat_Real
'fmt = naDataFormat_Imaginary
Call trigger
'Get data
measData.GetScalar dlocation, fmt, numpts, Data(0)
'Plot Data

```

```
MSChart1 = Data()  
MSChart2.Visible = False  
Call Sweep  
End Sub
```

```
Sub trigger()
```

```
'The analyzer sends continuous trigger signals  
app.TriggerSignal = naTriggerInternal  
'The channel will only accept one, then go into hold  
'Sync true will wait for the sweep to complete
```

```
sync=True
```

```
chan.Single sync  
End Sub
```

```
Sub Sweep()  
'The channel goes back to accepting all triggers  
chan.Continuous  
End Sub
```


Perform a Guided Calibration using COM

This example uses the [GuidedCalibration](#) interface to perform either a 2-port or 4-port calibration.

Learn more about [Reading and Writing Calibration data using COM](#).

[See Other COM Example Programs](#)

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save on the PNA hard drive as Calibrate.vbs. [Learn how to setup and run the macro](#).

```
Set pna = CreateObject("AgilentPNA835x.Application")
Set calMgr = pna.GetCalManager
Set guidedCal = calMgr.GuidedCalibration
Set chan = pna.ActiveChannel
chanNum = chan.ChannelNumber
' Initialize guided cal to be performed on the active channel.
' The boolean argument of True indicates to store the cal only
' in the channel's calibration register. If instead you wish
' to create a new calset that the new cal will get stored to,
' comment out this next line and uncomment the three lines below it.
guidedCal.Initialize chanNum, True
'Set calset = calMgr.CreateCalSet(chanNum)
'chan.SelectCalSet calset.GetGUID, True
'guidedCal.Initialize chanNum, False

' To perform 2-port cal, Uncomment the following
' Then comment the 4-port cal

' Do 2-port cal
' TwoPortGuidedCal

' Do 4-port cal
FourPortGuidedCal

Sub TwoPortGuidedCal()
' Select the connectors
guidedCal.ConnectorType(1) = "APC 3.5 female"
guidedCal.ConnectorType(2) = "APC 3.5 male"
For i = 3 To pna.NumberOfPorts
guidedCal.ConnectorType(i) = "Not used"
Next
value = MsgBox("Connectors defined for Ports 1 and 2")
' Select the Cal Kit for each port being calibrated.
guidedCal.CalKitType(1) = "85052D"
guidedCal.CalKitType(2) = "85052D"
```

```

' To use an ECal module instead, comment out the above two lines
' and uncomment the following two lines.
' Replace N4691-60004 with your own ECAL model followed by 'ECal'.
' Your ECal module must already be connected to a PNA USB port.
'guidedCal.CalKitType(1) = "N4691-60004 ECal"
'guidedCal.CalKitType(2) = "N4691-60004 ECal"
value = MsgBox("Cal kits defined for Ports 1 and 2")
' Initiate the calibration and query the number of steps
numSteps = guidedCal.GenerateSteps
' Measure the standards, compute and apply the cal
MeasureAndComplete(numSteps)
End Sub

Sub FourPortGuidedCal()
' Select the connectors
guidedCal.ConnectorType(1) = "APC 3.5 female"
guidedCal.ConnectorType(2) = "APC 3.5 female"
guidedCal.ConnectorType(3) = "APC 3.5 female"
guidedCal.ConnectorType(4) = "APC 3.5 female"
' If a PNA which has more than 4 ports
For i = 5 To pna.NumberOfPorts
guidedCal.ConnectorType(i) = "Not used"
Next
value = MsgBox("Connectors defined for Ports 1 to 4")
' Select the Cal Kit for each port being calibrated.
guidedCal.CalKitType(1) = "85052D"
guidedCal.CalKitType(2) = "85052D"
guidedCal.CalKitType(3) = "85052D"
guidedCal.CalKitType(4) = "85052D"
' To use an ECal module instead, comment out the above four lines
' and uncomment the following four lines.
' Replace N4431-60003 with your own ECAL model followed by 'ECal'.
' Your ECal module must already be connected to a PNA USB port.
'guidedCal.CalKitType(1) = "N4431-60003 ECal"
'guidedCal.CalKitType(2) = "N4431-60003 ECal"
'guidedCal.CalKitType(3) = "N4431-60003 ECal"
'guidedCal.CalKitType(4) = "N4431-60003 ECal"
value = MsgBox("Cal kits defined for Ports 1 to 4")
' Initiate the calibration
guidedCal.GenerateSteps
' If your selected cal kit is not a 4-port ECal module which can
' mate to all 4 ports at once, then you may want to choose which
' thru connections to measure for the cal. You must measure at
' least 3 different thru paths for a 4-port cal (for greatest
' accuracy you can choose to measure a thru connection for all 6
' pairings of the 4 ports). If you omit this command, the default
' is to measure from port 1 to port 2, port 1 to port 3, and
' port 1 to port 4. For this example we select to measure
' from port 1 to port 2, port 2 to port 3, and port 2 to port 4.
portList = Array(1,2,2,3,2,4)
guidedCal.ThruPortList = portList
' Re-generate the connection steps to account for the thru changes

```

```

numSteps = guidedCal.GenerateSteps
' Measure the standards, compute and apply the cal
MeasureAndComplete(numSteps)
End Sub

Sub MeasureAndComplete(ByVal numSteps)
value = MsgBox("Number of steps is " + CStr(numSteps))

' Measure the standards
'The following series of commands shows that standards
'can be measured in any order. These steps acquire
'measurement of standards in reverse order.
'It is easiest to iterate through standards using
'a For-Next Loop.
For i = NumSteps To 1
step = "Step " + CStr(i) + " of " + CStr(numSteps)
strPrompt = guidedCal.GetStepDescription(i)
value = MsgBox(strPrompt, vbOKOnly, step)
guidedCal.AcquireStep i
Next

' Conclude the calibration
guidedCal.GenerateErrorTerms
MsgBox ("Cal is done!")
End Sub

```

Last Modified:

20-Jan-2007 Added any order to steps.

Perform an ECal using COM

This example uses the [GuidedCalibration](#) interface to perform a 2-port ECal calibration.

Learn more about [Reading and Writing Calibration data using COM](#).

[See Other COM Example Programs](#)

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save on the PNA hard drive as ECal.vbs. [Learn how to setup and run the macro](#).

```
Set pna = CreateObject("AgilentPNA835x.Application")
Set calMgr = pna.GetCalManager
Set guidedCal = calMgr.GuidedCalibration
Set chan = pna.ActiveChannel
chanNum = chan.ChannelNumber
' Initialize guided cal to be performed on the active channel.
' The boolean argument of True indicates to create a new calset
guidedCal.Initialize chanNum, True
' To perform 3-port cal, Uncomment the following
' Then comment the 2-port cal

' Do 2-port cal
TwoPortGuidedCal

' Do 3-port cal
' ThreePortGuidedCal

Sub TwoPortGuidedCal()
'Change the following to match the connectors on your ECal module
guidedCal.ConnectorType(1) = "APC 3.5 female"
guidedCal.ConnectorType(2) = "APC 3.5 female"
For i = 3 To pna.NumberOfPorts
guidedCal.ConnectorType(i) = "Not used"
Next
value = MsgBox("Connectors defined for Ports 1 and 2")
' Select the ECal module for each port being calibrated.
' Replace N4691-60004 with your own ECAL model followed by 'ECal'.
' Your ECal module must already be connected to a PNA USB port.

guidedCal.CalKitType(1) = "85092-60010 ECal"
guidedCal.CalKitType(2) = "85092-60010 ECal"

value = MsgBox("ECal Module defined for Ports 1 and 2")
' Initiate the calibration and query the number of steps
numSteps = guidedCal.GenerateSteps
' Measure the standards, compute and apply the cal
MeasureAndComplete(numSteps)
End Sub
```

```

Sub ThreePortGuidedCal()
    'Change the following to match the connectors on your ECal module
    guidedCal.ConnectorType(1) = "APC 3.5 female"
    guidedCal.ConnectorType(2) = "APC 3.5 female"
    guidedCal.ConnectorType(3) = "APC 3.5 female"

    ' Select the ECal module for each port being calibrated.
    ' Replace N4691-60003 with your own ECAL model followed by 'ECal'.
    ' Your ECal module must already be connected to a PNA USB port.
    guidedCal.CalKitType(1) = "N4431-60003 ECal"
    guidedCal.CalKitType(2) = "N4431-60003 ECal"
    guidedCal.CalKitType(3) = "N4431-60003 ECal"

    value = MsgBox("Cal kits defined for Ports 1 to 3")
    ' Initiate the calibration
    numSteps = guidedCal.GenerateSteps
    ' Measure the standards, compute and apply the cal
    MeasureAndComplete(numSteps)
End Sub

Sub MeasureAndComplete(ByVal numSteps)
    value = MsgBox("Number of steps is " + CStr(numSteps))
    ' Measure the standards
    For i = 1 To numSteps
        step = "Step " + CStr(i) + " of " + CStr(numSteps)
        strPrompt = guidedCal.GetStepDescription(i)
        value = MsgBox(strPrompt, vbOKOnly, step)
        guidedCal.AcquireStep i
    Next

    ' Conclude the calibration
    guidedCal.GenerateErrorTerms
    MsgBox ("Cal is done!")
End Sub

```

Perform a Source Power Cal using COM

This program can be run in either Visual Basic 6 or as a VBScript program. The PNA can run *.vbs programs as [macros](#).

This program demonstrates:

- Performing a source power calibration of Port 2 for Channel 1.
- Reading the calibration data.

Learn more about [Power Calibrations](#)

See an example that [Uploads a Source Power Cal](#)

[See Other COM Example Programs](#)

To run this program, you need:

- One of the following power meters connected to the PNA through GPIB: E4416A, E4417A, E4418A/B, E4419A/B, 437B, 438A, EPM-441A, EPM-442A

Note: If your power meter is other than these, you can [create your own Power Meter Driver](#) using our template.

- Your PC and PNA both connected to a LAN (for communicating with each other).

To make this program work in VBS, save the following code in a text editor file such as Notepad and save as *.vbs.

To make this program work in Visual Basic 6:

1. Create a new project
2. Click **Project, Add New Module**, click **Open**.
3. Paste the following code into the code window.
4. Delete the first two lines (comment and Main)
5. Click **Project, Properties**. Under **Startup Object**, select **Sub Main**
6. Click **Project, References**, and select the Agilent PNA Series Type Library.

```
' Run the Main subroutine
Main
Public Sub Main()
Dim PNA, chan, pwrcal                                ' PNA COM objects
Const naPowerMeter = 0, naPowerMeterAndReceiver = 1  ' enum NASourcePowerCalMethod
Const naPowerSensor_A = 0                            ' enum NAPowerAcquisitionDevice
Const naCorrectionValues = 0                         ' enum NASourcePowerCalBuffer
```

```

Const port = 2                ' PNA port #2 as source port
Const offset = 0              ' cal power offset value
Const bDisplay = True         ' whether to display data during
acquire
Dim stimulus, calvalues, strResult

' Instantiate our PNA COM objects
Set PNA = CreateObject("AgilentPNA835x.Application")
Set chan = PNA.Channels(1)
Set pwrCal = PNA.SourcePowerCalibrator

' Set the number of sweep points to 21 on Channel 1.
chan.NumberOfPoints = 21

' Specify the GPIB address of the power meter
' that will be used in performing the calibration.
pwrCal.PowerMeterGPIBAddress = 13

' Turn use of the loss table OFF (this assumes there is
' virtually no loss in the RF path to the power sensor
' due to a splitter, coupler or adapter).
pwrCal.UsePowerLossSegments = False

' Turn frequency checking OFF (so one power sensor is used for the entire cal
' acquisition sweep regardless of frequency span).
pwrCal.UsePowerSensorFrequencyLimits = False

' Specify a nominal power accuracy tolerance (IterationsTolerance) in dB for the
' calibration, and the maximum number of iterations to adjust power at each point,
' attempting to achieve within tolerance of the desired power. If at any stimulus
' point the power fails to reach within the set tolerance of the desired power
' after the maximum number of iterations, the power at that point will be set to the
' value determined by the last iteration (the Source Power Cal dialog box will
' indicate the FAIL, but we can still apply the cal if desired when it's complete).
' Each iteration is based upon a SETTLED power reading (see comments preceding the
' next two properties below).
pwrCal.IterationsTolerance = 0.1
pwrCal.MaximumIterationsPerPoint = 3

' The worst-case window of power uncertainty (for a calibration which meets
' tolerance) is the sum of the iteration tolerance and the power meter settling
' tolerance (which is described below).
' At each stimulus point, the PNA takes power meter readings and determines when
' they have settled by comparing the magnitude difference between consecutive
' readings versus a nominal dB tolerance limit (ReadingsTolerance) on that magnitude
' difference. When consecutive readings are within tolerance of each other, or
' if they are not within tolerance but we've taken a maximum number of readings
' (ReadingsPerPoint), the PNA does a weighted average of the readings taken at that
' stimulus point and that is considered our settled power reading.
pwrCal.ReadingsTolerance = 0.1
pwrCal.ReadingsPerPoint = 5

```

```

' Setup of information pertaining to this specific cal acquisition. Includes the
' method (type of devices) that will be used to perform the cal -- choose either
' naPowerMeter or naPowerMeterAndReceiver. naPowerMeterAndReceiver uses the power
' meter for the first iteration of each point and the PNA's reference receiver for
' subsequent iterations, so is much faster than using power meter only
naPowerMeter).
' But the power meter accounts for compression when calibrating at the output of an
' active device, whereas the reference receiver cannot unless it is coupled to the
' cal reference plane (on a PNA which allows direct access to the receivers).
' 'offset' specifies if the cal power level is offset (positive value for a gain,
' negative value for a loss) from the PNA port power setting on the channel when
' no source power cal is active. This is to account for components between the PNA
' test port and cal reference plane. In this example, we will calibrate at the PNA
' test port, so there is no offset (it is zero).
' 'bDisplay' indicates whether to display the source power cal dialog during the
' source power cal acquisition (the dialog will chart the corrected power readings).
pwrCal.SetCalInfo2 naPowerMeter, chan.ChannelNumber, port, offset, bDisplay

' Perform synchronous source power cal acquisition sweep using the sensor attached
' to Channel A of the power meter. This assumes that the power sensor is already
' connected to Port 2 of the PNA.
pwrCal.AcquirePowerReadings naPowerSensor_A, True

' Conclude the calibration. This applies the cal data to PNA channel memory,
' and turns the correction ON for Port 2 on Channel 1, but does NOT save the
' calibration.
pwrCal.ApplyPowerCorrectionValues

' At this point, if you choose to save the instrument state as a ".CST" file,
' the calibration will be saved with the instrument state in that file.
' Read the stimulus values from Channel 1.
stimulus = chan.GetAxisValues

' Read the source power correction data.
calvalues = chan.getSourcePowerCalDataEx(naCorrectionValues, port)

' Print the data using a message box (here, Chr returns the ASCII characters
' for Tab (9) and Linefeed (10)).
strResult = "Stimulus" & Chr(9) & Chr(9) & "Cal Value" & Chr(10)
For i = 0 To UBound(stimulus)
strResult = strResult & stimulus(i) & Chr(9) & calvalues(i) & Chr(10)
Next
MsgBox strResult
End Sub

```


Perform an Unguided Cal using COM

This example uses the [ICalibrator](#) interface to do the following:

- perform a two port calibration
- retrieve the error term data
- retrieve the standard data (cal acquisition data)

Learn more about [Reading and Writing Calibration data using COM](#).

[See Other COM Example Programs](#)

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save on the PNA hard drive as Calibrate.vbs. [Learn how to setup and run the macro.](#)

```
dim pna
' To run from an external PC, substitute your PNA Name and use the following
command.
' set pna = CreateObject("AgilentPNA835x.Application", "PNA Name")
set pna = CreateObject("AgilentPNA835x.Application")
dim calibrator
set calibrator=pna.activechannel.calibrator

wscript.echo "setcalinfo for two port cal"
calibrator.setcalinfo 5,1, 2

' only have one set of standards
calibrator.Simultaneous2PortAcquisition = false

'first acquire forward reflection standards, then reverse
dim p
for p = 1 to 2

if (p = 1) then
calibrator.AcquisitionDirection = 0
else
calibrator.AcquisitionDirection = 1
end if

wscript.echo "connect open to port ", p
calibrator.acquirecalstandard 1

wscript.echo "connect short to port ", p
calibrator.acquirecalstandard 2
```

```

wscript.echo "connect load to port ", p
calibrator.acquirecalstandard 3

next

wscript.echo "connect a thru1"
calibrator.acquirecalstandard 4

'Optional - perform isolation
wscript.echo "connect loads to both ports"
calibrator.acquirecalstandard 5

wscript.echo "calculating"
calibrator.CalculateErrorCoefficients

'Calibration complete
' Now read error terms and standard data

dim termName
termName= Array("Directivity","SourceMatch","ReflectionTracking")
dim vardata

' iterate over error terms
dim t
for t = 0 to 2 ' per error term
for p = 1 to 2 ' per port
wscript.echo "Requesting ",termName(t),p,p
vardata = calibrator.GetErrorTerm( t, p, p)
next
next

' now get the path terms: iterator each one request
termName = Array("Isolation", "LoadMatch", "TransmissionTracking")
for t = 0 to 2

wscript.echo "Requesting Forward term",termName(t),1,2
vardata = calibrator.GetErrorTerm( t, 1,2)
wscript.echo "Requesting Reverse Term",termName(t),2,1
vardata = calibrator.GetErrorTerm( t, 2,1)
next

dim stdname
stdname= Array("", "Open", "Short", "Load", "Thru", "Isolation")

' iterate over the port standards
for t = 1 to 3
for p = 1 to 2
' request the standard term for each port of interest
wscript.echo "Requesting",stdname(t),p,p

vardata = calibrator.GetStandard( t, p, p)

```

```
next
next

' now get the path standards: iterator each one request
for t = 4 to 5

wscript.echo "Requesting Forward",stdname(t),1,2
vardata = calibrator.GetStandard( t, 1,2)

wscript.echo "Requesting Reverse",stdname(t),2,1
vardata = calibrator.GetStandard( t, 2,1)

next
```

Perform an Unknown Thru or TRL Cal

The following program performs either a 2-port SOLT Unknown Thru Cal or a 2-port TRL Cal. The 85052C Cal Kit used in this program contains both types of standards. This program can be run on 2-port or 4-port PNAs. When run on a multiport (4 or more ports) PNA, which does not have a reference receiver per port, a [Delta Match Cal](#) is required. See example of Delta Match Cal.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Unknown.vbs. [Learn how to setup and run the macro.](#)

```
PerformUnknownThruOrTRLCal
Sub PerformUnknownThruOrTRLCal()
' Create / Get the PNA application.
Set app = CreateObject("AgilentPNA835x.Application")
' Get the cal manager object
Set calMgr = app.GetCalManager
' Get the guided cal object
Set guidedCal = calMgr.GuidedCalibration
Set chan = app.ActiveChannel
chanNum = chan.ChannelNumber

' Initialize guided cal to be performed on the active channel.
' The boolean argument of True specifies the creation of a new calset
' for storing the new calibration.
guidedCal.Initialize chanNum, True

' Specify connectors for Ports 1 and 2
guidedCal.ConnectorType(1) = "APC 3.5 female"
guidedCal.ConnectorType(2) = "APC 3.5 male"

' If your PNA has more than 2 ports, uncomment one or both of
' these next two lines, to explicitly specify this is
' just a 2-port cal.
'guidedCal.ConnectorType(3) = "Not used"
'guidedCal.ConnectorType(4) = "Not used"

' Specify cal kit for Ports 1 and 2
guidedCal.CalKitType(1) = "85052C"
guidedCal.CalKitType(2) = "85052C"

' Since the 85052C cal kit contains SOLT standards and also TRL
' standards, these next lines determine whether the cal becomes
' unknown thru (SOLT), or TRL.
' Specify cal and Thru method
guidedCal.PathCalMethod (1,2) = "SOLT"
guidedCal.PathThruMethod (1,2) = "Undefined Thru"

' To set up the cal as TRL, comment the previous line and uncomment this next line.
' The Thru method is set by default.
guidedCal.PathCalMethod (1,2) = "TRL"
```

```

' Initiate the calibration and query the number of steps
numSteps = guidedCal.GenerateSteps
MsgBox "Number of steps is " + CStr(numSteps)

' Query the list of ports that need delta match
portList = guidedCal.PortsNeedingDeltaMatch
' If portList contains just one element and it's value is 0, then that indicates
' none of the ports being calibrated require delta match data.
' If each testport on the PNA has it's own reference receiver (R channel),
' then delta match is never needed, so portList will always be just 0.
lowerBound = LBound(portList)
If (UBound(portList) <> lowerBound) Or (portList(lowerBound) <> 0) Then
    ' Delta match data is required for at least one port.
    ' For this example, we assume a Global Delta Match Cal has previously been
    ' performed so the Global Delta Match CalSet exists.
    ' Supplying an empty string to ApplyDeltaMatchFromCalSet indicates to use
    ' the Global Delta Match CalSet.
    MsgBox "here"
    guidedCal.ApplyDeltaMatchFromCalSet ""
End If

' Measure the standards
For i = 1 To numSteps
    step = "Step " + CStr(i) + " of " + CStr(numSteps)
    strPrompt = guidedCal.GetStepDescription(i)
    retVal = MsgBox(strPrompt, vbOKCancel, step)
    If retVal = vbCancel Then Exit Sub
    guidedCal.AcquireStep i
Next

' Conclude the calibration
guidedCal.GenerateErrorTerms
MsgBox "Cal is done!"

End Sub

```

Perform Global Delta Match Cal

The following program performs a [Global Delta Match Calibration](#). This is required when performing an Unknown Thru cal or TRL cal on PNAs without a reference receiver for each test port. [See example](#).

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Delta.vbs. [Learn how to setup and run the macro](#).

```
Sub PerformGlobalDeltaMatchCal()  
    ' Create / Get the PNA application.  
    Set app = CreateObject("AgilentPNA835x.Application")  
    ' Get cal manager object  
    Set calMgr = app.GetCalManager  
    ' Get guided cal object  
    Set guidedCal = calMgr.GuidedCalibration  
  
    ' Initiate a Global Delta Match calibration, choosing connector and cal kit  
    numSteps = guidedCal.GenerateGlobalDeltaMatchSequence("APC 3.5 female", "85033D/E")  
    MsgBox "Number of steps is " + CStr(numSteps)  
  
    ' Measure the standards  
    For i = 1 To numSteps  
        step = "Step " + CStr(i) + " of " + CStr(numSteps)  
        strPrompt = guidedCal.GetStepDescription(i)  
        retVal = MsgBox(strPrompt, vbOKCancel, step)  
        If retVal = vbCancel Then Exit Sub  
        guidedCal.AcquireStep i  
    Next  
  
    ' Conclude the calibration  
    guidedCal.GenerateErrorTerms  
    MsgBox "Cal is done!"  
  
End Sub
```

Writing Cal Set Data using COM

This example creates a Cal Set and then writes data to the Cal Set.

Learn more about [Reading and Writing Calibration data using COM](#).

Learn more about [Cal Sets](#).

[See Other COM Example Programs](#)

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save on the PNA hard drive as CalSetsWrite.vbs. [Learn how to setup and run the macro](#).

```
dim pna
dim v
Set pna=CreateObject("AgilentPNA835x.Application")
InitPhonyData
PutPhonyData
' This sub creates phony data
Sub InitPhonyData()
Dim i
Dim numpts
wscript.echo "init phony"
numpts = pna.ActiveChannel.NumberOfPoints
ReDim v(numpts - 1, 1)
For i = 0 To numpts - 1
v(i, 0) = i
v(i, 1) = 0
Next
End Sub

' This sub creates a Cal Set, then writes the phony data to it
Sub PutPhonyData()
Dim cmgr
Dim cset
wscript.echo "putphony"
Set cmgr = pna.GetCalManager
Set cset = cmgr.CreateCalSet(1)
cset.OpenCalSet naCalType_OnePort, 1
const directivity = 0
const sourcematch=1
const reflectiontracking =2
cset.putErrorTerm directivity,1, 1, v
cset.putErrorTerm sourcematch,1, 1, v
cset.putErrorTerm reflectiontracking ,1, 1, v
cset.CloseCalSet
cset.Description = "Phony One Port"
cset.save
```

End Sub

Upload a Source Power Cal using COM

This program can be run in either Visual Basic 6 or as a VBScript program. The PNA can run *.vbs programs as [macros](#).

This program demonstrates:

- Uploading a source power calibration of Port 2 for Channel 1.
- Reading the calibration data.

Learn more about [Power Calibrations](#)

[See Other COM Example Programs](#)

To run this program you need:

- Your PC and PNA both connected to a LAN (for communicating with each other).

To make this program work in VBS, save the following code in a text editor file such as Notepad and save as *.vbs.

To make this program work in Visual Basic 6:

1. Create a new project
2. Click **Project, Add New Module**, click **Open**.
3. Paste the following code into the code window.
4. Delete the first two lines (comment and Main)
5. Click **Project, Properties**. Under **Startup Object**, select **Sub Main**
6. Click **Project, References**, and select the Agilent PNA Series Type Library.

```
' Run the Main subroutine
Main
Public Sub Main()
Dim PNA, chan          ' PNA COM objects
Const naCorrectionValues = 0 ' enum NASourcePowerCalBuffer
Const port = 2         ' PNA port #2 as source port
Dim stimulus, calvalues
Dim power, calpower, strResult
' Instantiate our PNA COM objects
Set PNA = CreateObject("AgilentPNA835x.Application")
Set chan = PNA.Channels(1)
```

```

' Set the number of sweep points to 2 on Channel 1.
chan.NumberOfPoints = 2

' Ensure there's currently no source power cal on for this channel and port.
chan.SourcePowerCorrection(port) = False

' Specify if the cal power level is offset (positive value for a gain, negative
' value for a loss) from the PNA port power setting on the channel when
' no source power cal is active. This is to account for components
' between the PNA test port and cal reference plane.
' In this example, let's set up our calibration
' at the output of an amplifier with 15 dB gain.
chan.SourcePowerCalPowerOffset(port) = 15

' Send our source power correction data to the PNA. For purpose of simplicity
' in this example, we'll set up for no correction (0) at our start stimulus and
' 0.5 dB at our stop stimulus (recall that our sweep currently has just 2 points).
calvalues = Array(0, 0.5)
chan.putSourcePowerCalDataEx naCorrectionValues, port, calvalues

' Set the number of sweep points to 21 on Channel 1.
chan.NumberOfPoints = 21

' Read the fixed power level for this port on Channel 1.
power = chan.TestPortPower(port)

' Turn the source power cal on.
chan.SourcePowerCorrection(port) = True

' Again read the fixed power level for this port on Channel 1
' (with our calibration turned on, this should now include the 15 dB offset
' we indicated our power amplifier provides).
calpower = chan.TestPortPower(port)

' Read the stimulus values from Channel 1.
stimulus = chan.GetXAxisValues

' Read back the source power correction data, now interpolated for 21 points
calvalues = chan.getSourcePowerCalDataEx(naCorrectionValues, port)

' Print the data using a message box (here, Chr returns the ASCII characters
' for Tab (9) and Linefeed (10)).
strResult = "PNA port power = " & power & Chr(10)
strResult = strResult & "Power at reference plane = " & calpower & Chr(10) & hr(10)
strResult = strResult & "Stimulus" & Chr(9) & Chr(9) & "Cal Value" & Chr(10)
For i = 0 To UBound(stimulus)
strResult = strResult & stimulus(i) & Chr(9) & calvalues(i) & Chr(10)
Next
MsgBox strResult
End Sub

```

Upload Segment Table

This example program uses the [SetAllSegments_Method](#) to do the following:

- creates a 2-dimensional array (7 x 10) 7 data elements that define each segment x 10 segments
- uploads the data to the PNA

This program does not make sweep type = segment or show the segment table.

The comments indicate the order in which the segment elements are specified: Index 0 - segment state, Index 4 is IFBW, and so forth.

[See Other COM Example Programs](#)

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save on the PNA hard drive as *.vbs. [Learn how to setup and run the macro.](#)

```
' Create the application instance, and preset the application
Set app = CreateObject("AgilentPNA835x.Application")
app.Preset

Dim chan
Set chan = app.ActiveChannel
chan.sweepType = 4

Dim segs
Set segs = chan.Segments

Dim win
Set win = app.NAWindows(1)
win.ShowTable 2

' Multipliers
kHz = 1000
MHz = kHz*1000
GHz = MHz*1000
' Create segments from 10MHz to 3GHz
StartFreq = 10 * MHz
StopFreq = 3 * GHz
'*
'* Create 10 segments between StartFreq and StopFreq
'*
' Create a 2-D array of segments.
' 1st dimension is size 7 (6 is max index)
' to hold all the data per segment.
' 2nd dimension is size 10 (9 is max index)
```

```

' to hold 10 total segments.
Dim segdata(6, 9)
' Width of frequency segment, used below
SegmentWidth = (StopFreq-StartFreq)/10
' Fill up all 10 segments (indices 0 to 9) with data
For i = 0 To 9
' element 0=segment state (on or off)
segdata(0, i) = True

' element 1=Num Points in this segment
segdata(1, i) = 500

' element 2=Start Freq
segdata(2, i) = StartFreq + i * SegmentWidth

' element 3=Stop Freq
segdata(3, i) = segdata(2, i) + SegmentWidth

' element 4=IFBW
segdata(4, i) = 35000

' element 5=Dwell Time
segdata(5, i) = 0

' element 6=Power
segdata(6, i) = 0

Next

' Configure Independent segment settings
segs.IFBandwidthOption = 1
segs.SourcePowerOption = 1

' Push the segment data into the PNA's Active Channel
segs.SetAllSegments segdata

```

Create and Cal an SMC Measurement

This example creates and calibrates an SMC measurement. To run this example without modification you need the following:

- A Mixer setup file saved on the PNA: C:\Program Files\Agilent\Network Analyzer\Documents\Mixer\MyMixer.mxr.
- If the mixer file uses an external LO source, it must be connected and configured.
- An ECal module that covers the frequency range of the measurement.
- A power meter must be connected to the PNA using GPIB.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save on the PNA hard drive as SMC.vbs. Learn how to setup and run the macro.

[See Other COM Example Programs](#)

```
Dim App
Set App = CreateObject("AgilentPNA835x.Application")
Dim Meas
Set Meas = App.ActiveMeasurement
Meas.Delete

App.CreateCustomMeasurementEx 1, "Scalar Mixer/Converter","SC21"
'Other valid strings that can be specified to create a measurement with a parameter
'other than "SC21" are: "S11", "S22", "IPwr", and "OPwr"

Set Meas = App.ActiveMeasurement
'You can perform mixer setup here or
'recall a previous mixer setup from the PNA Hard drive
Dim mix
Set mix = Meas

'Load your own SMC measurement from the PNA Hard drive.
Meas.LoadFile "C:\Program Files\Agilent\Network
Analyzer\Documents\Mixer\MyMixer.mxr"

Dim CalMgr
Set CalMgr = App.GetCalManager
Dim SMC
Set SMC = CalMgr.CreateCustomCal("SMC")
SMC.Initialize 1, 1
SMC.Do2PortEcal = 1 'specify 0 for mechanical cal, 1 for ecal
'use Factory Characterization
SMC.ECALCharacterization(1) = 0
```

```

'only specify the ThruCalMethod if you have a non-insertable DUT
'SMC.ThruCalMethod = "Adapter Removal"
'If you specify Adapter Removal or Unknown Thru calibration
'then you need to specify the connector types of your DUT.
'Specify a connector that is the same type as your selected
'ECAL characterization. The characterization selected in
'this case is APC 2.4 female APC 2.4 male so the connectors
'specified for my DUT have to be APC 2.4 but can be any sex.
'SMC.ConnectorType(1) = "APC 2.4 female"
'SMC.ConnectorType(2) = "APC 2.4 female"
SMC.OmitIsolation = 1
SMC.AutoOrient = 1
' 1- forward, 2-reverse, or Both
SMC.CalibrationPort = "1"

Dim steps
steps = SMC.GenerateSteps
For i = 1 To steps
MsgBox SMC.GetStepDescription(i)
SMC.AcquireStep i
Next

Dim calset
calset = SMC.GenerateErrorTerms
Msgbox("SMC Cal Complete!")

```

Last Updated: June 13, 2006

Create and Cal a VMC Measurement

The following VMC calibration options are presented in **VB Script** examples:

- [Full 2-port ECAL](#)
- [For Mixer Characterization ONLY](#)
- [Mechanical Calibration](#)

Note: Each of the following programs load a mixer setup file.
Substitute "Mixer009.mxr" with your own .mxr file.

Full 2-port ECAL

```
Dim App
Set App = CreateObject("AgilentPNA835x.Application")
Dim Meas
Set Meas = App.ActiveMeasurement
Meas.Delete

App.CreateCustomMeasurementEx ( 2, "Vector Mixer/Converter", "VC21" )
'Other valid strings that can be specified to create a measurement with a parameter
other than "VC21" are: "S11", and "S22"
Set Meas = App.ActiveMeasurement

Meas.LoadFile "C:\\Program Files\\Agilent\\Network
Analyzer\\Documents\\mixer\\Mixer009.mxr"

Dim CalMgr
Set CalMgr = App.GetCalManager
Dim VMC
Set VMC = CalMgr.CreateCustomCal("VMC")
VMC.Initialize 1, 1
VMC.Do2PortEcal = 1
VMC.Do1PortEcal = 1
VMC.ECALCharacterization(1, 1) = 0 'APC 2.4 male APC 2.4 female
VMC.ECALCharacterization(1, 0) = 0
' could be Default, Flush Thru, Unknown Thru, or Adapter Removal
VMC.ThruCalMethod = "Adapter Removal"
VMC.OmitIsolation = 1
VMC.AutoOrient = 1
VMC.EcalOrientation1Port(1) = "A1"
VMC.CharacterizeMixerOnly = 0
VMC.LoadCharFromFile = 0
' to load mixer characterization from file, specify LoadCharFromFile = 1,
' then VMC.CharFileName = "C:\\Program Files\\Agilent\\Network
' Analyzer\\Documents\\YourFile.s2p" (specify your own .s2P filename)

VMC.ConnectorType(1) = "APC 2.4 female"
```

```
VMC.ConnectorType(2) = "APC 2.4 female"
```

```
Dim steps  
steps = VMC.GenerateSteps  
For i = 1 To steps  
MsgBox VMC.GetStepDescription(i)  
VMC.AcquireStep i  
Next
```

```
Dim calset  
calset = VMC.GenerateErrorTerms
```

Mixer Characterization ONLY

```
Dim App  
Set App = CreateObject("AgilentPNA835x.Application")  
Dim Meas  
Set Meas = App.ActiveMeasurement  
Meas.Delete  
app.CreateCustomMeasurementEx ( 2, "Vector Mixer/Converter", "VC21" )  
'Other valid strings that can be specified to create a measurement with a parameter  
other than "VC21" are: "S11", and "S22"
```

```
Set Meas = App.ActiveMeasurement  
Meas.LoadFile "C:\\Program Files\\Agilent\\Network  
Analyzer\\Documents\\mixer\\Mixer009.mxr"
```

```
Dim CalMgr  
Set CalMgr = App.GetCalManager  
Dim VMC  
Set VMC = CalMgr.CreateCustomCal("VectorMixerCal.VMCType")  
VMC.Initialize 1, 1  
VMC.Do2PortEcal = 1  
VMC.Do1PortEcal = 1  
VMC.ECALCharacterization(1, 1) = 0  
VMC.ECALCharacterization(1, 0) = 0  
VMC.ThruCalMethod = "Default"  
VMC.OmitIsolation = 1  
VMC.AutoOrient = 1  
VMC.EcalOrientation1Port(1) = "A1"  
VMC.CharacterizeMixerOnly = 1  
VMC.LoadCharFromFile = 0  
VMC.CharFileName = "C:\\Program Files\\Agilent\\Network  
Analyzer\\Documents\\MyMixerChar.s2p"
```

```
Dim steps  
steps = VMC.GenerateSteps  
For i = 1 To steps  
MsgBox VMC.GetStepDescription(i)  
VMC.AcquireStep i  
Next
```



```

Dim calset
calset = VMC.GenerateErrorTerms
MsgBox VMC.CharFileName

```

Mechanical Calibration

```

Dim App
Set App = CreateObject("AgilentPNA835x.Application")
Dim Meas
Set Meas = App.ActiveMeasurement
Meas.Delete
app.CreateCustomMeasurementEx ( 2, "Vector Mixer/Converter", "VC21" )
'Other valid strings that can be specified to create a measurement with a parameter
other than "VC21" are: "S11", and "S22"

Set Meas = App.ActiveMeasurement
Meas.LoadFile "C:\\Program Files\\Agilent\\Network
Analyzer\\Documents\\mixer\\Mixer009.mxr"
Dim CalMgr
Set CalMgr = App.GetCalManager
Dim VMC
Set VMC = CalMgr.CreateCustomCal("VectorMixerCal.VMCType")
VMC.Initialize 1, 1
VMC.Do2PortEcal = 1
VMC.Do1PortEcal = 0
VMC.ECALCharacterization(1, 1) = 0
VMC.ThruCalMethod = "Default"
VMC.OmitIsolation = 1
VMC.AutoOrient = 1
VMC.CharacterizeMixerOnly = 0
VMC.LoadCharFromFile = 0
VMC.ConnectorType(1) = "APC 3.5 female"
VMC.ConnectorType(2) = "APC 3.5 male"
VMC.CalKitType(1) = "85033D/E"
VMC.CalKitType(2) = "85033D/E"

Dim steps
steps = VMC.GenerateSteps
For i = 1 To steps
MsgBox VMC.GetStepDescription(i)
VMC.AcquireStep i
Next

Dim calset
calset = VMC.GenerateErrorTerms

```

Create an SMC Fixed Output Measurement with COM

This VBScript example creates a calibrated SMC fixed output measurement using a controlled LO. Then a single sweep is taken and data is retrieved.

Fixed output measurements are only supported on SMC (not VMC) measurements. Fixed output measurements require that an external LO source be sweeping and synchronized with the PNA source. FCA can perform this synchronization using the external source configuration settings. The fastest, and recommended, method of controlling the LO source is [Hardware List \(BNC\) triggering mode](#). However, in this mode, FCA channels will not respond to manual triggers. Therefore, the following example uses the "Single" [IChannel::Single](#) mechanism to trigger a sweep.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as SMC.vbs. [Learn how to setup and run the macro](#).

```
option explicit
dim app
set app = createobject("agilentpna835x.application")
app.preset

' Put the channel in hold (highly recommended)
app.ActiveChannel.Hold 1

' Delete the standard measurement
app.ActiveMeasurement.Delete

' Create an SC21 measurement
app.CreateCustomMeasurementEx 1, "Scalar Mixer/Converter","SC21"

' Set the number of points to 11
app.ActiveChannel.NumberOfPoints = 11

' Setup the mixer parameters for a swept LO, fixed output measurement

dim mixer
set mixer = app.ActiveMeasurement
mixer.InputStartFrequency = 200e6
mixer.InputStopFrequency = 700e6
mixer.LORangeMode(1) = 0 ' 0 = Swept mode
mixer.OutputFixedFrequency = 3.4e9
mixer.InputPower = -17
mixer.LOPower(1) = 10

' The CALC method calculates the LO frequency from the other parameters,
' It also applies ALL mixer parameters to the channel.
mixer.Calculate 3 ' Calculate the LO range

' Create an S11 in the same channel
app.CreateCustomMeasurementEx 1, "Scalar Mixer/Converter","S11"
dim S11Meas
set S11Meas = app.ActiveMeasurement
```

```

' Create an IPwr in the same channel
app.CreateCustomMeasurementEx 1, "Scalar Mixer/Converter","S22"

' Create an OPwr in the same channel
app.CreateCustomMeasurementEx 1, "Scalar Mixer/Converter","OPwr"

' Perform a single sweep synchronously.
app.ActiveChannel.Single 1
function ToString(complexDataArray)
dim dataAsString
dim point
for point = 0 to UBound(data)
dataAsString = dataAsString & "(" & data(point,0) & "," & data(point,1) & ") "
next
ToString = dataAsString
end function

' Retrieve the SC21 data
dim data
'Get the calibrated real/imaginary values
data = mixer.GetData(1,3)
wscript.echo ToString(data)

' Retrieve the S11 data
'Get the calibrated real/imaginary values
data = S11Meas.GetData(1,3)
wscript.echo ToString(data)

```

Last Modified:

June 13, 2006 Last updated

Create a Pulsed Measurement

Note: This example applies only to the E836x Opt H11. For PNA-X see [PNA-X Create a Narrowband Pulsed Measurement](#).

The following example demonstrates how to create a narrowband pulsed measurement using the Pulsed Application DLL. It first gets valid configuration settings and then uses those settings to configure the PNA and external pulsed generators.

To run this program, you need:

- [Pulsed Application](#) (Option H08)
- External Pulse Generators
- External Pulse Modulator / Pulse Bias

See Also

- Learn how to [install and register the pulsed .dll](#) on your PC
- See the [ConfigureNarrowBand3](#) Method for sending and returning parameters to the .dll.
- See the documentation for the following [COM IF Configuration](#) commands.
- See the [SCPI IF Configuration](#) commands.
- Learn about the [Pulsed Application](#).

'Interfaces

```
Dim OApp As AgilentPNA835x.Application
Dim OIF As AgilentPNA835x.IFConfiguration
```

'Pulsed parameters

```
Dim DPRF As Double
Dim DOffset As Double
Dim DSampleRate As Double
Dim LNumTaps As Long
Dim LBW As Long
Dim IPrecision as Integer
Dim BPG81110 As Boolean
Dim BFixedPRF As Boolean
```

'pulsed DLL interface

```
Dim OPulsed As New AgilentPNAPulsed.Application
DPRF=5123 'Hz
LBW=100 'Hz
BPG81110=True 'Using the Agilent 81110A Pulse Generator
BFixedPRF=True 'Do not change the PRF during filter alignment. Only adjust the IFBW.
```

'Calculate precision of pulse generators so that the config function returns the correct precision with the right filter. For example, DPRF=5000 Hz with a pulse

generator that will only take a total of four numeric values

```
' (5.123 kHz)
' ->log10(DPRF)=3.709
' ->int(3.709)=3
' ->3-3=0
```

'The algorithm will use a 10^x value for decrementing the PRF for null computation. This means that the first numeric digit from the right should be the one that is decremented by the pulsed algorithm (i.e. 5.122 kHz) to compute the filter nulls. This ensures that the pulse generators receive a PRF that is within their precision with the associated nulling IFBW.

```
IPrecision = Int(Flog10(CSng(DPRF))) - 3
```

'Send desired pulsed parameters to the pulsed configuration DLL. The DLL will return a new set of pulse parameters that provide the proper filter nulling.

```
OPulsed.ConfigNarrowBand3 DPRF, LNumTaps, LBW, DOffset, DSampleRate, IPrecision,
BFixedPRF,BPG81110
```

'Send configuration to PNA

'Connect to the PNA application

```
Set OApp = CreateObject("AgilentPNA835x.Application")
Set OIF = OApp.ActiveChannel.IFConfiguration
```

'Set PNA IFBW close to that returned by pulsed algorithm. This ensures that the proper settling time is set on the PNA.

```
OApp.ActiveChannel.IFBandwidth = LBW
OIF.IFFilterSamplePeriodMode = naMANUAL
OIF.IFFilterSamplePeriod = DSampleRate
OIF.IFFilterSource = naIFFilterSourceManual
OIF.IFFilterSampleCount = LNumTaps
OIF.IFGateEnable = True
OApp.ActiveChannel.FrequencyOffsetState = naON
OApp.ActiveChannel.FrequencyOffsetFrequency = DOffset
```

'Set receivers to medium gain setting

```
OIF.IFGainMode("ALL") = naMANUAL
OIF.IFGainLevel("A") = 1
OIF.IFGainLevel("B") = 1
OIF.IFGainLevel("R1") = 1
OIF.IFGainLevel("R2") = 1
```

```
Public Function Flog10(SGNum As Single) As Single
Flog10 = Log(SGNum) / Log(10)
End Function
```

'Enter Code here to send configuration to external pulse generators

Create a Narrowband Pulsed Measurement using the PNA-X

The following example demonstrates how to create a narrowband pulsed measurement using the Pulsed Application DLL on the [PNA-X](#).

See the [example program](#) for the E836x PNA models.

See the example program for wideband pulsed measurements on the PNA-X.

It first gets valid configuration settings and then uses those settings to configure the PNA and internal pulsed generators.

To run this program, you need:

- PNA-X
- [Pulsed Application](#) (Option H08)

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as BalancedCOM.vbs. [Learn how to setup and run the macro.](#)

See Also

- Learn how to [install and register the pulsed .dll](#) on your PC
- See the [ConfigEnhancedNB2](#) method for sending and returning parameters to the .dll.
- See the [ConfigEnhancedNBIFAtten](#) method for setting the receiver IF gain.
- See the [COM IF Configuration](#) commands used in the program.
- See the equivalent [SCPI IF Configuration](#) commands.

```
'Interfaces
Dim OApp As AgilentPNA835x.application
Dim OIntPG As AgilentPNA835x.PulseGenerator
Dim OPathConf As AgilentPNA835x.PathConfiguration
Dim OFilter As AgilentPNA835x.SignalProcessingModuleFour
Dim OIF As AgilentPNA835x.IFConfiguration

'Pulsed parameters
Dim DPRF As Double
Dim DBW As Double
Dim DPhysicalIF As Double
Dim DNCO As Double
Dim DCF As Double
```

```

Dim DGD As Double
Dim DGW As Double
Dim DSWGD As Double
Dim DSWGW As Double
Dim DSWGR As Long
Dim LStage1TapArray() As Long
Dim LStage2TapArray() As Long
Dim LStage3TapArray() As Long
Dim BFixedPRF As Boolean
Dim IIFatten As Integer
'pulsed DLL interface
Dim OPulsed As New AgilentPNAPulsed.application
'Pulsed settings
DPRF = 5000 'Hz
DBW = 500 'Hz
BFixedPRF = True
DNCO = 0#
DCF = 0#
DGD = 0#
DGW = 0.000001
DSWGR = 0#
'Send desired pulsed parameters to the pulsed configuration DLL. The DLL will return
a new set of pulse parameters to send to the PNA.
OPulsed.ConfigEnhancedNB2 DPRF, DBW, DPhysicalIF, DNCO, DCF, LStage1TapArray,
LStage2TapArray, LStage3TapArray, BFixedPRF, DGD, DGW, DSWGD, DSWGW, DSWGR
'
'Send configuration to PNA
'
'Connect to the PNA application
Set OApp = CreateObject("AgilentPNA835x.Application")
'Create instance of pulse generators on active channel
Set OIntPG = OApp.ActiveChannel.PulseGenerator
'Create instance of path configuration on active channel
Set OPathConf = OApp.ActiveChannel.PathConfiguration
'Create instance of digital filter on active channel
Set OIF = OApp.ActiveChannel.IFConfiguration
'Create instance of Hana digital filter on active channel

```

```

Set OFilter = OApp.ActiveChannel.SignalProcessingModuleFour
'Set up master pulse period for internal pulse generators
OIntPG.Period = 1 / DPRF
'Set up internal pulse generator output #1 to drive internal source modulation
OIntPG.Width(1) = 0.0001 '100us
OIntPG.Delay(1) = 0.00001 '10us
OIntPG.State(1) = True
OPathConf.Element("PulseModDrive").Value = "Pulse1"
'Set up internal pulse generator output #2 to drive internal receiver gates for a 2
port PNA-X
OIntPG.Width(2) = 0.000001 '1us
OIntPG.Delay(2) = 0.00005 '50us
OIntPG.State(2) = True
OPathConf.Element("IFGateA").Value = "Pulse2"
OPathConf.Element("IFGateB").Value = "Pulse2"
OPathConf.Element("IFGateR1").Value = "Pulse2"
OPathConf.Element("IFGateR2").Value = "Pulse2"
'
'Configure PNA in pulsed mode operation
'
'Turn off ALC and turn on modulator control
OApp.ActiveChannel.ALCLevelingMode(1) = naALCOpenLoop 'Source 1 output #1 ALC off
OPathConf.Element("Src1Out1PulseModEnable").Value = "Enable" 'Enable Source 1 pulse
modulator
'Set path and enable IF gates
OApp.ActiveChannel.IFBandwidth = DBW
OPathConf.Element("IFSigPathAll").Value = "NBF"
'Set filter stages based on pulse parameters
OIF.IFFrequency = DPhysicalIF
OIF.IFFrequencyMode = naMANUAL
OFilter.Stage1Frequency = DNCO
OFilter.Stage1Coefficients = LStage1TapArray
OFilter.Stage2Coefficients = LStage2TapArray
OFilter.Stage3FilterType = "RECT"
OFilter.Stage3Parameter("C") = LStage3TapArray(0)
OFilter.FilterMode = naMANUAL
'Set receivers to auto gain setting

```



```
OPulsed.ConfigEnhancedNBIFatten DPRF, DGW, IIFatten '1us pulse width
OPathConf.Element("NBFATNA").Value = IIFatten
OPathConf.Element("NBFATNB").Value = IIFatten
OPathConf.Element("NBFATNR1").Value = IIFatten
OPathConf.Element("NBFATNR2").Value = IIFatten
MsgBox "Done"
```

Last Modified:

11-Jun-2007 Rev 2- some edits

16-Feb-2007 MX New topic

Create a Wideband Pulsed Measurement using the PNA-X

This Visual Basic example shows you how to configure the PNA-X internal pulse generators and modulators to make wideband pulsed measurements in pulse profile mode using the PNA-X.

[Visit the PNA website](#) where you can download a free Wideband Pulsed Application that performs this measurement on the PNA-X.

[See narrowband pulsed example for PNA-X.](#)

```
'Create an PNA Application instance
Dim pnaApp As New AgilentPNA835x.Application
'Create a PathConfiguration instance
Dim pathConf As AgilentPNA835x.PathConfiguration
'Create an PulseGenerator instance
Dim pulseGen As AgilentPNA835x.PulseGenerator
'Create a Channel instance
Dim myChan As AgilentPNA835x.Channel

'Preset PNA-X
pnaApp.Preset
'Assign current active channel to myChan object
Set myChan = pnaApp.ActiveChannel
'Let PNA-X work in CW mode because of doing pulse profile measurement
myChan.SweepType = naCWTimeSweep
'Set CW Freq to 4 GHz
myChan.CWFrequency = 4000000000#
'Set IF Bandwidth to 5 MHz to get the best time resoltuiton
myChan.IFBandwidth = 5000000#
'Assign current active channel path configuration to pathConf object
Set pathConf = myChan.PathConfiguration
'Let PNA-X source work in ALC Open Loop mode
myChan.ALCLevelingMode(1) = naALCOpenLoop
'Make the Pulse1 as modulation pulse to generate Pulsed-RF signal
pathConf.Element("PulseModDrive").Value = "Pulse1"
'Enable pulse modulation at Source1Out1 path
pathConf.Element("Src1Out1PulseModEnable").Value = "Enable"
'Assign current active channel pulse generator to pulseGen object
Set pulseGen = myChan.PulseGenerator
```

```
'Internal pulse generator has five channels, default the channel 0 use as  
internal ADC trigger signal
```

```
'Enable channel 0 of internal pulse generator as trigger signal
```

```
pulseGen.State(0) = True
```

```
'Enable channel 1 of internal pulse generator as modulation signal
```

```
pulseGen.State(1) = True
```

```
'Set pulse period to 10 us
```

```
pulseGen.Period = 0.00001 '10 us
```

```
'Set pulse width of channel 0 to 1 us
```

```
pulseGen.Width(0) = 0.000001 ' 1 us
```

```
'Set pulse width of channel 1 to 5 us
```

```
pulseGen.Width(1) = 0.000005 '5 us
```

```
End Sub
```

Last Modified:

2-Oct-2007 MX New topic

Create a Balanced Measurement using COM

The following program creates several Balanced measurements in separate windows, generates markers, calculates statistics, and sets limit lines and queries results.

Note: By their nature, balanced measurements are extremely sensitive to phase differences between the two RF paths that make up the balanced port, especially at higher frequencies. A good calibration (not performed in this example) is critical to achieving good balanced measurement results.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as BalancedCOM.vbs. [Learn how to setup and run the macro.](#)

```
' PNA application object
Dim app

' Channel 1 object
Dim chan1

' start of marker/limit testing range
Dim minTestStimulus

' end of marker/limit testing range
Dim maxTestStimulus

' Set to true if you want additional balanced measurements.
Dim AdditionalMeasurements
AdditionalMeasurements = 1

' Create / Get the PNA application.
Set app = CreateObject("AgilentPNA835x.Application")
' Preset the instrument
app.Preset
' Get the Channel 1 object
Set chan1 = app.Channels(1)
' Stop data taking for now.
chan1.Hold true
' Set up the start / stop frequency for Channel 1 sweep.
MHZ = 1000000
GHZ = 1000*MHZ
chan1.StartFrequency = 10 *MHZ
chan1.StopFrequency = 1 *GHZ
chan1.NumberOfPoints = 801
' Define our test frequency range
minTestStimulus = 100*MHZ
maxTestStimulus = 900*MHZ
' This example uses DUT topology Bal-Bal -
' a DUT with a balanced input and balanced output.
'
' Port mapping for our DUT:
' logical port 1 = physical ports 1 and 4
```

```
' logical port 2 = physical ports 2 and 3
' The default is:
' logical port 1 = physical ports 1 and 2
' logical port 2 = physical ports 3 and 4
'
```

```
' logical 1          logical 2
'
' 1 -----|         |----- 2 +
'          |         |
'          |    DUT   |
' 4 -----|         |----- 3 -
```

```
chan1.BalancedTopology.SetBBPorts 1, 4, 2, 3
```

```
' Now we create some Bal-Bal measurements.
' By creating Bal-Bal measurements ("BBAL:..."),
' the channel is set to Bal-Bal topology,
' so it is not necessary to do this explicitly
' with the BalancedTopology.DUTTopology command.
' We do it here just for clarity:
```

```
chan1.BalancedTopology.DUTTopology = 2
' 0 == SE-Bal, 1 == SE-SE-Bal, 2 == Bal-Bal
```

```
' Create four windows, each showing one category of balanced measurement:
' Create Forward Transmission Measurements in Bal-Bal topology on Channel 1, window
1
```

```
' differential mode transmission
app.CreateMeasurement 1, "BBAL:SDD21",1,1
Set sdd21_1 = app.ActiveMeasurement
```

```
' differential to common mode conversion
app.CreateMeasurement 1, "BBAL:SCD21",1,1
Set scd21_1 = app.ActiveMeasurement
```

```
' common to differential mode conversion
app.CreateMeasurement 1, "BBAL:SDC21",1,1
Set sdc21_1 = app.ActiveMeasurement
```

```
' common mode transmission
app.CreateMeasurement 1, "BBAL:SCC21",1,1
Set scc21_1 = app.ActiveMeasurement
```

```
' Optionally create some additional measurements
If AdditionalMeasurements Then
```

```
' Create (logical) Port 1 reflection measurements, channel 1, window 2
app.CreateMeasurement 1, "BBAL:SDD11",1,2 ' differential mode reflection
app.CreateMeasurement 1, "BBAL:SDC11",1,2 ' C to D mode conversion reflection
app.CreateMeasurement 1, "BBAL:SCD11",1,2 ' D to C mode conversion reflection
app.CreateMeasurement 1, "BBAL:SCC11",1,2 ' common mode reflection
```

```

' Create Reverse Transmission Measurements, channel 1, window 3
app.CreateMeasurement 1, "BBAL:SDD12",1,3 ' differential mode transmission
app.CreateMeasurement 1, "BBAL:SCD12",1,3 ' differential to common mode conversion
app.CreateMeasurement 1, "BBAL:SDC12",1,3 ' common to differential mode conversion
app.CreateMeasurement 1, "BBAL:SCC12",1,3 ' common mode transmission

' Create (logical) Port 2 reflection measurements in window 4
app.CreateMeasurement 1, "BBAL:SDD22",1,4 ' differential mode reflection
app.CreateMeasurement 1, "BBAL:SDC22",1,4 ' C to D mode conversion reflection
app.CreateMeasurement 1, "BBAL:SCD22",1,4 ' D to C mode conversion reflection
app.CreateMeasurement 1, "BBAL:SCC22",1,4 ' common mode reflection
End If

' Set up some limit lines to verify a minimum differential insertion loss
sdd21_1.LimitTest(1).BeginStimulus = minTestStimulus
sdd21_1.LimitTest(1).EndStimulus   = maxTestStimulus
sdd21_1.LimitTest(1).BeginResponse = -2
sdd21_1.LimitTest(1).EndResponse   = -2
sdd21_1.LimitTest(1).Type = 2 ' minimum limit
sdd21_1.LimitTest.State = 1

' Limit lines for maximum common mode to differential conversion
sdc21_1.LimitTest(1).BeginStimulus = minTestStimulus
sdc21_1.LimitTest(1).EndStimulus   = maxTestStimulus
sdc21_1.LimitTest(1).BeginResponse = -20
sdc21_1.LimitTest(1).EndResponse   = -20
sdc21_1.LimitTest(1).Type = 1 ' maximum limit
sdc21_1.LimitTest.State = 1

' Take a (synchronous) single sweep on channel 1
chan1.Single true

' Show differential forward transmission statistics.
sdd21_1.ShowStatistics = true

' Set up user range 1 to limit marker's search range.
chan1.UserRangeMin(0,1) = minTestStimulus
chan1.UserRangeMax(0,1) = maxTestStimulus

' Find/Show max common mode to differential conversion, and read back the frequency.
sdc21_1.MarkerState(1) = true
' Set marker 1 to use user range 1
sdc21_1.Marker(1).UserRange = 1
sdc21_1.Marker(1).SearchMax

' Find/Show max differential mode insertion loss, and read back the frequency.
sdd21_1.MarkerState(1) = true
' Set marker 1 to use user range 1
sdd21_1.Marker(1).UserRange = 1
sdd21_1.Marker(1).SearchMin
If sdd21_1.LimitTestFailed Then
Wscript.Echo "Differential insertion loss failed: " & sdd21_1.Marker(1).Stimulus
/MHz & "MHz, " & _sdd21_1.Marker(1).Value(1) & " dB"
End If

```

```
If sdc21_1.LimitTestFailed Then
Wscript.Echo "Common to differential conversion failed: " &
sdc21_1.Marker(1).Stimulus/MHZ & "MHz, " & _sdc21_1.Marker(1).Value(1) & " dB"
End If
```

ECAL Confidence Check

This Visual Basic program:

- Initializes the PNA objects.
- Performs a complete ECAL confidence check

Before using this code:

- The active channel must contain an S11 measurement with a 1-port or N-port calibration
- Prepare a form with two buttons named **cmdRun** and **cmdQuit**

```
Private oPNA As AgilentPNA835x.Application
Private oChan As Channel
Private oCal As Calibrator
Private oMeas As Measurement

Private Sub cmdRun_Click()
Dim iMeasIndex As Integer

Set oPNA = CreateObject("AgilentPNA835x.Application", "MachineName")
Set oChan = oPNA.ActiveChannel
Set oCal = oChan.Calibrator

iMeasIndex = 1

' Loop through measurements until an S11 on the active channel
' is found, or the end of the measurement collection is reached.
Do
    Set oMeas = oPNA.Measurements(iMeasIndex)
    If oMeas.Parameter = "S11" And _
        oMeas.channelNumber = oChan.channelNumber Then Exit Do
    iMeasIndex = iMeasIndex + 1
    If iMeasIndex > oPNA.Measurements.Count Then
        MsgBox "No S11 measurement found on the active channel." _
            & " Create an S11 measurement, then try again."
        Exit Sub
    End If
```


Loop

' Set up trace view so we are viewing only the data trace.

oMeas.View = naData

' Acquire the S11 confidence check data from ECal Module A

' into the memory buffer.

oCal.AcquireCalConfidenceCheckECALEx "S11", 1

' Turn on trace math so the trace shows data divided by memory.

' You can be confident the S11 calibration is reasonably good if

' the displayed trace varies no more than a few tenths of a dB

' from 0 dB across the entire span.

oMeas.TraceMath = naDataDivMemory

End Sub

Sub cmdQuit_Click()

' Turn off trace math

' in case someone clicks Quit without having clicked Run

If oMeas <> Nothing Then oMeas.TraceMath = naDataNormal

' Conclude the confidence check to set the ECal module

' back to it's idle state.

If oCal <> Nothing Then oCal.DoneCalConfidenceCheckECAL

' End the program

End

End Sub

Limit Line Testing with COM

This Visual Basic program:

- Turns off existing Limit Lines
- Establishes Limit Lines with the following settings:
 - Frequency range - 4 GHz to 8 GHz
 - Maximum value - (10dB)
 - Minimum value - (-30dB)
- Turns on Lines, Testing, and Sound

If using [Global Pass/Fail](#) to report limit results, trigger the PNA after configuring and enabling Limit lines.

```
Public limts As LimitTest
Set limts = meas.LimitTest
'All Off
For i = 1 To 20
    limts(i).Type = naLimitSegmentType_OFF
Next i

'Set up Limit Lines
limts(1).Type = naLimitSegmentType_Maximum
limts(1).BeginResponse = 10
limts(1).EndResponse = 10
limts(1).BeginStimulus = 4000000000#
limts(1).EndStimulus = 8000000000#
limts(2).Type = naLimitSegmentType_Minimum
limts(2).BeginResponse = -30
limts(2).EndResponse = -30
limts(2).BeginStimulus = 4000000000#
limts(2).EndStimulus = 8000000000#

'Turn on Lines, Testing, and Sound
limts.LineDisplay = 1
limts.State = 1
limts.SoundOnFail = 1
```

E5091Testset Control

The following VB Script example exercises the COM commands used to control the E5091A testset.

For a description of each command, see [E5091Testsets collection](#).

```
Sub Main()  
Set pna = CreateObject("AgilentPNA835x.Application")  
Dim testsets As E5091Testsets  
Set testsets = pna.E5091Testsets  
Dim tset1 As E5091Testset  
Set tset1 = testsets(1)  
tset1.OutputPort(1, 3) = naE5091PortR2  
tset1.ControlLines(1) = 5  
tset1.ShowProperties = True  
tset1.Enabled = True  
MsgBox tset1.ID  
MsgBox tset1.Enabled  
MsgBox tset1.ShowProperties  
' NumberOfPorts property returns 0 when testset not connected  
MsgBox tset1.NumberOfPorts  
MsgBox tset1.OutputPort(1, 3)  
MsgBox tset1.ControlLines(1)  
  
Dim tset2 As E5091Testset  
Set tset2 = testsets(2)  
tset2.Enabled = True  
tset2.ShowProperties = True  
MsgBox tset2.Enabled  
MsgBox tset2.ShowProperties  
End Sub
```

Errors and the SCPIStringParser Object

This C++ program uses the [SCPIStringParser.Parse](#) command to detect the failed HRESULT and interrogate the errorInfo object for more details.

```
// scpierrors.cpp : Defines the entry point for the console application.
//

#include <iostream>
#include "afx.h"
#include "atlbase.h"

#import "C:\program files\common files\agilent\pna\835x.tlb" raw_interfaces_only,
no_namespace, named_guids

using namespace std;

HRESULT SendScpiCommand( IScpiStringParser* parser, CComBSTR& cmd, CComBSTR&
response)
{
    CComBSTR bstr;
    HRESULT hr = parser->Parse(CComBSTR(cmd), &response);
    if (FAILED(hr))
    {
        // see if this interface supports ErrInfo
        CComPtr<ISupportErrorInfo> spSupportsErrInfo;
        if (SUCCEEDED(parser->QueryInterface(&spSupportsErrInfo)))
        {
            // it does, so let's get the errorinfo object
            CComPtr<IErrorInfo> spErrorInfo;
            if (SUCCEEDED(GetErrorInfo(0, &spErrorInfo)))
            {
                CComBSTR errStr;
                spErrorInfo->GetDescription(&errStr);
                std::cout << "ERROR: " << CString(errStr) << std::endl;
            }
        }
    }
    return hr;
}
```

```

int main()
{
    CoInitialize(NULL);
    {
        CComBSTR response;
        CComPtr<IApplication> spPNA;
        CComPtr<IScpiStringParser> spSCPI;
        if (SUCCEEDED(spPNA.CoCreateInstance(CLSID_Application)))
        {
            spPNA->get_ScpiStringParser(&spSCPI);
            SendScpiCommand(spSCPI, CComBSTR("SYSTEM:PRESET"), response);
            SendScpiCommand(spSCPI, CComBSTR("CALC:PAR:CAT?"), response);
            std::cout << CString(response) << std::endl;
            SendScpiCommand(spSCPI, CComBSTR("THIS:IS:A:SYNTAX:ERROR"),
                response);
        }
    }
    CoUninitialize();
    return 0;
}

```

External Testset Control

The following VB Script example exercises the COM commands used to control the Z5623AK64 testset.

For a description of each command, see [TestsetControl Object](#)

[See Other COM Example Programs](#)

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save on the PNA hard drive as Testset.vbs. [Learn how to setup and run the macro.](#)

```
' Demonstrate some COM commands for external testsets.

Dim pna
Set pna = CreateObject("AgilentPNA835x.Application")
Sub DemoTestset(na)
Dim testsets, tset1
Dim portNum
Dim chNum, address
Set testsets = na.ExternalTestsets
chNum = 1

' Load a configuration file.
' NOTE: the K64 testset is only compatible with 4-port analyzers.
address = 0
testsets.Add "Z5623AK64", address

' Get the testset object
' in the testsets collection.
Set tset1 = testsets(1)

' Show the selections available for each port.
For portNum = 1 To 4
MsgBox("Port " & CStr(portNum) & " catalog: " & tset1.PortCatalog(portNum))
Next

' Set port mappings on channel 1.
tset1.OutputPorts(chNum) = "5 ext R,2 int R,3 int R,6 int R"
```

```
' Set control lines.
tset1.ControlLines(chNum) = 85

' Set label.
tset1.Label(chNum) = "Some label"

' Enable external testset control. This automatically enables status bar display
as well.
tset1.Enabled = True
End Sub

' The testset used in this demo is only usable on 4-port analyzers
If (pna.NumberOfPorts <> 4) Then
MsgBox("This program only runs on 4-port analyzers.")
Else
DemoTestset(pna)
End If
```

PathConfiguration Example

Note: These commands are accessible only for PNA-X models.

This Visual Basic Program exercises various commands on the:

- [PathConfigurationManager Object](#)
- [PathConfiguration Object](#)
- [PathElement Object](#)

```
' Create / Get the PNA application
Dim app
Set app = CreateObject("AgilentPNA835x.Application")
' Preset the instrument
app.Preset
' Get a channel interface on which to operate
Dim chan
Set chan = App.ActiveChannel
' Modify the Default configuration, and save it as "My Config"
chan.PathConfiguration = "Default"
' Set the "Combiner" element to value "Reversed"
chan.PathConfiguration.Element("Combiner").Value = "Reversed"
' Set the "Src1" element to value "High Power"
chan.PathConfiguration.Element("Src1").Value = "High Power"
' Change the description text
chan.PathConfiguration.DescriptionText = "Connect J8 to J9."
' Store the modified configuration
chan.PathConfiguration.Store("My Config")
' Set the instrument's path config back to the default (req. 8)
chan.PathConfiguration = "Default"
' Load a previously saved configuration onto channel 2
App.PathConfigurationManager.Load 2, "My Config"
```


COM Events Example

This Visual Basic program shows how to monitor the end of sweep.

The program will set sweep time to various amounts and BEEPs when sweep is completed. This method allows other processes to continue while waiting for end-of-sweep. This program stops after 10 loops.

Note: To avoid **Permission Denied** problems, this should be run on the PNA and not a PC. To run it from a PC both units must be "trusted" and on the same [domain/workgroup](#).

```
Option Explicit
Dim na As AgilentPNA835x.Application
Dim WithEvents naEvt As AgilentPNA835x.Application
Dim ch As AgilentPNA835x.Channel
Dim sweepComplete As Boolean

Private Sub Form_Load()

Dim N As Integer
Set na = CreateObject("AgilentPNA835x.application")
na.preset
Set ch = na.ActiveChannel
na.DisallowAllEvents          ' Turn off all events
Set naEvt = na                ' Enable event interrupts
Do
N = N + 1                    ' Loop counter
ch.sweepTime = 1 + (Rnd * 9) ' Set random sweep-time from 1-10 sec
sweepComplete = False
ch.Single False              ' Trigger sweep
naEvt.AllowEventCategory naEventCategory_CHANNEL, True ' Enable Channel event
Do
DoEvents                    ' Allows other processes to continue
Loop Until sweepComplete = True
naEvt.AllowEventCategory naEventCategory_CHANNEL, False ' Disable event until
ready for next one
Beep                        ' Do end-of-sweep processing here;

Loop Until N > 10
End

End Sub

Private Sub naEvt_OnChannelEvent(ByVal eventID As Variant, ByVal chNumber As
Variant)
' In this example we don't care about the channel info
If eventID = naEventID_CHANNEL_TRIGGER_COMPLETE Then sweepComplete = True
End Sub
```

Configure for COM-DCOM Programming

Before developing or running a COM program, you should first establish communication between your PC and the analyzer. This process is referred to as gaining **Access** to the analyzer. You should then register the PNA type library on your PC.

DCOM (Distributed Component Object Model) refers to accessing the PNA from a remote PC.

COM refers to accessing the PNA application from the analyzer PC.

- [Access Concepts](#)
- [Access Procedures](#)
- [Register the PNA Type Library on Your PC](#)
- [Problems?](#)

Note: After performing a [Firmware Upgrade](#) you must copy the new type library to your development PC to get access to new COM commands. See [Register the analyzer on your PC](#).

[Other Topics about COM Concepts](#)

For detailed information on this subject, see <http://na.tm.agilent.com/pna/DCOMSecurity.html>

Access Concepts

PNAs are shipped from the factory such that **Everyone** has permission to launch and access the PNA application via COM/DCOM. The term **Everyone** refers to a different range of users depending on whether the PNA is a member of a **Domain** or **Workgroup** (it must be one or the other; not both). By default, the PNA is configured as members of a workgroup. Therefore, **Everyone** includes only those users who have been given logon accounts on the PNA.

Workgroup

A workgroup is established by the **PNA administrator** declaring the workgroup name and declaring the PNA as a member of the workgroup. A workgroup does not require a network administrator to create it or control membership.

Everyone includes only those users who have been given logon accounts on the PNA.

By default, the PNA is configured as members of a workgroup named WORKGROUP.

Note: To setup a logon account for a new user, see [Additional Users](#).

The easiest method of gaining DCOM access, is to make the user's account name and password on the PNA to EXACTLY match their PC logon account name and password.

Domain

A domain is typically a large organizational group of computers. Network administrators maintain the domain and control which machines have membership in it.

Everyone includes those people who have membership in the domain. In addition, those with logon accounts can also access the analyzer.

Summary

- A **Workgroup** requires no maintenance, but allows DCOM access to only those users with a log-on account for the PNA.
- A **Domain** requires an administrator, but all members of the domain and those with logons to the analyzer are allowed DCOM access to the PNA.

The following section "Access Procedures" provides a tighter level of security allowing only **selected** (not **Everyone**) domain and workgroup users DCOM **Access** and **Launch** capability of the PNA.

Access Procedures

Perform this procedure for the following reasons:

- To allow only selected users (not everyone) remote Access and remote Launch capability to the PNA. Launch capability is starting the PNA application if it is not already open.
- To verify that you have DCOM access to the analyzer.

Note: Before doing this procedure, you must first have a logon account on the PNA. See [PNA User Accounts](#)

The following procedure grants specific users DCOM access and launch capability of the PNA application:

To perform this procedure, you must first [minimize the PNA](#) application.

[How do I know which Operating System I have?](#)

Windows 2000	Windows XP
On the PNA, click the Windows Start button	On the PNA, click the Windows Start button
Click Run	Click Run
In the Open: box, type dcomcnfg	In the Open: box, type dcomcnfg
Click OK	Click OK
In the Distributed COM Configuration Properties window, Click on Agilent PNA Series in the Applications list. Then click Properties...	Open the following folder sequence: Component Services Window Component Services Computers My Computer DCOM Config Right click Agilent PNA Series

	Click Properties
Click the Security tab	Click the Security tab
Click Use custom access permissions then click Edit	Under Access Permissions , click Customize , then click Edit
In Registry Value Permissions , select Everyone , then click Remove	Select Everyone , then click Remove
Click Add	Click Add
You could either select one or more of these groups to have access to the PNA, or specific users. To give specific users access, click Show users or Members , then select the name from the list.	Type a group name or user account name
Click Add , then click OK	Click OK
Launch Permission	
Click Use custom launch permissions , then click Edit	Under Launch Permissions , click Customize , then click Edit
In Registry Value Permissions, select Everyone then click Remove	Select Everyone , then click Remove
Click Add	Click Add
<p>You could either select one or more of these groups to have launch permission of the PNA, or specific users.</p> <ul style="list-style-type: none"> • To give groups launch permission, select the group from the list. • To give specific users launch permission, click Show users or Members, then select the name from the list. 	Type a group name or user account name
Click Add , then click OK	Click OK

Register the PNA Type Library on Your PC

The type library contains the PNA object model. On your PC, there is a Registry file that keeps track of where object models are located. Therefore, you must register the type library on the PC that will be used to develop code and run the program. It is much more efficient to have the type library registered at design time (BEFORE running your COM program).

Do the following two items before proceeding:

1. Connect your PC and the PNA to LAN.
2. Either map a drive to the analyzer or copy the type library files on a floppy disk or other media. See [Drive Mapping](#).

Note: To register the type library on your PC, you must be logged on as an administrator of your PC. Learn about [User Accounts](#).

This procedure will do the following:

- Register the Network Analyzer application on your PC.
 - Copy and register the proxystub (835xps.DLL) onto the PC.
 - Copy and register the PNA type library (835x.tlb) onto the PC.
 - Copy and register the FCA type library (fca.tlb) onto the PC.
1. Using Windows Explorer on your PC, find the Analyzer's C: drive. The drive will not be named "C:" on your PC, but a letter you assigned when mapping the drive.
 2. Navigate to **Program Files \ Agilent \ Network Analyzer \ Automation**
 3. Double-click **pnaproxy.exe** and follow the prompts to Install PNA Proxy. If the installation offers a choice of Modify, Repair, or Remove, then select **Remove**. Then double-click on **pnaproxy.exe** again.
 4. When prompted, type the Computer name of the PNA ([Learn how to find this](#)).
 5. After the install program runs, the PNA and FCA type library should be registered on your PC.
 6. Your programming environment may require you to set a reference to the PNA type library now located on your PC. In Visual Basic, click **Project, References**. Then browse to **C:\Program Files\Common Files\Agilent\PNA**. Select **835x.tlb**

Problems?

- These procedures will fail if there are any programs using the PNA type library (for example: Visual basic, VEE, Visual Studio, or any other application program that may communicate with the PNA).
 - Perform the following procedure if the previous procedure did not return an error, but you cannot connect to the PNA.
 - If you received an error, check that both the account name and password used on both the PNA and PC match EXACTLY.
 - If you still get errors, see <http://na.tm.agilent.com/pna/DCOMSecurity.html>.
1. [Map a drive](#) from your remote PC to the PNA. Note the drive letter your PC assigns to the PNA. Substitute this drive letter for **PNA** in the following procedure.
 2. On your PC, go to a DOS prompt c:>

3. Type **PNA:** (for example o:)
4. Type **cd program files\agilent\network analyzer\automation**
5. Type **copy 835xps.dll c:\program files\common files\agilent\pna**
6. Type **copy 835x.tlb c:\program files\common files\agilent\pna**

If you will NOT be using [FCA commands](#), skip steps 7,.8, and 9.

7. Type **cd..**
8. Type **cd extensions\fca**
9. Type **copy fca.tlb c:\program files\common files\agilent\pna**
10. If it is not already there, copy **regtlib.exe** from **PNA:\WINNT** to your C:\<windows>\system32 directory (<windows> is OS-dependent- it is either windows or WINNT)
11. Type **regtlib C:\program files\common files\agilent\pna\835x.tlb**
12. Type **regsvr32 C:\program files\common files\agilent\pna\835xps.dll**
13. Type **regtlib C:\program files\common files\agilent\pna\fca.tlb**

Perform the [Access Procedure](#) after doing these steps.

COM Fundamentals

The following terms are discussed in this topic:

- [Objects](#)
- [Interfaces](#)
- [Collections](#)
- [Methods](#)
- [Properties](#)
- [Events](#)
- [Visual Basic Syntax](#)

Note: The information contained in this topic is intended to help an experienced SCPI programmer transition to COM programming. This is NOT a comprehensive tutorial on COM programming.

[Other Topics about COM Concepts](#)

Visual Basic Syntax

The examples in PNA Help use Visual Basic as the programming environment for COM, which uses 'dot' notation.

To set a property, follow the object reference with:

- a period (.)
- property or method
- an equal sign (=)
- the new value

For example:

```
object.property = value 'This Green text following an apostrophe (') is a comment.
```

To read a property, a variable to contain the returned value is followed with:

- an equal sign (=)
- an object, or reference to an object
- a period (.)
- property

For example:

```
variable = object.property
```

To execute a method, an object, or reference to an object is followed with:

- a period (.)
- the method
- a blank space
- any required parameters

For example:

```
object.method parameters
```

Some methods return values, such as methods that return data. To return data from a method, a variable to contain the returned data is followed with:

- an equal sign (=)
- an object, or reference to an object
- a period (.)
- the method
- any required parameters enclosed in parenthesis

```
variable = object.method (parameters)
```

Objects

The objects of the Network Analyzer (Application) are arranged in a hierarchical order. The [PNA object model](#) lists the objects and their relationship to one another.

In SCPI programming, you must first select a measurement before making settings. With COM, you first get a handle to the object (or collection) and refer to that object in order to change or read settings (properties).

For more information on working with objects, see [Getting a Handle to an Object](#).

Interfaces

A COM Interface is the connection to an object. When you get a handle to an object, you are actually using an interface to an object. This is important if you are developing PNA code that will run on multiple code versions. For more information, see [PNA Interfaces](#).

Collections

A collection is an object that contains several other objects of the same type. For example, the **Channels** collection contains all of the channel objects.

Note: In the following examples, the collections are referred to as a variable. Before using a collection object, you must first get an instance of that object. For more information, see [Getting a Handle to an Object](#)

Generally, items in a collection can be identified by **number** or by **name**. The order for objects in a collection cannot be assumed. They are always unordered and begin with 1. For example, in the following procedure, chans(1) is used to set averaging on the **first** channel in the Channels collection (not necessarily channel 1).


```
Sub SetAveraging()  
    chans(1).AveragingFactor = 10  
End Sub
```

The following procedure uses the measurement string name to set the display format for a measurement in the measurements collection.

```
meass("CH1_S11_1").Format = 1
```

You can also manipulate an entire collection of objects if the objects share common methods. For example, the following procedure sets the dwell time on all of the segments in the collection.

```
Sub setDwell()  
For Each seg In segs  
    segs.DwellTime = 0.03  
Next  
End Sub
```

Methods

A method is an action that is performed on an object. For example, **CreateSParameter** is a method on the [Application](#) object. The following procedure uses that method to create a new S21 measurement in channel 1 in a new window.

```
Sub CreatMeas  
app.CreateSParameter 1,2,1,1  
End Sub
```

Properties

A property is an attribute of an object that defines one of the object's characteristics, such as size, color, or screen location. A property can also change an aspect of the object's behavior, such as whether the object is visible. In either case, to change the characteristics of an object, you change the values of its properties.

For example, the following statement sets the IF Bandwidth of a channel to 1 KHz.

```
Chan.IFBandwidth = 1e3
```

You can also read the current value of a property. The following statement reads the current IF Bandwidth of a channel into the variable **ifbw**.

```
Ifbw = Chan.IFBandwidth
```

Some properties cannot be set and some cannot be read. The Help topic for each property indicates if you can:

- Set and read the property (Write/Read)
- Only read the property (Read-only)
- Only set the property (Write-only)

Events

A COM event is an action recognized by an object, such as clicking the mouse or pressing a key. Using events, your program can respond to a user action, program code, or triggered by the analyzer.

The SCPI equivalent of an event is a Service Request (SRQ).

For example:

```
OnChannelEvent
```

For more information, see [Working with the Analyzer's Events.](#)

Getting a Handle to an Object

The following are discussed in this topic:

- [What Is a Handle](#)
- [Declaring an Object Variable](#)
- [Assigning an Object Variable](#)
- [Navigating the Object Hierarchy](#)
- [Getting a Handle to a Collection](#)

[Other Topics about COM Concepts](#)

What Is a Handle

In SCPI programming, you must first select a measurement before changing or reading settings. With COM, you first get a handle to the object (or collection) and refer to that object to change or read its settings. The following analogy illustrates this:

A CAR could be called an object. More precisely, CAR is a class of objects. For example, one of the properties of the CAR class is "**Color**". You can read (by looking) or set (by painting) the color property of A car object. In other words, you can only read or set properties of a specific car object; not the entire car class. Therefore, to read or set a property, you need to get "a handle", or an instance of the object.

This process is also called "accessing an object", "getting an instance of an object", "returning an object". or "referring to an object". You can have handles to many instances of an object at the same time.

Accessing PNA Objects

The PNA Application object is the highest object in the PNA object model hierarchy. Because of that, it is the only object that must be 'created' before it, or any other objects, can be accessed and used. During the creation process, the application object assigned to a variable name, or handle. Throughout your program, that object is used by referring to that variable. All PNA objects can be assigned to a variable, and subsequently referred to, in this same manner.

The following example shows how to create the PNA Application object, as well as illustrate the general steps of get a handle to an object.

There are two steps in the process of getting a handle to analyzer objects:

1. Declaring a Variable
2. Assigning an Object to the Variable

1. Declaring a Variable

Note: The examples in these topics use the Visual Basic Programming Language. See the short section regarding [Visual Basic syntax](#).

Use the Dim statement or one of the other declaration statements (Public, Private, or Static) to declare a variable.

The type of variable that refers to an object must be a Variant, an Object, or a specific type of object. Some programming languages, such as VBScript and Agilent VEE, do not allow you to specify variable types.

The following examples ALL declare the variable **pna**. Each subsequent statement is more specific than the previous:

- `Dim pna 'Variant data type.`
- `Dim pna As Object 'Object data type.`
- `Dim pna As AgilentPNA835x.Application ' Specific Application type`
- `Dim pna As AgilentPNA835x.IApplication ' Interface type`

1. If you use a variable without declaring it first, the data type of the variable is Variant. If you don't care about using automatic type checking, and willing to run code less efficiently, this method is very safe and is useable on all programming environments.
2. If you know the specific object type, and your programming environment allows it, you can declare the variable as an object.
3. Declaring a specific object type provides automatic type checking (Intellisense), faster code, and improved readability.
4. Declaring the interface is the most specific way and is beneficial when developing code for multiple firmware revisions. [Learn more about Interfaces.](#)

2. Assigning an Object to a Variable

To assign an object instance to a variable, use the **Set** keyword before the object variable that was declared previously. In the following line of code, we SET the current AgilentPNA835x Application to "pna".

```
Set pna = AgilentPNA835x.Application
```

As mentioned earlier, the AgilentPNA835x object is unique because it is the highest level of object in the PNA object model hierarchy. Therefore, we must use the **CreateObject** keyword with the (*classname,server name*) parameters.

- The **classname** for the analyzer object is always "AgilentPNA835x.Application".
- To find your analyzer's **server name**, see [View or change full computer name](#)

The following statements create an instance of the Analyzer object.

```
Dim pna AS AgilentPNA835x.Application
Set pna = CreateObject("AgilentPNA835x.Application", "Analyzer46")
```

Note: These statements will start the PNA application if it is not already running on your instrument.

Navigating the Object Hierarchy

Once an instance of the PNA Application is "created", you access all of the PNA objects by navigating the object hierarchy. Navigating the object model hierarchy can be tricky. In addition, you also need to know how to refer to a specific instance of that object. For example, if you have three measurements present on the PNA, how do you refer to the channel 1 measurement? Each object on the PNA Object Model image is linked to an object page. At

the top of each object page is a **Description** section and another called "**Accessing the ... Object**". These sections together explain how to navigate the PNA hierarchy to access a specific instance of that object.

From the previous discussion, you may think that you must always declare and assign variables to an object before setting or reading its properties. While this method is best for objects that you will continue to reuse, such as a measurement, it is not always necessary. You can also refer to an object directly.

The [TriggerSetup](#) object, which is a child of the Application object. Because we will only need to refer to this object once to set a couple of properties, and it is easy to access, we will refer to it directly. From the previous example, we already have a handle to the Application object in the variable **pna**. The following example uses [Visual basic 'dot' notation](#) to refer to the TriggerSetup object, and then the Scope property.

```
pna.TriggerSetup.Scope = naChannelTrigger
```

By referring to the TriggerSetup object directly, we must type the same path whenever we refer to properties on the TriggerSetup object. The following method assigns the pna.TriggerSetup object to a variable that can be reused.

```
Dim trig As Object  
Set trig = pna.TriggerSetup
```

Once created, you can treat an object variable exactly the same as the object to which it refers. For example:

```
trig.Scope = naChannelTrigger  
trig.Source = naTriggerSourceInternal
```

Getting a Handle to a Collection

The analyzer has several collections of objects which provide a convenient way of setting or reading all of the objects in the collection with a single procedure. Also, there are objects (limit lines for example) that can only be accessed through the collection.

To get a handle to an item in a collection, you can refer to the object by item number or sometimes by name. However, you first have to get a handle to the collection. To assign the collection to a variable, use the same two step process (1. declare the variable, 2. assign the variable using 'Set').

```
Dim meass As Measurements
```

```
Dim meas As Measurement
```

You can then iterate through the entire collection of measurements to read or set properties

```
Sub setFormat()  
For Each meas In meass  
meas.Format = naDataFormat_LinMag  
Next  
End Sub
```

Or you can read or set a property on an individual object in the collection:

```
meass(1).Format = naLinMag
```

Note: Each object and collection has its own unique way of dealing with item names, and numbers. Refer to the [Analyzer Object Model](#) for details.

Collections in the Analyzer

Collections are a gathering of similar objects. They are a convenience item used primarily to iterate through the like objects in order to change their settings. Collections generally provide the following generic methods and properties:

```
Item(n)
Count
Add(n)
Remove(n)
```

where **(n)** represents the number of the item in the collection. Some collections may have unique capabilities pertinent to the objects they collect.

[Other Topics about COM Concepts](#)

Collections are Dynamic

A collection does not exist until you ask for it. When you request a Channels object (see Getting a Handle to an Object / [Collection](#)), handles to each of the channel objects are gathered and placed in an array.

For example, if channels 2 and 4 are the only channels that exist, then the array will contain only 2 items. The command 'channels.Count' will return the number 2, and:

- Channels(1) will contain the channel 2 object.
- Channels(2) will contain the channel 4 object.

The ordering of objects within the collection should not be assumed. If you add a channel to the previous example, as in:

```
Pna.Channels.Add(3)
```

'channels.Count' will now return 3 and:

- Channels(1) will contain the channel 2 object.
- Channels(2) will contain the channel 3 object.
- Channels(3) will contain the channel 4 object.

Primarily, collections are useful for making this type of iteration possible:

```
Dim ch as Channel
For each ch in pna.Channels
    Print ch.Number
    Print ch.StartFrequency
    Print ch.StopFrequency
Next ch
```

As soon as this for-each block has been executed, the Channels object goes out of scope.

COM Data Types

The PNA uses several data types to communicate with the host computer. Before using a variable, it is best to declare the variable as the type of data it will store. It saves memory and is usually faster to access. The following are the most common data types:

- [Long Integer](#)
- [Single Precision \(Real\)](#)
- [Double Precision \(Real\)](#)
- [Boolean](#)
- [String](#)
- [Object](#)
- [Enumeration](#)
- [Variant](#)

[Other Topics about COM Concepts](#)

Long (long integer) variables are stored as signed 32-bit (4-byte) numbers ranging in value from -2,147,483,648 to 2,147,483,647.

Double (double-precision floating-point) variables are stored as IEEE 64-bit (8-byte) floating-point numbers ranging in value from -1.79769313486232E308 to -4.94065645841247E-324 for negative values and from 4.94065645841247E-324 to 1.79769313486232E308 for positive values.

Single (single-precision floating-point) variables are stored as IEEE 32-bit (4-byte) floating-point numbers, ranging in value from -3.402823E38 to -1.401298E-45 for negative values and from 1.401298E-45 to 3.402823E38 for positive values.

Boolean variables are stored as 16-bit (2-byte) numbers, but they can only be True or False. Use the keywords True and False to assign one of the two states to Boolean variables.

When other numeric types are converted to Boolean values, 0 becomes False and all other values become True. When Boolean values are converted to other data types, False becomes 0 and True becomes -1.

In PNA release 5.26, the following properties were changed to return True rather than 1 to conform with this definition. This change may affect the functionality of your COM program:

- [Bandwidth Tracking Property](#)
- [ErrorCorrection Property](#)
- [IFGateEnable Property](#)

- [Interpolate Correction Property](#)
- [LimitTestFailed Property](#)

String variables hold character information. A String variable can contain approximately 65,535 bytes (64K), is either fixed-length or variable-length, and contains one character per byte. Fixed-length strings are declared to be a specific length. Variable-length strings can be any length up to 64K, less a small amount of storage overhead.

Object variables are stored as 32-bit (4-byte) addresses that refer to objects within the analyzer or within some other application. A variable declared as Object is one that can subsequently be assigned (using the Set statement) to refer to any actual analyzer object.

Enumerations (Enum) are a set of named constant values. They allow the programmer to refer to a constant value by name instead of by number. For example:

```
Enum DaysOfWeek
    Sunday = 0
    Monday = 1
    Tuesday = 2
    Wednesday = 3
    Thursday = 4
    Friday = 5
    Saturday = 6
End Enum
```

Given this set of enumerations, the programmer can then pass a constant value as follows:

```
SetTheDay(Monday)
```

rather than

```
SetTheDay(1)
```

where the reader of the code has no idea what the value 1 refers to.

However, the analyzer RETURNS a long integer, not the text.

```
Day = DaysOfWeek(today) 'Day = 1
```

Variant - If you don't declare a data type ("typed" data) the variable is given the Variant data type. The Variant data type is like a chameleon — it can represent many different data types in different situations.

The PNA provides and receives Variant data because there are programming languages that cannot send or receive "typed" data. Variant data transfers at a slower rate than "typed" data.

PNA Interfaces

A COM interface is the connection to an object. When you [get a handle to an object](#), you are actually using an interface to an object. This subtle distinction is relevant to the COM programmer for the following two reasons:

- [Interface Inheritance \(Coding for Multiple PNA Versions\)](#)
- [Custom Interfaces.](#)

[Other Topics about COM Concepts](#)

Interface Inheritance (Coding for Multiple PNA Versions)

The PNA continues to evolve and release [new firmware / software versions](#) that provide more functionality and features. New commands are added to existing objects, and with them new interfaces are added to support those commands. For example, new commands were added to the Measurement object in PNA release 3.0. These commands are accessible from the new IMeasurement2 interface. This can be important if you develop code using the type library in release 3.0, and run the code on a PNA with an older release, such as 2.0

When you use a command that was new with release 3.0, and you run that code on a PNA with release 2.0 firmware, errors will occur because that PNA does not recognize the new commands. However, even if you do NOT utilize new commands, errors can still occur. The following example shows how this occurs and how to avoid it.

The following Visual Basic statement dimensions the **meas** variable as an object.

```
Dim meas As Measurement
```

When the program compiles, Visual Basic figures out what interface to use to access that object. When dimensioning as an object, VB will use the default interface. As new interfaces are added to an object, they become the default interface. If this program was developed and compiled using the PNA 3.0 type library, the default Interface of the Measurement Object was IMeasurement2. However, if this program is run on an instrument with PNA 2.0 firmware, there was no IMeasurement2 Interface, and an E_NOINTERFACE error will occur.

Therefore, the more robust approach would be to specify the interface instead of the object when declaring a variable.

```
Dim meas As IMeasurement
```

This code will ONLY use the IMeasurement interface; not the default interface.

However, regardless of how you declare a variable, errors will always occur if you use new commands, and run the code on an older instrument.

Custom Interfaces

The PNA object model contains three "custom" interfaces. These interfaces allow the Visual Basic and C++ programmer to transfer data using "typed" variables, which is more efficient than using variant type variables. These interfaces are:

- [IArrayTransfer](#) - Measurement object
- [ICalData](#) - Calibrator object

- [ISourcePowerCalData](#) - Channel object

Working with Events

- [What are Events?](#)
- [Using the Analyzer's Events](#)
- [Event ID's](#)
- [Filtering Events](#)
- [List of Events](#)
- [Out of Range Errors](#)
- [Troubleshooting Problems with Events](#)

See Also

[Events Example](#)

[Errors and the SCPIStringParser Object](#)

[Other Topics about COM Concepts](#)

What are Events?

Windows applications work from user-initiated events such as mouse moves and mouse clicks. A mouse-click produces an event that the programmer can either ignore or "handle" by providing an appropriate subroutine like this:

```
Sub DoThis_onClick
    Perform something
End Sub
```

If this subroutine were in your program and the mouse-click event occurs on your PC, it would generate a "Callback" to the client and interrupt whatever it was doing and handle the event.

A more practical example of an event in the analyzer is Limit test. If limit test is on and the measurement fails, the analyzer produces a "Limit-failed" event. If the measurement passed, the analyzer produces a "Limit-succeeded" event.

The Analyzer has a very sophisticated Event structure. Your program **CAN** be notified when one or more events occur. However, it may not be necessary.

For example, the analyzer has an event that will notify your program when a sweep is complete. A simpler alternative is to use a synchronous command which waits for the sweep to complete.

```
sync = True
app.ManualTrigger sync
chan.StartFrequency = 4.5E6
```

This would NOT work if you want the controller to do other things while waiting, like setup a power meter or sort some data. In this case you would like a "callback" from the analyzer to let your program know that the sweep has completed. For an example of this see [Events Example](#).

- [AllowEventMessage](#) - monitor a specific event
- [AllowAllEvents](#) - monitor ALL events
- [DisallowAllEvents](#) - monitor NO events
- [AllowEventCategory](#) - monitor specific event categories (discussed later)
- [AllowEventSeverity](#) - monitor events having one or more of the following severity levels associated with them.

Code	Severity Enumeration
00	naEventSeveritySUCCESS - the operation completed successfully
01	naEventSeverityINFORMATIONAL - events that occur without impact on the measurement integrity
10	naEventSeverityWARNING - events that occur with potential impact on measurement integrity
11	naEventSeverityERROR - events that occur with serious impact on measurement integrity

List of Events

The following is a list of categories and the general types of events they include. Click the link view the event details.

Category Enumeration	Callback
naEventCategory_PARSER	OnSCPIEvent
naEventCategory_MEASURE	OnMeasurementEvent
naEventCategory_CHANNEL	OnChannelEvent
naEventCategory_HW	OnHardwareEvent
naEventCategory_CAL	OnCalEvent
naEventCategory_USER	OnUserEvent
naEventCategory_DISPLAY	OnDisplayEvent
naEventCategory_GENERAL	OnSystemEvent

Note: Use the [MessageText](#) Method to get a text message describing the event.

Out of Range Errors

When you attempt to set a value on an active function that is beyond the range (min or max) of the allowable values, the analyzer limits that value to an appropriate value (min or max) and sets the function to the limited value. From the front panel controls this is visually evident by the limited value in the edit box or by the annotation on the display. An example would be attempting to set the start frequency below 300kHz. The edit control doesn't allow the number to fall below 300kHz.

When the automation user programs a setting (such as start frequency below the allowable limits) the same behavior takes place. The analyzer accepts the limited value. However, in order to learn what setting took place, you have to read the HRESULT.

All automation calls return HRESULTs. By default the HRESULT returned when an overlimit occurs is S_NA_LIMIT_OUTOFRANGE. This value is a success code, meaning that bit 31 in this 32 value is 0. Programmers should check the return code from all automation calls to determine success or failure.

Some C++ macros (like SUCCEEDED(hr) or FAILED(hr)) only check bit 31. So if you are interested in trapping this outOfRange error you will have to check for S_NA_LIMIT_OUTOFRANGE explicitly.

Alternatively, you can configure the analyzer to report outOfRange conditions with an error code. Use the method: App.[SetFailOnOverRange](#) (true). With this method set TRUE, any overrange error will return E_NA_LIMIT_OUTOFRANGE_ERROR.

This method is provided for the benefit of VB clients. VB users can't detect specific success codes because the VB runtime strips off the HRESULT and only raises a run time error if bit 31 is set, indicating a fail code.

Troubleshooting Problems with Callbacks

When you do callbacks, the client PC becomes the server and the analyzer (server) becomes the client. Callbacks can only take place when both server and client are in the same workgroup or in the same domain. See [Configure for COM](#).

Read and Write Calibration Data using COM

Calibration data in the PNA is stored in Cal Sets. [Learn more about Cal Sets](#)

You can read or write two types of Calibration data:

- **Error Terms** - calculated data using standard measurement data and the algorithms for the specified cal type.
- **Standard Measurement data** -raw data resulting from the measurement of a calibration standard.

Each of these data are available in the PNA in either variant data or typed data. [Learn more about variant and typed data](#)

[Other Topics about COM Concepts](#)

Calibration / Cal Set Interfaces

There are several interfaces associated with Calibration.

[ICalibrator](#)

This interface is the original interface provided with the first version of the PNA. It provides remote access to the "Unguided" Calibration wizard. This interface can perform 1 and 2 port calibrations as well as response cals.

This interface can also read and write error terms from/to a Cal Set. However, ICalibrator is NOT recommended for this purpose. The [ICalSet2](#) Interface is better suited for reading and writing error terms.

See a vbscript example of [how to perform a 2-port Cal and read the cal data](#).

[IGuidedCalibration](#)

This interface provides the methods and properties used by the Guided Calibration wizard. With this interface you can perform multi-port calibrations (1 to 4 port cals), but no response cals.

[ICalSet2](#) and [ICalData3](#)

These interfaces provide access to the Cal Set contents. You can read and write error terms with both of these interfaces.

- ICalSet2 uses Variant data, which means it is usable from vbscript.
- ICalData3 uses "typed" data, which means it can be used from any automation engine that can read the type library (VEE, VB, C++, etc.). Typed arguments (such as float or single) are more efficient than variants, so use the ICalData3 interface where better performance is needed.

[See a vbscript example of how to read Cal Set data](#).

[ICalSet3](#)

This interface provides access to the stimulus attributes of the Cal data: frequency, power, number of points. These are the stimulus conditions under which the Cal Set was created.

Programming the PNA with C++

The programming information contained in this Help system is aimed at the Visual Basic programmer. VB does a lot of work for the programmer when it comes to managing and accessing components. Using a lower level language like C++ requires a more thorough understanding of the underlying tenets of COM. It is not the intent of this section to teach COM programming. The following is intended to acquaint you with some of the basic concepts you need to know in order to program against COM.

- [Initializing COM](#)
- [Importing the Type Library](#)
- [Creating the Application Object](#)
- [Errors](#)
- [Events](#)
- [Additional Reading](#)
- [Example](#)

Note: The information in this section assumes development on a Windows OS using Microsoft tools.

[Other Topics about COM Concepts](#)

Initializing COM

The first thing you must do before performing any COM transactions is to initialize the COM library. You can do this in a number of ways. The most basic of these is a call to **CoInitialize()** or **CoInitializeEx()**. Alternatively you can use the MFC (Microsoft Foundation Classes) **AfxOleInit()**.

Conversely, before your program exits you must uninitialize COM. You can accomplish this with **CoUninitialize()** or the MFC routine **AfxOleTerm()**.

Importing the Type Library

To make a component available to the client, the server exports what is called the type library. For the PNA, this file is 835x.tlb. It is located on the PNA's hard drive at **C:\Program Files\Agilent\Network Analyzer\Automation**. See [Configure for COM-DCOM Programming](#).

The type library can be read and deciphered using another COM interface called ITypeLib. VB uses this interface to present, for example, its object browser. Visual C++ can also read type libraries. This is done by importing the type library into your project with a compiler directive:

```
#import "C:\Program Files\Common Files\Agilent\Pna\835x.tlb", named_guids
```

When you compile your program with this statement in it, the compiler creates two other files: **835x.tlh** and **835x.tli**. The first is a header file that contains the type definitions for the PNA's COM interfaces and their methods. The second file contains inline functions that wrap the PNA's interface methods. The wrappers are beneficial in that they contain error reporting for each of the method calls.

The .tlh file defines a smart pointer which you can use to access the PNA's objects. The smart pointer definition

looks like this:

```
_com_smartptr_typedef(Iapplication, _uuidof(Iapplication))
```

A smart pointer is a term used for a C++ object that encapsulates a pointer used to refer to a COM object. All COM objects derive from the interface IUnknown. This interface has three methods: QueryInterface(), AddRef(), and Release(). The function of the AddRef and Release methods is to maintain a reference count on the object and thus control the object's lifetime. Anytime you copy or create a reference to a COM object, you are responsible for incrementing its reference count. And likewise, when you are finished using that reference, it is your responsibility to Release it. Smart pointers do this work for you, as shown in the [example program](#). In addition, smart pointers will also perform the QueryInterface call when required. QueryInterface is a method that requests a specific interface from an object. In the example program we gain access to the IArrayTransfer interface of the Measurement object. In the ReadMethod routine, we see this:

```
PTransferData = pMeas;
```

The assignment operator is overloaded for the smart pointer and in reality, this simple statement does this:

```
HRESULT hr = pMeas->QueryInterface( IID_IArrayTransfer, (void**)&pTransferData);
```

Using the existing interface pointer (pMeas) to the object, this call asks the object if it supports the IArrayTransfer interface, and if so to return a pointer to it in pTransferData. Smart pointer makes life easier for the C++ programmer. Read more about smart pointers in Microsoft Developer's Network Library (*MSDN*).

Creating the Application Object

The only createable object exported by the PNA is the [Application object](#). Typically this would be done with a call to CoCreateInstance:

```
STDAPI CoCreateInstance(  
    CLSID_IApplication, //Class identifier (CLSID) of the object  
    NULL, //Pointer to controlling IUnknown  
    CLSCTX_SERVER, //Context for running executable code  
    IID_IApplication, //Reference to the IID of the interface  
    (void**)&pNA //Address of output variable that receives  
    // the interface pointer requested in riid  
);
```

With the smart pointer, this is taken care of with the following call:

```
IApplicationPtr pNA; // declare the smart pointer  
pNA = IApplicationPtr("AgilentPNA835x.Application.1");
```

Errors

All COM method calls are required to return an HRESULT. This is 32 bit long with a specific format.

- The most significant bit indicates success(0) or failure(1).
- The lower 16 bits indicate the specific failure.

Visual Basic strips off the returned HRESULT and raises an error object for non-successful returns. The C++ programmer must himself be diligent about handling errors. You must check the return value of each COM call to ensure its success.

Events

The Application object sources the INetworkAnalyzerEvents interface. This object is the source for all events. To use events in C++, you must do two things:

1. Implement the INetworkAnalyzerEvents interface - derive an object from INetworkAnalyzerEvents and implement the methods described there.
2. Subscribe to the IconnectionPoint interface of the Application object. - obtain a pointer to the IConnectionPointContainer interface of the Application object and making the following request:

```
FindConnectionPoint( IID_INetworkAnalyzerEvents, &pConnection );
```

A successful call to this interface will return a valid pointer in pConnection. Use this pointer to subscribe to the Application object:

```
pConnect->Advise( IUnknown* punk, DWORD dwCookie);
```

This call provides the server object with a callback address. The Iunkown pointer in this call is the IUnkown pointer of the object that implements the INetworkAnalyzerEvents interface. This is the event sink. The application object needs a pointer to this object in order to call your interface when an event occurs. The **dwCookie** is your subscription key. Use it to unsubscribe (see Unadvise()).

Additional Reading

"MSDN" - Microsoft Developer's Network Library

"Learning DCOM", by Thuan L. Thai, published by O'Reilly(1999)

"Inside COM", by Dale Rogerson, published by Microsoft Press (1997)

"Understanding ActiveX and OLE", by David Chappell, also published by Microsoft Press (1996)

"Beginning ATL COM Programming", published by Wrox Press (1998)

Example

The example uses the smart pointer created by Microsoft Visual Studio. The calls to CoInitialize and CoUninitialize open and close the COM libraries. In the example, notice that the pointers local to the main routine are explicitly released. When smart pointers go out of scope, they will perform this duty implicitly. However, we are calling CoUninitialize before they have the chance to be destroyed, so we are obliged to release them.

See the [example](#) program.

Using COM from .NET

To communicate with the PNA from Microsoft .NET enabled languages such as C# and Visual Basic.NET perform the following steps:

1. [Configure your PC and PNA for COM-DCOM Programming](#).
2. Reference the type library within the development environment (see the following [exception for managed C++ projects](#).) In the process of referencing the type library, a .NET assembly is created that wraps the PNA type library with a .NET friendly interface. This .NET assembly is called an Interop Assembly.

To run a .NET program on the PNA, you will need to install the .NET framework on the PNA. This can be done by running the dotnetfx.exe program, located at: <http://www.microsoft.com/downloads/details.aspx?FamilyID=262d25e3-f589-4842-8157-034d1e7cf3a3&DisplayLang=en>

If you only intend to run .NET programs on a remote computer, then it is not necessary to install the .NET framework on the PNA."

Exception for managed C++ projects: To generate the Interop Assembly for managed C++ projects, you must use the tlbimp.exe utility. This utility is described in the MSDN documentation. On your PC, click Start then Run then type: tlbimp.exe 835x.tlb and click OK. After doing this you can use the #using directive to include the Interop Assembly on managed C++ projects.

Registering the PNA Primary Interop Assembly (PIA) (OPTIONAL)

The PIA is NOT necessary to communicate with the PNA. The following procedure is useful only when there are two .NET programs that want to share the same PNA interface definitions. Without the PIA, each .NET application would use its own Interop Assembly.

To register the PIA on a machine, you need to have the common language runtime (CLR) installed. This is included with Visual Studio.NET. Then perform the following steps:

Note: In the following steps, replace <local directory> with the full path name of the specified file on your PC.

1. Run the PNAProxy.exe program as described in [Configure for COM-DCOM Programming](#).
2. On the PNA, copy **C:\Program Files\Agilent\Network Analyzer\Automation\AgilentPNA835x.dll** to a local directory on your PC. Make a note of this directory.
3. On your PC, click **Start**, then **Run**, then type: **regasm <local directory> \AgilentPNA835x.dll** and click **OK** to register the dll.
4. Again, click **Start**, then **Run**, then type: **gacutil /i <local directory> \AgilentPNA835x.dll** and click **OK** to add the assembly to the Global Assembly Cache (GAC).

To **Uninstall the PIA**, perform the following:

1. On your PC, click **Start**, then **Run**, then type: **gacutil /u <local directory> \AgilentPNA835x.exe** and click **OK** to remove the assembly from the GAC.
2. On your PC, click **Start**, then **Run**, then type: **regasm /unregisiter <local directory> \agilentpna835x.dll** and click **OK** to unregister the assembly.

3. To uninstall PNA Proxy.exe use the **Add/Remove Programs** utility in the control panel.

SCPI Command Tree

See Also

- [Example Programs](#)
 - [IEEE- 488.2 Common Commands](#)
 - [Local Lockout](#)
 - New [See Calibrating the PNA Using SCPI](#)
 - [Synchronizing the PNA and Controller](#)
-

ABORt	Stops all sweeps
+ CALCulate Click to hide and show CALC branches	
:CORRection	Electrical Delay and Phase Offset
:CUSToM	Custom measurements
:DATA	Sends and queries data.
:EQUation	Equation Editor
:FILTer	Time domain gating
:FORMat	Display format
:FSIMulator	Balanced measurements and Fixturing
:FUNCTion	Trace Statistics
:LIMit	Limit lines for pass / fail testing
:MARKer	Marker settings
:MATH	Math / Memory
:MIXer	X-axis display for FCA measurments
:NORMalize	Receiver power cal (Obsolete)
:OFFSet	Mag and Phase offset
:PARAmeter	Create and delete measurements
:RDATa?	Queries receiver data
:SMOothing	Point-to-point smoothing
:TRANsform	Time domain transform

CONTRol	Interface control and Rear-panel connector control.
DISPlay	Display settings
FORMat	Format for data transfer
HCOPy	Hardcopy printing
INITiate	Continuous or manual triggering
MMEMory	Saves and recalls instrument states
OUTPut	Turns RF power ON and OFF
ROUTE	Controls internal switch to reference receiver. (Opt 81)
+ SENSE Click to hide and show SENSE branches	
:AVERage	Sweep Averaging
:BANDwidth	IF Bandwidth
:CORRection	Calibration and other correction settings
:COUPle	Chopped or Alternate sweep
:FOM	Frequency Offset (opt 080)
:FREQuency	Frequency sweep settings
:IF	IF Access settings
:IF (PNA-X)	IF Access settings
:MIXer	FCA measurements (opts 082 and 083)
:MULTiplexer	Controls external testsets.
:PATH	Provides access to hardware configuration
:POWER	Receiver attenuation and overpower protection
:PULSe (PNA-X)	Configure internal pulse generators
:ROSCillator	Returns the source of the reference oscillator.
:SEGMENT	Segment sweep settings.
:SWEep	Sweep types
:X:VALues	Returns X-axis values
SOURce	Source power to the DUT
SOURce:POWER:CORR	Source power Calibration
STATus	Reads the PNA status registers
SYSTem	Misc PNA capabilities
TRIGger	Trigger measurements

IEEE 488.2 Common Commands

[*CLS - Clear Status](#)

[*ESE - Event Status Enable](#)

[*ESE? - Event Status Enable Query](#)

[*ESR? - Event Status Enable Register](#)

[*IDN? - Identify](#)

[*OPC - Operation complete command](#)

[*OPC? - Operation complete query](#)

[*OPT? - Identify Options Query](#)

[*RST - Reset](#)

[*SRE - Service Request Enable](#)

[*SRE? - Service Request Enable Query](#)

[*STB? - Status Byte Query](#)

[*TST? - Result of Self-test Query](#)

[*WAI - Wait](#)

See Also

- [Example Programs](#)
 - [Synchronizing the PNA and Controller](#)
 - [SCPI Command Tree](#)
-

***CLS - Clear Status**

Clears the instrument status byte by emptying the error queue and clearing all event registers. Also cancels any preceding *OPC command or query. See [Status Commands](#) and [Reading the Analyzer's Status Registers](#).

***ESE - Event Status Enable**

Sets bits in the standard event status enable register. See [Status Commands](#) and [Reading the Analyzer's Status Registers](#).

***ESE? - Event Status Enable Query**

Returns the results of the standard event enable register. The register is cleared after reading it. See [Status Commands](#) and [Reading the Analyzer's Status Registers](#).

***ESR - Event Status Enable Register**

Reads and clears event status enable register. See [Status Commands](#) and [Reading the Analyzer's Status Registers](#).

***IDN? - Identify**

Returns a string that uniquely identifies the analyzer. The string is of the form "Agilent Technologies",<model number>,<serial "number">,<software revision>" .

Note: Beginning with Rev 6.01, this command now returns the software revision with 6 digits instead of 4. For example, A.06.01.02.

***OPC - Operation complete command**

Generates the OPC message in the standard event status register when all pending overlapped operations have been completed (for example, a sweep, or a Default). See [Understanding Command Synchronization](#).

***OPC? - Operation complete query**

Returns an ASCII "+1" when all pending overlapped operations have been completed. See [Understanding Command Synchronization](#)

***OPT? - Identify Options Query**

Returns a string identifying the analyzer option configuration.

***RST - Reset**

Executes a device reset and cancels any pending *OPC command or query, exactly the same as a [SYSTem:PRESet](#). The contents of the analyzer's non-volatile memory are not affected by this command.

***SRE - Service Request Enable**

Before reading a status register, bits must be enabled. This command enables bits in the service request register. The current setting is saved in non-volatile memory. See [Status Commands](#) and [Reading the Analyzer's Status Registers](#).

***SRE? - Service Request Enable Query**

Reads the current state of the service request enable register. The register is cleared after reading it. The return value can be decoded using the table in [Status Commands](#). See also [Reading the Analyzer's](#)

[Status Registers.](#)

***STB? - Status Byte Query**

Reads the value of the instrument status byte. The register is cleared only when the registers feeding it are cleared. See [Status Commands](#) and [Reading the Analyzer's Status Registers.](#)

***TST? - Result of Self-test Query**

Returns the result of a query of the analyzer hardware status. An **0** indicates no failures found. Any other value indicates one or more of the following conditions exist. The value returned is the Weight (or sum of the Weights) of the existing conditions. For example:

- If **4** is returned from *TST?, an **Overpower** condition exists.
- If **6** is returned, both **Unleveled** and **Overpower** conditions exist.

Bit	Weight	Description	Bit is set to 1 when the following conditions exist:
0	1	Phase Unlock	The source has lost phaselock. This could be caused by a reference channel open or a hardware failure.
1	2	Unleveled	The source power is unleveled. This could be a source is set for more power than it can deliver at the tuned frequency. Or it could be caused by a hardware failure.
2	4	Not used	
3	8	EE Write Failed	An attempted write to the EEPROM has failed. This is possibly caused by a hardware failure.
4	16	YIG Cal Failed	The analyzer was unable to calibrate the YIG. Either the phaselock has been lost or there has been a hardware failure.
5	32	Ramp Cal Failed	The analyzer was unable to calibrate the analog ramp generator due to a possible hardware failure.
6	64	Not used	

***WAI - Wait**

Prohibits the instrument from executing any new commands until all pending overlapped commands have been completed. See [Understanding Command Synchronization](#)

Abort Command

ABORt


(Write-only) Stops all sweeps - then resume per current trigger settings. This command is the same as [INITtiate:IMMediate](#) (restart) except if a channel is performing a single sweep, ABORt will stop the sweep, but not initiate another sweep.

Learn about [Synchronizing the PNA and Controller](#)

Examples	ABOR abort
Query Syntax	Not applicable
Default	Not applicable

Calculate:Correction Commands

Controls error correction functions.

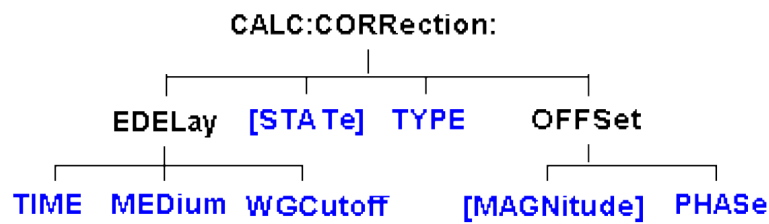

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- New [Calibrating the PNA Using SCPI](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

CALCulate<num>:CORRection:EDELay:MEDium <char>

(Read-Write) Sets the media used when calculating the electrical delay.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1.
- <num> Choose from: **COAX** for coaxial medium, **WAVE**guide for waveguide medium.

Examples

```
CALC:CORR:EDEL:MED COAX
calc3:corr:edelay:medium waveguide
```

Query Syntax CALCulate<num>:CORRection:EDELay:MEDium?

Return Type Character

Default COAX

CALCulate<cnum>:CORRection:EDELay:TIME <num>

(Read-Write) Sets the electrical delay for the selected measurement.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <num> Electrical delay in seconds. Choose any number between:
-10.00 and **10.00**
Use [SENS:CORR:RVEL:COAX](#) <num> to set Velocity factor.

Examples

```
CALC1:CORR:EDEL:TIME 1NS  
calculate2:correction:time 0.5e-12
```

Query Syntax CALCulate:CORRection:EDELay:TIME?

Return Type Numeric

Default 0 seconds

CALCulate<cnum>:CORRection:EDELay:WGCutoff <num>

(Read-Write) Sets the waveguide cutoff frequency used when the electrical delay media is set to WAVEguide. (See [CALCulate:CORRection:EDELay:MEDium<char>](#).)

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1.
- <num> Waveguide cutoff frequency used with the electrical delay calculation.

Examples

```
CALC:CORR:EDEL:WGC 18.067 GHz  
calculate3:correction:edelay:wgcutoff 14.047 ghz
```

Query Syntax CALCulate<cnum>:CORRection:EDELay:WGCutoff?

Return Type Numeric

Default 45 MHz

CALCulate<cnum>: CORRection:[STATe] <bool>

(Read-Write) Turns error correction ON or OFF for the selected measurement on the specified channel.

To turn error correction ON or OFF for a channel, use [SENS:CORR:STATe](#).

[See Critical Note](#)

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<bool> Correction state. Choose from:

0 - Correction OFF

1 - Correction ON

Examples

```
CALC:CORR ON
```

```
calculate:correction:state off
```

Query Syntax CALCulate<cnum>: CORRection: STATe?

Return Type Boolean

Default Not Applicable

CALCulate<cnum>:CORRection:TYPE <string>

(Read-Write) Sets the Cal Type for the selected measurement on the specified channel. This is used when a Cal Set is applied. [Learn more about applying Cal Types](#).

- Use [SENS:CORR:TYPE:CAT?](#) to list the Cal Types in the PNA.
- Use [SENS:CORR:CSET:TYPE:CAT?](#) to list the Cal Types contained in the active Cal Set for the channel.
- Use [SENS:CORR:COLL:METH](#) to set the Cal type to perform a new calibration,

[See Critical Note](#)

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<string> **(String)** Cal type. Case sensitive. Use one of the following:

For Full Calibrations:

This command does not distinguish between TRL and SOLT. The same number of error terms is applied for both Cal Types.

"Full n Port (x,y,z...)"

where

n = the number of ports to calibrate

x,y,z = the port numbers to calibrate

For example:

```
"Full 7 Port(2,3,4,5,6,7,8)"
```

For Response Calibrations:

"Response(param)" OR

"ResponseAndIsolation(param)"

Where param =

- S-parameter. For example"
 - `"Response(S21)"`
 - `"ResponseAndIsolation(A/R)"`
- Single or ratioed receivers using either [logical receiver notation](#) or physical receiver notation. For example:
 - `"Response(A)"`
 - `"ResponseAndIsolation(a3/b4)"`

For FCA Calibrations:

- "Scalar Mixer Cal"
- "SMC with NO Output Match Correction"
- "SMC with NO Input Match Correction"
- "SMC with NO Match Correction"
- "Vector Mixer Cal"
- "Characterize Mixer Only"

You can also use a ClassID or GUID. For example:

- CLSID - "VectorMixerCal.VCMCType"
- GUID - "{2061767B-0FE2-4F6F-86D0-9AB332B18DA5}"

Examples `CALC:CORR:TYPE "Vector Mixer Cal"`

Query Syntax `CALCulate<cnum>:CORRection:TYPE?`

Return Type String

Default Not Applicable

CALCulate<cnum>:CORRection:OFFSet[:MAGNitude] <num> **Superseded**

Note: This command is replaced with [SENS:CORR:RPOWER:OFFSet\[:AMPLitude\]](#). To set data trace magnitude offset, use [CALC:OFFS:MAGN](#). This command does NOT function for FCA measurements.

See an example of a [Receiver Power Calibration](#).

(Read-Write)

For Receiver Power Calibration, specifies the power level to which the selected (unratioed) measurement data is to be adjusted. This command applies only when the selected measurement is of unratioed power.

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <num> Cal power level in dBm. No limits are enforced on this value, but the PNA receivers themselves have maximum and minimum power specifications (that may differ between PNA models) which this value must comply with for a valid receiver power cal.

Examples `CALC:CORR:OFFS 10DBM`
`calculatel:correction:offset:magnitude maximum`

Query Syntax `CALCulate<cnum>:CORRection:OFFSet[:MAGNitude]?`

Return Type Numeric

Default 0dBm

CALCulate<cnum>:CORRection:OFFSet:PHASe <num>[<char>] **Superseded**

Note: This command is replaced with [CALC:OFFS:PHASe](#)

(Read-Write) Sets the phase offset for the selected measurement.

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <num> Offset phase value. Choose any number between:
-360 and **360**
- <char> Units for phase. OPTIONAL. Choose either:
DEG - Degrees (default)
RAD - Radians

Examples

```
CALC:CORR:OFFS:PHAS 10  
calculate:correction:offset:phase 20rad
```

Query Syntax CALCulate:CORRection:OFFSet:PHASe?

Return Type Numeric, returned value always in degrees


Default 0 degrees

Last modified:

9/12/06 MQ Modified Calc:Corr for multiport.

Calculate:Custom Commands

Provides capability to create and modify [Frequency Converter Application](#) (opt 083) measurements.

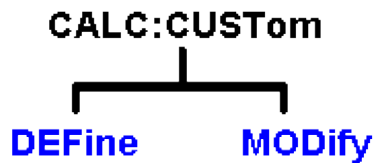

See Also

- [Example Programs](#)
 - [Synchronizing the PNA and Controller](#)
 - [SCPI Command Tree](#)
-

CALCulate<cnum>:CUSTom:DEFine <Mname>, <type> [,param]

(Write-only) Creates a custom measurement. The custom measurement is not automatically displayed. You must also do the following:

- Use [DISP:WIND:STATE](#) to create a window if it doesn't already exist.
- Use [DISP:WIND:TRAC:FEED](#) to display the measurement
- Select the measurement ([CALC:PAR:SEL](#)) before making additional settings.

See an example using this command to create a [VMC](#) and [SMC](#) measurement

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1.

<Mname> Name of the measurement. Any non-empty, unique string, enclosed in quotes.

<type> String. The type of custom measurement. Choose from:

- "Vector Mixer/Converter"
- "Scalar Mixer/Converter"

These arguments are new with PNA release 6.0. The old arguments are still supported.

[param] String. Optional parameter specifies the measurement parameter to create.

Type	Valid Parameters:
Vector Mixer/Converter	"S11" "VC21" "S22"
Scalar Mixer/Converter	"S11" "SC21" "SC12" "S22" "Ipwr" "RevIPwr" "Opwr" "RevOPwr"

Examples

CALC2:CUST:DEF 'My VC21', 'Vector Mixer/Converter','S22'

Query Syntax

Not applicable

Overlapped?

No

Default

Not applicable

CALCulate<cnum>:CUSTom:MODIfy <param>

(Write-only) Changes the selected custom measurement to a different parameter.

See an example using this command for a [VMC](#) and [SMC](#) measurement

Parameters

- <num> Channel of the custom measurement to be changed. First, select the measurement using [CALC:PAR:SEL](#).
- <param> Parameter to change the custom measurement to. Select a parameter that is valid for the type of measurement.

Type	Valid Parameters
VMC Measurement	"S11" "VC21" "S22"
SMC Measurement	"S11" "SC21" "SC12" "S22" "Ipwr" "RevIPwr" "Opwr" "RevOPwr"

Examples

```
SYST:PRES  
  
CALC2:CUST:DEF 'My VC21', 'Vector Mixer/Converter'  
  
CALC:PAR:SEL 'My VC21'  
  
CALC2:CUST:MOD 'S22'
```


Query Syntax Not applicable

[Overlapped?](#) No

[Default](#) Not applicable

Calculate:Data Commands

Controls writing and reading PNA measurement data.

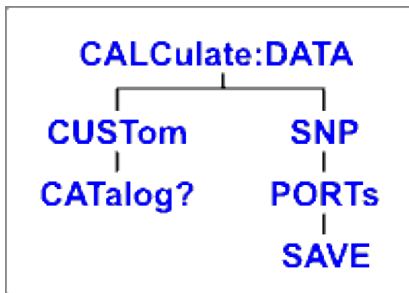

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Data Access Map](#)
- [Synchronizing the PNA and Controller](#)
- To read receiver data, use [CALC:RDATA?](#)
- To read error terms, use [SENS:CORR:CSET:DATA](#)
- To read SnP measurement data, use [CALC:DATA:SNP?](#)
- [SCPI Command Tree](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

(Write) CALCulate<cnum>:DATA <char>,<data>

(Read) CALCulate<cnum>:DATA? <char>

Reads or writes Measurement data, Memory data, or Normalization Divisor data from the [Data Access Map](#) location.

- For Measurement data, use FDATA or SDATA
- For Memory data, use FMEM or SMEM. When querying memory, you must first store a trace into memory using [CALC:MATH:MEMorize](#).
- For Normalization Divisor (Receiver Power Cal error term) data, use SDIV

- For write operations, data type depends on [FORM:DATA](#) command.

Note: The Calc:Data SCORR command to read / write error terms is **Superseded** with [SENS:CORR:CSET:DATA](#). SCORR commands do NOT accommodate greater than 12 error terms.

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

<char> **FDATA** Formatted **measurement** data to or from [Data Access Map](#) location **Display** (access point 2).

- Corrected data is returned when correction is ON.
- Uncorrected data is returned when correction is OFF.
- Returns TWO numbers per data point for Polar and Smith Chart format.
- Returns one number per data point for all other formats.
- Format of the read data is same as the displayed format.

SDATA Complex measurement data.

Writes data to [Data Access Map](#) location **Raw Measurement** (access point 0).

- When writing corrected data, and correction is ON, it will be corrected again, resulting in meaningless data.

Reads data from **Apply Error Terms** (access point 1).

- Returns TWO numbers per data point.
- Corrected data is returned when correction is ON.
- Uncorrected data is returned when correction is OFF.

FMEM Formatted memory data to or from [Data Access Map](#) location **Memory result** (access point 4).

- Returns TWO numbers per data point for Polar and Smith Chart format.
- Returns one number per data point for all other formats.
- Format of the read data is same as the displayed format.
- Returned data reflects the correction level (On|OFF) when the data was

stored into memory.

SMEM Complex measurement data to or from [Data Access Map](#) location **Memory** (access point 3).

- Returns TWO numbers per data point.
- Returned data reflects the correction level (On|OFF) when the data was stored into memory.
- Returned data reflects the correction level (On|OFF) when the data was stored into memory.

SDIV Complex data from [Data Access Map](#) location **Normalization (5)**.

- Returns TWO numbers per data point.
- If normalization interpolation is ON and the number of points changes after the initial normalization, the divisor data will then be interpolated.
- When querying the normalization divisor, you must first store a divisor trace using [CALC:NORMalize\[:IMMediate\]](#).

The following Calc:Data SCORR command to read / write error terms is **Superseded** with [SENS:CORR:CSET:DATA](#). These SCORR commands do NOT accommodate greater than 12 error terms.

For 2-Port SOLT and TRL calibrations	Specify this <char>	to get or put this Error Term...
	SCORR1	Forward Directivity
	SCORR2	Forward Source Match
	SCORR3	Forward Reflection Tracking
	SCORR4	Forward Isolation
	SCORR5	Forward Load Match
	SCORR6	Forward Transmission Tracking
	SCORR7	Reverse Directivity
	SCORR8	Reverse Source Match
	SCORR9	Reverse Reflection Tracking
	SCORR10	Reverse Isolation
	SCORR11	Reverse Load Match
	SCORR12	Reverse Transmission Tracking

EXAMPLE

```
CALC:DATA FDATA,Data(x)
calculate2:data sdata,data(r,i)
```

See another [example](#) using this command.

Return Type: [Block data](#)

Default - Not Applicable

CALCulate<cnum>:DATA:CUSTom <name>,<data>

(Read-Write) Reads or writes data from a custom-named measurement buffer.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <name> Name of the buffer to be read or written
- <data> Data to be read or written to the custom buffer. Format as one number per data point.

Examples

```
CALC:DATA:CUST 'VectorResult0',0,1,2,3,4,5 'Write'
CALC:DATA:CUST? 'VectorResult0' 'Read'
```

Query Syntax CALCulate:DATA:CUSTom? <name>

Return Type Depends on [Form:Data](#)

Default Not Applicable

CALCulate<cnum>:DATA:CUSTom:CATalog?

(Read-only) Reads the list of buffer names (comma separated list of string values) available from the selected parameter. Specify the measurement using [CALCulate:PARAmeter:SElect](#).

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

Examples

```
CALC:DATA:CUST:CAT?
```

```
calculate:data:custom:catalog?
```

Return Type String

Default Not Applicable

CALCulate<num>:DATA:SNP? <n> Superseded

Note: This command has been replaced by [CALC:DATA:SNP:PORTs?](#)

(Read-only) Reads SnP data from the selected measurement. [Learn more about SnP data](#).

Note: This command returns SNP data without header information, and in columns, not in rows as .SnP files. This means that the data returned from this command sends all frequency data, then all Sx1 magnitude data, then all Sx1 phase data, and so forth.

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

<n> Amount of data to return. If unspecified, <n> is set to 2. The number you specify must be less than or equal to the number of available ports on the PNA.

Choose from:

1 (S1P) returns data for the active measurement.

2 (S2P) returns data for the 2 port parameters associated with the current measurement. Default.

3 (S3P) returns data for the 3 port parameters associated with the current measurement.

4 (S4P) returns data for the 4 port parameters associated with the current

measurement.

SnP data can be output using several data formatting options. See [MMEM:STORe:TRACe:FORMat:SNP](#).

See also [MMEM:STOR <file>.<snp>](#)

Examples

```
CALC:PAR:DEF "MyMeasurement", S11  
  
CALC:PAR:SEL "MyMeasurement"  
  
CALC:DATA:SNP? 1
```

Return Type Depends on [FORMat:DATA](#)

Default Not Applicable

CALCulate<cnum>:DATA:SNP:PORTs? <"x,y,z">.>

Note: This command replaces [CALC:DATA:SNP?](#). This command is more explicit regarding the data to be returned, and works for PNAs with multiport test sets.

(Read-only) Reads SNP data from the selected measurement for the specified ports. [Learn more about SnP data.](#)

Note: This command returns SNP data without header information, and in columns, not in rows as .SnP files. This means that the data returned from this command sends all frequency data, then all Sx1 magnitude data, then all Sx1 phase data, and so forth.

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<"x,y,z"> Comma or space delimited port numbers for which data is requested, enclosed in quotes.

SnP data can be output using several data formatting options. See [MMEM:STORe:TRACe:FORMat:SNP](#).

Examples

```
CALC:DATA:SNP:PORTs? "1,2,4,5,7" 'read data for these ports
```

Return Type Depends on [FORMat:DATA](#)

Default Not Applicable

CALCulate<cnum>:DATA:SNP:PORTs:SAVE <"x,y,z">,<filename>

Note: This command replaces [MMEM:STOR sNp](#). This command is more explicit regarding the data to be saved, and works for PNAs with multiport test sets.

(Write-only) Saves sNp data from the selected measurement for the specified ports.

[Learn more about SNP data.](#)

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <"x,y,z"> **String** Comma or space delimited port numbers for which data is requested, enclosed in quotes.
- <filename> **String** Path, filename, and suffix of location to store the sNp data. The suffix is not checked for accuracy. If saving 2 ports, specify "filename.s2p"; If saving 4 ports, specify "filename.s4p.", and so forth.

SNp data can be output using several data formatting options. See [MMEM:STORe:TRACe:FORMat:SNP](#).

Examples

```
CALC:DATA:SNP:PORTs:Save '1,2,4','C:/Program  
Files/Agilent/Network Analyzer/Documents/MyData.s3p'
```

Return Type Depends on [FORMat:DATA](#)


Default Not Applicable

Last modified:

April 26, 2007	Added clarification to Calc:Data SDATA
9/18/06	MQ Added two SNP Ports commands for multiport

Calculate:Equation Commands

Controls Equation Editor capabilities.

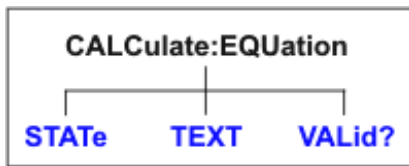

Click on a [blue](#) keyword to view the command details.

see Also

- [Example Programs](#)
- [Learn about Equation Editor](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

CALCulate<cnum>:EQUation:STATe <bool>

(Read-Write) Turns ON and OFF the equation on selected measurement for the specified channel. If the equation is not valid, then processing is not performed. Use [CALC:EQUation:VALid?](#) to ensure that the equation is valid.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <bool> **ON** (or 1) - turns equation ON.
- OFF** (or 0) - turns equation OFF.

Examples

```
CALC:EQU:STAT 1  
calculate2:equation:state 0
```

Query Syntax CALCulate<cnum>:EQUation:STATe?

Return Type Boolean

Default OFF (0)

CALCulate<cnum>:EQUation:TEXT <string>

(Read-Write) Specifies an equation or expression to be used on the selected measurement for the specified channel.

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<string> Any valid equation or expression. [See Equation Editor.](#)

Examples

'Equation (includes '=')

```
CALC:EQU:TEXT "foo=S11/S21"
```

'Expression'

```
calculate2:equation:text "S11/S21"
```

Query Syntax CALCulate<cnum>:EQUation:TEXT?

Return Type String

Default Not Applicable

CALCulate<cnum>:EQUation:VALid?

(Read-Write) Returns a boolean value to indicate if the current equation on the selected measurement for the specified channel is valid. For equation processing to occur, the equation must be valid and ON ([CALC:EQU:STAT 1](#)).

[See Critical Note](#)

Parameters

<cnun> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnun> is set to 1.

Examples

```
CALC:EQU:VAL?
```

```
calculate2:equation:valid?
```

Return Type

Boolean

1 - equation is valid


0 - equation is NOT valid

Default

Not Applicable

Calculate:Filter Commands

Controls the gating function used in time domain measurements. The gated range is specified with either (start / stop) or (center / span) commands.

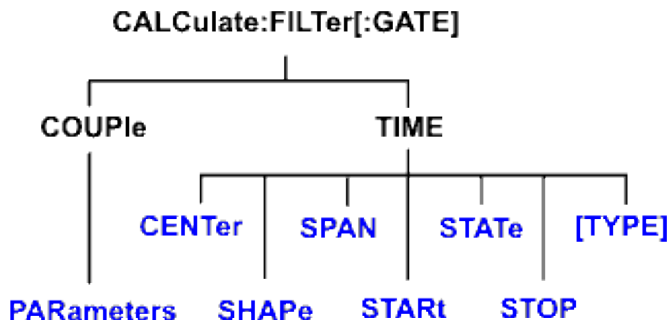

Click on a [blue](#) keyword to view the command details.

see Also

- [Example Programs](#)
- [Learn about Gating](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

CALCulate<cnum>:FILTERf:GATEl:COUPLe:PARAMeters <num>

(Read-Write) Specifies the time domain gating parameters to be coupled. The settings for those parameters will be copied from the selected measurement to all other measurements on the channel.

- To enable Trace Coupling, use [SENS:COUP:PAR](#)
- To specify Transform parameters to couple, use [CALC:TRAN:COUP:PAR](#)

Learn more about [Time Domain Trace Coupling](#)

[See Critical Note](#)

Parameters

<cnun> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnun> is set to 1.

<num> (Numeric) Parameters to couple. To specify more than one parameter, add the numbers.

1 - Gating Stimulus (Start, Stop, Center, and Span TIME settings.)

2 - Gating State (ON / OFF)

4 - Gating Shape (Minimum, Normal, Wide, and Maximum)

8 - Gating Type (Bandpass and Notch)

Examples

To couple all parameters:

```
CALC:FILT:COUP:PAR 15
```

To couple Stimulus and Type:

```
calculate2:filter:gate:couple:parameters 9
```

Query Syntax CALCulate<cnun>:FILTer:GATE:COUPle:PARAmeters?

Return Type Numeric

Default 13 (All parameters except **2** - Gating State)

CALCulate<cnun>:FILTer[:GATE]:TIME:CENTer <num>

(Read-Write) Sets the gate filter center time.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <num> Center time in seconds; Choose any number between:
 $\pm (\text{number of points}-1) / \text{frequency span}$

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
CALC:FILT:GATE:TIME:CENT -5 ns  
calculate2:filter:time:center maximum
```

Query Syntax CALCulate<num>:FILTer[:GATE]:TIME:CENTer?

Return Type Numeric

Default 0

CALCulate<num>:FILTer[:GATE]:TIME:SHAPE <char>

(Read-Write) Sets the gating filter shape when in time domain.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <char> Choose from
MAXimum - the widest gate filter available
WIDE -
NORMal -
MINimum - the narrowest gate filter available

Examples

```
CALC:FILT:GATE:TIME:SHAP MAX  
calculate2:filter:time:shape normal
```

Query Syntax CALCulate<num>:FILTer[:GATE]:TIME:SHAPE?

Return Type Character

Default NORMal

CALCulate<cnum>:FILTer[:GATE]:TIME:SPAN <num>

(Read-Write) Sets the gate filter span time.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <num> Time span in seconds; Choose any number between:
0 and $2 * [(number\ of\ points - 1) / frequency\ span]$

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
CALC:FILT:GATE:TIME:SPAN 5 ns  
calculate2:filter:time:span maximum
```

Query Syntax CALCulate<cnum>:FILTer[:GATE]:TIME:SPAN?

Return Type Numeric

Default 20 ns

CALCulate<cnum>:FILTer[:GATE]:TIME:STaTe <boolean>

(Read-Write) Turns gating state ON or OFF.

[See Critical Note](#)

Note: Sweep type must be set to LInear Frequency in order to use Transform Gating.

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <boolean> **ON** (or 1) - turns gating ON.
OFF (or 0) - turns gating OFF.

Examples

```
CALC:FILT:TIME:STAT ON  
calculate2:filter:gate:time:state off
```

Query Syntax CALCulate<cnum>:FILTer[:GATE]:TIME:STaTe?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

CALCulate<cnum>:FILTer[:GATE]:TIME:START <num>

(Read-Write) Sets the gate filter start time.

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<num> Start time in seconds; any number between:
 $\pm (\text{number of points}-1) / \text{frequency span}$

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
CALC:FILT:TIME:STAR 1e-8  
calculate2:filter:gate:time:start minimum
```

Query Syntax CALCulate<cnum>:FILTer[:GATE]:TIME:START?

Return Type Numeric

Default 10 ns

CALCulate<cnum>:FILTer[:GATE]:TIME:STOP <num>

(Read-Write) Sets the gate filter stop time.

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<num> Stop time in seconds; any number between:
 $\pm (\text{number of points}-1) / \text{frequency span}$

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
CALC:FILT:TIME:STOP -1 ns  
calculate2:filter:gate:time:stop maximum
```

Query Syntax CALCulate<cnum>:FILTer[:GATE]:TIME:STOP?

Return Type Numeric

Default 10 ns

CALCulate<cnum>:FILTer[:GATE]:TIME[:TYPE] <char>

(Read-Write) Sets the type of gate filter used.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <char> Choose from:
 - BPASs** - Includes (passes) the range between the start and stop times.
 - NOTCh** - Excludes (attenuates) the range between the start and stop times.

 
Examples

```
CALC:FILT:TIME BPAS
calculate2:filter:gate:time:type notch
```

Query Syntax CALCulate<cnum>:FILTer[:GATE]:TIME[:TYPE]?

Return Type Character

Default BPAS



Calculate:Format Command

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

See Also

- [Example](#) using this command.
 - [Learn About Data Format](#)
 - [Synchronizing the PNA and Controller](#)
-

CALCulate<cnum>:FORMat <char>

(Read-Write) Sets the display format for the measurement.

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<char> Choose from:

- MLINear
- MLOGarithmic
- PHASe
- UPHase 'Unwrapped phase'
- IMAGinary
- REAL
- POLar
- SMITH
- SADMittance 'Smith Admittance'
- SWR
- GDElay 'Group Delay'


Examples

```
CALC:FORM MLIN  
calculate2:format polar
```

Query Syntax CALCulate<cnum>:FORMat?**Return Type** Character**Default** MLINear

Calculate:FSimulator Commands

Specifies settings and fixturing for Balanced Measurements.

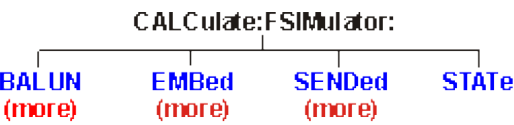

Click a **blue** keyword to view the command details.

See Also

- [Example Programs](#)
 - [SCPI Command Tree](#)
-

CALCulate<cnum>:FSIMulator:STATe <bool>

(Read-Write) Turns all three fixturing functions (de-embedding, port matching, impedance conversion) ON or OFF for all ports on the specified channel. Does not affect port extensions.

Note: This command affects ALL measurements on the specified channel.

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <bool> Choose from:
 - ON or 1** - Turns Fixturing ON
 - OFF or 0** - Turns Fixturing OFF

Examples


```
CALC:FSIM:STAT 1
calculate2:fsimulator:state 0
```

Query Syntax CALCulate<cnum>:FSIMulator:STATe?

Return Type Boolean

Default OFF

Calculate:Function Commands

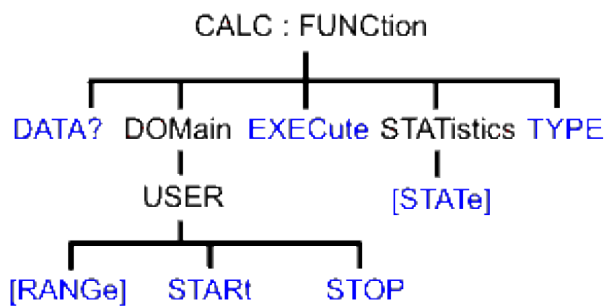

Click on a [blue](#) keyword to view the command details.

see Also

- [Example Programs](#)
- [Learn about Trace Statistics](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

CALCulate<num>:FUNCTION:DATA?

(Read-only) Returns the trace statistic data for the selected statistic type for the specified channel. Select the type of statistic with [CALC:FUNC:TYPE](#).

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

Return Type Depends on [FORM:DATA](#)

Example CALCulate2:FUNCTION:DATA?

Default Not applicable

CALCulate<num>:FUNCTION:DOMain:USER[:RANGe] <range>

(Read-Write) Sets the range used to calculate trace statistics. Each channel has 16 user ranges. The x-axis range is specified with the [CALC:FUNC:DOM:USER:START](#) and [STOP](#) commands.

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

<range> Range number. Choose from: **0** to **16**

0 is Full Span of the current x-axis range

1 to 16 are user-specified ranges

Examples

```
CALC:FUNC:DOM:USER 4
calculate2:function:domain:user:range 0
```

Query Syntax CALCulate<num>:FUNCtion:DOMain:USER[:RANGe]?

Return Type Numeric

Default 0 - Full Span

CALCulate<num>:FUNCtion:DOMain:USER:START <range>, <start>

(Read-Write) Sets the start of the specified user-domain range.

To apply this range, use [CALC:FUNC:DOM:USER](#)

To set the stop of the range, use [CALC:FUNC:DOM:USER:STOP](#).

[See Critical Note](#)

Note: This command does the same as [CALC:MARK:FUNC:DOM:USER:STAR](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

<range> Range number that will receive the start value. Choose an integer between **1** and **16**

<start> Start value of the specified range. Choose a real number between: the analyzer's **Minimum** and **Maximum** x-axis value.

Examples

```
CALC:FUNC:DOM:USER:STAR 1,1e9
calculate2:function:domain:user:start 2,2e9
```

Query Syntax	CALCulate<cnum>:FUNCTion:DOMain:USER:START? <range>
Return Type	Numeric
<u>Default</u>	The analyzer's Minimum x-axis value

CALCulate<cnum>:FUNCTion:DOMain:USER:STOP <range>, <stop>

(Read-Write) Sets the stop value of the specified user-domain range.

To apply this range, use [CALC:FUNC:DOM:USER](#).

To set the start of the range, use [CALC:FUNC:DOM:USER:START](#)

[See Critical Note](#)

Note: This command does the same as [CALC:MARK:FUNC:DOM:USER:STOP](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <range> Range number that will receive the stop value. Choose an integer between **1** and **16**
- <stop> Stop value of the specified range. Choose a real number between: the analyzer's **Minimum** and **Maximum** x-axis value.

Examples

```
CALC:FUNC:DOM:USER:STOP 4,5e9
calculate2:function:domain:user:stop 3,8e9
```

Query Syntax	CALCulate<cnum>:FUNCTion:DOMain:USER:STOP? <range>
Return Type	Numeric
<u>Default</u>	The analyzer's Maximum x-axis value

CALCulate<cnum>:FUNCTion:EXECute

(Write-only) For the active trace of specified channel, executes the statistical analysis specified by the [CALC:FUNC:TYPE](#) command.

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

Examples

```
CALC:FUNC:EXEC  
calculate2:function:execute
```

Query Syntax Not Applicable

Default Not Applicable

CALCulate<num>:FUNCTION:STATistics[:STATE] <ON|OFF>

(Read-Write) Displays and hides the trace statistics (peak-to-peak, mean, standard deviation) on the screen.

The analyzer will display either measurement statistics or Filter Bandwidth statistics; not both.

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

<ON|OFF> ON - Displays trace statistics

OFF - Hides trace statistics

Examples

```
CALC:FUNC:STAT ON  
calculate2:function:statistics:state off
```

Query Syntax CALCulate<num>:FUNCTION:STATistics[:STATE]?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF (0)

CALCulate<num>:FUNCTION:TYPE <char>

(Read-Write) Sets statistic TYPE that you can then query using [CALC:FUNCtion:DATA?](#).

Note: In PNA releases 4.2 and prior, this command applied the statistic type to all measurements. Now, this command affects only the selected measurement on the specified channel.

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

<char> Choose from:

PTPeak - the difference between the max and min data points on the trace.

STDEV - standard deviation of all data points on the trace

MEAN - mean (average) of all data points on the trace

MIN - lowest data point on the trace

MAX - highest data point on the trace

Examples

```
CALC:FUNC:TYPE PTP
calculate2:function:type stdev
```


Query Syntax CALCulate<num>:FUNCtion:TYPE?

Return Type Character

Default PTPeak

Calc:Limit Commands

Controls the limit segments used for pass / fail testing.

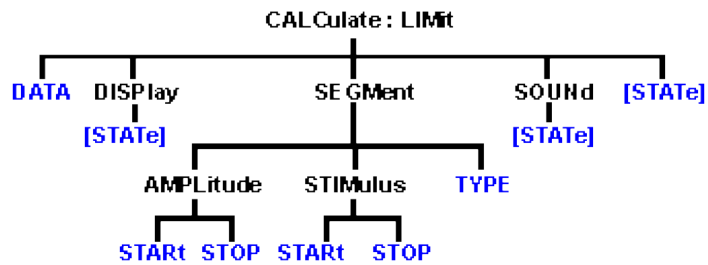

Click on a [blue](#) keyword to view the command details.

see Also

- [Example Programs](#)
- [Learn about Limit Lines](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

CALCulate<cnum>:LIMit:DATA <block>

(Read-Write) Sets data for limit segments.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <block> Data for all limit segments in REAL,64 format. The following is the data format for 1 segment:
Type,BegStim, EndStim, BegResp,EndResp

Type Type of limit segment. Choose from
0 - Off
1 - Max
2 - Min

BegStim Start of X-axis value (freq, power, time)

EndStim End of X-axis value

BegResp Y-axis value that corresponds with Start of X-axis value

EndResp Y-axis value that corresponds with End of X-axis value

Examples

The following writes three max limit segments for a bandpass filter.

```
"CALC:LIM:DATA 1,3e5,4e9,-60,0,1,4e9,7.5e9,0,0,1,7.5e9,9e9,0,-30"
```

Query Syntax CALCulate<cnum>:LIMit:DATA?

Return Type Depends on [FORM:DATA](#) - All 100 predefined limit segments are returned.

Default 100 limit segments - all values set to 0

CALCulate<cnum>:LIMit:DISPlay[:STATe] <ON | OFF>

(Read-Write) Turns the display of limit segments ON or OFF (if the data trace is turned ON).

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<ON | OFF> **ON** (or 1) - turns the display of limit segments ON.
OFF (or 0) - turns the display of limit segments OFF.

Examples

```
CALC:LIM:DISP:STAT ON  
calculate2:limit:display:state off
```

Query Syntax CALCulate<cnum>:LIMit:DISPlay[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

CALCulate<cnum>:LIMit:SEGment<snum>AMPLitude:STARt <num>

(Read-Write) Sets the start (beginning) of the Y-axis amplitude (response) value.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <snum> Segment number; if unspecified, value is set to 1.
- <num> Choose any number between: **-500** and **500**
- Display value is limited to the Maximum and Minimum displayed Y-axis values.

Examples

```
CALC:LIM:SEGM1:AMPL:STAR 10  
calculate2:limit:segment2:amplitude:start 10
```

Query Syntax CALCulate<num>:LIMit:SEGMent<snum>AMPLitude:STARt?

Return Type Numeric

Default 0

CALCulate<num>:LIMit:SEGMent<snum>AMPLitude:STOP <num>

(Read-Write) Sets the stop (end) of the Y-axis amplitude (response) value.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <snum> Segment number; if unspecified, value is set to 1.
- <num> Choose any number between: **-500** and **500**
- Display value is limited to the Maximum and Minimum displayed Y-axis values.

Examples

```
CALC:LIM:SEGM1:AMPL:STOP 10  
calculate2:limit:segment2:amplitude:stop 10
```

Query Syntax CALCulate<num>:LIMit:SEGMent<snum>AMPLitude:STOP?

Return Type Numeric

Default 0

CALCulate<cnum>:LIMit:SEGment<snum>STIMulus:STARt <num>

(Read-Write) Sets the start (beginning) of the X-axis stimulus value.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <snum> Segment number; if unspecified, value is set to 1.
- <num> Choose any number within the X-axis span of the analyzer.

Examples

```
CALC:LIM:SEGM1:STIM:STAR 10  
calculate2:limit:segment2:stimulus:start 10
```

Query Syntax CALCulate<cnum>:LIMit:SEGment<snum>STIMulus:STARt?

Return Type Numeric

Default 0

CALCulate<cnum>:LIMit:SEGment<snum>STIMulus:STOP <num>

(Read-Write) Sets the stop (end) of the X-axis stimulus value.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <snum> Segment number; if unspecified, value is set to 1.
- <num> Choose any number within the X-axis span of the analyzer.

Examples

```
CALC:LIM:SEGM1:AMPL:STOP 10  
calculate2:limit:segment2:stimulus:stop 10
```

Query Syntax CALCulate<cnum>:LIMit:SEGment<snum>STIMulus:STOP?

Return Type Numeric

Default 0

CALCulate<cnum>:LIMit:SEGment<snum>:TYPE <char>

(Read-Write) Sets the type of limit segment.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <snm> Segment number. Choose any number between:
1 and **100**
If unspecified, value is set to 1.
- <char> Choose from:
LMAX - a MAX limit segment. Any response data exceeding the MAX value will fail.
LMIN - a MIN limit segment. Any response data below the MIN value will fail.
OFF - the limit segment (display and testing) is turned OFF.

Examples

```
CALC:LIM:SEGM:TYPE LMIN  
calculate2:limit:segment3:type lmax
```

Query Syntax CALCulate<num>:LIMit:SEGMent<snm>:TYPE?

Return Type Character

Default OFF

CALCulate<num>:LIMit:SOUNd[:STATe] <ON | OFF>

(Read-Write) Turns limit testing fail sound ON or OFF.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <ON | OFF> **ON** (or 1) - turns sound ON.
OFF (or 0) - turns sound OFF.

Examples

```
CALC:LIM:SOUN ON  
calculate2:limit:sound:state off
```

Query Syntax CALCulate<num>:LIMit:SOUNd[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

CALCulate<cnum>:LIMit:STATe <ON | OFF>

(Read-Write) Turns limit segment **testing** ON or OFF.

- Use [CALC:LIM:DISP](#) to turn ON and OFF the **display** of limit segments.
- If using [Global Pass/Fail](#) status, trigger the PNA AFTER turning Limit testing ON.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <ON | OFF> **ON** (or 1) - turns limit testing ON.
OFF (or 0) - turns limit testing OFF.

Examples

```
CALC:LIM:STAT ON  
calculate2:limit:state off
```


Query Syntax CALCulate<cnum>:LIMit:STATe?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

Calculate:Marker Commands

Controls the marker settings used to remotely output specific data to the computer.

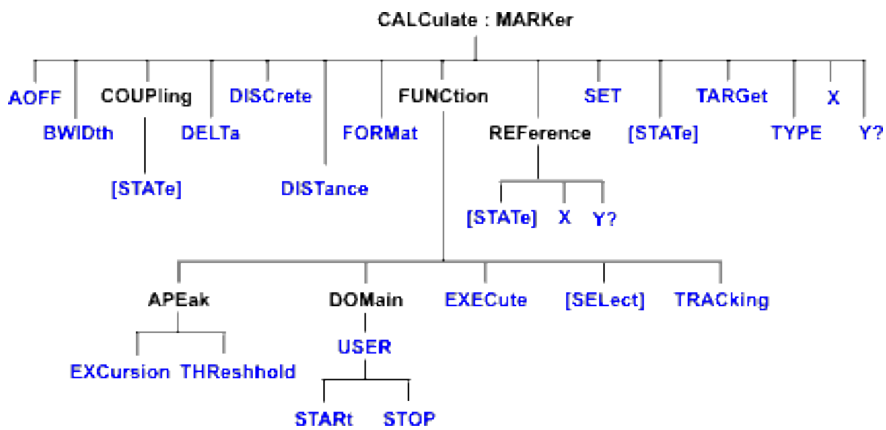

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- See Marker Readout [number](#) and [size](#) commands.
- [Learn about Markers](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

Note: The Reference Marker is Marker Number 10

CALCulate<cnum>:MARKer:AOff

(Write-only) Turns all markers off for selected measurement.

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

Examples

```
CALC:MARK:AOff  
calculate2:marker:aoff
```

Query Syntax Not applicable

Default Not applicable

CALCulate<num>:MARKer:BWIDth <num>

(Read-Write) Turns on and sets markers 1 through 4 to calculate filter bandwidth. The <num> parameter sets the value below the maximum bandwidth peak that establishes the bandwidth of a filter. For example, if you want to determine the filter bandwidth 3 db below the bandpass peak value, set <num> to -3.

This feature activates markers 1 through 4. To turn off these markers, either turn them off individually or turn them [All Off](#).

The analyzer screen will show either Bandwidth statistics OR Trace statistics; not both.

To search a User Range with the bandwidth search, first activate marker 1 and set the desired [User Range](#). Then send the CALC:MARK:BWID command. The user range used with bandwidth search only applies to marker 1 searching for the max value. The other markers may fall outside the user range.

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

<num> Target value below filter peak. Choose any number between :-500 and 500

Examples

```
CALC:MARK:BWID -3  
calculate2:marker:bwid -2.513
```

Query Syntax CALCulate<num>:MARKer:BWIDth?
Returns the results of bandwidth search:

Return Type Numeric - Four Character values separated by commas: bandwidth, center Frequency, Q, loss.

Default -3

CALCulate<cnum>:MARKer<mkr>:COUPling[:STATe]<ON|OFF>

(Read-Write) Sets and Reads the state of Coupled Markers (ON and OFF)

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<mkr> Any existing marker number from 1 to 10; if unspecified, value is set to 1.

<ON|OFF> **False (0)** - Turns Coupled Markers OFF

True (1) - Turns Coupled Markers ON

Examples

```
CALC:MARK:COUP ON  
calculate2:marker8:coupling off
```

Query Syntax CALCulate<cnum>:MARKer<mkr>:COUPling:[STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

CALCulate<cnum>:MARKer<mkr>:DELTa <ON|OFF>

(Read-Write) Specifies whether marker is relative to the Reference marker or absolute.

Note: The reference marker must already be turned ON with [CALC:MARK:REF:STATE](#).

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <mkr> Any existing marker number from 1 to 10; if unspecified, value is set to 1.
- <ON|OFF> **ON** (or 1) - Specified marker is a Delta marker
OFF (or 0) - Specified marker is an ABSOLUTE marker

Examples

```
CALC:MARK:DELT ON  
calculate2:marker8:delta off
```

Query Syntax CALCulate<num>:MARKer<mkr>:DELTa?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

CALCulate<num>:MARKer<mkr>:DIScrete <ON|OFF>

(Read-Write) Makes the specified marker display either a calculated value between data points (interpolated data) or the actual data points (discrete data).

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <mkr> Any existing marker number from 1 to 10; if unspecified, value is set to 1.
- <ON|OFF> **ON** (or 1) - Specified marker displays the actual data points
OFF (or 0) - Specified marker displays calculated data between the actual data points.

Examples

```
CALC:MARK:DISC ON  
calculate2:marker8:discrete off
```

Query Syntax CALCulate<num>:MARKer<mkr>:DIScrete?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

CALCulate<cnum>:MARKer<mkr>:DISTance <num>

(Read-Write) Set or query marker distance on a time domain trace.

The Write command moves the marker to the specified distance value. Once moved, you can [read the Y axis](#) value or [read the X-axis time](#) value. (Distance is calculated from the X-axis time value.)

The Read command reads the distance of the marker.

If the marker is set as delta, the WRITE and READ data is relative to the reference marker.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <mkr> Any existing marker number from 1 to 10; if unspecified, value is set to 1.
- <num> Marker distance in the unit of measure specified with [CALC:TRAN:TIME:MARK:UNIT](#)

Examples

```
CALC:MARK:DIST .1  
calculate2:marker8:distance 5
```

Query Syntax CALCulate<cnum>:MARKer<mkr>:DISTance?

Return Type Numeric

Default Not Applicable

CALCulate<cnum>:MARKer<mkr>:FORMat <char>

(Read-Write) Sets the format of the data that will be returned in a marker data query CALC:MARK:Y? and the displayed value of the marker readout. The selection does not have to be the same as the measurement's display format.

[See Critical Note](#)

Parameters

<cnm> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnm> is set to 1.

<mkr> Any marker number from 1 to 10; if unspecified, value is set to 1

<char> Choose from:

DEFault - The format of the selected measurement

MLINear - Linear magnitude

MLOGarithmic - Logarithmic magnitude

IMPedance - $(R+jX)$

ADMittance - $(G+jB)$

PHASe - Phase

IMAGinary - Imaginary part (Im)

REAL - Real part (Re)

POLar - (Re, Im)

GDELay - Group Delay

LINPhase - Linear Magnitude and Phase

LOGPhase - Log Magnitude and Phase

Examples

```
CALC:MARK:FORMat MLIN  
calculate2:marker8:format Character
```

Query Syntax CALCulate<cnm>:MARKer<mkr>:FORMat?

Return Type Character

Default DEFault

CALCulate<cnm>:MARKer<mkr>:FUNctio:n:APEak:EXCursion <num>

(Read-Write) Sets amplitude peak excursion for the specified marker. The Excursion value determines what is considered a "peak". This command applies to marker peak searches (Next peak, Peak Right, Peak Left).

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <mkr> Any existing marker number from 1 to 10; if unspecified, value is set to 1.
- <num> Excursion value. Choose any number between **-500** and **500**.

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
CALC:MARK:FUNC:APE:EXC 10
calculate2:marker8:function:apeak:excursion maximum
```

Query Syntax CALCulate<num>:MARKer<mkr>:FUNCTion:APEak:EXCursion?

Return Type Numeric

Default 3

CALCulate<num>:MARKer<mkr>:FUNCTion:APEak:THReshold <num>

(Read-Write) Sets peak threshold for the specified marker. If a peak (using the criteria set with :EXCursion) is below this reference value, it will not be considered when searching for peaks. This command applies to marker peak searches (Next peak, Peak Right, Peak Left).

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <mkr> Any marker number from 1 to 10; if unspecified, value is set to 1
- <num> Threshold value. Choose any number between **-500** and **500**.

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
CALC:MARK:FUNC:APE:THR -40
calculate2:marker8:function:apeak:threshold -55
```

Query Syntax	CALCulate<cnum>:MARKer<mkr>:FUNCTion:APeak:THReshold?
Return Type	Numeric
<u>Default</u>	-100

CALCulate<cnum>:MARKer<mkr>:FUNCTion:DOMain:USER <range>

(Read-Write) Assigns the specified marker to a range number. The x-axis travel of the marker is constrained to the range's span. The span is specified with the [CALC:MARK:FUNC:DOM:USER:START](#) and [STOP](#) commands, unless range 0 is specified which is the full span of the analyzer.

Each channel has **16** user ranges. (Trace statistics use the same ranges.) More than one marker can use a domain range.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <mkr> Any marker number from 1 to 10; if unspecified, value is set to 1
- User span. Choose any Integer from **0 to 16**
0 is Full Span of the analyzer
1 to 16 are available for user-defined x-axis span

Examples

```
CALC:MARK:FUNC:DOM:USER 1
calculate2:marker8:function:domain:user 1
```

Query Syntax	CALCulate<cnum>:MARKer<mkr>:FUNCTion:DOMain:USER?
	Returns the user span number that the specified marker is assigned to.
Return Type	Numeric
<u>Default</u>	0 - Full Span

CALCulate<cnum>:MARKer<mkr>:FUNCTion:DOMain:USER:START <start>

(Read-Write) Sets the start of the span that the specified marker's x-axis span will be constrained to.

Use [CALC:MARK:FUNC:DOM:USER<range>](#) to set range number

Use [CALC:MARK:FUNC:DOM:USER:STOP](#) to set the stop value.

Note: If the marker is assigned to range 0 (full span), the USER:START and STOP commands generate an error. You cannot set the START and STOP values for "Full Span".

Note: This command does the same as [CALC:FUNC:DOM:USER:STAR](#)

[See Critical Note](#)

Parameters

- <cnun> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnun> is set to 1.
- <mkr> Any marker number from 1 to 10; if unspecified, value is set to 1
- <start> The analyzer's **Minimum** x-axis value

Examples

```
CALC:MARK:FUNC:DOM:USER:START 500E6  
calculate2:marker8:function:domain:user:start 1e12
```

Query Syntax CALCulate<cnun>:MARKer<mkr>:FUNctio:n:DOMain:USER:START?

Return Type Numeric

Default The analyzer's **Minimum** x-axis value

CALCulate<cnun>:MARKer<mkr>:FUNctio:n:DOMain:USER:STOP <stop>

(Read-Write) Sets the stop of the span that the marker's x-axis travel will be constrained to.

Use [CALC:MARK:FUNC:DOM:USER<range>](#) to set range number

Use [CALC:MARK:FUNC:DOM:USER:START](#) to set the stop value.

Note: If the marker is assigned to range 0 (full span), the USER:START and STOP commands generate an error. You cannot set the START and STOP values for "Full Span".

Note: This command does the same as [CALC:FUNC:DOM:USER:STOP](#)

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <mkr> Any marker number from 1 to 10; if unspecified, value is set to 1.
- <stop> Stop value of x-axis span; Choose any number between the analyzer's **MINimum** and **MAXimum** x-axis value.

Examples

```
CALC:MARK:FUNC:DOM:USER:STOP 500e6
calculate2:marker8:function:domain1:user:stop 1e12
```

Query Syntax CALCulate<cnum>:MARKer<mkr>:FUNCTion:DOMain:USER:STOP?

Return Type Numeric

Default The analyzer's **MAXimum** x-axis value.

CALCulate<cnum>:MARKer<mkr>:FUNCTion:EXECute [<func>]

(Write-only) Immediately executes (performs) the specified search function. If no function is specified, executes the selected function. Select the function with CALC:MARK:FUNCTion:SEL.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <mkr> Any marker number from 1 to 10; if unspecified, value is set to 1.
- <func> Optional argument. The function that is to be performed. Choose from:
- **MAXimum** - finds the highest value
 - **MINimum** - finds the lowest value
 - **RPEak** - finds the next valid peak to the right
 - **LPEak** - finds the next valid peak to the left
 - **NPEak** - finds the next highest value among the valid peaks
 - **TARGET** - finds the target value to the right, wraps around to the left
 - **LTARGET** - finds the next target value to the left of the marker
 - **RTARGET** - finds the next target value to the right of the marker

Examples

```
CALC:MARK:FUNC:EXEC
calculate2:marker2:function:execute maximum
```

Query Syntax Not applicable**Default** Not applicable**CALCulate<cnum>:MARKer<mkr>:FUNCtion[:SElect] <char>**

(Read-Write) Sets the search function that the specified marker will perform when executed. To execute (or perform) the function, use:

CALC:MARK:FUNC:EXEC or

CALC:MARK:FUNC:TRAC ON to automatically execute the search every sweep.

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<mkr> Any marker number from 1 to 10; if unspecified, value is set to 1.

<char> Marker function. Choose from:

- **MAXimum** - finds the highest value
- **MINimum** - finds the lowest value
- **RPEak** - finds the next valid peak to the right
- **LPEak** - finds the next valid peak to the left
- **NPEak** - finds the next highest value among the valid peaks
- **TARGet** - finds the target value to the right, wraps around to the left
- **LTARget** - finds the next target value to the left of the marker
- **RTARget** - finds the next target value to the right of the marker

Examples

```
CALC:MARK:FUNC MAX
calculate2:marker8:function:select 1target
```

Query Syntax CALCulate<cnum>:MARKer<mkr>:FUNCtion[:SElect]?**Return Type** Character**Default** MAX

CALCulate<cnum>:MARKer<mkr>:TARGet <num>

(Read-Write) Sets the target value for the specified marker when doing Target Searches with [CALC:MARK:FUNC:SEL](#) <TARGet | RTARget | LTARget>

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <mkr> Any marker number from 1 to 10; if unspecified, value is set to 1.
- <num> Target value to search for; Units are NOT allowed.

Examples

```
CALC:MARK:TARG 2.5  
calculate2:marker8:target -10.3
```

Query Syntax CALCulate<cnum>:MARKer<mkr>:TARGet?

Return Type Numeric

Default 0

CALCulate<cnum>:MARKer<mkr>:FUNCTion:TRACking <ON | OFF>

(Read-Write) Sets the tracking capability for the specified marker. The tracking function finds the selected search function every sweep. In effect, turning Tracking ON is the same as doing a [CALC:MARK:FUNC:EXECute](#) command every sweep.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <mkr> Any marker number from 1 to 10; if unspecified, value is set to 1.
- <ON | OFF> **ON** (or 1) - The specified marker will "Track" (find) the selected function every sweep.
- OFF** (or 0) - The specified marker will find the selected function **only** when the CALC:MARK:FUNC:EXECute command is sent.

Examples

```
CALC:MARK:FUNC:TRAC ON  
calculate2:marker8:function:tracking off
```

Query Syntax CALCulate<cnum>:MARKer<mkr>:FUNCTion:TRACking?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

CALCulate<cnum>:MARKer:REFeRence[:STATe] <ON | OFF>

(Read-Write) Turns the reference marker (marker 10) ON or OFF. When turned OFF, existing Delta markers revert to absolute markers.

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<ON | OFF> **ON** (or 1) - turns reference marker ON

OFF (or 0) - turns reference marker ON

Examples

```
CALC:MARK:REF ON  
calculate2:marker:reference:state OFF
```

Query Syntax CALCulate<cnum>:MARKer:REFeRence[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

CALCulate<cnum>:MARKer:REFeRence:X <num>

(Read-Write) Sets and returns the absolute x-axis value of the reference marker (marker 10).

[See Critical Note](#)

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<num> X-axis value. Choose any number within the operating domain of the reference marker.

Examples

```
CALC:MARK:REF:X 1e9  
calculate2:marker:reference:x 1e6
```

Query Syntax CALCulate<cnum>:MARKer:REFeRence:X?

Return Type Numeric

Default If the first Marker, turns ON in the middle of the X-axis span. If not, turns ON at the position of the active marker.

CALCulate<cnum>:MARKer:REFerence:Y?

(Read-only) Returns the absolute Y-axis value of the reference marker.

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

Examples

```
CALC:MARK:REF:Y?  
calculate2:marker:reference:y?
```

Return Type Character

Default Not applicable

CALCulate<cnum>:MARKer<mkr>:TYPE <char>

(Read-Write) Sets the type of the specified marker.

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<mkr> Any marker number from 1 to 10; if unspecified, value is set to 1

<char> Choose from:

- **NORMal** - a marker that stays on the assigned X-axis position unless moved or searching.
- **FIXed** - a marker that will not leave the assigned X or current Y-axis position.

Examples

```
CALC:MARK:TYPE NORM  
calculate2:marker2:type fixed
```

Query Syntax CALCulate<cnum>:MARKer<mkr>:TYPE?

Return Type Character

CALCulate<cnum>:MARKer<mkr>:SET <char>

(Write-only) Sets the selected instrument setting to assume the value of the specified marker.

Marker Functions CENT, SPAN, START, and STOP do not work with channels that are in [CW](#) or [Segment Sweep](#) mode.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <mkr> Any marker number from 1 to 10; if unspecified, value is set to 1
- <char> Choose from:
- **CENTER** - changes center frequency to the value of the marker
 - **SPAN** - changes the sweep span to the span that is defined by the delta marker and the marker that it references. Unavailable if there is no delta marker.
 - **START** - changes the start frequency to the value of the marker
 - **STOP** - changes the stop frequency to the value of the marker
 - **RLEVEL** - changes the reference level to the value of the marker
 - **DELAY** - changes the line length at the receiver input to the phase slope at the active marker stimulus position.

Examples

```
CALC:MARK:SET CENT  
calculate2:marker8:set span
```

Query Syntax Not Applicable

Default Not Applicable

CALCulate<cnum>:MARKer<mkr>[:STATe] <ON|OFF>

(Read-Write) Turns the specified marker ON or OFF. **Marker 10 is the Reference Marker.** To turn all markers off, use CALC:MARK:AOff.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <mkr> Any marker number from 1 to 10; if unspecified, value is set to 1.
- <ON|OFF> **ON** (or 1) - turns marker ON.
OFF (or 0) - turns marker OFF.

Examples

```
CALC:MARK ON  
calculate2:marker8 on
```

Query Syntax CALCulate<num>:MARKer<mkr>:STATe?

Return Type Boolean (1 = ON, 0 = OFF)

Default Off

CALCulate<num>:MARKer<mkr>:X <num>

(Read-Write) Sets the marker's X-axis value (frequency, power, or time). If the marker is set as delta, the SET and QUERY data is relative to the reference marker.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <mkr> Any marker number from 1 to 10; if unspecified, value is set to 1.
- <num> Any X-axis position within the measurement span of the marker.

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
CALC:MARK:X 100Mhz  
calculate2:marker8:x maximum
```

Query Syntax CALCulate<num>:MARKer<mkr>:X?

Return Type Numeric

Default First Marker turns ON in the middle of the X-axis span. Subsequent markers turn ON at the position of the active marker.

CALCulate<cnum>:MARKer<mkr>:Y?

(Read-only) Reads the marker's Y-axis value. The format of the value depends on the current CALC:MARKER:FORMAT setting. If the marker is set as delta, the data is relative to the reference marker. The query always returns two numbers:

- Smith and Polar formats - (Real, Imaginary)
- LINPhase and LOGPhase - (Real, Imaginary)
- All other formats - (Value,0)

Note: To accurately read the marker Y-axis value with [trace smoothing](#) applied, the requested format must match the [displayed format](#). Otherwise, the returned value is un-smoothed data. For example, to read the smoothed marker value when measuring group delay, both the display format and the marker format must be set to (Group) Delay.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <mkr> Any marker number from 1 to 10; if unspecified, value is set to 1.

Examples

```
CALC:MARK:Y?  
calculate2:marker3:y?
```

Query Syntax CALCulate<cnum>:MARKer<mkr>:Y?

Return Type Numeric


Default Not applicable

Last modified:

March 27, 2007	Corrected Set?
Dec. 4, 2006	Added smoothing note to Y?

Calculate:Math Commands

 Controls math operations on the currently selected measurement and memory.



Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Math Operations](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

CALCulate<num>:MATH:FUNCTION <char>

(Read-Write) Sets math operations on the currently selected measurement and the trace stored in memory. (There MUST be a trace stored in Memory. See [CALC:MATH MEM](#))

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

<char> The math operation to be applied. Choose from the following:

NORMal	Trace data only
ADD	Data + Memory
SUBTract	Data - Memory
MULTiply	Data * Memory
DIVide	Data / Memory

Examples

```
CALC:MATH:FUNC NORM  
calculate2:math:function subtract
```

Query Syntax CALCulate<cnum>:MATH:FUNCTION?

Return Type Character

Default NORMal

CALCulate<cnum>:MATH:MEMorize

(Write-only) Puts the currently selected measurement trace into memory. (Data-> Memory).

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

Examples

```
CALC:MATH:MEM  
calculate2:math:memorize
```

Query Syntax Not applicable

Default Not applicable

Calculate:Mixer Command

CALCulate<ch>:MIXer:XAXis <char>

(Read-Write) Sets or returns the swept parameter to display on the X-axis for the selected FCA measurement. [Learn more about X-axis display.](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <char> Parameter to display on the X-axis. Choose from:
- INPUT** - Input frequency span
 - OUTPUT** - Output frequency span
 - LO_1** - First LO frequency span
 - LO_2** - Second LO frequency span

Examples

```
CALC:MIX:XAX INPUT  
calc2:mixer:xaxis output
```

See an example that creates, selects, and calibrates an [SMC](#) and [VMC](#) measurement using SCPI.

Query Syntax CALCulate<ch>:MIXer:XAXis?

Return Type Character


Default OUTPUT

CALCulate:NORMalize Commands

Specifies the normalization features used for a receiver power calibration.

These commands are [Superseded](#) (Sept 2004).

See the replacement commands in a new [Receiver Power Cal example](#).

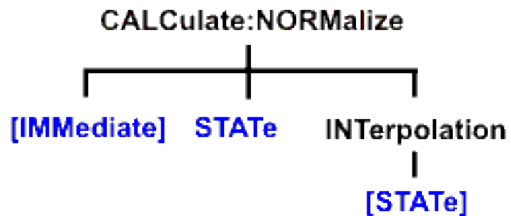

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Receiver Cal](#)
- [SCPI Command Tree](#)

Save and recall your receiver power calibration (which use .CST file commands):

- [SENS:CORR:CSET:SAVE](#)
- [SENS:CORR:CSET\[:SEL\]](#)

Or use these two commands and specify either .STA or .CST file extensions:

- [MMEM:LOAD](#)
- [MMEM:STOR](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

CALCulate<cnum>:NORMalize[:IMMEDIATE] **Superseded**

Note: This command is replaced with [SENS:CORR:COLL:METH RPOWer](#) and [SENS:CORR:COLL\[:ACQ\] POWer](#)

See an example of a [Receiver Power Calibration](#).

(Write only) Stores the selected measurement's data to that measurement's "divisor" buffer for use by the Normalization data processing algorithm. This command is not compatible with ratioed measurements such as S-parameters. It is intended for receiver power calibration when the selected measurement is of an unratioed power type.

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

Examples

```
CALC:NORM  
calculate1:normalize:immediate
```

Query Syntax Not Applicable

Default Not Applicable

CALCulate<num>:NORMalize:STATe <ON | OFF> **Superseded**

Note: This command is replaced with [SENS:CORR\[:STATe\] ON/OFF](#)

(Read-Write) Specifies whether or not normalization is applied to the measurement. Normalization is enabled only for measurements of unratioed power where it serves as a receiver power calibration.

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

<ON | OFF> **ON (or 1)** - normalization is applied to the measurement.

OFF (or 0) – normalization is NOT applied to the measurement.

Examples

```
CALC:NORM:STAT ON  
calculate2:normalize:state off
```

Query Syntax CALCulate<num>:NORMalize:STATe?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

CALCulate<num>:NORMalize:INTerpolate[:STATe] <ON | OFF> **Superseded**

Note: This command is replaced with [SENS:CORR:INT\[:STATe\] ON|OFF](#)

(Read-Write) Turns normalization interpolation ON or OFF. Normalization is enabled only for measurements of unratioed power, where it serves as a receiver power calibration.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <ON | OFF> **ON (or 1)** – turns interpolation ON.
- OFF (or 0)** – turns interpolation OFF.

Examples

```
CALC:NORM:INT ON  
calculate2:normalize:interpolate:state off
```


Query Syntax CALCulate<num>:NORMalize:INTerpolate[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

Calculate:Offset Commands

Allows the data trace magnitude and phase to be offset.

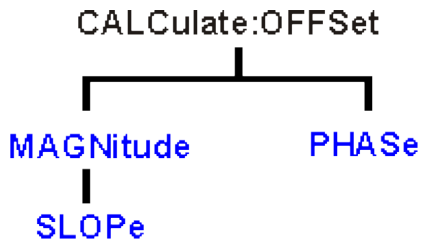

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Magnitude Offset](#)
- [Learn about Phase Offset](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

CALCulate<cnum>:OFFSet:MAGNitude <num>

(Read-Write) Offsets the data trace magnitude by the specified value.

To offset the data trace magnitude to a slope value that changes with frequency, use

[CALC:OFFS:MAGN:SLOP](#)

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <num> Offset value in dB.

Examples

```
CALC:OFFS:MAGN:4  
calculat1:offset:magnitude -2
```

Query Syntax CALCulate<num>:OFFSet:MAGNitude?

Return Type Numeric

Default 0

CALCulate<num>:OFFSet:MAGNitude:SLOPe <num>

(Read-Write) Offsets the data trace magnitude to a value that changes linearly with frequency. The offset slope begins at 0 Hz.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <num> Offset slope value in dB/ 1GHz.

Examples

```
CALC:OFFS:MAGN:SLOP 1 'Offset slope set to 1dB/GHz  
calculat1:offset:magnitude:slope -2 'Offset slope set to -  
2dB/GHz
```

Query Syntax CALCulate<num>:OFFSet:MAGNitude:SLOPe?

Return Type Numeric

Default 0

CALCulate<num>:OFFSet:PHASe <num>[<char>]

(Read-Write) Sets the phase offset for the selected measurement.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <num> Offset phase value. Choose any number between:
-360 and **360**
- <char> Units for phase. OPTIONAL. Choose either:
DEG - Degrees (default)
RAD - Radians

Examples

```
CALC:OFFS:PHAS 10  
calculate:offset:phase 20rad
```


Query Syntax CALCulate:OFFSet:PHASe?

Return Type Numeric, returned value always in degrees

Default 0 degrees

Calculate:Parameter Commands

Lists, creates, selects and deletes measurements.

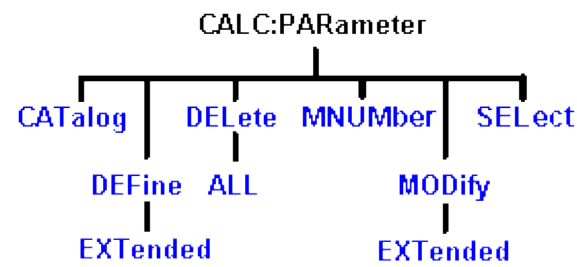

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Measurement Parameters](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

CALCulate<cnum>:PARAmeter:CATalog?

(Read-only) Returns the names and parameters of existing measurements for the specified channel.

Note: For Balanced Measurements: CALC:PAR:CAT? may have an unexpected behavior. [Learn more.](#)

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurements to be listed. If unspecified, <cnum> is set to 1.

Examples

```
CALC:PAR:CAT?
calculate2:parameter:catalog?
```

Return Type

String - "<measurement name>,<parameter>,[<measurement name>,<parameter>...]"

Default "CH1_S11_1,S11"

CALCulate<cnum>:PARAmeter:DEFine <Mname>,<param>[,port] **Superseded**

Note: This command is replaced with [CALC:PAR:DEFine:EXTended](#). This command will continue to work for up to 4 port parameters.

(Write-only) Creates a measurement but does NOT display it.

There is no limit to the number of measurements that can be created. However, there is a limit to the number of measurements that can be displayed. See [Traces, Channels, and Windows on the PNA](#).

- Use [DISP:WIND:STATE](#) to create a window if it doesn't already exist.
- Use [DISP:WIND<wnum>:TRAC<tnum>:FEED <Mname>](#) to display the measurement.

For FCA Measurements see [CALC:CUST:DEF](#)

You must select the measurement (CALC<cnum>:PAR:SEL <mname>) before making additional settings.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the new measurement. If unspecified, value is set to 1.
- <Mname> Name of the measurement. Any non-empty, unique string, enclosed in quotes.
- <param> **For S-parameters:**

Any S-parameter available in the PNA

For ratioed measurements:

Any two receivers that are available in the PNA. (See the [block diagram](#) showing the receivers in YOUR PNA.)

For example: AR1 (this means A/R1)

For non-ratioed measurements:

Any receiver that is available in the PNA. (See the [block diagram](#) showing the receivers in YOUR PNA.)

For example: A

For Balanced Measurements:

First create an S-parameter measurement, then change the measurement using [CALC:FSIM:BAL](#) commands. [See an example.](#)

For FCA Measurements see [CALC:CUST:DEF](#)

[port] Optional argument;

For multi-port reflection S-parameter measurements: specifies the PNA port which will provide the load for the calibration. This argument is ignored if a transmission S-parameter is specified.

For all non S-parameter measurements: specifies the source port for the measurement.

Examples

```
CALC4:PAR:DEF 'ch4_S33',S33,2 'Defines an S33 measurement with a load on port2 of the analyzer.'
```

```
calculate2:parameter:define 'ch1_a', a, 1 'unratioed meas
```

```
calculate2:parameter:define 'ch1_a', ar1,1 'ratioed meas
```

Query Syntax Not Applicable; see [Calc:Par:Cat?](#)

Default Not Applicable

CALCulate<cnum>:PARAmeter:DEFine:EXTended <Mname>,<param>

Note: This command replaces [CALC:PAR:DEF](#) as it allows the creating of measurements using [external multiport testsets](#).

(Write-only) Creates a measurement but does NOT display it.

There is no limit to the number of measurements that can be created. However, there is a limit to the number of measurements that can be displayed. See [Traces, Channels, and Windows on the PNA](#).

- Use [DISP:WIND:STATE](#) to create a window if it doesn't already exist.
- Use [DISP:WIND<wnum>:TRAC<tnum>:FEED <Mname>](#) to display the measurement.

You must select the measurement (CALC<cnum>:PAR:SEL <mname>) before making additional settings.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the new measurement. If unspecified, value is set to 1.
- <Mname> **(String)** Name of the measurement. Any non-empty, unique string, enclosed in quotes.
- <param> **(String)** Measurement Parameter to create. Case sensitive.

For S-parameters:

Any S-parameter available in the PNA

Single-digit port numbers CAN be separated by "_" (underscore). For example: "**S21**" or "**S2_1**"

Double-digit port numbers MUST be separated by underscore. For example: "**S10_1**"

For ratioed measurements:

Any two PNA physical receivers separated by forward slash '/' followed by comma and source port.

For example: "**A/R1, 3**"

[Learn more about ratioed measurements](#)

See a [block diagram](#) showing the receivers in YOUR PNA.

For non-ratioed measurements:

Any PNA physical receiver followed by comma and source port.

For example: "**A, 4**"

[Learn more about unratioed measurements.](#)

See the [block diagram](#) showing the receivers in YOUR PNA.

With PNA Rev 6.2, **Ratioed** and **Unratioed** measurements can also use **logical receiver notation** to refer to receivers. This notation makes it easy to refer to receivers with an [external test set](#) connected to the PNA. You do not need to know which physical receiver is used for each test port. [Learn more.](#)

For ADC measurements:

Any ADC receiver in the PNA followed by a comma, then the source port.

For example: "**AI1,2**" indicates the Analog Input1 with source port of 2.

[Learn more about ADC receiver measurements.](#)

For Balanced Measurements:

First create an S-parameter measurement, then change the measurement using [CALC:FSIM:BAL](#) "define" commands. [See an example.](#)

Examples

```
CALC4:PAR:DEF:EXT 'ch4_S33', 'S33' 'Defines an S33 measurement
```

```
calculate2:parameter:define:extended 'ch1_a', 'b9, 1' 'logical  
receiver notation for unratioed meas of test port 9 receiver with  
source port 1.
```

```
calculate2:parameter:define:extended 'ch1_a', 'b9/a10,1' 'logical  
receiver notation for ratioed meas of test port 9 receiver divided  
by the reference receiver for port 10 using source port 1
```

Query Syntax Not Applicable; see [Calc:Par:Cat?](#)

Default Not Applicable

CALCulate<cnum>:PARAmeter:DELeTe[:NAME] <Mname>

(Write-only) Deletes the specified measurement.

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<Mname> String - Name of the measurement

Examples

```
CALC:PAR:DEL 'TEST'  
calculate2:parameter:delete 'test'
```

Query Syntax Not Applicable

Default Not Applicable

CALCulate:PARAmeter:DELeTe:ALL

(Write-only) Deletes all measurements on the PNA.

[See Critical Note](#)

Parameters

Examples

```
CALC:PAR:DEL:ALL
```

Query Syntax Not Applicable

Default Not Applicable

CALCulate<num>:PARAmeter:MNUMber?

(Read-only) Returns the measurement number of the selected measurement. This is useful when needing to identify a measurement by number, such as with [Status:Ques:Lim](#) or [Status:Oper:Aver](#) commands.

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. If unspecified, <num> is set to 1.

Examples

```
CALC:PAR:MNUM?  
calculate2:parameter:mnumber?
```

Return Type Numeric

Default Not Applicable

CALCulate<num>:PARAmeter:MODify <param> Superseded

Note: This command is replaced with [CALC:PAR:MOD:EXT](#). This command will continue to work for up to 4 port parameters.

(Write-only) Modifies a standard measurement using the same arguments as [CALC:PAR:DEF](#). To modify an FCA measurement, use [CALC:CUST:MOD](#).

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. The selected measurement on that channel will be changed. If unspecified, <num> is set to 1.

<param> Measurement parameter to change to. Use the same <param> arguments as [CALC:PAR:DEF](#).

Examples

```
SYST:PRESET
```

```

CALC:PAR:DEF "MyMeas", S11

CALC:PAR:SEL "MyMeas"

CALC:PAR:MOD AR1 'changes the selected S11 measurement to an A/R1
measurement

```

Query Syntax Not Applicable

Default Not Applicable

CALCulate<cnum>:PARAmeter:MODify:EXTended <param>

Note: This command replaces [CALC:PAR:MOD](#) as it allows modification of measurements using [external multiport testsets](#).

(Write-only) Modifies a standard measurement using the same arguments as [CALC:PAR:DEF:EXT](#). To modify an FCA measurement, use [CALC:CUST:MOD](#).

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. The selected measurement on that channel will be changed. If unspecified, <cnum> is set to 1.
- <param> **(String)** New measurement parameter. Use the same <param> arguments as [CALC:PAR:DEF:EXT](#).

Examples

```

SYST:PRESET

CALC:PAR:DEF:EXT "MyMeas", "S10_1"

CALC:PAR:SEL "MyMeas"

CALC:PAR:MOD:EXT "a4b4,1" 'changes the selected S10_1
measurement to an a4/b4 measurement with source port 1

```

Query Syntax Not Applicable

Default Not Applicable

CALCulate<cnum>:PARAmeter:SElect <Mname>

(Read-Write) Sets the selected measurement. Most CALC: commands require that this command be sent before a setting change is made. One measurement on each channel can be selected at the same time. To obtain a list of currently named measurements, use CALC:PAR:CAT?

Parameters

<cnum> Channel number of the measurement to be selected. If unspecified, <cnum> is set to 1.

<Mname> String - Name of the measurement. (Do NOT include the parameter name.)

Examples

```
CALC:PAR:SEL 'TEST'  
calculate2:parameter:select 'test'
```

Query Syntax CALCulate:PARameter:SElect?

Return Type String

Default The preset measurement name is "CH1_S11_1"

Last modified:

April 19, 2007 MX Added ADC meas
9/12/06 MQ New Extended commands.

Calculate:RData? Command

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

CALCulate<cnum>:RDATA? <char>

(Read-only) Returns receiver data for the selected measurement. To query measurement data, see [CALC:DATA?](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <char> Choose from any physical receiver in the PNA.

For example: "A"

Also, **REF** - returns data for either R1 or R2 data depending on the source port of the selected measurement.

See the [block diagram](#) showing the receivers in YOUR PNA.

Note: Logical receiver notation is NOT allowed with this command. [Learn more.](#)

Example

```
GPIOB.Write "INITiate:CONTinuous OFF"  
GPIOB.Write "INITiate:IMMediate;*wai"  
GPIOB.Write "CALCulate:RDATA? A"
```

```
GPIOB.Write "CALCulate:RDATA? REF"
```

Return Type Depends on [FORM:DATA](#) - Two numbers per data point

Default Not Applicable

Notes:

Generally when you query the analyzer for data, you expect that the number of data values returned will be consistent with the number of points in the sweep.

However, if you query **receiver** data while the instrument is sweeping, the returned values may contain zeros. For example, if your request for receiver data is handled on the 45th point of a 201 point sweep, the first 45 values will be valid data, and the remainder will contain complex zero.

This can be avoided by synchronizing this request with the end of a sweep or putting the channel in hold mode.

[Learn about Unratioed Measurements](#)

Calculate:Smoothing Commands

Controls point-to-point smoothing. Smoothing is a noise reduction technique that averages adjacent data points in a measurement trace. Choose the amount of smoothing by specifying either the number of points or the aperture. Smoothing is not the same as CALC:AVERage which averages each data point over a number of sweeps.



Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Smoothing](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

CALCulate<cnum>:SMOothing:APERture <num>

(Read-Write) Sets the amount of smoothing as a percentage of the number of data points in the channel.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <num> Percentage value. Choose any number between:
1 and **25**

Examples

```
CALC:SMO:APER 2  
calculate2:smoothing:aperture 20.7
```

Query Syntax CALCulate<cnum>:SMOothing:APERture?

Return Type Numeric

CALCulate<cnum>:SMOothing:POINts <num>

(Read-Write) Sets the number of adjacent data points to average.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <num> Number of points from 1 point to maximum of 25% of data points in the channel. For example: if number of points in a data trace = 401, the maximum value for points = 100. The points value is always rounded to the closest odd number.

Examples

```
CALC:SMO:POIN 50  
calculate2:smoothing:points 21
```

Query Syntax CALCulate<cnum>:SMOothing:POINts?

Return Type Numeric

Default 3

CALCulate<cnum>:SMOothing[:STATe] <ON | OFF>

(Read-Write) Turns data smoothing ON or OFF.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <ON | OFF> **ON** (or 1) - turns smoothing ON.
OFF (or 0) - turns smoothing OFF.

Examples

```
CALC:SMO ON  
calculate2:smoothing:state off
```


Query Syntax CALCulate<cnum>:SMOothing[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

Calculate:Transform Commands

Specifies the settings for time domain transform.

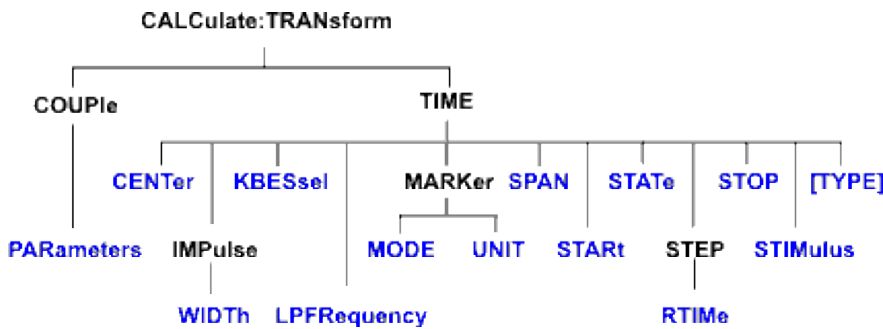

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Time Domain](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Critical Note: CALCulate commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

CALCulate<cnum>:TRANSform:COUPle:PARAmeters <num>

(Read-Write) Specifies the time domain transform parameters to be coupled. The settings for those parameters will be copied from the selected measurement to all other measurements on the channel.

- To turn coupling ON and OFF, use [SENS:COUP:PAR](#)
- To specify Gating parameters to couple, use [CALC:FILT:COUP:PAR](#)

Learn more about [Time Domain Trace Coupling](#)

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <num> (Numeric) Parameters to couple. To specify more than one parameter, add the

numbers.

1 - Transform Stimulus (Start, Stop, Center, and Span TIME settings.)

2 - Transform State (ON / OFF)

4 - Transform Window (Kaiser Beta / Impulse Width)

8 - Transform Mode (Low Pass Impulse, Low Pass Step, Band Pass)

16 - Transform Distance Marker Units

Examples

```
'To couple all parameters:
```

```
CALC:TRAN:COUP:PAR 31
```

```
'To couple Stimulus and Mode:
```

```
calculate2:transform:couple:parameters 9
```

Query Syntax CALCulate<cnum>:TRANSform:COUPle:PARameters?

Return Type Numeric

Default 29 (All parameters except **2** - Transform State)

CALCulate<cnum>:TRANSform:TIME:CENTer <num>

(Read-Write) Sets the center time for time domain measurements.

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<num> Center time in seconds; any number between:
 $\pm (\text{number of points}-1) / \text{frequency span}$

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
CALC:TRAN:TIME:CENT 1e-8
```

```
calculate2:transform:time:center 15 ps
```

Query Syntax CALCulate<cnum>:TRANSform:TIME:CENTer?

Return Type Numeric

Default 0

CALCulate<cnum>:TRANSform:TIME:IMPulse:WIDTh <num>

(Read-Write) Sets the impulse width for the transform window.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <num> Impulse width in seconds; Choose any number between:
.6 / frequency span and **1.39 / frequency span**

Examples

```
CALC:TRAN:TIME:IMP:WIDTh 10  
calculate2:transform:time:impulse:width 13
```

Query Syntax CALCulate<cnum>:TRANSform:TIME:IMPulse:WIDTh?

Return Type Numeric

Default .98 / Default Span

CALCulate<cnum>:TRANSform:TIME:KBESsel <num>

(Read-Write) Sets the parametric window for the Kaiser Bessel window.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <num> Window width for Kaiser Bessel in seconds; Choose any number between:
0.0 and **13.0**

Examples

```
CALC:TRAN:TIME:KBES 10  
calculate2:transform:time:kbessel 13
```

Query Syntax CALCulate<cnum>:TRANSform:TIME:KBESsel?

Return Type Numeric

Default 6

CALCulate<cnum>:TRANSform:TIME:LPFREQuency

(Write-only) Sets the start frequencies in LowPass Mode.

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

Examples

```
CALC:TRAN:TIME:LPFR
calculate2:transform:time:lpfrequency
```

Query Syntax Not applicable

Default Not applicable

CALCulate<num>:TRANSform:TIME:MARKer:MODE <char>

(Read-Write) Specifies the measurement type in order to determine the correct marker distance.

- Select Auto for S-Parameter measurements.
- Select Reflection or Transmission for arbitrary ratio or unratioed measurements.

This setting affects the display of ALL markers for only the ACTIVE measurement.

Learn more about [Distance Markers](#).

[See Critical Note](#)

Parameters

<num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.

<char> Choose from:

AUTO If the active measurement is an S-Parameter, automatically chooses reflection or transmission. If non S-Parameter measurements, reflection is chosen.

REFlection Displays the distance from the source to the receiver divided by two (to compensate for the return trip.)

TRANsmission Displays the distance from the source to the receiver.

Examples

```
CALC:TRAN:TIME:MARK:MODE REFL
calculate2:transform:time:marker:mode auto
```

Query Syntax CALCulate<num>:TRANSform:TIME:MARKer:MODE?

Return Type Character

Default Auto

CALCulate<cnum>:TRANSform:TIME:MARKer:UNIT <char>

(Read-Write) Specifies the unit of measure for the display of marker distance values. This settings affects the display of ALL markers for only the ACTIVE measurement (unless Distance Maker Units are coupled using [CALC:TRAN:COUP:PAR](#)).

Learn more about [Distance Markers](#).

[See Critical Note](#)

Parameters

<cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.

<char> Choose from:

METRs

FEET

INCHes

Examples

```
CALC:TRAN:TIME:MARK:UNIT INCH  
calculate2:transform:time:marker:unit feet
```

Query Syntax CALCulate<cnum>:TRANSform:TIME:MARKer:UNIT?

Return Type Character

Default METRs

CALCulate<cnum>:TRANSform:TIME:SPAN <num>

(Read-Write) Sets the span time for time domain measurements.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <num> Span time in seconds; any number between:
0 and $2 * [(number\ of\ points - 1) / frequency\ span]$

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
CALC:TRAN:TIME:SPAN 1e-8  
calculate2:transform:time:span maximum
```

Query Syntax CALCulate<num>:TRANSform:TIME:SPAN?

Return Type Numeric

Default 20 ns

CALCulate<num>:TRANSform:TIME:STARt <num>

(Read-Write) Sets the start time for time domain measurements.

[See Critical Note](#)

Parameters

- <num> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <num> is set to 1.
- <num> Start time in seconds; any number between:
 $\pm (number\ of\ points - 1) / frequency\ span$

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
CALC:TRAN:TIME:STAR 1e-8  
calculate2:transform:time:start minimum
```

Query Syntax CALCulate<num>:TRANSform:TIME:STARt?

Return Type Numeric

Default -10 ns

CALCulate<cnum>:TRANSform:TIME:STATe <ON | OFF>

(Read-Write) Turns the time domain transform capability ON or OFF.

[See Critical Note](#)

Note: [Sweep type](#) must be set to Linear Frequency in order to use Time Domain Transform.

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <ON|OFF> **ON** (or 1) - turns time domain ON.
OFF (or 0) - turns time domain OFF.

Examples

```
CALC:TRAN:TIME:STAT ON  
calculate2:transform:time:state off
```

Query Syntax CALCulate<cnum>:TRANSform:TIME:STATe?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

CALCulate<cnum>:TRANSform:TIME:STOP <num>

(Read-Write) Sets the stop time for time domain measurements.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <num> Stop time in seconds; any number between:
 $\pm (\text{number of points}-1) / \text{frequency span}$

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
CALC:TRAN:TIME:STOP 1e-8  
calculate2:transform:time:stop maximum
```

Query Syntax CALCulate<cnum>:TRANSform:TIME:STOP?

Return Type Numeric

Default 10 ns

CALCulate<cnum>:TRANSform:TIME:STEP:RTIME <num>

(Read-Write) Sets the step rise time for the transform window.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <num> Rise time in seconds; Choose any number between:
.45 / frequency span and **1.48 / frequency span**

Examples

```
CALC:TRAN:TIME:STEP:RTIM 1e-8  
calculate2:transform:time:step:rtime 15 ps
```

Query Syntax CALCulate<cnum>:TRANSform:TIME:STEP:RTIME?

Return Type Numeric

Default .99 / Default Span

CALCulate<cnum>:TRANSform:TIME:STIMulus <char>

(Read-Write) Sets the type of simulated stimulus that will be incident on the DUT.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <char> Choose from:
STEP - simulates a step DUT stimulus
IMPulse - simulates a pulse DUT stimulus

STEP can ONLY be used when [CALC:TRAN:TIME:TYPE](#) is set to LPASs (Lowpass). (STEP **cannot** be used with TYPE = BPASs.)

:STIM STEP will set :TYPE to **LPASs**

:TYPE BPASs will set :STIM to **IMPulse**

Examples

```
CALC:TRAN:TIME:STIM STEP  
calculate2:transform:time:stimulus impulse
```

Query Syntax CALCulate<cnum>:TRANSform:TIME:STIMulus?

Return Type Character

CALCulate<cnum>:TRANSform:TIME[:TYPE] <char>

(Read-Write) Sets the type of time domain measurement.

[See Critical Note](#)

Parameters

- <cnum> Channel number of the measurement. There must be a selected measurement on that channel. If unspecified, <cnum> is set to 1.
- <char> Type of measurement. Choose from:
LPASs - Lowpass; Must also send [CALC:TRAN:TIME:LPFRequency](#) before calibrating.
BPASs - Bandpass;

BPASs can **only** be used when [CALC:TRAN:TIME:STIM](#) is set to IMPulse.
(BPASs **cannot** be used with :STIM = STEP)

:STIM **STEP** will set :TYPE to **LPASs**

:TYPE **BPASs** will set :STIM to **IMPulse**

Examples

```
CALC:TRAN:TIME LPAS  
calculate2:transform:time:type bpas
```


Query Syntax CALCulate<cnum>:TRANSform:TIME[:TYPE]?

Return Type Character

Default BPAS

Control Commands

Specifies the settings to remotely control the rear panel connectors and ECAL Module state.

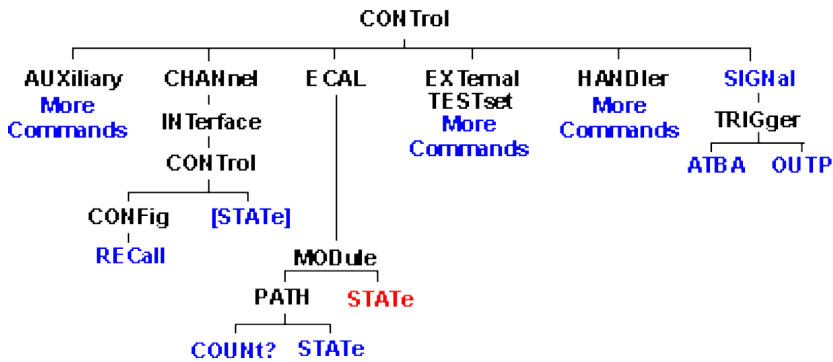

Click on a **blue** keyword to view the command details.

Red command is superseded.

See Also

- [Example Programs](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)
- See a pinout and detailed description of the rear panel connectors:
 - [Auxilliary IO connector](#)
 - [External Test Set IO connector](#)
 - [Material Handler IO connector](#)

CONTROL:CHANnel:INTERface:CONTROL:CONFig:RECall <string>

(Write-only) Recalls an Interface Control configuration file. [Learn more about Interface Control.](#)

Parameters

<string> File name and extension (.xml) of the configuration file to recall. Files are typically stored in the default folder "C:/Program Files/Agilent/Network Analyzer/Documents". To recall from a different folder, specify the full path name.

Examples

```
CONT:CHAN:INT:CONT:CONF:REC 'MyConfigFile.xml'
control:channel:interface:control:config:recall 'C:/Program
Files/Agilent/Network Analyzer/Documents/MyFile.xml'
```

Query Syntax Not Applicable

Default Not Applicable

CONTrol:CHANnel:INTerface:CONTrol[:STATe] <bool>

(Read-Write) Enables and disables ALL Interface Control settings. To send data, the individual interfaces must also be enabled. [Learn more about Interface Control.](#)

Parameters

<bool> Boolean
False (0) - Interface Control is disabled;NO control data is sent.
True (1) - Interface Control is enabled.

Examples

```
CONT:CHAN:INT:CONT 1
control:channel:interface:control:state 0
```

Query Syntax CONTrol:CHANnel:INTerface:CONTrol[:STATe]?

Return Type Boolean

Default False (0)

CONTrol:ECAL:MODule[num]:PATH:COUNT? <name>

(Read-only) Returns the number of unique states that exist for the specified path name on the selected ECal module.

This command performs exactly the same function as [SENS:CORR:CKIT:ECAL:PATH:COUNT?](#)

Use the [CONT:ECAL:MOD:PATH:STAT](#) command to set the module into one of those states.

Use [SENS:CORR:CKIT:ECAL:PATH:DATA?](#) to read the data for a state.

Parameters

[num] Optional argument. USB number of the ECal module. If unspecified (only one ECal module is connected to the USB), <num> is set to 1. If two or more modules are connected, use [SENS:CORR:CKIT:ECAL:LIST?](#) to determine how many, and [SENS:CORR:CKIT:ECAL:INF?](#) to verify their identities.

<name> Name of the path for which to read number of states. Choose from:
Reflection paths

- **A**
- **B**
- **C** (4-port modules)
- **D** (4-port modules)

Transmission paths

- **AB**
- **AC** (4-port modules)
- **AD** (4-port modules)
- **BC** (4-port modules)
- **BD** (4-port modules)
- **CD** (4-port modules)

Note: For each transmission path, the first of the available states is the through state, the second is the confidence (attenuator) state.

Examples

```
CONT:ECAL:MOD:PATH:COUNT? A  
control:ecal:module2:path:count? cd
```

Return Type Integer

Default Not Applicable

CONTrol:ECAL:MODule[num]:PATH:STATe <path>, <stateNum>

(Write-only) Sets the internal state of the selected ECAL module. This command supersedes [CONT:ECAL:MOD:STAT](#).

- Use [CONT:ECAL:MOD:PATH:COUN?](#) to read the number of unique states that exist for the specified path name on the module.
- Use [SENS:CORR:CKIT:ECAL:PATH:DATA?](#) to read the data for a state (from the module memory) corresponding to the stimulus values of a channel.

Parameters

[num] Optional argument. USB number of the ECal module. If unspecified (only one ECal module is connected to the USB), <num> is set to 1. If two or more modules are connected, use [SENS:CORR:CKIT:ECAL:LIST?](#) to determine how many, and [SENS:CORR:CKIT:ECAL:INF?](#) to verify their identities.

<path> Path name for which to set a state. Choose from:
Reflection paths

- **A**
- **B**
- **C** (4-port modules)
- **D** (4-port modules)

Transmission paths

- **AB**
- **AC** (4-port modules)
- **AD** (4-port modules)
- **BC** (4-port modules)
- **BD** (4-port modules)
- **CD** (4-port modules)

<stateNum> Number of the state to set. Refer to the following table to associate the <stateNum> with a state in your ECal module.

In addition, [CONT:ECAL:MOD:PATH:COUNt?](#) returns the number of states in the specified ECal module.

<stateNum>	N4432A and N4433A States	N4431A States	N469x States**	8509x States
One-Port Reflection States				
1	Open	Open	Impedance 1	Open
2	Short	Short	Impedance 2	Short
3	Impedance 1	Impedance 1	Impedance 3	Impedance 1
4	Impedance 2	Impedance 2	Impedance 4	Impedance 2
5			Impedance 5	
6			Impedance 6	
7			Impedance 7	
Two-Port Transmission States				
1	Thru	Thru	Thru	Thru
2	Confidence	Confidence	Confidence	Confidence

** The following modules have only FOUR Impedance states (1, 2, 3, 4): N4690B ,N4691B ,N4692A ,N4696B.

Examples

```
CONT:ECAL:MOD:PATH:STATE A,5
control:ecal:module2:state BC,1
```

Query Syntax Not Applicable

Default Not Applicable

CONTrol:ECAL:MODule[num]:STATe <value> **Superseded**

This command is replaced with [CONT:ECAL:MOD:PATH:STATE](#).

(Write-only) Sets the internal state of the selected ECAL module.

Parameters

[num] Optional argument. USB number of the ECal module. If unspecified (only one ECal module is connected to the USB), <num> is set to 1. If two or more modules are connected, use [SENS:CORR:COLL:CKIT:INF?](#) to verify their identity.

<value> Integer code for switching the module. The following are codes for Agilent ECal modules.

Agilent 8509x Modules		
State	Port A	Port B
Open	0	0
Short	43	43
Load	33	33
Mismatch	4	16
Thru	84	
Confidence	20	

Agilent N469x Modules		
State	Port A	Port B
Open	36	33
Short	39	45
Load	37	37
Mismatch (Offset short)	53	53
Impedance 5 (Offset open)	5	5
Impedance 6 (Offset short)	21	21
Impedance 7 (Offset short)	38	41
Thru	42	
Confidence	40	

Agilent N4431A Modules				
State	Port A	Port B	Port C	Port D
Open	-1398	-1384	-2774	-2654
Short	-1350	-1381	-2582	-2642
Load	26985	-26986	-26986	26985
Mismatch	-26986	26985	26985	-26986
Path		Thru	Confidence	
AB Path		-2590	-598	
AC Path		-4011	85	
AD Path		-2517	16042	
BC Path		-1650	-598	
BD Path		-4011	85	
CD Path		-1352	16042	

Agilent N4432A and N4433A Modules				
State	Port A	Port B	Port C	Port D
Open	-6971	-11835	-14895	-14876
Short	-14395	-12859	-14899	-14905
Load	-14907	-14907	-14907	-14907
Offset Short	-9787	-6459	-14874	-14887

Path	Thru	Confidence
AB Path	13765	30069
AC Path	-10519	-2327
AD Path	-10538	-2346
BC Path	-5655	-1559
BD Path	-5674	-1578
CD Path	-15051	30069

Examples

```
CONT:ECAL:MOD:STAT 36
control:ecal:module2:state 38
```

Query Syntax Not Applicable

Default Not Applicable

CONTrol:SIGNal <conn>,<char>

(Read-Write) Configures external triggering in the PNA.

[Trigger:Sequence:Source](#) is automatically set to External when **CONTrol:SIGNal** is sent.

Edge triggering is only available on some Microwave PNA models.

For more information, see [External Triggering](#) in the PNA.

Parameters

<conn> Rear Panel connector to send or receive trigger signals. Choose from:

BNC1 Trigger IN from rear-panel [Trigger IN BNC connector](#)

AUXT Trigger IN from [AUX IO connector Pin 19](#)

Note: Only one of the input connectors is active at a time. When a command is sent to one, the PNA automatically makes the other INACTIVE.

BNC2 Trigger OUT to rear-panel [Trigger OUT BNC connector](#).

MATHtrigger - Trigger IN from rear-panel [Material Handler connector Pin 18](#)

<char> **INACTIVE** - Disables the specified connector <conn>.

Choose from **ONLY the following** when <conn> is set to **BNC1** or **AUXT** or **MATHtrigger**:

TIENEGATIVE - (Trigger In Edge Negative) - Triggers the PNA when receiving a negative going signal

TIEPOSITIVE - (Trigger In Edge Positive) - Triggers the PNA when receiving a positive going signal

TILLOW - (Trigger In Level Low) - Triggers the PNA when receiving a low level signal

TILHIGH - (Trigger In Level High) - Triggers the PNA when receiving a High-level signal

Choose from **ONLY the following** when <conn> is set to **BNC2**:

Use [CONTrol:SIGNal:TRIGger:OUTP](#) to enable the BNC2 output.

The following selections send a positive or negative pulse before or after each trigger acquisition. This normally occurs each sweep unless a channel is in [point trigger](#) mode.

TOPPAFTER - (Trigger Out Pulse Positive After) - Sends a POSITIVE going TTL pulse at the END of each trigger acquisition.

TOPPBEFORE - (Trigger Out Pulse Positive Before) - Sends a POSITIVE going TTL pulse at the START of each trigger acquisition.

TOPNAFTER - (Trigger Out Pulse Negative After) - Sends a NEGATIVE going TTL pulse at the END of each trigger acquisition.

TOPNBEFORE - (Trigger Out Pulse Negative Before) - Sends a NEGATIVE going TTL pulse at the START of each trigger acquisition.

Examples

```
CONT:SIGN BNC1,TIENEGATIVE  
control:signal bnc2,toppbefore
```

Query Syntax

CONTrol:SIGNal? <conn>

In addition to the arguments listed above, the following is also a possible returned value:

NAVAILABLE - This feature is not available on this PNA

Return Type

Character

Default

At Preset:

BNC1 = INACTIVE

BNC2 = INACTIVE

AUXT = TILHIGH

When [Output is enabled](#):

BNC1 = INACTIVE

BNC2 = TOPPAFTER

AUXT = TILHIGH

CONTrol:SIGNal:TRIGger:ATBA <bool>

(Read-Write) Accept Trigger Before Armed Determines what happens to an EDGE trigger signal if it occurs before the PNA is ready to be triggered. (LEVEL trigger signals are always ignored.) For more information, see [External triggering](#).

Parameters

<bool> Boolean
False (0) - A trigger signal is ignored if it occurs before the PNA is ready to be triggered.
True (1) - A trigger signal is remembered and then used when the PNA becomes armed (ready to be triggered). The PNA remembers only one trigger signal.

Examples

```
CONT:SIGN:TRIG:ATBA 0
control:signal:trigger:atba true
```

Query Syntax CONTrol:SIGNal:TRIGger:ATBA?

Return Type Boolean

Default False

CONTrol:SIGNal:TRIGger:OUTP <bool>

(Read-Write) Output Enabled The PNA can be enabled to send trigger signals out the rear-panel [TRIGGER OUT BNC](#) connector. Use [CONTrol:SIGNal](#) to configure for output triggers.

For more information, see [External triggering](#).

Parameters

<bool> Boolean
False (0) - PNA does NOT output trigger signals.
True (1) - PNA DOES output trigger signals.

Examples

```
CONT:SIGN:TRIG:OUTP 1
control:signal:trigger:outp false
```

Query Syntax CONTrol:SIGNal:TRIGger:OUTP?

Return Type Boolean


Default False

Last Modified:

18-Jan-2007 Fixed count? example

Display Commands

Controls the settings of the front panel screen.

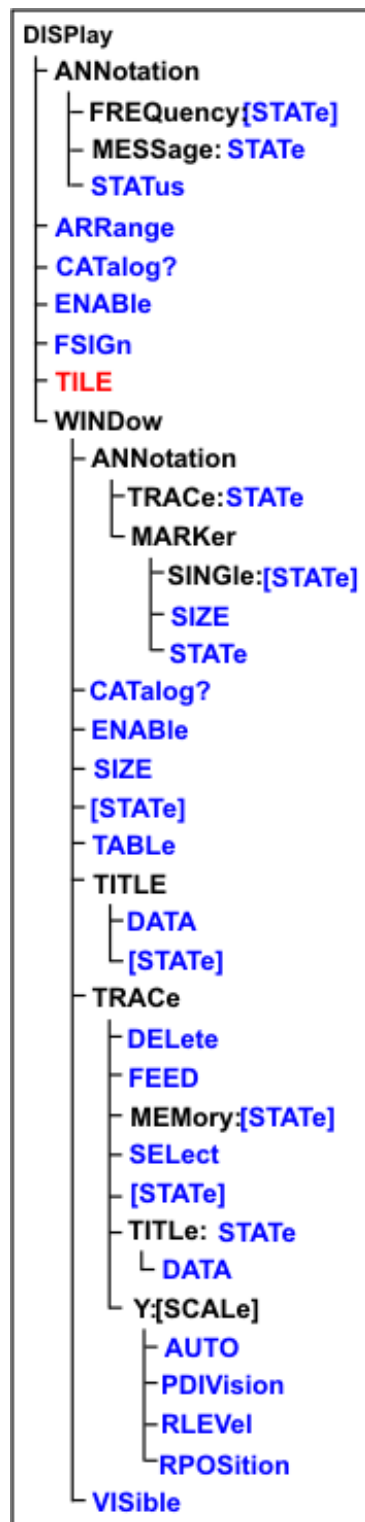

Click on a [blue](#) keyword to view the command details.

See Also

- See an [example](#) using some of these commands
 - [Synchronizing the PNA and Controller](#)
 - [Learn about Screen Setup](#)
 - [SCPI Command Tree](#)
-

DISPlay:ANNotation:FREQuency[:STATe] <ON | OFF>

(Read-Write) Turns frequency information on the display title bar ON or OFF for all windows.

Parameters

<ON | OFF> **ON** (or 1) - turns frequency annotation ON.
OFF (or 0) - turns frequency annotation OFF.

Examples

```
DISP:ANN:FREQ ON  
display:annotation:frequency:state off
```

Query Syntax DISPlay:ANNotation:FREQuency[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON (1)

DISPlay:ANNotation:MESSage:STATe <ON | OFF>

(Read-Write) Enables and disables error pop-up messages on the display.

Parameters

<ON | OFF> **ON** (or 1) - enables error pop-up messages
OFF (or 0) - disables error pop-up messages

Examples

```
DISP:ANN:MESS:STAT ON  
display:annotation:message:state off
```

Query Syntax DISPlay:ANNotation:MESSage:STATe?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON (1)

DISPlay:ANNotation:STATus <ON | OFF>

(Read-Write) Turns the status bar at the bottom of the screen ON or OFF. The status bar displays information for the active window.

Parameters

<ON | OFF> **ON** (or 1) - turns status bar ON.
 OFF (or 0) - turns status bar OFF.

Examples

```
DISP:ANN:STAT ON
display:annotation:status off
```

Query Syntax DISPlay:ANNotation:STATus?

Return Type Boolean (1 = ON, 0 = OFF)

Default Last state that was set

DISPlay:ARRange <char>

(Write-only) Places EXISTING measurements into pre-configured window arrangements. Overlay, Stack(2), Split(3), and Quad(4) creates new windows. To learn more, see [Arrange Existing Measurements](#).

Parameters

<char> Window arrangement. Choose from:

- TILE - tiles existing windows
- CASCade - overlaps existing windows
- OVERlay - all traces placed in 1 window
- STACK - 2 windows
- SPLit - 3 windows
- QUAD - 4 windows

Examples

```
DISP:ARR CASC
display:arrange cascade
```

Query Syntax Not Applicable

Default TILE

DISPlay:CATalog?

(Read-only) Returns the existing Window numbers.

Return Type String of Character values, separated by commas

Example Two windows with numbers 1 and 2 returns:
"1,2"

Default Not applicable

DISPlay:ENABLE <ON | OFF>

(Read-Write) Specifies whether to disable or enable all analyzer display information **in all windows** in the analyzer application. Marker data is not updated. More CPU time is spent making measurements instead of updating the display.

Parameters

<ON | OFF> **ON** (or 1) - turns the display ON.
OFF (or 0) - turns the display OFF.

Examples DISP:ENAB ON
display:enable off

Query Syntax DISPlay:ENABLE?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

DISPlay:FSIGn <ON | OFF>

(Read-Write) Shows or hides the window which displays global pass/fail results.

Parameters

<ON | OFF> **ON** (or 1) - displays the pass/fail dialog
OFF (or 0) - hides the pass/fail dialog

Examples DISP:FSIG ON
display:fsign off

Query Syntax DISPlay:FSIGn?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

DISPlay[:TILE] - Superseded

This command is replaced by [DISP:ARRange](#)

(Write-only) Tiles the windows on the screen.

Examples `DISP
display:tile`

Default Not Applicable

DISPlay:WINDow<wnum>:ANNotation:MARKer:SINGle[:STATe] <bool>

(Read-Write) Either shows marker readout of only the active trace or other traces simultaneously.

See other SCPI [Marker](#) commands. Learn more about [Marker readout](#).

Parameters

- <wnum> Any existing window number. If unspecified, value is set to 1.
- <bool> **ON** (or 1) - Shows the readout of only the active marker for each trace.
- OFF** (or 0) - Shows up to 5 marker readouts per trace, up to 20 total readouts.

Examples `DISP:WIND:ANN:MARK:SING ON
display>window:annotation:marker:single off`

Query Syntax `DISPlay:WINDow:ANNotation:MARKer:SINGle?`

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

DISPlay:WINDow<wnum>:ANNotation:MARKer:SIZE <char>

(Read-Write) Specifies the size of the marker readout text. See other SCPI [Marker](#) commands. Learn more about [Marker readout](#).

Parameters

- <wnum> Any existing window number. If unspecified, value is set to 1.
- <char> Readout text size. Choose from: **NORMal** | **LARGE**

Examples `DISP:WIND:ANN:MARK:SIZE LARG
display>window:annotation:marker:size normal`

Query Syntax `DISPlay:WINDow:ANNotation:MARKer:SIZE?`

Return Type Character

Default NORMal

DISPlay:WINDow<wnum>:ANNotation:MARKer:STATe <ON | OFF>

(Read-Write) Specifies whether to show or hide the Marker readout (when markers are ON) on the selected window. See other SCPI [Marker](#) commands. Learn more about [Marker readout](#).

Parameters

- <wnum> Any existing window number. If unspecified, value is set to 1.
- <ON | OFF> **ON** (or 1) - turns marker readout ON.
OFF (or 0) - turns marker readout OFF.

Examples

```
DISP:WIND:ANN:MARK:STAT ON
display:window:annotation:marker:state off
```

Query Syntax DISPlay:WINDow:ANNotation:MARKer:STATe?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

DISPlay:WINDow<wnum>:ANNotation:TRACe:STATe <ON | OFF>

(Read-Write) Specifies whether to show or hide the Trace Status buttons on the left of the display.

Parameters

- <wnum> Any existing window number. If unspecified, value is set to 1.
- <ON | OFF> **ON** (or 1) - turns the buttons ON.
OFF (or 0) - turns the buttons OFF.

Examples

```
DISP:WIND:ANN:TRAC:STAT ON
display:window:annotation:trace:state off
```

Query Syntax DISPlay:WINDow:ANNotation:TRACe:STATe?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

DISPlay:WINDow<wnum>:CATalog?

(Read-only) Returns the trace numbers for the specified window.

Parameters

<wnum> Any existing window number. If unspecified, value is set to 1.

Example

```
Window 1 with four traces:  
DISPlay:WINDow1:CATalog?  
Returns:  
"1,2,3,4"
```

Return Type String of Character values separated by commas

Default Not applicable

DISPlay:WINDow<wnum>:ENABle <ON | OFF>

(Read-Write) Specifies whether to disable or enable all analyzer display information **in the specified window**. Marker data is not updated. More CPU time is spent making measurements instead of updating the display.

Parameters

<wnum> Any existing window number. If unspecified, value is set to 1.

<ON | OFF> **ON** (or 1) - turns the display ON.
OFF (or 0) - turns the display OFF.

Examples

```
DISP:WIND:ENABle ON  
display:window1:enable off
```

Query Syntax DISPlay:WINDow<wnum>:ENABle?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

DISPlay:WINDow<wnum>:SIZE <char>

(Read-Write) Sets or returns the window setting of Maximized, Minimized, or Normal. To arrange all of the windows, use [DISP:ARR](#).

Parameters

<wnum> Any existing window number. If unspecified, value is set to 1

<char> Window size. Choose from:

MIN | MAX | NORM

Examples

```
DISP:WIND:SIZE MAX
display:window:size norm
```

Query Syntax DISPlay:WINDow:SIZE?

Default Not Applicable

DISPlay:WINDow<wnum>[:STATe] <ON | OFF>

(Read-Write) **Write** to create or delete a window on the screen or **Read** whether a window is present.

Parameters

<wnum> Window number to create; choose any integer between **1** and the [maximum number of windows allowed in the PNA](#).

<ON | OFF> **ON** (or 1) - The window <wnum> is created.
OFF (or 0) - The window <wnum> is deleted.

Examples

```
DISP:WIND ON
display:window2:state off
```

Query Syntax DISPlay:WINDow<wnum>[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default Window number "1" **ON**

DISPlay:WINDow<wnum>:TABLE <char>

(Read-Write) **Write** to show the specified table at the bottom of the analyzer screen or **Read** to determine what table is visible.

Parameters

<wnum> Any existing window number. If unspecified, value is set to 1

<char> Table to show. Choose from:
OFF | MARKer | LIMit | SEGMENT

Examples

```
DISP:WIND:TABLE SEGM
display:window:table off
```

Query Syntax DISPlay:WINDow:TABLE?

Default OFF

DISPlay:WINDow<wnum>:TITLe:DATA <string>

(Read-Write) Sets data in the window title area. The title is turned ON and OFF with [DISP:WIND:TITL:STAT OFF](#).

Parameters

<wnum> Any existing window number. If unspecified, value is set to 1.

<string> Title to be displayed. Any characters, enclosed with quotes. If the title string exceeds 50 characters, an error will be generated and the title not accepted. Newer entries replace (not append) older entries.

Examples

```
DISP:WIND:TITL:DATA 'hello'
display:window2:title:data 'hello'
```

Query Syntax DISPlay:WINDow<wnum>:TITLe:DATA?

Return Type String

Default NA

DISPlay:WINDow<wnum>:TITLe[:STATe] <ON | OFF>

(Read-Write) Turns display of the title string ON or OFF. When OFF, the string remains, ready to be redisplayed when turned back ON.

Parameters

- <wnum> Any existing window number. If unspecified, value is set to 1
- <ON | OFF> **ON** (or 1) - turns the title string ON.
OFF (or 0) - turns the title string OFF.

Examples

```
DISP:WIND:TITL ON  
display:window1:title:state off
```

Query Syntax DISPlay:WINDow<wnum>:TITLe[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

DISPlay:WINDow<wnum>:TRACe<tnum>:DELeTe

(Write-only) Deletes the specified trace from the specified window. The measurement parameter associated with the trace is not deleted.

Parameters

- <wnum> Any existing window number. If unspecified, value is set to 1.
- <tnum> The number of the trace to be deleted; if unspecified, value is set to 1

Examples

```
DISP:WIND:TRAC:DEL  
display:window2:trace2:delete
```

Query Syntax Not applicable

Default NA

DISPlay:WINDow<wnum>:TRACe<tnum>:FEED <name>

(Write-only) Creates a new trace <tnum> and associates (feeds) a measurement <name> to the specified window<wnum>. This command should be executed immediately after creating a new measurement with [CALC:PAR:DEF<name>,<parameter>](#).

To feed the same measurement to multiple traces, create another measurement with the same <name>,<parameter> using the CALC:PAR:DEF command. The analyzer will collect the data only once.

Parameters

- <wnum> Any existing window number. If unspecified, value is set to 1.
- <tnum> Trace number to be created. Choose any Integer between **1** and **8**
- <name> Name of the measurement that was defined with
CALC:PAR:DEF<name>,<parameter>

Examples

```
DISP:WIND:TRAC:FEED 'test'
display:window2:trace2:feed 'test'
```

Query Syntax Not applicable

Default "CH1_S11"

DISPlay:WINDow<wnum>:TRACe<tnum>MEMory[:STATe] <ON | OFF>

(Read-Write) Turns the memory trace ON or OFF.

Parameters

- <wnum> Any existing window number. If unspecified, value is set to 1.
- <tnum> Any existing trace number; if unspecified, value is set to 1
- <ON | OFF> **ON** (or 1) - turns the memory trace ON.
OFF (or 0) - turns the memory trace OFF.

Examples

```
DISP:WIND:TRAC:MEM ON
display:window2:trace2:memory:state off
```

Query Syntax DISPlay:WIND<wnum>:TRACe<tnum>:MEMory[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

DISPlay:WINDow<wnum>:TRACe<tnum>:SElect

(Write-only) Activates the specified trace in the specified window for front panel use.

Parameters

<wnum> Any existing window number. If unspecified, value is set to 1.

<tnum> Any existing trace number; if unspecified, value is set to 1

Examples

```
DISP:WIND:TRAC:SEL  
display:window2:trace2:select
```

Query Syntax Not applicable

Default NA

DISPlay:WINDow<wnum>:TRACe<tnum>[:STATe] <ON | OFF>

(Read-Write) Turns the display of the specified trace in the specified window ON or OFF. When OFF, the measurement behind the trace is still active.

Parameters

<wnum> Any existing window number. If unspecified, value is set to 1.

<tnum> Any existing trace number; if unspecified, value is set to 1

<ON | OFF> **ON** (or 1) - turns the trace ON.
OFF (or 0) - turns the trace OFF.

Examples

```
DISP:WIND:TRAC ON  
display:window2:trace2:state off
```

Query Syntax DISPlay:WIND<wnum>:TRACe<tnum>[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

DISPlay:WINDow<wnum>:TRACe<tnum>TITLe:DATA <string>

(Read-Write) Writes and read data to the trace title area. The trace title is embedded in the [trace status field](#). [Learn more](#).

Newer entries replace (not append) older entries. The title is turned ON and OFF with [DISP:WIND:TRAC:TITL:STAT](#).

Parameters

- <wnum> Any existing window number. If unspecified, value is set to 1.
- <tnum> Trace number of the specified window. If unspecified, value is set to 1. The trace number displayed in [trace status](#) is the trace number of the channel; not the window. Use [Display:Cat?](#) to read the window numbers. Use [Disp:Window:Cat?](#) to read the trace numbers of the specified window.
- <string> Title to be displayed. Any characters (not spaces) enclosed with quotes.

Examples

```
DISP:WIND:TRAC:TITL:DATA 'MyNewMeas'  
display>window2:trace3:title:data 'hello'
```

Query Syntax DISPlay:WINDow<wnum>:TRACe<tnum>TITLe:DATA?

Return Type String

Default Not Applicable

DISPlay:WINDow<wnum>:TRACe<tnum>TITLe:STATe <bool>

(Read-Write) Turns display of the Trace Title ON or OFF. When turned OFF, the previous trace title returns. Set a new trace title using [DISP:WIND:TRAC:TITL:DATA](#)

[Learn more](#) about Trace Titles

Parameters

- <wnum> Any existing window number. If unspecified, value is set to 1
- <tnum> Trace number of the specified window. If unspecified, value is set to 1. The trace number displayed in [trace status](#) is the trace number of the channel; not the window. Use [Display:Cat?](#) to read the window numbers. Use [Disp:Window:Cat?](#) to read the trace numbers of the specified window.
- <bool> **ON** (or 1) - turns the title ON.
OFF (or 0) - turns the title OFF.

Examples

```
DISP:WIND:TRAC:TITL ON  
Display>window2:trace3:title:state off
```

Query Syntax DISPlay:WINDow<wnum>:TRACe<tnum>:TITLe[:STATe]?]

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

DISPlay:WINDow<wnum>:TRACe<tnum>:Y[:SCALe]:AUTO

(Write-only) Performs an **Autoscale** on the specified trace in the specified window, providing the best fit display. Autoscale is performed only when the command is sent; it does NOT keep the trace autoscaled indefinitely.

Parameters

<wnum> Any existing window number. If unspecified, value is set to 1.

<tnum> Any existing trace number; if unspecified, value is set to 1

Examples

```
DISP:WIND:TRAC:Y:AUTO
display>window2:trace2:y:scale:auto
```

Query Syntax Not applicable

Default Not applicable

DISPlay:WINDow<wnum>:TRACe<tnum>:Y[:SCALe]:PDIVision <num>

(Read-Write) Sets the Y axis **Per Division** value of the specified trace in the specified window.

Parameters

<wnum> Any existing window number. If unspecified, value is set to 1.

<tnum> Any existing trace number; if unspecified, value is set to 1

<num> Units / division value. The range of acceptable values is dependent on format and domain.

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
DISP:WIND:TRAC:Y:PDIV 1
display>window2:trace2:y:scale:pdivision maximum
```

Query Syntax DISPlay:WINDow<wnum>:TRACe<tnum>:Y[:SCALe]:PDIVision?

Return Type Numeric

Default 10

DISPlay:WINDow<wnum>:TRACe<tnum>:Y[:SCALe]:RLEVel <num>

(Read-Write) Sets the Y axis Reference Level of the specified trace in the specified window.

Parameters

- <wnum> Any existing window number. If unspecified, value is set to 1.
- <tnum> Any existing trace number; if unspecified, value is set to 1
- <num> Reference level value. The range of acceptable values is dependent on format and domain.

Note: This command will accept MIN or MAX instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
DISP:WIND:TRAC:Y:RLEV 0
display>window2:trace2:y:scale:rlevel minimum
```

Query Syntax DISPlay:WINDow<wnum>:TRACe<tnum>:Y[:SCALe]:RLEVel?

Return Type Numeric

Default NA

DISPlay:WINDow<wnum>:TRACe<tnum>:Y[:SCALe]:RPOSition <num>

(Read-Write) Sets the **Reference Position** of the specified trace in the specified window

Parameters

- <wnum> Any existing window number. If unspecified, value is set to 1.
- <tnum> Any existing trace number; if unspecified, value is set to 1
- <num> Reference position on the screen measured in horizontal graticules from the bottom. The range of acceptable values is dependent on format and domain.

Note: This command will accept MIN or MAX instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
DISP:WIND:TRAC:Y:RPOS 0
display>window2:trace2:y:rposition maximum
```

Query Syntax DISPlay:WINDow<wnum>:TRACe<tnum>:Y[:SCALe]:RPOSition?

Return Type Numeric

Default 5

DISPlay:VISible <ON | OFF>

(Read-Write) Makes the PNA application visible or not visible. In the Not Visible state, the analyzer cycle time for making measurements, and especially data transfer, can be significantly faster because the display does not process data.

Parameters

<ON | OFF> **ON** (or 1) - PNA app is visible
 OFF (or 0) - PNA app is NOT visible

Examples

```
DISP:VIS ON  
display:visible off
```

Query Syntax DISPlay:VISible?

Return Type Boolean (1 = ON, 0 = OFF)


Default ON

Last modified:

9/12/06 Modified for number of windows.

Format Commands

Specifies the way that data will be transferred when moving large amounts of data. These commands will affect data that is transferred with the [CALC:DATA](#) and [CALC:RDATA](#) commands.

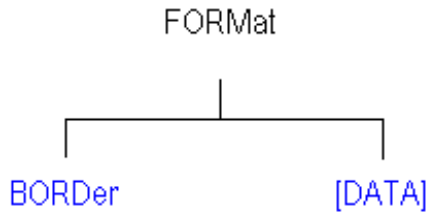

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
 - [Synchronizing the PNA and Controller](#)
 - [SCPI Command Tree](#)
-

FORMat:BORDER <char>

(Read-Write) Set the byte order used for GPIB data transfer. Some computers read data from the analyzer in the reverse order. This command is only implemented if FORMAT:DATA is set to :REAL. If FORMAT:DATA is set to :ASCII, the swapped command is ignored.

Parameters

<char> Choose from:

NORMal - Use when your controller is anything other than an IBM compatible computers

SWAPped - for IBM compatible computers

Note: Use **NORMal** if you are using drivers like VISA or development environments like VEE, LabView, or T&M Tool kit.

Examples

```
FORM:BORD SWAP
format:border normal
```

Query Syntax FORMat:BORDER?

Return Type Character

FORMat[:DATA] <char>

(Read-Write) Sets the data format for data transfers.

To transfer measurement data, use [CALC:DATA](#).

To transfer Cal Set data, use

To transfer Source Power correction data, use

[SOURce:POWer:CORRection:COLLect:TABLE:DATA](#)

[SOURce:POWer:CORRection:COLLect:TABLE:FREQuency](#)

[SOURce:POWer:CORRection:DATA](#)

Parameters

<char> Choose from:

REAL,32 - (default value for REAL) Best for transferring large amounts of measurement data.

REAL,64 - Slower but has more significant digits than REAL,32. Use REAL,64 if you have a computer that doesn't support REAL,32.

ASCii,0 - The easiest to implement, but very slow. Use if small amounts of data to transfer.

Note: The **REAL,32** and **REAL,64** arguments transfer data in block format as explained in [Transferring Measurement Data](#).

Examples

```
FORM REAL,64
format:data ascii
```

Query Syntax FORMat:DATA?

Return Type Character,Character

Default ASCii,0

Hardcopy Command

[Learn about Printing](#)

[SCPI Command Tree](#)

HCOPY:FILE <filename>

(Write-only) Saves the screen image to a file.

Parameters

<filename> Name of the file to save the screen to. The file is saved to the current working directory unless a valid full path name is specified.

Use one of the following suffixes:

.bmp - not recommended due to large file size

.jpg - not recommended due to poor quality

.png - recommended

Examples

```
HCOPY:FILE "myFile.png"
```

```
hcopy:file "c:\data\myfile.png"
```

Query Syntax Not Applicable

Default Not Applicable

HCOPY[:IMMEDIATE]

(Write-only) Prints the screen to the default printer.

Examples

 
```
HCOP  
hcopy:immediate
```

Query Syntax Not applicable

Default Not Applicable

Initiate Commands

Controls triggering signals



Click on a [blue](#) keyword to view the command details.

See Also

- Example [Triggering the PNA](#)
 - [Learn about Triggering](#)
 - [Synchronizing the PNA and Controller](#)
 - [SCPI Command Tree](#)
-

INITiate:CONTInuous <boolean>

(Read-Write) Specifies whether the PNA trigger source is set to Internal (continuous) or Manual.

This command is a subset of [TRIG:SEQ:SOURce](#), which can also set the trigger source to External.

To set how a channel responds to trigger signals, use [SENS:SWE:MODE](#).

See a [map of user interface to SCPI triggering commands](#).

For more information on triggering, see the [PNA Trigger Model](#).

See the Example program: [Triggering the PNA using SCPI](#).

Parameters

- <boolean> **ON** (or 1) - Internal (continuous) trigger.
- OFF** (or 0) - Manual sweep. Use [INIT:IMMediate](#) to send a trigger signal

Examples

```
INIT:CONT ON
initiate:continuous off
```

Query Syntax INITiate:CONTInuous?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

INITiate<cnum>[:IMMediate]

(Write-only) Stops the current sweeps and immediately sends a trigger. (Same as [Trigger!](#) on the PNA front panel).

See the Example program: [Triggering the PNA using SCPI](#)

Note: An SMC Fixed Output measurement cannot be triggered using this command. For more information, see the [example program](#).

This command requires [Trigger:Source](#) to be set to Manual. This causes ONE trigger signal to be SENT each time INIT:IMM is issued.

[Sens<ch>:Sweep:Mode](#) sets the number of trigger signals each channel will ACCEPT (Continuous - unlimited, Groups - a specific number, or HOLD - none.)

To trigger ALL channels in turn:

Set ALL channels to Sens<ch>:Sweep:Mode Continuous. The <ch> argument in INIT<ch>:IMM is ignored.

Then...

- TRIG:SCOP ALL triggers ALL channels (in sequence) each time Init:Imm is sent.
- TRIG:SCOP CURRent triggers ONLY the NEXT channel each time Init:Imm is sent.

To trigger ONLY a specified channel:

1. Set ALL channels to Sens<ch>:Sweep:Mode HOLD
2. Send TRIG:SCOP CURRent
3. Send Init<ch>:Imm where <ch> is the channel to be triggered.

Advanced Situations that require some channels to be in CONT and others in HOLD are rare. The following describes the behavior of the Init:Imm command in these situations:

When [Trigger:Scope](#) = Global:

- If the SPECIFIED <cnum> channel is in hold mode, it is put in single trigger (accepts 1 trigger signal) and goes to the end of the queue of channels to be triggered. The other 'non-hold' channels are triggered. The next Init:Imm triggers the specified channel first.

For example: ch1 is in Hold, ch2 and ch3 are in CONT and we send INIT1:IMM

- On the first INIT:IMM, ch2 and ch3 is triggered.
- next INIT:IMM, ch1, ch2, ch3 is triggered.
- next INIT:IMM, ch2 and ch3 is triggered.
- next INIT:IMM, ch1, ch2, ch3 is triggered, and so forth.

When Trigger:Scope = Channel

- Only ONE channel is triggered for each issued INIT<ch>:IMM command.
- If the specified channel is in hold, it is put in single trigger (accepts 1 trigger signal) and goes the end of the queue of channels to be triggered as in the 'Global' example.

This is one of the PNA overlapped commands. [Learn more.](#)

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

Examples

```
INIT
initiate2:immediate
```

Query Syntax

Not applicable

Default


Not applicable

Last modified:

April 23, 2007 Updated Init:Imm

Memory Commands

The memory commands control saving and loading instrument states and measurement trace data to the hard drive. To read and write trace data in GPIB format, see [CALC:DATA](#).

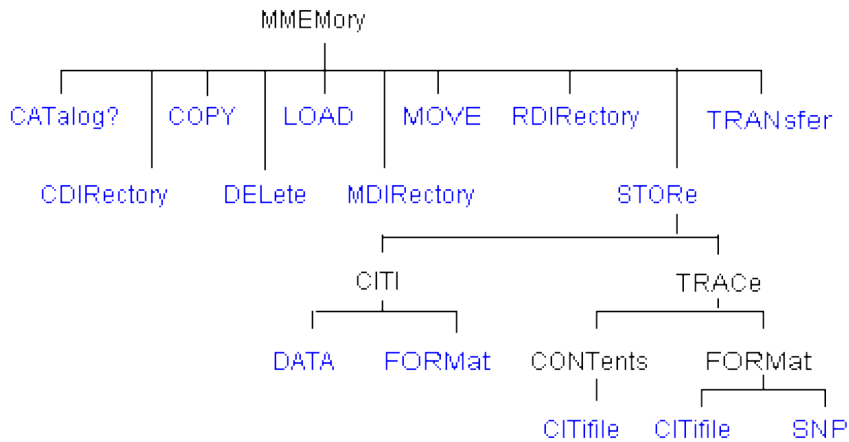

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Save / Recall and File Types](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Specifying Path Names

The MMEM commands use the following rules to specify path names:

- The default folder is "C:\Program Files\Agilent\Network Analyzer\Documents"
- You can change the active directory using [MMEMory:CDIRectory](#).
- Specify only the file name if using the active directory.
- You can also use an absolute path name to specify the folder and file.

MMEMory:CATalog[:<char>]? [<folder>]

(Read-only) Returns a comma-separated string of file names that are in the specified folder. If there are no files of the specified type, "NO CATALOG" is returned. [Learn about File Types](#)

Parameters

<char> The type of files to list. Choose from:

- **STATe** - Instrument states (.sta)
- **CORRection** - Calibration Data (.cal)
- **CSARchive** - Instrument state and calibration data (.csa)
- **CSTate** - Instrument state and link to Calibration data (.cst)

If unspecified then ALL file types (even unknown types) are listed.

<folder> String - Any existing folder name. See [Specifying Path Names](#)

Examples

```
MMEM:CAT? 'lists all files from the current folder  
mmemory:catalog:correction? 'C:\Program Files\Agilent\Network  
Analyzer\Documents' 'lists .cal files from the specified folder
```

Default Not applicable

MMEMory:CDIRectory <folder>

(Read-Write) Changes the folder name.

Parameters

<folder> Any drive and folder name that already exists.
If the same level as "C:\Program Files\Agilent\Network Analyzer\Documents", then no punctuation is required

```
MMEM:CDIR Service
```

If the new folder is at a different level than "C:\Program Files\Agilent\Network Analyzer\Documents", use a slash (\) before the folder name and enclose in quotes.

```
mmemory:cdirectory '\automation' 'changes default directory up  
one level.
```

You can use an absolute path to specify the new folder.

```
mmemory:cdirectory 'c:\automation\service'
```

Query Syntax MMEMory:CDIRectory? 'Returns the current folder name

Return Type String

Default 'C:\Program Files\Agilent\Network Analyzer\Documents'

MMEMory:COpy <file1>,<file2>

(Write-only) Copies file1 to file2. Extensions must be specified.

Parameters

<file1> String - Name of the file to be copied. See [Specifying Path Names](#)

<file2> String - Name of the file to be created from file1.

Examples `MMEM:COpy 'MyFile.cst','YourFile.cst'`

Query Syntax Not applicable

Default Not applicable

MMEMory:DElete <file>

(Write-only) Deletes file. Extensions must be specified.

Parameters

<file> String - Name of the file to be deleted. See [Specifying Path Names](#)

Examples `MMEM:DEL 'MyFile.cst'`

Query Syntax Not applicable

Default Not applicable

MMEMory:LOAD[:<char>] <file>

(Write-only) Loads the specified file. [Learn about File Types](#)

Parameters

<char> The type of file to load. Choose from:

- **STaTe** - Instrument states (.sta)
- **CORRection** - Calibration Data (.cal)
- **CSARchive** - Instrument state and calibration data (.csa)
- **CSTate** - Instrument state and link to Calibration data (.cst)

If <char> is unspecified, the extension must be included in the filename.

If an extension is specified in <file> that does not agree with <char> then no action is taken.

<file> String - Name of the file to be loaded. See [Specifying Path Names](#)

Examples

```
MMEM:LOAD 'MyFile.cst'  
mmemory:load:state 'MyInstState'
```

Query Syntax Not applicable

Default Not applicable

MMEMory:MDIRectory <folder>

(Write-only) Makes a folder.

Parameters

<folder> String - Name of the folder to make. See [Specifying Path Names](#)

Examples

```
MMEM:MDIR 'MyFolder'  
mmemory:mdirectory 'c:\NewFolder'
```

Query Syntax Not applicable

Default Not applicable

MMEMory:MOVE <file1>,<file2>

(Write-only) Renames <file1> to <file2>. File extensions must be specified.

Parameters

<file1> String - Name of the file to be renamed. See [Specifying Path Names](#)

<file2> String - Name of the new file.

Examples

```
MMEM:MOVE 'MyFile.cst','YourFile.cst'
```

Query Syntax Not applicable

Default Not applicable

MMEMory:RDIRectory <folder>

(Write-only) Removes the specified folder.

Parameters

<folder> String - Name of the folder to remove. See [Specifying Path Names](#)

Examples

```
MMEM:RDIR 'MyFolder'
```

Query Syntax Not applicable

Default Not applicable

MMEMory:STORe[:<char>] <file>

(Write-only) Stores the specified file (.sta, .cal, .csa, .cst, prn).

- To save snp files, use [Calc:Data:SNP:PORTs:SAVE](#).
- To save *.cti files, use [MMEM:STOR:CIT:DATA](#) or [MMEM:STOR:CIT:FORM](#).

Parameters

<char> The type of file to store. Choose from:

- **STATe** - Instrument states (.sta)
- **CORRection** - Calibration Data (.cal)
- **CSARchive** - Instrument state and calibration data (.csa)
- **CSTate** - Instrument state and link to Calibration data (.cst)

No <char> is specified for prn.

If <char> is unspecified, then the extension must be included in the filename.

If an extension is specified in <file> that does not agree with <char> then no action is taken.

[Learn about File Types](#)

<file> String - Name of any valid file that is not already in existence. See [Specifying Path Names](#)

Examples

```
MMEM:STOR:STAT 'myState'  
mmemory:store 'c:\bin\myState.sta'  
  
MMEM:STOR 'MyData.prn'
```

Query Syntax Not applicable

Default Not applicable

MMEMory:STORe:CITifile:DATA <filename>

(Write only) Saves UNFORMATTED trace data to .cti file. [Learn more.](#)

Parameters

<filename> Any drive and folder name that already exists.
If the same level as "C:\Program Files\Agilent\Network Analyzer\Documents", then no punctuation is required

```
MMEM:STOR:CIT:DATA MYCTIFile
```

If the new folder is at a different level than "C:\Program Files\Agilent\Network Analyzer\Documents", use a slash (\) before the folder name and enclose in quotes.

```
mmemory:cdirectory '\automation' 'changes default directory up  
one level.'
```

You can use an absolute path to specify the new folder.

```
mmemory:cdirectory 'c:\automation\service'
```

Query Syntax Not Applicable

Default C:\Program Files\Agilent\Network Analyzer\Documents'

MMEMory:STORe:CITifile:FORMat <filename>

(Write only) Saves FORMATTED trace data to .cti file. [Learn more.](#)

Parameters

<filename> Any drive and folder name that already exists.
If the same level as "C:\Program Files\Agilent\Network Analyzer\Documents", then no punctuation is required

```
MMEM:STOR:CIT:DATA MYFile
```

If the new folder is at a different level than "C:\Program Files\Agilent\Network Analyzer\Documents", use a slash (\) before the folder name and enclose in quotes.

```
mmemory:cdirectory '\automation' 'changes default directory up  
one level.'
```

You can use an absolute path to specify the new folder.

```
mmemory:cdirectory 'c:\automation\service'
```

Query Syntax Not Applicable

Default C:\Program Files\Agilent\Network Analyzer\Documents'

MMEMory:STORe:TRACe:CONTents:CITifile <char>

(Read-Write) Specifies the contents of subsequent citifile save statements. (See [Data Define Saves](#))

Parameters

<char> Choose from:

SING - Single trace

DISP - All displayed traces

AUTO - All displayed traces

Examples

```
MMEM:STOR:TRAC:CONT:CIT SING
```

Query Syntax MMEMory:STORe:TRACe:CONTents?

Return Type Character

Default Auto

MMEMory:STORe:TRACe:FORMat:CITifile <char>

(Read-Write) Specifies the format of subsequent citifile save statements. (See [Data Define Saves](#))

Parameters

<char> Format in which the citifile will be saved with subsequent [MMEMory:STORe:CIT:FORMat](#) statements. Choose from:

MA - Linear Magnitude / degrees

DB - Log Magnitude / degrees

RI - Real / Imaginary

AUTO - Format in which the trace is already displayed. If other than Log Mag, Linear Magnitude, or Real/Imag, then the format will be in Real/Imag.

Examples

```
MMEM:STOR:TRAC:FORM:CIT MA
```

Query Syntax MMEMory:STORe:TRACe:FORMat:CITifile?

Return Type Character

Default Auto'

MMEMory:STORe:TRACe:FORMat:SNP <char>

(Read-Write) Specifies the format of subsequent .s1p, .s2p, .s3p; s4p save statements. (See [Data Define Saves](#)).

Parameters

<char> Choose from:

MA - Linear Magnitude / degrees

DB - Log Magnitude / degrees

RI - Real / Imaginary

AUTO - data is output in currently selected trace format. If other than LogMag, LinMag, or Real/Imag, then output is in Real/Imag.

Examples

```
MMEM:STOR:TRAC:FORM:SNP MA
```

Query Syntax MMEMory:STORe:TRACe:FORMat:SNP?

Return Type Character

Default Auto'

MMEMory:TRANsfer <fileName>,<dataBlock>

(Read-Write) Transfers data between the PNA and an external controller. Other MMEM commands transfer data between the PNA application and the PNA hard drive. If <fileName> already exists, it will be overwritten. The file must be no larger than 20MB.

To read **trace data** from the PNA in block format, use [CALC:DATA](#).

Parameters

<fileName> String - File name. See [Specifying Path Names](#)

<dataBlock> [Block Data](#) - The contents of the file.

The data block is a block of binary data. Use the following syntax:

#<num digits><byte count><data bytes><NL><END>

where:

<num_digits> specifies how many digits are contained in <byte_count>

<byte_count> specifies how many data bytes will follow in <data bytes>

Example [See example program](#)

Query Syntax MMEMory:TRANsfer? <fileName>

Reads block data from the specified file location.

Default Not applicable

Last modified:

9/12/06 MQ Store command has reference to PORTS Snp.

Output Command

[Learn about Power](#)

OUTPut[:STATe] <ON | OFF>

(Read-Write) Turns RF power from the source ON or OFF.

[See note about source power state with instrument state save and recall.](#)

Parameters

- <ON | OFF> **ON** (or 1) - turns RF power ON
- OFF** (or 0) - turns RF power OFF

Examples

```
OUTP ON
output:state off
```

Query Syntax OUTPut[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

Route Command

[Learn about Frequency Offset](#)

[SCPI Command Tree](#)

ROUTe<cnum>:PATH:LOOP[:R1] <char>

(Read-Write) Throws internal switch to reference receiver when the specified channel is measured. This feature is only available on PNA models with [Option 081](#) - external reference switch. See [block diagram of the reference switch](#).

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<char> Position of the switch. Choose from:

INTernal - bypass R1 Loop. Connects the port 1 source directly to the R1 receiver.

EXTernal - flow through R1 Loop. Allows direct access to the R1 receiver through the Reference 1 front-panel connectors.

Examples

```
ROUT:PATH:LOOP INT
route2:path:loop:r1 external
```

 
Query Syntax ROUTe<cnum>:PATH:LOOP:R1?

Return Type Character

Default INTernal

Sense:Average Commands

Sets sweep-to-sweep averaging parameters. Averaging is a noise reduction technique that averages each data point over a user-specified number of sweeps. Averaging affects all of the measurements in the channel.



Click on a [blue](#) keyword to view the command details.

See Also

- [Example](#) using some of these commands.
- [Learn about Averaging](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe<num>:AVERage:CLEAr

(Write-only) Clears and restarts averaging of the measurement data. Must also set [SENS:AVER\[:STATe\] ON](#)

Parameters

<num> Any existing channel number; if unspecified, value is set to 1.

Examples

```
SENS:AVER:CLE
sense2:average:clear
```

Query Syntax Not applicable

Default Not applicable

SENSe<num>:AVERage:COUNt <num>

(Read-Write) Sets the number of measurement sweeps to combine for an average. Must also set [SENS:AVER\[:STATe\] ON](#)

Parameters

- <cnum> Any existing channel number; if unspecified, value is set to 1.
- <num> Number of measurement sweeps to average. Choose any number between **1** and **65536** (2^{16}).

Examples

```
SENS:AVER:COUN 999
sense2:average:count 73
```

Query Syntax SENSE<cnum>:AVERage:COUNT?

Return Type Numeric

Default 1

SENSe<cnum>:AVERage[:STATe] <ON | OFF>

(Read-Write) Turns trace averaging ON or OFF.

Parameters

- <cnum> Any existing channel number; if unspecified, value is set to 1.
- <ON | OFF> **ON** (or 1) - turns averaging ON.
OFF (or 0) - turns averaging OFF.

Examples


```
SENS:AVER ON
sense2:average:state off
```

Query Syntax SENSe<cnum>:AVERage[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default Off

Sense:Bandwidth Commands

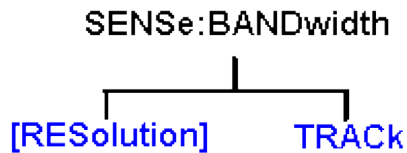

See Also

- [Example Programs](#)
 - [Learn about IF Bandwidth](#)
 - [Synchronizing the PNA and Controller](#)
 - [SCPI Command Tree](#)
-

SENSe<cnum>:BANDwidth | BWIDth[:RESolution] <num>

(Read-Write) Sets the bandwidth of the digital IF filter to be used in the measurement. (Use either **Sense:Bandwidth** or **Sense:Bwidth**)

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <num> IF Bandwidth in Hz. The list of valid IF Bandwidths is different depending on the PNA model. [\(Click to see the lists.\)](#) If an invalid number is specified, the analyzer will round up to the closest valid number.

Examples

```
SENS:BWID 1KHZ
sense2:bandwidth:resolution 1000
```

Query Syntax SENSe<cnum>:BANDwidth | BWIDth[:RESolution]?

Return Type Numeric

Default See [Preset IFBW](#) for your PNA model.

SENSe<cnum>:BANDwidth | BWIDth:TRACk <bool>

(Read-Write) Sets and returns the state of the [Reduce IF BW at Low Frequencies](#) feature.

(Use either **Sense:Bandwidth:Track** or **Sense:Bwidth:Track**).

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<bool> Choose from:

ON or **1** - Reduce IF BW at Low Frequencies is set ON

OFF or **0** - Reduce IF BW at Low Frequencies is set OFF

Examples

```
SENS:BWID:TRAC OFF  
sense2:bandwidth:track 1
```

Query Syntax

SENSe<num>:BANDwidth | BWIDth:TRACk?

Return Type

Boolean

Default


ON

Sense:Correction Commands

Performs and applies calibration and other error correction features.

To perform Guided Calibration, see [Sens:Corr Coll:GUIDed](#).

SENSe:CORRection	
—	CCHeck
	[ACQuire]
	DONE
	PARAmeter
—	CKIT (More)
—	COLLect
	[ACQuire]
	APPLy
	CKIT (More)
	GUIDed (More)
	ISOLation
	AVERage
	INCRement
	ECAL
	[STATe]
	METHod
	SAVE
	SESSion (More)
—	CSET (More)
—	EXTension (More)
—	IMPedance:INPut
	MAGNitude
—	INTerpolate
	[STATe]
—	ISOLation
	[STATe]
—	PREFerence
	CSET
	SAVE
	SAVUser
	ECAL
	ORientation
	PMAP
	SIMCal
	TRIG
	FREE

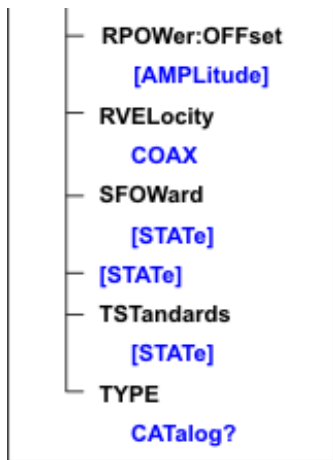

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- New [See Calibrating the PNA Using SCPI](#)
- [Learn about Measurement Calibration](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe<num>:CORRection:CCHeck[:ACQuire] <mod>[,char]

(Write-only) Reads the 'confidence data' associated with the specified ECal module and puts it into memory. The measurement is selected using [SENS:CORR:CCH:PAR](#). This command is compatible with *OPC.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1.
- <mod> ECAL Module that contains the confidence data. Choose from:

ECAL1

..through..

ECAL8

- [char] Optional argument. Specifies which characterization within the ECal module that the confidence data will be read from.

CHAR0 Factory characterization (data that was stored in the ECal module by

Agilent). Default if not specified.

CHAR1 User characterization #1

CHAR2 User characterization #2

CHAR3 User characterization #3

CHAR4 User characterization #4

CHAR5 User characterization #5

Examples

```
SENS:CORR:CCheck ECAL2
```

```
sense2:correction:ccheck:acquire ecal1,char1
```

Query Syntax Not applicable

Default Not applicable

SENSe<cnum>:CORRection:CCHeck:DONE

(Write-only) Concludes the Confidence Check and sets the ECal module back into the idle state.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

Examples

```
SENS:CORR:CCH:DONE
```

```
sense2:correction:ccheck:done
```

Query Syntax Not applicable

Default Not applicable

SENSe<cnum>:CORRection:CCHeck:PARAmeter <Mname>

(Read-Write) Specifies an existing measurement to be used for the Confidence Check.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <Mname> Name of the measurement you are selecting for the confidence check. The measurement must already exist.

Examples

```
SENS:CORR:CCH:PAR 'TEST'
'selects the measurement "test" on channel 1 for the confidence
check'

sense2:correction:ccheck:parameter 'test'
'selects the measurement "test" on channel 2 for the confidence
check'
```

Query Syntax SENSE<cnum>:CORRection:CCHeck:PARAmeter?

Returns the name of the selected measurement on channel <cnum>.

Return Type String

Default Not applicable

SENSe<cnum>:CORRection:COLLEct[:ACQuire] <class>[,subclass]

(Write-only) For UNGUIDED calibration, measures the specified standards from the selected calibration kit. The calibration kit is selected using the [Sense:Correction:Collect:CKIT](#) command.

For using two sets of standards, see [SENS:CORR:TST](#).

Note: Before using this command you must select two items:

1. Select a calibration method using [SENS:CORR:COLL:METH](#)
2. Select a measurement using [CALC:PAR:SEL](#). You can select one measurement for each channel.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <class> **Measures the standards associated with these class labels.** Choose from:

Label	Forward	Reverse
STAN1	S11A	S22A
STAN2	S11B	S22B
STAN3	S11C	S22C
STAN4	S21T	S12T

STAN5 Generic Isolation; not associated with calibration kit definition.

ECAL1 ECAL modules
through
ECAL8

POWER Take a receiver power cal sweep and turn correction ON

SLSET Sets 'sliding load type', and increments the "number of slides" count.
The total number of slides is critical to the correct calculation of the
sliding load algorithm. See a [sliding load cal example](#).

SLDONE Computes the sliding load using a circle fit algorithm.

[subclass] Optional argument. For mechanical calibration kits, choose from the following to
specify the standard to be acquired from the [SENS:CORR:COLL:CKIT:ORDER](#) list.
If not specified, subclass is set to **SST1**.

SST1 First standard in the order list

SST2 Second standard in the order list

SST3 Third standard in the order list

SST4 Fourth standard in the order list

SST5 Fifth standard in the order list

SST6 Sixth standard in the order list

SST7 Seventh standard in the order list

If an ECAL module (1 through 8) is specified for <class>, choose one of the
following for specifying which characterization within the ECal module will be
used for the acquire. If not specified, the default is **CHAR0**.

CHAR0 Factory characterization (data that was stored in the ECal module by
Agilent)

CHAR1 User characterization #1

CHAR2 User characterization #2

CHAR3 User characterization #3

CHAR4 User characterization #4

CHAR5 User characterization #5

Examples

```
SENS:CORR:COLL STAN1

'If SENS:CORR:COLL:CKIT:ORDER2 5,3,7
was specified, the following command measures standard 3 (the
second in the order list)
sense1:correction:collect:acquire stan3,sst2

SENS:CORR:COLL ECAL4

sense2:correction:collect:acquire ecal2,char1
```

Query Syntax Not applicable

Default Not applicable

SENSe<cnum>:CORRection:COLLect:APPLy

(Write-only) Applies error terms to the measurement that is selected using [Calc:Par:Select](#).

Note: Before using this command you must select a measurement using [CALC:PAR:SEL](#). You can select one measurement for each channel.

Note: This command is only necessary if you need to modify error terms. If you do not need to modify error terms, [SENSe<cnum>:CORRection:COLLect:SAVE](#) calculates and then automatically applies error terms after you use [SENS:CORR:COLL:ACQuire](#) to measure cal standards.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

Example

1. CALCulate2:PARAmeter:SElect S21_2 'select the measurement to apply terms to
2. SENSe2:CORRection:COLLect:METHod SPARSOLT 'set type of cal method.
3. CALCulate2:DATA? SCORR1 'download the error term of interest
4. 'Modify the error term here
5. CALCulate2:DATA SCORR1 'upload the error term of interest
6. SENSe2:CORRection:COLLect:APPLy 'applies the error terms to the measurement

Query Syntax Not applicable

Default Not applicable

SENSe<cnum>:CORRection:COLLect:ISOLation:AVERage:INCRement <num>

(Read-Write) Specifies amount to increment (increase) the channel averaging factor during isolation measurement of the ECal module during an unguided ECal calibration.

Note: if the channel currently has averaging turned OFF and <num> is greater than 1, averaging will be turned ON only during the isolation measurements and with the averaging factor equal to <num>.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1.
- <num> Incremental Averaging factor. The maximum averaging factor is 65536 (2^{16}).

Examples

```
SENS:CORR:COLL:ISOL:AVER:INCR 16
```

```
sense2:correction:collect:isolation:average:increment 0
```

Query Syntax SENSe<cnum>:CORRection:COLLect:ISOLation:AVERage:INCRement?

Return Type Numeric

Default 8 - If this command is NOT sent, but [ECal isolation is measured](#), then averaging will be turned ON with factor set to 8 during the isolation measurement.

SENSe<cnum>:CORRection:COLLect:ISOLation:ECAL[:STATe] <bool>

(Read-Write) Specifies whether or not the isolation state of the ECal module will be measured as part of an unguided ECal calibration.

An unguided calibration is performed using the SENS:CORR:COLL:METH and SENS:CORR:COLL:ACQ commands.

Note: The inherent isolation of the PNA is better than that attained with this command. ONLY use this command when using an external test set, and ONLY using a 8509x ECal module.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1.
- <bool> **ON** (or 1) - isolation is measured during the unguided ECal calibration.
- OFF** (or 0) isolation is NOT measured during the unguided ECal calibration.

Examples

```
SENS1:CORR:COLL:ISOL:ECAL ON
```

```
sense2:correction:collect:isolation:ecal:state 0
```

Query Syntax SENSe:CORRection:COLLect:ISOLation:ECAL:STATe?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

SENSe<cnum>:CORRection:COLLect:MEtHod <char>

(Read-Write) For UNGUIDED calibration, sets the calibration method (also known as 'Calibration Type' on calibration dialog box.) To select a Cal Type from a Cal Set, use [CALC:CORR:TYPE](#).

Note: Before using this command you must select a measurement using [CALC:PAR:SEL](#). You can select one measurement for each channel.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1
<char> Choose from:

Method	Description
NONE	No Cal method
REFL1OPEN	Response Open
REFL1SHORT or REFL1	Response Short
REFL3	Full 1 port
RPOWer	Receiver Power Cal
TRAN1	Response Thru
TRAN2	Response Thru and Isolation
SPARSOLT	Full SOLT 2 port
SPARTRL	TRL Cal (not available on all PNAs.)

Examples

```
SENS:CORR:COLL:METH REFL1  
sense2:correction:collect:method sparsolt
```

Query Syntax SENSe<cnum>:CORRection:COLLect:MEtHod?

Return Type Character

Default Not Applicable

SENSe<cnum>:CORRection:COLLect:SAVE

(Write-only) For UNGUIDED calibrations ONLY. This command does the following:

- calculates the error terms using the selected :METHod,
- applies the error terms to the selected measurement (turns error correction ON.)
- saves the calibration error-terms to the channels Cal Register or a User Cal Set.

The Cal Register or User Cal Set is determined by the setting of the SENS:CORR:PREFerence:CSET:SAVE command.

Do NOT use this command during an ECAL. When performing an ECAL calibration using [SENS:CORR:COLL:ACQuire](#), this SAVE operation is performed automatically before the completion of a successful ACQuire.

Before using this command you must select a measurement using [CALC:PAR:SEL](#). You can select one measurement for each channel.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

Examples

```
SENS:CORR:COLL:SAVE  
sense2:correction:collect:save
```

Query Syntax

Not applicable

Default

Not applicable

SENSe:CORRection:IMPedance:INPut:MAGNitude <num>

(Read-Write) Sets and returns the system impedance value for the analyzer.

Parameters

<num> System Impedance value in ohms. Choose any number between 0 and 1000 ohms.

Examples

```
SENS:CORR:IMP:INP:MAGN 75  
sense:correction:impedance:input:magnitude 50.5
```

Query Syntax

SENSe:CORRection:IMPedance:INPut:MAGNitude?

Return Type

Numeric

Default

50

SENSe<num>:CORRection:INTerpolate[:STATe] <ON | OFF>

(Read-Write) Turns correction interpolation ON or OFF.

Note: Before using this command you must select a measurement using [CALC:PAR:SEL](#). You can select one measurement for each channel.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<ON | OFF> **ON** (or 1) - turns interpolation ON.
OFF (or 0) - turns interpolation OFF.

Examples

```
SENS:CORR:INT ON  
sense2:correction:interpolate:state off
```

Query Syntax SENSE<num>:CORRection:INTerpolate[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

SENSe<num>:CORRection:ISOLation[:STATe] <ON | OFF> OBSOLETE

This command no longer works beginning in the PNA 5.2 release. To perform isolation as part of an unguided calibration, you must explicitly measure the isolation standard using [SENS:CORR:COLL:ACQ Stan5](#). See Example program.

To measure isolation as part of an ECal, use [SENS:CORR:COLL:ISOL:ECAL](#).

(Read-Write) Turns isolation cal ON or OFF during Full 2-port calibration. If this command is not sent, the default state is to **disable** Isolation.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<ON | OFF> **ON** (or 1) - turns isolation ON.
OFF (or 0) - turns isolation OFF.

Examples

```
SENS:CORR:ISOL ON  
sense2:correction:isolation:state off
```

Query Syntax SENSE<num>:CORRection:ISOLation[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF - (Isolation disabled)

SENSe:CORRection:PREFerence:CSET:SAVE <char>

Important Notes:

- This command replaces [SENS:CORR:PREF:CSET:SAVU](#)
- With 6.0 we implemented a change that defaults to saving completed calibrations to Cal Registers instead of User Cal Sets. To revert to the old behavior, send this command with the USER argument.

(Read-Write) Specifies the default manner in which calibrations that are performed using SCPI or COM are to be stored. Cal data is ALWAYS stored to the channel Cal Register regardless of this setting.

This setting survives instrument preset and reboot. It remains until changed by another execution of this command.

Note: Cal Set arguments used with commands such as [SENS:CORR:COLL:GUID:INIT](#), [SENS:CORR:COLL:GUID:SAVE](#) and [SENS:CORR:COLL:GUID:SAVE:CSET](#) will override any of these default preference settings.

Learn about [Cal Registers and User Cal Sets](#).

Parameters

- <char> **CALRegister** - Cal is saved ONLY to the channel Cal Register.
- USER** - Cal is saved to a new User Cal Set file when performing a SCPI calibration. The Cal Set name is automatically generated. To change the name, send [SENS:CORR:CSET:NAME](#) after the cal is complete. This reverts to pre-6.0 behavior.
- REUSE** - The cal is saved to the Cal Set that is currently selected on the specified channel, which could be the channel Cal Register. If the channel does not yet have a selected Cal Set, the cal will be saved to a new User Cal Set with an automatically-generated name.

Examples

```
SENS:CORR:PREF:CSET:SAVE USER
sense:correction:preference:cset:save reuse
```

- Query Syntax** SENSE:CORRection:PREFerence:CSET:SAVE?
- Return Type** Character
- Default** CALRegister

SENSe:CORRection:PREFerence:CSET:SAVUser <bool> Superseded

This command is replace with [SENS:CORR:PREF:CSET:SAVE](#)

NOTE: With 6.0 we implemented a change that defaults to saving completed calibrations to Cal Registers instead of User Cal Sets. To revert to the old behavior, send this command as ON (1). For UI and COM use, this can be done from the [GPIB console](#).

(Read-Write) Specifies whether cal data is automatically saved to a User Cal Set file after performing a SCPI calibration. Cal data is always saved to a Cal Register regardless of this setting.

This setting survives instrument preset and reboot. It remains until changed by another execution of this command.

Learn about [Cal Registers and User Cal Sets](#).

Parameters

<bool> **ON** or **1** - Cal is automatically saved to a User Cal Set file when performing a SCPI calibration. The Cal Set name is automatically generated. To change the name, send [SENS:CORR:CSET:NAME](#) after the cal is complete. Reverts to pre-6.0 behavior.

OFF or **0** - Cal is NOT automatically saved to a User Cal Set. To save a calibration to a User Cal Set, use [SENS:CORR:COLL:GUID:INIT](#).

Examples

```
SENS:CORR:PREF:CSET:SAVU 1
sense:correction:preference:cset:savuser 0
```

Query Syntax SENSE:CORRection:PREFeRence:CSET:SAVUser?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF (0)

SENSe:CORRection:PREFeRence:ECAL:ORlentation[:STATe] <ON|OFF>

(Read-Write) Specifies whether or not the PNA should perform orientation of the ECal module during calibration. Orientation is a technique by which the PNA automatically determines which ports of the module are connected to which ports of the PNA. Orientation begins to fail at very low power levels or if there is much attenuation in the path between the PNA and the ECal module. If orientation is turned OFF, the [SENS:CORR:PREF:ECAL:PMAP](#) command must be used to specify the port connections before performing a cal.

Note: For 3-port or 4-port measurements, when orientation is OFF, you are not allowed to specify how the ECAL module is connected. Instead, the PNA determines the orientation. Use [SENS:CORR:COLL:GUID:DESC?](#) to query the orientation. The PNA does not verify that you made the connection properly.

This setting remains until the PNA is restarted or this command is sent again.

Parameters

<bool> ECal orientation state. Choose from:

ON or **1** - PNA performs orientation of the ECal module.

OFF or **0** - PNA does NOT performs orientation of the ECal module.

Examples

```
SENS:CORR:PREF:ECAL:ORI OFF
```

```
sense:correction:preference:ecal:orientation:state on
```

Query Syntax SENSE:CORRection:PREFeRence:ECAL:ORientation[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON (1)

SENSe:CORRection:PREFeRence:ECAL:PMAP <module>,<string>

(Read-Write) When ECal module orientation is turned OFF ([SENS:CORR:PREF:ECAL:ORI](#)), this command specifies the port mapping (which ports of the module are connected to which ports of the PNA) prior to performing ECal calibrations.

This setting remains until the PNA is restarted or this command is sent again.

Parameters

<module> Specifies which ECal module this port map is being applied to. Choose from:

ECAL1

.through.

ECAL8

<string> Format this parameter in the following manner:

Aw,Bx,Cy,Dz

where

- A, B, C, and D are literal ports on the ECAL module
- w,x,y, and z are substituted for PNA port numbers to which the ECAL module port is connected.

Ports of the module which are not used are omitted from the string.

For example, on a 4-port ECal module with

port A connected to PNA port 2

port B connected to PNA port 3

port C not connected

port D connected to PNA port 1

the string would be: A2,B3,D1

If either the receive port or source port (or load port for 2-port cal) of the CALC:PAR:SElected measurement is not in this string and orientation is OFF, an attempt to perform an ECal calibration will fail.

Examples

```
SENS:CORR:PREF:ECAL:PMAP ECAL2, 'A1,B2'  
sense:correction:preference:ecal:pmap ecal3, 'a2,b1,c3'
```

Query Syntax SENSE:CORRection:PREFeRence:ECAL:PMAP? <module>

Return Type String

Default Null string ()

SENSe:CORRection:PREFeRence:SIMCal <bool>

(Read-Write) Sets and returns a preference for the Unguided Cal behavior described below. This setting persists until it is changed.

This preference can also be set True by executing the script on the PNA at C:/Program Files/Agilent/Network Analyzer/System/wincal32.reg.

Parameters

<bool> Boolean - Choose from:

0 - False - Reverts to new (preferred) behavior. An error is returned if standard data is not acquired before sending [SENS:CORR:COLL:SAVE](#).

1 - True - (WinCal compatible) Prevents [SENS:CORR:COLL:SAVE](#) from failing when standard data has not, and will not, be acquired.

[Learn more about old and new behaviors.](#)

Examples

```
SENS:CORR:PREF:SIMC 0
```

```
sense:correction:preference:simcal 1
```

Query Syntax SENSE:CORRection:PREFeRence:SIMCal?

Return Type Boolean

Default 0

SENSe:CORRection:PREFeRence:TRIG:FREE <char>, <bool>

(Read-Write) Sets and returns the preference for the trigger behavior during a calibration. This setting persists until it is changed.

Note: If [TRIGger:SOURce](#) = Manual, during a calibration the PNA ALWAYS switches to Internal for one trigger, then back to Manual, regardless of this preference command.

Parameters

<char> Character - Calibration type. Choose from:

GUIDed - preference setting pertains to a Guided calibration.

UNGuided - preference setting pertains to an Unguided calibration.

<bool> Boolean - Choose from:

0 - False - The trigger behavior during the specified calibration type DOES respect the setting of the [TRIGger:SOURce](#) command. For example, when Trigger source = External, the single trigger method will wait for the External

trigger signal and then allow only one sweep.

1 - True - (Pre-6.0 behavior) The trigger behavior during the specified calibration type does NOT respect the setting of the [TRIGger:SOURce](#) command. For example, when Trigger source = External, during calibration the PNA switches to Internal sweep, responds to one trigger signal to measure the standard, then switches back to External.

Examples

```
SENS:CORR:PREF:TRIG:FREE GUID,1
```

```
sense:correction:preference:trig:free unguided,0
```

Query Syntax SENSE:CORRection:PREFeRence:TRIG:FREE? <char>

Return Type Boolean

Default False for both calibration types.

SENSe<cnum>:CORRection:RPOWer:OFFSet[:AMPLitude] <num>

(Read-Write) Adjusts a receiver power cal to account for components or adapters that are added between the source port and receiver while performing this cal. For more information, see [Receiver Cal.](#)

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<num> Offset Value in dB. Specify loss as a negative number; and gain as a positive number. Choose a number between -200 and 200.

Examples

```
SENS:CORR:RPOW:OFFS .5
```

```
sense2:correction:rpowers:offset:amplitude -.5
```

Query Syntax SENSe<cnum>:CORRection:RPOWer:OFFSet[:AMPLitude]?

Return Type Numeric

Default 0

SENSe<cnum>:CORRection:RVELocity:COAX <num>

(Read-Write) Sets the velocity factor to be used with Electrical Delay and Port Extensions.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<num> Velocity factor. Choose a number between **0** and **10**

(.66 polyethylene dielectric; .7 PTFE dielectric)

Examples

```
SENS:CORR:RVEL:COAX .66
sense2:correction:rvelocity:coax .70
```

Query Syntax SENSE<num>:CORRection:RVELocity:COAX?

Return Type Numeric

Default 1

SENSe<num>:CORRection:SFORward[:STATe] <boolean>

(Read-Write) Sets the direction a calibration will be performed when only one set of standards is used.

Use [SENSe:CORRection:TSTandards\[:STATe\]](#) **OFF** to specify that only one set of standards will be used.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1.

<boolean> **ON (1)** - FORWARD direction of a 2-port calibration will be performed

OFF (0) - REVERSE direction of a 2-port calibration will be performed

Examples

```
SENS:CORR:SFOR 1
sense2:correction:sforward:state 0

See an example using this command
```

Query Syntax SENSE<num>:CORRection:SFORward[:STATe]?

Return Type Boolean

Default ON

SENSe<num>:CORRection[:STATe] <ON | OFF>

(Read-Write) Turns error correction ON and OFF for the specified channel.

Note: Before using this command you must select a measurement using [CALC:PAR:SEL](#). You can select one measurement for each channel.

Parameters

- <cnun> Any existing channel number. If unspecified, value is set to 1
- <ON | OFF> **ON** (or 1) - correction is applied to the channel.
- OFF** (or 0) - correction is NOT applied to the channel.

Examples

```
SENS:CORR ON
sense2:correction:state off
```

Query Syntax SENSE<cnun>:CORRection[:STATe]?

To query the error correction state for a measurement, use [CALC:CORR:STATe?](#)

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

SENSe<cnun>:CORRection:TSTandards[:STATe] <boolean>

(Read-Write) Specifies the acquisition of calibration data using ONE or TWO sets of standards.

Parameters

- <cnun> Any existing channel number. If unspecified, value is set to 1.
- <boolean> **ON (1)** - TWO identical sets of standards will be used to simultaneously calibrate two ports (for both Forward and Reverse parameters).
- OFF (0)**- ONE set of standards will be used to perform a full 2-port calibration, one port at a time.

When specifying ON (use two sets), the [SENS:CORR:COLL:ACQuire](#) command uses the same standard index for each calibration class. To specify the calibration standard gender for each port, you must first ensure that the order of calibration class accurately reflects the configuration of your DUT. For example, for a DUT with a male connector on port 1 and a female connector on port 2, order the devices within the S11 classes (A, B, and C) such that the MALE standards are first in the list. Then order the S22 classes specifying the FEMALE standards as the first in the list.

Examples

```
SENS:CORR:TST 1
sense2:correction:tstandard:state 0
```

See an [example](#) using this command

Query Syntax SENSE<num>:CORRection:TSTandards[:STATe]?

Return Type Boolean

Default ON

SENSe:CORRection:TYPE:CATalog? <char>

(Read-Write) Lists the Cal Types in the PNA by either GUID or registered name. [Learn more about applying Cal Type using SCPI.](#)

Note: Before using this command you must select a measurement using [CALC:PAR:SEL](#). You can select one measurement for each channel.

Parameters

<char> Specifies the type of list. Choose from:

GUID - the registered GUID of the Cal Type

NAME - the registered name of the Cal Type

Examples

```
SENS:CORR:TYPE:CAT? GUID
```

Query Syntax SENSE<num>:CORRection:TYPE:CATalog? <char>

Return Type Comma-separated string


Default Not Applicable

Last modified:

- 17-Sep-2007 Fixed several commands which needed <ch> argument.
- April 14, 2007 Add ECal isolation commands
- Oct 30, 2006 Modified SavUser command

Sense:Correction:Collect:Guided Commands

Performs and applies a SmartCal (Guided) calibration and other error correction features.

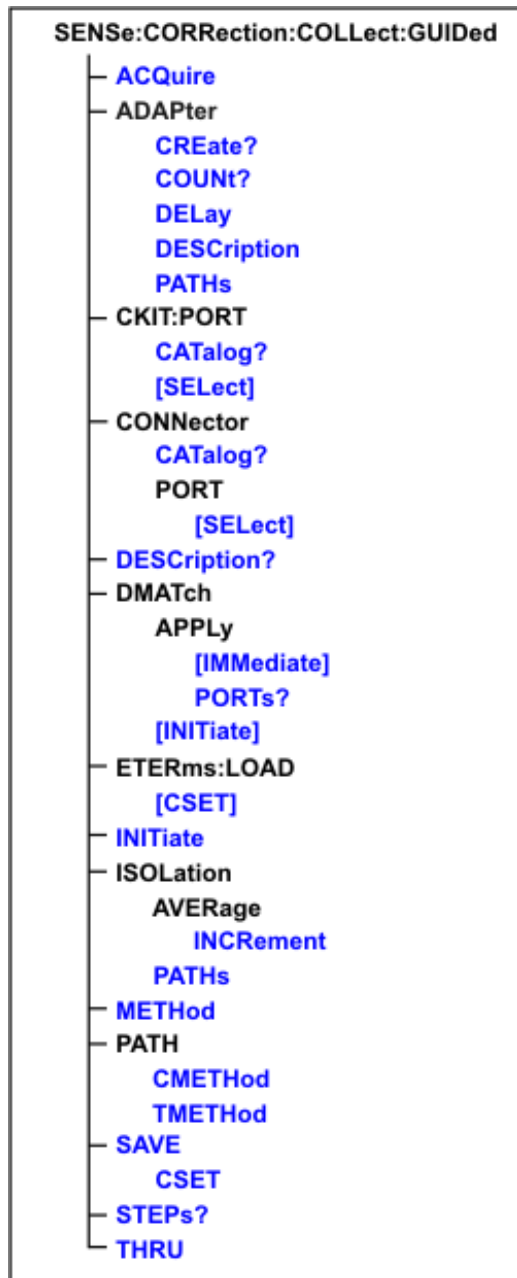

Click on a [blue](#) keyword to view the command details.

See Also

- [Examples](#) using these commands.

- New [Calibrating the PNA Using SCPI](#)
- [Learn about Measurement Calibration](#)
- [Synchronizing the PNA and Controller](#)

SENSe:CORRection:COLLect:GUIDed:ACQuire <std>

(Write-only) Initiates the measurement of the specified calibration standard. Executing this command with an unnecessary standard has no affect.

The measured data is stored and used for subsequent calculations of error correction coefficients. All standards must be measured before a calibration can be completed. Any measurement can be repeated until the [SENS:CORR:COLL:GUID:SAVE](#) command is executed.

Query the user prompt description using [SENS:CORR:COLL:GUID:DESC?](#)

Query the required calibration steps using [SENS:CORR:COLL:GUID:STEP?](#)

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <std> Choose from:STAN1, STAN2, STAN3, through STAN40

Examples

```
SENS:CORR:COLL:GUID:ACQ STAN1
sense:correction:collect:guided:acquire stan1
```

Query Syntax Not Applicable

Default Not Applicable

SENSe<num>:CORRection:COLLect:GUIDed:ADAPter:CREate? <conn1>, <conn2>

(Read-only) Specifies the use of a THRU adapter to be used during the Guided Cal Unknown THRU and Adapter Removal Cal. Returns an adapter index <n> which is used to refer to the adapter in several related commands. [See Cal Thru Methods](#). While the choice of which end of the adapter is <conn1> and <conn2> is arbitrary, it is necessary to remember which will be used on each test port.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <conn1> Adapter port 1 connector type. Use [SENS:CORR:COLL:GUID:CONN:CAT?](#) to return a list of valid connector types.
- <conn2> Adapter port 2 connector type.

Examples [See example using this command.](#)

Return Type Numeric

Default Not Applicable

SENSe<cnum>:CORRection:COLLect:GUIDed:ADAPter:COUNt?

(Read-Only) Returns the number of THRU adapters that have been created for this calibration using [SENS:CORR:COLL:GUID:ADAP:CREate?](#)

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

Examples [See example using this command.](#)

Return Type Numeric

Default Not Applicable

SENSe<cnum>:CORRection:COLLect:GUIDed:ADAPter<n>:DELay <coax>, [w phase, wdelay]

(Write-only) Specifies the adapter delay. and optionally waveguide delay and optional phase offset (degrees) of adapter <n>.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<n> Adapter index number that was returned from [SENS:CORR:COLL:GUID:ADAP:CREate?](#)

<coax> Delay value of coax adapter <n> in seconds. If the adapter has no coax connector, enter 0.

<wphase> Waveguide phase offset in degrees. If the adapter has no waveguide connector, do not enter a value.

<wdelay> Waveguide delay in seconds. If the adapter has no waveguide connector, do not enter a value.

Examples [See example using this command.](#)

Default Not Applicable

SENSe<cnum>:CORRection:COLLect:GUIDed:ADAPter<n>:DESCription <string>

(Write-only) Specifies the adapter description for use as the guided cal connection prompts.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <n> Adapter index number that was returned from [SENS:CORR:COLL:GUID:ADAP:CREate?](#)
- <string> Adapter description.

Examples [See example using this command.](#)

Query Syntax Not Applicable

Default Not Applicable

SENSe<num>:CORRection:COLLect:GUIDed:ADAPter<n>PATHs <port pairs>

(Write-only) Specifies the port pairs for which the adapter will be used for a THRU connection.

For example, for a 3-port cal on channel 1 using ports 1,2,and 3), to use adapter 1 between the ports (1 to 2) and (1 to 3) the following command is used: SENS1:CORR:COLL:GUID:ADAP1:PATH 1,2,1,3.

The adapter must have the same DUT connectors as the ports that are already specified for these ports.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <n> Adapter index number that was returned from [SENS:CORR:COLL:GUID:ADAP:CREate?](#)
- <port pair> Ports for which the adapter will be used. The orientation is not critical, as the PNA will align the connector types as necessary. The minimum number of Thru connections required is the number of ports to calibrated -1.

Examples [See example using this command.](#)

Query Syntax Not Applicable

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:CKIT:PORT<pnum>:CATalog?

(Read-only) Returns a comma-separated list of valid kits for each port. In addition to mechanical calibration kits, this will include applicable characterizations found within ECal modules currently connected to the PNA.

If two or more identical ECal modules are connected to the PNA, the returned list will include the serial numbers to distinguish the ECal modules.

Use items in the list to select the kit to be used with the [SENS:CORR:COLL:GUID:CKIT:PORT](#) command.

Parameters

<pnum> Any existing port number. If unspecified, value is set to 1

Examples

```
SENS:CORR:COLL:GUID:CKIT:PORT1:CAT?
'When "Type N (50) male" is specified for connector type,
returns:

"85054D, 85032F"

'When two identical ECal modules are connected for the connector
type,
'the return string includes serial numbers

"85092-60010 ECal 10675, 85092-60010 ECal 00758"
```

Return Type String

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:CKIT:PORT<pnum>[:SElect] <kit>

(Read-Write) Specifies the calibration kit for each port to be used during a guided calibration. An unused port does NOT need to have a specified Cal Kit.

If two or more identical ECal modules are connected to the PNA, the serial number must be included in the <kit> string to distinguish the ECal modules. See

[SENS:CORR:COLL:GUID:CKIT:PORT:CAT?](#)

Note: Sliding loads are not fully supported from Sens:Corr:Coll:Guided... The **Measure** button must be manually pressed.

1. Specify the connector type for the port with [SENS:CORR:COLL:GUID:CONN:PORT](#).
2. Query the valid available kits for the connector on each port with [SENS:CORR:COLL:GUID:CKIT:PORT:CAT?](#)

3. Specify the kit using this command.

4. Perform a query of this command. If the <kit> parameter was incorrectly entered, an error will be returned.

Parameters

<pnum> Any existing port number. If unspecified, value is set to 1

<kit> Calibration kit to be used for the specified port.

Examples

```
SENS:CORR:COLL:GUID:CKIT:PORT1 '85055A'  
'The following includes a serial number when two or more ECal  
mods are connected'  
sense:correction:collect:guided:ckit:port2:select '85092-60010  
ECal 10685'
```

Query Syntax SENSE:CORRection:COLLect:GUIDed:CKIT:PORT<pnum>[:SElect]?

Return Type String - If the <kit> parameter was incorrectly entered while writing, an error will be returned.

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:CONNector:CATalog?

(Read only) Returns a list of valid connectors based on the connector descriptions of the available cal kits. Use an item from the returned list to specify a connector for

[SENS:CORR:COLL:GUID:CONN:PORT](#)

Examples

```
SENS:CORR:COLL:GUID:CONN:CAT?  
Returns:  
  
Type N (50) female, Type N (50) male, APC 7 (50), 3.5 mm (50)  
male, 3.5 mm (50) female, User Connector A
```

Return Type Comma separated string values

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:CONNector:PORT<pnum>[:SElect] <conn>

(Read-Write) Specifies a connector type for every port during the Guided Calibration procedure. Valid connector names are stored within calibration kits. Some cal kits may include both male and female connectors. Therefore, specifying connector gender may be required.

The PNA remembers previous Guided Cal settings. Therefore, for completeness, unused ports should be defined as "Not used". See [Guided Cal examples](#).

- A single port with a valid <conn> name indicates a 1-Port calibration will be performed.
- Two ports with valid <conn> names indicate either a 2-Port SOLT or [TRL](#) calibration will be performed depending on the standards definition found within the cal kit and the capability of the PNA.
- Three ports with valid <conn> names indicate a 3-Port calibration will be performed, and so forth.

The following steps could be followed to ensure port connectors are specified correctly:

1. Use [SENS:CORR:COLL:GUID:CONN:CAT?](#) to query available connectors before specifying the port connector.
2. Select a connector type using this command.
3. Perform a query of this command. If the <conn> parameter was incorrectly entered, an error will be returned.
4. Specify the cal kit to use for each port with [SENS:CORR:COLL:GUID:CKIT:PORT](#)

Parameters

- <pnum> Any existing port number. If unspecified, value is set to 1
- <conn> String - DUT connector type to connect with PNA port <pnum>

Examples

```
'Specifying a 2-port cal (1 & 2) on a 4-port PNA'

SENS:CORR:COLL:GUID:CONN:PORT1 'Type N (50) female'
SENS:CORR:COLL:GUID:CONN:PORT2 'Type N (50) male'
SENS:CORR:COLL:GUID:CONN:PORT3 'Not Used'
SENS:CORR:COLL:GUID:CONN:PORT4 'Not Used'
```

Query Syntax SENSE:CORRection:COLLect:GUIDed:CONNector:PORT<pnum>[:SElect]?

Return Type String

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:DESCription? <step>

(Read-only) Returns the connection description for the specified calibration step.

Parameters

<step> A number from 1 to the number of steps required to complete the calibration
(Use [SENS:CORR:COLL:GUID:STEP?](#) to query the number of steps)

Examples

```
SENS:CORR:COLL:GUID:DESC? 10
```

'Returns:

```
Connect APC 7 Open to port3
```

Return Type String

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:DMATch:APPLy[:IMMediate] [<CalSetGUID>]

(Write-only) Specifies a Cal Set as a source of delta match correction.

If CalSetGUID is not specified, then the Global Delta Match Cal Set is assumed. An error is returned if the **specified** Cal Set does not meet the following Delta Match criteria. The Global Delta Match Cal can ALWAYS be applied.

- Must have been performed using ECal or as a guided mechanical cal (not Unguided).
- Must have the same start freq, stop freq, and number of points as the channel being calibrated.
- Must calibrate the ports that are required by the TRL or Unknown Thru cal as indicated by [SENS:CORR:COLL:GUID:DMATch:APPLy:PORTs?](#).

[Learn more about Delta match calibration.](#)

See example of a complete [Delta Match calibration](#).

Parameters

<CalSetGUID> Optional. GUID of the Cal Set to use. If unspecified, the Global Delta Match Cal Set is used.

Examples

```
SENS:CORR:COLL:GUID:DMAT:APPL  
sense:correction:collect:guided:dmatch:apply:immediate  
"{2B893E7A-971A-11d5-8D6C-00108334AE96}"
```

Query Syntax Not Applicable

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:DMATch:APPLy:PORTs?

(Read-only) Returns the port numbers for which delta match correction is required. 0 (zero) is returned if the Cal does NOT require Delta Match correction for one of the following reasons:

- The Cal does NOT involve Unknown THRU or TRL. You specify this using [SENS:CORR:COLL:GUID:METH <UNKN | TRL>](#).
- The Cal DOES involve Unknown THRU or TRL, but the delta match data can be calculated by the Unknown Thru or TRL Cal. [Learn how this is possible](#). However, you can force the Cal to use the Delta Match data from a Cal Set.

[Learn more about Delta match calibration.](#)

See example of a complete [Delta Match calibration](#).

Parameters

Examples

```
SENS:CORR:COLL:GUID:APPL:PORT?
```

```
'Returns:  
1,2,3
```

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:DMATch[:INITiate] <conn>,<cKit>

(Write-only) Initiates a global delta match calibration.

[Learn more about Global Delta Match calibration.](#)

See example of a complete [Delta Match calibration](#).

Parameters

<conn> **String**. Connector type for port 1. All other ports are set automatically.

<cKit> **String** Cal Kit for all ports. If incorrectly entered while writing, an error is returned.

Examples

```
SENS:CORR:COLL:GUID:DMAT APC 3.5 female,"85052B"
```

Query Syntax Not Applicable

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:ETERms:LOAD[:CSET] <cset>,<calPort> [,csPort]

(Write-only) Loads 1-port error terms from a Cal Set into the current Guided Cal sequence. When the Cal steps are recomputed, connection steps are removed due to the loading of the error terms.

[See example of how to use this command.](#)

Parameters

- <cset> **String** Name of User Cal Set in which the error terms reside.
- <pnum> **Integer** Port number of the current cal to receive error terms.
- [csPort] **Integer** Optional argument. Port number associated with the error terms in the Cal Set. If unspecified, the same port number as <calPort> is used.

Examples [See example](#)

Query Syntax Not Applicable

Default Not Applicable

SENSe<cnum>:CORRection:COLLect:GUIDed:INITiate [cal set name or GUID [,bool]]

(Write-only) Initiates a guided calibration. A guided cal must be performed on the selected channel. Use [Calc:Par:Sel](#) to select a measurement on the channel to be calibrated.

- The PNA determines the measurements needed to perform the calibration using the settings specified from the [SENS:CORR:COLL:GUID:CONN:PORT](#) and [SENS:CORR:COLL:GUID:CKIT:PORT](#) commands.
- After this command is executed, subsequent commands can be used to query the number of measurement steps, issue the acquisition commands, query the connection description strings, and subsequently complete a guided calibration.

Parameters

- <cnum> Channel to be calibrated. Must be the active channel. Use [Calc:Par:Sel](#) to select a measurement on the channel to be calibrated.
- <cal set name or GUID> **(String)** Optional argument.
- If specified, choose an **existing** Cal Set, either by name or by GUID.
- If NOT specified, behavior depends on the [SENS:CORR:PREFeRence:CSET:SAVE](#) setting.
- By Cal Set name: include quotes.
 - By Calset GUID in the form: "{GUID}"; including quotes and curly brackets.
 - Query all Cal Set GUIDs with [SENS:CORR:CSET:CAT?](#)

An error is reported if the Cal Set is not found.

The Cal Set is either supplemented or overwritten depending on the method, connectors, and ports selected. [Learn more about Cal Sets.](#)

<bool> Optional argument.

False (0) If Cal Set stimulus settings differ from the existing channel, do not change channel stimulus settings. The Cal Set is save to the current setting of the [SENS:CORR:PREF:CSET:SAVE](#) command. This is the default setting if not specified.

True (1) If cal set stimulus settings differ from the existing channel, change the channel stimulus settings to match the Cal Set settings.

Examples

```
SENS:CORR:COLL:GUID:INIT "{2B893E7A-971A-11d5-8D6C-00108334AE96}",1
sense2:correction:collect:guided:initiate 'myCalSet'
```

Query Syntax Not Applicable

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:ISOLation:AVERage:INCRement <num>

(Read-Write) Specifies amount to increment (increase) the channel's averaging factor during measurement of isolation standards in a guided calibration.

Note: If the channel has averaging turned OFF and the value of <num> is greater than 1, averaging will be turned ON only during the isolation measurements and with the averaging factor equal to <num>.

Parameters

<num> Amount to increment the averaging factor for the isolation measurement. The maximum averaging factor for the channel is 65536 (2^{16}).

Examples

```
'Measure isolation on all paths for the cal
SENS:CORR:COLL:GUID:ISOL ALL
'Remove the port pairs 1-to-2 and 1-to-3 from the list of paths
on which to measure isolation
sense:correction:collect:guided:isolation:paths REMOVE,1,2,1,3
```

Query Syntax SENSe:CORRection:COLLect:GUIDed:ISOLation:PATHs?

Note: if isolation is not measured, the query returns 0.

Return Type Numeric

Default 8 - If this command is NOT sent, but [isolation is measured](#), then averaging will be turned ON with factor set to 8 during the isolation measurements.

SENSe:CORRection:COLLect:GUIDed:ISOLation[:PATHs] <char>[,<p1a, p1b, p2a, p2b,...>]

(Read-Write) Specifies the paths (port pairs) to make isolation measurements on during a guided calibration.

Parameters

<char> **ALL** – Measure isolation on all pairings of the ports that are to be calibrated.

NONE – Do not measure isolation on any pairing of the ports to be calibrated. (Default behavior).

ADD – Add one or more specific pairings of ports to the list of port pairings for which isolation will be measured.

REMove – Remove one or more specific pairings of ports from the list of port pairings for which isolation will be measured. If many paths are to be measured, it may be easier to first send **ALL**, then **REMove** and specify the paths to remove.

<p1a, p2a...> For use when <char> is **ADD** or **REMove**.

Specify Port numbers in pairs:

- For 3-port cals, specify up to 3 pairs.
- For 4-port cals, specify up to 6 pairs.

p1a, p1b (Path1 - port A and port B)

p2a, p2b (Path2 - port A and port B)

p3a, p3b (Path3 - port A and port B)

Examples

'Measure isolation on all paths for the cal

SENS:CORR:COLL:GUID:ISOL ALL

'Remove the port pairs 1-to-2 and 1-to-3 from the list of paths on which to measure isolation

sense:correction:collect:guided:isolation:paths REMove,1,2,1,3

Query Syntax	SENSe:CORRection:COLLect:GUIDed:ISOLation:PATHs?
	Note: if isolation is not be measured on any of the paths, the query returns 0
Return Type	Numeric
<u>Default</u>	0 - Isolation not measured on any paths.

SENSe:CORRection:COLLect:GUIDed:METHod <char> **Superseded**

This command is replaced with [SENS:CORR:COLL:GUID:PATH:CMETHod](#) and [SENS:CORR:COLL:GUID:PATH:TMETHod](#).

(Read-Write) Selects from one of several algorithms available for performing the THRU portion of a guided calibration. [Learn more about THRU methods.](#)

Parameters

<char> **DEFAULT** - Informs guided calibrations to use the default algorithm when computing the number of needed standards acquisition steps. (default selection if omitted.)

ADAP - Use the adapter removal algorithm

FLUSH - Use with insertable devices.

UNKN - Use the Unknown THRU algorithm with calibrations for non-insertable devices.

DEFined - Use the THRU definition that you stored in the cal kit file, or ECal module.

TRL - Select TRL Cal Type for guided cals. Valid for "TRL ready" Cal Kits with properly assigned TRL cal classes.

SOLT - Select SOLT Cal Type for guided cals. Valid for any kit with properly assigned SOLT cal classes.

Examples

```
SENS:CORR:COLL:GUID:METH ADAP
sense:correction:collect:guided:method unkn
```

Query Syntax	SENSe:CORRection:COLLect:GUIDed:METHod?
Return Type	Character
<u>Default</u>	DEFAULT

SENSe:CORRection:COLLect:GUIDed:PATH:CMETHod **<port1>,<port2>,<caltype1[,caltype2]>**

Note: This command replaces [SENS:CORR:COLL:GUID:METH.](#)

(Read-Write) Specifies the calibration method for each port pair.

Note: Before using this command, first do the following:

- Set the connector types: [SENS:CORR:COLL:GUID:CONN:PORTn](#)
- Set cal kit: [SENS:CORR:COLL:GUID:CKIT:PORT](#)
- Set or query the thru path pairs: [SENS:CORR:COLL:GUID:THRU:PORT](#)

After sending or querying this command, send the Thru method:

[SENS:CORR:COLL:GUID:PATH:TMETHod](#)

Parameters

<port1> First port of the pair to be calibrated.

<port2> Second port of the pair to be calibrated.

<caltype1[caltype2]> (String) Cal types for 1st and 2nd ports of the pair, enclosed in a single pair of quotes. NOT case-sensitive.

caltype1 Cal type for the pair if caltype2 is not specified. Otherwise, Cal type for port 1. Choose from:

- "TRL"
- "SOLT"
- "QSOLTn"
- "EnhRespN"

For the last two arguments, replace **N** with the port to be used as the source port, which **MUST** be one of the port pair.

caltype2 Optional argument. Use only when performing an adapter removal cal on the pair. This argument specifies the Cal type on the second port. Caltype1 then specifies the Cal type of the first port.

Choose from the same arguments as caltype1.

Examples

```
SENS:CORR:COLL:GUID:PATH:CMETHod 2,3,"QSOLT2"
```

```
sense:correction:collect:guided:path:cmethod 2,3,"solt,trl"
```

Query Syntax	SENSe:CORRection:COLLect:GUIDed:PATH:CMETHod? <port1>,<port2> If only one caltype is returned then it's NOT adapter removal.
Return Type	String
Default	Not Applicable

SENSe:CORRection:COLLect:GUIDed:PATH:TMETHod <port1>,<port2>,<thruType1[,thruType2]>

Note: This command replaces [SENS:CORR:COLL:GUID:METH](#).

(Read-Write) Specifies the calibration **THRU** method for each port pair.

Note: Before using this command, first do the following:

- Set the connector types: [SENS:CORR:COLL:GUID:CONN:PORTn](#)
- Set cal kit: [SENS:CORR:COLL:GUID:CKIT:PORT](#)
- Set or query the thru path pairs: [SENS:CORR:COLL:GUID:THRU:PORT](#)
- Set or query the Cal Type: [SENS:CORR:COLL:GUID:PATH:CMETHod](#)

[Learn more about thru methods.](#)

Parameters

<port1>	First port of the port pair to be calibrated.
<port2>	Second port of the port pair to be calibrated.
<thruType1[,thruType2]>	(String) Thru methods for 1st and 2nd ports of the pair, enclosed in a single pair of quotes. NOT case-sensitive.

thruType1 Calibration thru method for the pair if thruType2 is not specified. Otherwise, thru method for port 1.

Choose from:

- **“Defined Thru”** A thru type for which there is a stored definition in the Cal Kit.
- **“Zero Thru”** Zero length thru, also known as flush-thru.
- **“Undefined Thru”** A thru type for which there is NOT a stored definition in the Cal Kit. Also known as Unknown Thru. Valid ONLY for SOLT cal type.

- “Undefined Thru using a Defined Thru” Using an ECal module, measure the internal thru using the "Undefined Thru" method.

thruType2 Optional argument. Use only when performing an adapter removal cal on the pair as determined by [SENSe:CORR:COLL:GUID:PATH:CMETHod](#). The only valid arguments for ThruType1&2 is "Defined Thru, Defined Thru".

Examples

```
SENSe:CORR:COLL:GUID:PATH:TMETHod 2,3,"Zero Thru"
sense:correction:collect:guided:path:tmethod 2,3,"Defined Thru,Defined Thru"
```

Query Syntax

SENSe:CORRection:COLLect:GUIDed:PATH:TMETHod
<port1>,<port2>?

Always returns two parts:

If the second part of the string is empty, adapter removal is NOT being performed.

If the string is "Defined Thru, Defined Thru", adapter removal IS being performed.

Return Type String

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:SAVE [bool]

(Write-only) Completes the guided cal by computing the error correction terms, turning Correction ON, and saving the calibration to a Cal Set.

If all of the required standards have not been measured, the calibration will not complete properly.

Parameters

[bool] Optional argument. If unspecified, the default behavior is the current PNA preference setting of [SENSe:CORRection:PREFeRence:CSET:SAVE](#)

False (0) Save cal data ONLY to a Cal Register.

True (1) Save cal data to a Cal Register and a User Cal Set. The filename is automatically generated.

Examples

```
SENSe:CORR:COLL:GUID:SAVE
sense2:correction:collect:guided:save 0
```

Query Syntax

Not Applicable

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:SAVE:CSET <cal set name or guid>

(Write-only) Completes the guided cal by computing the error correction terms, turning Correction ON, and saving the calibration to the specified Cal Set. This command performs the same function as [SENSe:CORRection:COLLect:GUIDed:SAVE](#), but this command allows the name or GUID of the Cal Set to be specified.

- Use this command instead of the optional name or GUID argument in [SENS:CORR:COLL:GUID:INIT](#).
- Use [SENS:CORRection:CSET](#) commands to get names or GUIDs of existing Cal Sets.
- The cal data is also saved to the channel Cal Register.
- If all of the required standards have not been measured, the calibration will not complete properly.

Parameters

<cal set name or guid> **String** - Name or GUID of an existing Cal Set to be overwritten. If specifying a GUID, curly brackets must be included.

Examples

```
SENS:CORR:COLL:GUID:SAVE:CSET "{2B893E7A-971A-11d5-8D6C-00108334AE96}"
```

```
sense:correction:collect:guided:save:cset "MyCalSet"
```

Query Syntax Not Applicable

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:STEPS?

(Read-only) Returns the number of measurement steps required to complete the current guided calibration. This command is sent after the [SENS:CORR:COLL:GUID:INIT](#), [SENS:CORR:COLL:GUID:CONN:PORT](#) and [SENS:CORR:COLL:GUID:CKIT:PORT](#) commands.

Examples

```
SENS:CORR:COLL:GUID:STEP?  
sense2:correction:collect:guided:steps?
```

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:GUIDed:THRU:PORTs <t1a, t1b, t2a, t2b, t3a, t3b...>

(Read-Write) For calibrating more than 2-ports ONLY. Specifies the port pairs for the thru connections of the calibration.

Use the query to learn the port pairs that the PNA suggests.

Use the set command to override these thru pairs.

Parameters

<t1a,...> Specify Port numbers in pairs:

- For 3-port cals, specify two or three pairs.
- For 4-port cals, specify from three up to six pairs.

t1a, t1b (Thru1 - port A and port B)

t2a, t2b (Thru2 - port A and port B)

t3a, t3b (Thru3 - port A and port B)

...and so forth up to six pairs.

Examples

```
SENS:CORR:COLL:GUID:THRU:PORT 1,2,1,3,1,4 '4-port measurement  
sense:correction:collect:guided:thru:ports 1,2,2,3 '3-port  
measurement
```

Query Syntax SENSE:CORRection:COLLect:GUIDed:THRU:PORTs?

Return Type Numeric


Default Port pairings that were used in the previous cal.

Last modified:

April 14, 2007	Added Cal Set by name and isolation commands
8-Mar-2007	Added CMethod and TMethod
Oct 23, 2006	Fixed wording in Conn:Port:Sel

Sense:Correction:CKIT Commands

Manages the list of cal kits that are installed in the PNA.

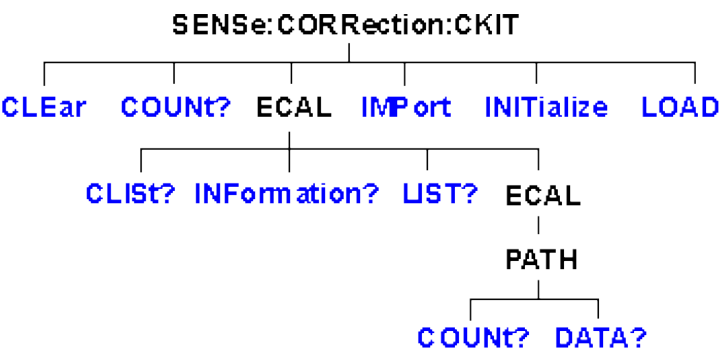

- Click on a [blue](#) keyword to view the command details.
- New [See Calibrating the PNA Using SCPI](#)
- [Learn about Modifying Cal Kits](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe:CORRection:CKIT:CLEAr[:IMMEdiate]

(Write-only) Deletes ALL installed cal kits.

Examples	SENS:CORR:CKIT:CLE
Query Syntax	Not Applicable
Default	Not Applicable

SENSe:CORRection:CKIT:COUNt?

(Read-only) Returns the number of installed cal kits.

Examples	SENS:CORR:CKIT:COUNt?
Query Syntax	SENS:CORR:CKIT:COUNt?
Return Type	Numeric
Default	Not Applicable

SENSe:CORRection:CKIT:ECAL<mod>:CLISt?

(Read-only) Returns a list of characterizations stored in the specified ECal module.

Parameters

<mod> ECal module from which to read user characterization numbers. If unspecified, value is set to 1.

Examples

```
Module 1 contains User Characterizations 1 and 3.  
  
SENSe:CORRection:CKIT:ECAL:CLISt?  
  
'Returns the following (0 always indicates the factory  
characterization):  
  
0,1,3
```

Return Type Numeric list, separated by commas.

Default Not Applicable

SENSe:CORRection:CKIT:ECAL<mod>:INFormaTion? [<char>]

(Read-only) Reads the user-characterization information from the specified ECal module. This command returns the same values as [SENS:CORR:COLL:CKIT:INF?](#)

Parameters

<mod> ECal module to read characterizations from. Choose from:

1 through 8. If unspecified, value is set to 1.

<char> Optional argument. Specifies which characterization within the ECal module to read information from. If not specified, value is set to CHAR0.

Choose from:

- CHAR0 Factory characterization (data that was stored in the ECal module by Agilent)
- CHAR1 User characterization #1
- CHAR2 User characterization #2
- CHAR3 User characterization #3
- CHAR4 User characterization #4
- CHAR5 User characterization #5

Examples

```
SENS:CORR:CKIT:ECAL2:INFormaTion? char5
```

'Example return string:

```
ModelNumber: 85092-60007, SerialNumber: 01386, ConnectorType:
N5FN5F, PortAConnector: Type N (50) female, PortBConnector: Type
N (50) female, MinFreq: 30000, MaxFreq: 9100000000,
NumberOfPoints: 250, Calibrated: July 4 2002
```

Return Type Character

Default Not Applicable

SENSe:CORRection:CKIT:ECAL:LIST?

(Read-only) Returns a list of index numbers to be used for referring to the ECal modules that are currently attached to the PNA.

Examples

```
SENS:CORR:CKIT:ECAL:LIST?
```

```
'If 2 modules are attached to the PNA
'then the returned list will be:
```

```
1,2
```

Return Type Numeric list, separated by commas.

Default Not Applicable

SENSe:CORRection:CKIT:ECAL[num]:PATH:COUNt? <path>

(Read-only) Returns the number of unique states that exist for the specified path name on the selected ECal module.

This command performs exactly the same function as [CONT:ECAL:MOD:PATH:COUNt?](#)

Use the [CONT:ECAL:MOD:PATH:STAT](#) command to set the module into one of those states.

Use SENS:CORR:CKIT:ECAL:PATH:DATA? to read the data for a state.

Parameters

[num] Optional argument. USB number of the ECal module. If unspecified (only one ECal module is connected to the USB), <num> is set to 1. If two or more modules are connected, use [SENS:CORR:CKIT:ECAL:LIST?](#) to determine how many, and [SENS:CORR:CKIT:ECAL:INF?](#) to verify their identities.

<path> Name of the path for which to read number of states. Choose from:
Reflection paths

- **A**
- **B**
- **C** (4-port modules)
- **D** (4-port modules)

Transmission paths

- **AB**
- **AC** (4-port modules)
- **AD** (4-port modules)
- **BC** (4-port modules)
- **BD** (4-port modules)
- **CD** (4-port modules)

Examples

```
CONT:ECAL:MOD:PATH:COUNT?
control:ecal:module2:path:count?
```

Return Type Integer

Default Not Applicable

SENSe<ch>:CORRection:CKIT:ECAL[num]:PATH:DATA? <path>, <stateNum>|,<char>|

(Read-only) Returns the data for a state from the memory of the selected ECal module. The returned data is interpolated if necessary to have the same stimulus values as the specified channel <ch>.

- For a reflection path state, the data is reflection S-parameter data. The number of values equals the number of stimulus points on the channel multiplied by 2 (because they are complex numbers).
- For a transmission path state, the data is all 4 S-parameters of the state. The number of values returned is 4 times that of a reflection state.

The data is returned in the same format as [CALC:DATA:SNP?](#)

Note: This command returns SNP data without header information, and in columns, not in rows as .SnP files. This means that the data returned from this command sends all frequency data, then all Sx1 magnitude data, then all Sx1 phase data, and so forth.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

[num] Optional argument. USB number of the ECal module. If unspecified (only one ECal module is connected to the USB), <num> is set to 1. If two or more modules are connected, use [SENS:CORR:CKIT:ECAL:LIST?](#) to determine how many, and [SENS:CORR:CKIT:ECAL:INF?](#) to verify their identities.

<path> Name of the path for which to read number of states. Choose from:

Reflection paths

- **A**
- **B**
- **C** (4-port modules)
- **D** (4-port modules)

Transmission paths

- **AB**
- **AC** (4-port modules)
- **AD** (4-port modules)
- **BC** (4-port modules)
- **BD** (4-port modules)
- **CD** (4-port modules)

<stateNum> Number of the state to set. Refer to the following table to associate the <stateNum> with a state in your ECal module.

In addition, [CONT:ECAL:MOD:PATH:COUNt?](#) returns the number of states in the specified ECal module.

<stateNum>	N4432A and N4433A States	N4431A States	N469x States**	8509x States
One-Port Reflection States				
1	Open	Open	Impedance 1	Open
2	Short	Short	Impedance 2	Short
3	Impedance 1	Impedance 1	Impedance 3	Impedance 1
4	Impedance 2	Impedance 2	Impedance 4	Impedance 2
5			Impedance 5	
6			Impedance 6	
7			Impedance 7	
Two-Port Transmission States				
1	Thru	Thru	Thru	Thru
2	Confidence	Confidence	Confidence	Confidence

** The following modules have only FOUR Impedance states (1, 2, 3, 4):
N4690B ,N4691B ,N4692A ,N4696B.

<char> Optional argument. Specifies which characterization within the ECal module to read information from. If not specified, value is set to CHAR0.

Choose from:

- **CHAR0** Factory characterization (data that was stored in the ECal module by Agilent)
- **CHAR1** User characterization #1
- **CHAR2** User characterization #2
- **CHAR3** User characterization #3
- **CHAR4** User characterization #4
- **CHAR5** User characterization #5

Examples	<code>SENS:CORR:CKIT:ECAL1:PATH:DATA?</code>
-----------------	--

Return Type	S1P or S2P
--------------------	------------

<u>Default</u>	Not Applicable
-----------------------	----------------

SENSe:CORRection:CKIT:IMPort <string>

(Write-only) Imports the specified cal kit (.ckt file) and appends the imported kit to the end of the list of kits whenever the file import succeeds.

Parameters

<string>	Path and cal kit name.
----------	------------------------

Examples	<code>SENSe:CORRection:CKIT:IMPort "C:/Program Files/Agilent/Network Analyzer/Documents/85033D.ckt"</code>
-----------------	--

Query Syntax	Not Applicable
---------------------	----------------

<u>Default</u>	Not Applicable
-----------------------	----------------

SENSe:CORRection:CKIT:INITialize[:IMMediate]

(Write-only) Restores all default factory installed cal kits.

Parameters

Examples	<code>SENS:CORR:CKIT:INITialize</code> <code>sense:correction:ckit:initialize</code>
-----------------	---

Query Syntax	Not Applicable
---------------------	----------------

<u>Default</u>	Not Applicable
-----------------------	----------------

SENSe:CORRection:CKIT:LOAD <string>

(Write-only) Loads the specified collection of cal kits from a .wks file. You can make your own collection of cal kits from the [Advanced Modify Cal Kit](#) menu.

Parameters

<string>	Path and file name of the cal kit collection.
----------	---

Examples	<code>sense:correction:ckit:load "C:/Program Files/Agilent/Network Analyzer/PnaCalKits/factory/wMyCalKits.wks"</code>
-----------------	---

Query Syntax	Not Applicable
---------------------	----------------


<u>Default</u>	Not Applicable
-----------------------	----------------

Last modified:

10/16/06 Modified Ecal:Data to include <ch>

Sense:Correction:Collect:Ckit Commands

Use to change the definitions of calibration kit standards.

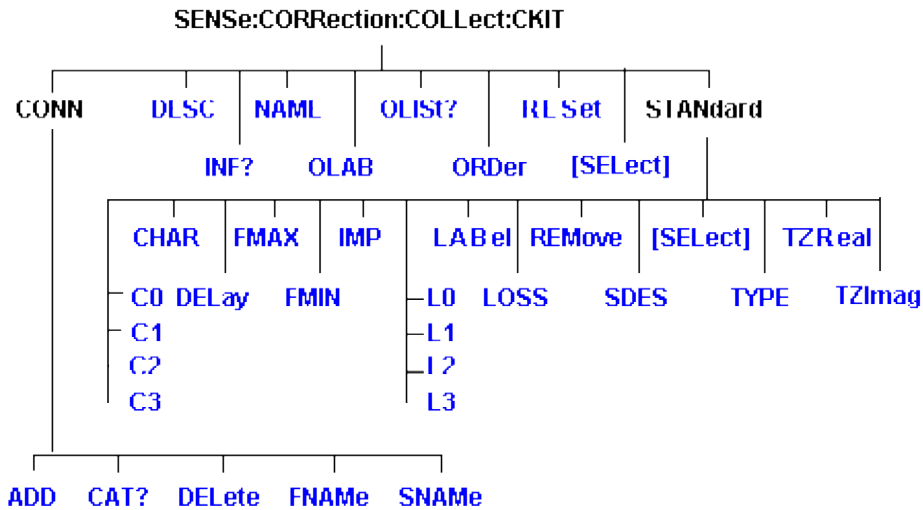

Click on a [blue](#) keyword to view the command details.

Most of these commands act on the currently selected standard from the currently selected calibration kit.

- To select a Calibration kit, use [SENS:CORR:COLL:CKIT:SEL](#).
- To select a Calibration standard, use [SENS:CORR:COLL:CKIT:STAN:SEL](#)
- See an **example** program that [CREATES a New Cal Kit](#)
- See an **example** program that [MODIFIES an Existing Cal Kit](#)
- [Learn about Modifying Cal Kits](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Note: You should provide data for every definition field - for every standard in your calibration kit. If a field is not set, the default value may not be what you expect.

SENSe:CORRection:COLlect:CKIT:CONNector:ADD
<family>,<start>,<stop>,<z0>,<gender>,<media>,<cutoff>

(Write only) Creates a new connector. The connector is automatically added to the list of available connectors for the currently selected cal kit. If a connector includes both male and female connectors, each connector must be added separately.

Parameters

<family>	(String) Name of connector family. Limited to 50 characters.
<start>	Start frequency
<stop>	Stop frequency
<z0>	Characteristic Impedance of the connector in ohms.
<gender>	Connector gender. Choose from: MALE FEMALE NONE
<media>	Media of the connector. Choose from: COAX - coaxial WAVE - waveguide
<cutoff>	Cutoff frequency of the connector (waveguide only).

Examples

```
SENS:CORR:COLL:CKIT:CONN:ADD "PSC 1.8 mm",0 HZ,999.9  
GHZ,50,FEMALE,COAX,0.0  
SENS:CORR:COLL:CKIT:CONN:ADD "PSC 1.8 mm",0 HZ,999.9  
GHZ,50,MALE,COAX,0.0
```

Query Syntax Not applicable

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:CONNector:CATalog?

(Read-only) Returns a comma-separated list of all connectors defined within the currently selected cal kit. The returned string includes the connector family name followed by the connector gender, if any. Kits may include a primary connector family name and additional connector family names.

Connector family names are case sensitive. A connector family named "PSC 2.4" is different from a connector family named "psc 2.4".

Learn more about [Connector Family Name](#)

Examples

```
SENS:CORR:COLL:CKIT:CONN:CAT?  
  
'Returned string  
"Type-N (50) male, Type-N (50) female"
```

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:CONNector:DELeTe

(Write-only) Deletes the primary connector family name from the selected kit. The PNA allows multiple connector families for each kit. If a kit includes multiple connector families, only the first listed (primary) connector family name is deleted.

Once the connector family is deleted, the connector may not be assigned to any new or existing standard within the kit.

The previously defined standards retain their association to the deleted connector name. To reassign standards to a new connector family name, use [SENSe:CORRection:COLLect:CKIT:CONNector:SNAME](#).

Examples	<code>SENS:CORR:COLL:CKIT:CONN:DEL</code>
Query Syntax	Not Applicable
Default	Not Applicable

SENSe:CORRection:COLLect:CKIT:CONNector:FNAME <name>

(Read-Write) Replaces the primary connector family name from the selected kit with a new connector family name. The connector family name is replaced in all standards in the kit that share that name. The PNA allows multiple connector families for each kit. If a kit includes multiple connector families, only the first listed (primary) connector family name is replaced. Use the query form of this command to return the name of the primary connector family.

Parameters	
<name>	New connector family name. Limited to 50 characters.
Examples	<code>SENS:CORR:COLL:CKIT:CONN:FNAME 'MYPSC35'</code> <code>Sense:correction:collect:ckit:connector:name 'My Type N'</code>
Query Syntax	<code>SENSe:CORRection:COLLect:CKIT:CONNector:FNAME?</code>
Return Type	String
Default	Not Applicable

SENSe:CORRection:COLLect:CKIT:CONNector:SNAME <family>,<gender>,<port>

(Read-Write) Assigns a family name to the currently selected standard from the currently selected kit. Specify each port of a 2-port standard individually. Use the query form of this command to read the connector family name assigned to the current standard. The name is not assigned unless the connector family name is previously defined within the selected kit.

Parameters

- <family> String. Connector family name.
- <gender> Connector gender. Choose from:
MALE
FEMALE
NONE
- <port> Number of the connector port to be assigned the connector family name. 2-port standards such as a thru line must be assigned separately. It is not relevant which connector is port 1 or port 2.
- 1 Specifies a 1-port standard or the first port of a 2-port standard.
 - 2 Specifies the second port of a 2-port standard.

Examples `SENS:CORR:COLL:CKIT:CONN:SNAME "Type-N (50)",MALE,1`

Query Syntax `SENSe:CORRection:COLLect:CKIT:CONNector:SNAME?`

Return Type String

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:DESCription <string>

(Read-Write) Modifies the cal kit description field of the selected kit. This description appears in the [Edit PNA Cal Kit dialog box](#).

Parameters

- <string> Description of the cal kit. Limited to 50 characters.

Examples `SENS:CORR:COLL:CKIT:DESC "My New CalKit"`

Query Syntax `SENSe:CORRection:COLLect:CKIT:DESCription?`

Return Type String

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:INFormation? <module>[,char]

(Read Only) Reads characterization information from an ECal module.

Parameters

<module> Specifies which ECal module to read from. Choose from:

ECAL1

.through.

ECAL8

[char] Optional argument.

Specifies which characterization within the ECal module to read information from. If this argument is not used, the default is **CHAR0**. **CHAR1** through **CHAR5** are for user characterizations that may have been written to the module by the User Characterization feature on the PNA. Choose from:

CHAR0 Factory characterization (data that was stored in the ECal module by Agilent)

CHAR1 User characterization #1

CHAR2 User characterization #2

CHAR3 User characterization #3

CHAR4 User characterization #4

CHAR5 User characterization #5

Examples

```
SENS:CORR:COLL:CKIT:INF? ECAL4
sense:correction:collect:ckit:information? ecal2,char1
```

Example return string:

```
ModelNumber: 85092-60007, SerialNumber: 01386, ConnectorType:
N5FN5F, PortAConnector: Type N (50) female, PortBConnector: Type
N (50) female, MinFreq: 30000, MaxFreq: 9100000000,
NumberOfPoints: 250, Calibrated: July 4 2002
```

Return Type Character

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:NAME <name>

(Read-Write) Sets a name for the selected calibration kit.

Parameters

<name> Calibration Kit name. Any string name, can include numerics, period, and spaces; any length (although the dialog box display is limited to about 30 characters).

Examples

```
SENS:CORR:COLL:CKIT:NAME 'MYAPC35'  
sense:correction:collect:ckit:name 'mytypen'
```

Query Syntax SENSE:CORRection:COLLect:CKIT:NAME?

Return Type String

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:OLABel<class> <name>

(Read-Write) Sets the label for the calibration class designated by <class>. The label is used in the prompts for connecting the calibration standards associated with that <class>.

Parameters

<class> Number of the calibration class. Choose a number between: 1 and 18. The <class> numbers are associated with the following calibration Classes:

	Class	Description
1	S11A	Reflection standard
2	S11B	Reflection standard
3	S11C	Reflection standard
4	S21T	Thru/Delay standard
5	S22A	Reflection standard
6	S22B	Reflection standard
7	S22C	Reflection standard
8	S12T	Thru/Delay standard

3-port analyzers only

9	S33A	Reflection standard
10	S33B	Reflection standard
11	S33C	Reflection standard
12	S32T	Thru/Delay standard

13	S23T	Thru/Delay standard
14	S31T	Thru/Delay standard
15	S13T	Thru/Delay standard

TRL Calibrations

16	TRL "T"	Thru standard
17	TRL "R"	Reflect standard
18	TRL "L"	Line standard

<name> Label for the calibration class. Must be enclosed in quotes. Any string between 1 and 12 characters long. Cannot begin with a numeric.

Examples

```
SENS:CORR:COLL:CKIT:OLAB3 'LOADS'
sense:correction:collect:ckit:olabel14 'Thru'
```

Return Type String

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:OLIST[class]?

(Read-only) Returns seven values of standards that are assigned to the specified class.

Parameters

<class> Number of the calibration class to be queried. The <class> numbers are associated with the following calibration Classes:

	Class	Description
1	S11A	Reflection standard
2	S11B	Reflection standard
3	S11C	Reflection standard
4	S21T	Thru/Delay standard
5	S22A	Reflection standard
6	S22B	Reflection standard
7	S22C	Reflection standard
8	S12T	Thru/Delay standard

3-port analyzers ONLY

4-port analyzers use S11 and S22 classes ([see example program](#))

9	S33A	Reflection standard
10	S33B	Reflection standard
11	S33C	Reflection standard
12	S32T	Thru/Delay standard
13	S23T	Thru/Delay standard
14	S31T	Thru/Delay standard
15	S13T	Thru/Delay standard

TRL Calibrations

16	TRL "T"	Thru standard
17	TRL "R"	Reflect standard
18	TRL "L"	Thru standard

Examples

```
SENS:CORR:COLL:CKIT:OLIST8?
```

Always returns 7 standard numbers. Unassigned standards return 0

Return Type Numeric; returns the <class> number of the selected standard.

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:ORDer<class> <std> [,<std>] [,<std>] [,<std>] [,<std>] [,<std>] [,<std>]

(Read-Write) Sets a standard number to a calibration class. Does **NOT** set or dictate the order for measuring the standards. For more information, see Assigning Standards to a Calibration Class

Parameters

<class> Number of the calibration class that is assigned to <standard>. Choose a number between: **1** and **18**. The <class> numbers are associated with the following calibration Classes:

	Class	Description
1	S11A	Reflection standard
2	S11B	Reflection standard
3	S11C	Reflection standard
4	S21T	Thru/Delay standard
5	S22A	Reflection standard
6	S22B	Reflection standard
7	S22C	Reflection standard
8	S12T	Thru/Delay standard

3-port analyzers ONLY

4-port analyzers use S11 and S22 classes ([see example program](#))

9	S33A	Reflection standard
10	S33B	Reflection standard
11	S33C	Reflection standard
12	S32T	Thru/Delay standard
13	S23T	Thru/Delay standard
14	S31T	Thru/Delay standard
15	S13T	Thru/Delay standard

TRL Calibration

16	TRL "T"	Thru standard
17	TRL "R"	Reflect standard
18	TRL "L"	Line standard

<std> Standard number to be assigned to the class; Choose a standard between 1 and 8. One standard is mandatory; up to six additional standards are optional.

Examples

Assigns standard 3 to S11A class:
`SENS:CORR:COLL:CKIT:ORD1 3`
Assigns standard 2 and 5 to S21T class class:
`sense:correction:collect:ckit:order4 2,5`

Query Syntax

SENSe:CORRection:COLLect:CKIT:ORDer<class>?

'Returns only the first standard assigned to the specified class. To query the remaining standards, use [SENSe:CORRection:COLLect:CKIT:OLIST\[1-15\]?](#)

Return Type

Numeric

Default

Not Applicable

SENSe:CORRection:COLLect:CKIT:RESet <num> - Superseded

This command is replaced by [Sens:Corr:Ckit:Init.](#)

(Write-only) Resets the selected calibration kit to factory default definition values.

Parameters

<num> The number of the calibration kit to be reset. Choose any integer between:
1 and 8

Examples

`SENS:CORR:COLL:CKIT:RESet 1`
`sense:correction:collect:ckit:reset 4`

Query Syntax

Not Applicable

Default

Not Applicable

SENSe<cnum>:CORRection:COLLect:CKIT[:SElect] <num>

(Read-Write) Selects (makes active) a calibration kit for **performing** a calibration or for **modifying** standards. All subsequent "CKIT" commands that are sent apply to this selected calibration kit. Select a calibration standard using [SENS:CORR:COLL:CKIT:STAN <num>](#)

Parameters

- <num> Any existing channel number; if unspecified, value is set to 1.
- <num> The number of the calibration kit. Choose from:
Use [SENSe:CORRection:COLLect:CKIT:RESet](#) to restore Cal Kits to default values.

Name

- 1 User Defined 1
- 2 User Defined 2
- 3 User Defined 3
- "
- "
- 48 User Defined 48
- 49 User Defined 49
- 50 User Defined 50
- 99 ECAL module

Examples

```
SENS:CORR:COLL:CKIT 2
sense2:correction:collect:ckit:select 7
```

Query Syntax SENSE<num>:CORRection:COLLect:CKIT?

Return Type Numeric

Default Last kit selected

SENSe:CORRection:COLLect:CKIT:STANdard:C0 <num>

(Read-Write) Sets the C0 value (the first capacitance value) for the selected standard. For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

Parameters

<num> Value for C0 in femtofarads (1E-15)

Examples

The following commands set C0=15 femtofarads:

```
SENS:CORR:COLL:CKIT:STAN:C0 15  
sense:correction:collect:ckit:standard:c0 15
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:C0?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:C1 <num>

(Read-Write) Sets the C1 value (the second capacitance value) for the selected standard. For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

Parameters

<num> Value for C1.

Examples

The following two commands set C1=15:

```
SENS:CORR:COLL:CKIT:STAN:C1 15  
sense:correction:collect:ckit:standard:c1 15
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:C1?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:C2 <num>

(Read-Write) Sets the C2 value (the third capacitance value) for the selected standard. For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

Parameters

<num> Value for C2.

Examples

The following two commands set C2:

```
SENS:CORR:COLL:CKIT:STAN:C2 15  
sense:correction:collect:ckit:standard:c2 15
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:C2?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:C3 <num>

(Read-Write) Sets the C3 value (the fourth capacitance value) for the selected standard. For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

Parameters

<num> Value for C3.

Examples

The following two commands set C3

```
SENS:CORR:COLL:CKIT:STAN:C3 15  
sense:correction:collect:ckit:standard:c3 15
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:C3?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:CHARacter <char>

(Read-Write) Sets the media type of the selected calibration standard.

Parameters

<char> Media type of the standard. Choose from:
Coax - Coaxial Cable
Wave - Waveguide

Examples

```
SENS:CORR:COLL:CKIT:STAN:CHAR COAX  
sense:correction:collect:ckit:standard:character wave
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:CHARacter?

Return Type Numeric

Default Coax

SENSe:CORRection:COLLect:CKIT:STANdard:DELay <num>

(Read-Write) Sets the electrical delay value for the selected standard.

Parameters

<num> Electrical delay in picoseconds

Examples

The following two commands set delay to 50 picoseconds

```
SENS:CORR:COLL:CKIT:STAN:DEL 50e-12  
sense2:correction:collect:ckit:standard:delay 50ps
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:DELay?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:FMAX <num>

(Read-Write) Sets the maximum frequency for the selected standard.

Parameters

<num> Maximum frequency in Hertz.

Examples

```
SENS:CORR:COLL:CKIT:STAN:FMAX 9e9  
sense:correction:collect:ckit:standard:fmax 9Ghz
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:FMAX?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:FMIN <num>

(Read-Write) Sets the minimum frequency for the selected standard.

Parameters

<num> Minimum frequency in Hertz.

Examples

```
SENS:CORR:COLL:CKIT:STAN:FMIN 1e3  
sense:correction:collect:ckit:standard:fmin 1khz
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:FMIN?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:IMPedance <num>

(Read-Write) Sets the characteristic impedance for the selected standard.

Parameters

<num> Impedance in Ohms

Examples

```
SENS:CORR:COLL:CKIT:STAN:IMP 75  
sense:correction:collect:ckit:standard:impedance 50.3
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:IMPedance?

Return Type Numeric

Default 50

SENSe:CORRection:COLLect:CKIT:STANdard:L0 <num>

(Read-Write) Sets the L0 value (the first inductance value) for the selected standard. For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

Parameters

<num> Value for L0 in femtohenries (1E-15)

Examples

The following two commands set L0=15 femtohenries:

```
SENS:CORR:COLL:CKIT:STAN:L0 15
sense:correction:collect:ckit:standard:l0 15
```

Query Syntax SENSe:CORRection:COLLect:CKIT:STANdard:L0?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:L1 <num>

(Read-Write) Sets the L1 value (the second inductance value) for the selected standard. For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

Parameters

<num> Value for L1.

Examples

The following two commands set L1=15:

```
SENS:CORR:COLL:CKIT:STAN:L1 15
sense:correction:collect:ckit:standard:l1 15
```

Query Syntax SENSe:CORRection:COLLect:CKIT:STANdard:L1?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:L2 <num>

(Read-Write) Sets the L2 value (the third inductance value) for the selected standard. For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

Parameters

<num> Value for L2.

Examples

The following two commands set L2=15:

```
SENS:CORR:COLL:CKIT:STAN:L2 15
```

```
sense:correction:collect:ckit:standard:l2 15
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:L2?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:L3 <num>

(Read-Write) Sets the L3 value (the fourth inductance value) for the selected standard. For a detailed discussion of this value, search for App Note 8510-5B at www.Agilent.com.

Parameters

<num> Value for L3.

Examples

The following two commands set L3=15:

```
SENS:CORR:COLL:CKIT:STAN:L3 15
```

```
sense:correction:collect:ckit:standard:l3 15
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:L3?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:LABel <name>

(Read-Write) Sets the label for the selected standard. The label is used to prompt the user to connect the specified standard.

Parameters

<name> Label for the standard; Must be enclosed in quotes. Any string between **1** and **12** characters long. Cannot begin with a numeric.

Examples

```
SENS:CORR:COLL:CKIT:STAN:LAB 'OPEN'  
sense:correction:collect:ckit:standard:label 'Short2'
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:LABel?

Return Type String

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:LOSS <num>

(Read-Write) Sets the insertion loss for the selected standard.

Parameters

<num> Insertion loss in Gohms / sec. (GigaOhms per second of electrical delay)

Examples

```
SENS:CORR:COLL:CKIT:STAN:LOSS 3.5e9  
sense:correction:collect:ckit:standard:loss 3
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:LOSS?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:REMOve

(Write only) Deletes the selected standard from the selected cal kit.

Examples

```
SENS:CORR:COLL:CKIT:STAN:REMOve
```

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:SDEscription <string>

(Read-Write) Modifies the description of the selected standard of the selected kit. This description appears in the [edit kit dialog box](#).

Parameters

<string> Description of the standard.

Examples `SENS:CORR:COLL:CKIT:STAN:SDES "My New Standard"`

Query Syntax `SENSe:CORRection:COLLect:STANdard:SDEscription?`

Return Type String

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard[:SELEct] <num>

(Read-Write) Selects the calibration standard. All subsequent "CKIT" commands to modify a standard will apply to the selected standard. Select a calibration kit using [SENS:CORR:COLL:CKIT:SEL](#)

Parameters

<num> Number of the standard. Choose any number between:
1 and 30

Examples `SENS:CORR:COLL:CKIT:STAN 3`
`sense:correction:collect:ckit:standard:select 8`

Query Syntax `SENSe:CORRection:COLLect:CKIT:STANdard[:SELEct]?`

Return Type Numeric

Default 1

SENSe:CORRection:COLLect:CKIT:STANdard:TYPE <char>

(Read-Write) Sets the type for the selected standard.

Parameters

<char> Choose from:
OPEN
SHORT
LOAD
SLOAD (sliding load)
THRU (through)
ARBI(arbitrary)

Examples

```
SENS:CORR:COLL:CKIT:STAN:TYPE LOAD  
sense:correction:collect:ckit:standard:type short
```

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:TYPE?

Return Type Character

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:TZReal <num>

(Read-Write) Sets the TZReal component value of the Terminal Impedance for the selected standard.

Note: Only applicable when the Standard Type is set to **ARBI**

Parameters

<num> Value for TZReal in Ohms

Examples

The following commands set TZReal=15 Ohms:
SENS:CORR:COLL:CKIT:STAN:TZReal 15
sense:correction:collect:ckit:standard:TZReal 15

Query Syntax SENSE:CORRection:COLLect:CKIT:STANdard:TZReal?

Return Type Numeric

Default Not Applicable

SENSe:CORRection:COLLect:CKIT:STANdard:TZImag <num>

(Read-Write) Sets the TZImag component value of the Terminal Impedance for the selected standard.

Note: Only applicable when the Standard Type is set to **ARBI**

Parameters

<num> Value for TZImag in Ohms

Examples

The following two commands set TZImag=15 Ohms:

```
SENS:CORR:COLL:CKIT:STAN:TZImag 15
```

```
sense:correction:collect:ckit:standard:TZImag 15
```

Query Syntax

SENSe:CORRection:COLLect:CKIT:STANdard:TZImag?

Return Type

Numeric

Default


Not Applicable

Last Modified:

17-Sep-2007 Fixed 'select' command

Sense:Correction:Cset Commands

Performs actions on calibration sets.

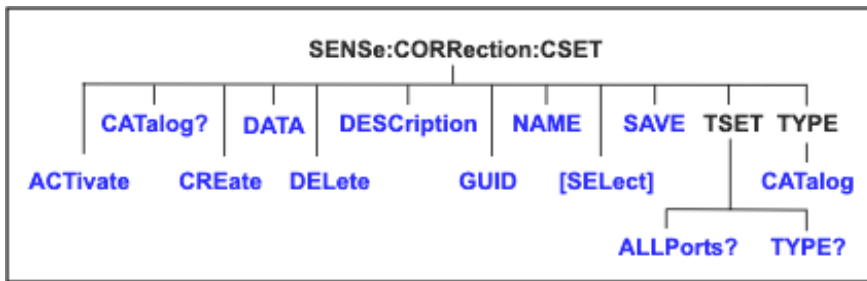

Click on a [blue](#) keyword to view the command details.

See Also

- [Creating Cal Sets](#)
- [Example Programs](#)
- [Learn about Cal Sets](#)
- [Synchronizing the PNA and Controller](#)

SENSe<cnum>:CORRection:CSET:ACTivate <string>, <bool>

This command replaces [SENS:CORR:CSET:GUID](#)

(Read-Write) Selects and applies a Cal Set to the specified channel.

Use [SENS:CORR:CSET:CAT?](#) to list the Cal Sets.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <string> Cal Set to make active. Specify the Cal Set by **GUID** or **Name**. Use [SENS:CORR:CSET:CAT?](#) to list the available Cal Sets in either format.
- <bool> Should the Cal Set stimulus values be applied to the channel. Choose from:
- ON (1)** Apply the Cal Set stimulus values to the channel.
- OFF (0)** Do NOT apply the Cal Set stimulus values. If the Cal Set stimulus values do not match the channel stimulus values, then the following will occur:

- If interpolation is ON, then interpolation will be attempted. This may fail if the channel frequency is outside the range of the Cal Set.
- If interpolation is OFF, the selection will be abandoned and an error is returned:

Examples

```
SENS:CORR:CSET:ACT "My2Port",1

sense:correction:cset:activate? name
'returns
"My2Port"
```

Query Syntax

SENSe<cnum>:CORRection:CSET:ACTivate? [GUID|NAME]

Returns the name of the Cal Set that is applied to the specified channel. Choose from **GUID** or **NAME** to specify which string is returned. If unspecified, the GUID of the Cal Set is returned. If no Cal Set is applied to the specified channel, then "No Calset Selected" is returned.

Return Type

String

Default

Not Applicable

SENSe:CORRection:CSET:CATalog? [char]

(Read-only) Returns a list of Cal Sets.

Parameters

<char> Optional argument. The list is returned in one of the following formats. Both return comma-separated string lists.

GUID Cal Sets are listed by GUID (Default if unspecified).

NAME Cal Sets are listed by Name

Examples

```
SENS:CORR:CSET:CAT?

'Returns:
{FD6F863E-9719-11d5-8D6C-00108334AE96},{1B03B2CE-971A-11d5-8D6C-00108334AE96}

sense2:correction:cset:catalog? name
```

Default

Not Applicable

SENSe<cnum>:CORRection:CSET:CREate [name]

(Write-only) Creates an empty Cal Set and attaches it to the specified channel. This command is ONLY necessary before remotely filling the Cal Set with error term data. (For Advanced Users).

A Cal Set is automatically created, applied to the channel, and saved at the completion of a guided cal according to the preference setting [SENS:CORR:PREF:CSET:SAVE](#).

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- [name] Optional argument. Name of the Cal Set. Spaces or punctuation are NOT allowed. If unspecified, a unique name is chosen in the form "Calset_N" where N is a unique number.

Examples

```
SENS:CORR:CSET:CRE 'My2Port'
```

Query Syntax Not Applicable

Default Not Applicable

SENSe<cnum>:CORRection:CSET:DATA <eterm, portA, portB,>[<param>] <block>

(Read-Write) Read or Write a specific error term from/to the Cal Set currently attached to the specified channel. (For Advanced Users).

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <eterm, portA, portB> **Error Term, Port pair of the specified error term.**
- Although not all error terms use two port numbers, two are required by the PNA in all cases. Each port number must be between 1 and the number of ports on the PNA.

EDIR - directivity

portA: the port at which directivity is measured

portB: Not used, but must be a valid PNA port number.

ESRM - source match

portA: the port at which source match is measured

portB: Not used, but must be a valid PNA port number.

ERFT - reflection tracking

portA: the port at which reflection tracking is measured

portB: Not used, but must be a valid PNA port number.

ELDM - load match

portA: the port at which load match is measured

portB: the source port.

Load match is measured with a cable connected between the measured port (portA) and the source port (portB).

The cal system requires that the complete matrix of loadmatch arrays be filled.

In most cases you can measure loadmatch once at a port, driven by any other port. Then use that data for all variations of the receive port. (The exception is the 3-port PNA models, which requires the loadmatch-measured port to be driven by every other port.)

For example: Measure the loadmatch at port2 while driving port1. Then upload this same data to the following arrays:

ELDM,2,1,<data>

ELDM,2,3,<data>

ELDM,2,4,<data>

ETRT - transmission tracking

portA: the receive port

portB: the source port for this measurement

EXTLK - crosstalk

portA: the receive port

portB: the source port for this measurement

ERSPT - response tracking.

portA: Not used, but must be a valid PNA port number.

portB: Not used, but must be a valid PNA port number.

ERSPI - response isolation.

portA: Not used, but must be a valid PNA port number.

portB: Not used, but must be a valid PNA port number.

<param> <string> - required ONLY when Eterm is response tracking (**ERSPT**) or response isolation (**ERSPI**). Specify the S-parameter, ratio, or unratiod measurement for which the Eterm applies.

[Logical receiver notation](#) is allowed. Ratioed measurements do not require source port to be specified.

A full 4-port calibration requires the following terms be uploaded:

		PORT B			
		1	2	3	4
PORT A	1	EDIR,1,1	ELDM,1,2	ELDM,1,3	ELDM,1,4
		ERFT,1,1	ETRT,1,2	ETRT,1,3	ETRT,1,4
		ESRM,1,1	EXTLK,1,2	EXTLK,1,3	EXTLK,1,4
	2	ELDM,2,1	EDIR,2,2	ELDM,2,3	ELDM,2,4
		ETRT,2,1	ERFT,2,2	ETRT,2,3	ETRT,2,4
		EXTLK,2,1	ESRM,2,2	EXTLK,2,3	EXTLK,2,4
	3	ELDM,3,1	ELDM,3,2	EDIR,3,3	ELDM,3,4
		ETRT,3,1	ETRT,3,2	ERFT,3,3	ETRT,3,4
		EXTLK,3,1	EXTLK,3,2	ESRM,3,3	EXTLK,3,4
	4	ELDM,4,1	ELDM,4,2	ELDM,4,3	EDIR,4,4
		ETRT,4,1	ETRT,4,2	ETRT,4,3	ERFT,4,4
		EXTLK,4,1	EXTLK,4,2	EXTLK,4,3	ESRM,4,4

Reflection terms

Transmission terms

Examples

SENS:CORR:CSET:DATA EXTLK,3,1 'cross talk between port 3 receiver and port 1 source.

SENS:CORR:CSET:DATA ERSPT,1,1, "a3/b4" 'response tracking term for ratioed measurement of port 4 test receiver over port 3 reference receiver.

Query Syntax	SENSe<cnum>:CORRection:CSET:DATA? <eterm,portA, portB>
Return Type	Block data
<u>Default</u>	Not Applicable

SENSe:CORRection:CSET:DELeTe <string>

(Write-only) Deletes a Cal Set from the list of available Cal Sets.

Parameters

<string> The GUID of the Cal Set to be deleted. The curly brackets and hyphens must be included. Not case sensitive.

Examples

```
SENS:CORR:CSET:DEL '{2B893E7A-971A-11d5-8D6C-00108334AE96}'
sense2:correction:cset:delete '{2B893E7A-971A-11d5-8D6C-00108334AE96}'
```

Query Syntax	Not Applicable
<u>Default</u>	Not Applicable

SENSe<cnum>:CORRection:CSET:DESCription <string>

(Read-Write) Sets or returns the descriptive string assigned to the selected Cal Set. Change this string so that you can easily identify each Cal Set. Apply and select the Cal Set using [SENS:CORR:CSET:ACT](#).

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<string> The descriptive string associated with the currently-selected Cal Set

Examples

```
SENS:CORR:CSET:DESC 'MyCalSet'
sense2:correction:cset:description 'thisCalSet'
```

Query Syntax	SENSe<cnum>:CORRection:CSET:DESCription?
Return Type	String
<u>Default</u>	Not Applicable

SENSe<cnum>:CORRection:CSET:GUID <string> **Superseded**

This command is replaced by [SENS:CORR:CSET:ACTivate](#).

(Read-Write) Selects the Cal Set identified by the string parameter (GUID) and applies it to the specified channel.

- A Cal Set cannot be selected for a channel which is not ON.
- If the stimulus settings of the selected Cal Set differ from those of the selected channel, the instrument will automatically change the channel's settings to match the Cal Set.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<string> GUID of the desired Cal Set. The curly brackets and hyphens must be included.

Examples

```
SENS:CORR:CSET:GUID '{2B893E7A-971A-11d5-8D6C-00108334AE96}'  
sense2:correction:cset:guid '{2B893E7A-971A-11d5-8D6C-00108334AE96}'
```

Query Syntax SENSE<num>:CORRection:CSET:GUID?

Returns the GUID of the currently-selected Cal Set for the specified channel.

Return Type String

Default Not Applicable

SENSe<num>:CORRection:CSET:NAME <string>

(Read-Write) Sets or queries the name of the Cal Set currently applied to the specified channel.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<string> Name of the Cal Set. Spaces or punctuation NOT allowed.

Examples

```
SENS:CORR:CSET:NAME 'MyCalSet'  
sense2:correction:cset:name 'thisCalSet'
```

Query Syntax SENSe<num>:CORRection:CSET:NAME?

Return Type String

Default Not Applicable

SENSe<num>:CORRection:CSET[:SElect] <char> **Superseded**

This command is replaced by [MMEM:LOAD](#)

(Read-Write) Restores a state file from memory. The file name is "**CSETx.cst**" where x is the user number assigned to <char>, and .cst specifies a cal set and instrument state. This is not the same syntax as a file saved through the default choices from the front panel, which is "**at00x.cst**". For more information on the file naming syntax, see the [MMEMory](#) subsystem. Learn more about [Instrument/Cal States](#).

Note: This command does NOT select a Cal Set for a channel. To select a Cal Set, use [SENS:CORR:CSET:ACTivate](#)

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<char> Choose from:

DEF - Presets the analyzer

USER01 - Restores User01 calibration data

USER02 - Restores User02 calibration data

through...

USER10 - Restores User10 calibration data

Examples

```
SENS:CORR:CSET DEF
sense2:correction:cset:select user02
```

Query Syntax SENSE<cnum>:CORRection:CSET[:SElect]?

Return Type Character

Default DEF

SENSe<cnum>:CORRection:CSET:SAVE <char>

This command is NOT necessary after completion of a calibration. A Cal Set is automatically created, applied to the channel, and saved at the completion of a guided cal according to the preference setting [SENS:CORR:PREF:CSET:SAVE](#).

(Read Write)

Saves the channel's Cal Set to the PNA hard drive. For example, use this command after writing data to a Cal Set using [SENS:CORR:CSET:DATA](#) (For Advanced Users).

The file name is saved as "**CSETx.cst**" where x is the user number assigned to <char>, and .cst specifies a Cal Set and instrument state. This is not the same syntax as a file saved through the default choices from the front panel, which is "**at00x.cst**". For more information on the file naming syntax, see the [MMEMory](#) subsystem. Learn more about [Instrument/Cal States](#).

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <char> Choose from:
USER01
USER02...
USER10

Examples

```
SENS:CORR:CSET:SAVE USER03  
sense2:correction:cset:save user09
```

Query Syntax SENSE<cnum>:CORRection:CSET:SAVE?
Queries the last correction set saved.

Return Type Character

Default Not applicable

SENSe:CORRection:CSET:TSET:ALLPorts? <cset>

(Read-only) Reads the port mapping used for the specified Cal Set. The returned values are the physical ports. The POSITION of the returned values corresponds to the logical ports.

For example, with an N44xx test set, if the returned string is "PNA 1,TS 2,PNA 2, TS 4" this means:

- PNA 1 is assigned to logical port 1
- TS 2 is assigned to logical port 2
- PNA 2 is assigned to logical port 3
- TS 4 is assigned to logical port 4

Parameters

<cset> **(String)** Name or GUID of the Cal Set. Use [SENS:CORR:CSET:CAT?](#) to read the list of available Cal Set names or GUIDs.

Examples

```
SENS:CORR:CSET:TSET:ALLP? "MyCalSet"  
sens:correction:cset:tset:allports? "{2B893E7A-971A-11d5-8D6C-  
00108334AE96}"
```

Return Type String

Default Not Applicable

SENSe:CORRection:CSET:TSET:TYPE? <cset>

(Read-only) Reads the test set type (model) used for the specified Cal Set.

Parameters

<cset> **(String)** Name or GUID of the Cal Set. Use [SENS:CORR:CSET:CAT?](#) to read the list of available Cal Set names or GUIDs.

Examples

```
SENS:CORR:CSET:TSET:TYPE? "MyCalSet"  
  
'returns "N44xx"  
  
sens:correction:cset:tset:type? "{2B893E7A-971A-11d5-8D6C-  
00108334AE96}"
```

Return Type String

Default Not Applicable

SENSe<ch>:CORRection:CSET:TYPE:CATalog? [format]

(Read-only) Query the Cal Types available in the selected Cal Set. The output is a comma separated list of Guids or a Cal Type names. [Learn more about applying Cal Types using SCPL.](#)

Use [CALC:CORR:TYPE](#) to apply a Cal Type.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- [format] (Optional) Format of the output of cal types. choose from:
- NAME** - (default) returns a list of cal type string names.
- GUID** - returns a list of cal type GUIDs

Examples

```
SENS:CORR:CSET:TYPE:CAT? NAME  
SENS2:CORRection:CSET:TYPE:CAT?
```

Return Type String


Default Not Applicable

Last modified:

9/12/06 MQ Added TSET commands for multiport.

Sense:Correction:Extension Commands

Performs and applies Port Extensions.

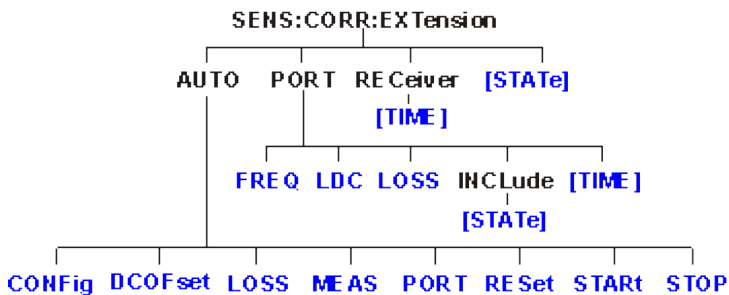

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Port Extensions](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe<num>:CORRection:EXTension:AUTO:CONFig <char>

(Read-Write) Sets the frequencies used to calculate Automatic Port Extension. [Learn more about calculating Automatic Port Extension.](#)

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<char> Frequencies to be used:

CSPN Use current frequency span.

AMKR - Use active marker frequency.

USPN - Use custom user span. Use [SENS:CORR:EXT:AUTO:STAR](#) and [SENS:CORR:EXT:AUTO:STOP](#) to specify start and stop frequency.

Examples

```
SENS:CORR:EXT:AUTO:CONF CSPN
sense2:correction:extension:auto:config amkr
```

Query Syntax SENSe<num>:CORRection:EXTension:AUTO:CONFig ?

Return Type Character

Default CSPN

SENSe<num>:CORRection:EXTension:AUTO:DCOFfset <bool>

(Read-Write) Specifies whether or not to include DC Offset as part of automatic port extension. [Learn more about Automatic DC Offset](#). Only allowed when [SENS:CORR:EXT:AUTO:LOSS](#) is set to ON.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<bool> ON (or 1) - Includes DC Offset correction.

OFF (or 0) - Does NOT include DC Offset correction.

Examples

```
SENS:CORR:EXT:AUTO:DCOF 1  
sense2:correction:extension:auto:dcoffset off
```

Query Syntax SENSe<num>:CORRection:EXTension:AUTO:DCOFfset?

Return Type Boolean

Default OFF (0)

SENSe<num>:CORRection:EXTension:AUTO:LOSS <bool>

(Read-Write) Specifies whether or not to include loss correction as part of automatic port extension. [Learn more about Loss Compensation](#) in port extension.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<bool> ON (or 1) - Includes Loss correction.

OFF (or 0) - Does NOT include Loss correction.

Examples

```
SENS:CORR:EXT:AUTO:LOSS 1  
sense2:correction:extension:auto:loss off
```

Query Syntax SENSe<num>:CORRection:EXTension:AUTO:LOSS?

Return Type Boolean

Default OFF (0)

SENSe<num>:CORRection:EXTension:AUTO:MEASure <char>

(Write-only) Measures either an OPEN or SHORT standard. When this command is sent, the PNA acquires the measurement with which to set automatic port extensions. [Learn more about which standard to measure.](#)

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<char> Standard to be measured. Choose from:

OPEN Measure OPEN standard

SHORT Measure SHORT standard

Examples

```
SENS:CORR:EXT:AUTO:MEAS OPEN  
sense2:correction:extension:auto:measure short
```

Query Syntax Not Applicable

Default Not Applicable

SENSe<num>:CORRection:EXTension:AUTO:PORT<n> <bool>

(Read-Write) Enables and disables automatic port extensions on the specified port.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<n> PNA Port number to enable or disable for automatic port extensions.

<bool> ON (or 1) - Enable

OFF (or 0) - Disable

Examples

```
SENS:CORR:EXT:AUTO:PORT2 0  
sense2:correction:extension:auto:port4 on
```

Query Syntax SENSe<num>:CORRection:EXTension:AUTO:PORT<n>?

Return Type Boolean

Default All ports ON (enabled)

SENSe<num>:CORRection:EXTension:AUTO:RESet

(Write-only) Clears old port extension delay and loss data in preparation for acquiring new data. Send this command prior to sending a new series of [SENS:CORR:EXT:AUTO:MEAS](#). If acquiring both OPEN and SHORT standards, do not send this command between those acquisitions.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

Examples

```
SENS:CORR:EXT:AUTO:RES  
sense2:correction:extension:auto:reset
```

Query Syntax Not Applicable

Default Not Applicable

SENSe<cnum>:CORRection:EXTension:AUTO:STARt <value>

(Read-Write) Set the start frequency for custom user span. [Learn more about User Span.](#)

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<value> User span start value. Must be within the frequency range of the active channel and less than the value set by SENS:CORR:EXT:AUTO:STOP.

Examples

```
SENS:CORR:EXT:AUTO:STAR 1E9  
sense2:correction:extension:auto:start 200e6
```

Query Syntax SENSe<cnum>:CORRection:EXTension:AUTO:STARt <value>?

Return Type Numeric

Default Start frequency of the current active channel.

SENSe<cnum>:CORRection:EXTension:AUTO:STOP <value>

(Read-Write) Set the stop frequency for custom user span. [Learn more about User Span.](#)

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <value> User span stop value. Must be within the frequency range of the active channel and greater than the value set by SENS:CORR:EXT:AUTO:START

Examples

```
SENS:CORR:EXT:AUTO:STOP 1E9
sense2:correction:extension:auto:stop 200e6
```

Query Syntax SENSE<num>:CORRection:EXTension:AUTO:STOP <value>?

Return Type Numeric

Default Stop frequency of the current active channel.

SENSe<num>:CORRection:EXTension:PORT<pnum>:FREQ<n> <value>

(Read-Write) Sets and returns the frequency "Use" number (1|2) for the specified port number.

[Learn about Loss Compensation values.](#)

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <pnum> Port Number that will receive the freq/loss settings. If unspecified, value is set to 1.
- <n> Frequency "Use" number. Choose from 1 or 2. If unspecified, value is set to 1.
- <value> Frequency value. Choose a frequency within the frequency span of the PNA.

Examples

```
SENS:CORR:EXT:PORT1:FREQ1 10E9
sense2:correction:extension:port2:freq2:2E10
```

Query Syntax SENSE<num>:CORRection:EXTension:PORT<pnum>:FREQ<n>?

Return Type Numeric

Default 1 GHz

SENSe<num>:CORRection:EXTension:PORT<pnum>:INCLude<n>:STATe <bool>

(Read-Write) Sets and returns the ON/OFF state for the use of the [Loss](#) and [Freq](#) values for the specified port number.

[Learn about Loss Compensation values.](#)

Note: This command affects ALL measurements on the specified channel.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <pnum> Port Number that will receive the Freq/Loss settings. If unspecified, value is set to 1.
- <n> Freq and Loss pair. Choose from 1 or 2. If unspecified, value is set to 1.
- <value> State of Freq and Loss values for port extension.

0 or OFF Specified Freq and Loss values are OFF

1 or ON Specified Freq and Loss values are ON

Examples

```
SENS:CORR:EXT:PORT:INCL 0
sense2:correction:extension:port2:include:state on
```

Query Syntax SENSE<cnum>:CORRection:EXTension:PORT<pnum>:INCLude:STATe?

Return Type Boolean

Default OFF

SENSe<cnum>:CORRection:EXTension:PORT<pnum>:LDC <value>

(Read-Write) Sets and returns the Port Loss at DC value for the specified port number.

[Learn about Loss Compensation values.](#)

Note: This command affects ALL measurements on the specified channel.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <pnum> Port number to receive Loss value. If unspecified, value is set to 1.
- <value> Loss in dB. Choose a value between -90 and 90

Examples

```
SENS:CORR:EXT:PORT:LDC 1.5
sense2:correction:extension:port2:ldc .1
```

Query Syntax SENSE<cnum>:CORRection:EXTension:PORT<pnum>:LDC?

Return Type Numeric

Default 0

SENSe<cnum>:CORRection:EXTension:PORT<pnum>:LOSS<n> <value>

(Read-Write) Sets and returns the Loss value for the specified port number.

[Learn about Loss Compensation values.](#)

Note: This command affects ALL measurements on the specified channel.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <pnum> Port Number that will receive the Freq/Loss settings. If unspecified, value is set to 1.
- <n> Loss "Use" number. Choose from 1 or 2. If unspecified, value is set to 1.
- <value> Loss in dB. Choose a value between -90 and 90

Examples

```
SENS:CORR:EXT:PORT:LOSS1 1  
sense2:correction:extension:port2:loss2 .1
```

Query Syntax SENSe<cnum>:CORRection:EXTension:PORT<pnum>:LOSS<n>?

Return Type Numeric

Default 0

SENSe<cnum>:CORRection:EXTension:PORT<pnum>[:TIME] <num>

(Read-Write) Sets the extension value at the specified port. Must also set [SENS:CORR:EXT ON](#).

Note: This command affects ALL measurements on the specified channel.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <pnum> Port Number that will receive the extension. If unspecified, value is set to 1.
- <num> The port extension in seconds; may include suffix. Choose a number between: -1E18 and 1E18

Examples

```
SENS:CORR:EXT:PORT 2MS  
sense2:correction:extension:port2 .00025
```

Query Syntax SENSE<num>:CORRection:EXTension:PORT<pnum>[:TIME]?

Return Type Numeric

Default 0

SENSe<num>:CORRection:EXTension:RECeiver<Rnum>[:TIME] <num> OBSOLETE

(Read-Write) This command has NO replacement and no longer works.

Sets the extension value at the specified receiver. Must also set [SENS:CORR:EXT ON](#).

Note: Before using this command you must select a measurement using [CALC:PAR:SEL](#). You can select one measurement for each channel.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <Rnum> Number of the receiver that will receive the extension. If unspecified, value is set to 1
Choose from:
- 1 for Receiver A
- 2 for Receiver B
- <num> The electrical length in seconds; may include suffix. Choose a number between: -10 and 10

Examples

```
SENS:CORR:EXT:REC 2MS  
sense2:correction:extension:receiver2:time .00025
```

Query Syntax SENSE<num>:CORRection:EXTension:RECeiver<Rnum>[:TIME]?

Return Type Numeric

Default 0

SENSe<cnum>:CORRection:EXTension[:STATe] <ON | OFF>

(Read-Write) Turns port extensions ON or OFF.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <ON | OFF> **ON** (or 1) - turns port extensions ON.
 OFF (or 0) - turns port extensions is OFF.

Examples

```
SENS:CORR:EXT ON
sense2:correction:extension:state off
```

Query Syntax SENSe<cnum>:CORRection:EXTension[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)


Default OFF

Sense:Correction:Collect:Session Commands

The commands in this topic are common to perform both SMC and VMC calibrations. A calibration session is a term used to describe an instance of a SMC or VMC calibration. For more commands, see [SESS:SMC](#) and [SESS:VMC](#).

Commands to read ([STEP?](#)) and describe ([DESC?](#)) each step are provided to facilitate a remote user interface.

To perform a **NON** - SMC or VMC calibration, use either [Guided](#) or [Mechanical](#) commands.

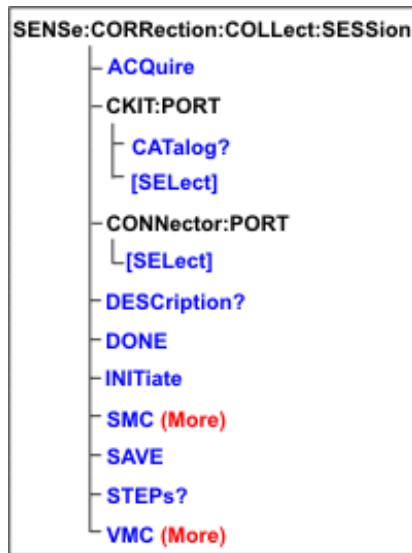

Click on a [blue](#) keyword to view the command details.

See Also

- SCPI [SMC](#) and [VMC](#) calibration examples.
- Learn about [SMC and VMC calibrations](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe<ch>:CORRection:COLLect:SESSion<n>:ACQuire <step>

(Write only) Acquire a calibration measurement.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <n> Session number. Choose from 1 to 16.
- <step> Step number to acquire. Use [SENS:CORR:COLL:SESS:STEPS?](#) to find the number of steps required for the calibration.

Examples `SENSe2:CORR:COLL:SESS6:ACQ 5`

Query Syntax Not Applicable

Default Not Applicable

SENSe<ch>:CORRection:COLLect:SESSion<n>:CKIT:PORT<p>:CATalog?

(Read only) Returns a list of cal kits that are compatible with the connector on port <p>. The port connector type is set with [SENS:CORR:COLL:SESS:CONN:PORT](#)

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <n> Session number. Choose from 1 to 16.
- <p> Port number of connector to query for compatible cal kits.
- 1 - Input port of the mixer under test.
 - 2 - Output port of the mixer under test.
 - 3 - Output port of the calibration mixer.
- [See the user interface \(UI\) equivalent of this command.](#)

Examples `SENS2:CORR:COLL:SESS6:CKIT:PORT2:CAT?`

Return Type Comma separated string values

Default Not Applicable

SENSe<ch>:CORRection:COLLect:SESSion<n>:CKIT:PORT<p>[:SElect] <calkit>

(Read-Write) Set or return the Cal Kit for the specified port. Use [SENS:CORR:COLL:SESS:CKIT:PORT:CAT?](#) to list compatible Cal Kits.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16.
- <p> Port number for which to set cal kit.
1 - Input port of the mixer under test.
2 - Output port of the mixer under test.
Output port of MUT +1 - Output port of the calibration mixer. Generally this is 3.
[See the user interface \(UI\) equivalent of this command.](#)

<calkit> Cal Kit Name

Examples

```
SENS:CORR:COLL:SESS:CKIT:PORT:SEL 85091A  
SENS2:CORR:COLL:SESS6:CKIT:PORT2:SEL?
```

Query Syntax SENS<ch>:CORR:COLL:SESS<n>:CKIT:PORT<p>[:SEL] ?

Return Type String

Default Not Applicable

SENSe<ch>:CORRection:COLLect:SESSion<n>:CONN:PORT<p>[:SEL] <conn>

(Read-Write) Set the connector type and sex for the specified port number. Catalog valid connector types using [SENS:CORR:COLL:GUID:CONN:CAT?](#)

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16.
- <p> Port number for which to specify a connector type.
- <conn> Name of the connector type

Examples

```
SENS2:CORR:COLL:SESS6:CONN:PORT1:SEL "N Type"
```

Query Syntax SENS<ch>:CORR:COLL:SESS<n>:CONN:PORT<p>[:SEL] ?

Return Type String

Default Not Applicable

SENSe<ch>:CORRection:COLLect:SESSion<n>:DESC? <step>

(Read-only) Returns the connection prompt for the step. List the number of steps in the calibration using [SENS:CORR:COLL:SESS:STEPS?](#).

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1

<n> Session number. Choose from 1 to 16.

<step> Step number

Examples `SENS1:CORR:COLL:SESS6:DESC?3`

Return Type Numeric

Default Not Applicable

SENSe<ch>:CORRection:COLLect:SESSion<n>:DONE

(Write only) Ends the calibration sessions. Use [SAVE?](#) to calculate error terms and save the CalSet.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1

<n> Session number. Choose from 1 to 16.

Examples `SENS1:CORR:COLL:SESS6:DONE`

Query Syntax Not Applicable

Default Not Applicable

SENSe<ch>:CORRection:COLLect:SESSion<n>:INITiate <string>

(Write only) Initiates an SMC or VMC calibration session. Use the session number for subsequent SMC or VMC commands.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. If the session number already exists it will be terminated and a new session initiated.
- <string> Name of the calibration. Choose from:
"VMC" or "VectorMixerCal.VMCType"
"SMC" or "ScalarMixerCal.SMCType"

Examples

```
SENS1:CORR:COLL:SESS6:INITiate "VectorMixerCal.VMCType"
```

Query Syntax Not Applicable

Default Not Applicable

SENSe<ch>:CORRection:COLLect:SESSion<n>:SAVE?

(Read only) Finish the SMC or VMC calibration, compute error terms, populate and save the CalSet, and return the GUID of the Cal Set.

Note: The destination (Cal Register or User Cal Set) is determined by the setting of the [SENS:CORR:PREFerence:CSET:SAVE](#) command.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16.

Examples

```
SENS1:CORR:COLL:SESS6:SAVE?
```

Return Type String specifying the GUID of the CalSet produced by this session.

Default Not Applicable

SENSe<ch>:CORRection:COLLect:SESSion<n>:STEPS?

(Read-only) Returns the number of steps required by the Calibration.

To ensure this query always completes successfully, first send the write command: SENS:CORR:COLL:SESS:STEP, then send the query.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16.

Examples SENS1:CORR:COLL:SESS6:STEPs?

Return Type Numeric


Default Not Applicable

Last Modified:

13-Aug-2007 New image and detail for <port> argument.

Sense:Correction:Collect:Session:SMC Commands

Performs scalar (SMC) calibration on a frequency converting device.

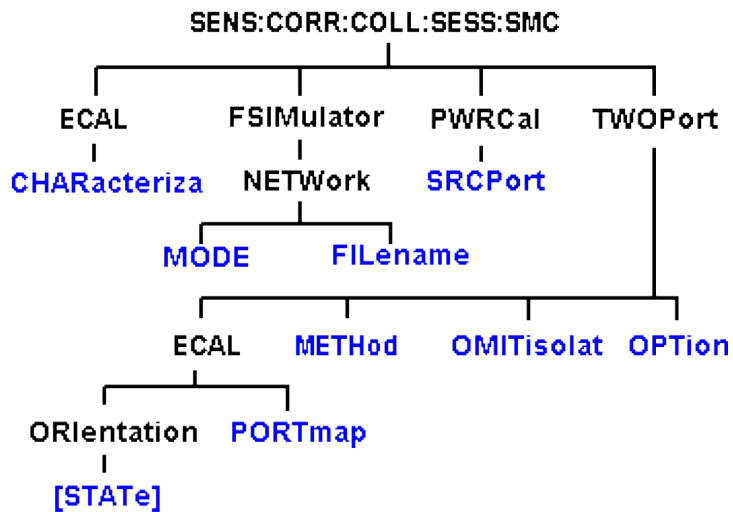

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about FCA Calibrations](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

NOTE: To configure a power meter and sensor see [SOURCE:POWer:](#) commands.

SENSe<ch>:CORRection:COLLect:SESSion<n>:SMC:ECAL:CHARacteriza <mod> ,<char>

(Read-Write) Specifies the ECal module and characterization to be used for the SMC calibration.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <mod> **1** - Electronic Calibration Module
- <char> Specifies which characterization within the ECal module from which to read the confidence data.
- 0** Factory characterization (data that was stored in the ECal module by Agilent). Default if not specified.
- 1** User characterization #1
- 2** User characterization #2
- 3** User characterization #3
- 4** User characterization #4
- 5** User characterization #5

Examples

```
SENS:CORR:COLL:SESS:SMC:ECAL:CHAR 1,2
```

Query Syntax SENS:CORR:COLL:SESS:SMC:ECAL:CHAR?

Return Type Numeric

Default 1,0

**SENSe<ch>:CORRection:COLLect:SESSion<n> :SMC:FSIMulator:NETWork<x>:MODE
<char>**

(Read-Write) Allows you to embed (add) or de-embed (remove) circuit network effects on the input and output of your mixer measurement. [Learn more.](#)

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <x> Apply network to input or output of mixer. Choose from:
- 1** - Input of mixer
 - 2** - Output of mixer
- <char> Choose from:
- NONE** - Do nothing with effects of S2P file.
 - EMBed** - Add effects of S2P file from the measurement results.
 - DEEMbed** - Remove effects of S2P file from the measurement results.

Examples

```
SENS:CORR:COLL:SESS:SMC:FSIM:NETW1:MODE EMB
```

Query Syntax SENS<ch>:CORRection:COLLect:SESSion<n>
:SMC:FSIMulator:NETWork<x>:MODE?

Return Type Character

Default NONE

**SENSe<ch>:CORRection:COLLect:SESSion<n> :SMC:FSIMulator:NETWork<x>:FILename
<string>**

(Read-Write) Specifies the S2P filename to embed or de-embed on the input or output of your mixer measurement. [Learn more.](#)

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <x> Apply network to input or output of mixer. Choose from:

1 - Input of mixer

2 - Output of mixer

- <string> Filename of the S2P used for embedding or de-embedding. Use the full path name, file name, and .S2P suffix, enclosed in quotes.

Examples

```
SENS:CORR:COLL:SESS:SMC:FSIM:NETW1:FIL "C:\Program  
Files\Agilent\Network Analyzer\Documents\WaveguideAdapt.S2P"
```

Query Syntax SENS<ch>:CORRection:COLLect:SESSion<n>
:SMC:FSIMulator:NETWork<x>:FILename?

Return Type String

Default Not Applicable

SENSe<ch>:CORRection:COLLect:SESSion<n>:SMC:PWRCal:SRCPort <string> **Obsolete**

(Read-Write) Specifies which port to calibrate.

Note: Beginning with Rev 6.0, this command is no longer necessary. [Learn more.](#) Because of improved calibration techniques, **Both** is always selected although a power meter measurement is performed only on port 1.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <char> '1' Source port 1 (SMC forward direction)
'2' Source port 2 (SMC reverse direction)
'BOTH' (both forward and reverse directions)

Examples

```
SENS:CORR:COLL:SESS:SMC:PWRCal:SRCPort 'both'  
SENSe2:CORRection:COLLect:SESSion6:SMC:PWRCal:SRCPort '2'
```

Query Syntax SENS:CORR:COLL:SESS:SMC:PWRCal:SRCPort?

Return Type String

Default 1

SENSe<ch>:CORRection:COLLect:SESSion<n>:SMC:TWOPort:ECAL:ORientation[:STATe]
<bool>

(Read-Write) Sets ECAL Auto-Orientation ON or OFF. If setting auto-orientation OFF, you must manually specify the orientation of the ECAL module with [SENS:CORR:COLL:SESS:SMC:TWOPort:ECAL:PORTmap](#).

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1

<n> Session number. Choose from 1 to 16. [Learn about Cal sessions](#).

<bool> 0 = Orientation OFF

1 = Orientation ON

Examples

```
SENS:CORR:COLL:SESS:SMC:TWOPort:ECAL:ORI 1
```

Query Syntax SENS:CORR:COLL:SESS:SMC:TWOPort:ECAL:ORI?

Return Type Boolean

Default 1

SENSe<ch>:CORRection:COLLect:SESSion<n>:SMC:TWOPort:ECAL:PORTmap <mod>,
<string>

(Read-Write) Specifies the manual orientation (which ports of the module are connected to which ports of the PNA) when [auto-orientation](#) is OFF.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1

<n> Session number. Choose from 1 to 16. [Learn about Cal sessions](#).

<mod> 1 - Electronic Calibration Module

<string> Format in the following manner:

Aw,Bx,Cy,Dz

where

- A, B, C, and D are literal ports on the ECAL module

- w,x,y, and z are substituted for PNA port numbers to which the ECAL module port is connected.

Ports of the module which are not used are omitted from the string.

For example, on a 4-port ECal module with

- port A connected to PNA port 2
- port B connected to PNA port 3
- port C not connected
- port D connected to PNA port 1

the string would be: A2,B3,D1

If either the receive port or source port (or load port for 2-port cal) of the CALC:PAR:SElected measurement is not in this string and orientation is OFF, an attempt to perform an ECal calibration will fail.

Examples

```
SENS:CORR:COLL:SESS:SMC:TWOP:ECAL:PORTmap 1,'A1,B2'
```

Query Syntax

```
SENS:CORR:COLL:SESS:SMC:TWOP:ECAL:PORTmap?
```

Return Type

String

Default

"A1,B2"

SENSe<ch>:CORRection:COLLect:SESSion<n>:SMC:TWOPort:METHod <string>

(Read-Write) Specifies the guided ECal method for performing the thru portion of the calibration.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <string> ECAL Method: Choose from:
- 'DEFAULT' - Default
 - 'ADAP' - Adapter removal
 - 'FLUSH' - Flush Through
 - 'UNKN' - Unknown Thru

Examples

```
SENS:CORR:COLL:SESS:SMC:TWOPort:METH 'default'
```

Query Syntax SENS:CORR:COLL:SESS:SMC:TWOPort:METH?

Return Type String

Default DEFAULT

SENSe<ch>:CORRection:COLLect:SESSion<n>:SMC:TWOPort:OMITisolat <bool>

(Read-Write) Select to omit or perform the isolation portion of the ECAL.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <bool> **1** - Omit isolation
- 0** - Perform isolation

Examples

```
SENS:CORR:COLL:SESS:SMC:TWOPort:OMIT 1
```

Query Syntax SENS:CORR:COLL:SMC:TWOPort:OMIT?

Return Type Boolean

Default 1

SENSe<ch>:CORRection:COLLect:SESSion<n>:SMC:TWOPort:OPTion <string>

(Read-Write) Sets the SMC calibration to ECAL or MECHanical

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <char> Choose from:
- 'ECAL'** Electronic Calibration Module
- 'MECH'** Mechanical Calibration Kit

Examples

```
SENS:CORR:COLL:SESS:SMC:TWOPort:OPTion 'ECAL'
```


Query Syntax SENS:CORR:COLL:SESS:SMC:TWOPort:OPTion?

Return Type String

Default ECAL

Sense:Correction:Collect:Session:VMC Commands

Performs a vector (VMC) calibration on a frequency converting device.

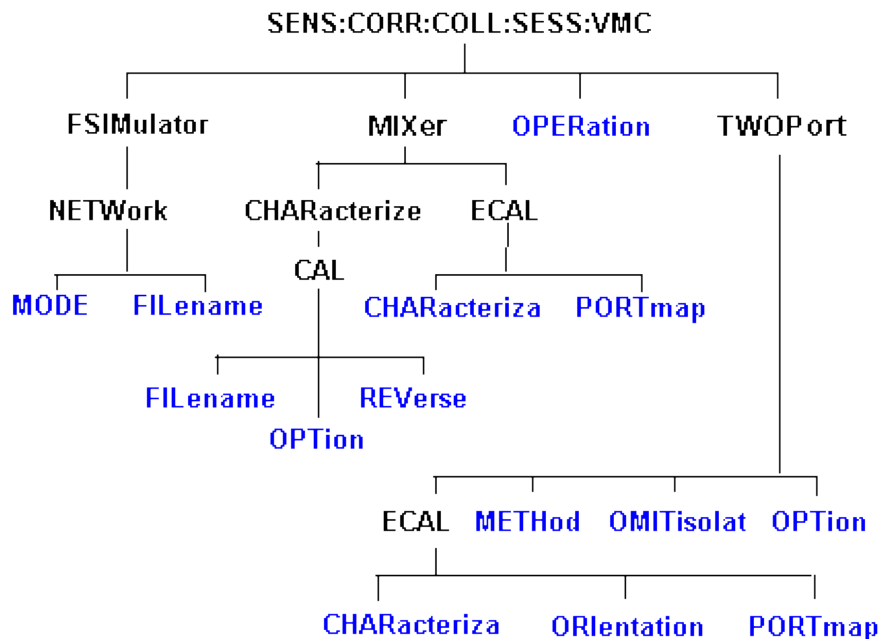

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about VMC Calibration](#)
- [Synchronizing the PNA and Controller](#)

**SENSe<ch>:CORRection:COLlect:SESSion<n> :VMC:FSIMulator:NETWork<x>:MODE
<char>**

(Read-Write) Allows you to embed (add) or de-embed (remove) circuit network effects on the input and output of your mixer measurement. [Learn more.](#)

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <x> Apply network to input or output of mixer. Choose from:
- 1 - Input of mixer
 - 2 - Output of mixer
- <char> Choose from:
- NONE** - Do nothing with effects of S2P file.
 - EMBed** - Add effects of S2P file from the measurement results.
 - DEEMbed** - Remove effects of S2P file from the measurement results.

Examples

```
SENS:CORR:COLL:SESS:VMC:FSIM:NETW1:MODE EMB
```

Query Syntax SENS<ch>:CORRection:COLLect:SESSion<n>:VMC:FSIMulator:NETWork<x>:MODE?

Return Type Character

Default NONE

SENSe<ch>:CORRection:COLLect:SESSion<n>:VMC:FSIMulator:NETWork<x>:FILename<string>

(Read-Write) Specifies the S2P filename to embed or de-embed on the input or output of your mixer measurement. [Learn more.](#)

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <x> Apply network to input or output of mixer. Choose from:
- 1 - Input of mixer
 - 2 - Output of mixer
- <string> Filename of the S2P used for embedding or de-embedding. Use the full path name, file name, and .S2P suffix, enclosed in quotes.

Examples `SENS:CORR:COLL:SESS:VMC:FSIM:NETW1:FIL "C:/Program Files/Agilent/Network Analyzer/Documents/WaveguideAdapt.S2P"`

Query Syntax `SENS<ch>:CORRection:COLLect:SESSion<n>:VMC:FSIMulator:NETWork<x>:FILename?`

Return Type String

Default Not Applicable

SENSe<ch>:CORRection:COLLect:SESSion<n> :VMC:MIXer:CHARacterize:CAL:FiLename<string>

(Read-Write) Specifies the .S2P filename used for mixer characterization. Use the [VMC:MIXer:CHARacterize:CAL: OPTion](#) command to load the file for mixer characterization. Once loaded, use this command to query the current filename or set a new filename.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <string> Filename of the S2P used for mixer characterization. Use the full path name, file name, and .S2P suffix, enclosed in quotes.

Examples `SENS2:CORR:COLL:SESS4:VMC:MIXer:CHAR:CAL:FiL "C:/Program Files/Agilent/Network Analyzer/Documents/MyMixer.S2P"`

Query Syntax `SENS:CORR:COLL:SESS:VMC:MIX:CHAR:CAL:FiL?`

Return Type String

Default C:/Program Files/Agilent/Network Analyzer/Documents/default.s2p

SENSe<ch>:CORRection:COLLect:SESSion<n> :VMC:MIXer:CHARacterize:CAL: OPTion<char>

(Read-Write) Sets the mixer characterization method to ECal, Mechanical, or read from a file.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <char> **ECAL** - Electronic Calibration Module
MECH - Mechanical Calibration Kit
FILE, <filename> - Retrieve a mixer characterization file. Also specify the filename of the S2P used for mixer characterization. Use the full path name, file name, and .S2P suffix. Use the [VMC:CHARacterize:CAL:FILEname](#) command to query the filename..

Examples

```
SENS:CORR:COLL:SESS:VMC:MIX:CHAR:CAL:OPT ECAL
'or
SENS:CORR:COLL:SESS6:VMC:MIX:CHAR:CAL:OPT FILE,'C:/Program
Files/Agilent/Network Analyzer/Documents/Mixer001.s2p'
file = "SENS:CORR:COLL:SESS6:VMC:MIXer:CHAR:CAL:FIL?" 'Read back
the filename
```

Query Syntax SENS:CORR:COLL:SESS:VMC:MIX:CHAR:CAL:OPT?

Return Type String

Default MECH

SENSe<ch>:CORRection:COLLect:SESSion<n> :VMC:MIXer:CHARacterize:CAL: REVerse<bool>

(Read-Write) Specifies the direction in which to characterize the calibration mixer. [Learn more about the calibration mixer.](#)

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <bool> **False (0)** - Characterize the calibration mixer in the SAME direction as that specified in the mixer setup.
True (1) - Characterize the calibration mixer in the REVERSE direction as that specified in the mixer setup.

Examples

```
SENS:CORR:COLL:SESS:VMC:MIX:CHAR:CAL:REV 1
```

Query Syntax SENS:CORR:COLL:SESS:VMC:MIX:CHAR:CAL:REV?

Return Type Boolean

Default False

**SENSe<ch>:CORRection:COLLect:SESSion<n> :VMC:MIXer:ECAL:CHARacteriza <mod>
<char>**

(Read-Write) Specifies the ECal module and characterization to be used for the mixer characterization portion of the calibration.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <mod> 1 - Electronic Calibration Module
- <char> Characterization number in the specified ECAL module. Choose from:
 - 0 Factory characterization (data that was stored in the ECal module by Agilent). Default if not specified.
 - 1 User characterization #1
 - 2 User characterization #2
 - 3 User characterization #3
 - 4 User characterization #4
 - 5 User characterization #5

Examples SENS:CORR:COLL:SESS:VMC:MIX:ECAL:CHAR 1,0

Query Syntax SENS:CORR:COLL:SESS:VMC:MIX:ECAL:CHAR?

Return Type Numeric

Default 1,0

**SENSe<ch>:CORRection:COLLect:SESSion<n> :VMC:MIXer:ECAL:PORTmap <mod>,
<string>**

(Read-Write) Sets the port mapping for the mixer characterization with ECal. This command is required if [SENS:CORR:COLL:SESS:VMC:MIX:CHAR:CAL:OPT ECAL](#) is specified.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <mod> 1 - Electronic Calibration Module
- <string> Choose from:
- "A1" - ECAL module port A is connected to PNA port 1
 - "B1" - ECAL module port B is connected to PNA port 1

Examples

```
SENS:CORR:COLL:SESS:VMC:MIX:ECAL:PORT?  
SENS2:CORR:COLL:SESS:VMC:MIXer:ECAL:PORTmap 1,"A1"
```

Query Syntax SENS:CORR:COLL:SESS:VMC:MIX:ECAL:PORTmap?

Return Type String

Default "A1"

SENSe<ch>:CORRection:COLLect:SESSion<n>:VMC:OPERation <string>

(Read-Write) Perform either full VMC calibration or mixer characterization only.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <char> 'CAL' - full calibration and mixer characterization
- 'CHAR' - mixer characterization only (no reference mixer required) - Saves an .S2P file with the filename specified in [SENS<ch>:CORR:COLL:SESSion<n>:VMC:CHARacterize:CAL:FILEname <filename>](#) . If none is specified, a filename is automatically generated and can be queried using the filename command.

Examples

```
SENS:CORR:COLL:SESS:VMC:OPER 'CAL'
```

Query Syntax SENS:CORR:COLL:SESS:VMC:OPER?

Return Type String

Default CAL

**SENSe<ch>:CORRection:COLLect:SESSion<n> :VMC:TWOPort:ECAL:CHARacteriza <mod>
<char>**

(Read-Write) Specifies the ECal module and characterization to be used for the VMC calibration.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <mod> 1 - Electronic Calibration Module
- <char> Characterization number in the specified ECAL module. Choose from:
- 0 Factory characterization (data that was stored in the ECal module by Agilent). Default if not specified.
 - 1 User characterization #1
 - 2 User characterization #2
 - 3 User characterization #3
 - 4 User characterization #4
 - 5 User characterization #5

Examples `SENS:CORR:COLL:SESS:VMC:TWOP:ECAL:CHAR 1,1`

Query Syntax `SENS:CORR:COLL:SESS:VMC:TWOP:ECAL:CHAR?`

Return Type Integer

Default 1,0

**SENSe<ch>:CORRection:COLLect:SESSion<n> :VMC:TWOPort:ECAL:ORlentation[:STATe]
<bool>**

(Read-Write) Sets ECAL orientation for the VMC ECal.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <bool> 1 = ON
0 = OFF

Examples

```
SENS:CORR:COLL:SESS:VMC:TWOP:ECAL:ORI 1
```

Query Syntax SENS:CORR:COLL:SESSion:VMC:TWOPort:ECAL:ORlentation[:STATe]?

Return Type Integer

Default ON

SENSe<ch>:CORRection:COLLect:SESSion<n> :VMC:TWOPort:ECAL:PORTmap <mod>, <string>

(Read-Write) Specifies the manual orientation (which ports of the module are connected to which ports of the PNA) when [orientation](#) is turned off.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <mod> 1 - Electronic Calibration Module
- <string> Port Map, formatted in the following manner:
Aw,Bx,Cy,Dz
where:
- A, B, C, and D are literal ports on the ECAL module.
 - w,x,y, z are substituted for PNA port numbers to which the ECAL module port is connected.
 - Ports of the module which are not used are omitted from the string.

For example, on a 4-port ECal module with:

- port A connected to PNA port 2
- port B connected to PNA port 3
- port C not connected
- port D connected to PNA port 1

the string would be: A2,B3,D1

If either the receive port or source port (or load port for 2-port cal) of the measurement is not in this string and orientation is OFF, an attempt to perform an ECal will fail.

Examples `SENS:CORR:COLL:SESS:VMC:TWOP:ECAL:PORTmap 1,"A2,B1"`

Query Syntax `SENS:CORR:COLL:SESS:VMC:TWOP:ECAL:PORTmap?`

Return Type string

Default "A1,B2"

SENSe<ch>:CORRection:COLLect:SESSion<n> :VMC:TWOPort:METHod <string>

(Read-Write) Specifies the guided ECal method for performing the thru portion of the calibration.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1

<n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)

<char> **'DEFAULT'** - Default
'ADAP' - Adapter removal
'FLUSH' - Flush Through
'UNKN' - Unknown Thru

Examples `SENS:CORR:COLL:SESS:VMC:TWOP:METH 'ADAP'`
`SENSe2:CORR:COLL:SESSion6:VMC:TWOPort:METHod 'FLUSH'`

Query Syntax `SENS:CORR:COLL:SESS:VMC:TWOP:METH?`

Return Type String

Default DEFAULT

SENSe<ch>:CORRection:COLLect:SESSion<n> :VMC:TWOPort:OMITisolat <bool>

(Read-Write) Select to omit or perform the isolation portion of the ECAL.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <bool> 1 - omit isolation
0 - perform isolation

Examples

```
SENS:CORR:COLL:SESS:VMC:TWOP:OMIT 1
```

Query Syntax SENS:CORR:COLL:SESS:VMC:TWOP:OMIT?

Return Type Numeric

Default 1

SENSe<ch>:CORRection:COLLect:SESSion<n> :VMC:TWOPort:OPTion <string>

(Read-Write) Sets the 2-port calibration option to ECAL or MECHanical

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <n> Session number. Choose from 1 to 16. [Learn about Cal sessions.](#)
- <char> **Choose from:**
'ECAL' Electronic Calibration Module
'MECH' Mechanical Calibration Kit

Examples

```
SENS:CORR:COLL:SESS:VMC:TWOP:OPT 'MECH'  
SENSe2:CORR:COLL:SESSion6:VMC:TWOPort:OPTion 'ECAL'
```

Query Syntax SENS:CORR:COLL:SESS:VMC:TWOP:OPT?

Return Type String


Default "MECH"

Last Modified:

29-Aug-2007 Edited Char:Cal:Opt File argument

Sense:Couple Commands

SENSe:COUPle

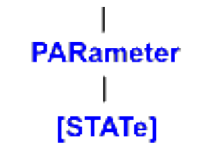

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe<num>:COUPle <ALL | NONE>

(Read-Write) Sets the sweep mode as Chopped or Alternate.

[Learn about Alternate Sweep](#)

Parameters

- <num> Any existing channel number; if unspecified, value is set to 1.
- <ALL | NONE> **ALL** - Sweep mode set to Chopped - reflection and transmission measured on the same sweep.
- NONE** - Sweep mode set to Alternate - reflection and transmission measured on separate sweeps. Improves Mixer bounce and Isolation measurements. Increases sweep time

Examples

```
SENS:COUP ALL
sense2:couple none
```

Query Syntax SENSe<num>:COUPle?

Return Type Character

Default ALL

SENSe<num>:COUPle:PARAmeter[:STATe] <bool>

(Read-Write) Turns ON and OFF Time Domain Trace Coupling. All of the measurements in the specified channel are coupled.

- To select Transform parameters to couple, use [CALC:TRAN:COUP:PAR](#)
- To select Gating parameters to couple, use [CALC:FILT:COUP:PAR](#)

Learn more about [Time Domain Trace Coupling](#).

Parameters

<cnum> Any existing channel number; if unspecified, value is set to 1.

<bool> **ON (or 1)** - Turns ON Time Domain Trace Coupling.

OFF (or 0) - Turns OFF Time Domain Trace Coupling.

Examples

```
SENS:COUP:PAR 0
sense2:couple:parameter:state on
```

Query Syntax SENSE<cnum>:COUPLE:PARAMETER[:STATE]?


Return Type Boolean

Default ON (or 1)

Sense:FOM (Frequency Offset) Commands

Controls the frequency offset settings which cause stimulus and response frequencies to be different.

Note: These commands replace the [previous FOM commands](#). Although the old commands will continue to work, they can NOT be mixed with these new commands.

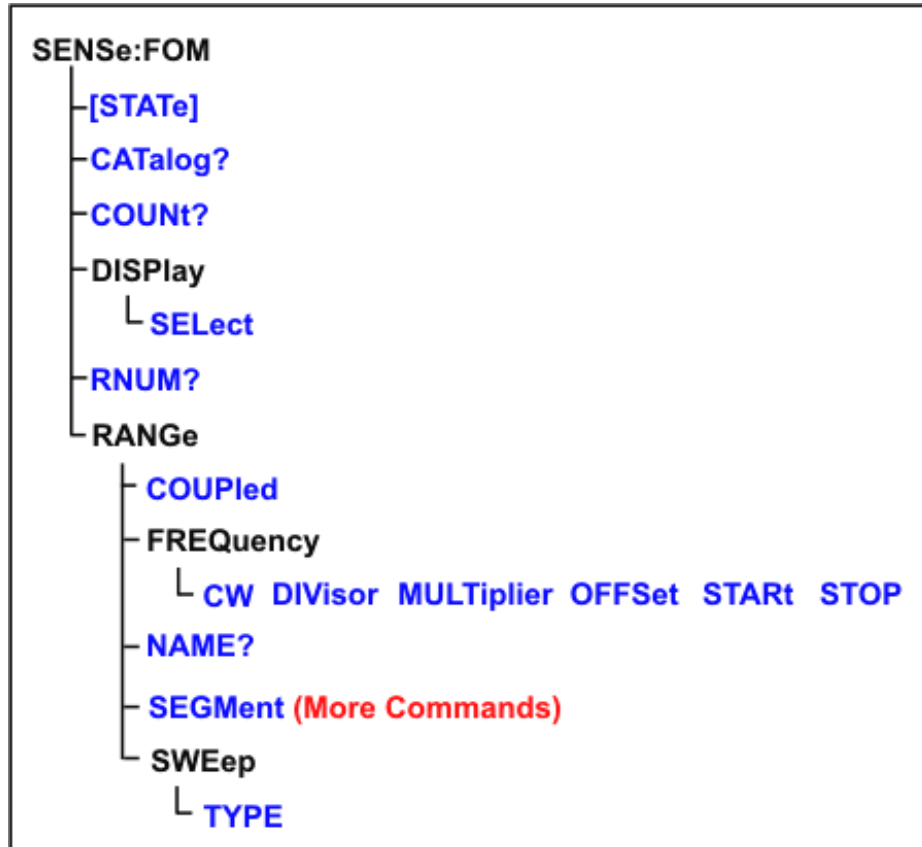

Click on a [blue](#) keyword to view the command details.

See Also

- [FOM Example Program](#)
- [Learn about Frequency Offset](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe<num>:FOM[:STATe] <bool>

(Read-Write) Turns Frequency Offset ON and OFF. Frequency offset settings are not enabled until this setting is ON.

Send this command (FOM ON) AFTER sending other FOM settings to avoid 'out-of-range' errors.

Parameters

<cnum> Any existing channel number; if unspecified, value is set to 1.

<bool> ON (or 1) - turns FOM ON.
OFF (or 0) - turns FOM OFF.

Examples

```
SENS:FOM 1  
sense2:fom:state on
```

Query Syntax SENSE<cnum>:FOM:STATE?

Return Type Boolean

Default OFF

SENSe<cnum>:FOM:CATalog?

(Read-only) Returns a comma-separated list of available range names in the PNA.

Parameters

<cnum> Any existing channel number; if unspecified, value is set to 1.

Examples

```
SENS:FOM:CAT?  
'returns  
"Primary, Source, Receivers"
```

Return Type String

Default Not Applicable

SENSe<cnum>:FOM:COUNT?

(Read-only) Returns the number of valid ranges in the PNA.

Parameters

<num> Any existing channel number; if unspecified, value is set to 1.

Examples

```
SENS:FOM:COUN?  
sense2:fom:count?
```

Query Syntax SENSE<num>:FOM:COUNT?

Return Type Numeric

Default Not Applicable

SENSe<num>:FOM:DISPlay:SElect <string>

(Read-Write) Select the range to be displayed on the PNA x-axis. All traces in the channel have this same x-axis scaling.

Parameters

<num> Any existing channel number; if unspecified, value is set to 1.

<string> Range name. Case insensitive. Use [SENSe:FOM:CAT?](#) to see a list of available frequency range names.

Examples

```
SENS:FOM:DISPlay:SElect "source2"  
sense2:fom:display:select "source"
```

Query Syntax SENSe<num>:FOM:DISPlay:SElect?

Return Type String

Default Receivers

SENSe<num>:FOM:RNUM? <string>

(Read-only) Returns the number of a specified range name.

The FOM range items are typically numbered as follows:

1. Primary
2. Source
3. Receivers
4. Source2 (if present)

Parameters

- <num> Any existing channel number; if unspecified, value is set to 1.
- <string> Range name for which a number is being queried. Case insensitive. Use [SENSe:FOM:CAT?](#) to see a list of available range names.

Examples

```
SENS:FOM:RNUM? "receivers"  
sense2:fom:rnum? "Source2"
```

Return Type Numeric

Default Not Applicable

SENSe<num>:FOM:RANGe<n>:COUPled <bool>

(Read-Write) Sets and returns the state of coupling (ON or OFF) of the specified range to the primary range.

Parameters

- <num> Any existing channel number; if unspecified, value is set to 1.
- <n> Range number to couple to primary range. An error is returned when attempting to couple to the Primary range (1).
- <bool> **ON** (or 1) - Couple range to primary range.
OFF (or 0) - Do NOT couple to primary range.

Examples

```
SENS:FOM:RANG:COUP 1  
sense2:fom:range2:coupled 0
```

Query Syntax SENSe<num>:FOM:RANGe<n>:COUPled?

Return Type Boolean

Default ON (or 1) Coupled

SENSe<num>:FOM:RANGe<n>:FREQuency:CW <num>

(Read-Write) Sets and returns the CW frequency.

This setting is valid for the primary range, or if the specified range is already [uncoupled](#) from the primary range and if the [sweep type](#) is CW.

Parameters

- <num> Any existing channel number; if unspecified, value is set to 1.
- <n> Range number. If unspecified, value is set to 1.
- <num> CW frequency value in Hz. Choose any frequency within the range of the PNA.

Examples

```
SENS:FOM:RANG:FREQ:CW 1e9
sense2:fom:range2:frequency:cw 10000000
```

Query Syntax SENSe<num>:FOM:RANGe<n>:FREQuency:CW?

Return Type Numeric

Default Center frequency of the PNA.

SENSe<num>:FOM:RANGe<n>:FREQuency:DIVisor <num>

(Read-Write) Sets and returns the divisor value.

This setting is valid only if the specified range is [coupled](#) to the primary range.

Parameters

- <num> Any existing channel number; if unspecified, value is set to 1.
- <n> Range number. If unspecified, value is set to 1.
- <num> Divisor value (unitless).

Examples

```
SENS:FOM:RANG:FREQ:DIV 3
sense2:fom:range2:frequency:divisor 0
```

Query Syntax SENSe<num>:FOM:RANGe<n>:FREQuency:DIVisor?

Return Type Numeric

Default 1

SENSe<num>:FOM:RANGe<n>:FREQuency:MULTiplier <num>

(Read-Write) Sets and returns the multiplier value to be used when coupling this range to the primary range. This setting is valid only if the specified range is [coupled](#) to the primary range.

Parameters

- <num> Any existing channel number; if unspecified, value is set to 1.
- <n> Range number. If unspecified, value is set to 1.
- <num> Multiplier value. (Unitless)

Examples

```
SENS:FOM:RANG:FREQ:MULT 1
sense2:fom:range2:frequency:multiplier 2
```

Query Syntax SENSe<num>:FOM:RANGe<n>:FREQuency:MULTiplier?

Return Type Numeric

Default 1

SENSe<num>:FOM:RANGe<n>:FREQuency:OFFSet <num>

(Read-Write) Sets and returns the offset value to be used when coupling this range to the primary range. [Learn more about offset value.](#)

This setting is valid only if the specified range is [coupled](#) to the primary range.

Parameters

- <num> Any existing channel number; if unspecified, value is set to 1.
- <n> Range number. If unspecified, value is set to 1.
- <num> Offset value. (Unitless)

Examples

```
SENS:FOM:RANG:FREQ:OFFS 1E9
sense2:fom:range2:frequency:offset 10000000
```

Query Syntax SENSe<num>:FOM:RANGe<n>:FREQuency:OFFSet?

Return Type Numeric

Default 0

SENSe<num>:FOM:RANGe<n>:FREQuency:STARt <num>

(Read-Write) Sets and returns the Start value of frequency range. Also specify [Stop frequency](#).

This setting is valid for the primary range, or if the specified range is already [uncoupled](#) from the primary range and if the [sweep type](#) is LOG or LINear.

Parameters

- <cnm> Any existing channel number; if unspecified, value is set to 1.
- <n> Range number. If unspecified, value is set to 1.
- <num> Start value in Hz. Choose any frequency within the range of the PNA.

Examples

```
SENS:FOM:RANG:FREQ:STAR 1GHz
sense2:fom:range2:frequency:start 100000000
```

Query Syntax SENSE<cnm>:FOM:RANGe<n>:FREQuency:STARt?

Return Type Numeric

Default Minimum frequency of the PNA.

SENSe<cnm>:FOM:RANGe<n>:FREQuency:STOP <num>

(Read-Write) Sets and returns the Stop value of frequency range. Also specify [Start frequency](#).

This setting is valid for the primary range, or if the specified range is already [uncoupled](#) from the primary range and if the [sweep type](#) is LOG or LINear.

Parameters

- <cnm> Any existing channel number; if unspecified, value is set to 1.
- <n> Range number. If unspecified, value is set to 1.
- <num> Stop value in Hz. Choose any frequency within the range of the PNA.

Examples

```
SENS:FOM:RANG:FREQ:STOP 1e12
sense2:fom:range2:frequency:stop 10000000000
```

Query Syntax SENSE<cnm>:FOM:RANGe<n>:FREQuency:STOP?

Return Type Numeric

Default Maximum frequency of the PNA.

SENSe<cnm>:FOM:RANGe<n>:NAME?

(Read-only) Returns the name of range<n>.

The FOM range items are typically named as follows:

1. Primary
2. Source
3. Receivers
4. Source2 (if present)

Parameters

<cnum> Any existing channel number; if unspecified, value is set to 1.

<n> Range number. If unspecified, value is set to 1.

Examples

```
SENS:FOM:RANG:NAME?  
sense2:fom:range2:name?
```

Return Type String

Default Not Applicable

SENSe<cnum>:FOM:RANGe<n>:SWEep:TYPE <char>

(Read-Write) Sets and returns the sweep type to be used with the specified range.

This setting is valid only if the specified range is already [uncoupled](#) from the primary range.

Learn about [Unsupported Sweep Type combinations](#).

Parameters

<cnum> Any existing channel number; if unspecified, value is set to 1.

<n> Range number. If unspecified, value is set to 1.

<char> Sweep type. Choose from:

CW - Also specify [CW frequency](#).

LINEar - Also specify frequency Start/Stop or Center/Span

LOG - Also specify frequency Start/Stop or Center/Span

POWER - Also specify power Start/Stop or Center/Span

SEGMENT - Also specify [segment sweep](#) settings.

Examples

```
SENS:FOM:RANG:SWE:TYPE LOG  
sense2:fom:range2:sweep:type linear:
```

Query Syntax

```
SENSe<cnum>:FOM:RANGe<n>:SWEep:TYPE?
```

Return Type

Character

Default

Linear

 
Last Modified:

5-Jul-2007 Fixed state link

8-Mar-2007 MQX New topic

Sense:Frequency Commands

Sets the frequency sweep functions of the analyzer.



Click on a [blue](#) keyword to view the command details.

See Also

- [Example](#) using some of these commands.
- [Learn about Frequency Sweep](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Note: All of the commands in this block will accept **MIN** or **MAX** instead of a numeric parameter.

Also, kHz, MHz, and GHz are accepted as suffixes/units.

See [SCPI Syntax](#) for more information.

SENSe<cnum>:FREQuency:CENTer <num>

(Read-Write) Sets the center frequency of the analyzer.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <num> Center frequency. Choose any number between the **minimum** and **maximum** frequency limits of the analyzer. Units are Hz.

[See Note](#)

Examples

```
SENS:FREQ:CENT 1000000
sense2:frequency:center 1mhz
sense2:frequency:center 1e6
```

Query Syntax SENSe<cnum>:FREQuency:CENTer?

Return Type Numeric

Default Center of the analyzer's frequency span

SENSe<cnum>:FREQuency[:CW |:FIXed] <num>

(Read-Write) Sets the Continuous Wave (or Fixed) frequency. Must also send [SENS:SWEEP:TYPE CW](#) to put the analyzer into CW sweep mode.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <num> CW frequency. Choose any number between the **minimum** and **maximum** frequency limits of the analyzer. Units are Hz.

[See Note](#)

Examples

```
SENS:FREQ 1000000
SENS:FREQ:CW MIN
sense2:frequency:fixed 1mhz
```

Query Syntax SENSe<cnum>:FREQuency[:CW |:FIXed]?

Return Type Numeric

[Default](#) 1 GHz

SENSe<cnum>:FREQuency:SPAN <num>

(Read-Write) Sets the frequency span of the analyzer.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <num> Frequency span. Choose any number between:
0 (minimum) and the **maximum** frequency span of the analyzer.
Units are Hz

[See Note](#)

Examples

```
SENS:FREQ:SPAN 1000000
sense2:frequency:span max
```

Query Syntax SENSe<cnum>:FREQuency:SPAN?

Return Type Numeric

[Default](#) Maximum frequency span of the analyzer

SENSe<cnum>:FREQuency:STARt <num>

(Read-Write) Sets the start frequency of the analyzer.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <num> Start frequency. Choose any number between the **MIN** and **MAX** frequency limits of the analyzer. Units are Hz

If FREQ:START is set greater than FREQ:STOP, then STOP is set equal to START.

[See Note](#)

Examples

```
SENS:FREQ:STAR 1000000
sense2:frequency:start MIN
```

Query Syntax SENSE<cnum>:FREQuency:START?

If [Sweep type is segment](#), this query returns the start frequency of the first segment.

Return Type Numeric

Default Minimum frequency of the analyzer

SENSe<cnum>:FREQuency:STOP <num>

(Read-Write) Sets the stop frequency of the analyzer.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <num> Stop frequency. Choose any number between:
the **minimum** and **maximum** frequency limits of the analyzer. Units are Hz

If FREQ:STOP is set less than FREQ:START, then START will be set equal to STOP.

[See Note](#)

Examples

```
SENS:FREQ:STOP 1000000
sense2:frequency:stop max
```

Query Syntax SENSE<cnum>:FREQuency:STOP?

If [Sweep type is segment](#), this query returns the stop frequency of the last segment.


Return Type Numeric

Default Maximum frequency of the analyzer

Sense:IF Commands

Controls the IF source and gain settings for use with the E836x H11 Option.

See [IF/DSP](#) and [Pulse](#) commands for the PNA-X.

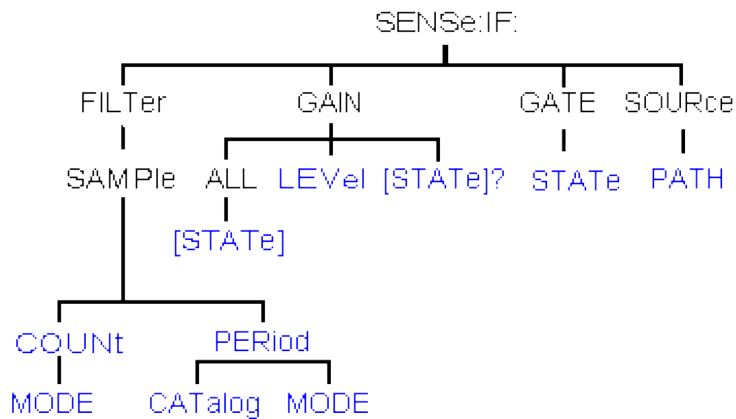

- Click on a [blue](#) keyword to view the command details.
- See [IF Access User Interface Settings](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe<num>:IF:FILTer:SAMPlE:COUNT <num>

(Read-Write) Sets and returns the number of taps in the IF filter. The IF filter sample count setting is only used when [SENSe:IF:FILTer:SAMPlE:COUNT:MODE](#) is set to MANUAL. **Critical Note:**

Parameters

- <num> Existing channel number to manipulate. If unspecified, <num> is set to 1.
- <num> An integer value. (MIN and MAX return the minimum and maximum allowed values, respectively.)

Examples

```
SENS:IF:FILT:SAMP:COUNT 40
sense2:if:filter:sample:count maximum
```

Query Syntax

SENS:IF:FILTer:SAMPlE:COUNT?

Return Type

Numeric

Default

Instrument dependent.

SENSe<num>:IF:FILTer:SAMPlE:COUNT:MODE <char>

(Read-Write) Sets and returns the IF filter sample count mode to the specified value. When in MANUAL mode, the value specified for the [IF Filter sample count](#) is used as the number of taps in the IF filter. **Critical Note:**

Parameters

<num> Existing channel number to manipulate. If unspecified, <num> is set to 1.

<char> Choose either AUTO or MANUAL.

Examples

```
SENS:IF:FILT:SAMP:COUN:MODE MANUAL
sense2:if:filter:sample:count:mode AUTO
```

Query Syntax SENS:IF:FiLTer:SAMPlE:COUNT:MODE?

Return Type Character

Default AUTO

SENSe<num>:IF:FiLTer:SAMPlE:PERiod <num>

(Read-Write) Sets and returns the IF filter sample period. The IF filter sample period setting is only used by the instrument when the [SENS:IF:FILT:SAMP:PER:MODE](#) is set to MANUAL. **Critical Note:**

Parameters

<num> Existing channel number to manipulate. If unspecified, <num> is set to 1.

<num> Sample period. Choose from values returned from the [SENS:IF:FiLTer:SAMPlE:PERiod:CAT?](#) command.

Examples

```
SENS:IF:FILT:SAMP:PER 6 us
sense2:if:filter:sample:period maximum
```

Query Syntax SENS:IF:FiLTer:SAMPlE:PERiod?

Return Type Numeric

Default Instrument dependent.

SENSe<num>:IF:FiLTer:SAMPlE:PERiod:CATalog?

(Read-Only) Returns the list of allowed IF filter sample periods for this instrument. **Critical Note:**

Parameters

<num> Existing channel number to manipulate. If unspecified, <num> is set to 1.

Examples

```
SENS:IF:FILT:SAMP:PER:CAT?
sense2:if:filter:sample:period:catalog?
```

Query Syntax SENS:IF:FiLTer:SAMPlE:PERiod:CATalog?

Return Type String

Default AUTO

SENSe<cnum>:IF:FILTer:SAMPlE:PERiod:MODE <char>

(Read-Write) Sets and returns the IF filter sample period mode to the specified value. **Critical Note:**

Parameters

<cnum> Existing channel number to manipulate. If unspecified, <cnum> is set to 1.

<char> Sample period mode. Choose from **AUTO** or **MANUAL**.

Examples

```
SENS:IF:FILT:SAMP:PER:MODE MANUAL
sense2:if:filter:sample:period:mode AUTO
```

Query Syntax

SENS:IF:FILTer:SAMPlE:PERiod:MODE?

Return Type

Character

Default

AUTO

SENSe<cnum>:IF:GAIN:ALL[:STATe] <char>

(Write only) Sets the gain state for ALL receivers to Auto or Manual.

Parameters

<cnum> Existing channel number to manipulate. If unspecified, <cnum> is set to 1.

<char> Choose from **AUTO** or **MANUAL**

Examples

```
SENS:IF:GAIN:ALL AUTO
sense:if:gain:all:state manual
```

Query Syntax

Not Applicable

Return Type

Character

Default

AUTO

SENSe<cnum>:IF:GAIN:LEVel <id>, <level>

(Read Write) Manually sets the gain level for the specified receiver.

Parameters

<num> Existing channel number to manipulate. If unspecified, <num> is set to 1.

<id> Choose from: 'A', 'B', 'R1', 'R2'.

Note: The A and R1 receivers are always switched together. B and R2 are also always switched together. For example, if you specify 'A', R1 will also be switched.

<level> Gain level. Choose from:

0 - Lowest gain setting

1

2 - Highest gain setting

Examples

```
SENS:IF:GAIN:LEVEL 'A', 1
```

Query Syntax SENSE<num>:IF:GAIN:LEVEL? <id>

Return Type Numeric

Default 0

SENSe<num>:IF:GAIN[:STATE]?, <id>

(Read only) Returns the gain state for the specified receiver. Use [SENS:IF:GAIN:ALL](#) to set the gain state for all channels.

Parameters

<num> Existing channel number to manipulate. If unspecified, <num> is set to 1.

<id> Choose from: 'A', 'B', 'R1', 'R2'.

Note: The A and R1 receivers are always switched together. B and R2 are also always switched together. For example, if you specify 'A', R1 will also be switched.

Examples

```
SENS:IF:GAIN? 'A'
```

Return Type Boolean

Default Not Applicable

SENSe<cnum>:IF:GATE:STATe <boolean>

(Read-Write) Sets or returns the IF filter gate state.

Parameters

<cnum> Existing channel number to manipulate. If unspecified, <cnum> is set to 1.

<boolean> Choose from ON or OFF

Examples

```
SENS:IF:FILT:GATE:STAT ON
sense2:if:filter:gate:state 0
```

Query Syntax

SENS:IF:FILT:er:SAMPle:COUNT:MODE?

Return Type

Boolean

Default

AUTO

SENSe<cnum>:IF:SOURce:PATH <id>, <char>

(Read Write) Sets the source path for the specified receiver. An error is returned if <id> is not valid, or if <char> is not valid for the specified <id>.

Parameters

<cnum> Existing channel number to manipulate. If unspecified, <cnum> is set to 1.

<id> Choose from: 'A', 'B', 'R1', 'R2'

Note: The A and R1 receivers are always switched together. B and R2 are also always switched together. For example, if you specify "A", R1 will also be switched.

<char> Choose from:

- **NORMal** - the PNA decides the appropriate IF input paths.
- **EXTernal** - always use the rear panel IF inputs.

Examples

```
SENS:IF:SOUR:PATH 'A', Ext
```

Query Syntax

SENSe<cnum>:IF:SOURce:PATH? <id>

Return Type


Character

Default


Normal

Sense:IF Commands

Controls the IF filter for use with the PNA X.

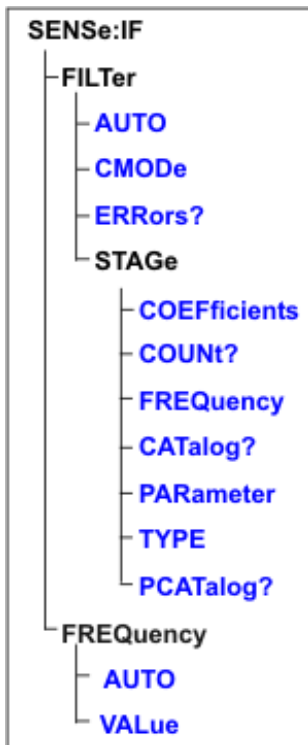

- Click on a [blue](#) keyword to view the command details.
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

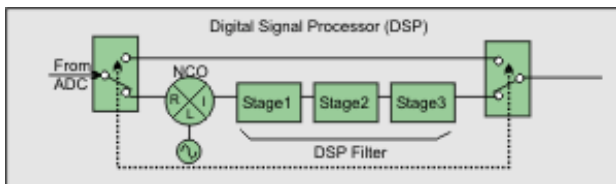

PNA-X DSP Block diagram

All of the Sense:IF commands, except the frequency commands, make settings related to the DSP section of the IF Path.

See the entire [IF Path Configuration](#).

Note: For any of the Filter "Stage" parameters to take effect, [SENS:IF:FILT:AUTO](#) must be set to OFF (MANUAL) and mode, and [SENS:IF:FILT:CMOD](#) must be set to OFF.

Critical Note: These commands act on the selected measurement. You can select one measurement for each channel using [Calc:Par:Select](#)

SENSe<cnum>:IF:FILTer:AUTO <bool>

(Read-Write) Sets and returns whether the PNA configures the 3-stage digital filter settings or they will be configured manually. When making manual settings, also send [SENS:IF:FILT:CMOD OFF](#) which routes the IF through the 3-stage filter.

[Critical Note](#)

Parameters

<cnum> Existing channel number. If unspecified, <cnum> is set to 1.

<bool> (Boolean)

ON (or **1**) - Automatic: PNA controls digital filter settings.

OFF (or **0**) - Manual: You control digital filter settings using other Sens:IF commands.

Examples

```
SENS:IF:FILT:AUTO 1
sense2:if:filter:auto 0
```

Query Syntax SENSe<cnum>:IF:FILTer:AUTO?

Return Type Boolean

Default ON

SENSe:IF:FILTer:CMODe <bool>

(Read-Write) Sets and returns the ADC capture mode modeled as a 2-pole switch in the above diagram. The switch either bypasses or routes the IF through the 3-stage digital filter.

[Critical Note](#)

Parameters

<bool> (Boolean)

ON (or **1**) - The digital filters are bypassed and the raw ADC readings are taken directly. A maximum of 4096 data points per sweep can be acquired.

OFF (or **0**) - The digital filters are used to process IF information. The filters can be configured automatically or manually using [SENS:IF:FILT:AUTO](#).

Examples

```
SENS:IF:FILT:CMOD 1
sense2:if:filter:cmode 0
```

Query Syntax SENSe<cnum>:IF:FILTer:CMODe?

Return Type Boolean
Default OFF

SENSe<cnum>:IF:FILTer:ERRors?

(Read-only) Returns the error string associated with the digital filters. The return string has three fields separated by commas: "stage1 status, stage2 status, stage3 status"

Each of these fields can contain one or more of the following error codes:

- **NO ERROR**
- ***NUMBER-OF-COEFFICIENTS** - the number of coefficients is excessive for that filter-stage
- ***COEFFICIENT VALUE** - one or more coefficients are out of range for that filter-stage
- ***SUM-OF-COEFFICIENTS** - the sum of all coefficients is excessive for that filter-stage,
- ***FREQUENCY** - the frequency for Stage 1 is out of range (only applies stage1 field),
- ***PARAMETER** - one or more parameters are out of range (only applies to stage 3 field)

Critical Note

Parameters

<cnum> Existing channel number. If unspecified, <cnum> is set to 1.

Examples

```
SENS:IF:FILT:ERR?
'example return strings"

NO ERROR, NO ERROR, NO ERROR
indicates no errors,

*SUM-OF-COEFFICIENTS, NO ERROR, NO ERROR
indicates that the sum of all filter coefficients exceed the
maximum value for the Stage-1 filter,

*COEFFICIENT *SUM-OF-COEFFICIENTS, NO ERROR, *PARAMETER
indicates a problems with Stage 1 coefficients and a problem with
one or more of the parameters associated with the Stage 3 filter.
```

Return Type String
Default Not Applicable

SENSe<cnum>:IF:FILTer:STAGE<n>:COEFFicients <coef>

(Read-Write) Sets and returns the digital filter coefficients of the specified stage.

Critical Note

Parameters

- <num> Existing channel number. If unspecified, <num> is set to 1.
<n> Stage number. Choose 1 or 2
<coef> An array of real numbers. Filter coefficients

Examples

```
SENS:IF:FILT:STAG2:COEF 0,0.1,0.7,0.7,0.1  
sense2:if:filter:stage1:coefficients
```

Query Syntax

SENSe<num>:IF:FiLTer:STAGE<n>:COEFFicients?

Example

```
SENS:IF:FILT:STAG2:COEF?  
sense2:if:filter:stage1:coefficients?
```

Return Type

Numeric

Default

Stage dependent

SENSe<num>:IF:FiLTer:STAGE<n>:COUNT? [char]

(Read-only) Returns the number of taps in the digital filter of the specified stage. The filter sample count setting is only used when [SENSe:IF:FiLTer:AUTO](#) is set to False (MANUAL).

Critical Note

Parameters

- <num> Existing channel number. If unspecified, <num> is set to 1.
<n> Stage number. Choose 1 or 2
[char] Optional parameter. Choose from:

not specified - returns the current number of coefficients for the specified stage.

MIN - returns the minimum number of coefficients for the specified stage. Stage1: **10**, Stage2: **1**

MAX - returns the maximum number of coefficients for the specified stage. Stage1 & 2: **1024**

Examples

```
SENS:IF:FILT:STAG2:COUN?  
sense2:if:filter:stage1:count? max
```

Return Type

Numeric

Default

Stage dependent

SENSe<cnum>:IF:FILTer:STAGE1:FREQuency <value>

(Read-Write) Sets and returns the Numerically Controlled Oscillator (NCO) frequency. This command is only used when [SENSe:IF:FILTer:AUTO](#) is set to False (Manual).

Critical Note

Parameters

- <cnum> Existing channel number. If unspecified, <cnum> is set to 1.
- <value> Stage 1 Frequency. Min value= 0 Hz, Max value= 15 MHz. Or programmatically use the Max and Min queries to determine the range of settable values.

Examples

```
SENS:IF:FILT:STAGE1:FREQ 9e6
sense2:if:filter:stage1:frequency 9.2e6
```

Query Syntax

SENSe<cnum>:IF:FILTer:STAGE1:FREQuency?

'returns the current parameter value

SENSe<cnum>:IF:FILTer:STAGE1:FREQuency? Min

'returns the minimum frequency value.

SENSe<cnum>:IF:FILTer:STAGE1:FREQuency? Max

'returns the maximum frequency value.

Return Type

Numeric

Default

9 MHz

SENSe<cnum>:IF:FILTer:STAGE3:CATalog?

(Read-only) Returns a list of strings for the currently supported filter types that can be used for the stage 3 filter. This command is only used when [SENSe:IF:FILTer:AUTO](#) is set to False (Manual). See [SENS:IF:FILT:STAGE3:TYPE](#) for a list of currently supported filter types.

Critical Note

Parameters

- <cnum> Existing channel number. If unspecified, <cnum> is set to 1.

Examples

```
SENS:IF:FILT:STAGE3:CAT?
sense2:if:filter:stage3:catalog?
```

Return Type

String array

Default

Not Applicable

SENSe<cnum>:IF:FiLTeR:STAGe3:TYPe <value>

(Read-Write) Sets and returns the Stage 3 filter type. This command is only used when [SENSe:IF:FiLTeR:AUTO](#) is set to False (Manual).

Critical Note

Parameters

<cnum> Existing channel number. If unspecified, <cnum> is set to 1.
<value> (String) Filter type. Chose from:

- **"RECT"** Rectangular Window Filter
- **"TUKEY"** Tukey Filter
- **"PWIN"** Pulse Window Filter

Examples

```
SENS:IF:FILT:STAGe3:TYPe RECT  
sense2:if:filter:stage3:type pwin
```

Query Syntax

SENSe<cnum>:IF:FiLTeR:STAGe3:TYPe?

Return Type

String

Default

"TUKEY"

SENSe<cnum>:IF:FiLTeR:STAGe3:PARAmeter <p>, <value>

(Read-Write) Sets and returns the Stage 3 filter parameters.

Must first select the filter type ([SENS:IF:FILT:STAGe3:TYPe](#)) before setting these parameters

Use [SENSe:IF:FILT:STAGe3:PCAT?](#) to return a list of the available parameters for the currently selected filter type.

Critical Note

Parameters

<cnum> Existing channel number. If unspecified, <cnum> is set to 1.
<p> (String) Filter parameter. Choose from:

- "C"** - Tap count (Tukey, RECT, PWIN)
- "P"** - Period (PWIN ONLY)
- "D"** - Delay (PWIN ONLY)
- "W"** - Width (PWIN ONLY)
- "R"** - Ramp Count (PWIN ONLY)

<value>	(String) Parameter Value for the specified stage 3 parameter. Use the query form to return the minimum and maximum values for the specified parameter.
Examples	<pre>SENS:IF:FILT:STAGe3:PAR "C",64 sense2:if:filter:stage3:parameter "d",0.5E-6</pre>
Query Syntax	<p>SENSe<cnum>:IF:FiLTer:STAGE3:PARAmeter? <p></p> <p>returns the current parameter value</p> <p>SENSe<cnum>:IF:FiLTer:STAGE3:PARAmeter? <p>,Min</p> <p>returns the minimum parameter value.</p> <p>SENSe<cnum>:IF:FiLTer:STAGE3:PARAmeter? <p>,Max</p> <p>returns the maximum parameter value.</p>
Examples	<pre>SENS:IF:FILT:STAGe3:PAR? "C" sense2:if:filter:stage3:parameter? "d",min</pre>
Return Type	Numeric
<u>Default</u>	<p>RECT: C = 1</p> <p>PWIN: C=1E6, P=10ms, D=50us, W=50us, R=7</p> <p>TUKEY: C=1</p>

SENSe<cnum>:IF:FiLTer:STAGE3:PCATalog?

(Read-only) Returns a list of the available parameters for the currently selected filter type.

Critical Note

Parameters

<cnum> Existing channel number. If unspecified, <cnum> is set to 1.

Examples

```
SENS:IF:FILT:STAGe3:PCAT?
sense2:if:filter:stage3:pcatalog?
```

Return Type

String

Default

Not Applicable

SENSe<cnum>:IF:FREQuency:AUTO <bool>

(Read-Write) Sets and returns the method for specifying the way the IF Frequency is determined.

Critical Note

Parameters

<cnum> Existing channel number. If unspecified, <cnum> is set to 1.

<bool> (Boolean)

ON (or **1**) - Automatic. PNA determines the setting for the IF frequency.

OFF (or **0**) - Manual. Use [SENS:IF:FREQ](#) to set the frequency.

Examples

```
SENS:IF:FREQ:AUTO 1
sense2:if:frequency:auto 0
```

Query Syntax SENSE<cnum>:IF:FREQuency:AUTO?

Return Type Boolean

Default ON

SENSe<cnum>:IF:FREQuency[:VALue] <value>

(Read-Write) Sets and returns the IF frequency for ALL receiver paths being used for the specified channel. To set this frequency, [SENS:IF:FREQ:AUTO](#) must be set to OFF (Manual).

Also returns the maximum and minimum allowable frequency settings.

Critical Note

Parameters

<cnum> Existing channel number. If unspecified, <cnum> is set to 1.

<value> (Numeric) Frequency value.

Examples

```
SENS:IF:FREQ
sense2:if:frequency
```

Query Syntax SENSE<cnum>:IF:FREQuency?

'returns the current frequency setting

SENSe<cnum>:IF:FREQuency? Max

'returns the maximum allowable frequency setting

SENSe<cnum>:IF:FREQuency? Min

'returns the minimum allowable frequency setting

Return Type Numeric


Default 9 MHz

Last Modified:

18-Jan-2007 MX New topic

Sense:Mixer Commands

Performs Mixer setup and configuration.

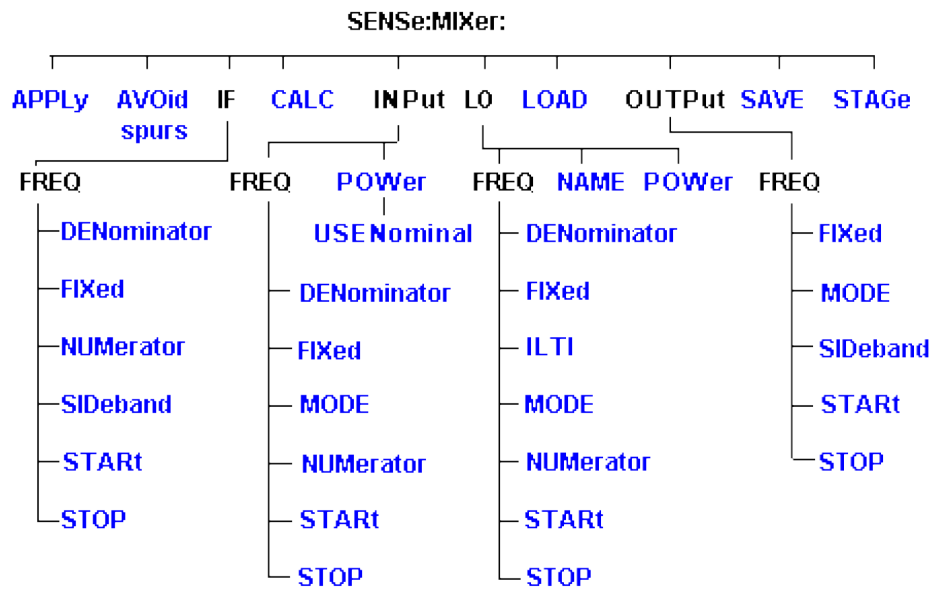

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about the Frequency Converter Application](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe<ch>:MIXer:APPLy

(Write only) Applies the mixer setup settings and turns the channel ON. (Performs the same function as the Apply button on the [mixer setup dialog box](#)).

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1

Examples `SENS:MIX:APPL`

Query Syntax Not Applicable

Default Not Applicable

SENSe<ch>:MIXer:AVOIdspurs <bool>

(Read Write) Sets and returns the state of the avoid spurs feature. [Learn more about avoid spurs.](#)

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <bool> Avoid spurs state. Choose from
- 0 - Avoid spurs OFF
 - 1 - Avoid spurs ON

Examples

```
SENS:MIX:AVO
sense2:mixer:avoidspurs 1
```

Query Syntax SENSe<ch>:MIXer:AVOIdspurs?

Return Type Boolean

Default 0 (OFF)

SENSe<ch>:MIXer:CALCulate <char>

(Write only) Calculates the Input, IF, or Output frequencies of the mixer setup and updates the channel settings.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1
- <char> Mixer port to be calculated. Choose from:

<char>	1st or only stage requires:	In addition, 2nd stage requires:
INPUT	<ul style="list-style-type: none">Output Start and Stop frequenciesLO frequencyOutput sideband (High or Low)	<ul style="list-style-type: none">IF Start and Stop frequencies2nd LO frequencyIF sideband (High or Low)
Both	NA	<ul style="list-style-type: none">IF Start and Stop frequenciesBoth LO frequencies
OUTPUT	<ul style="list-style-type: none">Input Start and Stop	<ul style="list-style-type: none">IF Start and Stop

	frequencies <ul style="list-style-type: none"> • LO frequency • Output sideband (High or Low) 	frequencies <ul style="list-style-type: none"> • 2nd LO frequency • IF sideband (High or Low)
LO_1	<ul style="list-style-type: none"> • Input Start and Stop frequencies • Output frequency • Output sideband (High or Low) 	<ul style="list-style-type: none"> • IF Start and Stop frequencies • 2nd LO frequency • IF sideband (High or Low)
LO_2	NA	<ul style="list-style-type: none"> • Input Start and stop frequencies • 1st LO start and stop frequencies • Output frequency • IF sideband(High or Low) • Output sideband(High or Low)

Examples `SENS:MIX:CALC Output`

Query Syntax Not Applicable

Default Not Applicable

SENSe<ch>:MIXer:LOAD <name>

(Write-only) Loads a previously-configured mixer attributes file (.mxr)

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<name> Path and file name (including .mxr extension) to load.

Examples `SENSe:MIXer:LOAD "C:\Program Files\Agilent\Network Analyzer\Documents\Mixer\MyMixer.mxr"`

Default Not Applicable

SENSe<ch>:MIXer:SAVE <name>

(Write-only) Saves the settings for the mixer/converter test setup to a mixer attributes file.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<name> Path and file name (including .mxr extension) to save.

Examples `SENSe:MIXer:SAVE "C:\Program Files\Agilent\Network Analyzer\Documents\Mixer\MyMixer.mxr"`

Default Not Applicable

SENSe<ch>:MIXer:STAGe <n>

(Read-Write) Number of IF stages of the mixer.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<n> Number of stages. Choose either 1 or 2

Examples `SENSe:MIX:STAG 2`
`SENSe:MIXer:STAGe 1`

Query Syntax SENSe<ch>:MIXer:STAGe?

Return Type Numeric

Default 1

SENSe<ch>:MIXer:IF:FREQuency:DENominator <num>

(Read-Write) Sets or returns the denominator value of the IF Fractional Multiplier.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<num> Denominator value.

Examples

```
SENSe:MIX:IF:FREQ:DEN 5
SENSe2:MIXer:IF:FREQ:DENominator 4
```

Query Syntax SENSe<ch>:MIXer:IF:FREQuency:DENominator?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:IF:FREQuency:FIXed <num>

(Read-Write) Sets or returns the fixed frequency of the IF..

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<num> Frequency.

Examples

```
SENSe:MIXer:IF:FREQ:FIXed 1e9
SENSe2:MIXer:IF:FREQ:FIXed 1000000000
```

Query Syntax SENSe<ch>:MIXer:IF:FREQuency:FIXed?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:IF:FREQuency:NUMerator <num>

(Read-Write) Sets or returns the numerator value of the IF Fractional Multiplier.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<num> Numerator value of the IF fractional multiplier

Examples

```
SENSe:MIX:IF:FREQ:NUM 4
SENSe2:MIXer:IF2:FREQ:NUMerator 3
```

Query Syntax SENSe<ch>:MIXer:IF:FREQuency:NUMerator?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:IF:FREQuency:SIDeband <char>

(Read-Write) Sets or returns the value of the IF sideband.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<char> Sideband value. Choose from

LOW - Low or Difference (-)

HIGH - High or Sum (+)

Examples

```
SENS:MIX:IF:FREQ:SIDE LOW
SENSe2:MIXer:IF:FREQ:SIDEband HIGH
```

Query Syntax SENSe<ch>:MIXer:IF:FREQuency:SIDeband?

Return Type Character

Default LOW

SENSe<ch>:MIXer:IF:FREQuency:START <num>

(Read-Write) Sets or returns the IF start frequency value of the mixer.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<num> IF Start Frequency value

Examples

```
SENS:MIX:IF:FREQ:STAR 1e9
SENSe2:MIXer:IF:FREQ:STARt 1000000000
```

Query Syntax SENSE<ch>:MIXer:IF:FREQuency:STARt?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:IF:FREQuency:STOP <num>

(Read-Write) Sets or returns the stop frequency value of the mixer IF frequency.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<num> IF Stop Frequency value

Examples

```
SENS:MIX:IF:FREQ:STOP 2e9
SENSe2:MIXer:IF:FREQ:STOP 2000000000
```

Query Syntax SENSE<ch>:MIXer:IF:FREQuency:STOP?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:INPut:FREQuency:DENominator <value>

(Read-Write) Sets or returns the denominator value of the Input Fractional Multiplier.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.
<value> Input denominator value.

Examples

```
SENSe:MIXer:INP:FREQ:DEN 5  
SENSe2:MIXer:INPut:FREQ:DENominator 4
```

Query Syntax SENSe<ch>:MIXer:INPut:FREQuency:DENominator?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:INPut:FREQuency:FIXed<value>

(Read-Write) Sets or returns the fixed frequency of the input.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.
<value> Input frequency.

Examples

```
SENSe:MIXer:INPut:FREQ:FIXed 1e9  
SENSe2:MIXer:INPut:FREQ:FIXed 1000000000
```

Query Syntax SENSe<ch>:MIXer:INPut:FREQuency:FIXed?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:INPut:FREQuency:MODE <char>

(Read-Write) Sets or returns the Input sweep mode.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<char> Input sweep mode. Choose either **FIXED** or **SWEPT**

Examples

```
SENSe:MIX:INP:FREQ:MODE FIXED
SENSe2:MIXer:INP:FREQ:MODE swept
```

Query Syntax SENSe<ch>:MIXer:INPut:FREQuency:MODE?

Return Type Character

Default Fixed

SENSe<ch>:MIXer:INPut:FREQuency:NUMerator <value>

(Read-Write) Sets or returns the numerator value of the Input Fractional Multiplier.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<value> Input numerator value.

Examples

```
SENSe:MIX:INP:FREQ:NUM 3
SENSe2:MIXer:INPut:FREQ:NUMerator 1
```

Query Syntax SENSe<ch>:MIXer:INPut:FREQ:NUMerator?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:INPut:FREQuency:STARt <value>

(Read-Write) Sets or returns the Input start frequency value of the mixer.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.
<value> Input Start frequency

Examples

```
SENS:MIX:INP:FREQ:STAR 1e9  
SENSe2:MIXer:INPut:FREQ:STARt 1000000000
```

Query Syntax SENSe<ch>:MIXer:INPut:FREQuency:STARt?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:INPut:FREQuency:STOP <value>

(Read-Write) Sets or returns the Input stop frequency value of the mixer.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.
<value> Input stop frequency

Examples

```
SENS:MIX:INP:FREQ:STOP 2e9  
SENSe2:MIXer:INPut:FREQ:STOP 2000000000
```

Query Syntax SENSe<ch>:MIXer:INPut:FREQuency:STOP?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:INPut:POWer <value>

(Read-Write) Sets or returns the value of the Input Power.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.
<value> Input power in dBm.

Examples `SENS:MIX:INP:POW 9`
`SENSe2:MIXer:INPut:POWer 5`

Query Syntax `SENSe<ch>:MIXer:INPut:POWer?`

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:INPut:POWer:USENominal <bool>

(Read-Write) Toggles the Nominal Incident Power setting ON and OFF. This setting is ONLY to be used with SMC measurements, not VMC. [Learn more about Nominal Incident Power.](#)

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.
<value> **(boolean)** - Nominal Incident Power State. Choose from:
True (1) - Turn nominal incident power ON
False (0) - Turn nominal incident power OFF

Examples `SENS:MIX:INP:POW:USEN 1`
`SENSe2:MIXer:INPut:POWer:USENominal false`

Query Syntax `SENSe<ch>:MIXer:INPut:POWer:USENominal?`

Return Type Boolean

Default False

SENSe<ch>:MIXer:LO<n>:FREQuency:DENominator <value>

(Read-Write) Sets or returns the denominator value of the LO Fractional Multiplier.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <n> LO stage number. Choose 1 or 2.
- <value> LO denominator.

Examples

```
SENS:MIX:LO:FREQ:DEN 5
SENSe2:MIXer:LO2:FREQ:DENominator 4
```

Query Syntax SENSE<ch>:MIXer:LO<n>:FREQuency:DENominator?

Return Type Numeric

Default 1

SENSe<ch>:MIXer:LO<n>:FREQuency:FIXed <value>

(Read-Write) Sets or returns the fixed frequency of the specified mixer LO.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <n> LO stage number. Choose 1 or 2
- <value> LO frequency.

Examples

```
SENS:MIX:LO:FREQ:FIX 1e9
SENSe2:MIXer:LO2:FREQ:FIXed 1000000000
```

Query Syntax SENSE<ch>:MIXer:LO<n>:FREQuency:FIXed?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:LO<n>:FREQuency:ILTI <bool>

(Read-Write) Specifies whether to use the Input frequency that is **greater than** the LO or **less than** the LO. To learn more, see the [mixer setup](#) dialog box help.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <n> LO stage number. Choose **1** or **2**
- <bool> **True (1)** - Use the Input that is Greater than the specified LO.
False (0) - Use the Input that is Less than the specified LO.

Examples

```
SENS:MIX:LO1:FREQ:ILTI 1
sense2:mixer:lo2:frequency:ilti true
```

Query Syntax SENSE<ch>:MIXer:LO<n>:FREQuency:ILTI?

Return Type Boolean

Default False

SENSe<ch>:MIXer:LO<n>:FREQuency:MODE <char>

(Read-Write) Sets or returns the LO sweep mode.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <n> LO stage number. Choose **1** or **2**
- <char> LO sweep mode. Choose either **FIXED** or **SWEPT**

Examples

```
SENS:MIX:LO:FREQ:MODE FIXED
SENSe2:MIXer:LO2:FREQ:MODE swept
```

Query Syntax SENSE<ch>:MIXer:LO<n>:FREQuency:MODE?

Return Type Character

Default Fixed

SENSe<ch>:MIXer:LO<n>:FREQuency:NUMerator <value>

(Read-Write) Sets or returns the numerator value of the LO Fractional Multiplier.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <n> LO stage number. Choose 1 or 2
- <value> LO Numerator.

Examples

```
SENS:MIX:LO:FREQ:NUM 5  
SENSe2:MIXer:LO2:FREQ:NUMerator 4
```

Query Syntax SENSe<ch>:MIXer:LO<n>:FREQuency:NUMerator?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:LO<n>:FREQuency:STARt <value>

(Read-Write) Sets or returns the LO start frequency value.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <n> LO stage number. Choose 1 or 2
- <value> LO Start Frequency in Hertz.

Examples

```
SENS:MIX:LO:FREQ:STAR 5E9
```

Query Syntax SENSe<ch>:MIXer:LO<n>:FREQuency:STARt?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:LO<n>:FREQuency:STOP <value>

(Read-Write) Sets or returns the LO stop frequency value.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <n> LO stage number. Choose 1 or 2
- <value> LO Stop Frequency in Hertz.

Examples `SENS:MIX:LO:FREQ:STOP 5E9`

Query Syntax `SENSe<ch>:MIXer:LO<n>:FREQuency:STOP?`

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:LO<n>:NAME <value>

(Read-Write) Sets or returns the name of the PNA internal source or external source to use as the LO in an FCA measurement.

See [Remotely Specifying a Source Port](#).

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <n> LO stage number. Choose 1 or 2.
- <value> **(string)** - LO Source name. Use [Source:CAT?](#) to return a list of valid source ports. An external source must be configured and selected to be valid. [Learn more about external source configuration](#).

Examples `SENS:MIX:LO:NAME "MySource"`

Query Syntax `SENSe<ch>:MIXer:LO<n>:NAME?`

Return Type String

Default Not Controlled

SENSe<ch>:MIXer:LO<n>:POWER <value>

(Read-Write) Sets or returns the value of the LO Power.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.
<n> LO stage. Choose **1** or **2**
<value> LO Power in dBm

Examples `SENS:MIX:LO:POW 9`

Query Syntax `SENSe<ch>:MIXer:LO<n>:POWer?`

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:OUTPut:FREQuency:FIXed <value>

(Read-Write) Sets or returns the output fixed frequency of the mixer.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.
<value> Output fixed frequency in Hertz.

Examples `SENS:MIX:OUTP:FREQ:FIX 5e9`

Query Syntax `SENSe<ch>:MIXer:OUTPut:FREQuency:FIXed?`

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:OUTPut:FREQuency:MODE <char>

(Read-Write) Sets or returns the Output sweep mode.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<char> Output sweep mode. Choose either **FIXED** or **SWEPT**

Examples

```
SENS:MIX:OUT:FREQ:MODE FIXED
SENSe2:MIXer:OUTPut:FREQuency:MODE swept
```

Query Syntax SENSE<ch>:MIXer:OUTPut:FREQuency:MODE?

Return Type Character

Default Fixed

SENSe<ch>:MIXer:OUTPut:FREQuency:SIDeband <value>

(Read-Write) Sets or returns the value of the output sideband.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<value> **Boolean** Sideband value. Choose from
LOW - Low or Difference (-)
HIGH - High or Sum (+)

Examples

```
SENS:MIX:OUTP:FREQ:SIDE LOW
SENSe2:MIXer:OUTPut:FREQ:SIDeband HIGH
```

Query Syntax SENSE<ch>:MIXer:OUTPut:FREQuency:SIDeband?

Return Type Character

Default LOW

SENSe<ch>:MIXer:OUTPut:FREQuency:STARt <value>

(Read-Write) Sets or returns the Output start frequency of the mixer.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.
<value> Output start frequency

Examples

```
SENS:MIX:OUTP:FREQ:STAR 1e9  
SENSe2:MIXer:OUTPut:FREQ:START 1000000000
```

Query Syntax SENSe<ch>:MIXer:OUTPut:FREQuency:STARt?

Return Type Numeric

Default Not Applicable

SENSe<ch>:MIXer:OUTPut:FREQuency:STOP <value>

(Read-Write) Sets or returns the Output stop frequency of the mixer.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.
<value> Output stop frequency

Examples

```
SENS:MIX:OUTP:FREQ:STOP 1e9  
SENSe2:MIXer:OUTPut:FREQ:STOP 1000000000
```

Query Syntax SENSe<ch>:MIXer:OUTPut:FREQuency:STOP?

Return Type Numeric


Default Not Applicable

Last Modified:

23-Jul-2007 Clarified LO Name command

Sense:Multiplexer Commands

Controls External Test Sets (N44xx, E5091A, and Special Opts).

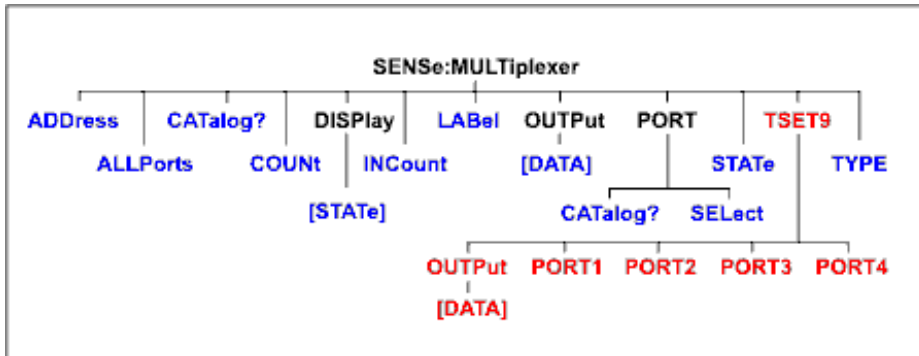

Click on a [blue](#) keyword to view the command details.

Red commands are [superseded](#).

See Also

- [See an example program](#) using these commands.
- [Learn about External Test Set Control](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe:MULTiplexer<id>:ADdReSS <address>

(Read-Write) Sets and returns the address for the external test set at the specified ID. This command should be immediately preceded by the [SENSe:MULT:TYPE](#) command.

Parameters

<id> Id of the external test set. If unspecified, Id is assumed to be 1. Must be previously set by the [SENSe:MULT:TYPE](#) command.

<address> Integer The test set address.

- For a GPIB test set (N44xx and some specials), this is the GPIB address.
- For a test set I/O test set (some specials), it is the position of the test set in the chain (starting at 0).
- For USB test sets (E5091A), the address is set by DIP switches on the rear panel.

Examples `SENS:MULT1:TYPE "Z5623A_K66" ' use K66 test set, and reference it through ID 1`
`SENS:MULT1:ADDR 0 ' first test set in sequence`
`' All subsequent commands using SENS:MULT1 will refer to this test set`

Query Syntax `SENSe:MULTiplexer<id>:ADDRes?`

Return Type Numeric

Default Not Applicable

SENSe<cnum>:MULTiplexer<id>:ALLPorts <string>

(Read-Write) Sets or gets the port selections for all available ports on the specified channel.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1.
- <id> Id of the external test set. If unspecified, Id is assumed to be 1. Must be previously set by the [SENSe:MULT:TYPE](#) command.
- <string> Comma-separated list of port selections, one for each port. Each port selection must correspond to one of the values returned by [SENS:MULT:PORT:CAT?](#).
Do NOT include + and - .

Examples `' for channel 5 and test set 1, set port 1 to T1,`
`' port 2 to A, port 3 to R2+, port 4 to R3-.`
`SENS5:MULT1:ALLP "T1,A,R2,R3 "`

Query Syntax `SENSe<cnum>:MULTiplexer<id>:ALLPorts?`

Return Type STRING

Default Not Applicable

SENSe:MULTiplexer:CATalog?

(Read-Only) Returns a comma-separated list of the external test sets models that are currently supported. Choose one of these items to send [SENS:MULT1:TYPE](#).

Examples `SENS:MULT:CAT?`

Return Type String

Default Not Applicable

SENSe:MULTiplexer<id>:COUNt?

(Read-Only) Returns the total number of ports of the specified test set.

Returns 0 if no test set is connected (GPIB test sets only).

Parameters

<id> Id of the external test set. If unspecified, Id is assumed to be 1. Must be previously set by the [SENSe:MULT:TYPE](#) command.

Examples

```
SENS:MULT1:COUN?  
sense:multiplexer2:count?
```

Return Type Numeric

Default Not Applicable

SENSe:MULTiplexer<id>:DISPlay[:STATe] <bool>

(Read-Write) Turns ON and OFF the display of the test set control status bar. This status bar indicates the test set that is being controlled and the current port mappings. This setting is turned ON automatically when the test set is enabled.

Parameters

<id> Id of the external test set. If unspecified, Id is assumed to be 1. Must be previously set by the [SENSe:MULT:TYPE](#) command.

<bool> ON(1) Turns ON the display.
OFF (0) Turns OFF the display.

Examples

```
SENS:MULT1:DISP 1  
sense:multiplexer2:display:state on
```

Query Syntax SENSe:MULTiplexer<id>:DISPlay[:STATe]?

Return Type Boolean

Default OFF (0)

SENSe:MULTiplexer<id>:INCount?

(Read-Only) Returns the number of input ports for the specified test set.

- For test sets such as the E5091A that do NOT use jumper cables to route the stimulus and response signals, this command returns the number of test set ports that can be connected to the PNA.
- For test sets that DO use jumper cables to route the stimulus and response signals, such as the N44xx, the return value is not valid.

Parameters

<id> Id of the external test set. If unspecified, Id is assumed to be 1. Must be previously set by the [SENSe:MULT:TYPE](#) command.

Examples

```
SENS3:MULT1:INC? ' returns the number of input ports for test set 1 on channel 3
```

Return Type Numeric

Default Not Applicable

SENSe<cnum>:MULTiplexer:LABel <string>

(Read-Write) Sets and returns the display label for the testset on the specified channel. The label appears in a status bar at the bottom of the PNA display when [SENS:MULT:DISP](#) is set to TRUE.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1.

<string> Display label text.

Examples

```
SENS3:MULT:LAB 'High-power output'
```

Query Syntax SENSe<cnum>:MULTiplexer:LABel?

Return Type String

Default Not Applicable

SENSe<cnum>:MULTiplexer<id>:OUTPut[:DATA] <num>

(Read-Write) Sets or returns the control line value for the specified channel.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1.

<id> Id of the external test set. If unspecified, Id is assumed to be 1. Must be previously set by the [SENSe:MULT:TYPE](#) command.

<numr> An integer specifying the decimal value of the control line. Values are obtained by adding weights from the following table that correspond to individual lines.

Line	Weight
1	1
2	2
3	4
4	8
5	16
6	32
7	64
8	128

Note:

- The E5091A interprets SENS:MULT1:OUTP 0 as all lines OFF.
- All "Z" and "H" series test sets interpret SENS:MULT1:OUTP 0 as all lines ON.

Refer to your test set documentation for setting control line values.

Examples

```
SENS3:MULT1:OUTP 48 'For Z5623A K64, lines 5 and 6 are OFF; all other lines are set to ON state.
```

Query Syntax SENSE<num>:MULTiplexer<id>:OUTPut[:DATA]?

Return Type Numeric

Default Not Applicable

SENSe:MULTiplexer<id>:PORT<pnum>CATalog?

(Read-Only) Returns a comma-separated list of valid port selections for the specified port.

Parameters

<id> Id of the external test set. If unspecified, Id is assumed to be 1. Must be previously set by the [SENSe:MULT:TYPE](#) command.

<pnum> Integer - Input port number for which to return valid Output port selections. Read the number of input ports for the test set using [SENS:MULT:INCount?](#)

Examples

```
SENS:MULT1:PORT3:CAT? ' returns the valid port selections for port 3
```

Return Type String

Default Not Applicable

SENSe<cnum>:MULTiplexer<id>:PORT<logi>SElect <phys>

(Write-Only) Sets and returns a port mapping for a single port. If this command creates a conflict with an existing port, the PNA will resolve the conflict.

Note: This command is currently not supported for the Z5623AK44.

Parameters

<cnum> Channel number of the measurement. If unspecified, value is set to 1.

<id> Id of the external test set. If unspecified, Id is assumed to be 1. Must be previously set by the [SENSe:MULT:TYPE](#) command.

<logi> Integer - Logical port number.

<string> String - Physical port number.

Examples

```
SENS:MULT1:PORT3:SEL "4" 'sets logical port 3 to physical port 4.
```

Return Type String

Default Not Applicable

SENSe:MULTiplexer<id>:STATe <bool>

(Read-Write) Enables and disables (ON/OFF) the port mapping and control line output of the specified test set.

If the specified test set is not connected or not ON, then setting State ON will report an error. All other properties can be set when the test set is not connected.

When this command is set to ON, then the display of the test set status bar ([SENS:MULT:DISP](#)) is also set to ON.

Parameters

<id> Id of the external test set. If unspecified, Id is assumed to be 1. Must be previously set by the [SENSe:MULT:TYPE](#) command.

<bool> ON(1) Enables test set control.
OFF (0) Disables test set control.

Examples

```
SENS:MULT1:STAT 1
sense2:multiplexer2:state on
```

Query Syntax SENSE<cnum>:MULTiplexer<id>:STATe?

Return Type Boolean

Default OFF (0)

SENSe<cnum>:MULTiplexer<id>:TSET9:OUTPut[:DATA] <data> **Superseded**

Note: This command is replaced with [SENS:MULT:OUTP](#)

(Read-Write) Sets the control lines of the specified E5091A. Control lines, provided through a E5091A front panel connector, are used to control external equipment such as a part handler. See your E5091A documentation to learn more about control lines.

Parameters

<cnum> Channel number of the measurement. If unspecified, value is set to 1.

<id> Id of the E5091A test set. Choose from 1 or 2. [Learn how to set ID value.](#)

<data> Data value used to set control lines. Values are obtained by adding weights from the following table that correspond to individual lines. HIGH =1; LOW=0.

Line	Weight
1	1
2	2
3	4
4	8
5	16
6	32
7	64
8	128

0 - Sets all lines low

255 - Sets all lines high

Examples

```
'The following sets line 3 and 4 high. All other lines low.
SENS:MULT1:TSET9:OUTP 12
```

Query Syntax SENSE<num>:MULTiplexer<id>:TSET9:OUTPut[:DATA]?

Return Type Numeric

Default 0

SENSe<num>:MULTiplexer<id>:TSET9:PORT1 <char> **Superseded**

Note: This command is replaced with [SENS:MULT:ALLPorts](#) which sets ALL ports to the specified outputs.

(Read-Write) Switches Port 1 of the specified E5091A to one of the available outputs.

Parameters

<num> Any existing channel number; if unspecified, value is set to 1.

<id> Id of the E5091A test set. Choose from 1 or 2. [Learn how to set ID value.](#)

<char> Output port to be switched to. Choose from:

A

T1 - (If Port 2 already is connected to T1, then Port 2 will be switched to T2.)

Examples

```
SENS:MULT1:TSET9:PORT1 A
```

Query Syntax SENSE<num>:MULTiplexer<id>:TSET9:PORT1?

Return Type Character

Default A

SENSe<num>:MULTiplexer<id>:TSET9:PORT2 <char> **Superseded**

Note: This command is replaced with [SENS:MULT:ALLPorts](#) which sets ALL ports to the specified outputs.

(Read-Write) Switches Port 2 of the specified E5091A to one of the available outputs.

Parameters

- <num> Any existing channel number; if unspecified, value is set to 1.
- <id> Id of the E5091A test set. Choose from 1 or 2. [Learn how to set ID value.](#)
- <char> Output port to be switched to. Choose from:
- T1** - If Port 1 already is connected to T1, then Port 1 will be switched to A.
- T2**

Examples `SENS:MULT1:TSET9:PORT2 T2`

Query Syntax SENSE<num>:MULTiplexer<id>:TSET9:PORT2?

Return Type Character

Default T1

SENSe<num>:MULTiplexer<id>:TSET9:PORT3 <char> **Superseded**

Note: This command is replaced with [SENS:MULT:ALLPorts](#) which sets ALL ports to the specified outputs.

(Read-Write) Switches Port 3 of the specified E5091A to one of the available outputs.

Parameters

- <num> Any existing channel number; if unspecified, value is set to 1.
- <id> Id of the E5091A test set. Choose from 1 or 2. [Learn how to set ID value.](#)
- <char> Output port to be switched to. Choose from:
- R1** (R1+)
- R2** (R2+)
- R3** (R3+) If option 007 (7port), R2 is selected.

Examples `SENS:MULT1:TSET9:PORT3 R2`

Query Syntax `SENSe<cnum>:MULTiplexer<id>:TSET9:PORT3?`

Return Type Character

Default R1

SENSe<cnum>:MULTiplexer<id>:TSET9:PORT4 <char> Superseded

Note: This command is replaced with [SENS:MULT:ALLPorts](#) which sets ALL ports to the specified outputs.

(Read-Write) Switches Port 4 of the specified E5091A to one of the available outputs.

Parameters

<cnum> Any existing channel number; if unspecified, value is set to 1.

<id> Id of the E5091A test set. Choose from 1 or 2. [Learn how to set ID value.](#)

<char> Output port to be switched to. Choose from:

R1 (R1-)

R2 (R2-)

R3 (R3-) If option 007 (7port), R2 is selected.

Examples `SENS:MULT1:TSET9:PORT4 R2`

Query Syntax `SENSe<cnum>:MULTiplexer<id>:TSET9:PORT4?`

Return Type Character

Default R1

SENSe:MULTiplexer<id>:TYPe <name>

(Read-Write) Loads a configuration file for the specified type of external test set.

This command should be immediately followed by the [SENSe:MULT:ADDReSS](#) command.

Parameters

<name> String The name of the type of test set. Must be one of the items in the list returned by the [SENSe:MULT:CATalog?](#) query.

<id> Id of the external test set. Set by this command. Use consecutive values starting at 1.

Examples

```
SENS:MULT1:TYPE "Z5623AK66" ' use K66 test set, and reference  
it through ID 1
```

Query Syntax SENSE:MULTiplexer<id>:TYPE?

Return Type String

Default Not Applicable

 
Last Modified:

17-Aug-2007 Modified Data command for differences in active high and low

Sense:Offset Commands **Superseded**

Note: These commands are replaced by the [Sense:FOM](#) commands which include the features of the new FOM dialog. Although these old commands will continue to work, they can NOT be mixed with the new commands.

Sets the offset frequency functions, causing the stimulus and response frequencies to be different.



Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Frequency Offset](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe<num>:OFFSet:CW <bool>

(Read-Write) Turns stimulus CW Override mode ON or OFF. Use this setting to establish a fixed (CW) stimulus frequency while measuring the Response over a swept frequency range.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <bool> ON (or 1) - turns CW override ON.
OFF (or 0) - turns CW overide OFF.

Examples

```
SENS:OFFS:CW ON
sense2:offset:cw off
```

Query Syntax SENSE<num>:OFFSet:CW?

Return Type Boolean

Default OFF

SENSe<num>:OFFSet:DIVisor <num>

(Read-Write) Specifies (along with the multiplier) the value to multiply by the stimulus.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<num> Divisor value. Range is 1 to 1000

Examples

```
SENS:OFFS:DIV 3
sense2:offset:divisor 2
```

Query Syntax SENSE<cnum>:OFFSet:DIVisor?

Return Type Numeric

Default 1

SENSe<cnum>:OFFSet:MULTiplier <num>

(Read-Write) Specifies (along with the divisor) the value to multiply by the stimulus.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<num> Multiplier value. Range is +/- 1000. Negative multipliers cause the stimulus to sweep in decreasing direction. For mixer measurements, this would be for setups requiring the RF frequency to be less than LO frequency

Examples

```
SENS:OFFS:MULT 2
sense2:offset:multiplier 4
```

Query Syntax SENSE<cnum>:OFFSet:MULTiplier?

Return Type Numeric

Default 1

SENSe<cnum>:OFFSet:OFFSet <num>

(Read-Write) Specifies an absolute offset frequency in Hz. For mixer measurements, this would be the LO frequency.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <num> Offset frequency. Range is +/- 1000 GHz. Offsets can be positive or negative

Examples

```
SENS:OFFS:OFFS 1GHz
sense2:offset:offset 1e9
```

Query Syntax SENSE<num>:OFFSet:OFFSet?

Return Type Numeric

Default 0 Hz

SENSe<num>:OFFSet:STARt?

(Read-Only) Returns the response start frequency

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1

Examples

```
SENS:OFFS:STAR?
sense2:offset:start?
```

Return Type Numeric

Default Not applicable

SENSe<num>:OFFSet:[STATe] <bool>

(Read-Write) Enables Frequency Offset Mode on ALL measurements that are present on the active channel. This immediately causes the source and receiver to tune to separate frequencies. The receiver frequencies are specified with the other SENS:OFFSet commands. To make the stimulus settings use the [SENS:FREQ](#) commands.

Tip: To avoid unnecessary errors, first make other offset frequency settings, then set Frequency Offset ON.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<bool> ON (or 1) - turns Frequency Offset ON.
OFF (or 0) - turns Frequency Offset OFF.

Examples

```
SENS:OFFS ON  
sense2:offset:state off
```

Query Syntax SENSE<cnum>:OFFSet:[STATe]?

Return Type Boolean

Default OFF (0)

SENSe<cnum>:OFFSet:STOP?

(Read-Only) Returns the response stop frequency.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

Examples

```
SENS:OFFS:STOP  
sense2:offset:stop
```

Return Type Numeric


Default Not applicable

Last Modified:

23-Jul-2007 Superseded Note.

Sense:Path:Configuration Commands

Controls the path configuration settings.

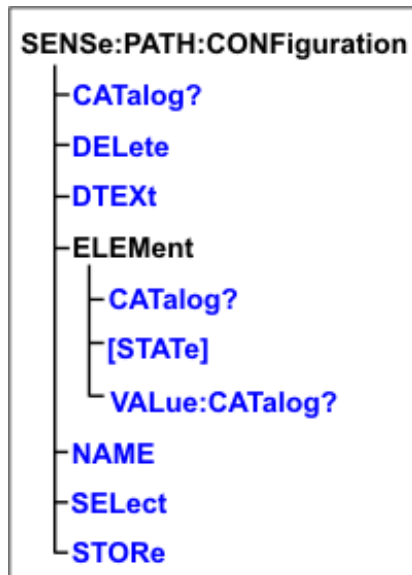

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Path Configuration](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe:PATH:CONFiguration:CATalog?

(Read-only) Returns a list of configuration names stored in the PNA.

Examples `SENS:PATH:CONF:CAT?`

Return Type Comma-separated list of double-quoted strings

Default Not Applicable

SENSe:PATH:CONFiguration:DELeTe <string>

(Write-only) Deletes the specified configuration name from the PNA. The factory configurations cannot be deleted. This is the only method of distinguishing a factory configuration from a user-named configuration.

Parameters

<string> Configuration name to be deleted.

Examples `SENS:PATH:CONF:DEL "MyMixer"`

Return Type Not Applicable

Default Not Applicable

SENSe:PATH:CONFfiguration:DTEXT <string>

(Read-Write) Write and read descriptive text associated with the configuration. This text is displayed in the path configuration dialog. Text is generally used to describe external connections that must be made manually to complete the configuration setup.

Parameters

<string> Descriptive text enclosed in quotes. Double quotes are not allowed within the descriptive text.

Examples `SENS:PATH:CONF:DTEX "Connect J1 jumper on the rear panel."`

Query Syntax `SENSe<ch>:PATH:CONFfiguration:DTEXT?`

Return Type String

Default Not Applicable

SENSe<ch>:PATH:CONFfiguration:ELEMent:CATalog?

(Read-only) Returns the names of configurable elements as a comma-delimited list of strings.

See a [list of configurable elements and settings](#) for various PNA models.

Parameters

<ch> Any existing channel number; if unspecified, value is set to 1.

Examples

```
SENS:PATH:CONF:ELEM:CAT?  
  
'returns  
"Combiner", "Src1", "Src2"
```

Default Not Applicable

SENSe<ch>:PATH:CONFIguration:ELEMent[:STATe] <elem>, <setting>

(Read-Write) Write or read the setting of a specified element in the current configuration.

See a [list of configurable elements and settings](#) for various PNA models.

Parameters

<ch> Any existing channel number; if unspecified, value is set to 1.

<elem> Name of the element for which a setting is to be made.

<setting> Element setting. Use [SENS:PATH:CONF:ELEM:VAL:CAT?](#) to return a list of valid settings for the specified element.

Examples

```
SENS:PATH:CONF:ELEM "Combiner", "Normal"
```

Query Syntax

```
SENSe<ch>:PATH:CONFIguration:ELEMent? "Combiner"  
Returns the current state of the Combiner element.
```

Return Type

String

Default Not applicable

SENSe<ch>:PATH:CONFIguration:ELEMent:VALue:CATalog? <element>

(Read-only) Returns the list of valid settings that can be used with the specified element.

See a [list of configurable elements and settings](#) for various PNA models.

Parameters

<ch> Any existing channel number; if unspecified, value is set to 1.

<element> String. Element name for which to return valid settings.

Examples

```
SENS:PATH:CONF:ELEM:VAL:CAT? "Combiner"  
'returns "Normal", "Reversed"
```

Default Not Applicable

SENSe<ch>:PATH:CONFiguration:NAME?

(Read-only) Returns the name of the current configuration only if NO individual element settings had been changed since selecting or storing a configuration. When element settings change, the path configuration name is cleared.

Parameters

<ch> Any existing channel number; if unspecified, value is set to 1.

Examples

```
SENS:PATH:CONF:NAME?  
'returns "Default"
```

Return Type String

Default Not Applicable

SENSe<ch>:PATH:CONFiguration:SElect <string>

(Write only) Loads the named configuration onto the specified channel.

Use [SENS:PATH:CONF:CAT?](#) to return the configuration names that are stored on the PNA.

Parameters

- <ch> Any existing channel number; if unspecified, value is set to 1.
- <string> Configuration name. "Default" is the default factory configuration.

Examples

```
SENS:PATH:CONF:SEL 'default'  
sense2:path:configuration:select "MyMixer"
```

Query Syntax Not Applicable

Default "Default"

SENSe<ch>:PATH:CONFIguration:STORe <name>

(Write only) Saves the path configuration currently associated with channel <ch> to the specified configuration name.

Parameters

- <ch> Any existing channel number; if unspecified, value is set to 1.
- <name> String. Configuration name. Factory configurations can NOT be overwritten. Specifying the name of a pre-defined factory configuration will result in an error.

Examples

```
SENS:PATH:CONF:STOR "MyMixer"
```

Query Syntax Not Applicable

Default Not Applicable

Last Modified:

14-Dec-6 MX New Topic

Sense:Power Command

[Learn about Receiver Attenuation](#)

SENSe<cnum>:POWer:ATTenuation <recvr>,<num>

(Read-Write) Sets the attenuation level for the specified receiver.

Note: Attenuation cannot be set with Sweep Type set to Power

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<recvr> Receiver to get attenuation. Choose from:

ARECeiver - receiver A

BRECeiver - receiver B

Receiver attenuation can not be set using [logical receiver notation](#).

<num> Choose from:

0 to **35** dB - in 5 dB steps

If a number other than these is entered, the analyzer will select the next lower valid value. For example, if 19.9 is entered for <num> the analyzer will switch in 15 dB attenuation.

Examples

```
SENS:POW:ATT AREC,10  
sense2:power:attenuation breceiver,30
```


Query Syntax SENSe<cnum>:POWer:ATTenuation? <rec>

Return Type Numeric

Default 0


Sense:Pulse Commands

Configures the 5 pulse generators in the PNA-X.

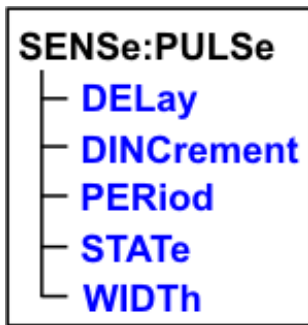

Click on a [blue](#) keyword to view the command details.

Pulse Definitions

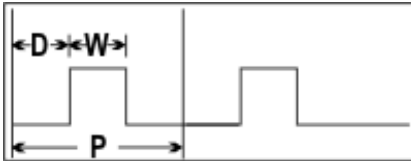

- D = Delay; the time before each pulse begins
- W = Width; the time the pulse is ON
- P = Period; one complete pulse cycle
- Duty Cycle = W/P

Important: If $D + W$ is greater than P , then undefined PNA behavior results. There is NO error message or warning.

See Also

- [PNA-X IF Path Block diagram](#)
- [SENS:IF configuration commands](#)
- [Example Programs](#)
- [PNA-X Pulse Application](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe<ch>:PULSe<n>:DELay <value>

(Read-Write) Sets the pulse delay. The amount of time before a new pulse begins.

[See Pulse Definition diagram.](#)

Parameters

<ch> Any existing channel number; if unspecified, value is set to 1.

<n> Pulse generator number. Choose from 0 to 4.

0 is the generator that pulses the ADC.

<value> Delay value in seconds. Choose a value from about 33ns to about 70 seconds.

Examples

```
SENS:PULS:DEL .5
```

Query Syntax SENSe<ch>:PULSe<n>:DELay?

Return Type Numeric

Default 0


SENSe<ch>:PULSe<n>:DINCrement <value>

(Read-Write) Sets the pulse delay increment. The delay increments with each pulse by the <value> amount.

For example, in this diagram the delay starts as 1. On the second pulse, delay=2. On the third pulse, delay=3.

Important: If **D + W** is greater than **P**, then undefined PNA behavior results. There is NO error message or warning. Delay includes the incremented value.

This is useful for pulse profiling.

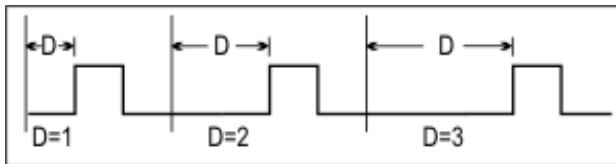

[See Pulse Definition diagram.](#)

Parameters

<ch> Any existing channel number; if unspecified, value is set to 1.

<n> Pulse generator number. Choose from 0 to 4.

0 is the generator that pulses the ADC.

<value> Delay increment value in seconds.

Examples `SENS:PULS:DINC .5`

Query Syntax `SENSe<ch>:PULSe<n>:DINCrement?`

Return Type Numeric

Default 0

SENSe<ch>:PULSe:PERiod <value>

(Read-Write) Sets the pulse-period (1/PRF) for ALL pulse generators.

The resolution of the period is 16.667nS.

[See Pulse Definition diagram.](#)

Parameters

<ch> Any existing channel number; if unspecified, value is set to 1.

<value> Pulse period in seconds. Choose a value from about 33ns to about 70 seconds.

Examples `SENS:PULS:PERiod .5`

Query Syntax `SENSe<ch>:PULSe:PERiod?`

Return Type Numeric

Default 1e-3 sec

SENSe<ch>:PULSe<n>:STATe <bool>

(Read-Write) Turns the pulse output ON and OFF.

Parameters

<ch> Any existing channel number; if unspecified, value is set to 1.

<n> Pulse generator number. Choose from 0 to 4.

0 is the generator that pulses the ADC.

<bool> ON (or 1) - turns pulse output ON.

OFF (or 0) - turns pulse output OFF.

Examples

```
SENS:PULS:STAT 1
```

Query Syntax SENSE<ch>:PULSe:STAtE?

Return Type Boolean

Default OFF

SENSe<ch>:PULSe<n>:WIDTh <value>

(Read-Write) Sets the pulse width. The amount of time that the pulse is ON.

[See Pulse Definition diagram.](#)

Parameters

<ch> Any existing channel number; if unspecified, value is set to 1.

<n> Pulse generator number. Choose from 0 to 4.

0 is the generator that pulses the ADC.

<value> Pulse width in seconds. Choose a value from about 33ns to about 70 seconds.

Examples

```
SENS:PULS:WIDTh .5
```

Query Syntax SENSe<ch>:PULSe<n>:WIDTh?

Return Type Numeric

Default 1e-4 sec

Last Modified:

2-Jan-2007 MX New topic

Sense:Roscillator Command

[Learn about the Reference Osc.](#)

SENSe:ROSCillator:SOURce?

(Read-only) Applying a signal to the Reference Oscillator connector automatically sets the Reference Oscillator to EXTernal. This command allows you to check that it worked.

EXT is returned when a signal is present at the **Reference Oscillator** connector.

INT is returned when **NO** signal is present at the **Reference Oscillator** connector.

Examples


```
SENS:ROSC:SOUR?  
sense:roscillator:source?
```

Return Type Character

Default Not applicable

Sense:Segment Commands

Defines the segment sweep settings. Enable segment sweep with [SENS:SWE:TYPE SEGment](#).

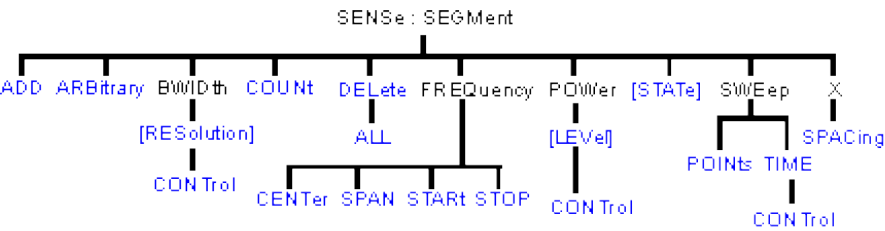

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Segment Sweep](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SENSe<cnum>:SEGMENT<snum>:ADD

(Write-only) Adds a segment.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <snum> Segment number to add. If unspecified, value is set to 1. Segment numbers must be sequential. If a new number is added where one currently exists, the existing segment and those following are incremented by one.

Examples Two Segments exist (1 and 2). The following command will add a new segment (1). The existing (1 and 2) will become (2 and 3) respectively.

```
SENSe:SEGM1:ADD
sense2:segment1:add
```

Query Syntax Not applicable. Use Sense:Segment:Count to determine the number of segments in a trace.

Default Not Applicable

SENSe<cnum>:SEGMENT:ARBITRARY <ON | OFF>

(Read-Write) Enables you to setup a segment sweep with arbitrary frequencies. The start and stop frequencies of each segment can overlap other segments. Also, each segment can have a start frequency that is greater than its stop frequency which causes a reverse sweep over that segment. Learn more about [Arbitrary Segment Sweep](#).

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1.

<ON | OFF> **ON** (or 1) - Allows the setup of arbitrary segment sweep.
OFF (or 0) - Prevents the setup of arbitrary segment sweep.

Examples

```
SENS:SEGM:ARB ON
sense2:segment:arbitrary off
```

Query Syntax SENSE<cnum>:SEGMent:ARBitrary?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

SENSe<cnum>:SEGMent<snum>:BWIDth[:RESolution] <num>

(Read-Write) Sets the IF Bandwidth for the specified segment. First set SENS:SEGM:BWIDth:CONTrol ON. All subsequent segments that are added assume the new IF Bandwidth value.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<snum> Segment number to modify. Choose any existing segment number.

<num> IF Bandwidth in Hz. The list of valid IF Bandwidths is different depending on the PNA model. ([Click to see the lists.](#)) If an invalid number is specified, the analyzer will round up to the closest valid number.

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
SENS:SEGM:BWID 1KHZ
sense2:segment2:bwidth:resolution max
```

Query Syntax SENSe<cnum>:SEGMent<snum>:BWIDth[:RESolution]?

Return Type Numeric

Default See [Preset IFBW](#) for your PNA model.

SENSe<cnum>:SEGMent:BWIDth[:RESolution]:CONTrol <ON | OFF>

(Read-Write) Specifies whether the IF Bandwidth resolution can be set independently for each segment.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<ON | OFF> **ON** (or 1) - turns Bandwidth control ON. Bandwidth can be set for each segment
OFF (or 0) - turns Bandwidth control OFF. Use channel bandwidth setting

Examples `SENS:SEGM:BWID:CONT ON`
`sense2:segment:bandwidth:control off`

Query Syntax SENSE<num>:SEGMENT:BWIDth[:RESolution]:CONTrol?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

SENSe<num>:SEGMENT:COUNT?

(Read-only) Queries the number of segments that exist in the specified channel.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

Examples `SENS:SEGM:COUNT?`
`sense2:segment:count?`

Return Type Numeric

Default 1 segment

SENSe<num>:SEGMENT<snum>:DELeTE

(Write-only) Deletes the specified sweep segment. When ALL segments are deleted, Sweep Mode ([SENS:SWE:MODE](#)) is automatically set to Linear because there are no segments to sweep.

<num> Any existing channel number. If unspecified, value is set to 1

<snum> Number of the segment to delete. If unspecified, value is set to 1

Examples `SENS:SEGM:DEL`
`sense2:segment2:delete`

Query Syntax Not applicable

Default Not Applicable

SENSe<cnum>:SEGMENT:DELeTE:ALL

(Write-only) Deletes all sweep segments. When this command is executed, Sweep Mode ([SENS:SWE:MODE](#)) is automatically set to Linear because there are no segments to sweep.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

Examples

```
SENS:SEGM:DEL:ALL
sense2:segment:delete:all
```

Query Syntax Not applicable

Default Not Applicable

SENSe<cnum>:SEGMENT<snum>:FREQUENCY:CENTer <num>

(Read-Write) Sets the Center Frequency for the specified segment. The Frequency Span of the segment remains the same. The Start and Stop Frequencies change accordingly.

Note: All previous segment's Start and Stop Frequencies that are larger than the new Start Frequency are changed to the new Start Frequency. All following segment's start and stop frequencies that are smaller than the new Stop Frequency are changed to the new Stop Frequency.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<snum> Segment number to modify. Choose any existing segment number.

<num> Center Frequency in Hz. Choose any number between the **minimum** and **maximum** frequency of the analyzer.

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
SENS:SEGM:FREQ:CENt 1MHZ
sense2:segment2:frequency:center 1e9
```

Query Syntax SENSe<cnum>:SEGMENT<snum>:FREQUENCY:CENTer?

Return Type Numeric

Default Stop Frequency of the previous segment. If first segment, start frequency of the analyzer.

SENSe<cnum>:SEGMENT<snum>:FREQUENCY:SPAN <num>

(Read-Write) Sets the Frequency Span for the specified segment. The center frequency of the segment remains the same. The start and stop frequencies change accordingly.

Note: All previous segment's Start and Stop Frequencies that are larger than the new Start Frequency are changed to the new Start Frequency. All following segment's start and stop frequencies that are smaller than the new Stop Frequency are changed to the new Stop Frequency.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <snum> Segment number to modify. Choose any existing segment number.
- <num> Frequency Span in Hz. Choose any number between the **minimum** and **maximum** frequency of the analyzer.

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
SENS:SEGM:FREQ:SPAN 1MHZ
sense2:segment2:frequency:span max
```

Query Syntax SENSE<num>:SEGMent<snum>:FREQuency:SPAN?

Return Type Numeric

Default If first segment, frequency span of the analyzer. Otherwise 0.

SENSe<num>:SEGMent<snum>:FREQuency:START <num>

(Read-Write) Sets the Start Frequency for the specified sweep segment.

Notes

All other segment Start and Stop Frequency values that are larger than this frequency are changed to this frequency.

To return the start and stop frequency of the entire sweep (all segments), Use [SENS:FREQ:START?](#) and [SENS:FREQ:STOP?](#)

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <snum> Segment number to modify. Choose any existing segment number.
- <num> Start Frequency in Hz. Choose any number between the **minimum** and **maximum** frequency of the analyzer.

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples	<code>SENS:SEGM:FREQ:STAR 1MHZ</code> <code>sense2:segment2:frequency:start minimum</code>
----------	---

Query Syntax	<code>SENSe<cnum>:SEGMent<snum>:FREQuency:STARt?</code>
--------------	---

Return Type	Numeric
-------------	---------

Default	Stop Frequency of the previous segment. If first segment, start frequency of the analyzer.
----------------	--

SENSe<cnum>:SEGMent<snum>:FREQuency:STOP <num>

(Read-Write) Sets the Stop Frequency for the specified sweep segment.

Notes

All other segment Start and Stop Frequency values that are larger than this frequency are changed to this frequency.

To return the start and stop frequency of the entire sweep (all segments), Use [SENS:FREQ:STARt?](#) and [SENS:FREQ:STOP?](#)

Parameters

- | | |
|--------|--|
| <cnum> | Any existing channel number. If unspecified, value is set to 1 |
| <snum> | Segment number to modify. Choose any existing segment number. |
| <num> | Stop Frequency in Hz. Choose any number between the minimum and maximum frequency of the analyzer. |

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples	<code>SENS:SEGM:FREQ:STOP 1MHZ</code> <code>sense2:segment2:frequency:stop maximum</code>
----------	--

Query Syntax	<code>SENSe<cnum>:SEGMent<snum>:FREQuency:STOP?</code>
--------------	--

Return Type	Numeric
-------------	---------

Default	If first segment, stop frequency of the analyzer. Otherwise, start frequency of the segment.
----------------	--

SENSe<cnum>:SEGMent<snum>:POWEr[<port>][:LEVel] <num>

(Read-Write) Sets the Port Power level for the specified sweep segment. First set SENS:SEGM:POW:CONTRol ON.

When [port power is Coupled](#), setting port power for one port will apply port power for all source ports.

All subsequent segments that are added assume the new Power Level value.

Parameters

- <cnm> Any existing channel number. If unspecified, value is set to 1
- <snum> Segment number to modify. Choose any existing segment number.
- <port> Port number of the source. If unspecified, value is set to 1.
- <num> Power level.

Note: The range of settable power values depends on the PNA model and if source attenuators are installed. To determine the range of values, send SOUR:POW? MAX and SOUR:POW? MIN. ([SOUR:POW:ATT:AUTO](#) must be set to ON).

Actual achievable leveled power depends on frequency.

Examples

```
SENS:SEGM:POW 0
sense2:segment2:power1:level -10
```

Query Syntax SENSE<cnm>:SEGMent<snum>:POWer[<port>][:LEVel]?

Return Type Numeric

Default 0

SENSe<cnm>:SEGMent:POWer[:LEVel]:CONTRol <ON | OFF>

(Read-Write) Specifies whether Power Level can be set independently for each segment.

Parameters

- <cnm> Any existing channel number. If unspecified, value is set to 1
- <ON | OFF> **ON** (or 1) - turns Power Level control ON. Power level can be set for each segment.
OFF (or 0) - turns Power Level control OFF. Use the channel power level setting.

Examples

```
SENS:SEGM:POW:CONT ON
sense2:segment:power:level:control off
```

Query Syntax SENSe<cnm>:SEGMent:POWer[:LEVel]:CONTRol?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

SENSe<cnum>:SEGMent<snum>[:STATe] <ON | OFF>

(Read-Write) Turns the specified sweep segment ON or OFF. At least ONE segment must be ON or [Sweep Mode](#) is automatically set to **Linear**.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <snum> Segment number to be turned ON or OFF
- <ON | OFF> **ON** (or 1) - turns segment ON.
OFF (or 0) - turns segment OFF.

Examples

```
SENS:SEGM ON
sense2:segment2:state off
```

Query Syntax SENSe<cnum>:SEGMent<snum>[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

SENSe<cnum>:SEGMent<snum>:SWEep:POINts <num>

(Read-Write) Sets the number of data points for the specified sweep segment.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <snum> Any existing segment number. If unspecified, value is set to 1
- <num> Number of points in the segment. The total number of points in all segments cannot exceed **20001**. A segment can have as few as 1 point.

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
SENS:SEGM:SWE:POIN 51
sense2:segment2:sweep:points maximum
```

Query Syntax SENSe<cnum>:SEGMent<snum>:SWEep:POINts?

Return Type Numeric

Default 21

SENSe<cnum>:SEGMent<snum>:SWEep:TIME <num>

(Read-Write) Sets the time the analyzer takes to sweep the specified sweep segment.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <snum> Any existing segment number.
- <num> Sweep time in seconds. Choose a number between **0** and **100**

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
SENS:SEGM:SWE:TIME 1ms
sense2:segment2:sweep:time .001
```

Query Syntax SENSE<num>:SEGMent<snum>:SWEep:TIME?

Return Type Numeric

Default Not Applicable

SENSe<num>:SEGMent<snum>:SWEep:TIME:CONTRol <ON | OFF>

(Read-Write) Specifies whether Sweep Time can be set independently for each sweep segment.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <ON | OFF> **ON** (or 1) - turns Sweep Time control ON. Sweep Time can be set for each segment.
OFF (or 0) - turns Sweep Time control OFF. Uses the channel Sweep Time setting.

Examples

```
SENS:SEGM:SWE:TIM:CONT ON
sense2:segment:sweep:time:control off
```

Query Syntax SENSE<num>:SEGMent<snum>:SWEep:TIME:CONTRol?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

SENSe<num>:SEGMent<snum>:X:SPACing <char>

(Read-Write) Sets X-axis spacing ON or OFF

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<snum> Any existing segment number. (This parameter is ignored)

<char> **LINear** - turns X-axis point spacing OFF

OBASe - turns X-axis point spacing ON

Examples

```
SENS:SEGM:X:SPACing LIN
sense2:segment1:spacing obase
```

Query Syntax SENSE<cnum>:SEGMENT<snum>:X:SPACing?

Return Type Character


Default LINear

Last Modified:

21-Jun-2007 Increased max number of points

Sense:Sweep Commands

Specifies the sweep functions of the analyzer.

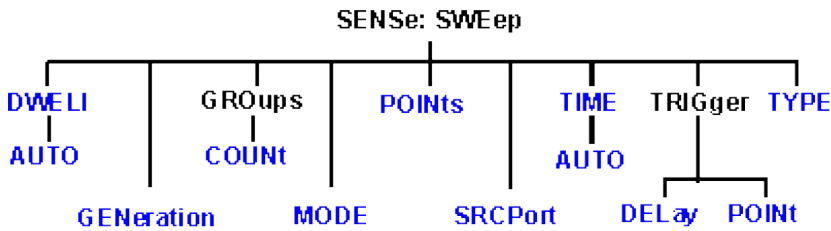

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- **Example** [Triggering the PNA using SCPI](#)
- [Learn about Sweeping](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Note: All of the commands in this block will accept **MIN** or **MAX** instead of a numeric parameter.

Also, kHz, MHz, and GHz are accepted as suffixes/units.

See [SCPI Syntax](#) for more information.

SENSe<num>:SWEep:DWELI <num>

(Read-Write) Sets the dwell time between each sweep point.

- Dwell time is **ONLY** available with SENSE:SWEep:GENeration set to **STEPped**; It is **Not** available in **ANALOG**.
- Sending dwell = 0 is the same as setting SENS:SWE:DWEL:AUTO **ON**. Sending a dwell time > 0 sets SENS:SWE:DWEL:AUTO **OFF**.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<num> Dwell time in seconds.

[See Note](#)

Examples

```
SENS:SWE:DWEL .1
sense2:sweep:dwell min
```

Query Syntax	SENSe<cnum>:SWEep:DWELI?
Return Type	Numeric
Default	0 - (Note: dwell time set to 0 is the same as dwell:auto ON)

SENSe<cnum>:SWEep:DWELI:AUTO <ON | OFF>

(**Read-Write**) Specifies whether or not to automatically calculate and set the minimum possible dwell time. Setting Auto **ON** has the same effect as setting dwell time to **0**.

Parameters

<cnum>	Any existing channel number. If unspecified, value is set to 1
<ON OFF>	ON (or 1) - turns dwell ON. OFF (or 0) - turns dwell OFF.

Examples

```
SENS:SWE:DWEL:AUTO ON
sense2:sweep:dwell:auto off
```

Query Syntax	SENSe<cnum>:SWEep:DWELI:AUTO?
Return Type	Boolean (1 = ON, 0 = OFF)
Default	ON

SENSe<cnum>:SWEep:GENeration <char>

(**Read-Write**) Sets sweep as Stepped or Analog.

Parameters

<cnum>	Any existing channel number. If unspecified, value is set to 1
<char>	Choose from: STEPped - source frequency is CONSTANT during measurement of each displayed point. More accurate than ANALog. Dwell time can be set in this mode. ANALog - source frequency is continuously RAMPING during measurement of each displayed point. Faster than STEPped. Sweep time (not dwell time) can be set in this mode.

Examples

```
SENS:SWE:GEN STEP
sense2:sweep:generation analog
```

Query Syntax	SENSe<cnum>:SWEep:GENeration?
Return Type	Character

SENSe<cnum>:SWEep:GROups:COUNT <num>

(Read-Write) Sets the trigger count (groups) for the specified channel. Set trigger mode to group after setting this count.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<num> Count (groups) number. Choose any number between:
1 and **2e6** (1 is the same as single trigger)

Examples

```
SENS:SWE:GRO:COUN 10
sense2:sweep:groups:count 50
```

Query Syntax SENSe<cnum>:SWEep:GROups:COUNT?

Return Type Numeric

Default 1

SENSe<cnum>:SWEep:MODE <char>

(Read-Write) Sets the number of trigger signals the specified channel will ACCEPT.

See [Triggering the PNA Using SCPI](#).

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<char> Trigger mode. Choose from:

HOLD - channel will not trigger

CONTinuous - channel triggers indefinitely

GROups - channel accepts the number of triggers specified with the last
[SENS:SWE:GRO:COUN](#) <num>. This is one of the PNA overlapped commands. [Learn more](#).

SINGle - channel accepts ONE trigger, then goes to HOLD.

Note: Beginning with 7.50, the SINGle argument makes it no longer necessary to use [SENS:SWE:GRO:COUN 1](#).

Examples

```
SENS:SWE:MODE CONT
sense2:sweep:mode hold
```

Query Syntax SENSE<cnum>:SWEep:MODE?

Return Type Character

Default CONTInuous

SENSe<cnum>:SWEep:POINts <num>

(Read-Write) Sets the number of data points for the measurement.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<num> Choose any number between 1 and 20001.

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

Examples

```
SENS:SWE:POIN 51
sense2:sweep:points max
```

Query Syntax SENSE<cnum>:SWEep:POINts?

Return Type Numeric

Default 201

SENSe<cnum>:SWEep:SRCPort <1 | 2> **Superseded**

This command is superseded. The [Calc:Par:Def:Ext](#) and [Calc:Par:Mod:Ext](#) can now optionally include the source port.

(Read-Write) Sets the source port when making non S-parameter measurements. Has no effect on S-parameter measurements.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<1 | 2> 1 - Source power comes out Port 1
2 - Source power comes out Port 2

Examples

```
SENS:SWE:SRCP 1
sense2:sweep:srcport 2
```

Query Syntax SENSE<cnum>:SWEep:SRCPort?

Return Type Character

SENSe<cnum>:SWEep:TIME <num>

(Read-Write) Sets the time the analyzer takes to complete one sweep. If sweep time accuracy is critical, use ONLY the values that are attained using the up and down arrows next to the sweep time entry box. [See Sweep Time.](#)

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <num> Sweep time in seconds. Choose a number between **0** and **86,400** (24hrs),
To select the fastest sweep speed, either send MIN as an argument to this command, or send SENS:SWE:TIME:AUTO 1

[See Note](#)

Examples

```
SENS:SWE:TIME 1ms
sense2:sweep:time .001
```

Query Syntax SENSe<cnum>:SWEep:TIME?

Return Type Numeric

[Default](#) NA

SENSe<cnum>:SWEep:TIME:AUTO <ON | OFF>

(Read-Write) Turns the automatic sweep time function ON or OFF.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <ON | OFF> **ON** (or 1) - turns the automatic sweep time ON.
OFF (or 0) - turns the automatic sweep time OFF.

Examples

```
SENS:SWE:TIME:AUTO
sense2:sweep:time:auto off
```

Query Syntax SENSe<cnum>:SWEep:TIME:AUTO?

Return Type Boolean (1 = ON, 0 = OFF)

[Default](#) ON

SENSe<cnum>:SWEep:TRIGger:DELaY <num>

(Read-Write) Sets and reads the trigger delay for all measurements in the specified CHANNEL. This delay is only applied while [TRIG:SOURce EXTeRnal](#) and [TRIG:SCOP CURReNt](#) . After an external trigger is applied, the start of the sweep is delayed for the specified delay value plus any inherent latency.

To apply a trigger delay for all channels (Global), use [TRIG:DEL](#)

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <num> Trigger delay value in seconds. Range is from 0 to 107 seconds

Examples

```
SENS:SWE:TRIG:DElay .003
sense2:sweep:trigger:delay 1
```

Query Syntax SENSE<num>:SWEep:TRIGger:DElay?

Return Type Numeric

Default 0

SENSe<num>:SWEep:TRIGger:POINt <ON | OFF>

(Read-Write) Specifies whether the specified channel will measure one point for each trigger or all of the measurements in the channel. Setting any channel to POINt mode will automatically set the [TRIGger:SCOpe](#) = CURReNt.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <ON | OFF> **ON** (or 1) - Channel measures one data point per trigger.
OFF (or 0) - All measurements in the channel made per trigger.

Examples

```
SENS:SWE:TRIG:POIN ON
sense2:sweep:trigger:point off
```

Query Syntax SENSE<num>:SWEep:TRIGger:POINt?

Return Type Boolean (1 = Point, 0 = Measurement)

Default 0 - Measurement

SENSe<num>:SWEep:TYPE <char>

(Read-Write) Sets the type of analyzer sweep mode.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<char> Choose from:

LINear | LOGarithmic | POWer | CW | SEGMENT

Note: SWEep TYPE cannot be set to SEGMENT if there are no segments turned ON. A segment is automatically turned ON when the analyzer is started.

Examples

```
SENS:SWE:TYPE LIN
sense2:sweep:type segment
```

Query Syntax SENSE<cnum>:SWEep:TYPE?

Return Type Character

Default LINear

Last Modified:

21-Jun-2007	Increased max number of points
18-Jun-2007	Added Single to Mode
24-Apr-2007	Clarified Sweep mode

X Values Command

SENSe<cnum>:X[:VALues]?

(Read-only) Returns the stimulus values for the specified channel. If the channel is sweeping the source backwards, the values will be in descending order.

Parameters

<cnum> Any existing channel number; if unspecified, value is set to 1.

Examples


```
SENS:X?  
sense2:x:values?
```

Return Type Depends on [FORM:DATA](#) command

Default Not applicable

Source Commands

Controls the power delivered to the DUT.

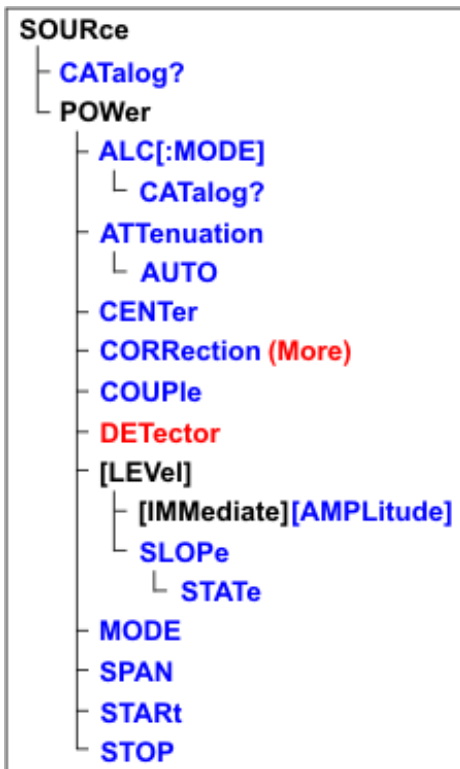

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Power Settings](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)
- [Remotely Specifying a Source Port](#)

SOURce<cnum>:CATalog?

(Read-Write) Returns a list of valid port names that can be controlled. Some ports only have string names, NOT numbers. All commands that require a port argument have provisions for specifying either a port number OR a string name.

See also: [Remotely Specifying a Source Port](#).

Parameters

Examples

```
SOUR:CAT?  
source:catalog  
  
'Some PNA-X models return  
"Port 1,Port 2,Port 3,Port 4,Port 1 Src2"
```

Return Type Comma-separated list of strings.

Default Not applicable

SOURce<cnum>:POWer<port>:ALC[:MODE]:CATalog?, [src]

(Read-Write) Returns a list of valid ALC modes for the specified channel and port number. Use the returned values to set [SOUR:POW:ALC:MODE](#).

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <port> Port number of the PNA. If unspecified, value is set to 1. To make settings for ports that are not simple numbers, use the [src] argument.
- [src] **String**. (NOT case sensitive). Source port. Optional. Use [SOUR:CAT?](#) to return a list of valid port names.

While this argument can be used to make settings for ALL ports, it is designed to access ports that are not simple numbers, such as "Port 1 Src2". Otherwise, the <port> argument performs the same function. If both arguments are specified, [src] takes priority.

Examples

```
SOUR:POW:ALC:MODE:CAT?  
  
source2:power2:alc:mode:catalog?  
  
source:power:alc:mode:catalog? "Port 1 Src2"
```

Return Type Comma-separated list of strings.

Default Not applicable

SOURce<cnum>:POWer<port>:ALC[:MODE] <char>, [src]

(Read-Write) Sets and returns the ALC mode for the specified channel and port. Use [SOUR:POW:ALC:MODE:CAT?](#) to return a list of valid ALC modes for the PNA.

[Learn more about ALC mode.](#)

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <port> Port number of the PNA. If unspecified, value is set to 1. To make settings for ports that are not simple numbers, use the [src] argument.
- <char> ALC Mode.

For the PNA-X choose from:

- **INTernal** Standard ALC loop
- **OPENloop** No ALC loop

[src] **String**. (NOT case sensitive). Source port. Optional. Use [SOUR:CAT?](#) to return a list of valid port names.

While this argument can be used to make settings for ALL ports, it is designed to access ports that are not simple numbers, such as "Port 1 Src2". Otherwise, the <port> argument performs the same function. If both arguments are specified, [src] takes priority.

Examples

```
SOUR:POW:ALC INT
source2:power2:alc:mode openloop
source:power:alc:mode openloop,"Port 1 Src2"
```

Query Syntax SOURce<num>:POWER<port>:ALC:MODE? [src]

Return Type Character

Default INTernal

SOURce<num>:POWER<port>:ATTenuation <num>, [src]

(Read-Write) Sets the attenuation level for the selected channel. Sending this command turns automatic attenuation control (SOUR:POW:ATT:AUTO) to OFF. If the ports are coupled, changing the attenuation on one port will also change the attenuation on all other ports. To turn port coupling OFF use [SOURce:POWER:COUPlE OFF](#).

Note: Attenuation cannot be set with **Sweep Type** set to **Power**

See [Sens:Power:ATT](#) to change receiver attenuation.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <port> Port number of the PNA. If unspecified, value is set to 1. To make settings for ports that are not simple numbers, use the [src] argument.
- <num> Attenuation value. The range of settable values depends on the PNA model. To determine the valid settings, do one of the following:

- See [PNA models and options](#) to see the range and step size for each model / option.
- Perform a query using MAX, then MIN, as an argument. Example:
`SOURce:POWer:ATT? Max` However, this will not tell you the attenuation step size.

If an invalid attenuation setting is entered, the PNA will select the next lower valid value. For example, if 19 is entered, then for an E8361A, 10 dB attenuation will be selected.

Note: This command will accept **MIN** or **MAX** instead of a numeric parameter. See [SCPI Syntax](#) for more information.

- [src] **String.** (NOT case sensitive). Source port. Optional. Use [SOUR:CAT?](#) to return a list of valid port names.

While this argument can be used to make settings for ALL ports, it is designed to access ports that are not simple numbers, such as "Port 1 Src2". Otherwise, the <port> argument performs the same function. If both arguments are specified, [src] takes priority.

Examples

```
SOUR:POW:ATT 10  
  
source2:power2:attenuation maximum  
  
source:power:att 20, "Port 1 Src2"
```

Query Syntax `SOURce<num>:POWer<port>:ATTenuation? [min/max] [src]
[min/max,src]`

Return Type Numeric

Default 0

`SOURce<num>:POWer<port>:ATTenuation:AUTO <bool>, [src]`

(Read-Write) Turns automatic attenuation control ON or OFF. Setting an attenuation value (using SOURce:POWer:ATTenuation <num>) sets AUTO **OFF**.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1.
- <port> Port number of the PNA. If unspecified, value is set to 1. To make settings for ports that are not simple numbers, use the [src] argument.
- <bool> **ON** (or 1) - turns coupling ON. The analyzer automatically selects the appropriate attenuation level to meet the specified power level.
- OFF** (or 0) - turns coupling OFF. Attenuation level must be set using SOURce:POWer:ATTenuation <num>.
- [src] **String**. (NOT case sensitive). Source port. Optional. Use [SOUR:CAT?](#) to return a list of valid port names.

While this argument can be used to make settings for ALL ports, it is designed to access ports that are not simple numbers, such as "Port 1 Src2". Otherwise, the <port> argument performs the same function. If both arguments are specified, [src] takes priority.

Examples

```
SOUR:POW2:ATT:Auto On  
  
source2:power:attenuation:auto off  
  
sour:pow:att:auto 1, "Port 1 Src2"
```

Query Syntax SOURce<cnum>:POWer:ATTenuation:Auto? [src]

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

SOURce<cnum>:POWer:CENTer <num>

(Read-Write) Sets the power sweep center power. Must also set: [SENS:SWE:TYPE POWER](#) and [SOURce:POWer:SPAN <num>](#).

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <num> Center power. Actual achievable leveled power depends on frequency.

Examples

```
SOUR:POW:CENt -15
source2:power:center -7
```

Query Syntax SOURce<cnum>:POWer:CENTer?

Return Type Numeric

Default 0 dBm

SOURce<cnum>:POWer:COUPle <ON | OFF>

(Read-Write) Turns Port Power Coupling ON or OFF.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <ON | OFF> **ON** (or 1) - turns coupling ON. The same power level is used for both source ports.
- OFF** (or 0) - turns coupling OFF. Power level can be set individually for each source port.

Examples

```
SOUR:POW:COUP ON
source2:power:couple off
```

Query Syntax SOURce<cnum>:POWer:COUPle?

Return Type Boolean (1 = ON, 0 = OFF)

Default ON

SOURce<cnum>:POWer:DETector <char> OBSOLETE

(Read-Write) The PNA models with external leveling are now OBSOLETE.

Sets the source leveling loop as Internal or External.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <char> **INTernal** - Internal leveling is applied to the source
- EXTernal** - External leveling is applied to the source through a rear-panel connector. ONLY provided on 3 GHz, 6 GHz, and 9 GHz PNA models.

Examples

```
SOUR:POW:DET INT
source2:power:detector external
```

Query Syntax SOURce<num>:POWER:DETEctor?

Return Type Character

Default INTernal

**SOURce<num>:POWER<port>[:LEVel][:IMMediate]
[:AMPLitude] <num>, [src]**

(Read-Write) Sets the RF power output level.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <port> Port number of the PNA. If unspecified, value is set to 1. To make settings for ports that are not simple numbers, use the [src] argument.
- <num> Source power in dBm.

Note: The range of settable power values depends on the PNA model and if source attenuators are installed. To determine the range of values, perform a query using MAX, then MIN, as an argument. ([SOUR:POW:ATT:AUTO](#) must be set to ON) Example: SOURce:POWER? Max

Actual achievable leveled power depends on frequency.

[src] **String.** (NOT case sensitive). Source port. Optional. Use [SOUR:CAT?](#) to return a list of valid port names.

While this argument can be used to make settings for ALL ports, it is designed to access ports that are not simple numbers, such as "Port 1 Src2". Otherwise, the <port> argument performs the same function. If both arguments are specified, [src] takes priority.

Examples

```
SOUR:POW1 5DB
source2:power:level:immediate:amplitude maximum

sour:pow 5, "Port 1 Src2"
```

Query Syntax SOURce<cnum>:POWer[:LEVel][:IMMediate][:AMPLitude]? [src]

Return Type Numeric

Default 0 dBm

SOURce<cnum>:POWer[:LEVel]:SLOPe <num>

(Read-Write) Sets the RF power slope value.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<num> Slope value in db/GHz. Choose any integer between -2 and 2 (0 is no slope).

Examples

```
SOUR:POW:SLOP 2
source2:power:slope -2
```

Query Syntax SOURce<cnum>:POWer[:LEVel]:SLOPe?

Return Type Numeric

Default 0

SOURce<cnum>:POWer[:LEVel]:SLOPe:STATe <ON | OFF>

(Read-Write) Turns Power Slope ON or OFF.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<ON|OFF> **ON** (or 1) - turns slope ON.

OFF (or 0) - turns slope OFF.

Examples

```
SOUR:POW:SLOP:STAT ON
source2:power:slope:state off
```

Query Syntax SOURce<cnum>:POWer[:LEVel]:SLOPe:STATe?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF

SOURce<cnum>:POWer<port>:MODE <state>, [src]

(Read-Write) Sets the state of PNA source for the specified port.

[Learn more about the PNA internal second source](#)

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <port> Port number of the PNA. If unspecified, <port> is set to 1. To make settings for ports that are not simple numbers, use the [src] argument.
- <state> Source state. Choose from:
- **AUTO** Source power is turned ON when required for a measurement.
 - **ON** Source power is always ON regardless of the measurement.
 - **OFF** Source power is always OFF regardless of the measurement.

Note: ON and OFF are valid only on PNA models with two sources.

- [src] **String.** (NOT case sensitive). Source port. Optional. Use [SOUR:CAT?](#) to return a list of valid port names.

While this argument can be used to make settings for ALL ports, it is designed to access ports that are not simple numbers, such as "Port 1 Src2". Otherwise, the <port> argument performs the same function. If both arguments are specified, [src] takes priority.

Examples

```
SOUR:POW:MODE ON
source2:power4:mode OFF
sour:pow:mode 1, "Port 1 Src2"
```

Query Syntax SOURce<cnum>:POWer<port>:MODE? [src]

Return Type Character

Default Auto

SOURce<cnum>:POWer:SPAN <num>

(Read-Write) Sets the power sweep span power. Must also set:

[SENS:SWE:TYPE POWER](#) and [SOURce:POWer:CENTer <num>](#).

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1.
<num> Span power. Actual achievable leveled power depends on frequency.

Examples

```
SOUR:POW:SPAN -15  
source2:power:span -7
```

Query Syntax SOURce<num>:POWer:SPAN?

Return Type Numeric

Default 0 dBm

SOURce<num>:POWer:START <num>

(Read-Write) Sets the power sweep start power. Must also set

[SENS:SWE:TYPE POWER](#) and [SOURce:POWer:STOP <num>](#).

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
<num> Start power.

Note: The range of settable power values depends on the PNA model and if source attenuators are installed. To determine the range of values, perform a query using MAX, then MIN, as an argument. ([SOUR:POW:ATT:AUTO](#) must be set to ON) Example: SOURce:POWer:START? MIN

Actual achievable leveled power depends on frequency.

Examples

```
SOUR:POW:STAR -15  
source2:power:start -7
```

Query Syntax SOURce<num>:POWer:START?

Return Type Numeric

Default 0 dBm

SOURce<num>:POWer:STOP <num>

(Read-Write) Sets the power sweep stop power. Must also set: [SENS:SWE:TYPE POWer](#) and [SOURce:POWer:START <num>](#).

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<num> Stop power.

Note: The range of settable power values depends on the PNA model and if source attenuators are installed. To determine the range of values, perform a query using MAX, then MIN, as an argument. ([SOUR:POW:ATT:AUTO](#) must be set to ON) Example: SOURce:POWer:STOP? MAX

Actual achievable leveled power depends on frequency.

Examples

```
SOUR:POW:STOP -15
```

```
source2:power:stop -7
```

Query Syntax SOURce<num>:POWer:STOP?

Return Type Numeric


Default 0 dBm

Last modified:

25-Oct-2007	Edit test for source and rec attenuators commands
27-Jun-2007	Edited wording on Source:Cat?
10/18/06	MQQ Added Mode command

Source:Power:Correction Commands

Controls the source power calibration features of the analyzer.

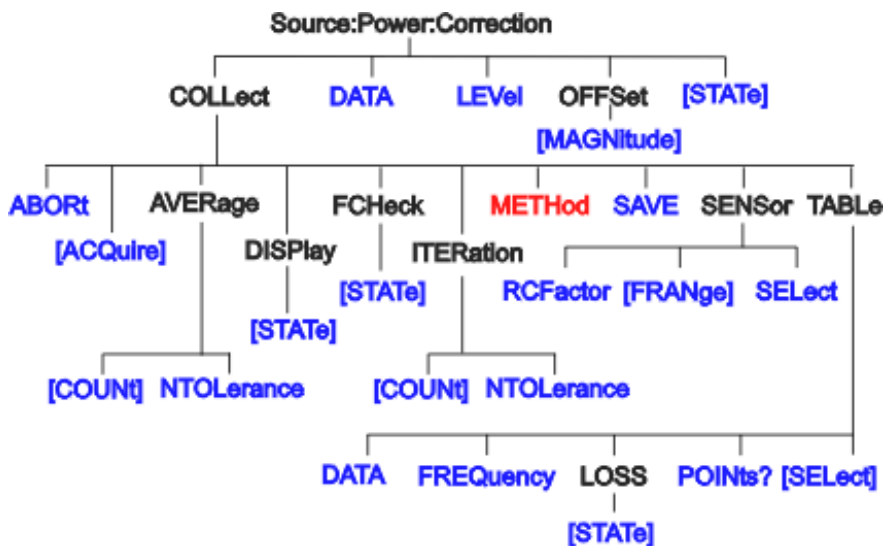

Click on a [blue](#) keyword to view the command details.

See Also

- [Example](#) program using these commands.
- [Template](#) for creating your own Power Meter Driver
- [Learn about Source Power Cal](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Note: The [SOURCE:POWER:CORRection:COLlect:ACQuire](#) command, used to step the PNA and read a power meter, cannot be sent over the GPIB unless the power meter is connected to a different GPIB interface. See the alternative methods described in the command details.

SOURce<cnum>:POWER<port>:CORRection:COLlect:ABORT

(Write-only) Aborts a source power calibration sweep that is in progress.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <port> Port number to correct for source power. If unspecified, value is set to 1.

Examples

```
SOUR:POW:CORR:COLL:ABOR  
source1:power2:correction:collect:abort
```

Query Syntax Not Applicable

Default Not Applicable

SOURce<cnum>:POWer<port>:CORRection:COLLect[:ACQuire] <char>,<id>[,src]

Note: With PNA Rev. 6.2, a new "id" argument has been added to this command, replacing [SOUR:POW:CORR:COLL:METH](#).

(Write-only) Initiates a source power cal acquisition sweep using the power sensor attached to the specified channel (A or B) on the power meter, or using the specified PNA receiver.

Note: This command, when used with a power meter, cannot be sent over the GPIB unless the power meter is connected to a different GPIB interface. Use one of the following methods to perform this command or its equivalent:

- If present, use the [GPIB dedicated controller port](#).
- Connect the power meter to the PNA using a [USB / GPIB interface](#) (Agilent 82357A).
- SCPI programming of the PNA using a LAN Client interface ([see example](#))
- Send SCPI commands through the COM interface using the [SCPI String Parser](#) object.
- Directly control the Power Meter and PNA to step frequency; then acquire and store the Power reading. ([see example](#)).

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <port> Port number to correct for source power. If unspecified, value is set to 1.
- <char> The following choices are new beginning PNA Rev 6.2. Choose from:

- **PMETer** - Power Meter is used for all readings.
- **PMReceiver** - Power meter for the first iteration; then use the reference receiver for remaining readings if necessary (same as "fast iteration" box checked on

[dialog box](#))

- **RECeiver** - Use PNA measurement receiver for all readings.

The following choices are **superseded** but still supported, in conjunction with [SOUR:POW:CORR:COLL:METH](#).

- **ASENsor** - Sensor on power meter channel A
- **BSENsor** - Sensor on power meter channel B

<id> **String**. Not case sensitive. The power sensor or PNA receiver to use for measuring power.

- For PMETer or PMRECeiver: select "**ASENSOR**" or "**BSENSOR**".
- For RECeiver: select a PNA receiver to acquire readings using physical or [logical receiver notation](#).
- For ASENsor or BSENsor, this argument is NOT required.

[src] **String**. (NOT case sensitive). Source port. Optional. Use [SOUR:CAT?](#) to return a list of valid port names.

While this argument can be used to make settings for ALL ports, it is designed to access ports that are not simple numbers, such as "Port 1 Src2". Otherwise, the <port> argument performs the same function. If both arguments are specified, [src] takes priority.

Examples

```
SOUR:POW:CORR:COLL PMET 'acquires power meter readings using
the A sensor.
source1:power2:correction:collect:acquire receiver,"a1"
'acquires source cal readings using the reference receiver for
port 1.
```

Query Syntax Not Applicable

Default Not Applicable

SOURce:POWer:CORRection:COLLect:AVErAge[:COUNT] <num>

(Read-Write) This command, along with [SOUR:POW:CORR:COLL:AVER:NTOLerance](#), allows for settling of the power sensor READINGS.

Specifies the maximum number of power readings that are taken at each stimulus point to allow for measurement settling. Each reading is averaged with the previous readings at that stimulus point.

When this average meets the [Average:NTOLerance](#) value or this number of readings has been made, the average is returned as the valid reading.

This setting is not necessary when using a PNA receiver ([SOUR:POW:CORR:COLL REC](#)) to make the measurement.

[Learn more.](#)

Parameters

<num> Maximum number of readings to make to allow for settling. Choose any number between 3 and 25.

Examples

```
SOUR:POW:CORR:COLL:AVER 2
source:power:correction:collect:average:count 3
```

Query Syntax SOURce:POWer:CORRection:COLLect:AVERage[:COUNT]?

Return Type Numeric

Default 3

SOURce:POWer:CORRection:COLLect:AVERage:NTOLerance <num>

(Read-Write) This command, along with [SOUR:POW:CORR:COLL:AVER:COUNT](#), allows for settling of the power sensor READINGS.

Each power reading is averaged with the previous readings at each stimulus point. When the average meets this nominal tolerance value or the [max number of readings](#) has been made, the average is returned as the valid reading.

This setting is not necessary when using a PNA receiver ([SOUR:POW:CORR:COLL REC](#)) to make the measurement.

[Learn more.](#)

Parameters

<num> Power measurement settling tolerance value in dB. Choose any number between 0 and 5.

Examples

```
SOUR:POW:CORR:COLL:AVER:NTOL .05
source1:power2:correction:collect:average:ntolerance .003
```

Query Syntax	SOURce:POWer:CORRection:COLLect:AVERage:NTOLerance?
Return Type	Numeric
<u>Default</u>	.050 dBm

SOURce<cnum>:POWer:CORRection:COLLect:DISPlay[:STATe] <ON | OFF>

(Read-Write) Enables and disables the display of power readings on the PNA screen. Send this command BEFORE you begin a source power cal acquisition. After the source power cal data is acquired, this setting is reset to ON.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <ON|OFF> **ON (1)** Source power calibration dialog box is shown on the PNA screen. Power readings are plotted against the Tolerance value as limit lines.

OFF (0) - Source power calibration dialog box is NOT shown on the PNA screen.

Examples

```
SOUR:POW:CORR:COLL:DISP ON
source1:power2:correction:collect:display:state off
```

Query Syntax	SOURce:POWer:CORRection:COLLect:DISPlay[:STATe]?
Return Type	Boolean (1 = ON, 0 = OFF)
<u>Default</u>	ON (1)

SOURce<cnum>:POWer:CORRection:COLLect:FCHeck[:STATe] <ON | OFF>

(Read-Write) Enables and disables frequency checking of source power cal acquisition sweeps. ONLY use when you have more than one power sensor.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <ON|OFF> **ON (1)** turns source power cal frequency checking ON. A requested acquisition will only succeed for those frequency points which fall within a frequency range specified for the power sensor being used. An acquisition will pause in mid-sweep if the frequency is about to exceed the maximum frequency limit specified for that sensor. When the sweep is paused in this manner, a sensor connected to the other channel input of the power meter can be connected to the measurement port in place of the previous sensor, and used to complete the sweep. However, the maximum frequency specified for the

second sensor would need to be sufficient for the sweep to complete. Frequency limits are specified using the [SOUR:POW:CORR:COLL:SEN](#) command.

OFF (0) - turns source power cal frequency checking OFF. An acquisition will use just one power sensor for the entire sweep, regardless of frequency.

Examples

```
SOUR:POW:CORR:COLL:FCH ON
source1:power2:correction:collect:fcheck:state off
```

Query Syntax SOURce:POWer:CORRection:COLLect:FCHeck[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF (0)

SOURce:POWer:CORRection:COLLect:ITERation[:COUNT] <num>

(Read-Write) This command, along with [SOUR:POW:CORR:COLL:ITER:NTOL](#) describes the number of ADJUSTMENTS to make to the source power.

Sets the maximum number of readings to take at each data point for iterating the source power. Power READINGS (performed by [SOUR:POW:CORR:COLL:AVER:COUNT](#) and [SOUR:POW:CORR:COLL:AVER:NTOLerance](#)) will continue to be made, and source power adjusted, until the measurement is within the [iteration tolerance value](#) or this max number of measurements has been met. The last value is the valid measurement for that data point.

[Learn more.](#)

Parameters

<num> Maximum number of readings. Choose any number between 1 and 100.

Examples

```
SOUR:POW:CORR:COLL:ITER 2
source:power:correction:collect:iteration 3
```

Query Syntax SOURce:POWer:CORRection:COLLect:ITERation[:COUNT]?

Return Type Numeric

Default 1

SOURce:POWer:CORRection:COLLect:ITERation:NTOLerance <num>

(Read-Write) This command, along with [SOUR:POW:CORR:COLL:ITER:COUNT](#) describes the number of ADJUSTMENTS to make to the source power.

Sets the maximum desired deviation from the sum of the [test port power](#) and the [offset](#) value. Power READINGS (performed by [SOUR:POW:CORR:COLL:AVER:COUNT](#) and [SOUR:POW:CORR:COLL:AVER:NTOLerance](#)) will continue to be made, and source power adjusted, until a measurement is within this tolerance value or the max number of measurements has been met. The last value is the valid measurement for that data point.

[Learn more.](#)

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <port> Port number to correct for source power. If unspecified, value is set to 1.
- <num> Tolerance value in dBm. Choose any number between 0 and 5

Examples

```
SOUR:POW:CORR:COLL:ITER:NTOL .005
source:power:correction:collect:iteration:ntolerance .1
```

Query Syntax SOURce:POWer:CORRection:COLLect:ITERation:NTOLerance?

Return Type Numeric

Default .05

SOURce<num>:POWer<port>:CORRection:COLLect:METHod <char> Superseded

This command is replaced with [SOUR:POW:CORR:COLLect\[:ACQuire\]](#) which now specifies the method and the device.

(Read-Write) Selects the calibration method to be used for the source power cal acquisition.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <port> Port number to correct for source power. If unspecified, value is set to 1.
- <char> Choose from:

NONE - No Cal method

PMETer - Power Meter is used for all readings. (same as "fast iteration" box not checked on [dialog box](#))

PMReceiver - Power meter for the first iteration; then use the reference receiver for remaining readings if necessary (same as "fast iteration" box

checked on [dialog box](#))

Examples

```
SOUR:POW:CORR:COLL:METH PMET
source1:power2:correction:collect:method pmreceiver
```

Query Syntax

SOURce:POWer:CORRection:COLLect:METHod?

Return Type

Character

Default

NONE

SOURce<cnum>:POWer<port>:CORRection:COLLect:SAVE [<RREC>]

(Write-only) Applies the array of correction values after a source power calibration sweep has completed. The source power correction will then be active on the specified source port for channel <cnum>. This command does NOT save the correction values. To save correction values, [save an instrument / calibration state](#) (*.cst file) after performing a source power cal.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <port> Port number to correct for source power. If unspecified, value is set to 1.
- <RREC> Optional argument.

RRECeiver In addition to a source Power Cal, perform a calibration of the reference receiver used in the measurement. ONLY the Reference Receiver calibration is then saved to a Cal Set or Cal Register as specified by the current setting of [SENS:CORR:PREF:CSET:SAVE](#).

Examples

```
SOUR:POW:CORR:COLL:SAVE
source1:power2:correction:collect:save rreceiver
```

Query Syntax

Not Applicable

Default

Not Applicable

**SOURce<cnum>:POWer:CORRection:COLLect:<pmChan>SENSor[:FRANge]
<num1>,<num2>**

(Read-Write) Specifies the frequency range over which the power sensors connected to the specified channels (A and B) of the power meter can be used (minimum frequency, maximum frequency). If the power meter has only a single channel, that channel is considered channel A.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <pmChan> Power Meter channel. Choose from:
- A** - Channel A
 - B** - Channel B
- <num1> Minimum frequency for the sensor. If a frequency unit is not specified, Hz is assumed. No limits are placed on this value.
- <num2> Maximum frequency for the sensor. If a frequency unit is not specified, Hz is assumed. No limits are placed on this value.

Examples

```
SOUR:POW:CORR:COLL:ASEN 100E3, 3E9
source1:power2:correction:collect:bsensor:frange 10 MHz, 18 GHz
```

Query Syntax SOURce:POWer:CORRection:COLLect:ASENsor[:FRANge]?
SOURce:POWer:CORRection:COLLect:BSENsor[:FRANge]?

Return Type Numeric

Default 0,0

SOURce<num>:POWer:CORRection:COLLect:<pmChan>SENsor:RCFactor <num>

(Read-Write) Specifies the reference cal factor for the power sensor connected to channel A or B of the power meter. If the power meter has only a single channel, that channel is considered channel A.

Note: If the sensor connected to the specified channel of the power meter contains cal factors in EPROM (such as the Agilent E-series power sensors), those will be the cal factors used during the calibration sweep. The reference cal factor value associated with this command, and any cal factors entered into the PNA for that sensor channel, will not be used.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <pmChan> Power Meter channel. Choose from:
- A** - Channel A
 - B** - Channel B

<num> Reference cal factor in percent. Choose any number between 1 and 150.

Examples

```
SOUR:POW:CORR:COLL:ASEN:RCF 98.7  
source1:power2:correction:collect:bsensor:rcfactor 105
```

Query Syntax

SOURce:POWer:CORRection:COLLect:ASENsor:RCFactor?
SOURce:POWer:CORRection:COLLect:BSENsor:RCFactor?

Return Type

Numeric

Default

100

SOURce<cnum>:POWer:CORRection:COLLect:<pmChan>SENsor:SElect

(Read-Write) Sets and returns the power sensor channel (A or B) to be used. This performs the same function as the **Use this sensor only** checkbox in the Power Sensor Settings dialog.

Note: This write portion of this command is only necessary when performing an SMC calibration.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<pmChan> Power Meter channel. Choose from:

A - Channel A

B - Channel B

Examples

```
SOUR:POW:CORR:COLL:<pmChan>SEN:SEL 'Write  
source1:power2:correction:collect:bsensor:select? 1e9 'Read
```

Query Syntax

SOURce:POWer:CORRection:COLLect:ASENsor:SElect? <Frequency>
SOURce:POWer:CORRection:COLLect:BSENsor:SElect? <Frequency>

Returns a boolean 1 or 0 (true or false) indicating whether the sensor is to be used at the specified frequency.

If [frequency checking](#) is OFF, then the <Frequency> parameter is ignored. The query returns if the sensor is selected for ALL frequencies.

Return Type

Numeric

Default

Not Applicable

SOURce<cnum>:POWer:CORRection:COLLect:TABLE:DATA <data>

(Read-Write) Read or write data into the selected table. Use [SOUR:POW:CORR:COLL:TABLE:SElect](#) to select a table.

- If the selected table is a power sensor table, the data is interpreted as cal factors in **percent**.
- If the loss table is selected, the data is interpreted as loss in **dB**.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<data> Data to write into the selected table.

Examples

```
SOURce:POWer:CORRection:COLLect:TABLE:DATA 0.12, 0.34, 0.56
```

Query Syntax

SOURce<num>:POWer:CORRection:COLLect:TABLE:DATA?

If the selected table is currently empty, no data is returned.

Return Type

Numeric - one number per table segment.

Default

Not Applicable

SOURce<num>:POWer:CORRection:COLLect:TABLE:FREQuency <data>

(Read-Write) Read or write frequency values for the selected table (cal factor table for a power sensor, or the loss compensation table).

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<data> Frequency data to write into the selected table.

Examples

```
SOURce:POWer:CORRection:COLLect:TABLE:FREQuency 10E6, 1.5E9, 9E9
```

Query Syntax

SOURce<num>:POWer:CORRection:COLLect:TABLE:FREQuency?

If the selected table is currently empty, no data is returned.

Return Type

Numeric - one number per table segment

Default

Not Applicable

SOURce<num>:POWer:CORRection:COLLect:TABLE:LOSS[:STATe] <ON | OFF>

(Read-Write) Indicates whether or not to adjust the power readings using the values in the loss table during a source power cal sweep.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

<ON|OFF> **ON (or 1)** - turns use of the loss table ON.

OFF (or 0) - turns use of the loss table OFF.

Examples

```
SOUR:POW:CORR:COLL:TABL:LOSS ON
source1:power2:correction:collect:table:loss:state off
```

Query Syntax SOURce:POWer:CORRection:COLLect:TABLE:LOSS[:STATe]?

Return Type Boolean (1 = ON, 0 = OFF)

Default OFF (0)

SOURce<cnum>:POWer:CORRection:COLLect:TABLE:POINts?

(Read-only) Returns the number of segments that are currently in the selected table.

Parameters

<cnum> Any existing channel number. If unspecified, value is set to 1

Examples

```
SOUR:POW:CORR:COLL:TABL:POIN?
source1:power2:correction:collect:table:points?
```

Return Type Numeric

Default 0

SOURce<cnum>:POWer:CORRection:COLLect:TABLE[:SELe] <char>

(Read-Write) Selects which table you want to write to or read from. Read or write using [SOURCE:POWER:CORRection:COLLect:TABLE:FREQuency](#) and [SOURCE:POWER:CORRection:COLLect:TABLE:DATA](#)

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<char> Choose from:

NONE - No table selected

ASENSor - Cal Factor table for Power Sensor A

BSENSor - Cal Factor table for Power Sensor B

LOSS - Loss compensation table

Examples

```
SOUR:POW:CORR:COLL:TABL ASEN
source1:power2:correction:collect:table:select bsensor
```

Query Syntax SOURCE:POWER:CORRection:COLLect:TABLE[:SElect]?

Return Type Character

Default NONE

SOURCE<num>:POWER<port>:CORRection:DATA <data>[,src]

(Read-Write) Writes and reads source power calibration data.

When querying source power calibration data, if no source power cal data exists for the specified channel and source port, then no data is returned.

If a change in the instrument state causes interpolation and/or extrapolation of the source power cal, the correction data associated with this command correspond to the new instrument state (interpolated and/or extrapolated data).

If the channel is sweeping the source backwards, then the first data point is the highest frequency value; the last data point is the lowest. Use the [SENS:X:VALues?](#) command to return the X-axis values in the displayed order.

Parameters

<num> Any existing channel number. If unspecified, value is set to 1

<port> Port number to correct for source power. If unspecified, value is set to 1.

<data> Correction Data

[src] **String**. (NOT case sensitive). Source port. Optional. Use [SOUR:CAT?](#) to return a list of valid port names.

While this argument can be used to make settings for ALL ports, it is designed to access ports that are not simple numbers, such as "Port 1 Src2". Otherwise, the <port> argument performs the same function. If both arguments are specified, [src] takes priority.

Examples `SOURce1:POWer2:CORRection:DATA 0.12, -0.34, 0.56`

Query Syntax `SOURce<cnum>:POWer<port>:CORRection:DATA? [src]`

Return Type Depends on [FORMat:DATA](#) command

Default Not Applicable

SOURce<cnum>:POWer<port>:CORRection:LEVel <num>[,src]

(Read-Write) Specifies the power level that is expected at the desired reference plane (DUT input or output). This is not used for [segment sweep with independent power levels](#) or [power sweeps](#).

Note: Although this command still works, it is recommended that you specify cal power by setting the [test port power](#) and [offset](#) value.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <port> Port number to correct for source power. If unspecified, value is set to 1.
- <num> Cal power level in dBm. Because this could potentially be at the output of a device-under-test, no limits are placed on this value here. It is realistically limited by the specifications of the device (power sensor) that will be used for measuring the power. The power delivered to the PNA receiver must never exceed PNA specifications for the receiver!

[src] **String**. (NOT case sensitive). Source port. Optional. Use [SOUR:CAT?](#) to return a list of valid port names.

While this argument can be used to make settings for ALL ports, it is designed to access ports that are not simple numbers, such as "Port 1 Src2". Otherwise, the <port> argument performs the same function. If both arguments are specified, [src] takes priority.

Examples `SOUR:POW:CORR:LEV 10`
`source1:power2:correction:level 0 dbm`

Query Syntax `SOURce:POWer:CORRection:LEVel? [src]`

Return Type Numeric

Default 0 dBm

SOURce<cnum>:POWer<port>:CORRection:OFFSet[:MAGNitude] <num>[,src]

(Read-Write) Sets or returns a power level offset from the PNA test port power. This can be a gain or loss value (in dB) to account for components you connect between the source and the reference plane of your measurement. For example, specify 10 dB to account for a 10 dB amplifier at the input of your DUT.

Cal power is the sum of the test port power setting and this offset value. Following the calibration, the PNA power readouts are adjusted to the cal power.

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1
- <port> Port number to correct for source power. If unspecified, value is set to 1.
- <num> Gain or loss value in dB. Choose a value between -200 and 200
- [src] **String**. (NOT case sensitive). Source port. Optional. Use [SOUR:CAT?](#) to return a list of valid port names.

While this argument can be used to make settings for ALL ports, it is designed to access ports that are not simple numbers, such as "Port 1 Src2". Otherwise, the <port> argument performs the same function. If both arguments are specified, [src] takes priority.

Examples

```
SOUR:POW:CORR:OFFS 10
source1:power2:correction:offset:magnitude -3
```

Query Syntax SOURce:POWer:CORRection:OFFSet[:MAGNitude]? [src]

Return Type Numeric

Default 0 dB

SOURce<cnum>:POWer<port>:CORRection[:STATe] <bool>[,src]

(Read-Write) Enables and disables source power correction for the specified port on the specified channel.

Parameters

- <num> Any existing channel number. If unspecified, value is set to 1
- <port> Port number to correct for source power. If unspecified, value is set to 1.
- <bool> ON (or 1) turns source power correction ON.
OFF (or 0) - turns source power correction OFF.
- [src] **String.** (NOT case sensitive). Source port. Optional. Use [SOUR:CAT?](#) to return a list of valid port names.
- While this argument can be used to make settings for ALL ports, it is designed to access ports that are not simple numbers, such as "Port 1 Src2". Otherwise, the <port> argument performs the same function. If both arguments are specified, [src] takes priority.

Examples

```
SOUR:POW:CORR ON
source1:power2:correction:state off
```

Query Syntax SOURce:POWer:CORRection[:STATe]? [src]

Return Type Boolean (1 = ON, 0 = OFF)


Default OFF (0)

Last modified:

April 17, 2007 Removed ch and port arguments for 4 settling and accuracy commands.
9/12/06 MQ Modified for receiver only SPC

Status Register Commands

The status registers enable you to query the state of selected events that occur in the analyzer.

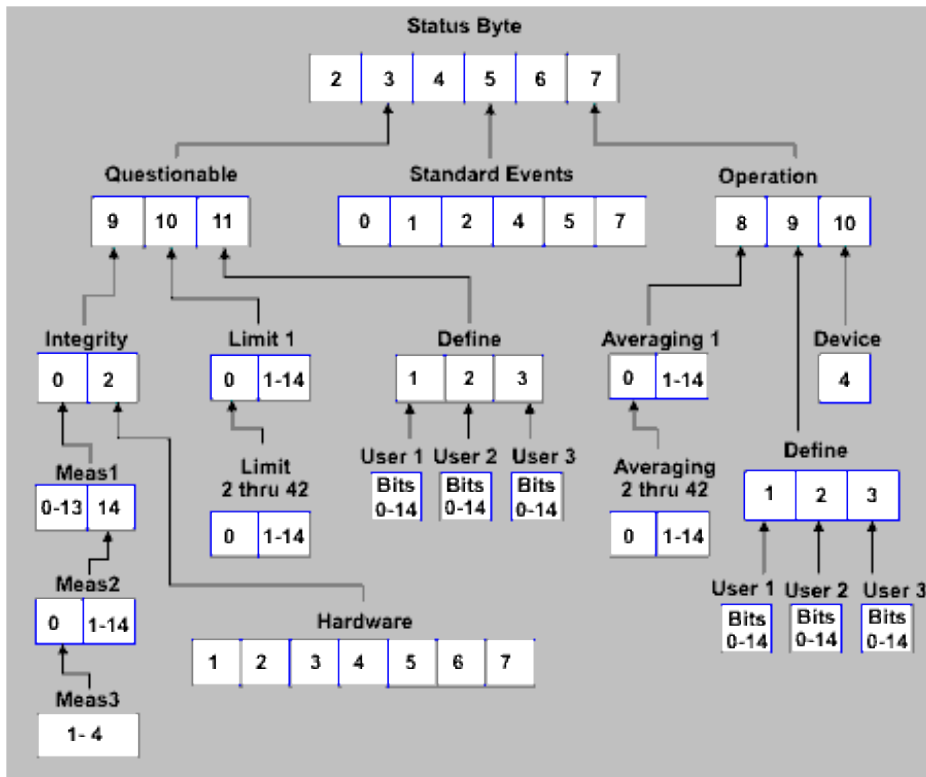

Note: This documentation requires familiarity with the "Standard Status Data Structure - Register Model" as defined in IEEE Std 488.2-1992.

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Status Registers](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

Note: Any bit not shown in the registers is not used but may be reserved for future use.

Status Byte Register

Summarizes the states of the other registers and monitors the PNA output queue. It also generates **service requests**. The Enable register is called the Service Request Enable Register.

Commands	Description
----------	-------------

*CLS	Clears ALL "event" registers and the SCPI Error / Event queue. The corresponding ENABLE registers are unaffected.
------	---

*STB?	Reads the value of the analyzer's status byte. The byte remains after being read.
-------	---

*SRE?	Reads the current state of the Service Request Enable Register.
-------	--

*SRE <num>	Sets bits in the Service Request Enable register. The current setting of the SRE register is stored in non-volatile memory. Use *SRE 0 to clear the enable.
------------	--

<num> Combined value of the weights for bits to be set.

Bit	Weight	Description	Bit is set to 1 when the following conditions exist:
2	4	Error / Event queue Summary (EAV)	the Error / Event queue is not empty. To read the error message, use SYST:ERR?
3	8	Questionable Register Summary	any enabled bit in the questionable event status register is set to 1
4	16	Message Available	the output queue is not empty
5	32	Standard Event Register Summary	any enabled bit in the standard event status register is set to 1
6	64	Request Service	any of the other bits in the status byte register is set to 1 (used to alert the controller of a service request within the analyzer). This bit cannot be disabled.
7	128	Operation Register Summary	any enabled bit in the standard operation event status register is set to 1

STATus:QUEStionable:<keyword>

Summarizes conditions that monitor the quality of measurement data.

<keyword> Example

:CONDition? STAT:QUES:COND?

:ENABle <bits>
STAT:QUES:ENAB 1024

[:EVENTt]? STAT:QUES?

:NTRansition <bits>
STAT:QUES:NTR 1024

:PTRansition <bits>
STAT:QUES:PTR 0

Bit	Weight	Description	Bit is set to 1 when the following conditions exist:
9	512	Integrity Reg summary	any enabled bit in the Integrity event register is set to 1
10	1024	Limit Registers summary	any enabled bit in the Limit event registers is set to 1
11	2048	Define Registers summary	any enabled bit in the Define event registers is set to 1

STATus:QUEStionable:INTegrity <keyword>

Summarizes conditions in the Measurement Integrity register.

<keyword> Example

:CONDition? STAT:QUES:INT:COND?

:ENABle <bits> STAT:QUES:INT:ENAB 1024

[:EVENTt]? STAT:QUES:INT?

:NTRansition <bits> STAT:QUES:INT:NTR 1024

:PTRansition <bits> STAT:QUES:INT:PTR 0

Bit	Weight	Description	Bit is set to 1 when the following conditions exist:
0	1	Measurement Summary	any bit in the Measurement Integrity event register is set to 1
2	4	Hardware Summary	any bit in the Hardware event register is set to 1

STATus:QUEStionable:INTegrity:HARDware<keyword>

Monitors the status of hardware failures.

<keyword> **Example**

:CONDition? STAT:QUES:INT:HARD:COND?

:ENABle <bits> STAT:QUES:INT:HARD:ENAB 1024

[:EVENT]? STAT:QUES:INT:HARD?

:NTRansition <bits> STAT:QUES:INT:HARD:NTR 1024

:PTRansition <bits> STAT:QUES:INT:HARD:PTR 0

Bit	Weight	Description	Bit is set to 1 when the following conditions exist:
1	2	Phase Unlock	the source has lost phaselock, possibly caused by a reference channel open or a hardware failure.
2	4	Unleveled	the source power is unleveled. This could be caused by a source set for more power than it can deliver at the tuned frequency. Or it could be caused by a hardware failure.
3	8	Not used	N/A
4	16	EE Write Failed	an attempted write to the EEPROM has failed, possibly caused by a hardware failure.
5	32	Not used	N/A
6	64	Ramp Cal Failed	the analyzer was unable to calibrate the analog ramp generator due to a possible hardware failure.
7	128	Not used	N/A

STATus:QUEStionable:INTegrity:MEASurement<n> <keyword>

Monitors the lag between changing a channel setting and when the data is ready to query.

When you change the channel state (start/stop freq, bandwidth, and so forth), then the questionable bit for that channel is set. This indicates that your desired channel state does not yet match the data you would get if querying a data trace. When the next sweep is complete (without aborting in the middle), and the data trace matches the channel state that produced it, the bit is cleared for that channel.

<n> Measurement register number. Choose from 1 to 3

<keyword> **Example**

:CONDition? STAT:QUES:INT:MEAS1:COND?

:ENABle <bits> STAT:QUES:INT:MEAS2:ENAB 1024

[:EVENT]? STAT:QUES:INT:MEAS3?

:NTRansition <bits> STAT:QUES:INT:MEAS2:NTR 1024

:PTRansition <bits> STAT:QUES:INT:MEAS1:PTR 0

		Measurement Register <n>			Bit is set to 1 when the following conditions exist:
Bit	Weight	1	2	3	
0	1	1	Summary from Meas Reg 3		a setting change on this channel has occurred and the data does not yet reflect that change.
1	2	2	15	29	a setting change on this channel has occurred and the data does not yet reflect that change.
2	4	3	16	30	a setting change on this channel has occurred and the data does not yet reflect that change.
3	8	4	17	31	a setting change on this channel has occurred and the data does not yet reflect that change.
4	16	5	18	32	a setting change on this channel has occurred and the data does not yet reflect that change.
5	32	6	19		a setting change on this channel has occurred and the data does not yet reflect that change.
6	64	7	20		a setting change on this channel has occurred and the data does not yet reflect that change.

7	128	8	21		a setting change on this channel has occurred and the data does not yet reflect that change.
8	256	9	22		a setting change on this channel has occurred and the data does not yet reflect that change.
9	512	10	23		a setting change on this channel has occurred and the data does not yet reflect that change.
10	1024	11	24		a setting change on this channel has occurred and the data does not yet reflect that change.
11	2048	12	25		a setting change on this channel has occurred and the data does not yet reflect that change.
12	4096	13	26		a setting change on this channel has occurred and the data does not yet reflect that change.
13	8192	14	27		a setting change on this channel has occurred and the data does not yet reflect that change.
14	16384	Summary from Meas Reg 2	28		a setting change on this channel has occurred and the data does not yet reflect that change.

STATus:QUEStionable:LIMit<n> <keyword>

Monitors and summarizes the status of limit line failures. When a trace fails, the representative bit is set to 1.

Bit 0 is used to summarize failures in the registers that follow. For example, Limit Register 3, bit 0, summarizes the failures from registers 4 through 10.

All enable bits are set to 1 by default.

To find the measurement number, use [Calc:Par:Mnum](#)

<n> Limit register: Choose from 1 to 10.

<keyword> **Example**

```
:CONDition? STAT:QUES:LIM4:COND?
:ENABLE <bits> STAT:QUES:LIM1:ENAB 1024
[:EVENTt]? STAT:QUES:LIM3?
:NTRansition <bits> STAT:QUES:LIM2:NTR 1024
:NTRansition? STAT:QUES:LIM1:NTR?
```

:PTRansition <bits> STAT:QUES:LIM5:PTR 0

:PTRansition? STAT:QUES:LIM1:PTR?

Bit	Weight	Limit Register <n>										Bit is set to 1 when the following conditions exist:
		1	2	3	4	5	6	7	8	...	41	
0	1	2-42	3-42	4-42	5-42	6-42	7-42	8-42	9-42	...	42	Summary Bit - If any bit from that register fails, it propagates to the previous register, bit 0.
Trace Numbers												
1	2	1	15	29	43	57	71	85	99	...	575	any point on trace fails the limit test
2	4	2	16	30	44	58	72	86	100	...	576	any point on trace fails the limit test
3	8	3	17	31	45	59	73	87	101	...	577	any point on trace fails the limit test
4	16	4	18	32	46	60	74	88	102	...	578	any point on trace fails the limit test
5	32	5	19	33	47	61	75	89	103	...	579	any point on trace fails the limit test
6	64	6	20	34	48	62	76	90	104	...	580	any point on trace fails the limit test
7	128	7	21	35	49	63	77	91	105	...	--	any point on trace fails the limit test
8	256	8	22	36	50	64	78	92	106	...	--	any point on trace fails the limit test
9	512	9	23	37	51	65	79	93	107	...	--	any point on trace fails the limit test
10	1024	10	24	38	52	66	80	94	108	...	--	any point on trace fails the limit test
11	2048	11	25	39	53	67	81	95	109	...	--	any point on trace fails the limit test

12	4096	12	26	40	54	68	82	96	110	...	--	any point on trace fails the limit test
13	8192	13	27	41	55	69	83	97	111	...	--	any point on trace fails the limit test
14	16384	14	28	42	56	70	84	98	112	...	--	any point on trace fails the limit test

To determine Register, Bit number, and Weight for trace numbers between 113 and 574 (not shown in the above table) use the following calculations.

The limit status for trace numbers higher than 580 can NOT be tracked.

The following example calculates the Register, Bit number, and Bit Weight for trace # 400:

- To determine Limit **Register** number, use $((\text{Trace \#} - 1) / 14) + 1$.
- To determine Limit **Bit Number**, use the **remainder** +1 of the above calculation.
- $((400-1)/14) + 1 = \text{Register\# r+1Bit}$
 - $399/14 = 28 \text{ r}7$
 - $28+1= \text{Register 29}$
 - $7+1= \text{Bit number 8}$
- To determine Limit **Bit Weight**: Use above table. For example: Bit 8 = **256**

STATus:QUEStionable:DEFine<keyword>

Summarizes conditions in the Questionable:Define:User<1|2|3> event registers.

<keyword>	Example
:CONDition?	STAT:QUES:DEF:COND?
:ENABle <bits>	STAT:QUES:DEF:ENAB 1024
[:EVENT]?	STAT:QUES:DEF?
:NTRansition <bits>	STAT:QUES:DEF:NTR 1024
:PTRansition <bits>	STAT:QUES:DEF:PTR 0

Bit	Weight	Description	Bit is set to 1 when the following conditions exist:
1	2	USER1	any bit in the USER1 event register is set to 1
2	4	USER2	any bit in the USER2 event register is set to 1
3	8	USER3	any bit in the USER3 event register is set to 1

STATus:QUEStionable:DEFine:USER<1|2|3><keyword>

Monitors conditions that you define and map in any of the three QUES:DEF:USER event registers.

<keyword> **Example**

:ENABLE <bits>	STAT:QUES:DEF:USER1:ENABLE 1024
[[:EVENTt]?]	STAT:QUES:DEF:USER1?
:MAP <bit>,<error>	STAT:QUES:DEF:USER1:MAP 0,-113 'when error -113 occurs, bit 0 in USER1 will set to 1.

Bit	Weight	Description	Bit is set to 1 when the following conditions exist:
0	1	for user	user defined
1	2	for user	user defined
2	4	for user	user defined
3	8	for user	user defined
4	16	for user	user defined
5	32	for user	user defined
6	64	for user	user defined
7	128	for user	user defined
8	256	for user	user defined
9	512	for user	user defined
10	1024	for user	user defined
11	2048	for user	user defined
12	4096	for user	user defined
13	8192	for user	user defined
14	16384	for user	user defined

Standard Event Status Register

Monitors "standard" events that occur in the analyzer. This register can only be cleared by:

- a Clear Command (*CLS).
- reading the Standard Enable Status Register (*ESE?).
- a power-on transition. The analyzer clears the register and then records any transitions that occur, including setting the Power On bit (7).

Commands Description

*ESE? Reads the settings of the standard event **ENABLE** register.

*ESE <*bits*> Sets bits in the standard event **ENABLE** register. The current setting is saved in non-volatile memory.

<*bits*> The sum of weighted bits in the register. Use *ESE 0 to clear the enable register.

*ESR? Reads and clears the **EVENT** settings in the Standard Event Status register.

*OPC Sets bit 0 when the overlapped command is complete. (see Understanding Command Synchronization / OPC).

*OPC? Operation complete query - read the Operation Complete bit (0).

Bit	Weight	Description	Bit is set to 1 when the following conditions exist:
0	1	Operation Complete	the two following events occur in order : 1. the *OPC command is sent to the analyzer 2. the analyzer completes all pending overlapped commands
1	NA	Request Control	Not Supported - the analyzer application is not configured to control GPIB operation
2	4	Query Error	a query error is detected indicating: - an attempt to read data from the output queue when no data was present OR - data in the output queue was lost, as in an overflow
4	16	Execution Error	an execution error is detected indicating: - a <PROGRAM DATA> element was outside the legal range or inconsistent with the operation of the analyzer OR

			- the analyzer could not execute a valid command due to some internal condition
5	32	Command Error	<p>a command error is detected indicating that the analyzer received a command that:</p> <ul style="list-style-type: none"> • did not follow proper syntax • was misspelled • was an optional command it does not implement
7	128	Power ON	Power to the analyzer has been turned OFF and then ON since the last time this register was read.

STATus:OPERation<keyword>

Summarizes conditions in the Averaging and Operation:Define:User<1|2|3> event registers.

[<keyword>](#) **Example**

:CONDition? STAT:OPER:COND?

:ENABle <bits> STAT:OPER:ENAB 1024

[:EVENTt]? STAT:OPER?

:NTRansition <bits> STAT:OPER:NTR 1024

:PTRansition <bits> STAT:OPER:PTR 0

Bit	Weight	Description	Bit is set to 1 when the following conditions exist:
8	256	Averaging summary	either enabled bit in the Averaging summary event register is set to 1
9	512	User Defined summary	
10	1024	Device summary	either enabled bit in the Device summary event register is set to 1

STATus:OPERation:AVERaging<n> <keyword>

Monitors and summarizes the status of Averaging on traces 1 to 128. When averaging for a trace is complete, the representative bit is set to 1.

Bit 0 is used to summarize the status in the registers that follow. For example, Average Register, bit 0, summarizes the status from registers 4 through 10.

All enable bits are set to 1 by default.

To find the measurement number, use [Calc:Par:Mnum](#).

<n> Averaging Register. Choose from 1 to 10

<keyword> **Example**

:CONDition? STAT:OPER:AVER1:COND?

:ENABle <bits> STAT:OPER:AVER1:ENAB 1024

[:EVENTt]? STAT:OPER:AVER1?

:NTRansition <bits> STAT:OPER:AVER1:NTR 1024

:PTRansition <bits> STAT:OPER:AVER1:PTR 0

Averaging Register <n>												Bit is set to 1 when the following conditions exist:
Bit	Weight	1	2	3	4	5	6	7	8	...	42	
0	1	2-42	3-42	4-42	5-42	6-42	7-42	8-42	9-42	...	42	Summary Bit - If any bit from that register fails, it propagates to the previous register, bit 0.
Trace Numbers												
1	2	1	15	29	43	57	71	85	99	...	575	Averaging on this trace is complete
2	4	2	16	30	44	58	72	86	100	...	576	Averaging on this trace is complete
3	8	3	17	31	45	59	73	87	101	...	577	Averaging on this trace is complete
4	16	4	18	32	46	60	74	88	102	...	578	Averaging on this trace is complete

5	32	5	19	33	47	61	75	89	103	...	579	Averaging on this trace is complete
6	64	6	20	34	48	62	76	90	104	...	580	Averaging on this trace is complete
7	128	7	21	35	49	63	77	91	105	...	--	Averaging on this trace is complete
8	256	8	22	36	50	64	78	92	106	...	--	Averaging on this trace is complete
9	512	9	23	37	51	65	79	93	107	...	--	Averaging on this trace is complete
10	1024	10	24	38	52	66	80	94	108	...	--	Averaging on this trace is complete
11	2048	11	25	39	53	67	81	95	109	...	--	Averaging on this trace is complete
12	4096	12	26	40	54	68	82	96	110	...	--	Averaging on this trace is complete
13	8192	13	27	41	55	69	83	97	111	...	--	Averaging on this trace is complete
14	16384	14	28	42	56	70	84	98	112	...	--	Averaging on this trace is complete

To determine Register, Bit number, and Weight for trace numbers between 113 and 574 (not shown in the above table) use the following calculations.

The averaging status for trace numbers higher than 580 can NOT be tracked.

The following example calculates the Register, Bit number, and Bit Weight for trace # 400:

- To determine **Register** number, use $((\text{Trace \#} - 1) / 14) + 1$.
- To determine **Bit Number**, use the **remainder** +1 of the above calculation.
- $((400-1)/14) + 1 = \text{Register\# } r+1\text{Bit}$
 - $399/14 = 28 \text{ r}7$
 - $28+1= \text{Register } 29$
 - $7+1= \text{Bit number } 8$

- To determine **Bit Weight**: Use above table. For example: Bit 8 = 256

STATus:OPERation:DEFine<keyword>

Summarizes conditions in the OPERation:Define:User<1|2|3> event registers.

<keyword>	Example
:CONDition?	STAT:OPER:DEF:COND?
:ENABle <bits>	STAT:OPER:DEF:ENAB 12
[:EVENTt]?	STAT:OPER:DEF?
:NTRansition <bits>	STAT:OPER:DEF:NTR 12
:PTRansition <bits>	STAT:OPER:DEF:PTR 0

Bit	Weight	Description	Bit is set to 1 when the following conditions exist:
1	2	USER1	any bit in the USER1 event register is set to 1
2	4	USER2	any bit in the USER2 event register is set to 1
3	8	USER3	any bit in the USER3 event register is set to 1

STATus:OPERation:DEFine:USER<1|2|3><keyword>

Monitors conditions that you define and map in any of the three OPER:DEF:USER event registers.

<keyword>	Example
:ENABle <bits>	STAT:OPER:DEF:USER1:ENAB 1024
[:EVENTt]?	STAT:OPER:DEF:USER1?
:MAP <bit>,<error>	STAT:OPER:DEF:USER1:MAP 0,-113 'when error -113 occurs, bit 0 in USER1 will set to 1.

Bit	Weight	Description	Bit is set to 1 when the following conditions exist:
0	1	for user	user defined
1	2	for user	user defined
2	4	for user	user defined
3	8	for user	user defined
4	16	for user	user defined
5	32	for user	user defined
6	64	for user	user defined
7	128	for user	user defined
8	256	for user	user defined
9	512	for user	user defined
10	1024	for user	user defined
11	2048	for user	user defined
12	4096	for user	user defined
13	8192	for user	user defined
14	16384	for user	user defined

STATus:OPERation:DEvice<keyword>

Summarizes conditions in the OPERation:DEvice event registers.

<keyword> **Example**

:CONDition? STAT:OPER:DEV:COND?

:ENABLE <bits> STAT:OPER:DEV:ENAB 16

[:EVENTt]? STAT:OPER:DEV?

:NTRansition <bits> STAT:OPER:DEV:NTR 16


:PTRansition <bits> STAT:OPER:DEV:PTR 0


Bit	Weight	Description	Bit is set to 1 when the following conditions exist:
0	1	Unused	
1	2	Unused	
2	4	Unused	
3	8	Unused	
4	16	Sweep Completed	When sweep is complete
5	32	Unused	
6	64	Unused	
7	128	Unused	
8	256	Unused	
9	512	Unused	
10	1024	Unused	
11	2048	Unused	
12	4096	Unused	
13	8192	Unused	
14	16384	Unused	

Last modified:

December 3, 2007 Fixed typo in STAT:QUES:INT register
9/19/06 MQ Modified for unlimited windows.

System Commands

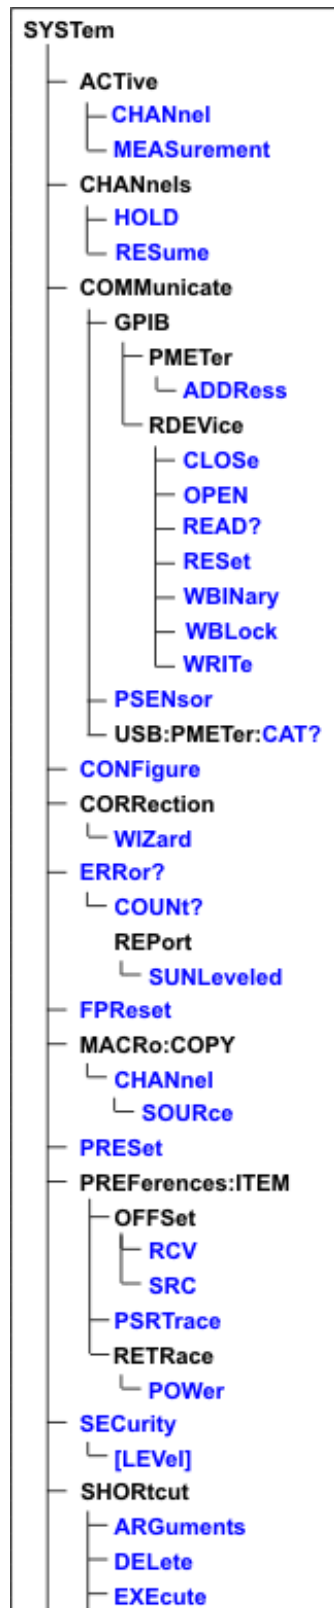

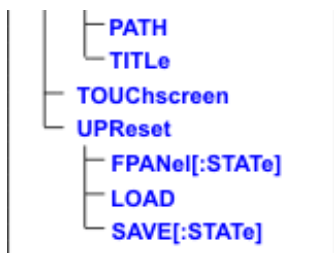

Click on a [blue](#) keyword to view the command details.

See Also

- [Example Programs](#)
- [Learn about Preset](#)
- [Synchronizing the PNA and Controller](#)
- [SCPI Command Tree](#)

SYSTem:ACTive:CHANnel?

(Read-only) Returns the number of the active channel or an error message if there is no active channel. The active channel is the channel number that contains the active measurement.

Examples

```
SYST:PRES
SYST:ACT:CHAN?

'Returns 1
```

Return Type Integer

Default Not Applicable

SYSTem:ACTive:MEASurement?

(Read-only) Returns the name of the active measurement or an error message if there is no active measurement. While looking at the PNA display, the active measurement is the trace that has an indented [Trace Status button](#) and a label in the upper-left corner of the display. Only displayed measurements can be active.

Examples

```
SYST:PRES
SYST:ACT:MEAS?

'Returns "CH1_S11_1"
```

Return Type String

Default Not Applicable

SYSTem:CHANnels:HOLD

(Write-only) Places all channels in hold mode. To place a single channel in hold mode, use [SENS:SWE:MODE](#).

Examples `SYST:CHAN:HOLD`

Query Syntax Not Applicable

Default Not Applicable

SYSTem:CHANnels:RESume

(Write-only) Resumes the trigger mode of all channels that was in effect before sending [SYSTem:CHANnels:HOLD](#) (must be sent before SYST:CHAN:RESume).

Examples `SYST:CHAN:RES`

Query Syntax Not Applicable

Default Not Applicable

SYSTem:COMMunicate:GPIB:PMETer:ADDRes <num> **Superseded**

Note: This command is replaced with [SYST:COMM:PSENsor](#)

(Read-Write) Specifies the GPIB address of the power meter to be used in a source power calibration. When performing a source power cal, the PNA will search VISA interfaces that are configured in the Agilent IO Libraries on the PNA.

Use

Parameters

<num> GPIB address of the power meter. Choose any integer between 0 and 30.

Examples

```
SYST:COMM:GPIB:PMET:ADDR 13
system:communicate:gpiB:pmeter:address 14
```

Query Syntax SYSTem:COMMunicate:GPIB:PMETer:ADDRes?

Return Type Numeric

Default 13

SYSTem:COMMunicate:GPIB:RDEvice:CLOSe <ID>

(Write only) Closes the remote GPIB session. This command should be sent when ending every successful OPEN session.

Parameters

<ID> Session identification number that was returned with the [OPEN?](#) command.

Examples [See an example program](#)

Query Syntax Not Applicable

Default Not Applicable

SYSTem:COMMunicate:GPIB:RDEvice:OPEN <bus>, <addr>, <timeout>

(Read-Write) Initiates a GPIB pass-through session. First send this OPEN command, then send the OPEN query to read the session ID number. An existing GPIB pass-through session remains open after an instrument preset.

To learn more about GPIB pass-through capability, see the [example program](#).

Parameters

<bus> Bus ID number. You can find the USB-GPIB adapter bus number by looking at the dialog that appears when the USB-GPIB device is connected. Error 1073 indicates the bus or address number is incorrect.

<addr> GPIB Address of the device to be controlled

<timeout> The amount of time (in milliseconds) to wait for a response from the remote device after sending a command. A "timeout" error is displayed after this time has passed without a response.

Examples [See an example program](#)

Query Syntax SYSTem:COMMunicate:GPIB:RDEvice:OPEN?

Returns the session identification number that is used when communicating with this device.

Return Type Numeric

Default Not Applicable

SYSTem:COMMunicate:GPIB:RDEvice:READ? <ID>

(Read-only) Returns data from the GPIB pass-through device.

Parameters

<ID> Session identification number that was returned with the [OPEN?](#) command.

Examples [See an example program](#)

Return Type String

Default Not Applicable

SYSTem:COMMunicate:GPIB:RDEvice:RESet

(Write-only) Performs the same function as [SYST:COMM:GPIB:RDEV:CLOS](#) except that ALL pass-through sessions are closed.

Examples `SYST:COMM:GPIB:RDEV:RES`

Query Syntax Not Applicable

Default Not Applicable

SYSTem:COMMunicate:GPIB:RDEvice:WBINary <ID>,<data>

(Write-only) Sends data to a GPIB pass-through device. This command requires a header that specifies the size of the data to be written. The header (described below) is not passed along to the device.

Use this command if too many embedded quotes prevent you from using [SYST:COMM:GPIB:RDEV:WRIT](#).

Use [SYST:COMM:GPIB:RDEV:OPEN](#) to open the pass through session.

Parameters

<ID> Session identification number that was returned with the [OPEN?](#) command.

<data> Data to be sent to the GPIB pass-through device. Use the following syntax:

```
#<num digits><byte count><data bytes><NL><END>
```

<num_digits> specifies how many digits are contained in <byte_count>

<byte_count> specifies how many data bytes will follow in <data bytes>

Examples `SYSTem:COMMunicate:GPIB:RDEvice:WBINary 101,#17ABC+XYZ<nl><end>`

- always sent before data.

1 - specifies that the byte count is one digit (7).

7 - specifies the number of data bytes that will follow, not counting <NL><END>.

ABC+XYZ - Data block

<nl><end> - always sent at the end of block data.

The following example sends a line feed at the end.

```
SYST:COMM:GPIB:RDEV:WBin 1,#210SYST:PRES<EOL>
```

The <EOL> represents your linefeed character.

Query Syntax Not Applicable

Default Not Applicable

SYSTem:COMMunicate:GPIB:RDEvice:WBLock <ID>,<data>

(Write-only) Same as [SYSTem:COMM:GPIB:RDEV:WBin](#) (above) but the header **IS** passed along to the device.

Use this command if too many embedded quotes prevent you from using [SYST:COMM:GPIB:RDEV:WRIT](#).

Parameters

<ID> Session identification number that was returned with the [OPEN?](#) command.

<data> Data to be sent to the GPIB pass-through device. [See previous command.](#)

Examples See previous example.

Query Syntax Not Applicable

Default Not Applicable

SYSTem:COMMunicate:GPIB:RDEvice:WRITe <ID>,<string>

(Write-only) Sends ASCII string data to the GPIB pass-through device.

A line feed is NOT appended to the string data. To send a line feed, see the example in [SYST:COMM:GPIB:RDEV:WBIN](#).

Parameters

<ID> Session identification number that was returned with the [OPEN?](#) command.

<string> Commands to be sent to the GPIB pass-through device.

Examples [See an example program](#)

Query Syntax Not Applicable

Default Not Applicable

SYSTem:COMMunicate:PSEnSor <char>, <string>

This command replaces [SYST:COMM:GPIB:PMET:ADDR](#).

(Read-Write) Specifies the type and location of the power meter to be used in a source power calibration.

Parameters

<char> Type of power meter/ sensor. Choose from:

- **GPIB** GPIB power meter
- **USB** USB power sensor or USB power sensor
- **LAN** LAN enabled power meter

<string> For **GPIB**, address of the power meter. Choose any integer between 0 and 30.

For **USB**, the ID string of the power meter or power sensor. Use [SYST:COMM:USB:PMET:CAT?](#) to see a list of ID strings of connected power meters and sensors.

For **LAN**, the hostname or IP address of the power meter.

Examples

```
SYST:COMM:PSEN gpib, "14"

system:communicate:psensor usb, "Agilent
Technologies,U2000A,MY12345678,X.01.16"

syst:comm:psen lan, "mymeter.agilent.com"
```

Query Syntax SYSTem:COMMunicate:PSEnSor?

Return Type Character / String

Default GPIB

SYSTem:COMMunicate:USB:PMETer:CATalog?

(Read-only) Returns the ID string of power meters / sensors that are connected to the PNA USB. Use the list to select a power sensor for a [source power cal.](#)

Parameters

Examples

```
SYST:COMM:USB:PMET:CAT?  
  
system:communicate:usb:pmeter:catalog?
```

Return Type Comma-delimited strings

Default Not applicable

SYSTem:CONFigure <model>,<address>

(Write-only) Restarts as an "N-port" PNA using the specified multiport test set.

[Learn more about PNA Multiport capability.](#)

[See other commands to configure multiport test sets.](#)

Parameters

<model> String - Model of the test set with which to restart.

Use "**Native**" to restart without a test set.

To see a list of supported test sets, use [SENS:MULT:CAT?](#)

<address> Numeric - GPIB Address of the test set. Ignored when model = "Native".

Examples

```
SYST:CONF "NATIVE",0  
system:configure "N44xx",18
```

Query Syntax Not Applicable

Default Not Applicable

SYSTem:CORRection:WIZard <char>

(Write-only) Launches either the Calibration Wizard or the Version 2 Calibration Kit File Manager dialog box.

Parameters

<char> Choose from:

MAIN - Launches the Calibration Wizard

CKIT - Launches the Version 2 Calibration Kit File Manager dialog box.

Both display on the PNA screen.

Examples

```
SYST:CORR:WIZ MAIN
system:correction:wizard ckit
```

Query Syntax Not Applicable

Default Not Applicable

SYSTem:ERRor?

(Read-only) Returns the next error in the error queue. Each time the analyzer detects an error, it places a message in the error queue. When the `SYSTEM:ERROR?` query is sent, one message is moved from the error queue to the output queue so it can be read by the controller. Error messages are delivered to the output queue in the order they were received. The error queue is cleared when any of the following conditions occur:

- When the analyzer is switched ON.
- When the `*CLS` command is sent to the analyzer.
- When all of the errors are read.

If the error queue overflows, the last error is replaced with a "Queue Overflow" error. The oldest errors remain in the queue and the most recent error is discarded.

Examples

```
SYST:ERR?
system:error?
```

Default Not Applicable

SYSTem:ERRor:COUNt?

(Read-only) Returns the number of errors in the error queue. Use SYST:ERR? to read an error.

Examples `SYST:ERR:COUN?`
`system:error:count?`

Default Not Applicable

SYSTem:ERRor:REPort:SUNLeveled <bool>

(Read-Write) Specifies whether or not to report [Source Unleveled](#) errors to the SCPI system error buffer.

Parameters

<bool> **True** (or 1) Report Source Unleveled Errors. Read errors from the system error buffer using [SYST:ERR?](#)

False (or 0) Do NOT report Source Unleveled Errors.

Examples `SYST:ERR:REP:SUNL 1`
`system:error:report:sunleveled true`

Query Syntax SYSTem:ERRor:REPort:UNLeveled?

Default False

SYSTem:FPRreset

(Write-only) Performs a standard [Preset](#), then deletes the default trace, measurement, and window. The PNA screen becomes blank.

Examples `SYST:FPR`
`system:fpreset`

Default Not applicable

SYSTem:MACRo:COPIY:CHANnel<cnum>[:TO] <num>

(Write-only) Sets up channel <num> as a copy of channel <cnum>. Learn more about [copy channels](#).

Parameters

- <cnum> Any existing channel number. If unspecified, value is set to 1.
- <num> Number of the channel which is to become a copy of channel <cnum>.

Examples

```
SYST:MACR:COPY:CHAN1 2  
  
system:macro:copy:channel2:to 3
```

Query Syntax Not Applicable

Default Not Applicable

SYSTem:MACRo:COPIY:CHANnel<fromChan>:SOURce <fromPort>,<toChan>,<toPort>

(Write-only) Copies and applies an existing Source Power Calibration to another channel. Learn more about [source power calibration](#).

Parameters

- <fromChan> Channel number of the existing source power correction.
- <fromPort> Port number of the existing source power correction.
- <toChan> Channel number to which the source power correction will be copied.
- <toPort> Port number to which the source power correction will be applied.

Examples

```
SYST:MACR:COPIY:CHAN1:SOUR 1,2,1  
  
system:macro:copy:channel2:source 2,1,2
```

Query Syntax Not Applicable

Default Not Applicable

SYSTem:PRESet

(Write-only) Deletes all traces, measurements, and windows. In addition, resets the analyzer to factory defined default settings and creates a S11 measurement named "CH1_S11_1". For a list of default settings, see [Preset](#).

Regardless of the state of the User Preset Enable checkbox, the SYST:PRESet command will always preset the PNA to the factory preset settings, and [SYST:UPReset](#) will always perform a User Preset.

If the PNA display is disabled with [DISP:ENAB OFF](#) then SYST:PRES will NOT enable the display.

This command performs the same function as [*RST](#).

Examples

```
SYST:PRES
system:preset
```

Default

Not applicable

SYSTem:PREferences:ITEM:OFFSet:RCV <bool>

(Read-Write) Set and return whether to offset the test port receivers by the amount of receiver attenuation. [Learn more](#).

To send this command using the PNA front panel, open the [GPIB Command Processor Console](#), then type either of the following examples at the command prompt. Then type the Query Syntax and press enter to be sure the PNA took the command.

This setting remains until changed again using this command, or until the hard drive is changed or reformatted.

Parameters

<bool> Choose from:

True (1) Offset the test port receivers

False (0) Do NOT offset the test port receivers

Examples

```
SYST:PREF:ITEM:OFFS:RCV 1
system:preferences:item:offset:rcv false
```

Query Syntax SYSTem:PREferences:ITEM:OFFSet:RCV?

Return Type Boolean

Default

PNA-L and E836xB: **False** (does NOT offset the display).

PNA-X: **True** (offsets the display).

SYSTem:PREferences:ITEM:OFFSet:SRC <bool>

(Read-Write) Set and return whether to offset the reference receiver by the amount of source attenuation. [Learn more.](#)

To send this command using the PNA front panel, open the [GPIB Command Processor Console](#), then type either of the following examples at the command prompt. Then type the Query Syntax and press enter to be sure the PNA took the command.

This setting remains until changed again using this command, or until the hard drive is changed or reformatted.

Parameters

<bool> Choose from:

True (1) Offset the reference receivers.

False (0) Do NOT Offset the reference receivers.

Examples

```
SYST:PREF:ITEM:OFFS:SRC 1
system:preferences:item:offset:src false
```

Query Syntax SYSTem:PREFerences:ITEM:OFFSet:SRC?

Return Type Boolean

Default All models: **True** (offset the display).

SYSTem:PREFerences:ITEM:PSRTrace <char>

(Read-Write) At the end of a power sweep, while waiting to trigger the next sweep, maintain source power at either the start power level or at the stop power level.

To send this command using the PNA front panel, open the [GPIB Command Processor Console](#), then type either of the following examples at the command prompt. Then type the Query Syntax and press enter to be sure the PNA took the command.

This setting remains until changed again using this command, or until the hard drive is changed or reformatted.

Parameters

<char> Choose from:

START - Maintain source power at the start power level.

STOP - Maintain source power at the stop power level.

Examples

```
SYST:PREF:ITEM:PSRT STOP
system:preferences:item:psrtrace start
```

Query Syntax	SYSTem:PREFerences:ITEM:PSRTrace?
Return Type	Character
<u>Default</u>	STARt

SYSTem:PREFerences:ITEM:RETRace:POWer <char>

(Read-Write) For single-band frequency or segment sweeps ONLY, specify whether to turn RF power ON or OFF during a retrace. [Learn more about RF power during sweep retrace.](#)

To send this command using the PNA front panel, open the [GPIB Command Processor Console](#), then type either of the following examples at the command prompt. Then type the Query Syntax and press enter to be sure the PNA took the command.

This setting remains until changed using this command, or until the hard drive is changed or reformatted.

Parameters

<char> Choose from:

AUTO: Power is left ON during retrace of single-band frequency or segment sweeps ONLY.

OFF: Power is turned OFF during retrace of single-band frequency or segment sweeps ONLY.

Examples

```
SYST:PREF:ITEM:RETR:POW OFF
```

```
system:preferences:item:retrace:power auto
```

Query Syntax	SYSTem:PREFerences:ITEM:RETRace:POWer?
Return Type	Character
<u>Default</u>	AUTO

SYSTem:SECurity[:LEVel] <char>

(Read-Write) Sets and returns the display of frequency information on the PNA screen and printouts.

[Learn more about security level.](#)

Parameters

<char> Choose from:

NONE - ALL frequency information is displayed.

LOW - NO frequency information is displayed. Frequency information can be redisplayed using the Security Setting dialog box or this command.

HIGH - LOW setting plus [GPIB console](#) is disabled. Frequency information can be redisplayed ONLY by performing a Preset, recalling an instrument state with None or Low security settings, or using this command.

EXTRa - HIGH setting plus [ASCII data saving](#) is disabled. Same method to redisplay frequency information as HIGH setting.

Examples

```
SYST:SEC LOW
system:security:level high
```

Query Syntax SYSTem:SECurity[:LEVel]?

Return Type Character

Default None

SYSTem:UPReset

(Write-only) Performs a User Preset. There must be an active User Preset state file (see [Load](#) and [Save](#)) or an error will be returned. [Learn more about User Preset.](#)

Regardless of the state of the User Preset Enable checkbox, the SYST:PRESet command will always preset the PNA to the factory preset settings, and [SYST:UPReset](#) will always perform a User Preset.

Examples

```
SYST:UPReset
system:upreset
```

Query Syntax Not Applicable

Default Not Applicable

SYSTem:UPReset:FPANel[:STATe] <bool>

(Read-Write) 'Checks' and 'clears' the enable box on the [User Preset dialog box](#). This only affects subsequent Presets from the front panel user interface.

Regardless of the state of the User Preset Enable checkbox, the [SYST:PRESet](#) command will always preset the PNA to the factory preset settings, and [SYST:UPReset](#) will always perform a User Preset.

Parameters

<bool> Front Panel User Preset State. Choose from:

0 User Preset OFF

1 User Preset ON

Examples

```
SYST:UPR:FPAN 1
```

```
system:upreset:fpanel:state 0
```

Query Syntax SYSTem:UPREset:FPANel[:STATe]?

Return Type Boolean

Default 0

SYSTem:UPReset:LOAD <file>

(Read-Write) Loads an existing instrument state file (.sta or .cst) to be used for User Preset. Subsequent execution of [SYSTem:UPReset](#) will cause the PNA to assume this instrument state.

Regardless of the state of the User Preset Enable checkbox, the [SYST:PRESet](#) command will always preset the PNA to the factory preset settings, and [SYST:UPReset](#) will always perform a User Preset.

[Learn more about User Preset.](#)

Parameters

<file> String - Name of the file to be loaded. The default folder "C:\Program Files\Agilent\Network Analyzer\Documents" is used if unspecified. Change the default folder name using [MMEMory:CDIRectory](#).

Examples

```
SYST:UPR:LOAD '1MHzto20GHzUserPreset.cst'
```

```
system:upreset:load 'C:\Documents and Settings\Administrator\My Documents\NewUserPreset.cst'
```

Query Syntax Not Applicable

Default Not Applicable

SYSTem:UPReset:SAVE[:STATe]

(Write-only) Saves the current instrument settings as UserPreset.sta. Subsequent execution of [SYSTem:UPReset](#) will cause the PNA to assume this instrument state.

Regardless of the state of the User Preset Enable checkbox, the [SYST:PRESet](#) command will always preset the PNA to the factory preset settings, and [SYST:UPReset](#) will always perform a User Preset.

[Learn more about User Preset.](#)

Examples

```
SYST:UPR:SAVE  
  
system:upreset:save:state
```

Query Syntax Not Applicable

Default Not Applicable

SYSTem:SHORTcut<n>:ARGuments<string>

(Read-Write) Reads and writes the arguments for the specified macro. On the [Edit Macro Dialog](#), this is called the "Macro run string parameters".

Parameters

<n> Numeric. Number of the macro that is stored in the PNA.

To find the number of a macro, either open the [Macro Setup dialog](#) and count the line number of the desired macro, or query the titles of all 12 macros for the desired macro title.

<string> Arguments for the specified macro.

Examples

```
SYST:SHOR1:ARG  
"http://na.tm.agilent.com/pna/help/PNAWebHelp/help.htm"
```

Query Syntax SYSTem:SHORTcut<n>:ARGuments?

Default Not Applicable

SYSTem:SHORTcut<n>:DELeTe

(Write-only) Removes the specified macro from the list of macros in the PNA. Does not delete the macro executable file.

Parameters

<n> Numeric. Number of the macro that is stored in the PNA.

To find the number of a macro, either open the [Macro Setup dialog](#) and count the line number of the desired macro, or query the titles of all 12 macros for the desired macro title.

Examples

```
SYST:SHOR1:DEL
```

Query Syntax Not Applicable

Default Not Applicable

SYSTem:SHORtcut<n>:EXECute

(Write-only) Executes (runs) the specified Macro (shortcut) that is stored in the PNA.

Parameters

<n> Numeric. Number of the macro that is stored in the PNA.

To find the number of a macro, either open the [Macro Setup dialog](#) and count the line number of the desired macro, or query the titles of all 12 macros for the desired macro title.

Examples

```
SYST:SHOR1:EXEC
```

Query Syntax Not Applicable

Default Not Applicable

SYSTem:SHORtcut<n>:PATH <string>

(Read-Write) Defines a Macro (shortcut) by linking a path and file name to the Macro number. To be executed, the executable file must be put in the PNA at the location indicated by this command.

Parameters

- <n> Numeric. Number of the macro to be stored in the analyzer. If the index number already exists, the existing macro is replaced with the new macro.
- <string> Full path, file name, and extension, of the existing macro "executable" file.
- To find the number of a macro, either open the [Macro Setup dialog](#) and count the line number of the desired macro, or query the titles of all 12 macros for the desired macro title.

Examples

```
SYST:SHOR1:PATH "C:\Program Files\Agilent\Network Analyzer\Documents\unguideMultiple.vbs"
```

Query Syntax SYSTem:SHORtcut<n>:PATH?

Default Not Applicable

SYSTem:SHORtcut<n>:TITLe<string>

(Read-Write) Reads and writes the name of the specified macro.

Parameters

- <n> Numeric. Number of the macro that is stored in the PNA.
- To find the number of a macro, either open the [Macro Setup dialog](#) and count the line number of the desired macro, or query the titles of all 12 macros for the desired macro title.
- <string> The name to be assigned to the macro.

Examples

```
SYST:SHOR1:TITL "Guided 4-Port Cal"
```

Query Syntax SYSTem:SHORtcut<n>:TITLe?

Default Not Applicable

SYSTem:TOUCHscreen[:STATe] <bool>

(Read-Write) Enables and disables the **PNA-X** touchscreen.

This setting remains until changed again from the front-panel or remotely, or until the hard drive is changed or reformatted.

Parameters

<bool> Choose from:

True (1) Enables the touchscreen.

False (0) Disables the touchscreen.

Examples

```
SYST:TOUC 1
system:touchscreen:state false
```

Query Syntax SYSTem:TOUCHscreen[:STATe]?

Return Type Boolean


Default **TRUE** when shipped from factory.

Last modified:

December 3, 2007	Added Extra security and USB power meter commands
February 23, 2007	MX Added touchscreen command
Nov. 15, 2006	MX Added Unleveled Error reporting
Oct 31, 2006	Added PSRTrace command

Trigger Commands

Controls the starts or ends of data acquisition.

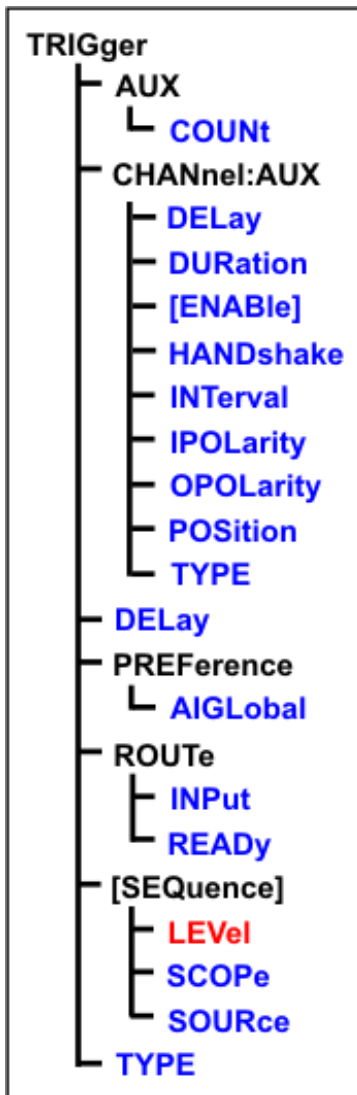

Click on a [blue](#) keyword to view the command details.

See Also

- **Example program** [Triggering the PNA](#)
- [See other SCPI Triggering commands](#)
- [Learn about External / Aux Triggering](#)
- [Synchronizing the PNA and Controller](#)

- [SCPI Command Tree](#)
-

TRIGger:AUX:COUNT?

(Read-only) Returns the number of AUX trigger input / output connector pairs in the instrument.

- PNA-X = 2
- E836xB and PNA-L models = 1

Parameters

Examples

```
TRIG:CHAN:AUX:COUN?  
  
trigger:channel2:aux:count?
```

Return Type Numeric

Default Not Applicable

TRIGger:CHANnel<ch>:AUX<n>:DELay <num>

(Read-Write) Specifies the delay that should be applied by the PNA after the Aux trigger input is received and before the acquisition is made.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <n> Rear panel connectors used to send or receive signals.

- PNA-X - choose from **1** ([AUX TRIG 1 IN](#)) or **2** ([AUX TRIG 2 IN](#))
- All other models: choose **1**.

If unspecified, value is set to 1.

- <num> Delay value in seconds. Choose a value between 0 and 3.0 seconds.

Examples

```
TRIG:CHAN:AUX:DEL .5  
  
trigger:channel2:aux2:delay 1.5
```

Query Syntax TRIGger:CHANnel<ch>:AUX<n>:DELay?

Return Type Numeric

Default 0

TRIGger:CHANnel<ch>:AUX<n>:DURation <num>

(Read-Write) Specifies the width of the output pulse, which is the time that the Aux trigger output will be asserted.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<n> Rear panel connector used to send or receive signals.

- PNA-X - choose from **1** ([AUX TRIG 1](#)) or **2** ([AUX TRIG 2](#))
- All other models: choose **1**. ([BNC Trig I/O](#))

If unspecified, value is set to 1.

<num> Duration value in seconds. Choose a value between 1us (1E-6) and 1

Examples

```
TRIG:CHAN:AUX:DUR .1
```

```
trigger:channel2:aux2:duration .01
```

Query Syntax TRIGger:CHANnel<ch>:AUX<n>:DURation?

Return Type Numeric

Default 1E-6

TRIGger:CHANnel<ch>:AUX<n>[:ENABLE] <bool>

(Read-Write) Turns ON / OFF the trigger output.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<n> Rear panel connector used to send or receive signals.

- PNA-X - choose from **1** ([AUX TRIG 1](#)) or **2** ([AUX TRIG 2](#))
- All other models: choose **1**. ([BNC Trig I/O](#))

If unspecified, value is set to 1.

<bool> **ON** (or 1) - turns trigger output ON.

OFF (or 0) - turns trigger output OFF.

Examples

```
TRIG:CHAN:AUX 1
```

```
trigger:channel2:aux2:enable off
```

Query Syntax	TRIGger:CHANnel<ch>:AUX<n>:[ENABle]?
Return Type	Boolean
<u>Default</u>	OFF

TRIGger:CHANnel<ch>:AUX<n>:HANDshake <bool>

(Read-Write) Turns handshake ON / OFF.

To enable handshake, the main trigger enable must also be set using [TRIG:CHAN:AUX:ENAB](#).

When ON, PNA waits indefinitely for the input line to be asserted before continuing with the acquisition. When OFF, the PNA acquires data without waiting.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<n> Rear panel connector used to send or receive signals.

- PNA-X - choose from 1 ([AUX TRIG 1](#)) or 2 ([AUX TRIG 2](#))
- All other models: choose 1. ([BNC Trig I/O](#))

If unspecified, value is set to 1.

<bool> **ON** (or 1) - turns handshaking ON.

OFF (or 0) - turns handshaking OFF.

Examples

```
TRIG:CHAN:AUX:HAND 1
```

```
trigger:channel2:aux2:handshake off
```

Query Syntax	TRIGger:CHANnel<ch>:AUX<n>:HANDshake?
Return Type	Boolean
<u>Default</u>	OFF

TRIGger:CHANnel<ch>:AUX<n>:INTerval <char>

(Read-Write) Specifies how often a trigger output signal is sent.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<n> Rear panel connector used to send or receive signals.

- PNA-X - choose from **1** ([AUX TRIG 1](#)) or **2** ([AUX TRIG 2](#))
- All other models: choose **1**. ([BNC Trig I/O](#))

If unspecified, value is set to 1.

<char> Choose from:

- **POINT** Trigger signal is sent every data point. (effectively the same as [Point sweep](#))
- **SWEep** Trigger signal is sent once every sweep.

Examples

```
TRIG:CHAN:AUX:INT POI
```

```
trigger:channel2:aux2:interval sweep
```

Query Syntax TRIGger:CHANnel<ch>:AUX<n>:INTerval?

Return Type Character

Default SWEep

TRIGger:CHANnel<ch>:AUX<n>:IPOLarity <char>

(Read-Write) Specifies the polarity of the trigger IN signal to which the PNA will respond.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<n> Rear panel connector used to send or receive signals.

- PNA-X - choose from **1** ([AUX TRIG 1](#)) or **2** ([AUX TRIG 2](#))
- All other models: choose **1**. ([BNC Trig I/O](#))

If unspecified, value is set to 1.

<char> Choose from:

- **POSitive** PNA responds to leading edge or HIGH level

- **NEGative** PNA responds to trailing edge or LOW level.

Set Edge or Level triggering using [TRIG:CHAN:AUX:TYPE](#)

Examples

```
TRIG:CHAN:AUX:IPOL POS
```

```
trigger:channel2:aux2:ipolarity negative
```

Query Syntax TRIGger:CHANnel<ch>:AUX<n>:IPOLarity?

Return Type Character

Default NEGative

TRIGger:CHANnel<ch>:AUX<n>:OPOLarity <char>

(Read-Write) Specifies the polarity of the Aux Output signal being supplied by the PNA.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<n> Rear panel connector used to send or receive signals.

- PNA-X - choose from **1** ([AUX TRIG 1](#)) or **2** ([AUX TRIG 2](#))
- All other models: choose **1**. ([BNC Trig I/O](#))

If unspecified, value is set to 1.

<char> Choose from:

- **POSitive** PNA sends positive going pulse.
- **NEGative** PNA sends negative going pulse.

Examples

```
TRIG:CHAN:AUX:OPOL NEG
```

```
trigger:channel2:aux2:opolarity positive
```

Query Syntax TRIGger:CHANnel<ch>:AUX<n>:OPOLarity?

Return Type Character

Default NEGative

TRIGger:CHANnel<ch>:AUX<n>:POSition <char>

(Read-Write) Specifies whether the aux trigger out signal is sent **BEFORE** or **AFTER** the acquisition.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<n> Rear panel connector used to send or receive signals.

- PNA-X - choose from **1** ([AUX TRIG 1](#)) or **2** ([AUX TRIG 2](#))
- All other models: choose **1**. ([BNC Trig I/O](#))

If unspecified, value is set to 1.

<char> Choose from:

- **BEFORE** Use if the external device needs to be triggered before the data is acquired, such as a power meter.
- **AFTER** Use if the external device needs to be triggered just after data has been acquired, such as an external source. This could be more efficient since it allows the external device to get ready for the next acquisition at the same time as the PNA.

Examples

```
TRIG:CHAN:AUX:POS BEF
```

```
trigger:channel2:aux2:position after
```

Query Syntax TRIGger:CHANnel<ch>:AUX<n>:POSition?

Return Type Character

Default AFTer

TRIGger:CHANnel<ch>:AUX<n>:TYPE <char>

(Read-Write) Specifies the type of Aux input detection that the PNA will employ.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<n> Rear panel connector used to send or receive signals.

- PNA-X - choose from **1** ([AUX TRIG 1](#)) or **2** ([AUX TRIG 2](#))
- All other models: choose **1**. ([BNC Trig I/O](#))

If unspecified, value is set to 1.

<char> Choose from:

EDGE PNA responds to the leading edge of a signal

LEVel PNA responds to the level (HIGH or LOW) of a signal

Examples

```
TRIG:CHAN:AUX:TYPE EDGE
trigger:channel2:aux2:type level
```

Query Syntax TRIGger:CHANnel<ch>:AUX<n>:TYPE?

Return Type Character

Default EDGE

TRIGger:DElay <num>

(Read-Write) Sets and reads the trigger delay. This delay is only applied while in [External Trigger](#) mode. After an external trigger is applied, the start of the sweep is held off for an amount of time equal to the delay setting plus any inherent latency.

Parameters

<num> Delay value in seconds. Choose from 0 to 107.

Examples

```
TRIG:DEL .0003

Sets the trigger delay to 300 microseconds. The sweep will not
start until approximately 300 microseconds after an external
trigger is applied.
```

Query Syntax TRIGger:DElay?

Return Type Numeric

Default 0

TRIGger:CHANnel<ch>:ROUTe:INPut <char>

(Read-Write) Specifies the connector to use for the external trigger input.(Similar to [CONTROL:SIGNal <conn>](#))

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <char> Choose from:
- MAIN** - meas trig ready
 - MATH** - material handler
 - AUXT** - auxio (PNA-L and E836xB ONLY)

Examples

```
TRIG:CHAN:ROUT:INP MAIN
trigger:channel2:route:input main
```

Query Syntax TRIGger:CHANnel<ch>:ROUTe:INPut?

Return Type Character

Default

TRIGger:CHANnel<ch>:ROUTe:READy <char>

(Read-Write) Specifies the connector to use for the external trigger OUT ready line.

Parameters

- <ch> Any existing channel number. If unspecified, value is set to 1.
- <char> Choose from:
- MAIN** - [Meas trig ready](#)
 - MATH** - [Material handler pin 21](#)
 - AUXT** - [AUX I/O pin 18](#) (PNA-L and E836xB ONLY)

Examples

```
TRIG:CHAN:ROUT:READ main
trigger:channel2:route:ready auxt
```

Query Syntax TRIGger:CHANnel<ch>:ROUTe:READy?

Return Type Character

Default

TRIGger:PREFerence:AIGLobal <bool>

(Read-Write) Sets the External Trigger OUT behavior to either Global or Channel. [Learn more.](#)

This command will cause the PNA to [Preset](#).

This setting remains until changed again using this command, or until the hard drive is changed or reformatted.

To send this command using the PNA front panel, open the [GPIB Command Processor Console](#), then type either of the following examples at the command prompt. Then type the Query Syntax and press enter to be sure the PNA took the command.

Parameters

<bool> Choose from:

- **ON** (or 1) - External I/O Trig properties apply to ALL channels (Global)
- **OFF** (or 0) - External I/O Trig properties apply to each channel independently.

Examples

```
TRIG:PREF:AIGL 1  
trigger:preference:aiglobal 0
```

Query Syntax TRIGger:PREFerence:AIGLobal?

Return Type Boolean

Default 1 - E836xB and PNA-L models

0 - PNA-X models

TRIGger[:SEQuence]:LEVel <char> - **Superseded**

This command is replaced with [CONTRol:SIGNal](#)

(Read-Write) Triggers either on a **High or Low** level trigger signal. This setting only has an effect when [TRIG:SOURce EXTernal](#) is selected.

Parameters

<char> Choose from:

- **HIGH** - analyzer triggers on TTL **High**
- **LOW** - analyzer triggers on TTL **Low**

Examples

```
TRIG:LEV HIGH
trigger:sequence:level low
```

Query Syntax TRIGger[:SEquence]:LEVel?

Return Type Character

Default LOW

TRIGger[:SEquence]:SCOPE <char>

(Read-Write) Specifies whether a trigger signal is sent to all channels or only the current channel.

See [Triggering the PNA using SCPI](#).

Parameters

<char> Choose from:

- **ALL** - trigger signal is sent to all channels. Also sets [SENS:SWEep:TRIG:POINT OFF](#) on **ALL** channels.
- **CURRENT** - trigger signal is sent to only one channel at a time. With each trigger signal, the channel is incremented to the next triggerable channel.

Examples

```
TRIG:SCOP ALL
trigger:sequence:scope current
```

Query Syntax TRIGger[:SEquence]:SCOPE?

Return Type Character

Default ALL

TRIGger[:SEquence]:SOURce <char>

(Read-Write) Sets the source of the sweep trigger signal. This command is a super-set of [INITiate:CONTinuous](#), which can NOT set the source to External. To configure external triggering, see [CONTrol:SIGNal](#).

See [Triggering the PNA using SCPI](#).

Parameters

<char> Choose from:

- **EXTernal** - external (rear panel) source.
- **IMMediate** - internal source sends continuous trigger signals
- **MANual** - sends one trigger signal when manually triggered from the front panel or [INIT:IMM](#) is sent.

Examples

```
TRIG:SOUR EXT
trigger:sequence:source immediate
```

Query Syntax TRIGger[:SEquence]:SOURce?

Return Type Character

Default IMMediate

TRIGger:TYPE <char>

(Read-Write) Specifies the type of EXTERNAL trigger input detection used to listen for signals on the Ext I/O Trig and Meas Trig IN connectors. Edge triggers are most commonly used.

Parameters

<ch> Any existing channel number. If unspecified, value is set to 1.

<char> Choose from:

EDGE PNA responds to the rising and falling edge of a signal

LEVel PNA responds to a level (HIGH or LOW).

Examples

```
TRIG:TYPE EDGE
trigger:type level
```

Query Syntax TRIGger:TYPE?

Return Type Character

Default EDGE

Last modified:

April 24, 2007	Clarified trigger source and scope
Feb 15, 2007	MX Updated for AUX triggering

Catalog Measurements using SCPI

This Visual Basic Program does the following:

- Catalogs the currently defined measurements, windows, and traces
- Selects a measurement for further definition
- Adds a Title to the window

To run this program, you need:

- An established [GPIB interface connection](#)

[See Other SCPI Example Programs](#)

```
Dim Meas as String
Dim Win as String
Dim Trace as String

'Read the current measurements in Channel 1
GPIB.Write "CALCulate1:PARAMeter:CATalog?"
Meas = GPIB.Read
MsgBox ("Ch1 Measurments: " & Meas)

'Read the current windows
GPIB.Write "DISPlay:CATalog?"
Win = GPIB.Read
MsgBox ("Windows: " & Win)

'Read current traces in window 1
GPIB.Write "DISPlay:WINDow1:CATalog?"
Trace = GPIB.Read
MsgBox ("Traces in Window1: " & Win)
```

Create an FOM Measurement

All three VBScript examples in this topic create a FOM measurement with the following attributes:

- Sweep the Source (input) from 1 GHz to 2 GHz
- Sweep the Receivers (output) from 2 GHz to 3 GHz
- You provide an LO at 1 GHz

[Learn more about Frequency Offset Mode](#)

These programs can be run as a macro in the PNA. To do this, copy the code into a text editor file such as Notepad and save on the PNA hard drive as FOM.vbs. [Learn how to setup and run the macro.](#)

[See Other SCPI Example Programs](#)

The following example will run on any PNA model with FOM (opt 080). However, these commands have no provisions for internal second source. It uses [Sens:Offset commands](#) introduced before 'enhanced FOM' was released for the A.07.10 release.

```
' This section gets the PNA application
' starts the scpi parser, and presets the PNA
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpiStringParser
scpi.Execute("SYST:FPRESET")
' Create and turn on window 1
scpi.Execute ("DISPlay:WINDow1:STATE ON")
'Define a measurement name, parameter
scpi.Execute ("CALCulate:PARameter:DEFine 'MyMeas',S21")
'Associate ("FEED") the measurement name ('MyMeas') to WINDow (1)
'and give the new TRACe a number (1).
scpi.Execute ("DISPlay:WINDow1:TRACe1:FEED 'MyMeas'")

scpi.Execute ("SENS:FREQ:START 1e9")
scpi.Execute ("SENS:FREQ:STOP 2e9")
'set the receivers to be 2e9 -> 3e9
scpi.Execute ("SENS:OFFS:OFFS 1e9")
scpi.Execute ("SENS:OFFS ON")
```

The following example can be run ONLY on a PNA with revision A.07.10 or later and has FOM (opt 080). It uses new [Sens:FOM commands](#).

```
' This section gets the PNA application
' starts the scpi parser, and presets the PNA
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpStringParser
scpi.Execute("SYST:FPRESET")
' Create and turn on window 1
scpi.Execute ("DISPlay:WINDow1:STATE ON")
'Define a measurement name, parameter
scpi.Execute ("CALCulate:PARAmeter:DEFine 'MyMeas',S21")
'Associate ("FEED") the measurement name ('MyMeas') to WINDow (1), and give the
new TRACe a number (1).
scpi.Execute ("DISPlay:WINDow1:TRACe1:FEED 'MyMeas'")

scpi.Execute("SENS:FREQ:START 1e9")
scpi.Execute("SENS:FREQ:STOP 2e9")
'set the receivers to be 2e9 -> 3e9
scpi.Execute("SENS:FOM:RANG3:FREQ:OFFS 1e9")
scpi.Execute("SENS:OFFS ON")
```

The following example can be run ONLY on a PNA with a second internal source, has revision A.07.10 or later, and has FOM (opt 080). It uses the internal 2nd source for the fixed LO frequency.

```

' This section gets the PNA application
' starts the scpi parser, and presets the PNA
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpStringParser
scpi.Execute("SYST:FPRESET")
' Create and turn on window 1
scpi.Execute ("DISPlay:WINDow1:STATE ON")
'Define a measurement name, parameter
scpi.Execute ("CALCulate:PARAmeter:DEFine 'MyMeas',S21")
'Associate ("FEED") the measurement name ('MyMeas') to WINDow (1)
'and give the new TRACE a number (1).
scpi.Execute ("DISPlay:WINDow1:TRACe1:FEED 'MyMeas'")

scpi.Execute ("SENS:FREQ:START 1e9")
scpi.Execute ("SENS:FREQ:STOP 2e9")
'set the receivers to be 2e9 -> 3e9
scpi.Execute ("SENS:FOM:RANG3:FREQ:OFFS 1e9")
'setup the 2nd source frequencies
scpi.Execute ("SENS:FOM:RANG4:COUP 0")
scpi.Execute ("SENS:FOM:RANG4:FREQ:START 1e9")
scpi.Execute ("SENS:FOM:RANG4:FREQ:STOP 1e9")
'turn off coupling
scpi.Execute ("SOUR:POW:COUP 0")
'set LO power to 10dBm
scpi.Execute ("SOUR:POW3 10")
'turn ON port 3, our LO signal
scpi.Execute ("SOUR:POW3:MODE ON")
scpi.Execute ("SENS:FOM:STAT ON")

```

Last Modified:

9-Oct-2007 MX New topic

Create a Measurement using SCPI

This VBScript program creates a new S21 measurement and displays it on the PNA screen.

The SCPI commands in this example are sent over a COM interface using the SCPIStringParser object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as NewMeas.vbs. [Learn how to setup and run the macro.](#)

[See Other SCPI Example Programs](#)

```
Dim app
Dim scpi
' Create / Get the PNA application.
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpIStringParser

' A comment
'Preset the analyzer
scpi.Execute ("SYST:FPRreset")
' Create and turn on window 1
scpi.Execute ("DISPlay:WINDow1:STATE ON")
'Define a measurement name, parameter
scpi.Execute ("CALCulate:PARAMeter:DEFine 'MyMeas',S21")
'Associate ("FEED") the measurement name ('MyMeas') to WINDow (1), and give the new
TRACe a number (1).
scpi.Execute ("DISPlay:WINDow1:TRACe1:FEED 'MyMeas'")
```

Create a Balanced Measurement using SCPI

This example program does the following:

- creates several Balanced measurements in separate windows
- generates markers
- calculates statistics
- sets limit lines and queries results
- queries a measurement to determine if we have a balanced parameter and what type it is.

Note: By their nature, balanced measurements are extremely sensitive to phase differences between the two RF paths that make up the balanced port, especially at higher frequencies. A good calibration (not performed in this example) is critical to achieving good balanced measurement results.

The SCPI commands in this example are sent over a COM interface using the [SCPIStringParser](#) object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Balanced.vbs. [Learn how to setup and run the macro.](#)

[See Other SCPI Example Programs](#)

```
Dim app
Dim scpi
' Create / Get the PNA application.
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpIStringParser
' A comment
scpi.Execute("SYST:FPRESET")
' Put in "Single" trigger mode.
scpi.Execute("SENS:SWE:GROups:COUNT 1")
scpi.Execute("SENS:SWE:MODE GROUPS")

' This example uses DUT topology Bal-Bal -
' a DUT with a balanced input and balanced output.
'
' Port mapping for our DUT:
' logical port 1 = physical ports 1 and 4
' logical port 2 = physical ports 2 and 3
' The default is:
' logical port 1 = physical ports 1 and 2
' logical port 2 = physical ports 3 and 4
'
'      logical 1          logical 2
'
' 1 -----|             |----- 2 +
'          |             |
'          |      DUT     |
'          |             |
' 4 -----|             |----- 3 -
```

```

scpi.Execute("CALC:FSIM:BAL:DEVIce BBALanced")
scpi.Execute("CALC:FSIM:BAL:TOPology:BBAL:PPORts 1,4,2,3")
' Set up stimulus
scpi.Execute("SENS:SWE:POINts 801")
scpi.Execute("SENS:FREQ:STARt 10e6")
scpi.Execute("SENS:FREQ:STOP 1e9")
' Turn on Four windows
scpi.Execute("DISP:WIND1:STATe ON")
scpi.Execute("DISP:WIND2:STATe ON")
scpi.Execute("DISP:WIND3:STATe ON")
scpi.Execute("DISP:WIND4:STATe ON")
' Create a trace called "sdd21", and for that trace turn on the balanced
' transformation and set the balanced transformation to BBAL SDD21.
scpi.Execute("CALC:PAR:DEF ""sdd21"",S11")
scpi.Execute("CALC:PAR:SEL ""sdd21""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATe ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SDD21")
' Feed the sdd21 trace to window 1, trace 1
scpi.Execute("DISP:WIND1:TRAC1:FEED ""sdd21""")
' Similarly create 3 more balanced transmission/conversion parameters
' Create Scd21
scpi.Execute("CALC:PAR:DEF ""scd21"",S11")
scpi.Execute("CALC:PAR:SEL ""scd21""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATe ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SCD21")
scpi.Execute("DISP:WIND1:TRAC2:FEED ""scd21""")
' Create Sdc21
scpi.Execute("CALC:PAR:DEF ""sdc21"",S11")
scpi.Execute("CALC:PAR:SEL ""sdc21""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATe ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SDC21")
scpi.Execute("DISP:WIND1:TRAC3:FEED ""sdc21""")
' Create Scc21
scpi.Execute("CALC:PAR:DEF ""scc21"",S11")
scpi.Execute("CALC:PAR:SEL ""scc21""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATe ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SCC21")
scpi.Execute("DISP:WIND1:TRAC4:FEED ""scc21""")
' Now create logical port 1 reflection parameters, and place them in window 2
scpi.Execute("CALC:PAR:DEF ""sdd11"",S11")
scpi.Execute("CALC:PAR:SEL ""sdd11""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATe ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SDD11")
' Feed the sdd11 trace to window 2, trace 1
scpi.Execute("DISP:WIND2:TRAC1:FEED ""sdd11""")
' Similarly create 3 more balanced reflection/conversion parameters
scpi.Execute("CALC:PAR:DEF ""scd11"",S11")
scpi.Execute("CALC:PAR:SEL ""scd11""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATe ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SCD11")
scpi.Execute("DISP:WIND2:TRAC2:FEED ""scd11""")
scpi.Execute("CALC:PAR:DEF ""sdc11"",S11")

```



```

scpi.Execute("CALC:PAR:SEL ""sdc11""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATE ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SDC11")
scpi.Execute("DISP:WIND2:TRAC3:FEED ""sdc11""")
scpi.Execute("CALC:PAR:DEF ""scc11"",S11")
scpi.Execute("CALC:PAR:SEL ""scc11""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATE ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SCC11")
scpi.Execute("DISP:WIND2:TRAC4:FEED ""scc11""")
' Now create reverse transmission parameters, and place them in window 3
scpi.Execute("CALC:PAR:DEF ""sdd12"",S11")
scpi.Execute("CALC:PAR:SEL ""sdd12""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATE ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SDD12")
' Feed the sdd11 trace to window 3, trace 1
scpi.Execute("DISP:WIND3:TRAC1:FEED ""sdd12""")
' Similarly create 3 more balanced reverse transmission/conversion parameters
scpi.Execute("CALC:PAR:DEF ""scd12"",S11")
scpi.Execute("CALC:PAR:SEL ""scd12""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATE ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SCD12")
scpi.Execute("DISP:WIND3:TRAC2:FEED ""scd12""")
scpi.Execute("CALC:PAR:DEF ""sdc12"",S11")
scpi.Execute("CALC:PAR:SEL ""sdc12""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATE ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SDC12")
scpi.Execute("DISP:WIND3:TRAC3:FEED ""sdc12""")
scpi.Execute("CALC:PAR:DEF ""scc12"",S11")
scpi.Execute("CALC:PAR:SEL ""scc12""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATE ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SCC12")
scpi.Execute("DISP:WIND3:TRAC4:FEED ""scc12""")
' Now create reverse reflection parameters, and place them in window 4
scpi.Execute("CALC:PAR:DEF ""sdd22"",S11")
scpi.Execute("CALC:PAR:SEL ""sdd22""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATE ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SDD22")
' Feed the sdd11 trace to window 3, trace 1
scpi.Execute("DISP:WIND4:TRAC1:FEED ""sdd22""")
' Similarly create 3 more balanced reverse reflection parameters
scpi.Execute("CALC:PAR:DEF ""scd22"",S11")
scpi.Execute("CALC:PAR:SEL ""scd22""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATE ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SCD22")
scpi.Execute("DISP:WIND4:TRAC2:FEED ""scd22""")
scpi.Execute("CALC:PAR:DEF ""sdc22"",S11")
scpi.Execute("CALC:PAR:SEL ""sdc22""")
scpi.Execute("CALC:FSIM:BAL:PAR:STATE ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SDC22")
scpi.Execute("DISP:WIND4:TRAC3:FEED ""sdc22""")
scpi.Execute("CALC:PAR:DEF ""scc22"",S11")
scpi.Execute("CALC:PAR:SEL ""scc22""")

```

```

scpi.Execute("CALC:FSIM:BAL:PAR:STATE ON")
scpi.Execute("CALC:FSIM:BAL:PAR:BBAL:DEF SCC22")
scpi.Execute("DISP:WIND4:TRAC4:FEED ""scc22""")
' Show statistics for forward differential transmission
scpi.Execute("CALC:PAR:SEL ""sdd21""")
scpi.Execute("CALC:FUNC:STATISTICS:STATE ON")
' Set up test range for markers. Set up range 1 to be between 100MHz and 900MHz
scpi.Execute("CALC:FUNC:DOMAIN:USER:START 1,100e6")
scpi.Execute("CALC:FUNC:DOMAIN:USER:STOP 1,900e6")
' Set up a marker on Sdd21, find minimum differential transmission
' Set this marker to use user-range 1 (previously defined)
scpi.Execute("CALC:PAR:SEL ""sdd21""")
scpi.Execute("CALC:MARK ON")
scpi.Execute("CALC:MARK:FUNC:DOM:USER:RANGE 1")
scpi.Execute("CALC:MARK:FUNC:EXEC MIN")
' Find Maximum common mode to differential mode conversion within user-range 1.
scpi.Execute("CALC:PAR:SEL ""sdc21""")
scpi.Execute("CALC:MARK ON")
scpi.Execute("CALC:MARK:FUNC:DOM:USER:RANGE 1")
scpi.Execute("CALC:MARK:FUNC:EXEC MAX")
' Set up limit lines
' 'MIN' Limit on Sdd21 between 100MHz and 900MHz at -2dB
scpi.Execute("CALC:PAR:SEL ""sdd21""")
scpi.Execute("CALC:LIM:SEGM:TYPE LMIN")
scpi.Execute("CALC:LIM:SEGM:STIM:START 100e6")
scpi.Execute("CALC:LIM:SEGM:STIM:STOP 900e6")
scpi.Execute("CALC:LIM:SEGM:AMPL:START -2")
scpi.Execute("CALC:LIM:SEGM:AMPL:STOP -2")
scpi.Execute("CALC:LIM:DISP:STATE ON")
scpi.Execute("CALC:LIM:STATE ON")
' 'MAX' Limit on Sdc21 between 100MHz and 900MHz at -20dB
scpi.Execute("CALC:PAR:SEL ""sdc21""")
scpi.Execute("CALC:LIM:SEGM:TYPE LMAX")
scpi.Execute("CALC:LIM:SEGM:STIM:START 100e6")
scpi.Execute("CALC:LIM:SEGM:STIM:STOP 900e6")
scpi.Execute("CALC:LIM:SEGM:AMPL:START -20")
scpi.Execute("CALC:LIM:SEGM:AMPL:STOP -20")
scpi.Execute("CALC:LIM:DISP:STATE ON")
scpi.Execute("CALC:LIM:STATE ON")
' "Single" trigger to take data.
scpi.Execute("SENS:SWE:MODE GROUPS")
response = scpi.Execute("*OPC?")
' Read the limit status byte to determine pass/fail.
' If bit 1 is set (+2), then our first measurement failed (Sdd21).
' If bit 3 is set (+8), then our third measurement failed (Sdc21).
' Both measurements failing would return +10.
response = scpi.Execute("STAT:QUES:LIM1:COND?")
If response <> 0 Then
Wscript.Echo "Failure of limit lines: " & response
End If

' Here we demonstrate how to determine if we have

```

```

' a balanced parameter and what type it is.
' Read back one parameter to verify its type
scpi.Execute("CALC:PAR:SEL ""sdd21""")
' Is this a balanced parameter?
isbal = scpi.Execute("CALC:FSIM:BAL:PAR?")
' Which topology/device is set?
device = scpi.Execute("CALC:FSIM:BAL:DEV?")
device = Left( device, Len(device)-1 ) ' strip off newline
' Which parameter are we measuring within that topology?
balparam = scpi.Execute("CALC:FSIM:BAL:PAR:" & device & ":DEF?")
balparam = Left( balparam, Len(balparam)-1 ) ' strip off newline
If isbal Then
WScript.Echo "Balanced Parameter: " & balparam & " in topology: " & device & "."
Else
WScript.Echo "Parameter not balanced."
End If

```

Channels, Windows, and Measurements using SCPI

SOURCE and most **SENSE** commands act on the **channel** that is specified in the command. Channel 1 is default if not specified.

Most **DISPlay** commands act on the **window and trace** specified in the command. Window1 and Trace1 are default if not specified.

CALCulate commands act on the **selected measurement** in the specified channel. Select the measurement for each channel using CALCulate<channel number>:PARAmeter:SElect <meas name>. You can select one measurement in each channel.

The following Visual Basic program does the following:

- Presets the analyzer
- Create 2 windows
- Create 2 Measurements
- Feed the measurements to windows / traces
- Change frequency ranges for channels
- Select both measurements
- Turn marker 1 ON for each measurement

To run this program, you need:

- An established [GPIB interface connection](#)

[See Other SCPI Example Programs](#)

```
GPIB.Write "SYSTem:PRESet"

'Create Measurements
GPIB.Write "CALCulate1:PARAmeter:DEFine 'Meas1',S11"
GPIB.Write "CALCulate2:PARAmeter:DEFine 'Meas2',S21"

' Turn on windows - creates if new
GPIB.Write "DISPlay:WINDow1:STATE ON"
GPIB.Write "DISPlay:WINDow2:STATE ON"

'Associate ("FEED") the measurement name('Meas1') to WINDow(1), and give the new
TRACe a number(1).
GPIB.Write "DISPlay:WINDow1:TRACe1:FEED 'Meas1'"
GPIB.Write "DISPlay:WINDow2:TRACe2:FEED 'Meas2'"

'Change each channel's frequency range
GPIB.Write "SENSE1:FREQuency:SPAN 1e9"
GPIB.Write "SENSE2:FREQuency:SPAN 2e9"
```

```
'Select both measurements
GPiB.Write "CALCulate1:PARAmeter:SElect 'Meas1'"
GPiB.Write "CALCulate2:PARAmeter:SElect 'Meas2'"

'Turn marker 1 ON for each measurement
GPiB.Write "CALCulate1:MARKer:STATe ON"
GPiB.Write "CALCulate2:MARKer:STATe ON"
```

Setup Sweep Parameters using SCPI

This Visual Basic program sets up sweep parameters on the Channel 1 measurement.
To run this program, you need:

- An established [GPIB interface connection](#)

[See Other SCPI Example Programs](#)

```
GPIB.Write "SYSTem:PRESet"
'Select the measurement
GPIB.Write "CALCulate:PARAMeter:SElect 'CH1_S11_1'"
'Set sweep type to linear
GPIB.Write "SENSe1:SWEep:TYPE LIN"

'Set IF Bandwidth to 700 Hz
GPIB.Write "SENSe1:BANDwidth 700"

'Set Center and Span Freq's to 4 GHz
GPIB.Write "SENSe1:FREQuency:CENTer 4ghz"
GPIB.Write "SENSe1:FREQuency:SPAN 4ghz"

'Set number of points to 801
GPIB.Write "SENSe1:SWEep:POINTs 801"

'Set sweep generation mode to Analog
GPIB.Write "SENSe1:SWEep:GENeration ANAL"

'Set sweep time to Automatic
GPIB.Write "SENSe1:SWEep:TIME:AUTO ON"

'Query the sweep time
GPIB.Write "SENSe1:SWEep:TIME?"
SweepTime = GPIB.Read
```

Setup the Display using SCPI

This Visual Basic program:

- Sets data formatting
- Turns ON the Trace, Title, and Frequency Annotation
- Autoscales the Trace
- Queries Per Division, Reference Level, and Reference Position
- Turn ON and set averaging
- Turn ON and set smoothing

To run this program, you need:

- An established [GPIB interface connection](#)

[See Other SCPI Example Programs](#)

```
GPIB.Write "SYSTem:PRESet"

'Select the measurement
GPIB.Write "CALCulate:PARAmeter:SElect 'CH1_S11_1'"

'Set the Data Format to Log Mag
GPIB.Write ":CALCulatel:FORMat MLOG"

'Turn ON the Trace, Title, and Frequency Annotation
GPIB.Write "Display:WINDow1:TRACel:STATe ON"
GPIB.Write "DISPlay:WINDow1:TITLe:STATe ON"
GPIB.Write "DISPlay:ANNotation:FREQuency ON"

'Autoscale the Trace
GPIB.Write "Display:WINDow1:TRACel:Y:Scale:AUTO"

'Query back the Per Division, Reference Level, and Reference Position
GPIB.Write "DISPlay:WINDow1:TRACel:Y:SCALE:PDIVision?"
Pdiv = GPIB.Read
GPIB.Write "DISPlay:WINDow1:TRACel:Y:SCALE:RLEVel?"
Rlev = GPIB.Read
GPIB.Write "DISPlay:WINDow1:TRACel:Y:SCALE:RPOSition?"
Ppos = GPIB.Read

'Turn ON, and average five sweeps
GPIB.Write "SENSEl:AVERAge:STATe ON"
GPIB.Write "SENSEl:AVERAge:Count 5"

'Turn ON, and set 20% smoothing aperture
GPIB.Write "CALCulatel:SMOothing:STATe ON"
```

```
GPIB.Write "CALCulate1:SMOothing:APERture 20"
```


Triggering the PNA using SCPI

To understand how to trigger the PNA using SCPI, it is very important to understand the [PNA trigger model](#). Here is a very simple explanation. These three separate functions control PNA triggering:

1. [Trigger:Source](#) - Where the trigger signals originate:
 - Internal Continuous
 - Internal Manual (Single)
 - External - a trigger source that is connected to the PNA rear panel.
2. [Trigger:Scope](#) - what gets triggered:
 - Global - each signal triggers all channels in turn.
 - Channel - each signal triggers ONE channel.
3. Channel settings ([Sense<ch>:Sweep:Mode](#)) How many triggers will each channel accept before going into hold.
 - HOLD - channel will not trigger.
 - CONTinuous - channel triggers indefinitely.
 - GROups - channel accepts the number of triggers specified with the last [SENS:SWE:GRO:COUN](#) <num>.
 - **SINGLE** - channel accepts ONE trigger, then goes to HOLD.
 - Point trigger [SENS1:SWE:TRIG:POINT](#)

When controlling the PNA using SCPI, a SINGLE trigger is used to ensure that a complete sweep is taken. This example demonstrates how to Single trigger the PNA using two methods.

- **Simplest Triggering** This method sets the Trigger Source to Internal Continuous - a stream of trigger signals. Each channel is configured to ACCEPT only a single trigger signal, then HOLD. This method can also be used when an External trigger source sends a continuous stream of trigger signals.
- **Advanced Triggering** This method SENDS a single trigger from the Source, either Internal (using INIT:IMM) or External triggering. Each channel is configured to accept an unlimited number of triggers. This method is the only way to perform point triggering. See [INIT:IMM Advanced](#) for details when requiring multiple channels to accept continuous and single triggers.

The SCPI commands in this example are sent over a COM interface using the SCPIStringParser object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Trigger.vbs. [Learn how to setup and run the](#)

[macro.](#)

Measurement setup example: sets up S11 traces on two channels, 10 points, sweep time of 2 seconds, which allows us to verify that the trace is being triggered.

```
Dim app
Dim scpi
' Create / Get the PNA application.
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpiStringParser
'=====
'Setup the PNA
'Preset the analyzer
scpi.Execute ("SYST:FPRreset")
' Create and turn on window/channel 1
scpi.Execute ("DISPlay:WINDow1:STATE ON")
'Define a measurement name, parameter
scpi.Execute ("CALCulatel:PARAMeter:DEFine 'MyMeas1',S11")
'Associate ("FEED") the measurement name ('MyMeas') to WINDow (1)
scpi.Execute ("DISPlay:WINDow1:TRACel:FEED 'MyMeas1'")
' Create and turn on window/channel 2
scpi.Execute ("DISPlay:WINDow2:STATE ON")
'Define a measurement name, parameter
scpi.Execute ("CALCulate2:PARAMeter:DEFine 'MyMeas2',S11")
'Associate ("FEED") the measurement name ('MyMeas') to WINDow (2)
scpi.Execute ("DISPlay:WINDow2:TRACe2:FEED 'MyMeas2'")
'Set slow sweep so we can see
scpi.Execute ("SENS1:SWE:TIME 2")
scpi.Execute ("SENS2:SWE:TIME 2")
'set number of points to 10
scpi.Execute ("SENS1:SWE:POIN 10")
scpi.Execute ("SENS2:SWE:POIN 10")
'=====
' Put both channels in Hold
scpi.Execute ("SENS1:SWE:MODE HOLD")
scpi.Execute ("SENS2:SWE:MODE HOLD")
'=====
```

```

'Pick Single Send or Single Accept
resp=Msgbox ("Single Send? - Click No for Single Accept", 4, "PNA Trigger Demo")
If resp=6 Then
SingleSend()
Else
SingleAccept()
End If

```

Simple Triggering The following example sends a continuous stream of trigger signals and each PNA channel is set to ACCEPT only a signal trigger signal, then HOLD.

- This example can be used to configure External triggering where the trigger source sends a continuous stream of trigger signals. Configure the type of trigger signal that the PNA responds to using the [CONTrol:SIGNal](#) command. The command in this example sets the PNA to respond to HIGH TTL signals at the rear-panel BNC1 trigger IN connector. This command also automatically sets Trigger Source to External Trigger.
- The [TRIG SCOPE](#) (Global or Channel) setting is NOT necessary with a continuous stream of trigger signals. The example program directly controls when each channel is triggered.
- Point triggering can NOT be used with a continuous stream of trigger signals because in point triggering the channel will accept as many triggers as necessary to complete ONE full sweep. Use the single SEND example for point triggering.

```

Sub SingleAccept()
'PNA sends continuous trigger signals
scpi.Execute ("TRIG:SOUR IMMEDIATE")
'Uncomment the following to set External triggering
'scpi.Execute ("CONT:SIGN BNC1,TILHIGH")
AcceptOne()
End Sub

Sub AcceptOne()
'The following command makes the channel immediately sweep
'*OPC? allows the measurement to complete before the controller sends another
command
scpi.Execute ("SENS1:SWE:MODE SINGLE;*OPC?")
' You could do something to ch2 here before sweeping it
scpi.Execute ("SENS2:SWE:MODE SINGLE;*OPC?")

```

```

resp=Msgbox ("Another trigger?", 1, "PNA Trigger Demo")
If resp=1 Then
AcceptOne()
End If
End Sub

```

Advanced Trigger This example section performs Single Send triggering. Here, single triggering is accomplished by SENDING one trigger signal from the Trigger source and each channel is setup to accept unlimited trigger signals. See the [INIT:IMM](#) command for more details.

- Using this method, it is possible to change [Trigger:Scope](#) to Global or Channel. Set trigger scope to channel if there is some code to execute between channel measurements. Similarly, this method can be used to set [Point triggering](#). Use this method if there is some code to execute between data point measurements.
- In addition, this method can also be used to perform External triggering if the external trigger source is capable of SENDING single triggers. See the [CONTRol:SIGNal](#) command to set the type of signal to which the PNA will respond.
- If the external source can only send a continuous stream of trigger signals, then the [Single Accept](#) section must be used.

```

Sub SingleSend()
'Set Source Internal - Manual Triggering
scpi.Execute ("TRIG:SOUR MANual")
'If using an External trigger source that is capable of
'sending SINGLE trigger signals, then uncomment the following.
'This command automatically sets trigger source to External
'scpi.Execute ("CONT:SIGN BNCl,TILHIGH")

'Setup Trigger Scope
'WHAT gets triggered
'Pick one using comments
'Set Channel triggering
'scpi.Execute ("TRIG:SCOPE CURRENT")
'Set Global triggering (Default)
scpi.Execute ("TRIG:SCOPE ALL")

'Set Channel Settings
'The channels respond to UNLIMITED trigger signals (Default)
scpi.Execute ("SENS1:SWE:MODE CONTinuous")

```

```

scpi.Execute ("SENS2:SWE:MODE CONTinuous")

'To do Point trigger on one or more channels, uncomment the following
'Point trigger automatically sets Trig:Scope to Current/Channel
'scpi.Execute ("SENS1:SWE:TRIG:POINT ON")
'scpi.Execute ("SENS2:SWE:TRIG:POINT ON")
IntTrig()
End Sub

Sub IntTrig()
'If External triggering, replace this Sub with code
'to single trigger the External Trig Source
Dim resp
'*OPC? allows the measurement to complete before the controller sends another
command
scpi.Execute ("INITiate:IMMediate;*OPC?")
resp=Msgbox ("Another trigger?", 1, "PNA Trigger Demo")
If resp=1 Then
IntTrig()
End If
End Sub

```

Last modified:

18-Jun-2007	Updated with Sens:Swe:Mode Single
June 6, 2007	Changed order and wording
April 24, 2007	Updated with links
Oct. 5, 2006	New topic

GPIB using Visual C++

[See Other SCPI Example Programs](#)

```
/*
 * This example assumes the user's PC has a National Instruments GPIB board. The
 * example is comprised of three basic parts:
 *
 * 1. Initialization
 * 2. Main Body
 * 3. Cleanup
 *
 * The Initialization portion consists of getting a handle to the PNA and then doing
 * a GPIB clear of the PNA.
 *
 * The Main Body consists of the PNA SCPI example.
 *
 * The last step, Cleanup, releases the PNA for front panel control.
 */

#include <stdio.h>
#include <stdlib.h>

/*
 * Include the WINDOWS.H and DECL-32.H files. The standard Windows
 * header file, WINDOWS.H, contains definitions used by DECL-32.H and
 * DECL-32.H contains prototypes for the NI GPIB routines and constants.
 */
#include <windows.h>
#include "decl-32.h"

#define ERRMSGSIZE 1024 // Maximum size of SCPI command string
#define ARRAYSIZE 1024 // Size of read buffer

#define BDINDEX 0 // Board Index of GPIB board
#define PRIMARY_ADDR_OF_PNA 16 // GPIB address of PNA
#define NO_SECONDARY_ADDR 0 // PNA has no Secondary address
#define TIMEOUT T10s // Timeout value = 10 seconds
#define EOTMODE 1 // Enable the END message
#define EOSMODE 0 // Disable the EOS mode

int pna;
char ValueStr[ARRAYSIZE + 1];
char ErrorMnemonic[21][5] = {"EDVR", "ECIC", "ENOL", "EADR", "EARG",
    "ESAC", "EABO", "ENEB", "EDMA", "",
    "EOIP", "ECAP", "EFSO", "", "EBUS",
    "ESTB", "ESRQ", "", "", "", "ETAB"};

void GPIBWrite(char* SCPIcmd);
char *GPIBRead(void);
```

```

void GPIBCleanup(int Dev, char* ErrorMsg);

int main()
{

char *opc;
char *result;
char *value;

/*
 * =====
 * INITIALIZATION SECTION
 * =====
 */

/*
 * The application brings the PNA online using ibdev. A device handle,pna, is
returned and is used in all subsequent calls to the PNA.
 */
pna = ibdev(BDINDEX, PRIMARY_ADDR_OF_PNA, NO_SECONDARY_ADDR,
TIMEOUT, EOTMODE, EOSMODE);
if (ibsta & ERR)
{
printf("Unable to open handle to PNA\nibsta = 0x%x iberr = %d\n",
ibsta, iberr);
return 1;
}

/*
 * Do a GPIB Clear of the PNA. If the error bit ERR is set in ibsta, call
GPIBCleanup with an error message.
 */
ibclr (pna);
if (ibsta & ERR)
{
GPIBCleanup(pna, "Unable to perform GPIB clear of the PNA");
return 1;
}

/*
 * =====
 * MAIN BODY SECTION
 * =====
 */

// Reset the analyzer to instrument preset
GPIBWrite("SYSTem:FPRESET");

// Create S11 measurement
GPIBWrite("CALCulatel:PARAMeter:DEFine 'My_S11',S11");

```

```

// Turn on Window #1
GPIBWrite("DISPlay:WINDow1:STATe ON");

// Put a trace (Trace #1) into Window #1 and 'feed' it from the measurement
GPIBWrite("DISPlay:WINDow1:TRACe1:FEED 'My_S11'");

// Setup the channel for single sweep trigger
GPIBWrite("INITiate1:CONTinuous OFF;*OPC?");
opc = GPIBRead();
GPIBWrite("SENSe1:SWEep:TRIGger:POINT OFF");

// Set channel parameters
GPIBWrite("SENSe1:SWEep:POINTs 11");
GPIBWrite("SENSe1:FREQuency:START 1000000000");
GPIBWrite("SENSe1:FREQuency:STOP 2000000000");

// Send a trigger to initiate a single sweep
GPIBWrite("INITiate1;*OPC?");
opc = GPIBRead();

// Must select the measurement before we can read the data
GPIBWrite("CALCulate1:PARAMeter:SElect 'My_S11'");

// Read the measurement data into the "result" string variable
GPIBWrite("FORMat ASCII");
GPIBWrite("CALCulate1:DATA? FDATA");
result = GPIBRead();

// Print the data to the display console window
printf("S11(dB) - Visual C++ SCPI Example for PNA\n\n");
value = strtok(result, ",");
while (value != NULL)
{
    printf("%s\n", value);
    value = strtok(NULL, ",");
}

/*
 * =====
 * CLEANUP SECTION
 * =====
 */

/* The PNA is returned to front panel control. */
ibonl(pna, 0);

return 0;
}

/*
 * Write to the PNA
 */

```



```

void GPIBWrite(char* SCPIcmd)
{
int length;
char ErrorMessage[ERRMSGSIZE + 1];
length = strlen(SCPIcmd) ;

    ibwrt (pna, SCPIcmd, length);
    if (ibsta & ERR)
    {
        strcpy(ErrorMessage, "Unable to write this command to PNA:\n");
        strcat(ErrorMessage, SCPIcmd);

        GPIBCleanup(pna, ErrorMessage);
        exit(1);
    }
}

/*
 * Read from the PNA
 */
char* GPIBRead(void)
{
    ibrd (pna, ValueStr, ARRAYSIZE);
    if (ibsta & ERR)
    {
        GPIBCleanup(pna, "Unable to read from the PNA");
        exit(1);
    }
else
    return ValueStr;
}

/*
 * After each GPIB call, the application checks whether the call succeeded. If an
NI-488.2 call fails, the GPIB driver sets the corresponding bit in the global status
variable. If the call failed, this procedure prints an error message, takes the PNA
offline and exits.
 */
void GPIBCleanup(int Dev, char* ErrorMessage)
{
    printf("Error : %s\nibsta = 0x%x iberr = %d (%s)\n",
        ErrorMessage, ibsta, iberr, ErrorMnemonic[iberr]);
    if (Dev != -1)
    {
        printf("Cleanup: Returning PNA to front panel control\n");
        ibonl (Dev, 0);
    }
}

```

Perform a Guided 2-Port or 4-Port Cal using SCPI

This example performs a Guided 2-Port or 4-port Calibration using ONE set of calibration standards or an ECAL module.

A measurement must first be set up with desired frequency range, power, and so forth, ready to be calibrated.

The SCPI commands in this example are sent over a COM interface using the [SCPIStringParser](#) object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file, such as Notepad, and save it on the PNA hard drive as *.vbs.

[Learn how to setup and run the macro.](#)

[See Guided Cal SCPI commands](#)

[See Other SCPI Example Programs](#)

```
Dim app
Dim scpi
' Create / Get the PNA application.
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpiStringParser

' To perform 2-port cal, Uncomment TwoPortGuidedCal()
' Then comment FourPortGuidedCal()

'Do 2-port Cal
'TwoPortGuidedCal()

'Do 4-port Cal
FourPortGuidedCal

Sub TwoPortGuidedCal()
' Select the connectors
scpi.Execute("sens:corr:coll:guid:conn:port1 ""APC 3.5 female"" ")
scpi.Execute("sens:corr:coll:guid:conn:port2 ""APC 3.5 male"" ")
scpi.Execute("sens:corr:coll:guid:conn:port3 ""Not used"" ")
scpi.Execute("sens:corr:coll:guid:conn:port4 ""Not used"" ")
MsgBox("Connectors defined for Ports 1 and 2")
' Select the Cal Kit for each port being calibrated.
scpi.Execute("sens:corr:coll:guid:ckit:port1 ""85052D"" ")
scpi.Execute("sens:corr:coll:guid:ckit:port2 ""85052D"" ")
' To use an ECal module instead, comment out the above two lines
' and uncomment these two lines and use the part number printed
' on your module (which in our case was N4691-60004), followed
' by the word 'ECAL'. Your ECal module must already be connected
' via USB to the PNA.
'scpi.Execute("sens:corr:coll:guid:ckit:port1 ""N4691-60004 ECal"" ")
'scpi.Execute("sens:corr:coll:guid:ckit:port2 ""N4691-60004 ECal"" ")
```

```

MsgBox("Cal kits defined for Ports 1 and 2")
' Initiate the calibration and query the number of steps
numSteps = GenerateSteps()
' Measure the standards, compute and apply the cal
MeasureAndComplete(numSteps)
End Sub

Sub FourPortGuidedCal()
' Select the connectors
scpi.Execute("sens:corr:coll:guid:conn:port1 ""APC 3.5 female"" ")
scpi.Execute("sens:corr:coll:guid:conn:port2 ""APC 3.5 female"" ")
scpi.Execute("sens:corr:coll:guid:conn:port3 ""APC 3.5 female"" ")
scpi.Execute("sens:corr:coll:guid:conn:port4 ""APC 3.5 female"" ")
MsgBox("Connectors defined for Ports 1 to 4")
' Select the Cal Kit for each port being calibrated.
scpi.Execute("sens:corr:coll:guid:ckit:port1 ""85052D"" ")
scpi.Execute("sens:corr:coll:guid:ckit:port2 ""85052D"" ")
scpi.Execute("sens:corr:coll:guid:ckit:port3 ""85052D"" ")
scpi.Execute("sens:corr:coll:guid:ckit:port4 ""85052D"" ")
' To use an ECal module instead, comment out the above four lines
' and uncomment these four lines and use the part number printed
' on your module (which in our case was N4431-60003), followed
' by the word 'ECal'. Your ECal module must already be connected
' via USB to the PNA.
'scpi.Execute("sens:corr:coll:guid:ckit:port1 ""N4431-60003 ECal"" ")
'scpi.Execute("sens:corr:coll:guid:ckit:port2 ""N4431-60003 ECal"" ")
'scpi.Execute("sens:corr:coll:guid:ckit:port3 ""N4431-60003 ECal"" ")
'scpi.Execute("sens:corr:coll:guid:ckit:port4 ""N4431-60003 ECal"" ")
MsgBox("Cal kits defined for Ports 1 to 4")
' Initiate the calibration and query the number of steps
numSteps = GenerateSteps()
' If your selected cal kit is not a 4-port ECal module which can
' mate to all 4 ports at once, then you may want to choose which
' thru connections to measure for the cal. You must measure at
' least 3 different thru paths for a 4-port cal (for greatest
' accuracy you can choose to measure a thru connection for all 6
' pairings of the 4 ports). If you omit this command, the default
' is to measure from port 1 to port 2, port 1 to port 3, and
' port 1 to port 4. For this example we select to measure
' from port 1 to port 2, port 2 to port 3, and port 2 to port 4.
scpi.Execute("sens:corr:coll:guid:thru:ports 1,2,2,3,2,4")
' Re-generate the connection steps to account for the thru changes
numSteps = GenerateSteps()
' Measure the standards, compute and apply the cal
MeasureAndComplete(numSteps)
End Sub

Function GenerateSteps()
' Initiate the calibration and query the number of steps
scpi.Execute("sens:corr:coll:guid:init")
GenerateSteps = scpi.Execute("sens:corr:coll:guid:steps?")
End Function

```

```

Sub MeasureAndComplete(numSteps)
MsgBox("Number of steps is " + CStr(numSteps))
' Measure the standards
For i = 1 To numSteps
step = "Step " + CStr(i) + " of " + CStr(numSteps)
strPrompt = scpi.Execute("sens:corr:coll:guid:desc? " + CStr(i))
MsgBox strPrompt, vbOKOnly, step
scpi.Execute("sens:corr:coll:guid:acq STAN" + CStr(i))
Next
' Conclude the calibration
scpi.Execute("sens:corr:coll:guid:save")
MsgBox ("Cal is done!")
End Sub

```

Perform a Guided Calibration using SCPI

This VBScript program performs a Guided Calibration using ECal **or** Mechanical standards. This example includes optional ECal orientation features.

- This example has been updated to include the setting of Unknown Thru or Adapter Removal adapter delay. (March 2006).
- This example has been updated to show the activation of a channel to be calibrated. (Aug. 2006).

The SCPI commands in this example are sent over a COM interface using the [SCPIStringParser](#) object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Guided.vbs. [Learn how to setup and run the macro.](#)

```
' Performing a Guided 2-port cal (Ports 1 and 2)
TwoPortGuidedCal
Sub TwoPortGuidedCal
Dim app
Dim scpi
Dim connList
Dim selectedConn1, selectedConn2
Dim kitList
Dim selectedKit
Dim message
' Create / Get the PNA application.
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpiStringParser

'The following demonstrates that the Active Channel is cal'd
'Preset the PNA
scpi.Execute "SYST:PRES"
'Create a new measurement on Chan 2
'Now there are two windows, channels and measurements
'This becomes the Active Measurement
scpi.Execute ("DISPlay:WINDow2:STATE ON")
'Define a measurement name, parameter
scpi.Execute ("CALCulate2:PARAmeter:DEFine 'MyMeas',S21")
'"FEED" the measurement
scpi.Execute ("DISPlay:WINDow2:TRACe1:FEED 'MyMeas'")
```

```

'This is the Active Measurement
'Activate the 'Preset' measurement to cal chan 1
scpi.Execute("CALC1:PAR:SEL 'CH1_S11_1'")

' Query the list of connectors that the PNA system recognizes
connList = scpi.Execute("sens:corr:coll:guid:conn:cat?")
' Format the list with linefeed characters in place of the commas
connList = FormatList(connList)
message = "Enter your DUT connector for Port 1. Choose from this list:"
message = message & Chr(10) & Chr(10) & connList
' Select the connector for Port 1
selectedConn1 = InputBox(message)
If selectedConn1 = "" Then Exit Sub
scpi.Execute "sens:corr:coll:guid:conn:port1 '" & selectedConn1 & "'"
message = "Enter your DUT connector for Port 2. Again, choose from this list:"
message = message & Chr(10) & Chr(10) & connList
' Select the connector for Port 2
selectedConn2 = InputBox(message)
If selectedConn2 = "" Then Exit Sub
scpi.Execute "sens:corr:coll:guid:conn:port2 '" & selectedConn2 & "'"
' Note: If your PNA has more than 2 ports, then uncomment
' one or both of these next two lines.
'scpi.Execute "sens:corr:coll:guid:conn:port3 '"Not used'" "
'scpi.Execute "sens:corr:coll:guid:conn:port4 '"Not used'" "

' This next block of commented code demonstrates how to specify an adapter
' and it's electrical delay, in situations where you are performing an
' Unknown Thru or Adapter Removal calibration. In most situations, the
' PNA is able to correctly determine an adapter's electrical length
' at the end of the calibration. However, there are scenarios where
' the PNA cannot correctly calculate the length -- such as when the channel
' has a relatively small number of measurement points (for example, 201 or less)
' and the adapter is significantly long (for example, a cable that is several feet).
' In these cases, the ADAP commands (below) enable you to explicitly specify
' the adapter you are using.
' Send these commands prior to the "sens:corr:coll:guid:init" command.

```

```

' Create adapter and return the adapter number
'adapterNum = scpi.Execute("sens:corr:coll:guid:adap:cre? " & selectedConn1 & "," & selectedConn2 & " ")
' The adapterNum string contains a '+' character.
' Here we convert to integer to remove that.
'adapterNum = CStr( CInt(adapterNum) )
' Specify that this adapter has 10 nanoseconds electrical delay (coaxial).
'scpi.Execute "sens:corr:coll:guid:adap" & adapterNum & ":del 10E-9"
' Text description of adapter
'scpi.Execute "sens:corr:coll:guid:adap" & adapterNum & ":desc 'My adapter'"
' Select to use this adapter specifically between ports 1 and 2
'scpi.Execute "sens:corr:coll:guid:adap" & adapterNum & ":path 1,2"
' End of adapter block

' Query the list of acceptable cal kits and
' ECal module characterizations for Port 1.
kitList = scpi.Execute("sens:corr:coll:guid:ckit:port1:cat?")
' Format the list with linefeed
' characters in place of the commas
kitList = FormatList(kitList)
message = "Enter your cal kit or ECal module characterization for Port 1. "
message = message & "Choose from this list:"
message = message & Chr(10) & Chr(10) & kitList
' Select the Cal Kit or ECal module
' characterization to use for Port 1.
selectedKit = InputBox(message)
If selectedKit = "" Then Exit Sub
scpi.Execute "sens:corr:coll:guid:ckit:port1 " & selectedKit & " "

' Query the list of acceptable cal kits
' and ECal module characterizations for Port 2.
kitList = scpi.Execute("sens:corr:coll:guid:ckit:port2:cat?")
' Format the list with linefeed characters in place of the commas
kitList = FormatList(kitList)
message = "Enter your cal kit or ECal module characterization for Port 2. "
message = message & "Choose from this list:"
message = message & Chr(10) & Chr(10) & kitList
' Select the Cal Kit or ECal module

```

```

' characterization to use for Port 2.
selectedKit = InputBox(message)
If selectedKit = "" Then Exit Sub
scpi.Execute "sens:corr:coll:guid:ckit:port2 '" & selectedKit & "'"

' This next block of commented code
' shows optional functions when using ECal.
' Send these "sens:corr:pref" commands prior to the
' "sens:corr:coll:guid:init" command.
' Read ECal information from ECal module #1 on the USB bus
' about the Agilent factory characterization data
'module1Info = scpi.Execute("sens:corr:coll:ckit:inf? ECAL1,CHAR0")
'MsgBox "Description of ECal Module #1:" & Chr(10) & Chr(10) & module1Info

' The following command enables auto orientation of
' the ECal module (The PNA senses which port of the
' module is connected to which port of the PNA).
'scpi.Execute "sens:corr:pref:ecal:ori ON"
' However, if you are measuring at very low power levels where
' the PNA may fail to sense the module's orientation, then turn auto
' orientation OFF and specify how the module is connected.
' "A1,B2" indicates Port A of the module is connected
' to PNA Port 1 and Port B is connected to PNA Port 2).
'scpi.Execute "sens:corr:pref:ecal:ori OFF"
'scpi.Execute "sens:corr:pref:ecal:pmap ECAL1,'A1,B2'"
' End of optional ECal setup

' Select the thru method of "Default". This instructs the PNA to
' determine which thru standard measurement technique to use
' based upon the selected connectors and
' calibration kit(s) and the PNA model number.
' with new CMET and TMET 'default' is set by not sending the commands
'

' Initiate the calibration and query the number of steps
scpi.Execute "sens:corr:coll:guid:init"
numSteps = scpi.Execute("sens:corr:coll:guid:steps?")

```



```

MsgBox "Number of steps is " + CStr(numSteps)
' Measure the standards
For i = 1 To numSteps
step = "Step " + CStr(i) + " of " + CStr(numSteps)
strPrompt = scpi.Execute("sens:corr:coll:guid:desc? " + CStr(i))
MsgBox strPrompt, vbOKOnly, step
scpi.Execute "sens:corr:coll:guid:acq STAN" + CStr(i)
Next
' Conclude the calibration
scpi.Execute "sens:corr:coll:guid:save"
MsgBox "Cal is done!"
End Sub

Function FormatList(list)
Dim tokens
' Strip the leading and trailing quotation
' marks from the list string
list = Mid(list, 2, Len(list) - 3)
' Tokenize the comma-delimited list string
' into an array of the individual substrings
tokens = Split(list, ",")
' Rebuild the list string, placing linefeed
' characters where the commas were,
' using Trim to remove leading and trailing spaces.
list = ""
For i = 0 To UBound(tokens)
tokens(i) = Trim(tokens(i))
list = list & tokens(i) & Chr(9)
If i < UBound(tokens) Then
i = i + 1
tokens(i) = Trim(tokens(i))
list = list & tokens(i) & Chr(10)
End If
Next
FormatList = list
End Function

```

Last Modified:

14-May-2007 MX Updated for new CMET and TMET commands

Perform Guided ECal using SCPI

This VBScript program performs a Guided ECal Calibration. While this example is good to use as a starting point for Guided ECal, the [Guided comprehensive cal example](#) has some advanced features that are not in this program.

The SCPI commands in this example are sent over a COM interface using the [SCPIStringParser](#) object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Guided.vbs. [Learn how to setup and run the macro.](#)

```
' Performing a 2-port cal (Ports 1 and 2)
Dim app
Dim scpi

' Create / Get the PNA application.
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpiStringParser

' Specify the DUT connectors
' (for each connector of your DUT, one of the ECal module's ports must have
' that same connector, or else you cannot achieve the cal using that module).
scpi.Execute "sens:corr:coll:guid:conn:port1 ""APC 3.5 female"" "
scpi.Execute "sens:corr:coll:guid:conn:port2 ""APC 3.5 male"" "

' Note: If your PNA has more than 2 ports, you would need to uncomment
' one or both of these next two lines, to explicitly specify this is
' just a 2-port cal.
'scpi.Execute "sens:corr:coll:guid:conn:port3 ""Not used"" "
'scpi.Execute "sens:corr:coll:guid:conn:port4 ""Not used"" "
MsgBox "Connectors defined for Ports 1 and 2"

' Select the ECal module for each port being calibrated.
' Replace N4691-60004 with the part number printed on your module
' followed by User x if using a User characterization, then the word 'ECal'
' Your ECal module must already be connected via USB to the PNA.
scpi.Execute "sens:corr:coll:guid:ckit:port1 ""N4691-60004 ECal"" "
scpi.Execute "sens:corr:coll:guid:ckit:port2 ""N4691-60004 User 1 ECal"" "
MsgBox "Cal kits defined for Ports 1 and 2"

' Initiate the calibration and query the number of steps
scpi.Execute "sens:corr:coll:guid:init"
numSteps = scpi.Execute("sens:corr:coll:guid:steps?")
MsgBox "Number of steps is " + CStr(numSteps)

' Measure the standards
For i = 1 To numSteps
step = "Step " + CStr(i) + " of " + CStr(numSteps)
strPrompt = scpi.Execute("sens:corr:coll:guid:desc? " + CStr(i))
MsgBox strPrompt, vbOKOnly, step
scpi.Execute "sens:corr:coll:guid:acq STAN" + CStr(i)
```

Next

```
' Conclude the calibration  
scpi.Execute "sens:corr:coll:guid:save"  
MsgBox "Cal is done!"
```

Perform Guided Mechanical Cal using SCPI

This VBScript program performs a Guided Calibration using Mechanical standards. While this example is good to use as a starting point for guided mechanical cal, the [Guided comprehensive cal example](#) has some advanced features that are not in this program.

The SCPI commands in this example are sent over a COM interface using the [SCPIStringParser](#) object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Guided.vbs. [Learn how to setup and run the macro.](#)

' Performing a 2-port cal (Ports 1 and 2)

```
Dim app
Dim scpi

' Create / Get the PNA application.
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpiStringParser

' Specify the DUT connectors
scpi.Execute "sens:corr:coll:guid:conn:port1 ""APC 3.5 female"" "
scpi.Execute "sens:corr:coll:guid:conn:port2 ""APC 3.5 male"" "

' Note: If your PNA has more than 2 ports, you would need to uncomment
' one or both of these next two lines, to explicitly specify this is
' just a 2-port cal.
'scpi.Execute "sens:corr:coll:guid:conn:port3 ""Not used"" "
'scpi.Execute "sens:corr:coll:guid:conn:port4 ""Not used"" "
MsgBox "Connectors defined for Ports 1 and 2"

' Select the Cal Kit for each port being calibrated.
scpi.Execute "sens:corr:coll:guid:ckit:port1 ""85052D"" "
scpi.Execute "sens:corr:coll:guid:ckit:port2 ""85052D"" "
MsgBox "Cal kits defined for Ports 1 and 2"

' Initiate the calibration and query the number of steps
scpi.Execute "sens:corr:coll:guid:init"
numSteps = scpi.Execute("sens:corr:coll:guid:steps?")
MsgBox "Number of steps is " + CStr(numSteps)

' Measure the standards
'The following series of commands shows that standards
'can be measured in any order. These steps acquire
'measurement of standards in reverse order.
'It is easiest to iterate through standards using
'a For-Next Loop.
For i = numSteps To 1
step = "Step " + CStr(i) + " of " + CStr(numSteps)
strPrompt = scpi.Execute("sens:corr:coll:guid:desc? " + CStr(i))
MsgBox strPrompt, vbOKOnly, step
```

```
scpi.Execute "sens:corr:coll:guid:acq STAN" + CStr(i)
Next

' Conclude the calibration
scpi.Execute "sens:corr:coll:guid:save"
MsgBox "Cal is done!"
```

Last Modified:

20-Jan-2007 Added note about any order for steps.

Perform a Guided 1-Port Cal on Port 2

This VBScript program does the following:

1. Clear measurements from the PNA
2. Create a new S22 measurement
3. Set an instrument state
4. Select the connector types
5. Select a cal kit
6. Initiate a Guided calibration
7. Display a prompt to connect each standard
8. Save the calibration to a newly created cal set

Note: This example illustrates an important step when calibrating a reflection measurement in the reverse direction. You MUST create a reverse (S22) measurement and have it be the active (selected) measurement on the channel that is being calibrated. This is not necessary for any calibrating any other measurement parameter.

The SCPI commands in this example are sent over a COM interface using the [SCPIStringParser](#) object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Guided.vbs. [Learn how to setup and run the macro.](#)

```
Dim App
Set App = CreateObject("AgilentPNA835x.Application")
App.Preset

Dim step
Dim Parser
Dim prompt
Dim txtDat
Dim Chan

Rem Clear old measurements
App.Reset

Rem Create a new Measurement
Set Parser = App.SCPIStringParser
Parser.Parse "DISPlay:WINDow1:STATE ON"
Parser.Parse "CALCulate:PARAMeter:DEFine 'MyMeas',S22"
Parser.Parse "DISPlay:WINDow1:TRACel:FEED 'MyMeas'"

Rem Initialize state
Set Chan = App.ActiveChannel
Chan.StartFrequency = 200e6
```

```

Chan.StopFrequency = 1.5e9
Chan.IFBandwidth = 1000
step = 3

Rem Begin a guided calibration
Parser.Parse "SENS:CORR:COLL:GUID:CONN:PORT1 'Not used'"
Parser.Parse "SENS:CORR:COLL:GUID:CONN:PORT2 'Type N (50) male'"
Parser.Parse "SENS:CORR:COLL:GUID:CKIT:PORT1 '"
Parser.Parse "SENS:CORR:COLL:GUID:CKIT:PORT2 '85054D'"
Parser.Parse "SENS:CORR:COLL:GUID:INIT"

Rem Query the number of steps
txtDat = Parser.Parse("SENS:CORR:COLL:GUID:STEP?")

Rem Display the number of steps
MsgBox("Number of steps is " + txtDat)

Rem Set the loop counter limit
step = txtDat

Rem Measure the standards
For i = 1 To step
If i= 1 Then
prompt = Parser.Parse("sens:corr:coll:guid:desc? 1")
MsgBox(prompt)
Parser.Parse ("sens:corr:coll:guid:acq STAN1")
ElseIf i = 2 then
prompt = Parser.Parse("sens:corr:coll:guid:desc? 2")
MsgBox(prompt)
Parser.Parse ("sens:corr:coll:guid:acq STAN2")
ElseIf i = 3 then
prompt = Parser.Parse("sens:corr:coll:guid:desc? 3")
MsgBox(prompt)
Parser.Parse ("sens:corr:coll:guid:acq STAN3")
End If
Next

Rem All standards have been measured. Save the result
Parser.Parse "SENS:CORR:COLL:GUID:SAVE"
MsgBox("The calibration has been completed")

```


Perform Guided TRL Calibration

This VBScript file performs a 2-Port Guided TRL calibration on **2-port PNA analyzers**. ([See an example of TRL cal on a 4-port PNA.](#)) This program does the following:

- Clear old measurements from the PNA
- Create a new S22 measurement
- Set an instrument state
- Select the connectors and cal kit
- Initiate a Guided calibration
- Display a prompt as each new standard must be connected
- Save the calibration to a newly created cal set.

Note: This program runs without error on all PNA code revisions 7.21 and higher.

The SCPI commands in this example are sent over a COM interface using the [SCPIStringParser](#) object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as TRL.vbs. [Learn how to setup and run the macro.](#)

```
Dim App
Dim Parser
Dim Chan
Dim txtDat
Dim step
Dim parserTxt
Dim prompt
Set App = CreateObject("AgilentPNA835x.Application")
' Clear old measurements
App.Reset
' Create a new Measurement
Set Parser = App.SCPIStringParser
Parser.Parse "DISPlay:WINDow1:STATE ON"
Parser.Parse "CALCulate:PARAMeter:DEFine 'MyMeas',S12"
Parser.Parse "DISPlay:WINDow1:TRACe1:FEED 'MyMeas'"
' Initialize state
Set Chan = App.ActiveChannel
```

```

Chan.StartFrequency = 18.0e9
Chan.StopFrequency = 20.0e9
Chan.IFBandwidth = 1000
' Begin a guided calibrations
Parser.Parse "SENS:CORR:COLL:GUID:CONN:PORT1 'APC 3.5 male'"
Parser.Parse "SENS:CORR:COLL:GUID:CONN:PORT2 'APC 3.5 female'"
Parser.Parse "SENS:CORR:COLL:GUID:CKIT:PORT1 '85052C'"
Parser.Parse "SENS:CORR:COLL:GUID:CKIT:PORT2 '85052C'"
' Select TRL cal method.
Parser.Parse "SENS:CORR:COLL:GUID:PATH:CMET 1,2,'TRL'"
txtDat = Parser.Parse("SENS:CORR:COLL:GUID:PATH:CMET? 1,2")
MsgBox("Method " + txtDat)
Parser.Parse "SENS:CORR:COLL:GUID:INIT"
' Query the number of steps
txtDat = Parser.Parse("SENS:CORR:COLL:GUID:STEP?")
' Display the number of steps
MsgBox("Number of steps is " + txtDat)
' Set the loop counter limit
step = CInt(txtDat)
' Measure the standards
For i = 1 To step
parserTxt = "sens:corr:coll:guid:desc? " + CStr(i)
prompt = Parser.Parse(parserTxt)
MsgBox(prompt)
parserTxt = "sens:corr:coll:guid:acq STAN" + CStr(i)
Parser.Parse (parserTxt)
Next
' All standards have been measured. Save the result
Parser.Parse "SENS:CORR:COLL:GUID:SAVE"
MsgBox("The TRL calibration has been completed")

```

Last Modified:

9-Apr-2007 MX Updated for new CMethod command

Perform Unknown Thru or TRL Cal

The following program performs either a 2-port SOLT Unknown Thru Cal or a 2-port TRL Cal. The 85052C Cal Kit used in this program contains both types of standards. This program can be run on 2-port or 4-port PNAs. When run on a multiport (4 or more ports) PNA, which does not have [a reference receiver per port](#), a [Delta Match Cal](#) is required.

See [example of Delta Match Cal](#).

[See the Guided Cal commands](#)

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Unknown.vbs. [Learn how to setup and run the macro.](#)

```
Sub PerformUnknownThruOrTRLCal()  
Set pna = CreateObject("AgilentPNA835x.Application")  
Set scpi = pna.ScpiStringParser  
  
' Specify connectors for Ports 1 and 2  
scpi.Parse "SENS:CORR:COLL:GUID:CONN:PORT1 'APC 3.5 female'"  
scpi.Parse "SENS:CORR:COLL:GUID:CONN:PORT2 'APC 3.5 male'"  
  
'If your PNA has 3 or 4 ports, uncomment one or both of  
'these next two lines, to explicitly specify this is a 2-port cal.  
'scpi.Parse "SENS:CORR:COLL:GUID:CONN:PORT3 'Not used'"  
'scpi.Parse "SENS:CORR:COLL:GUID:CONN:PORT4 'Not used'"  
  
' Specify cal kit for Ports 1 and 2  
scpi.Parse "SENS:CORR:COLL:GUID:CKIT:PORT1 '85052C'"  
scpi.Parse "SENS:CORR:COLL:GUID:CKIT:PORT2 '85052C'"  
' Since the 85052C cal kit contains SOLT standards and also TRL  
' standards, these next two lines set cal and thru method  
scpi.Execute "SENS:CORR:COLL:GUID:PATH:CMETHOD 1,2,"SOLT"  
scpi.Execute "SENS:CORR:COLL:GUID:PATH:TMETHOD 1,2,"UNKN"  
  
' To set up the cal as TRL, comment the previous line and uncomment  
' this next line. The TMETHOD is set by default  
'scpi.Execute "SENS:CORR:COLL:GUID:PATH:CMETHOD 1,2,"TRL"  
  
' Initiate the calibration  
scpi.Parse "SENS:CORR:COLL:GUID:INIT"  
  
' Query the list of ports that need delta match  
retStr = scpi.Parse("SENS:CORR:COLL:GUID:DMAT:APPL:PORT?")  
portList = Split(retStr, ",")  
  
' If portList contains just one element and it's value is 0, then that indicates  
' none of the ports being calibrated require delta match data.  
' Note: if each testport on the PNA has it's own reference receiver (R channel),  
' then delta match is never needed, so portList will always be just 0.  
lowerBound = LBound(portList)  
If (UBound(portList) <> lowerBound) Or (CInt( portList(lowerBound) ) <> 0) Then
```

```

' Delta match data is required for at least one port.
' For this example, we assume a Global Delta Match Cal has previously been
' performed so the Global Delta Match CalSet exists.
' The Global Delta Match CalSet is used when the APPL command is invoked
' without a specific calset ID (GUID).
    scpi.Parse "SENS:CORR:COLL:GUID:DMAT:APPL"
End If

' Query the number of calibration steps
retStr = scpi.Parse("SENS:CORR:COLL:GUID:STEP?")
numSteps = CInt(retStr)

' Measure the cal standards
For i = 1 To numSteps
    prompt = scpi.Parse("SENS:CORR:COLL:GUID:DESC? " & CStr(i))
    retVal = MsgBox(prompt, vbOKCancel)
    If retVal = vbCancel Then Exit Sub
    retStr = scpi.Parse("SENS:CORR:COLL:GUID:ACQ STAN" & CStr(i) & ";*OPC?")
Next

' Compute the error coefficients and save the cal to CalSet, and turn it on
scpi.Parse "SENS:CORR:COLL:GUID:SAVE"
MsgBox "Cal is done!"
End Sub

```

Last Modified:

14-May-2007 MX Updated for new CMET and TMET commands

Perform Global Delta Match Cal

The following program performs a [Global Delta Match Calibration](#). This is required when performing an Unknown Thru Cal or TRL Cal on PNAs without a [reference receiver for each test port](#). [See example of Unknown Thru or TRL Cal](#).

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Delta.vbs. [Learn how to setup and run the macro](#).

```
Sub PerformGlobalDeltaMatchCal()  
Set pna = CreateObject("AgilentPNA835x.Application")  
Set scpi = pna.ScpiStringParser  
  
' Initiate a Global Delta Match calibration, choosing connector and cal kit  
scpi.Parse "SENS:CORR:COLL:GUID:DMAT 'APC 3.5 female', '85033D/E'"  
  
' Query the number of calibration steps  
retStr = scpi.Parse("SENS:CORR:COLL:GUID:STEP?")  
numSteps = CInt(retStr)  
  
' Measure the cal standards  
For i = 1 To numSteps  
    prompt = scpi.Parse("SENS:CORR:COLL:GUID:DESC? " & CStr(i))  
    retVal = MsgBox(prompt, vbOKCancel)  
    If retVal = vbCancel Then Exit Sub  
    retStr = scpi.Parse("SENS:CORR:COLL:GUID:ACQ STAN" & CStr(i) & ";*OPC?")  
Next  
  
' Compute the error coefficients and save the cal to Global Delta Match CalSet  
scpi.Parse "SENS:CORR:COLL:GUID:SAVE"  
MsgBox "Cal is done!"  
End Sub
```

Perform an Unguided ECal

This VBScript program performs an Unguided Full 2-Port ECal.

The SCPI commands in this example are sent over a COM interface using the [SCPIStringParser](#) object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Unguided.vbs. [Learn how to setup and run the macro.](#)

```
Set pna = CreateObject("AgilentPNA835x.Application")
Set scpi = pna.ScpIStringParser
' Preset the analyzer
scpi.Execute "SYSTem:PRESet"

' Start frequency of 10 MHz
scpi.Execute "SENSe:FREQuency:START 10E6"

' Stop frequency of 9 GHz
scpi.Execute "SENSe:FREQuency:STOP 9E9"

' Select the preset S11 measurement
scpi.Execute "CALCulate:PARAMeter:SElect 'CH1_S11_1'"
' Read the information about the Agilent factory
' characterization data of ECal module #1 on the USB bus
module1Info = scpi.Execute("SENSe:CORRection:COLLect:CKIT:INFormation? ECAL1,CHAR0")

' Prompt for the ECal module
MsgBox "Description of ECal Module #1:" & Chr(10) & Chr(10) & module1Info & _Chr(10)
& Chr(10) & "Make port connections to the ECal module, then press enter"
' ECal full 1 port and 2 port
' Choose a Calibration Type (comment out one of these)
scpi.Execute "SENSe:CORRection:COLLect:METHod refl3"
scpi.Execute "SENSe:CORRection:COLLect:METHod SPARSOLT"
' Specify to have the PNA automatically determine which port of the
' ECal module is connected to which port of the PNA.
scpi.Execute "SENSe:CORRection:PREFerence:ECAL:ORIENTATION ON"
' Alternatively, if you are measuring at very low power levels where
' the PNA fails to sense the module's orientation, you may need to turn
' off the auto orientation and specify how the module is connected (as in
' these next two commented lines of code -- "A1,B2" would indicate Port A
' of the module is connected to Port 1 and Port B is connected to Port 2).
'scpi.Execute "SENSe:CORRection:PREFerence:ECAL:ORIENTATION OFF"
'scpi.Execute "SENSe:CORRection:PREFerence:ECAL:PMAP ECAL1,'A1,B2'"
' Acquire and store the calibration terms. *OPC? causes a "+1" to be
' returned when finished. CHAR0 indicates to use the Agilent factory
' characterized data within the ECal module (as opposed to a user characterization).
x = scpi.Execute("SENSe:CORRection:COLLect:ACQuire ECAL1,CHAR0;*OPC?")
MsgBox "Done with calibration."
```

Perform an Unguided 2-Port Mechanical Cal

This VBScript program performs an Unguided, Full 2-Port, calibration using ONE set of mechanical calibration standards.

The SCPI commands in this example are sent over a COM interface using the [SCPIStringParser](#) object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Unguided.vbs. [Learn how to setup and run the macro.](#)

```
Set App = CreateObject("AgilentPNA835x.Application")
Set Scpi = App.SCPIStringParser

'Initialize state
Scpi.Execute ("SYSTem:PRESet")

'Select the Preset measurement
Scpi.Execute ("CALCulate:PARAmeter:SElect 'CH1_S11_1'")

'Set the calibration method
Scpi.Execute ("SENSe:CORRection:COLLect:METHod SPARSOLT")

'Select a cal kit
Scpi.Execute ("SENSe:CORRection:COLLect:CKIT:SElect 1")

'Set one set of standards
Scpi.Execute ("SENSe:CORRection:TSTandards OFF")

'Set acquisition to FORWARD
Scpi.Execute ("SENSe:CORRection:SFORward ON")

'Measure the standards in forward direction
MsgBox "Connect OPEN to Port 1; then press OK"
Scpi.Execute ("SENSe:CORRection:COLLect:ACQuire stan1")

MsgBox "Connect SHORT to Port 1; then press OK"
Scpi.Execute ("SENSe:CORRection:COLLect:ACQuire stan2")

MsgBox "Connect LOAD to Port 1; then press OK"
Scpi.Execute ("SENSe:CORRection:COLLect:ACQuire stan3")

'Set acquisition to REVERSE
Scpi.Execute ("SENSe:CORRection:SFORward OFF")

'Measure the standards in reverse direction
MsgBox "Connect OPEN to Port 2; then press OK"
Scpi.Execute ("SENSe:CORRection:COLLect:ACQuire stan1")

MsgBox "Connect SHORT to Port 2; then press OK"
Scpi.Execute ("SENSe:CORRection:COLLect:ACQuire stan2")
```

```
MsgBox "Connect LOAD to Port 2; then press OK"
Scpi.Execute ("SENSe:CORRection:COLLect:ACQuire stan3")

'Measure the thru standard
MsgBox "Connect THRU between Ports 1 and 2; then press OK"
Scpi.Execute ("SENSe:CORRection:COLLect:ACQuire stan4")

'OPTIONAL Measure Isolation
MsgBox "Connect LOADS to Port 1 AND Port 2; then press OK"
Scpi.Execute ("SENSe:CORRection:COLLect:ACQuire stan5")

'All standards have been measured. Save the result
Scpi.Execute ("SENS:CORR:COLL:SAVE")
MsgBox "The calibration has been completed"
```


Perform an Unguided 1-Port Cal on Port 2

This VBScript program does the following:

1. Clear measurements from the PNA
2. Create a new S22 measurement
3. Set an instrument state
4. Select a cal kit
5. Initiate an Unguided calibration
6. Display a prompt to connect each standard
7. Save the calibration to a newly created cal set

Note: This example illustrates an important step when calibrating a reflection measurement in the reverse direction. You MUST create a reverse (S22) measurement and have it be the active (selected) measurement on the channel that is being calibrated. This is not necessary for any calibrating any other measurement parameter.

The SCPI commands in this example are sent over a COM interface using the [SCPIStringParser](#) object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Unguided.vbs. [Learn how to setup and run the macro.](#)

```
Dim App
Set App = CreateObject("AgilentPNA835x.Application")
App.Preset

Dim Parser
Dim Chan

Rem Clear old measurements
App.Reset

Rem Create a new Measurement
Set Parser = App.SCPIStringParser
Parser.Parse "DISPlay:WINDow1:STATE ON"
Parser.Parse "CALCulate:PARAMeter:DEFine 'MyMeas',S22"
Parser.Parse "DISPlay:WINDow1:TRACel:FEED 'MyMeas'"

Rem Initialize state
Set Chan = App.ActiveChannel
Chan.StartFrequency = 200e6
Chan.StopFrequency = 1.5e9
Chan.IFBandwidth = 1000

Rem Begin an unguided calibration
```

```
Rem Set the calibration method
Parser.Parse "SENSe:CORRection:COLLect:METhod REFL3"

Rem Turn off continuous sweep
Parser.Parse "INITiate:CONTinuous OFF"

Rem Select a cal kit
Parser.Parse "SENSe:CORRection:COLLect:CKIT:SElect 1"

Rem Measure the standards
MsgBox("Connect OPEN to port 2. Then press OK")
Parser.Parse ("sens:corr:coll:acq STAN1")

MsgBox("Connect SHORT to port 2. Then press OK")
Parser.Parse ("sens:corr:coll:acq STAN2")

MsgBox("Connect LOAD to port 2. Then press OK")
Parser.Parse ("sens:corr:coll:acq STAN3")

Rem All standards have been measured. Save the result
Parser.Parse "SENS:CORR:COLL:SAVE"

Rem Turn ON continuous sweep
Parser.Parse "INITiate:CONTinuous ON"
MsgBox("The calibration has been completed")
```

Perform an Unguided Cal on a 4-Port PNA

This topic describes how to perform an unguided calibration on a multiport network analyzer using SCPI. The objective here is to make clear the relationship between the physical port on which a standard is being measured, the actual device in the cal kit, and the SCPI command used to acquire the device.

There are two sets of SCPI commands that acquire calibrations. One set is used for guided cal, the other for unguided. The SCPI commands that provide remote access to unguided cal are in the SENS:CORR:COLL block:

- SENS:CORR:COLL:METHod
- SENS:CORR:COLL:ACQuire
- SENS:CORR:COLL:SAVE

On a four port network analyzer, the remote programmer needs to be aware of the relationship between the physical port and the calibration kit class assignments. The example program (below) illustrates the usage by performing three unique 2 port cals, taking care to acquire the appropriate standards.

Calibration standards classes are 'categories' of standard types. To perform a 2 port calibration, the cal wizard requires the user to measure:

3 reflection standards on the forward port:

- Class S11A typically an open
- Class S11B typically a short
- Class S11C typically a load

Likewise, 3 reflection standards are required for the reverse port:

- Class S22A typically an open
- Class S22B typically a short
- Class S22C typically a load

There is also a transmission standard that is measured in both directions:

- Class S21T typically a thru

The following illustrates the relationship between cal kit physical standards and calibration classes.

Here is a list of the physical devices in my calibration kit.

Standard #1 = "3.5 mm male short"

Standard #2 = "3.5 mm male open"

Standard #3 = "3.5 mm male broadband load"

Standard #4 = "Insertable thru standard"

Standard #5 = "3.5 mm male sliding load"

Standard #6 = "3.5 mm male lowband load"

Standard #7 = "3.5 mm female short"

Standard #8 = "female to female characterized thru adapter"

Standard #9 = "0-2 Load"

Standard #10 = "Open"

Standard #11 = "Non-insertable thru"

Standard #12 = "3.5 mm female lowband load"

Standard #13 = "3.5 mm female sliding load"

Standard #14 = "3.5 mm female broadband load"

Standard #15 = "3.5 mm female open"

When you perform a calibration remotely using SCPI, you don't specify the device number directly. Rather, you specify the class you want to measure. Each device in the calibration kit is assigned to a class. And since more than one device can be assigned to the same class, each class contains an ordered list of devices. The class assignments are user-settable using the Advanced Modify Cal Kit dialog or the SCPI command:

[SENS:CORR:COLL:CKIT:ORDER](#)<class>, <std>, <std>, <std>, <std>, <std>, <std>, <std>

The 85052B kit used in the example program had the following standard list for each class: The list was obtained by issuing the corresponding SCPI query:

[SENS:CORR:COLL:CKIT:OLIST1?](#) S11A = +2,+15,+0,+0,+0,+0,+0

[SENS:CORR:COLL:CKIT:OLIST2?](#) S11B = +1,+7,+0,+0,+0,+0,+0

[SENS:CORR:COLL:CKIT:OLIST3?](#) S11C = +6,+5,+3,+12,+13,+14,+0

[SENS:CORR:COLL:CKIT:OLIST4?](#) S21T = +4,+8,+0,+0,+0,+0,+0

[SENS:CORR:COLL:CKIT:OLIST5?](#) S22A = +2,+15,+0,+0,+0,+0,+0

[SENS:CORR:COLL:CKIT:OLIST6?](#) S22B = +1,+7,+0,+0,+0,+0,+0

[SENS:CORR:COLL:CKIT:OLIST7?](#) S22C = +6,+5,+3,+12,+13,+14,+0

[SENS:CORR:COLL:CKIT:OLIST8?](#) S12T = +4,+8,+0,+0,+0,+0,+0

When you perform the calibration, you acquire data by issuing the ACQUIRE command:

[SENS:CORR:COLL:ACQ](#) <class>[, <subst>]

For example:

[SENS:CORR:COLL:SFOR](#) 1

[SENS:CORR:COLL:ACQ](#) STANA, SST2

The SFOR command tells the wizard to make the next acquisition in the forward direction. The ACQUIRE command specifies that we are measuring the 2nd device in the list for STANA. And since we are measuring SFORward, STANA refers to class #1 or S11A. The list of devices for this class are specified in the OLIST1 query above. The associations are shown in red.

Alternately, you could modify the device order for the S11A class to move device #15 into the first position ([SENS:CORR:COLL:CKIT:ORDER1](#)). When the desired device is in the first position, you needn't specify the order number in the ACQUIRE command. The default is the first device in the OLIST. This worked well for two port network analyzers where the order for S11A,B,C classes were setup for port 1 and the order for S22A,B,C was set up for port 2. With the kit setup in the proper order, you could eliminate the specification of the substandard

number (SST<n>).

When performing 2 port calibrations on 4 Port Network Analyzers (e.g.: PNA Model N5230A), the wizard applies S11A,B,C standards to the lower numbered port, S22A,B,C standards to the higher numbered port. Since the two classes (S11A,B,C and S22A,B,C) are applied to multiple ports, the programmer must take into account the ports being measured and take greater care when specifying the ACQUIRE command to ensure that the correct device is being measured.

Port to class relationship

Ports	S11A Port	S22A Port
1,2	1	2
1,3	1	3
1,4	1	4
2,3	2	3
2,4	2	4
3,4	3	4

The following example program shows one method of handling two port cals on a multiport network analyzer. The connectors at the measurement plane are assumed to be (1) male, (2) female, (3) male, and (4) male. In the example, three cals are performed: 1-2 (insertable male to female), 2-3 (insertable female to male), and 3-4 (noninsertable using an characterized adapter).

```
option explicit
public scpi
public pna
' assume a 4 port PNA with the following connectors:
' the standard measured on these ports will be the opposite gender
' PORT 1 = 3.5 male
' PORT 2 = 3.5 female
' PORT 3 = 3.5 male
' PORT 4 = 3.5 male
'To perform 2 port calibrations between 1-2, 2-3, and 3-4 you need to do the
following

call main

sub main
set pna = CreateObject("AgilentPnA835x.Application")
set scpi = pna.ScpiStringParser
pna.Preset
' select a kit to use for this demonstration
' kit #1 for the N5230A is the 85052B 3.5mm kit with sliding load
scpi.execute("SENS:CORR:COLL:CKIT:SELECT 1" )
```

```

PrintKitStandardInfo 1
PrintKitOlist 1

' -----
'   CALIBRATE PORTS 1 and 2, insertable cal
' -----

wscript.echo
wscript.echo "Calibrating ports 1 and 2"
scpi.execute("SYST:PRES;")
scpi.execute("calc:par:sel CH1_S11_1")
scpi.execute("SENS:CORR:TST:STATE 0")
scpi.execute("SENS:CORR:COLL:METHod SPARSOLT")
scpi.execute("SENS:CORR:SFOR 1")
MeasureFemaleStandards 1
scpi.execute("SENS:CORR:SFOR 0")
MeasureMaleStandards 2
MeasureTransmissionStandards 1,2
scpi.execute("SENS:CORR:COLL:SAVE")

' -----
'   CALIBRATE PORTS 2 and 3, insertable cal
' -----

wscript.echo
wscript.echo "Calibrating ports 2 and 3"
scpi.execute("SYST:PRES;")
scpi.execute("calc:par:sel CH1_S11_1")
scpi.execute("calc:par:mod S23")
scpi.execute("SENS:CORR:TST:STATE 0")
scpi.execute("SENS:CORR:COLL:METHod SPARSOLT")
scpi.execute("SENS:CORR:SFOR 1")
MeasureMaleStandards 2
scpi.execute("SENS:CORR:SFOR 0")
MeasureFemaleStandards 3
MeasureTransmissionStandards 2,3
scpi.execute("SENS:CORR:COLL:SAVE")

' -----
'   CALIBRATE PORTS 3 and 4, non-insertable cal
' -----

wscript.echo
wscript.echo "Calibrating ports 3 and 4"
scpi.execute("SYST:PRES;")
scpi.execute("calc:par:sel CH1_S11_1")
scpi.execute("calc:par:mod S43")
scpi.execute("SENS:CORR:COLL:METHod SPARSOLT")
scpi.execute("SENS:CORR:SFOR 1")
MeasureFemaleStandards 3
scpi.execute("SENS:CORR:SFOR 0")
MeasureFemaleStandards 4
MeasureAdapter 3, 4
scpi.execute("SENS:CORR:COLL:SAVE")
end sub

```

```

sub MeasureMaleStandards ( portNumber )
dim portstr
portstr = formatnumber(portNumber,0)
Promptconnect1 1, 1, portNumber
scpi.execute("SENS:CORR:COLL:ACQ STAN1;*OPC?")

Promptconnect1 2, 1, portNumber
scpi.execute("SENS:CORR:COLL:ACQ STAN2;*OPC?")
Promptconnect1 3, 3, portNumber
scpi.execute("SENS:CORR:COLL:ACQ STAN3,SST3;*OPC?")
end sub

sub MeasureFemaleStandards (portNumber)
dim portstr
portstr = formatnumber(portNumber,0)
Promptconnect1 1, 2, portNumber
scpi.execute("SENS:CORR:COLL:ACQ STAN1,SST2;*OPC?")
Promptconnect1 2, 2, portNumber
scpi.execute("SENS:CORR:COLL:ACQ STAN2,SST2;*OPC?")
Promptconnect1 3, 6, portNumber
scpi.execute("SENS:CORR:COLL:ACQ STAN3,SST6;*OPC?")
end sub

sub MeasureTransmissionStandards( port1, port2)
dim plstr
dim p2str
plstr = formatnumber( port1, 0)
p2str = formatnumber( port2, 0)

Promptconnect2 4, 1, port1, port2
scpi.execute("SENS:CORR:COLL:ACQ STAN4;*OPC?")
end sub

sub MeasureAdapter( port1, port2)
dim plstr
dim p2str
plstr = formatnumber( port1, 0)
p2str = formatnumber( port2, 0)

Promptconnect2 4, 2, port1, port2
scpi.execute("SENS:CORR:COLL:ACQ STAN4,SST2;*OPC?")
end sub

' return the nth item in the comma separated list
Function GetItemNumber( list, n)
dim strVector
strVector = split(list,",",-1,1)
GetItemNumber = strVector(n-1)
end function

' remove the trailing newline from str
function chop( str )

```

```

dim tmp
tmp = str
' remove the appended newline
dim pos
pos = InStrRev(tmp,vblf)
if (pos >0) then
tmp = mid(tmp,1,pos-1)
end if
chop = tmp
end function

'return the label for the nth standard assigned to the class described by
class_index.
' if class_index = 1, class is S11A (STAN1)
' if class_index = 2, class is S11B (STAN2), etc
function GetStandardLabel( class_index, nth)
dim olist
dim stdnum
dim resp
olist = scpi.execute("SENS:CORR:COLL:CKIT:OLIST" + formatnumber(class_index,0)+"?")
stdnum = GetItemNumber( olist, nth)
scpi.execute("SENS:CORR:COLL:CKIT:STAN " + formatnumber(stdnum,0))
resp = scpi.execute("SENS:CORR:COLL:CKIT:STAN:Label?")
GetStandardLabel = chop(resp)
end function

sub PromptConnect1( class_index, nth, port)
wscript.echo "CONNECT " + GetStandardLabel( class_index, nth) + " to port " +
formatnumber(port,0)
end sub

sub PromptConnect2( class_index, nth, port1, port2)
wscript.echo "CONNECT " + GetStandardLabel( class_index, nth) + " between ports " +
formatnumber(port1,0) + " and " + formatnumber(port2,0)
end sub

' Print the order of standards per class for this kit
sub PrintKitOlist( kit )
dim i
dim cmd
dim resp
wscript.echo
dim olistcmd
olistcmd = "SENS:CORR:COLL:CKIT:OLIST"
' list the sub standards for each of the following classes
' S11A, S11B, S11C, FWD TRANS, FWD ISOL, S22A, S22B, S22C, REV TRANS, REV ISOL
for i = 1 to 8
cmd = olistcmd + formatNumber(i,0) + "?"
resp = scpi.execute(cmd)
wscript.echo cmd + "= " + chop(resp)
next
end sub

```



```

sub PrintKitStandardInfo( kit )
wscript.echo scpi.execute("SENS:CORR:COLL:CKIT:NAME?")
dim i
for i = 1 to 30
dim slabel
dim snum
snum = formatNumber(i,0)
scpi.execute("SENS:CORR:COLL:CKIT:STAN " + snum)
slabel=scpi.execute("SENS:CORR:COLL:CKIT:STAN:LABel?")
wscript.echo "Standard #" + snum + " = " + chop(slabel)
next
end sub

```

The output from this program is as follows:

Microsoft (R) Windows Script Host Version 5.6

Copyright (C) Microsoft Corporation 1996-2001. All rights reserved.

"85052B 3.5 mm with sliding load"

Standard #1 = "3.5 mm male short"

Standard #2 = "3.5 mm male open"

Standard #3 = "3.5 mm male broadband load"

Standard #4 = "Insertable thru standard"

Standard #5 = "3.5 mm male sliding load"

Standard #6 = "3.5 mm male lowband load"

Standard #7 = "3.5 mm female short"

Standard #8 = "female to female characterized thru adapter"

Standard #9 = "0-2 Load"

Standard #10 = "Open"

Standard #11 = "Non-insertable thru"

Standard #12 = "3.5 mm female lowband load"

Standard #13 = "3.5 mm female sliding load"

Standard #14 = "3.5 mm female broadband load"

Standard #15 = "3.5 mm female open"

Standard #16 = "Open"

Standard #17 = "Open"

Standard #18 = "Open"

Standard #19 = "Open"

Standard #20 = "Open"

Standard #21 = "Open"

Standard #22 = "Open"
 Standard #23 = "Open"
 Standard #24 = "Open"
 Standard #25 = "Open"
 Standard #26 = "Open"
 Standard #27 = "Open"
 Standard #28 = "Open"
 Standard #29 = "Open"
 Standard #30 = "Open"
 SENS:CORR:COLL:CKIT:OLIST1?= +2,+15,+0,+0,+0,+0,+0
 SENS:CORR:COLL:CKIT:OLIST2?= +1,+7,+0,+0,+0,+0,+0
 SENS:CORR:COLL:CKIT:OLIST3?= +6,+5,+3,+12,+13,+14,+0
 SENS:CORR:COLL:CKIT:OLIST4?= +4,+8,+0,+0,+0,+0,+0
 SENS:CORR:COLL:CKIT:OLIST5?= +2,+15,+0,+0,+0,+0,+0
 SENS:CORR:COLL:CKIT:OLIST6?= +1,+7,+0,+0,+0,+0,+0
 SENS:CORR:COLL:CKIT:OLIST7?= +6,+5,+3,+12,+13,+14,+0
 SENS:CORR:COLL:CKIT:OLIST8?= +4,+8,+0,+0,+0,+0,+0
 Calibrating ports 1 and 2
 CONNECT "3.5 mm female open" to port 1
 CONNECT "3.5 mm female short" to port 1
 CONNECT "3.5 mm female broadband load" to port 1
 CONNECT "3.5 mm male open" to port 2
 CONNECT "3.5 mm male short" to port 2
 CONNECT "3.5 mm male broadband load" to port 2
 CONNECT "Insertable thru standard" between ports 1 and 2
 Calibrating ports 2 and 3
 CONNECT "3.5 mm male open" to port 2
 CONNECT "3.5 mm male short" to port 2
 CONNECT "3.5 mm male broadband load" to port 2
 CONNECT "3.5 mm female open" to port 3
 CONNECT "3.5 mm female short" to port 3
 CONNECT "3.5 mm female broadband load" to port 3
 CONNECT "Insertable thru standard" between ports 2 and 3
 Calibrating ports 3 and 4
 CONNECT "3.5 mm female open" to port 3
 CONNECT "3.5 mm female short" to port 3

CONNECT "3.5 mm female broadband load" to port 3

CONNECT "3.5 mm female open" to port 4

CONNECT "3.5 mm female short" to port 4

CONNECT "3.5 mm female broadband load" to port 4

CONNECT "female to female characterized thru adapter" between ports 3 and 4

Perform an Unguided Cal on Multiple Channels

This VBScript program performs an Unguided Calibration simultaneously on two channels.

This could be used in the following cases:

- If you need more than the current number of data points per trace, so the additional points must be added to a different channel.
- If you need several channels with independent settings, but you want to calibrate all channels with a minimal number of standard connections. This would be especially critical for on wafer calibration.

The SCPI commands in this example are sent over a COM interface using the SCPIStringParser object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as Unguided.vbs. [Learn how to setup and run the macro.](#)

```
Dim app
Dim scpi
Dim NumberOfActiveChannels
NumberOfActiveChannels = 2
' Create / Get the PNA application.
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpiStringParser
' Query the list of connectors that the PNA system recognizes
scpi.Execute("SYST:PRES")
'Wait for successful preset before continuing
done=scpi.Execute("*OPC?")
'The following section sets up 2 channels with different frequency ranges
scpi.Execute("DISP:WIND1:STATE OFF")
'Reset Windows
scpi.Execute("DISP:WIND1:STATE ON")
scpi.Execute("DISP:WIND2:STATE ON")
'
' Assign a measurement to the first window
scpi.Execute("CALC1:PAR:DEF 'Meas1', S21")
scpi.Execute("DISP:WIND1:TRAC1:FEED 'Meas1'")
'Assign a measurement to the second window
scpi.Execute("CALC2:PAR:DEF 'Meas2', S21")
scpi.Execute("DISP:WIND2:TRAC1:FEED 'Meas2'")
```

```

'Set up two channels with independent parameters
scpi.Execute("SENS1:FREQ:SPAN 1e9")
scpi.Execute("SENS2:FREQ:SPAN 1e6")
'Wait for changes before continuing
done=scpi.Execute("*OPC?")
'

'This section sets the calibration kits for channel 1 and channel 2
'Select a trace from channel 1 and set calibration type and cal kit
scpi.Execute("CALC1:PAR:SEL 'Meas1'")
scpi.Execute("SENS1:CORR:COLL:METH SPARSOLT")
scpi.Execute("SENS1:CORR:COLL:CKIT 2") '85056D for default settings
'Same standards for forward and reverse direction
scpi.Execute("SENS1:CORR:TST OFF")
'Select a trace from channel 2 and set calibration type and cal kit
scpi.Execute("CALC2:PAR:SEL 'Meas2'")
scpi.Execute("SENS2:CORR:COLL:METH SPARSOLT")
scpi.Execute("SENS2:CORR:COLL:CKIT 2") '85056D for default settings
'Same standards for forward and reverse direction
scpi.Execute("SENS2:CORR:TST OFF")

'Set both channels to manual triggering
scpi.Execute("INIT1:CONT OFF")
scpi.Execute("INIT2:CONT OFF")
'

'The following assumes female port connector on port 1
' and male port connector on port 1
'Step through all active channels and calibrate and measure all standards.
scpi.Execute("SENS1:CORR:SFOR ON") 'Set acquisition to forward
scpi.Execute("SENS2:CORR:SFOR ON") 'Set acquisition to forward
MsgBox("Connect OPEN standard to port 1")
For CurrentChannel = 1 To NumberOfActiveChannels
scpi.Execute("CALC" & CurrentChannel & ":PAR:SEL 'Meas" & CurrentChannel & "'")
scpi.Execute("SENS" & CurrentChannel & ":CORR:COLL stan1")
done= scpi.Execute("*OPC?")
Next

```

```

MsgBox("Connect SHORT standard to port 1")
For CurrentChannel = 1 To NumberOfActiveChannels
scpi.Execute("CALC" & CurrentChannel & ":PAR:SEL 'Meas" & CurrentChannel & "'")
scpi.Execute("SENS" & CurrentChannel & ":CORR:COLL stan2")
done=scpi.Execute("*OPC?")
Next

MsgBox("Connect LOAD standard to port 1")
For CurrentChannel = 1 To NumberOfActiveChannels
scpi.Execute("CALC" & CurrentChannel & ":PAR:SEL 'Meas" & CurrentChannel & "'")
scpi.Execute("SENS" & CurrentChannel & ":CORR:COLL stan3")
done=scpi.Execute("*OPC?")
Next

scpi.Execute("SENS1:CORR:SFOR OFF") 'Set acquisition to reverse
scpi.Execute("SENS2:CORR:SFOR OFF") 'Set acquisition to forward

MsgBox("Connect OPEN standard to port 2")
For CurrentChannel = 1 To NumberOfActiveChannels
scpi.Execute("CALC" & CurrentChannel & ":PAR:SEL 'Meas" & CurrentChannel & "'")
scpi.Execute("SENS" & CurrentChannel & ":CORR:COLL stan1")
done=scpi.Execute("*OPC?")
Next

MsgBox("Connect SHORT standard to port 2")
For CurrentChannel = 1 To NumberOfActiveChannels
scpi.Execute("CALC" & CurrentChannel & ":PAR:SEL 'Meas" & CurrentChannel & "'")
scpi.Execute("SENS" & CurrentChannel & ":CORR:COLL stan2")
done=scpi.Execute("*OPC?")
Next

MsgBox("Connect LOAD standard to port 2")
For CurrentChannel = 1 To NumberOfActiveChannels
scpi.Execute("CALC" & CurrentChannel & ":PAR:SEL 'Meas" & CurrentChannel & "'")
scpi.Execute("SENS" & CurrentChannel & ":CORR:COLL stan3")
done=scpi.Execute("*OPC?")
Next

```

```

'
'Measure thru standard for all channels in both forward and reverse direction
MsgBox("Connect THRU between ports 1 and 2")
scpi.Execute("SENS1:CORR:SFOR ON") 'Set acquisition to forward
scpi.Execute("SENS2:CORR:SFOR ON") 'Set acquisition to forward
For CurrentChannel = 1 To NumberOfActiveChannels
scpi.Execute("CALC" & CurrentChannel & ":PAR:SEL 'Meas" & CurrentChannel & "'")
scpi.Execute("SENS" & CurrentChannel & ":CORR:COLL stan4")
done=scpi.Execute("*OPC?")
Next

scpi.Execute("SENS1:CORR:SFOR OFF") 'Set acquisition to reverse
scpi.Execute("SENS2:CORR:SFOR OFF") 'Set acquisition to reverse
For CurrentChannel = 1 To NumberOfActiveChannels
scpi.Execute("CALC" & CurrentChannel & ":PAR:SEL 'Meas" & CurrentChannel & "'")
scpi.Execute("SENS" & CurrentChannel & ":CORR:COLL stan4")
done=scpi.Execute("*OPC?")
Next

For CurrentChannel = 1 To NumberOfActiveChannels
scpi.Execute("CALC" & CurrentChannel & ":PAR:SEL 'Meas" & CurrentChannel & "'")
scpi.Execute("SENS" & CurrentChannel & ":CORR:COLL:SAVE")
done=scpi.Execute("*OPC?")
Next

'Set both channels to continuous triggering
scpi.Execute("INIT1:CONT ON")
scpi.Execute("INIT2:CONT ON")

```

ECALConfidence Check using SCPI

This Visual Basic program performs a complete ECAL confidence check.

To run this program, you need:

- An established GPIB interface connection
- Agilent's VISA or National Instrument's VISA installed on your PC
- The module visa32.bas added to your VB project.
- A form with two buttons: cmdRun and cmdQuit
- A calibrated S11 1-port or N-port measurement active on Channel 1
- Window 1 is visible

[See Other SCPI Example Programs](#)

```
'Session to VISA Default Resource Manager
Private defRM As Long
'Session to PNA
Private vipNA As Long
'VISA function status return code
Private status As Long

Private Sub Form_Load()
    defRM = 0
End Sub

Private Sub cmdRun_Click()
'String to receive data from the PNA
Dim strReply As String * 200

' Open the VISA default resource manager
status = viOpenDefaultRM(defRM)
If (status < VI_SUCCESS) Then HandleVISAError

' Open a VISA session (vipNA) to the PNA at GPIB address 16.
status = viOpen(defRM, "GPIB0::16::INSTR", 0, 0, vipNA)
If (status < VI_SUCCESS) Then HandleVISAError

' Need to set the VISA timeout value to give all our GPIB Reads
' sufficient time to complete before a timeout error occurs.
' For this example, let's try setting the limit to
' 10000 milliseconds (10 seconds).
status = viSetAttribute(vipNA, VI_ATTR_TMO_VALUE, 10000)
If (status < VI_SUCCESS) Then HandleVISAError

' Get the catalog of all the measurements currently on Channel 1.
status = myGPIBWrite(vipNA, "CALC1:PAR:CAT?")
If (status < VI_SUCCESS) Then HandleVISAError
status = myGPIBRead(vipNA, strReply)
If (status < VI_SUCCESS) Then HandleVISAError
```



```

' If an S11 measurement named "MY_S11" doesn't already exist,
' then create it.
If Instr(strReply, "MY_S11") = 0 Then
    status = myGPIBWrite(viPNA, "CALC1:PAR:DEF MY_S11,S11")
    If (status < VI_SUCCESS) Then HandleVISAError
End If
strReply = ""

' Get the catalog of all the trace numbers currently active
' in Window 1.
status = myGPIBWrite(viPNA, "DISP:WIND1:CAT?")
If (status < VI_SUCCESS) Then HandleVISAError

status = myGPIBRead(viPNA, strReply)
If (status < VI_SUCCESS) Then HandleVISAError

' If a trace number 4 already exists in Window 1, then this
' will remove it.
If Instr(strReply, "4") > 0 Then
    status = myGPIBWrite(viPNA, "DISP:WIND1:TRAC4:DEL")
    If (status < VI_SUCCESS) Then HandleVISAError
End If

' Set trace number 4 to MY_S11.
status = myGPIBWrite(viPNA, "DISP:WIND1:TRAC4:FEED MY_S11")
If (status < VI_SUCCESS) Then HandleVISAError

' Set up trace view so we are viewing only the data trace.
status = myGPIBWrite(viPNA, "DISP:WIND1:TRAC4 ON")
If (status < VI_SUCCESS) Then HandleVISAError
status = myGPIBWrite(viPNA, "DISP:WIND1:TRAC4:MEM OFF")
If (status < VI_SUCCESS) Then HandleVISAError

' Select MY_S11 as the measurement to be used for the
' Confidence Check.
status = myGPIBWrite(viPNA, "SENS1:CORR:CCH:PAR MY_S11")
If (status < VI_SUCCESS) Then HandleVISAError

' Acquire the S11 confidence check data from ECal Module A
' into the memory buffer (asking for an OPC reply when it's done).
status = myGPIBWrite(viPNA, "SENS1:CORR:CCH:ACQ ECAL1;*OPC?")
If (status < VI_SUCCESS) Then HandleVISAError

' The PNA sends an OPC reply ("+1") when the confidence data
' acquisition into memory is complete, so this Read is waiting on
' the reply until it is received.
status = myGPIBRead(viPNA, strReply)
If (status < VI_SUCCESS) Then HandleVISAError

' Turn on trace math so the trace shows data divided by memory.
' You can be confident the S11 calibration is reasonably good if

```

```

' the displayed trace varies no more than a few tenths of a dB
' from 0 dB across the entire span.
status = myGPIBWrite(viPNA, "CALC1:PAR:SEL MY_S11")
If (status < VI_SUCCESS) Then HandleVISAError
status = myGPIBWrite(viPNA, "CALC1:MATH:FUNC DIV")
If (status < VI_SUCCESS) Then HandleVISAError
End Sub

Private Sub cmdQuit_Click()
' Turn off trace math
status = myGPIBWrite(viPNA, "CALC1:MATH:FUNC NORM")
If (status < VI_SUCCESS) Then HandleVISAError

' Conclude the confidence check to set the ECal module
' back to it's idle state.
status = myGPIBWrite(viPNA, "SENS1:CORR:CCH:DONE")
If (status < VI_SUCCESS) Then HandleVISAError

' Close the resource manager session (which also closes
' the session to the PNA).
If defRM <> 0 Then Call viClose(defRM)

' End the program
End
End Sub

Private Function myGPIBWrite(ByVal viHandle As Long, ByVal strOut As String) As Long
' The "+ Chr$(10)" appends an ASCII linefeed character to the output, for
' terminating the write transaction.
myGPIBWrite = viVPrintf(viHandle, strOut + Chr$(10), 0)
End Function

Private Function myGPIBRead(ByVal viHandle As Long, strIn As String) As Long
myGPIBRead = viVScanf(viHandle, "%t", strIn)
End Function

Sub HandleVISAError()
Dim strVisaErr As String * 200
Call viStatusDesc(defRM, status, strVisaErr)
MsgBox "**** Error : " + strVisaErr, vbExclamation
End
End Sub

```

Perform a Source and Receiver Power Cal using SCPI

Programming the PNA using COM or using SICL/VISA over LAN (as in this example) leaves the PNA free to control GPIB devices as needed.

The first example, using Visual Basic, demonstrates the following:

- Performing a source power calibration of Port 2 for Channel 1.
- Reading the calibration data.

The second example performs a [Receiver Power Cal](#) using VBScript.

Learn more about [Power Calibrations](#).

See an example that [Uploads a Source Power Cal](#).

[Other SCPI Example Programs](#)

To run this program, you need:

- One of the following power meters connected to the PNA through GPIB: E4416A, E4417A, E4418A/B, E4419A/B, 437B, 438A, EPM-441A, EPM-442A

Note: If your power meter is other than these, you can [create your own Power Meter Driver](#) using our template.

- Your PC and PNA both connected to a LAN (for communicating with each other).
- The SICL and VISA components of Agilent's I/O Libraries software installed on your PC (both are included when you install the software, unless you already have another vendor's VISA installed. Then specify Full SICL and VISA installation to overwrite the other vendor's VISA).
- The module visa32.bas added to your VB project.
- A form with one button labeled cmdRun.
- A VISA interface configured on your remote PC to control the PNA. This could be GPIB interface or a [VISA LAN Client](#).
- On the PNA connect a Thru cable from port 1 to port 2.

Note: The [SOURce:POWer:CORRection:COLlect:ACQuire](#) command, when used with a power meter, cannot be sent over the GPIB unless the power meter is connected to a different GPIB interface. See the alternative methods described in the command details.

```
'Session to VISA Default Resource Manager  
Private defRM As Long
```

```

'Session to PNA
Private viPNA As Long
'VISA function status return code
Private status As Long

Private Sub Form_Load()
defRM = 0
End Sub

Private Sub cmdRun_Click()
' String to receive data from the PNA.
' Dimensioned large enough to receive scalar comma-delimited values
' for 21 frequency points (20 ASCII characters per point)
Dim strReply As String * 420

Dim strStimulus, strCalValue
Dim strResult As String

' Open the VISA default resource manager
status = viOpenDefaultRM(defRM)
If (status < VI_SUCCESS) Then HandleVISAError

' Open a session (viPNA) to the PNA at "address 16" on the VISA
' interface configured as "GPIB1" on this PC. This could be a
' VISA LAN Client pointing to the SICL LAN Server on the PNA, or
' an actual GPIB interface on this PC connected to the PNA GPIB
' (in which case the power meter would need to be connected to a
' different GPIB interface on the PNA, such as the Agilent 82357A
' USB-to-GPIB).
status = viOpen(defRM, "GPIB0::16::INSTR", 0, 0, viPNA)
If (status < VI_SUCCESS) Then HandleVISAError

' Set the number of sweep points to 21 on Channel 1.
status = myGPIBWrite(viPNA, "SENS1:SWE:POIN 21")
If (status < VI_SUCCESS) Then HandleVISAError

```

```

' Specify the GPIB address of the power meter
' that will be used in performing the calibration.
status = myGPIBWrite(vipNA, "SYST:COMM:GPIB:PMET:ADDR 13")
If (status < VI_SUCCESS) Then HandleVISAError

' Turn use of the loss table OFF (this assumes there is
' virtually no loss in the RF path to the power sensor
' due to a splitter, coupler or adapter).
status = myGPIBWrite(vipNA, "SOUR:POW:CORR:COLL:TABL:LOSS OFF")
If (status < VI_SUCCESS) Then HandleVISAError

' Turn frequency checking OFF (so one power sensor is used for the entire cal
' acquisition sweep regardless of frequency span).
status = myGPIBWrite(vipNA, "SOUR:POW:CORR:COLL:FCH OFF")
If (status < VI_SUCCESS) Then HandleVISAError

' Specify a nominal power accuracy tolerance (NTolerance) in dB for the
calibration,
' and the maximum number (COUNT) of iterations to adjust power at each point,
' attempting to achieve within tolerance of the desired power. If at any
stimulus
' point the power fails to reach within the set tolerance of the desired power
' after the maximum number of iterations, the power at that point will be set to
the
' value determined by the last iteration (the Source Power Cal dialog box will
' indicate the FAIL, but we can still apply the cal if desired when it's
complete).
' Each iteration is based upon a SETTLED power reading (see comments preceding
the
' next two commands below).
status = myGPIBWrite(vipNA, "SOUR1:POW2:CORR:COLL:ITER:NTOL 0.1")
If (status < VI_SUCCESS) Then HandleVISAError
status = myGPIBWrite(vipNA, "SOUR1:POW2:CORR:COLL:ITER:COUN 3")
If (status < VI_SUCCESS) Then HandleVISAError

' The worst-case window of power uncertainty (for a calibration which meets
' tolerance) is the sum of the iteration tolerance and the power meter settling
' tolerance (which is described below).

```

```
' At each stimulus point, the PNA takes power meter readings and determine when
' they have settled by comparing the magnitude difference between consecutive
' readings versus a nominal dB tolerance limit (NTOLerance) on that magnitude
' difference. When consecutive readings are within tolerance of each other, or
' if they are not within tolerance but we've taken a maximum number of readings
' (COUNT), the PNA does a weighted average of the readings taken at that stimulus
' point and that is considered our settled power reading.
```

```
status = myGPIBWrite(viPNA, "SOUR1:POW2:CORR:COLL:AVER:NTOL 0.1")
```

```
If (status < VI_SUCCESS) Then HandleVISAError
```

```
status = myGPIBWrite(viPNA, "SOUR1:POW2:CORR:COLL:AVER:COUN 5")
```

```
If (status < VI_SUCCESS) Then HandleVISAError
```

```
' Specify if the cal power level is offset (positive value for a gain, negative
' value for a loss) from the PNA port power setting on the channel when no source
' power cal is active. This is to account for components between the PNA test
' port and cal reference plane. In this example, we will calibrate at the PNA
' test port, so there is no offset (it is zero).
```

```
status = myGPIBWrite(viPNA, "SOUR1:POW2:CORR:OFFS 0 DB")
```

```
If (status < VI_SUCCESS) Then HandleVISAError
```

```
' Show the source power cal dialog during the source power cal acquisition.
' (this is the default, so this command is only necessary if this setting
' may have been changed beforehand, perhaps by another program).
```

```
status = myGPIBWrite(viPNA, "SOUR1:POW2:CORR:COLL:DISP ON")
```

```
If (status < VI_SUCCESS) Then HandleVISAError
```

```
' Specify the method (type of device) that will be used to perform the cal.
' Choose from power meter (PMETer), power meter and receiver (PMReceiver)
' or just receiver (RECeiver).
' PMReceiver uses the power meter for the first iteration of each point and
' the PNA's reference receiver for subsequent iterations, so is much faster
' than using power meter only. But the power meter accounts for compression
' when calibrating at the output of an active device, whereas the reference
' receiver cannot unless it is coupled to the cal reference plane (on a PNA
```

```

' which allows direct access to the receivers).
' Perform the source power cal acquisition sweep using the sensor attached to
' Channel A of the power meter (asking for an OPC reply when it's done). This
' assumes that the power sensor is already connected to Port 2 of the PNA.

' We'll put up an hourglass cursor while waiting for the acquire to complete.
Screen.MousePointer = vbHourglass
status = myGPIBWrite(viPNA, "SOUR1:POW2:CORR:COLL:ACQ PMET,'ASEN';*OPC?")
If (status < VI_SUCCESS) Then HandleVISAError
' Other valid selections would be the following:
' This mode uses Power Meter and Reference Receiver
'status = myGPIBWrite(viPNA, "SOUR1:POW2:CORR:COLL:ACQ PMR,'BSEN';*OPC?")
' This mode uses PNA receiver only (no power meter)
'status = myGPIBWrite(viPNA, "SOUR1:POW2:CORR:COLL:ACQ REC,'b1';*OPC?")

' In the process of beginning a source power cal acquisition, the PNA searches
' for the power meter on VISA interfaces configured in the Agilent I/O Libraries
' on the PNA. One of those interfaces is the SICL/VISA LAN server, so if this
' program is using that interface, we need to ensure our program is not pending
' an operation on that interface when the PNA wants to search it. So this
' Wait subroutine suspends execution of our program (for 6000 milliseconds =
' 6 seconds), giving the PNA time to search that interface and discover that the
' power meter is not there (the 6 seconds is just to be safe, the search actually
' takes only a few seconds).
' Note: If instead of using the VISA LAN server interface, you are having this
' program communicate with the PNA via it's GPIB interface (which requires the
' power meter be connected to a different GPIB interface on the PNA, such as the
' Agilent 82357A USB-to-GPIB), then this Wait is not needed.
Wait 6000

' The PNA sends an OPC reply ("+1") when the cal acquisition is complete, so
' our Read operation will wait on the reply until it is received. We need to
' set the VISA timeout value long enough to give our Read sufficient time to
' complete before a timeout error occurs. For this example, let's try setting
' the limit to 60000 milliseconds (60 seconds).
status = viSetAttribute(viPNA, VI_ATTR_TMO_VALUE, 60000)

```

```

If (status < VI_SUCCESS) Then HandleVISAError
status = myGPIBRead(viPNA, strReply)
If (status < VI_SUCCESS) Then HandleVISAError

' Change mouse cursor from hourglass back to normal
Screen.MousePointer = vbDefault

' Conclude the calibration. This applies the cal data to PNA channel memory,
' and turns the correction ON for Port 2 on Channel 1,
' but does NOT save the calibration.
status = myGPIBWrite(viPNA, "SOUR1:POW2:CORR:COLL:SAVE")
If (status < VI_SUCCESS) Then HandleVISAError

' At this point, if you choose to save the instrument state as a ".CST" file,
' the calibration will be saved with the instrument state in that file.

' Prepare for doing data transfer in ASCII format.
status = myGPIBWrite(viPNA, "FORM:DATA ASCII")
If (status < VI_SUCCESS) Then HandleVISAError

' Read the stimulus values from Channel 1.
status = myGPIBWrite(viPNA, "SENS1:X?")
If (status < VI_SUCCESS) Then HandleVISAError
status = myGPIBRead(viPNA, strReply)
If (status < VI_SUCCESS) Then HandleVISAError

' Tokenize the reply string into an array containing the values
strStimulus = Split(strReply, ",")

' Read the source power correction data.
status = myGPIBWrite(viPNA, "SOUR1:POW2:CORR:DATA?")
If (status < VI_SUCCESS) Then HandleVISAError
status = myGPIBRead(viPNA, strReply)
If (status < VI_SUCCESS) Then HandleVISAError

' Tokenize the reply string into an array containing the values

```



```

strCalValue = Split(strReply, ",")

' Print the data using a message box (here, Chr returns the ASCII characters
' for Tab (9) and Linefeed (10)).
strResult = "Stimulus" & Chr(9) & Chr(9) & "Cal Value" & Chr(10)
For i = 0 To UBound(strStimulus)
strResult = strResult & Val(strStimulus(i)) & Chr(9) & Val(strCalValue(i)) &
Chr(10)
Next
MsgBox strResult
End Sub

Private Function myGPIBWrite(ByVal viHandle As Long, ByVal strOut As String) As
Long

' The "+ Chr$(10)" appends an ASCII linefeed character to the
' output, for terminating the write transaction.
myGPIBWrite = viVPrintf(viHandle, strOut + Chr$(10), 0)
End Function

Private Function myGPIBRead(ByVal viHandle As Long, strIn As String) As Long
myGPIBRead = viVScanf(viHandle, "%t", strIn)
End Function

Sub HandleVISAError()
Dim strVisaErr As String * 200
Call viStatusDesc(defRM, status, strVisaErr)
MsgBox "**** Error : " + strVisaErr, vbExclamation

' Close the resource manager session (which also closes
' the session to the PNA).

If defRM <> 0 Then Call viClose(defRM)
End
End Sub

Public Sub Wait(ByVal mS_delay As Long)

```

```

Dim t0 As Single
t0 = Timer
Do While Timer - t0 < mS_delay / 1000
Dim dummy As Integer
dummy = DoEvents() ' if we cross midnight, back up one day
If Timer < t0 Then t0 = t0 - 86400
Loop
End Sub

```

Perform a Receiver Power Cal

The SCPI commands in this example are sent over a COM interface using the [SCPIStringParser](#) object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file, such as Notepad, and save it on the PNA hard drive as *.vbs.

[Learn how to setup and run the macro.](#)

```

Dim pna
Dim scpi
Set pna = CreateObject("AgilentPNA835x.Application")
Set scpi = pna.ScpIStringParser
' For simplicity, this example starts from the preset instrument state
scpi.Execute "SYST:PRESet"
' Turn off continuous sweep
scpi.Execute "INITiate:CONTinuous OFF"
' Select the S11 measurement that was created by the instrument preset
scpi.Execute "CALCulate:PARAMeter:SElect 'CH1_S11_1'"
' Change the measurement parameter to measure the B receiver
scpi.Execute "CALCulate:PARAMeter:MODify B,1"
' Specify the Calibration Type, then Prompt
' to ensure the receiver is connected to port 1.
scpi.Execute "SENSe:CORRection:COLLect:METhod RPOWer"
MsgBox "Connect port 1 to port 2 so power is supplied to the B receiver, then press
enter"
' Acquire the power measurement; returning reply to *OPC? when finished.
response = scpi.Execute( "SENSe:CORRection:COLLect:ACQuire POWer;*OPC?" )
' Compute the error term, store to calset and turn on the calibration.
response = scpi.Execute( "SENSe:CORRection:COLLect:SAVE" )
MsgBox "Done with calibration."

```

Last modified:

9/22/06 Modified for receiver only feature

Uploading a Source Power Cal using SCPI

Programming the PNA using COM or using SICL/VISA over LAN (as in this example) leaves the PNA free to control GPIB devices as needed. This Visual Basic program demonstrates:

- Uploading a source power calibration of Port 2 for Channel 1.
- Reading the calibration data.

Learn more about [Power Calibrations](#)

[Other SCPI Example Programs](#)

To run this program, you need:

- Your PC and PNA both connected to a LAN (if using VISA LAN server / client).
- The SICL and VISA components of Agilent's I/O Libraries software installed on your PC (both are included when you install the software, unless you already have another vendor's VISA installed. Then specify Full SICL and VISA installation to overwrite the other vendor's VISA).
- The module visa32.bas added to your VB project.
- A form with two buttons: cmdRun and cmdQuit.
- A VISA interface configured on your remote PC to control the PNA. This could be GPIB interface or a [VISA LAN Client](#).

```
'Session to VISA Default Resource Manager
Private defRM As Long
'Session to PNA
Private viPNA As Long
'VISA function status return code
Private status As Long
Private Sub Form_Load()
defRM = 0
End Sub
Private Sub cmdRun_Click()

' String to receive data from the PNA.
' Dimensioned large enough to receive scalar comma-delimited values
' for 21 frequency points (20 ASCII characters per point)
Dim strReply As String * 420
Dim strPower As String, strCalPower As String
Dim strStimulus, strCalValue
Dim strResult As String

' Open the VISA default resource manager
```

```

status = viOpenDefaultRM(defRM)
If (status < VI_SUCCESS) Then HandleVISAError

' Open a session (vipNA) to the PNA at "address 16" on the VISA
' interface configured as "GPIB0" on this PC.
status = viOpen(defRM, "GPIB0::16::INSTR", 0, 0, vipNA)
If (status < VI_SUCCESS) Then HandleVISAError

' Set the number of sweep points to 2 on Channel 1.
status = myGPIBWrite(vipNA, "SENS1:SWE:POIN 2")
If (status < VI_SUCCESS) Then HandleVISAError

' Ensure there's currently no source power cal on for this channel and port.
status = myGPIBWrite(vipNA, "SOUR1:POW2:CORR OFF")
If (status < VI_SUCCESS) Then HandleVISAError

' Specify if the cal power level is offset (positive value for a gain, negative
' value for a loss) from the PNA port power setting on the channel when no source
' power cal is active. This is to account for components between the PNA test
' port and cal reference plane. In this example, let's set up our calibration
' at the output of an amplifier with 15 dB gain.
status = myGPIBWrite(vipNA, "SOUR1:POW2:CORR:OFFS 15 DB")
If (status < VI_SUCCESS) Then HandleVISAError

' Prepare for doing data transfer in ASCII format.
status = myGPIBWrite(vipNA, "FORM:DATA ASCII")
If (status < VI_SUCCESS) Then HandleVISAError

' Send our source power correction data to the PNA. For purpose of simplicity
' in this example, we'll set up for no correction (0) at our start stimulus and
' 0.5 dB at our stop stimulus (recall that our sweep currently has just 2 points).
status = myGPIBWrite(vipNA, "SOUR1:POW2:CORR:DATA 0,0.5")
If (status < VI_SUCCESS) Then HandleVISAError

' Set the number of sweep points to 21 on Channel 1.
status = myGPIBWrite(vipNA, "SENS1:SWE:POIN 21")
If (status < VI_SUCCESS) Then HandleVISAError

' Read the fixed power level for this port on Channel 1.
status = myGPIBWrite(vipNA, "SOUR1:POW2:LEV?")
If (status < VI_SUCCESS) Then HandleVISAError
status = myGPIBRead(vipNA, strReply)
If (status < VI_SUCCESS) Then HandleVISAError
strPower = strReply

' Turn the source power cal on.
status = myGPIBWrite(vipNA, "SOUR1:POW2:CORR ON")
If (status < VI_SUCCESS) Then HandleVISAError

' Again read the fixed power level for this port on Channel 1
' (with our calibration turned on, this should now include the 15 dB offset
' we indicated our power amplifier provides).

```

```

status = myGPIBWrite(viPNA, "SOUR1:POW2:LEV?")
If (status < VI_SUCCESS) Then HandleVISAError
status = myGPIBRead(viPNA, strReply)
If (status < VI_SUCCESS) Then HandleVISAError
strCalPower = strReply

' Read the stimulus values from Channel 1.
status = myGPIBWrite(viPNA, "SENS1:X?")
If (status < VI_SUCCESS) Then HandleVISAError
status = myGPIBRead(viPNA, strReply)
If (status < VI_SUCCESS) Then HandleVISAError

' Tokenize the reply string into an array containing the values
strStimulus = Split(strReply, ",")

' Read back the source power correction data, now interpolated for 21 points
status = myGPIBWrite(viPNA, "SOUR1:POW2:CORR:DATA?")
If (status < VI_SUCCESS) Then HandleVISAError
status = myGPIBRead(viPNA, strReply)
If (status < VI_SUCCESS) Then HandleVISAError

' Tokenize the reply string into an array containing the values
strCalValue = Split(strReply, ",")

' Print the data using a message box (here, Chr returns the ASCII characters
' for Tab (9) and Linefeed (10)).
strResult = "PNA port power = " & Val(strPower) & Chr(10)
strResult = strResult & "Power at reference plane = " & Val(strCalPower) & Chr(10)
strResult = strResult & "Stimulus" & Chr(9) & Chr(9) & "Cal Value" & Chr(10)
For i = 0 To UBound(strStimulus)
    strResult = strResult & Val(strStimulus(i)) & Chr(9) & Val(strCalValue(i)) &
Chr(10)
Next
MsgBox strResult
End Sub
Private Sub cmdQuit_Click()

' Close the resource manager session (which also closes
' the session to the PNA).
If defRM <> 0 Then Call viClose(defRM)

' End the program
End
End Sub
Private Function myGPIBWrite(ByVal viHandle As Long, ByVal strOut As String) As Long

' The "+ Chr$(10)" appends an ASCII linefeed character to the
' output, for terminating the write transaction.
myGPIBWrite = viPrintf(viHandle, strOut + Chr$(10), 0)
End Function
Private Function myGPIBRead(ByVal viHandle As Long, strIn As String) As Long

```

```

myGPIBRead = viVScanf(viHandle, "%t", strIn)

' Remove trailing linefeed character
If Right(strIn, 1) = Chr(10) Then strIn = Left(strIn, Len(strIn) - 1)
End Function
Sub HandleVISAError()
Dim strVisaErr As String * 200
Call viStatusDesc(defRM, status, strVisaErr)
MsgBox "*** Error : " + strVisaErr, vbExclamation

' Close the resource manager session (which also closes
' the session to the PNA).
If defRM <> 0 Then Call viClose(defRM)
End
End Sub

```

Perform a Sliding Load Calibration using GPIB

This Visual Basic program does a **only** the sliding load portion of a Calibration.
To run this program, you need:

- An established [GPIB interface connection](#)
- A measurement and calibration routine to call this sub-program
- STAN3 set up as a sliding load standard

[See Other SCPI Example Programs](#)

```
Sub slide()  
'Measure the sliding load for at least 5 and no more than 7 slides  
'Note that "SLSET" and "SLDONE" must be executed before the actual acquisition of a  
slide  
MsgBox "Connect Sliding Load; set to Position 1; then press OK"  
GPIB.Write "SENS:CORR:COLL SLSET"  
GPIB.Write "SENS:CORR:COLL STAN3;"  
  
MsgBox "Set Sliding Load to position 2; then press OK"  
GPIB.Write "SENS:CORR:COLL SLSET"  
GPIB.Write "SENS:CORR:COLL STAN3;"  
  
MsgBox "Set Sliding Load to position 3; then press OK"  
GPIB.Write "SENS:CORR:COLL SLDONE"  
GPIB.Write "SENS:CORR:COLL STAN3;"  
End Sub
```


Load Error Terms during a Cal Sequence

This example requires that you already have a Cal Set named "foo" that contains a 1-port cal on port 1 and a 1-port cal on port 2.

This example starts a Guided Calibration specifying an Unknown Thru. It loads the 1-port Cals from the existing "foo" Cal Set, then recalculates the number of steps required to complete the cal. After loading the 1-port cals, only the Unknown Thru standard is left to acquire.

```
SENS:CORR:COLL:GUID:CONN:PORT1 "APC 3.5 female"
SENS:CORR:COLL:GUID:CONN:PORT2 "APC 3.5 female"
SENS:CORR:COLL:GUID:CKIT:PORT1 "85033D/E"
SENS:CORR:COLL:GUID:CKIT:PORT2 "85033D/E"
SENS:CORR:COLL:GUID:METH UNKN
' auto-create user calsets for SCPI
SENS:CORR:PREF:CSET:SAVU 1
SENS:CORR:COLL:GUID:INIT
' should return the number 7
SENS:CORR:COLL:GUID:STEPS?
' to port 1, from port 1 in calset
SENS:CORR:COLL:GUID:ETER:LOAD "foo",1,1
' to port 2, from port 2 in calset
SENS:CORR:COLL:GUID:ETER:LOAD "foo",2,2
' should now return the number 1
SENS:CORR:COLL:GUID:STEPS?
' measure the unknown thru
SENS:CORR:COLL:GUID:ACQ STAN1
' save the cal to new user calset
SENS:CORR:COLL:GUID:SAVE
```

Create New Cal Kit using SCPI

When creating new cal kits programmatically, the order in which cal kit commands are sent can be important. For example to create a kit with opens, shorts, loads, and thrus. Be sure to use the following sequence for each newly defined standard.

1. Programmatically select the standard number
2. Programmatically select the standard type.
3. Program the cal standard's values.
4. Repeat steps 1, 2, 3 for additional new standards being defined.

```
10  !
20  !
30  ! This example program demonstrates how to create
40  ! new PNA calibration kits.
50  !
60  ! 1) Select a kit not previously defined
70  ! 2) Define open, short, load, and thru cal standards
80  !   Note: Each of the newly defined standards is assigned
90  !   a default connector name. These default connector names
100 !   will be replaced in subsequent steps.
110 ! 3) Use the delete connector command to remove default
120 !   connector names.
130 ! 4) Add connectors. Specify:
140 !   Start and Stop Freq
150 !   Z - Impedance
160 !   sex - MALE, FEMALE, NONE
170 !   media - COAX, WAVE
180 !   cutoff - Frequency for waveguide
190 ! 5) Assign the appropriate connector to each standard
200 ! 6) Modify the class assignments for the standards defined
210 ! 7) Verify the kit values
220 !
230 ! Additional Note: After setting each new cal kit value, it is
240 ! recommended that the program periodically perform queries to
250 ! verify the new values.
260 !
270 ! This will prevent program synchronization issues that can affect
280 ! final values stored within new cal kits.
290 !
300 !-----
310 !
320 ! Set up I/O path
330  ASSIGN @Na TO 716
340  DIM Calkname$[80],Conn$[80]
350  INTEGER Calkitnum
```

```

360 !
370 CLEAR SCREEN
380 !
390 !!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!!
400 ! Designate the kit selection to be used for performing cal's
410 OUTPUT @Na;":sens:corr:ckit:count?"
420 ENTER @Na;Calkitnum
430 Calkitnum=Calkitnum+1
440 OUTPUT @Na;":sens:corr:coll:ckit "&VAL$(Calkitnum)
450 !
460 ! Name this kit with your own name
470 OUTPUT @Na;":sens:corr:coll:ckit:name " "Special 2.4 mm Model 85056" " "
480 !
490 !
500 DISP "Defining kit std 1..."
510 ! Now set up standard #1
520 OUTPUT @Na;":sens:corr:coll:ckit:stan 1"
530 OUTPUT @Na;":sens:corr:coll:ckit:stan:type SHORT"
540 Get_std
550 OUTPUT @Na;":sens:corr:coll:ckit:stan:char coax"
560 OUTPUT @Na;":sens:corr:coll:ckit:stan:label " "My Short" " "
570 Get_label
580 !
590 DISP "Defining kit std 2..."
600 ! Now set up standard #2
610 OUTPUT @Na;":sens:corr:coll:ckit:stan 2"
620 OUTPUT @Na;":sens:corr:coll:ckit:stan:type OPEN"
630 Get_std
640 OUTPUT @Na;":sens:corr:coll:ckit:stan:char coax"
650 OUTPUT @Na;":sens:corr:coll:ckit:stan:label " "My Open" " "
660 Get_label
670 !
680 DISP "Defining kit std 3..."
690 ! Now set up standard #3
700 OUTPUT @Na;":sens:corr:coll:ckit:stan 3"
710 OUTPUT @Na;":sens:corr:coll:ckit:stan:type LOAD"
720 Get_std
730 OUTPUT @Na;":sens:corr:coll:ckit:stan:char coax"
740 OUTPUT @Na;":sens:corr:coll:ckit:stan:label " "My Fixed Load" " "
750 Get_label
760 !
770 DISP "Defining kit std 4..."
780 ! Now set up standard #4
790 OUTPUT @Na;":sens:corr:coll:ckit:stan 4"
800 OUTPUT @Na;":sens:corr:coll:ckit:stan:type THRU"
810 Get_std
820 OUTPUT @Na;":sens:corr:coll:ckit:stan:char coax"
830 OUTPUT @Na;":sens:corr:coll:ckit:stan:label " "My Thru" " "
840 Get_label

```

```

850  !
860  DISP "Defining kit std 5..."
870  ! Now set up standard #5
880  OUTPUT @Na;":sens:corr:coll:ckit:stan 5"
890  OUTPUT @Na;":sens:corr:coll:ckit:stan:type SLOAD"
900  Get_std
910  OUTPUT @Na;":sens:corr:coll:ckit:stan:char coax"
920  OUTPUT @Na;":sens:corr:coll:ckit:stan:label ""Sliding Load""
930  Get_label
940  !
950  DISP "Defining kit std 6..."
960  ! Now set up standard #6
970  !
980  OUTPUT @Na;":sens:corr:coll:ckit:stan 6"
990  OUTPUT @Na;":sens:corr:coll:ckit:stan:type SHORT"
1000 Get_std
1010 OUTPUT @Na;":sens:corr:coll:ckit:stan:char coax"
1020 OUTPUT @Na;":sens:corr:coll:ckit:stan:label ""Short""
1030 Get_label
1040 !
1050 DISP "Defining kit std 7..."
1060 ! Now set up standard #7
1070 OUTPUT @Na;":sens:corr:coll:ckit:stan 7"
1080 OUTPUT @Na;":sens:corr:coll:ckit:stan:type SHORT"
1090 Get_std
1100 OUTPUT @Na;":sens:corr:coll:ckit:stan:char coax"
1110 OUTPUT @Na;":sens:corr:coll:ckit:stan:label ""Short""
1120 Get_label
1130 !
1140 DISP "Defining kit std 8..."
1150 ! Now set up standard #8
1160 !
1170 OUTPUT @Na;":sens:corr:coll:ckit:stan 8"
1190 OUTPUT @Na;":sens:corr:coll:ckit:stan:type ARBI"
1200 Get_std
1210 OUTPUT @Na;":sens:corr:coll:ckit:stan:char coax"
1220 OUTPUT @Na;":sens:corr:coll:ckit:stan:TZR 15;"
1230 OUTPUT @Na;":sens:corr:coll:ckit:stan:TZI -9;"
1240 OUTPUT @Na;":sens:corr:coll:ckit:stan:label ""Z Load""
1250 Get_label
1260 !
1270 !
1280 !
1290 ! First remove any old connector names
1300 OUTPUT @Na;":sens:corr:coll:ckit:conn:del"
1310 ! Verify that no connectors are currently installed
1320 OUTPUT @Na;":sens:corr:coll:ckit:conn:cat?"
1330 ENTER @Na;Conn$
1340 PRINT "Verify empty list: ";Conn$

```

```

1350 !
1360 ! Define your new connectors
1370 OUTPUT @Na;":sens:corr:coll:ckit:conn:add "PSC
2.4" ",0HZ,999GHZ,50.0,MALE,COAX,0.0"
1380 OUTPUT @Na;":sens:corr:coll:ckit:conn:add "PSC
2.4" ",0HZ,999GHZ,50.0,FEMALE,COAX,0.0"
1390 !
1400 ! Verify that the new connectors are installed
1410 OUTPUT @Na;":sens:corr:coll:ckit:conn:cat?"
1420 ENTER @Na;Conn$
1430 PRINT "Verify new connectors: ";Conn$
1440 DISP " "
1450 !
1460 DISP "Defining conn std 1..."
1470 ! Now set up standard #1
1480 OUTPUT @Na;":sens:corr:coll:ckit:stan 1"
1490 Verify_std
1500 OUTPUT @Na;":sens:corr:coll:ckit:conn:snam "PSC 2.4" ",FEMALE,1"
1510 Print_connector
1520 !
1530 DISP "Defining conn std 2..."
1540 ! Now set up standard #2
1550 OUTPUT @Na;":sens:corr:coll:ckit:stan 2"
1560 Verify_std
1570 OUTPUT @Na;":sens:corr:coll:ckit:conn:snam "PSC 2.4" ",FEMALE,1"
1580 Print_connector
1590 !
1600 DISP "Defining conn std 3..."
1610 ! Now set up standard #3
1620 OUTPUT @Na;":sens:corr:coll:ckit:stan 3"
1630 Verify_std
1640 OUTPUT @Na;":sens:corr:coll:ckit:conn:snam "PSC 2.4" ",FEMALE,1"
1650 Print_connector
1660 !
1670 DISP "Defining conn std 4..."
1680 ! Now set up standard #4
1690 OUTPUT @Na;":sens:corr:coll:ckit:stan 4"
1700 Verify_std
1710 OUTPUT @Na;":sens:corr:coll:ckit:conn:snam "PSC 2.4" ",FEMALE,1"
1720 OUTPUT @Na;":sens:corr:coll:ckit:conn:snam "PSC 2.4" ",MALE,2"
1730 Print_connector
1740 !
1750 DISP "Defining conn std 5..."
1760 ! Now set up standard #5
1770 OUTPUT @Na;":sens:corr:coll:ckit:stan 5"
1780 OUTPUT @Na;":sens:corr:coll:ckit:stan:label "Sliding Load""
1790 Verify_std
1800 OUTPUT @Na;":sens:corr:coll:ckit:conn:snam "PSC 2.4" ",MALE,1"
1810 Print_connector

```

```

1820 !
1830 DISP "Defining conn std 6..."
1840 ! Now set up standard #6
1850 !
1860 OUTPUT @Na;":sens:corr:coll:ckit:stan 6"
1870 Verify_std
1880 OUTPUT @Na;":sens:corr:coll:ckit:conn:snam "PSC 2.4",MALE,1"
1890 Print_connector
1900 !
1910 DISP "Defining conn std 7..."
1920 ! Now set up standard #7
1930 OUTPUT @Na;":sens:corr:coll:ckit:stan 7"
1940 Verify_std
1950 OUTPUT @Na;":sens:corr:coll:ckit:conn:snam "PSC 2.4",MALE,1"
1960 Print_connector
1970 !
1980 DISP "Defining conn std 8..."
1990 ! Now set up standard #8
2000 OUTPUT @Na;":sens:corr:coll:ckit:stan 8"
2010 Verify_std
2020 OUTPUT @Na;":sens:corr:coll:ckit:conn:snam "PSC 2.4",MALE,1"
2030 Print_connector
2040 !
2050 DISP "Class assignments..."
2060 !
2070 ! Designate the "order" associated with measuring the standards
2080 !
2090 !     Set Port 1, 1st standard measured to be standard #2
2100 OUTPUT @Na;":sens:corr:coll:ckit:order1 2"
2110 !     Set Port 1, 2nd standard measured to be standard #1
2120 OUTPUT @Na;":sens:corr:coll:ckit:order2 1,6,7"
2130 !     Set Port 1, 3rd standard measured to be standard #3 and #5
2140 OUTPUT @Na;":sens:corr:coll:ckit:order3 3,5"
2150 !     Set Port 1, 4th standard measured to be standard #4
2160 OUTPUT @Na;":sens:corr:coll:ckit:order4 4"
2170 !
2180 !     Set Port 2, 1st standard measured to be standard #2
2190 OUTPUT @Na;":sens:corr:coll:ckit:order5 2"
2200 !     Set Port 2, 2nd standard measured to be standard #1
2210 OUTPUT @Na;":sens:corr:coll:ckit:order6 1,6,7"
2220 !     Set Port 2, 3rd standard measured to be standard #3 and #6
2230 OUTPUT @Na;":sens:corr:coll:ckit:order7 3,5"
2240 !     Set Port 2, 4th standard measured to be standard #4
2250 OUTPUT @Na;":sens:corr:coll:ckit:order8 4"
2260 !
2270 !     Set Port 1, 1st standard
2280 OUTPUT @Na;":sens:corr:coll:ckit:olabel1 "MyOpen1""
2290 !     Set Port 1, 2nd standard
2300 OUTPUT @Na;":sens:corr:coll:ckit:olabel2 "MyShorts1""

```

```

2310 !      Set Port 1, 3rd standard
2320 OUTPUT @Na;":sens:corr:coll:ckit:olabel3 "MyLoads1""
2330 !      Set Port 1, 4th standard measured to be standard #4
2340 OUTPUT @Na;":sens:corr:coll:ckit:olabel4 "MyThru1""
2350 !
2360 !      Set Port 2, 1st standard
2370 OUTPUT @Na;":sens:corr:coll:ckit:olabel5 "MyOpen2""
2380 !      Set Port 2, 2nd standard
2390 OUTPUT @Na;":sens:corr:coll:ckit:olabel6 "MyShorts2""
2400 !      Set Port 2, 3rd standard
2410 OUTPUT @Na;":sens:corr:coll:ckit:olabel7 "MyLoads2""
2420 !      Set Port 2, 4th standard
2430 OUTPUT @Na;":sens:corr:coll:ckit:olabel8 "MyThrus2""
2440 !
2450 BEEP
2460 DISP "Done!"
2470 END
2480 SUB Get_label
2490     OUTPUT 716;":sens:corr:coll:ckit:stan:label?"
2500     ENTER 716;Label$
2510     PRINT Label$
2520 SUBEND
2530 !
2540 SUB Get_std
2550     OUTPUT 716;":sens:corr:coll:ckit:stan:type?"
2560     ENTER 716;Type$
2570     PRINT Type$
2580 SUBEND
2590 !
2600 SUB Print_connector
2610     DIM Nam$(40)
2620     OUTPUT 716;":sens:corr:coll:ckit:conn:sname?"
2630     ENTER 716;Nam$
2640     PRINT Nam$
2650 SUBEND
2660 !
2670 SUB Verify_std
2680     OUTPUT 716;":sens:corr:coll:ckit:stan:label?"
2690     ENTER 716;Label$
2700 SUBEND
2710 !

```

Modify a Calibration Kit using SCPI

This Visual Basic program:

- Modifies Calibration kit number 3
- Completely defines standard #4 (thru)

To run this program, you need:

- An established [GPIB interface connection](#)

[See Other SCPI Example Programs](#)

```
'Modifying cal kit number 3
Calkitnum = 3

'Designate the kit selection to be used for performing cal's
GPIB.Write "SENSe:CORRection:COLLect:CKIT:SElect " & Val(Calkitnum)

'Reset to factory default values.
GPIB.Write "SENSe:CORRection:COLLect:CKIT:RESet " & Val(Calkitnum)

'Name this kit with your own name
GPIB.Write "SENSe:CORRection:COLLect:CKIT:NAME 'My Cal Kit'"

'Assign standard numbers to calibration classes
'Set Port 1, class 1 (S11A) to be standard #8
GPIB.Write "SENSe:CORRection:COLLect:CKIT:ORDer1 8"
'Set Port 1, class 2 (S11B) to be standard #7
GPIB.Write "SENSe:CORRection:COLLect:CKIT:ORDer2 7"
'Set Port 1, class 3 (S11C) to be standard #3
GPIB.Write "SENSe:CORRection:COLLect:CKIT:ORDer3 3"
'Set Port 1, class 4 (S21T) to be standard #4
GPIB.Write "SENSe:CORRection:COLLect:CKIT:ORDer4 4"
'Set Port 2, class 1 (S22A) to be standard #8
GPIB.Write "SENSe:CORRection:COLLect:CKIT:ORDer5 8"
'Set Port 2, class 2 (S22B) to be standard #7
GPIB.Write "SENSe:CORRection:COLLect:CKIT:ORDer6 7"
'Set Port 2, class 3 (S22C) to be standard #3
GPIB.Write "SENSe:CORRection:COLLect:CKIT:ORDer7 3"
'Set Port 2, class 4 (S12T) to be standard #4
GPIB.Write "SENSe:CORRection:COLLect:CKIT:ORDer8 4"

'Set up Standard #4 completely
'Select Standard #4; the rest of the commands act on it
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard 4"
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:FMIN 300KHz"
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:FMAX 9GHz"
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:IMPedance 50"
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:DELAy 1.234 ns"
```



```
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:LOSS 23e6"  
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:C0 0"  
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:C1 1"  
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:C2 2"  
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:C3 3"  
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:L0 10"  
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:L1 11"  
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:L2 12"  
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:L3 13"  
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:LABel 'My Special Thru'"  
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:TYPE THRU"  
GPIB.Write "SENSe:CORRection:COLLect:CKIT:STANdard:CHARacteristic Coax"
```

Create and Calibrate a VMC Measurement

This VB Script example creates and calibrates a Vector mixer measurement. To run this example **without modification** you need the following:

- A Mixer setup file saved on the PNA: C:\Program Files\Agilent\Network Analyzer\Documents\Mixer\MyMixer.mxr.
- If the mixer file uses an external LO source, it must also be attached and configured.
- An ECal module that covers the frequency range of the measurement.

The SCPI commands in this example are sent over a COM interface using the SCPIStringParser object. You do NOT need a GPIB connection to run this example. However, some modification is necessary to make the program run on a traditional GPIB Interface.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as VMC.vbs. Learn how to setup and run the macro.

```
Dim app
Dim scpi
' Create / Get the PNA application.
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpIStringParser
'---Create a Vector Mixer Measurement
'First, delete all measurements on the channel
scpi.Execute "CALC:PAR:DEL:ALL"
'Create a forward scalar mixer measurement and configure
'it in channel 1.
'The first parameter is a unique identifying string
'(specified by the user) to allow subsequent
'commands to be directed at this specific measurement.
SCPI.Execute "CALC:CUST:DEF 'My VC21', 'Vector Mixer/Converter', 'VC21'"
'Setup the new measurement as the 2nd trace in the active window
SCPI.Execute "DISP:WIND:TRAC2:FEED 'My VC21'"
'Make the new trace the active measurement
SCPI.Execute "CALC:PAR:SEL 'My VC21'"
'The parameters of the mixer measurement can now be configured.
'This can be done by either using the SENS:MIX commands
'for each of the parameters or by loading a mixer setup file.
'This example loads a mixer setup file. The path name
'for the mixer file may be loaded from other mapped drives.
SCPI.Execute "SENS:MIXer:Load 'C:\Program Files\Agilent\Network
Analyzer\Documents\Mixer\MyMixer.mxr'"

'-----Perform A Vector Mixer Calibration-----
'Initialize an VMC guided calibration for session number 6
SCPI.Execute "SENS:CORR:COLL:SESS6:INIT ""VMC""
'This sets the VMC operation to full system cal as opposed to
'performing a mixer characterization only.
```

```

SCPI.Execute "SENS:CORR:COLL:SESS6:VMC:OPER ""CAL""
'This example uses ECal for the 2-port cal portion of the procedure
'To use a mechanical kit you will have to use the following command:
'SCPI.Execute "SENS:CORR:COLL:SESS6:SMC:TWOPort:OPTion""MECH""
SCPI.Execute "SENS:CORR:COLL:SESS6:VMC:TWOPort:OPTion ""ECAL""
'If you select the mechanical method then you also have to
'specify the connector types and the cal kits for each of the ports.
'The comments below show an example of how that is done:
'SCPI.Execute "SENS:CORR:COLL:SESS6:CONN:PORT1:SEL ""APC 3.5 male""
'SCPI.Execute "SENS:CORR:COLL:SESS6:CONN:PORT2:SEL ""APC 3.5 female""
'SCPI.Execute "SENS:CORR:COLL:SESS6:CKIT:PORT1:SEL ""85052D""
'SCPI.Execute "SENS:CORR:COLL:SESS6:CKIT:PORT2:SEL ""85052D""
'Choose the between ECal or Mechanical calibration for the
'Mixer Characterization portion of the VMC cal.
SCPI.Execute "SENS:CORR:COLL:SESS6:VMC:MIX:CHAR:CAL:OPT ""ECAL""
'This command sets the port mapping for the ECal to be used
'during the Mixer Characterization portion of the VMC cal.
'It is a required command if in the previous command the option
'was set to 'ECAL'. The only valid port maps are either 'A1'
'or 'B1'.
SCPI.Execute "SENS:CORR:COLL:SESS6:VMC:MIX:ECAL:PORT 1, ""A1""
'Specify the ECal module and the ECal characterization for the
'two port calibration portion of this session. FCA calibrations
'currently only support ECal module number 1. In this example
'the factory characterization is used by specifying 0 for the
'characterization number.
SCPI.Execute "SENS:CORR:COLL:SESS6:VMC:TWOPE:ECAL:CHAR 1,0"
'Specify the ECal module and the ECal characterization for the
'Mixer Characterization portion of this session. FCA calibrations
'currently only support ECal module number 1. In this example
'the factory characterization is used by specifying 0 for the
'characterization number.
SCPI.Execute "SENS:CORR:COLL:SESS6:VMC:MIX:ECAL:CHAR 1,0"
'Specify the thru measurement method. This applies to both ECal
'and mechanical calibrations. For ECal 'DEFAULT' will use the ECal
'thru. Other choices may be used depending on the genders and types
'of the connectors on the test interface.
SCPI.Execute "SENS:CORR:COLL:SESS6:VMC:TWOPE:METH ""DEFAULT""
'Omit the isolation part of the 2-port cal
SCPI.Execute "SENS:CORR:COLL:SESS6:VMC:TWOPE:OMIT 1"
'Turn on auto orientation for the ECal
SCPI.Execute "SENS:CORR:COLL:SESS6:VMC:TWOPE:ECAL:ORI:STATE 1"

'Tell the wizard to generate and report the number of steps in this
'cal session
Dim steps
Dim desc
'Determine the number of steps required to complete the calibration.
'First send the write command, then the query.
SCPI.Execute "SENS:CORR:COLL:SESS6:STEP"
steps = SCPI.Execute ("SENS:CORR:COLL:SESS6:STEP?")
For i = 1 To steps

```

```
'Display the prompt for each step
desc = SCPI.Execute ("SENS:CORR:COLL:SESS6:DESC? " & CStr(i))
MsgBox (desc)
'Perform the measurement for each step
SCPI.Execute "SENS:CORR:COLL:SESS6:ACQ " & CStr(i)
Next
Dim calset
'Finish the cal and save the calset
calset = SCPI.Execute ("SENS:CORR:COLL:SESS6:SAVE?")
Msgbox ("VMC Cal Complete!")
```

Create and Cal an SMC Measurement

This Visual Basic example creates and calibrates a scalar mixer measurement.

To run this example **without modification** you need the following:

- A Mixer setup file saved on the PNA: C:\Program Files\Agilent\Network Analyzer\Documents\Mixer\MyMixer.mxr.
- If the mixer file uses an external LO source, it must also be attached and configured.
- An ECAL module that covers the frequency range of the measurement.
- A power meter must be attached to the PNA. If this example is run in the PNA, the power meter does not need to be attached using a GPIB/USB interface.

The SCPI commands in this example are sent over a COM interface using the SCPIStringParser object. You do NOT need a GPIB connection to run this example. However, some modification is necessary to make the program run on a traditional GPIB Interface. For example, during the power meter portion of this calibration, scpi.Execute will not process a command until the power meter routine has completed. Traditional GPIB would require a [serial polling technique](#) to ensure the routine has completed before proceeding.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as SMC.vbs. [Learn how to setup and run the macro.](#)

```
Dim app
Dim scpi
' Create / Get the PNA application.
Set app = CreateObject("AgilentPNA835x.Application")
Set scpi = app.ScpiStringParser
'---Create a Scalar Mixer Forward Measurement
'First, delete all measurements on the channel
scpi.Execute "CALC:PAR:DEL:ALL"
'Create a forward scalar mixer measurement and configure it in
'channel 1. The first parameter is a unique
'identifying string (specified by the user) to allow subsequent
'commands to be directed at this specific measurement.
scpi.Execute "CALC:CUST:DEF 'My SC21', 'Scalar Mixer/Converter', 'SC21'"

'Setup the new measurement as the 2nd trace in the active window
scpi.Execute "DISP:WIND:TRAC2:FEED 'My SC21'"
'Make the new trace the active measurement
scpi.Execute "CALC:PAR:SEL 'My SC21'"
'The parameters of the mixer measurement can now be configured.
'This can be done by either using the individual SENS:MIX commands
'for each of the parameters or by loading a mixer setup file. This
'example loads a mixer setup file. The path name
'for the mixer file may be loaded from other mapped drives
scpi.Execute "SENS:MIXer:Load "C:\Program Files\Agilent\Network
Analyzer\Documents\Mixer\MyMixer.mxr""
'-----Perform A Scalar Mixer Calibration-----
'Initialize an SMC guided calibration for session number 6
```

```

scpi.Execute "SENS:CORR:COLL:SESS6:INIT ""SMC""
'Select to use an ECal for the 2-port cal portion of the procedure
'To use a mechanical kit you will have to use the following command:
'scpi.Execute "SENS:CORR:COLL:SESS6:SMC:TWOPort:OPTion ""MECH""
scpi.Execute "SENS:CORR:COLL:SESS6:SMC:TWOPort:OPTion ""ECAL""
'If you select the mechanical method then you also have to
'specify the connector types and the cal kits for each of the ports.
'The comments below show an example of how that is done:
'scpi.Execute "SENS:CORR:COLL:SESS6:CONN:PORT1:SEL ""APC 3.5 male""
'scpi.Execute "SENS:CORR:COLL:SESS6:CONN:PORT2:SEL ""APC 3.5 female""
'scpi.Execute "SENS:CORR:COLL:SESS6:CKIT:PORT1:SEL ""85052D""
'scpi.Execute "SENS:CORR:COLL:SESS6:CKIT:PORT2:SEL ""85052D""
'Specify the ECal module and the ECal characterization for this
'session. FCA calibrations currently only support ECal module
'number 1. In this example the factory characterization is used
'by specifying 0 for the characterization number.
scpi.Execute "SENS:CORR:COLL:SESS6:SMC:ECAL:CHAR 1,0"
'Specify the thru measurement method. This applies to both ECal
'and mechanical calibrations. For ECal 'DEFAULT' will use the ECal
'thru. Other choices may be used depending on the genders and types
'of the connectors on the test interface.
scpi.Execute "SENS:CORR:COLL:SESS6:SMC:TWOP:METH ""DEFAULT""
'Omit the isolation part of the 2-port cal
scpi.Execute "SENS:CORR:COLL:SESS6:SMC:TWOP:OMIT 1"
'Turn on auto orientation for the ECal
scpi.Execute "SENS:CORR:COLL:SESS6:SMC:TWOP:ECAL:ORI:STATE 1"
'Tell the wizard to generate and report the number of steps in this
'cal session
Dim steps
Dim desc
'Determine the number of steps required to complete the calibration.
'First send the write command, then the query.
scpi.Execute "SENS:CORR:COLL:SESS6:STEP"
steps = scpi.Execute ("SENS:CORR:COLL:SESS6:STEP?")
For i = 1 To steps
'Display the prompt for each step
desc = scpi.Execute ("SENS:CORR:COLL:SESS6:DESC? " & CStr(i))
MsgBox (desc)
'Perform the measurement for each step
scpi.Execute "SENS:CORR:COLL:SESS6:ACQ " & CStr(i)
Next
Dim calset
'Finish the cal and save the calset
calset = scpi.Execute ("SENS:CORR:COLL:SESS6:SAVE?")
Msgbox ("SMC Cal Complete!")

```

Create an SMC Fixed Output Measurement with SCPI

This VB Script example creates a calibrated SMC fixed output measurement using a controlled LO. Then a single sweep is taken and data is retrieved.

This example requires that an external LO be previously setup and named '8360'.

Fixed output measurements require that an external LO source be swept and synchronized with the PNA source. FCA performs this synchronization using the external source configuration settings.

The fastest, and recommended, method of controlling the LO source is [Hardware List \(BNC\) triggering mode](#). However, in this mode, FCA channels will not respond to manual triggers. Therefore, the example uses the following mechanism to trigger a sweep:

```
Write "SENS:SWE:MODE HOLD"      'place channel 1 in HOLD mode
Write "INIT:CONT ON"            'place PNA in internal trigger mode
Write "SENS:SWE:GRO:COUNT 1"   'specify that the group count is 1 sweep
Write "SENS:SWE:MODE GROUPS"    'execute group count (1 sweep)
Write "*OPC?"                   'wait until the sweep is complete
Read
```

The SCPI commands in this example are sent over a COM interface using the [SCPIStringParser](#) object. You can run a VBScript (*.vbs) program from the PNA [using Macros](#). To run this program, copy the following code into a text editor and save it as a *.vbs file.

```
option explicit

' Setup infrastructure to use the SCPI over COM
dim app
set app = createobject("Agilentpna835x.application")
dim p
set p = app.scpistringparser
dim returnStr
sub Write (command)
if len(returnStr) <> 0 then
err.Raise 55,"Write","Query Unterminated"
end if
returnStr = p.parse(command)
end sub
sub WriteIgnoreError(command)
returnStr = p.Execute(command)
p.Parse("SYST:ERR?") ' clear error queue
end sub
function Read
if len(returnStr) = 0 then
err.Raise 55,"Read","Bad read"
```

```

end if
Read = returnStr
returnStr = ""
end function
Write "SYST:PRES"
' When programming in remote mode, hold mode is recommended
Write "SENS:SWE:MODE HOLD"
' Delete the standard measurement
Write "CALC:PAR:DEL:ALL"
' Create an SC21 measurement
Write "CALC:CUST:DEF 'MySMC', 'Scalar Mixer/Converter', 'SC21'"
Write "DISP:WIND:TRACE:FEED 'MySMC'"
Write "CALC:PAR:SEL 'MySMC'"
' Set number of points to 11
Write "SENS:SWE:POIN 11 "
' Setup the mixer parameters for a swept LO, fixed output measurement
Write "SENS:MIX:INP:FREQ:START 200e6"
Write "SENS:MIX:INP:FREQ:STOP 700e6"
Write "SENS:MIX:LO:FREQ:MODE Swept"
Write "SENS:MIX:OUTPUT:FREQ:FIX 3.4e9"
Write "SENS:MIX:OUTP:FREQ:SID HIGH"
Write "SENS:MIX:INP:POW -17"
Write "SENS:MIX:LO:POW 10"
' Specify the LO name, for controlled LO.
' This name is setup in the External Source Config Dialog
Write "SENS:MIX:LO:NAME '8360'"
' The CALC method calculates the LO frequency from the other parameters,
' It also applies the mixer parameters to the channel.
Write "SENS:MIX:CALC LO_1"
' Create an S11 in the same channel
Write "CALC:CUST:DEF 'MyS11', 'Scalar Mixer/Converter', 'S11'"
Write "DISP:WIND:TRACE2:FEED 'MyS11'"
Write "CALC:PAR:SEL 'MyS11'"
' Create an IPwr in the same channel
Write "CALC:CUST:DEF 'MyIPwr', 'Scalar Mixer/Converter', 'IPwr'"
Write "DISP:WIND:TRACE3:FEED 'MyIPwr'"

```



```

Write "CALC:PAR:SEL 'MyIPwr'"
' Create an OPwr in the same channel
Write "CALC:CUST:DEF 'MyOPwr', 'Scalar Mixer/Converter', 'OPwr'"
Write "CALC:PAR:SEL 'MyOPwr'"
Write "DISP:WIND:TRACE4:FEED 'MyOPwr'"
' Perform a single sweep, synchronously. When *OPC returns, the sweep is done
Write "SENS:SWE:GRO:COUN 1"
Write "SENS:SWE:MODE GROUPS"
Write "*OPC?"
Read
' Retrieve the SC21 data
Write "CALC:PAR:SEL 'MySMC'"
Write "CALC:DATA? SDATA"
dim data
data = Read()
wscript.echo(data)
'Retrieve the S11 data
Write "CALC:PAR:SEL 'MyS11'"
Write "CALC:DATA? SDATA"
data = Read()
wscript.echo(data)

```

Getting and Putting Data using SCPI

This Visual Basic Program does the following:

- Reads data from the analyzer
- Puts the data back into memory
- To see the data on the analyzer after running the program, from the front panel click:
Trace - Math/Memory - Memory Trace

To run this program, you need:

- An established [GPIB interface connection](#)

[See Other SCPI Example Programs](#)

Note: To change the read and write location of data, removing the comment from the beginning of ONE of the lines, and replace the comment in the beginning of the SDATA and SMEM lines.

```
Private Sub ReadWrite_Click()  
Dim i As Integer  
Dim t As Integer  
Dim q As Integer  
Dim dat As String  
Dim cmd As String  
Dim datum() As Double  
  
GPIB.Configure  
GPIB.Write "SYSTem:PRESet;*wai"  
  
'Select the measurement  
GPIB.Write "CALCulate:PARAmeter:SElect 'CH1_S11_1'"  
  
'Read the number of data points  
GPIB.Write "SENSel:SWEep:POIN?"  
numpts = GPIB.Read  
  
'Turn continuous sweep off  
GPIB.Write "INITiate:CONTinuous OFF"  
  
'Take a sweep  
GPIB.Write "INITiate:IMMediate;*wai"  
  
'Ask for the Data  
  
'PICK ONE OF THESE LOCATIONS TO READ  
'GPIB.Write "CALCulate:DATA? FDATA" 'Formatted Meas  
'GPIB.Write "CALCulate:DATA? FMEM" 'Formatted Memory  
GPIB.Write "CALCulate:DATA? SDATA" 'Corrected, Complex Meas  
'GPIB.Write "CALCulate:DATA? SMEM" 'Corrected, Complex Memory  
'GPIB.Write "CALCulate:DATA? SCORR1" 'Error-Term Directivity  
  
'Number of values returned per data point
```

```

'q = 1 ' Pick this if reading FDATA or FMEM
q = 2 ' Otherwise pick this

'Parse the data
ReDim datum(q, numpts)
For i = 0 To numpts - 1
    For t = 0 To q - 1
        'Read the Data
        dat = GPIB.Read(20)
        'Parse it into an array
        datum(t, i) = Val(dat)
    Next t
Next i

'PUT THE DATA BACK IN
GPIB.Write "format ascii"

'PICK ONE OF THESE LOCATIONS TO PUT THE DATA
'cmd = "CALCulate:DATA FDATA," 'Formatted Meas
'cmd = "CALCulate:DATA FMEM," 'Formatted Memory
'cmd = "CALCulate:DATA SDATA," 'Corrected, Complex Meas
cmd = "CALCulate:DATA SMEM," 'Corrected, Complex Memory
'cmd = "CALCulate:DATA SCORR1," 'Error-Term Directivity

For i = 0 To numpts - 1
    For t = 0 To q - 1
        If i = numpts - 1 And t = q - 1 Then
            cmd = cmd & Format(datum(t, i))
        Else
            cmd = cmd & Format(datum(t, i)) & ","
        End If
    Next t
Next i

GPIB.Write cmd
End Sub

```

Getting and Putting Data

This Rocky Mountain Basic example does the following:

1. Takes a sweep, and reads the formatted data trace into an array. The trace is read as a definite length block.
2. Instructs you to remove DUT
3. Downloads the trace back to the analyzer as an definite length block.

[See Other SCPI Example Programs](#)

```
100 DIM A$(10),Data1(1:51)
110 INTEGER Digits,Bytes
120 !
130 COM /Sys_state/ @Hp87xx,Scode
140 ! Identify I/O Port
150 CALL Iden_port
160 !
170 !
180 OUTPUT @Hp87xx;"SYST:PRES"
190 !
200 OUTPUT @Hp87xx;"CALC:PAR:SEL 'CH1_S11_1'"
210 !
220 ! Set up the analyzer to measure 51 data points.
230 OUTPUT @Hp87xx;"SENS1:SWE:POIN 51;*OPC?"
240 ENTER @Hp87xx;Opc
250 !
260 ! Take a single sweep, leaving the analyzer
270 ! in trigger hold mode.
280 OUTPUT @Hp87xx;"ABOR;:INIT1:CONT OFF;:INIT1;*WAI"
290 !
300 ! Select binary block transfer
310 OUTPUT @Hp87xx;"FORM:DATA REAL,64"
320 !
330 ! Request the channel 1 formatted data array
340 ! from the analyzer.
350 OUTPUT @Hp87xx;"CALC:DATA? FDATA"
360 !
370 ! Turn on ASCII formatting on the I/O path.
380 ! It is needed for reading the header
390 ! information.
400 ASSIGN @Hp87xx;FORMAT ON
410 !
420 ! Get the data header. "A$" will contain the
430 ! "#" character indicating a block data transfer.
440 ! "Digits" will contain the number of characters
```

```

450 ! for the number of bytes value which follows.
460 ENTER @Hp87xx USING "%,A,D";A$,Digits
470 !
480 ! Get the rest of the header. The number of
490 ! bytes to capture in the data array will be
500 ! placed in "Bytes". Note the use of "Digits"
510 ! in the IMAGE string.
515 !
520 ENTER @Hp87xx USING "%,&VAL$(Digits)&"D";Bytes
525 PRINT "HEADER",A$,Digits,Bytes
530 !
540 ! Turn off ASCII formatting on the I/O path;
550 ! it is not needed for transferring binary
560 ! formatted data.
570 ASSIGN @Hp87xx;FORMAT OFF
580 !
590 ! Get the data.
600 ENTER @Hp87xx;Data1(*)
610 !
620 ! Turn on ASCII formatting again.
630 ASSIGN @Hp87xx;FORMAT ON
640 !
650 ! Get the "end of data" character.
660 ENTER @Hp87xx;A$
670 !
680 ! Display the first three numbers in the array.
690 DISP "Trace: ";Data1(1);Data1(2);Data1(3);"..."
700 !
710 ! Use this time to visually compare the
720 ! numbers to the visible data trace.
730 WAIT 5
740 !
750 ! Prompt the operator to disconnect the test
760 ! device and how to continue the program.
770 DISP "Disconnect the test device -- Press Continue"
780 PAUSE
790 !
800 ! Update the display line.
810 DISP "Taking a new sweep...";
820 !
830 ! Take a sweep so the display shows new data.
840 OUTPUT @Hp87xx;":INIT1;*WAI"
850 DISP " Done."
860 WAIT 5
870 !
880 ! Send the header for an indefinite block length
890 ! data transfer.
900 DISP "Downloading saved trace...";
915 ! The first byte '3' indicates the next three digits equal number of transfer
bytes
916 ! The number of transfer bytes equals 8x the number of tracepoints.
920 OUTPUT @Hp87xx;"CALC:DATA FDATA, #3408";

```

```

930  !
940  ! Turn off ASCII formatting.
950  ASSIGN @Hp87xx;FORMAT OFF
960  !
970  ! Send the data array back to the analyzer.
980  OUTPUT @Hp87xx;Data1(*),END
990  !
1000 ! Turn on ASCII formatting again.
1010 ASSIGN @Hp87xx;FORMAT ON
1020 DISP " Done!"
1030 END
1040 !
1050 !*****
1060 ! Iden_port:   Identify io port to use
1070 ! Description: This routines sets up the I/O port address for
1080 !               the SCPI interface.  For "HP 87xx" instruments,
1090 !               the address assigned to @Hp87xx = 800 otherwise,
1100 !               716.
1110 !*****
1120 SUB Iden_port
1130     COM /Sys_state/ @Hp87xx,Scode
1140 !
1150     IF POS(SYSTEM$("SYSTEM ID"),"HP 87")<>0 THEN
1160         ASSIGN @Hp87xx TO 800
1170         Scode=8
1180     ELSE
1190         ASSIGN @Hp87xx TO 716
1200         Scode=7
1210     END IF
1220 !
1230 SUBEND !Iden_port
1240 !

```

External Test Set Control using SCPI

This program demonstrates the use of several External Test Set Control commands.

The SCPI commands in this example are sent over a COM interface using the SCPIStringParser object. You do NOT need a GPIB connection to run this example.

This VBScript (*.vbs) program can be run as a macro in the PNA. To do this, copy the following code into a text editor file such as Notepad and save it on the PNA hard drive as ExtTS.vbs. [Learn how to setup and run the macro.](#)

```
' Demonstrate some SCPI commands for external testsets.
Dim pna
Set pna = CreateObject("AgilentPNA835x.Application")
Set scpi = pna.ScpIStringParser
' The K64 testset is only usable on a 4-port PNA
If (pna.NumberOfPorts <> 4) Then
MsgBox("This program only runs on 4-port analyzers.")
Else
'If Help is active, show the measurement window and help
scpi.Execute("DISP:ARR TILE")
'Return the list of supported test sets
list=scpi.Execute("SENS:MULT:CATalog?")
MsgBox(list)
'***** K64 *****
'The K64 is connected using the Testset I/O
'connector. There is no handshake information.
'Therefore, a testset need not be connected.
' Load a configuration file.
scpi.Execute("SENS:MULT1:TYPE 'Z5623AK64'")
scpi.Execute("SENS:MULT1:ADDR 0")
'return stuff about the test set
' Returns number of input ports
Inports=scpi.Execute("SENS:MULT1:INCount?")
MsgBox("Input Ports: " & CStr(Inports))
' Returns number of output ports
ports=scpi.Execute("SENS:MULT1:COUNT?")
MsgBox("Output Ports: " & CStr(ports))
' Returns valid output ports for each input port
```

```

For portNum = 1 To Inports
ports=scpi.Execute("SENS:MULT1:PORT" & CStr(portNum) & ":CAT?")
MsgBox("Port " & CStr(portNum) & " catalog: " & (ports))
Next
'Set different port mapping
scpi.Execute("SENS:MULT1:ALLPorts '1 ext R,2 ext R,3 ext R,4 ext R'")
'Return port mapping
portMap=scpi.Execute("SENS:MULT1:ALLPorts?")
MsgBox("Ports will be mapped to " & CStr(portMap))
' Enable external testset control and execute port mapping. This automatically
enables status bar display as well.
scpi.Execute("SENS:MULT1:STATE 1")
MsgBox("Z5623A K64 Enabled")
End If

```


Transfer Data using GPIB

The following RMB examples transfer data to and from a remote PC using the [MMEM:TRANsfer](#) command.

Transferring data FROM the PNA -- TO a remote PC:

```
30      !
40      !           Set up I/O paths
50      !
60      ! Network analyzer address
70      ASSIGN @Na TO 716
75      !
77      ! File to be stored on local computer
80      ! First time -- need to create the file.
90      ! After file name, number records set to 0 (ignored by WinOS)
95      ! Use "PURGE" command to delete if desired.
100     CREATE "mytestdata.s2p",0
110     ASSIGN @File TO "mytestdata.s2p"
120     !
122     !           TRANSFER the data (download)
123     !
125     ! Analyzer has file 'testdata.s2p' in default directory
130     OUTPUT @Na;" :MMEM:TRAN? " "testdata.s2p""
135     !
137     ! Now read the bytes coming back from the analyzer in four steps
138     ! (1) Read and dump the first character - '#'
140     ENTER @Na USING "#,A";A$
141     !
142     ! (2) Read the next character which is the number of digits in the file size
150     ENTER @Na USING "#,A";Digit$
160     !
161     ! (3) Use the value of the number of digits to read back the file byte size
170     ! Create query string using this number of digits
180     Img$="#,&Digit$&"A"
190     !
200     ! Byte$ holds the number of bytes in string format
210     ENTER @Na USING Img$;Byte$
220     !
225     ! (4) Read the file contents into a buffer and store the buffer contents to a
local file
230     ! Allocate a buffer for holding the data
240     ALLOCATE Dat$[VAL(Byte$)]
250     !
260     ! Set up a different image for filling the buffer
270     Img$=Byte$&"A"
280     !
290     ! Retrieve the actual file data
300     ENTER @Na USING Img$;Dat$
305     !
307     ! Now save the file locally.
310     OUTPUT @File;Dat$
```

Transferring data FROM the remote PC - TO the PNA:

```
40      !                      Set up I/O paths
50      !
60      ! Network analyzer address
70      ASSIGN @Na TO 716
77      ! File to be retrieved from local computer
78      ASSIGN @File TO "mytestdata.s2p"
79      !
120     !
122     !          TRANSFER the data
123     !
230     ! Allocate a buffer for holding the data
240     ALLOCATE Dat$[26236]
250     !
260     ! Get data from the file and fill Dat$
270     ENTER @File;Dat$
280     !
325     ! Data to be transferred to analyzer file 'testupld.s2p'
325     ! in default directory.
326     !
327     ! A specific block transfer designator must follow the
328     ! file name:
329     !     '#' specifies a block transfer.
330     !     '6' specifies 6 digits to follow.
331     !     '026236' matches the buffer size allocated above
332     !     not counting <NL><END> (new line and end of file).
430     OUTPUT @Na;":MMEM:TRAN ""testupld.s2p",#6026236",Dat$
520     END
```

Last Modified:

26-Jul-2007 Added comments to example

Establish a VISA Session

This Visual Basic program demonstrates how to send a SCPI command using VISA and the Agilent IO libraries. To run this program, you need:

- Your PC and PNA both connected to a LAN (for communicating with each other).
- The SICL and VISA components of Agilent's I/O Libraries software installed on your PC. Both are included when you install the software, unless you already have another vendor's VISA installed. Then specify Full SICL and VISA installation to overwrite the other vendor's VISA.
- The module visa32.bas added to your VB project. After you install VISA, the module will be located at C:\VXIPNP\WINNT (or equivalent)\INCLUDE\Visa32.bas
- A form with two buttons: cmdRun and cmdQuit.
- Your PC configured to be a VISA LAN Client, and the SICL Server capability enabled on the PNA. See [Configure for VISA and SICL](#)

[See Other SCPI Example Programs](#)

Note: This example is a piece of a larger VISA program that [performs a source power calibration](#).

```
'Session to VISA Default Resource Manager
Private defRM As Long
'Session to PNA
Private viPNA As Long
'VISA function status return code
Private status As Long

Private Sub Form_Load()
defRM = 0
End Sub

Private Sub cmdRun_Click()
' String to receive data from the PNA.
' Dimensioned large enough to receive scalar comma-delimited values
' for 21 frequency points (20 ASCII characters per point)
Dim strReply As String * 420

' Open the VISA default resource manager
status = viOpenDefaultRM(defRM)
If (status < VI_SUCCESS) Then HandleVISAError

' Open a VISA session (viPNA) to the SICL LAN server
' at "address 16" on the PNA pointed to by the "GPIB0"
' VISA LAN Client on this PC.
' CHANGE GPIB0 TO WHATEVER YOU PNA IS SET TO
status = viOpen(defRM, "GPIB0::16::INSTR", 0, 0, viPNA)
If (status < VI_SUCCESS) Then HandleVISAError

' Need to set the VISA timeout value to give all our calls to
```

```

' myGPIBRead sufficient time to complete before a timeout
' error occurs.
' For this example, let's try setting the limit to
' 30000 milliseconds (30 seconds).
status = viSetAttribute(viPNA, VI_ATTR_TMO_VALUE, 30000)
If (status < VI_SUCCESS) Then HandleVISAError

' Preset the PNA
status = myGPIBWrite(viPNA, "SYST:PRES")
If (status < VI_SUCCESS) Then HandleVISAError

' Print the data using a message box
MsgBox strReply
End Sub

Private Sub cmdQuit_Click()
' Close the resource manager session (which also closes
' the session to the PNA).
If defRM <> 0 Then Call viClose(defRM)

' End the program
End
End Sub

Private Function myGPIBWrite(ByVal viHandle As Long, ByVal strOut As String) As Long
' The "+ Chr$(10)" appends an ASCII linefeed character to the
' output, for terminating the write transaction.
myGPIBWrite = viVPrintf(viHandle, strOut + Chr$(10), 0)
End Function

Private Function myGPIBRead(ByVal viHandle As Long, strIn As String) As Long
myGPIBRead = viVScanf(viHandle, "%t", strIn)
End Function

Sub HandleVISAError()
Dim strVisaErr As String * 200
Call viStatusDesc(defRM, status, strVisaErr)
MsgBox "*** Error : " + strVisaErr, vbExclamation
End
End Sub

```

Status Reporting using SCPI

This Visual Basic program demonstrates two methods of reading the analyzer's status registers:

- Polled Bit Method - reads the Limit1 register continuously.
- SRQ Method - enables an interrupt of the program when bit 6 of the status byte is set to 1. The program then queries registers to determine if the limit line failed.

To run this program, you need:

- An established [GPIB interface connection](#)
- A form with two buttons: Poll and SRQ Method
- A means of causing the limit line to fail, assuming it passes initially.

```
Private Sub Poll_Click()  
' POLL THE BIT METHOD  
' Clear status registers  
GPIB.Write "*CLS"  
  
'Loop FOREVER  
Do  
    DoEvents  
    GPIB.Write "STATus:QUESTionable:LIMit1:EVENT?"  
    onn = GPIB.Read  
Loop Until onn = 2  
  
MsgBox "Limit 1 Failed "  
End Sub  
  
Private Sub SRQMethod_Click()  
'SRQ METHOD  
GPIB.Write "SYSTem:PRESet"  
GPIB.Write "CALCulate:PARAmeter:SElect 'CH1_S11_1'"  
'slow down the trace  
GPIB.Write "SENS:BWID 150"  
  
'Setup limit line  
GPIB.Write "CALC:LIM:DATA 2,3e9,6e9,-2,-2"  
GPIB.Write "CALC:LIMit:DISP ON"  
GPIB.Write "CALC:LIMit:STATe ON"  
  
' Clear status registers.  
GPIB.Write "*CLS;*wai"  
' Clear the Service Request Enable register.  
GPIB.Write "**SRE 0"  
' Clear the Standard Event Status Enable register.  
GPIB.Write "**ESE 0"
```

```

' Enable questionable register, bit(10) to report to the status byte.
GPIB.Write "STATus:QUESTionable:ENABle 1024"

' Enable the status byte register bit3 (weight 8) to notify controller
GPIB.Write "*SRE 8"

' Enable the onGPIBNotify event
GPIB.NotifyMask = cwGPIBRQS
GPIB.Notify
End Sub

-----
Private Sub GPIB_OnGPIBNotify(ByVal mask As Integer)
' check to see what failed
' was it the analyzer?
GPIB.Write "*STB?"
onn = GPIB.Read
If onn <> 0 Then
' If yes, then was it the questionable register?
GPIB.Write "STATus:QUESTionable:EVENT?"
onn = GPIB.Read
' Determine if the limit1 register, bit 8 is set.
If onn = 1024 Then
'if yes, then was it trace 1?
GPIB.Write "STAT:QUES:LIMIT1:EVEN?"
onn = GPIB.Read
If onn = 2 Then MsgBox ("Limit Line1 Failed")
End If
End If
End Sub

```

Create a Custom Power Meter Driver

This topic requires that you have a working knowledge of Visual Basic.

This topic will help you create your own power meter driver for use with Source Power Calibration on the PNA. If you are using an Agilent Power Meter to perform a Source Power Calibration, you do NOT need to create your own driver.

Your Power Meter driver will be created from a template written in Visual Basic using VISA over the GPIB bus.

Note: This procedure applies to Visual Basic 6.0. Applicability to Visual Basic .NET has not yet been investigated.

- [Prepare Template Files](#)
- [Modify Template Files](#)
- [Compile, Copy, and Register, Your New Driver](#)
- [Test Your new Driver](#)

[Other SCPI Example Programs](#)

Prepare Template Files

1. Copy all the files from the PNA hard drive C:\Program Files\Agilent\Network Analyzer\Automation\Power Meter Driver Template folder, to a folder on your development PC.
2. In Visual Basic click **File**, then **Open Project...**, find **MyPowerMeter.vbp** (a file you copied from the PNA). Click **Open**. This is a VB ActiveX EXE template, which you will fill in to become your driver.
3. Click **Project**, then **MyPowerMeter Properties**. Click the **General** tab.
4. Overwrite the Project Name with a name of your own choosing. This will be the name of your driver's type library (also the default name of your exe).

Note If the name of your exe does not match the VB Project Name with which it was compiled, registration of the exe on the PNA will not succeed.

5. Set the Project Description. After building your driver if you wish to test it using VB, this is the string that will show up in the VB References list of your test project, and also in the lower pane of the VB Object Browser.
6. Set the Thread Pool size to 1 thread.
7. Click **OK** to close the project properties dialog.
8. From the VB **Project** menu, click **References...** Ensure that **Agilent PNA Power Meter 1.0 Type Library** and **VISA Library** are checked. Click **OK**.

Note: Agilent's implementation of VISA is installed as part of the Agilent I/O Libraries on the PNA. For help on

VISA, go to the Windows Start button on your PNA, select Programs, Agilent IO Libraries, VISA Help.

Modify Template Files

From Visual Basic **View** menu click **Project Explorer**. Expand the **Modules** and **Class Modules** folders. Ensure there is one module (WinAPI) and one class module (PowerMeter).

Let's look at the WinAPI module first.

1. In the **Project Explorer** window, click **WinAPI**.
2. From the **View** menu click **Code**.

There is only one line of code you should need to modify in this module: the value of the string constant named `sIDSEARCH`. The comments preceding the declaration of that string describe how to change it. The rest of this module contains functions which will use the Microsoft Windows API to insure proper registration of your driver on the PNA. If you know of other Windows API functions you feel might be helpful to call from within your PowerMeter class module (to help in formatting data, for example), this module would be the place to declare them.

Now let's look at the class module.

1. In the Project Explorer window, click **PowerMeter**.
2. From the **View** menu click **Properties Window**. The **Instancing** property must be set to MultiUse. This allows other applications to create objects from this class, such that one instance of your driver EXE can supply more than one such object at a time.
3. From the **View** menu click **Code**.

Do NOT modify the Interfaces to IPowerMeter subroutines and functions. PNA source power cal expects to find these interfaces as they are currently defined.

The only members that you need to supply code to are those containing “**Your code here**” comments.

In addition, comments have been provided at the beginning of each member to describe the information that member needs to be read from or written to the power meter.

To get an idea of how communicate with the power meter using the VISA functions **viWrite** and **viRead**, examine the code which has been implemented for you in IPowerMeter_Connect, IPowerMeter_QueryMeter, and IPowerMeter_WriteMeter.

Compile, Copy, and Register Your New Driver

When your driver is ready to run, you will first need to compile it into an EXE.

From the File menu select **Make exe**.

After compiling, the following will instruct VB to use the same ID (GUID) every time you re-compile your project.

1. From the **Project** menu, click **PowerMeter Properties**.
2. On the **Component** tab, select **Binary Compatibility** and click ...
3. Browse to and select your project EXE. Click **Open**.

4. Click **OK** to close **Project Properties**.
5. Save your project.
6. Copy your driver EXE file to a folder on your PNA (do NOT use C:\Program Files\Agilent\Network Analyzer\Automation\Power Meter Driver Template folder).
7. Run the EXE file. A message box will pop up reporting whether or not registration was successful. If not successful, it will make a suggestion on what to fix.

When your driver is properly registered, PNA Source Power Cal should be able to associate it with the ID string of your power meter.

Test Your Power Meter Driver

We have also provided a Visual Basic project to test your new Power Meter driver. This project individually calls every IPowerMeter method and property in your driver to verify that it performs correctly. Before running the test your PC and PNA must be configured to communicate using DCOM.

1. Connect your PC and the PNA to LAN.
2. Add your PC logon to the PNA. Both logons and password must match to communicate using DCOM. See [Additional PNA users](#).
3. Configure your driver using DCOM Config on the PNA. This will give you permission to launch and access the driver. See [Configure for COM-DCOM Programming](#).

Modify the Test Project

1. In Visual Basic click **File**, then **Open Project...**, find **MyPowerMeterTest.vbp** (a file you copied from the PNA). Click **Open**.
2. From the **Project** menu, click **References...** From the list, find and check your new Power Meter Driver. (It should have been registered on your PC when you successfully made your driver EXE.) Click **OK**.
3. From the **View** menu click **Code**.
4. Modify the **CreateObject** line as follows:
Replace **MyPowerMeter** with the Project Name that you chose for your driver
Replace **MyPNA** with the Computer Name of your PNA.
For example:

```
Set PowerMeterObj = CreateObject("AcmeBrand.PowerMeter", "AGILENT-PNA123")
```

(This assumes that you kept **PowerMeter** as class module name in your driver.)

Run the Test Project

Ensure your power meter is connected to the PNA with a GPIB cable.

Put the PNA in system controller mode:

1. From the PNA **System** menu point to **Configure** then click **SICL/GPIB**.
2. In the GPIB box click **System Controller**.

Run the test project. If there are no errors, the driver is created successfully. If there are errors, try to figure out what went wrong and fix it. Then re-compile, re-copy the .exe to the PNA, and re-run the test. You should not need to re-register the driver or re-modify the test program.

GPIB Pass-Through Example

The SCPI [SYSTem](#) commands used in this example allow you to send GPIB commands to another GPIB device through the PNA. The other GPIB device cannot be connected to the GPIB bus through the PNA rear panel if the PNA is being controlled by a remote PC using that connector. The other device would typically be connected to the PNA using a [USB/GPIB interface](#).

This VB Script example uses the COM [SCPIStringParser](#) object. However, this is not critical to the use of these commands; they can be sent using the normal syntax of your programming environment. Using the SCPIStringParser over LAN allows you to communicate with GPIB devices without requiring your remote PC to have a GPIB interface card installed.

Although this method of pass-through works for most applications, there are a couple of limitations:

- All data is transferred using ASCII format. Therefore, transferring large blocks of data is very slow.
- Only read and write functions are possible. Service Interrupts are not supported.

[See Other SCPI Example Programs](#)

```
option explicit
dim app
set app = CreateObject("AgilentPNA835x.Application")

dim p
set p = app.ScpiStringParser

' Open a new GPIB session on Bus:2 Device:14 Timeout: 100ms
p.Parse "SYST:COMM:GPIB:RDEV:OPEN 2,14,100"
dim handleAsStr

' Retrieve the handle (ID number)
handleAsStr = p.Parse ("SYST:COMM:GPIB:RDEV:OPEN?")

' Convert the handle to an integer
dim handleAsInt
handleAsInt = CInt(handleAsStr)

' Send the "*IDN?" query
p.Parse "SYST:COMM:GPIB:RDEV:WRITE " & handleAsInt & ", '*IDN?'"

' Read its results
dim idn
idn = p.Parse("SYST:COMM:GPIB:RDEV:READ? " & handleAsInt)
msgbox idn

' Close the GPIB session
p.Parse "SYST:COMM:GPIB:RDEV:CLOSE " & handleAsInt
```

PNA as Controller and Talker / Listener

This Visual Basic Program uses VISA to do the following:

- Control the PNA using a VISA LAN Client interface on the PNA.
- Control another instrument using the PNA as GPIB controller.
- Queries both the analyzer and other instrument to identify themselves with *IDN?

Note: This program can be modified to work from a remote PC to control both instruments. In that case, set up the PNA to be a talker/listener.

To run this program, you need to do the following:

- Add module **visa32.bas** to the VB project. It is located on the analyzer at C:\Program Files\HP\VXIIPNP\WINNT\Include\VISA32.bas
- [Configure the PNA for VISA / SICL](#)
- Set up the PNA to be GPIB system controller.
 1. On the **System** menu, point to **Configure**. Click **SICL / GPIB**
 2. Click **System Controller**
- Connect another instrument to the analyzer through a GPIB cable with Primary address of 13 on GPIB0 interface

[See Other SCPI Example Programs](#)

```
Sub main()  
  
'This application run from onboard the PNA  
'can control both the PNA and another GPIB instrument.  
'  
'To run this program the module visa32.bas must be added  
'to the project.  
  
'VISA function status return code  
Dim status As Long  
'Session to Default Resource Manager  
Dim defRM As Long  
'Session to instrument  
Dim viPNA As Long  
'Session to other GPIB instrument  
Dim viInstrument As Long  
'String to hold results  
Dim strRes As String * 200  
On Error GoTo ErrorHandler  
  
status = viOpenDefaultRM(defRM)
```

```

If (status < VI_SUCCESS) Then GoTo VisaErrorHandler

'Open the session to the PNA
status = viOpen(defRM, "GPIB1::16::INSTR", 0, 0, viPNA)
If (status < VI_SUCCESS) Then GoTo VisaErrorHandler

'Ask for the PNA's ID.
status = viVPrintf(viPNA, "*IDN?" + Chr$(10), 0)
If (status < VI_SUCCESS) Then GoTo VisaErrorHandler

'Read the ID as a string.
status = viVScanf(viPNA, "%t", strRes)
If (status < VI_SUCCESS) Then GoTo VisaErrorHandler
'Display the results
MsgBox "PNA is: " + strRes

'Open the session to the other instrument
status = viOpen(defRM, "GPIB0::13::INSTR", 0, 0, viInstrument)
If (status < VI_SUCCESS) Then GoTo VisaErrorHandler

'Ask for the instrument's ID.
status = viVPrintf(viInstrument, "*IDN?" + Chr$(10), 0)
If (status < VI_SUCCESS) Then GoTo VisaErrorHandler

'Read the ID as a string.
status = viVScanf(viPNA, "%t", strRes)
If (status < VI_SUCCESS) Then GoTo VisaErrorHandler

'Display the results
MsgBox "Other instrument is: " + strRes
' Close the resource manager session (which closes everything)
Call viClose(defRM)
End

ErrorHandler:
'Display the error message
MsgBox "**** Error : " + Error$, MB_ICONEXCLAMATION
End

VisaErrorHandler:
Dim strVisaErr As String * 200
Call viStatusDesc(defRM, status, strVisaErr)
MsgBox "**** Error : " + strVisaErr

End
End Sub

```

Socket Client

The following C# example demonstrates how to send a SCPI program to an Agilent TCP socket-enabled instrument such as the PNA or ENA network analyzer. If the command is a query, the program will read the instrument's response. You can add or replace the SCPI commands in this program with your own.

[Learn how to enable Sockets communication on the PNA.](#)

For both of the following methods, first copy the example text below into a Notepad file and name it SocketClient.cs.

To run using Microsoft Visual Studio 2003 or 2005

1. From the Visual Studio **File** menu, select **New**, then **Project**.
2. In the **New Project** window, select the following items (noting the location of the file folder it is creating for you) then click **OK**.
 - Project Type: Visual C#
 - Template: Console Application
 - Project Name: SocketClient
1. Copy SocketClient.cs into the folder that was created in the previous step.
2. In the Solution Explorer window pane, right-click **Class1.cs** (if Visual Studio 2003) or **Program.cs** (if Visual Studio 2005). Select **Delete** to delete that file.
3. In the Solution Explorer, right-click **SocketClient** , and select **Add**, then **Existing Item....**
4. Browse to select **SocketClient.cs** and click **OK**.

You should then be able to build the project, and test the resulting **SocketClient.exe** from a command prompt (shell) window.

To run using Mono

Mono is a cross-platform version of .NET. You can download a free version of Mono at <http://www.mono-project.com>. Once downloaded and installed:

1. Run the Mono command prompt (shell) window.
2. Navigate to the directory where the example SocketClient.cs is stored.
3. Type: **MCS SocketClient.cs** (builds the .exe and saves in that same folder.)
4. Type **mono SocketClient.exe** <PNA name or IP address>

This example was compiled and tested successfully with Mono version 1.1.13. It was run on a PC using the Red

Hat version 9.0 distribution of the Linux operating system. It was also run on a PC using Windows XP. This program has not been tested with other versions of Mono, or on other operating systems.

To run with Agilent T&M Toolkit

Agilent T&M Toolkit 2.0 is the first version to support communication using Sockets.

Use the following to address the Sockets port: **TCPIP0::<PNA name or IP address>::5025::SOCKET**

```
using System;
using System.Net;
using System.Net.Sockets;
// This C# "Console Application" example program demonstrates sending
// SCPI commands to an Agilent TCP socket-enabled instrument
// (for example, a PNA or ENA network analyzer), and reading back the
// instrument's response if the command is a query.
namespace CSharpSocketClient
{
    /// <summary>
    /// The class supporting the main entry point for the application.
    /// </summary>
    class MainClass
    {
        /// <summary>
        /// The main entry point for the application.
        /// </summary>
        [STAThread]
        static int Main(string[] args)
        {
            try
            {
                if (args.Length != 1)
                {
                    Console.WriteLine("");
                    Console.WriteLine("Usage -- with Microsoft's .NET runtime:");
                    Console.WriteLine("SocketClient servernameoraddress");
                    Console.WriteLine("Example: SocketClient 192.168.0.1");
                    Console.WriteLine("");
                    Console.WriteLine("Usage -- with Mono's (www.mono-project.com) .NET runtime:");
                }
            }
        }
    }
}
```

```

Console.WriteLine("mono SocketClient.exe servernameoraddress");
Console.WriteLine("Example: mono SocketClient.exe 192.168.0.1");
return 1;
}
string server = args[0];
Int32 port = 5025; // default socket port number for the PNA
// Create a TcpClient for the server instrument
// and associated with the necessary port number.
TcpClient client = new TcpClient(server, port);
// Send a preset command to the instrument.
Parse(client, "SYST:PRES");
// Query the instrument ID.
string id = Parse(client, "*IDN?");

// Close the client session.
client.Close();
}
catch (ArgumentNullException e)
{
Console.WriteLine("ArgumentNullException: {0}", e);
}
catch (SocketException e)
{
Console.WriteLine("SocketException: {0}", e);
}
Console.WriteLine("\n Press Enter to continue...");
Console.Read();
return 0;
}

static string Parse(TcpClient client, string command)
{
// Translate the passed command into ASCII and store it as a Byte array.
Byte[] data = System.Text.Encoding.ASCII.GetBytes(command);
// Get a client stream for reading and writing.
NetworkStream stream = client.GetStream();

```



```

// Send the command to the socket-enabled instrument.
stream.Write(data, 0, data.Length);
// Has to be followed by a linefeed character as terminator.
Byte[] lf = {(Byte)'\n'};
stream.Write(lf, 0, 1);
Console.WriteLine("Sent: {0}", command);
// If the message was a query (involved a question mark)
// receive the instrument response.
if (command.IndexOf("?") >= 0)
{
    // Buffer to store the response bytes.
    // For simplicity of this example, we allocate just for a 256-byte maximum
    // response size.
    data = new Byte[256];
    // String to store the response ASCII representation.
    string responseData = String.Empty;
    // Read the batch of response bytes.
    Int32 bytes = stream.Read(data, 0, data.Length);
    responseData = System.Text.Encoding.ASCII.GetString(data, 0, bytes);
    Console.WriteLine("Received: {0}", responseData);
    return responseData;
}
return "";
}
}
}

```

GPIB Fundamentals

The General Purpose Interface Bus (GPIB) is a system of hardware and software that allows you to control test equipment to make measurements quickly and accurately. This topic contains the following information:

- [The GPIB Hardware Components](#)
- [The GPIB / SCPI Programming Elements](#)
- [Specifications](#)
- [GPIB Interface Capability Codes](#)

Note: All of the topics related to programming assume that you already know how to program, preferably using a language that can control instruments.

[Other Topics about GPIB Concepts](#)

The GPIB Hardware Components

The system bus and its associated interface operations are defined by the IEEE 488 standard. The following sections list and describe the main pieces of hardware in a GPIB system:

GPIB Addresses

Every GPIB instrument must have its own unique address on the bus. The PNA address (716) consists of two parts:

1. **The Interface select code** (typically 7) indicates which GPIB port in the system controller is used to communicate with the device.
2. **The primary address** (16) is set at the factory. You can change the primary address of any device on the bus to any number between 0 and 30. To change the analyzer address click [System \ Configure \ SICL-GPIB](#)

The secondary address is sometimes used to allow access to individual modules in a modular instrument system, such as a VXI mainframe. The analyzer does not have secondary addresses.

Controllers

Controllers specify the instruments that will be the talker and listener in a data exchange. The controller of the bus must have a GPIB interface card to communicate on the GPIB.

- The **Active Controller** is the computer or instrument that is currently controlling data exchanges.
- The **System Controller** is the only computer or instrument that can take control and give up control of the GPIB to another computer or instrument, which is then called the active controller.

The **PNA can NOT be passed control** of the GPIB. However, you can communicate with other GPIB devices through the PNA using one of, or a combination of, the following methods:

- Use the SCPI [SYST:COMM:GPIB:RDEV:](#) commands.
- Use VISA or SICL over LAN to accomplish this. See an [example](#).
- Use [USB / GPIB Interface](#)
- Use a PNA with [dedicated Controller and Talker/Listener GPIB ports](#).

Talker / Listener Instruments

The PNA is configured as a Talker / Listener by default.

- **Talkers** are instruments that can be addressed to send data to the controller.
- **Listeners** are instruments that can be addressed to receive a command, and then respond to the command. All devices on the bus are required to listen.

Cables

GPIB Cables are the physical link connecting all of the devices on the bus. There are eight data lines in a GPIB cable that send data from one device to another. There are also eight control lines that manage traffic on the data lines and control other interface operations.

You can connect instruments to the controller in any arrangement with the following limitations:

- Do not connect more than 15 devices on any GPIB system. This number can be extended with the use of a bus extension.
- Do not exceed a total of 20 meters of total cable length or 2 meters per device, whichever is less.
- Avoid stacking more than three connectors on the back panel of an instrument. This can cause unnecessary strain on the rear-panel connector.

The GPIB / SCPI Programming Elements

The following software programming elements combine to become a GPIB program:

- [GPIB / SCPI Commands](#)
- [Programming Statements](#)
- [Instrument Drivers](#)

GPIB Commands

The GPIB command is the basic unit of communication in a GPIB system. The analyzer responds to three types of GPIB commands:

1. IEEE 488.1 Bus-management Commands

These commands are used primarily to tell some or all of the devices on the bus to perform certain interface operations.

All of the functions that can be accomplished with these commands can also be done with IEEE 488.2 or SCPI commands. Therefore, these commands are not documented in this Help system. For a complete list of IEEE 488.1 commands refer to the IEEE 488 standard. **Examples** of IEEE 488.1 Commands

- **CLEAR** - Clears the bus of any pending operations
- **LOCAL** - Returns instruments to local operation

2. IEEE 488.2 Common Commands

These commands are sent to instruments to perform interface operations. An IEEE 488.2 common command consists of a single mnemonic and is preceded by an asterisk (*). Some of the commands have a query form which adds a "?" after the command. These commands ask the instrument for the current setting. See a complete list of the [Common Commands](#) that are recognized by the analyzer. **Examples** of IEEE 488.2 Common Commands

- ***OPC** - Operation Complete
- ***RST** - Reset
- ***OPT?** - Queries the option configuration

3. SCPI Commands

The Standard Commands for Programmable Instruments (SCPI) is a set of commands developed in 1990. The standardization provided in SCPI commands helps ensure that programs written for a particular SCPI instrument are easily adapted to work with a similar SCPI instrument. SCPI commands tell instruments to do device specific functions. For example, SCPI commands could tell an instrument to make a measurement and output data to a controller. **Examples** of SCPI Commands:

```
CALCULATE:AVERAGE:STATE ON
```

```
SENSE:FREQUENCY:START?
```

For more information on SCPI:

- [The Rules and Syntax of SCPI Commands](#) provides more detail of the SCPI command structure.
- [SCPI Command Tree](#) is a complete list of the SCPI commands for the analyzer

Programming Statements

SCPI commands are included with the language specific I/O statements to form program statements. The programming language determines the syntax of the programming statements. SCPI programs can be written in a variety of programming languages such as VEE, HP BASIC, or C++. **Example** of a Visual Basic statement:

- `GPIB.Write "SOURCE:FREQUENCY:FIXED 1000 MHz"`

[Note about examples](#)

Instrument Drivers

Instrument drivers are subroutines that provide routine functionality and can be reused from program to program. GPIB industry leaders have written standards for use by programmers who develop drivers. When programmers write drivers that comply with the standards, the drivers can be used with predictable results. To comply with the

standard, each instrument driver must include documentation describing its functionality and how it should be implemented.

GPIB Specifications

Interconnected devices - Up to 15 devices (maximum) on one contiguous bus.

Interconnection path - Star or linear (or mixed) bus network, up to 20 meters total transmission path length or 2 meters per device, whichever is less.

Message transfer scheme - Byte-serial, bit-parallel, asynchronous data transfer using an interlocking 3-wire handshake.

Maximum data rate - 1 megabyte per second over limited distances, 250 to 500 kilobytes per second typical maximum over a full transmission path. The devices on the bus determine the actual data rate.

Address capability - Primary addresses, 31 Talk and 31 Listen; secondary addresses, 961 Talk and 961 Listen. There can be a maximum of 1 Talker and up to 14 Listeners at a time on a single bus. See also previous section on [GPIB addresses](#).

GPIB Interface Capability Codes

The IEEE 488.1 standard requires that all GPIB compatible instruments display their interface capabilities on the rear panel using codes. The codes on the analyzer, and their related descriptions, are listed below:

SH1 full source handshake capability

AH1 full acceptor handshake capability

T6 basic talker, serial poll, no talk only, unaddress if MLA (My Listen Address)

TEO no extended talker capability

L4 basic listener, no listen only, unaddress if MTA (My Talk Address)

LEO no extended listener capability

SR1 full service request capability

RL1 full remote / local capability

PPO **no parallel poll capability**

DC1 full device clear capability

DT1 full device trigger capability

C1 system controller capability

C2 send IFC (Interface Clear) and take charge controller capability

C3 send REN (Remote Enable) controller capability

C4 respond to SRQ (Service Request)

The Rules and Syntax of SCPI

Most of the commands used for controlling instruments on the GPIB are SCPI commands. The following sections will help you learn to use SCPI commands in your programs.

[Branches on the Command Tree](#)

[Command and Query](#)

[Multiple Commands](#)

[Command Abbreviation](#)

[Bracketed \(Optional\) Keywords](#)

[Vertical Bars \(Pipes\)](#)

[MIN and MAX Parameters](#)

[Other Topics about GPIB Concepts](#)

Branches on the Command Tree

All major functions on the analyzer are assigned keywords which are called ROOT commands. (See GPIB Command Finder for a list of SCPI root commands). Under these root commands are branches that contain one or more keywords. The branching continues until each analyzer function is assigned to a branch. A root command and the branches below it is sometimes known as a subsystem.

For example, under [SOURCE:POWer](#) are several branch commands.

Sometimes the same keyword, such as `STATE`, is used in several branches of the command tree. To keep track of the current branch, the analyzer's command parser uses the following rules:

- **Power On and Reset** - After power is cycled or after `*RST`, the current path is set to the root level commands.
- **Message Terminators** - A message terminator, such as a `<NL>` character, sets the current path to the root command level. Many programming language output statements send message terminators automatically. Message terminators are described in [Sending Messages to the Analyzer](#).
- **Colon (:)** - When a colon is between two command keywords, it moves the current path down one level in the command tree. For example, the colon in `:SOURCE:POWER` specifies that `POWER` is one level below `SOURCE`. When the colon is the first character of a command, it specifies that the following keyword is a root level command. For example, the colon in `:SOURCE` specifies that `source` is a root level command.

Note: You can omit the leading colon if the command is the first of a new program line. For example, the following two commands are equivalent:

```
SOUR:POW:ATT:AUTO
:SOUR:POW:ATT:AUTO
```

- **<WSP>** - Whitespace characters, such as <tab> and <space>, are generally ignored. There are two important exceptions:
 - Whitespace inside a keyword, such as :CALCULATE, is not allowed.
 - Most commands end with a parameter. You must use whitespace to separate these ending parameters from commands. **Always refer to the command documentation.** In the following example, there is whitespace between STATE and ON.

```
CALCULATE1:SMOOTHING:STATE ON
```

- **Comma (,)** - If a command requires more than one parameter, you must separate adjacent parameters using a comma. For example, the SYSTEM:TIME command requires three values to set the analyzer clock: one for hours, one for minutes, and one for seconds. A message to set the clock to 8:45 AM would be SYSTEM:TIME 8,45,0. Commas do not affect the current path.
- **Semicolon (;)** - A semicolon separates two commands in the same message without changing the current path. See [Multiple Commands](#) later in this topic.
- **IEEE 488.2 Common Commands** - Common commands, such as *RST, are not part of any subsystem. An instrument interprets them in the same way, regardless of the current path setting.

Command and Query

A SCPI command can be an Event command, Query command (a command that asks the analyzer for information), or both. The following are descriptions and examples of each form of command. GPIB Command Finder lists every SCPI command that is recognized by the analyzer, and its form.

Form

Event commands - cause an action to occur inside the analyzer.

Query commands - query only; there is no associated analyzer state to set.

Command and query - set or query an analyzer setting. The query form appends a question mark (?) to the set form

Examples

```
:INITIATE:IMMEDIATE
```

```
:SYSTem:ERRor?
```

```
:FORMat:DATA ! Command
:FORMat:DATA? ! Query
```

Multiple Commands

You can send multiple commands within a single program message. By separating the commands with semicolons the current path does not change. The following examples show three methods to send two commands:

1. Two program messages:

```
SOURCE:POWER:START 0DBM
SOURCE:POWER:STOP 10DBM
```


2. **One long message.** A colon follows the semicolon that separates the two commands causing the command parser to reset to the root of the command tree. As a result, the next command is only valid if it includes the entire keyword path from the root of the tree:

```
SOURCE:POWER:START 0DBM;:SOURCE:POWER:STOP 10DBM
```

3. **One short message.** The command parser keeps track of the position in the command tree. Therefore, you can simplify your program messages by including only the keyword at the same level in the command tree.

```
SOURCE:POWER:START 0DBM;STOP 10DBM
```

Common Commands and SCPI Commands

You can send Common commands and SCPI commands together in the same message. (For more information on these types of commands see [GP-IB Fundamentals](#).) As in sending multiple SCPI commands, you must separate them with a semicolon.

Example of Common command and SCPI commands together

```
*RST;SENSE:FREQUENCY:CENTER 5MHZ;SPAN 100KHZ
```

Command Abbreviation

Each command has a long form and an abbreviated short form. The syntax used in this Help system use uppercase characters to identify the short form of a particular keyword. The remainder of the keyword is lower case to complete the long form.

```
SOUR - Short form  
SOURce - Long form
```

Either the complete short form or complete long form must be used for each keyword. However, the keywords used to make a complete SCPI command can be a combination of short form and long form.

The following is **unacceptable** - The first three keywords use neither short or long form.

```
SOURc:PowE:Atten:Auto on
```

The following is **acceptable** - All keywords are either short form or long form.

```
SOUR:POWer:ATT:AUTO on
```

In addition, the analyzer accepts lowercase and uppercase characters as equivalent as shown in the following equivalent commands:

```
source:POW:att:auto ON  
Source:Pow:Att:Auto on
```

Optional [Bracketed] Keywords

You can omit some keywords without changing the effect of the command. These optional, or default, keywords are used in many subsystems and are identified by brackets in syntax diagrams.

Example of Optional Keywords

The HCOPI subsystem contains the optional keyword IMMEDIATE at its first branching point. Both of the following commands are equivalent:

```
"HCOPIY:IMMEDIATE"
```

```
"HCOPIY"
```

The syntax in this Help system looks like this:

```
HCOPIY[:IMMEDIATE]
```

Vertical Bars | Pipes

Vertical bars, or "pipes", can be read as "**or**". They are used in syntax diagrams to separate alternative parameter options.

Example of Vertical Bars:

```
SOURCE:POWER:ATTenuation:AUTO <on|off>
```

Either ON or OFF is a valid parameter option.

MIN and MAX Parameters

The special form parameters "MINimum" and "MAXimum" can be used with commands that specify single frequency (Hz) and time (seconds) as noted in the command documentation. **Note:** Also with these commands, kHz, MHz, and GHz are accepted as suffixes/units.

The short form (min) and long form (minimum) of these two keywords are equivalent.

- **MAX**imum refers to the largest value that the function can currently be set to
- **MIN**imum refers to the smallest value that the function can currently be set to.

For example, the following command sets the start frequency to the smallest value that is currently possible:

```
SENS:FREQ:START MIN
```

In addition, the max and min values can also be queried for these commands.

For example, the following command returns the smallest value that Start Frequency can currently be set to:

```
SENS:FREQ:START? MIN
```

An error will be returned if a numeric parameter is sent that exceeds the MAX and MIN values.

For example, the following command will return an "Out of range" error message.





```
SENS:FREQ:START 1khz
```

Last Modified:

10-Jul-2007 Removed image

Configure for GPIB, SCPI, and SICTL

The following settings are used to configure the PNA for remote control using SCPI commands.

How to Configure for SICTL / GPIB Operation	
Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	 Programming Commands 
1. Navigate using MENU/DIALOG	1. Click System 2. then Configure 3. then SICTL/GPIB/SCPI
For PNA-X models	 Programming Commands 
1. Press SYSTEM 2. then [Configure] 3. then [SICTL/GPIB]	1. Click Utility 2. then System 3. then Configure 4. then SICTL/GPIB/SCPI

Dialog box for [PNA models with 2 GPIB ports](#):

SICL / GPIB dialog box help

GPIB

PNA models with 2 GPIB ports have an Address setting for ONLY the Talker/Listener Port. Learn more about the [PNA models with 2 GPIB ports](#).

Talker/Listener Sets the PNA to receive and send GPIB/SCPI messages to the system controller (external computer).

Talker/Listener Address Sets the PNA talker/listener GPIB address.

System Controller Sets the PNA as the system controller, controlling GPIB communications of external devices. Learn about the [PNA as controller](#). Use the National Instruments interface or the ACE (Agilent Connection Expert) interface to change the System Controller address

SICL

SICL Enabled When checked, the analyzer is capable of running GPIB programs on its computer to control analyzer functions. The programs must be run from a GPIB-capable programming environment (VEE, Visual

Basic). This mode does not allow control of external GPIB instruments. To uncheck this box, exit the PNA application - (Click File, then Exit). The PNA restarts with the SICL enabled box unchecked unless **Automatically Enable on Startup** is checked.

Learn more about [Configuring for VISA and SICL](#).

Address Sets the PNA address.

Automatically Enable on Startup When checked, SICL Enabled is automatically selected when starting the PNA application.

LAN Sockets/Telnet

Provides ability to communicate with the PNA from a PC that uses a non-windows operating system.

- These settings are checked by default. If you have security concerns, clear these check boxes.
- These settings remain after the PNA is shutdown and restarted.

Sockets Enabled When checked, provides the ability to control the PNA from a remote SCPI program using port number 5025. [See the C# example that illustrates how this is done.](#)

Telnet Enabled When checked, provides the ability to send single SCPI commands from a remote, non-Windows, PC to the PNA using port number 5024.

How to send single SCPI commands using Telnet:

1. On the remote PC, click **Start**, then **Run**
2. Type: **telnet <computer name> 5024**
where <computer name> is the full computer name of the PNA. [See how to find the computer name of the PNA.](#)
3. A Telnet window with a **SCPI>** prompt should appear on the remote PC screen.
4. From the SCPI prompt:
 - Type single SCPI commands
 - If an invalid SCPI command is sent, the prompt will disappear. Press **Enter** or **Ctrl C** to recover the SCPI prompt.
 - To exit the telnet window click **X** in the upper-right corner.
 - To get a normal telnet prompt, press **Ctrl]** (closing bracket).
 - To close the normal telnet window, type **Quit** and press **Enter**.

SCPI Monitor / Input

GPIB Command Processor Console Launches a window that is used to send single SCPI/GPIB commands from the PNA keyboard.

Note: Press **Control+Z** , then enter, to close the console window.

- Type a valid command, with appropriate arguments and press enter.
- Use the arrow keys to recall previous commands.
- The console window may launch behind the PNA application. Press **Control+Tab** to bring the console window to the top.

Monitor GPIB Bus Enables monitoring activity on the GPIB.

Show GPIB Bus Monitor Window Shows and hides the window monitoring GPIB activity.


Local and Remote Operation

The analyzer **LCL** and **RMT** (Local and Remote) operation labels appear in the lower right corner of the status bar.

Note: The status bar is NOT visible when the analyzer is preset. See [how to make the status bar visible](#).

- **LCL** appears when NOT under SCPI control
- **RMT** appears when under SCPI control. The RMT label does NOT appear when under COM control
Remote operation disables the front panel keys except for the **Macro/Local** key.



To return to Local (front panel) operation, press the  (Macro / Local) key

Sending the GPIB "GTL" (go to local) command also returns the analyzer to Local operation.

Sending the GPIB "LLO" (local lockout) command disables the front panel Local button.

Getting Data from the Analyzer

Data is sent from the analyzer in response to program queries. Data can be short response messages, such as analyzer settings, or large blocks of measurement data. This topic discusses how to read query responses and measurement data from the analyzer in the most efficient manner.

[Response Message Syntax](#)

[Clearing the Output Queue](#)

[Response Data Types](#)

[Transferring Measurement Data](#)

Note: Some PCs use a modification of the IEEE floating point formats with the byte order reversed. To reverse the byte order for data transfer into a PC, use the [FORMat:BORDER](#) command.

[Other Topics about GPIB Concepts](#)

Response Message Syntax

Responses sent from the analyzer contain data, appropriate punctuation, and message terminators.

<NL><^END> is always sent as a response message terminator. Most programming languages handle these terminators transparent to the programmer.

Response messages use commas and semicolons as separators in the following situations:

- a comma separates response data items when a single query command returns multiple values

```
FORM:DATA? 'Query  
ASC, +0 'Analyzer Response
```

- a semicolon separates response data when multiple queries are sent within the same messages

```
SENS:FREQ:STAR?;STOP? --Example Query  
+1.23000000E+008; +7.89000000E+008<NL><^END> 'Analyzer Response
```

Clearing the Output Queue

After receiving a query, the analyzer places the response message in its output queue. Your program should read the response immediately after the query is sent. This ensures that the response is not cleared before it is read. The response is cleared when one of the following conditions occur:

- When the query is not properly terminated with an ASCII carriage return character or the GPIB <^END> message.
- When a second program query is sent.

- When a program message is sent that exceeds the length of the input queue
- When a response message generates more response data than fits in the output queue.
- When the analyzer is switched ON.

Response Data Types

The analyzer sends different response data types depending on the parameter being queried. You need to know the type of data that will be returned so that you can declare the appropriate type of variable to accept the data. For more information on declaring variables see your programming language manual. The GPIB Command Finder lists every GPIB command and the return format of data in response to a query. The analyzer returns the following types of data:

[Numeric Data](#)

[Character Data](#)

[String Data](#)

[Block Data](#)

Numeric Data

All numeric data sent over the GPIB is ASCII character data. Your programming environment may convert the character data to numeric data for you. Boolean data (1 | 0) is a type of numeric data.

Character Data

Character data consists of ASCII characters grouped together in mnemonics that represent specific analyzer settings. The analyzer always returns the short form of the mnemonic in upper-case alpha characters. Character data looks like string data. Therefore, refer to the GPIB Command Finder to determine the return format for every command that can be queried.

Example of Character Data

```
MLOG
```

String Data

String data consists of ASCII characters. String parameters can contain virtually any set of ASCII characters. When sending string data to the analyzer, the string **must** begin with a single quote (') or a double quote (") and end with the same character (called the delimiter).

Note: The analyzer responds best to all special characters if the string is enclosed in single quotes. If quotes are not used, the analyzer will convert the text to uppercase. The analyzer may not respond as you expect.


The analyzer always encloses data in double quotes when it returns string data.

Example of String Data

```
GPIB.Write "DISP:WINDow:TITLe:DATA?"
"This is string response data."
```

Block Data

Block data is used to transfer measurement data. Although the analyzer will accept either definite length blocks or indefinite length blocks, it always returns definite length block data in response to queries unless the specified format is ASCII. The following graphic shows the syntax for definite block data:

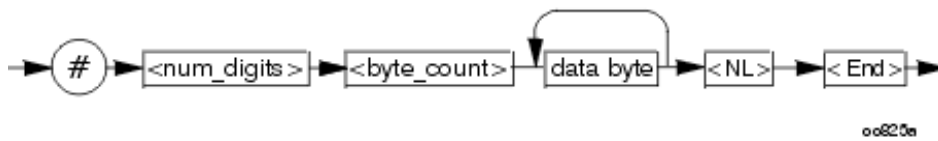

<num_digits> specifies how many digits are contained in <byte_count>

<byte_count> specifies how many data bytes will follow in <data bytes>

Example of Definite Block Data

#17ABC+XYZ<nl><end>

Where:

- always sent before definite block data

1 - specifies that the byte count is one digit (7)

7 - specifies the number of data bytes that will follow, not counting <NL><END>

ABC+XYZ - Data

<NL><END> - always sent at the end of block data

Transferring Measurement Data


Measurement data is blocks of numbers that result from an analyzer measurement. Measurement data is available from various processing arrays within the analyzer. For more information on the analyzer's data processing flow, see [Accessing Data Map](#). Regardless of which measurement array is read, transferring measurement data is done the same.

[See an example.](#)

When transferring measurement data, the [FORMat:DATA](#) command allows you to choose from the following two data types:

- REAL
- ASCII

The following graphic shows the differences in transfer times between the two:

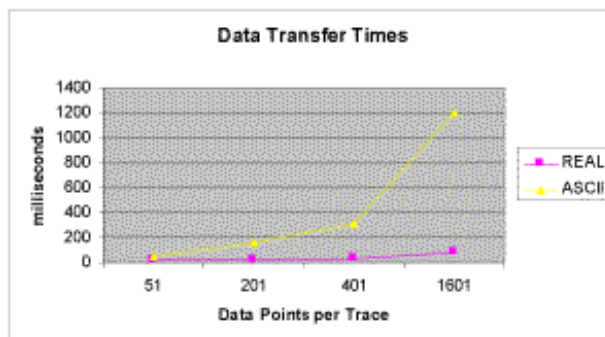

REAL Data

REAL data (also called floating-point data) types transfer faster. This is because REAL data is binary and takes about half the space of ASCII data. The disadvantage of using REAL data is that it requires a header that must be read. See [definite length block data](#). The binary floating-point formats are defined in the IEEE 754-1985 standard. The following choices are available in REAL format:

- **REAL,32** - IEEE 32-bit format - single precision (not supported by HP BASIC)
- **REAL,64** - IEEE 64-bit format - double precision

ASCII Data

The easiest and slowest way to transfer measurement data is to use ASCII data. ASCII data is sent if the data contains both numbers and characters (the setting of FORMat:DATA is ignored). ASCII data is separated by commas.

Last Modified:

26-Jul-2007 Added link to example

Synchronizing the PNA and Controller

Synchronizing the PNA and Controller means to keep PNA and the controller working at approximately the same pace.

The Problem

The controller sends commands to the PNA as fast as the GPIB bus will allow. The PNA stores these commands in the PNA [input queue](#). However, the PNA executes those commands at a slower rate than they are accepted. If left unchecked, the PNA input buffer will contain a long list of commands waiting to be executed.

At some point, the controller will send a query command which requires a response from the PNA. The controller will not send more commands until a response is received. It will wait for a response from the PNA for the amount of time set by the Timeout setting. If the PNA is working off a long list of commands in the input buffer, it may not execute and respond to the query command until the controller has quit waiting, or "timed out".

The Solution

The easiest way to keep the controller and the PNA "synched" is to send query commands often. This stops the controller from sending more commands until the PNA executes and responds to the query. This limits the number of commands that are waiting in the PNA input queue to be processed.

Although any query will stop the controller from sending more commands, a good practice is to send [*OPC?](#) Most of the time, as soon as this query is executed, it will immediately reply. The exception to this is the Overlapped command.

- **Sequential** commands are executed quickly and in the order in which they are received.
- **Overlapped** commands take longer to execute. Therefore, they allow the PNA to execute other commands while waiting. However, the programmer may want to prevent the analyzer from processing new commands until the overlapped command has completed. If the PNA is executing an overlapped command when a *OPC? is received, it will wait until the overlapped command is complete.

Note: The analyzer has two overlapped commands:

- [INITiate:IMMediate](#)
- [SENSe:SWEep:MODE GROUPS](#) (when INIT:CONT is ON)

Analyzer Queues

Queues are memory buffers that store messages until they can be processed. The analyzer has the following queues:

- [Input Queue](#)
- [Output Queue](#)
- [Error Queue](#)

Input Queue

The controller sends statements to the analyzer without regard to the amount of time required to execute the statements. The input queue is very large (31k bytes). It temporarily stores commands and queries from the controller until they are read by the analyzer's command parser. The input queue is cleared when the analyzer is switched ON.

Output Queue

When the analyzer parses a query, the response is placed in the output queue until the controller reads it. Your program should immediately read the response or it may be cleared from the output queue. The following conditions will clear a query response:

- When a second query is sent before reading the response to the first. This does not apply when multiple queries are sent in the same statement.
- When a program statement is sent that exceeds the length of the input queue.
- When a response statement generates more data than fits in the output queue.
- When the analyzer is switched ON.

Error Queue

Each time the analyzer detects an error, it places a message in the error queue. When the `SYSTEM:ERROR?` query is sent, one message is moved from the error queue to the output queue so it can be read by the controller. Error messages are delivered to the output queue in the order they were received. The error queue is cleared when any of the following conditions occur:

- When the analyzer is switched ON.
- When the `*CLS` command is sent to the analyzer.
- When all of the errors are read.

If the error queue overflows, the last error is replaced with a "Queue Overflow" error. The oldest errors remain in the queue and the most recent error is discarded.

Synchronization Methods

The following common commands are used to synchronize the analyzer and controller. Examples are included that illustrate the use of each command in a program. See the SCPI command details to determine if a command is an overlapped command.

- [*WAI](#)
- [*OPC?](#)
- [*OPC](#)

***WAI**

The `*WAI` command:


- **Stops the analyzer** from processing subsequent commands until all overlapped commands are completed.

- It does **NOT** stop the controller from sending commands to this and other devices on the bus. This is the easiest method of synchronization.

Example of the *WAI command

```
GPIB.Write "ABORT;;INITIATE:IMMEDIATE" 'Restart the measurement.
GPIB.Write "CALCULATE:MARKER:SEARCH:MAXIMUM" 'Search for max amplitude.
GPIB.Write "CALCULATE:MARKER:X?" 'Which frequency?
```

The following timeline shows how the processing times of the three commands relate to each other:

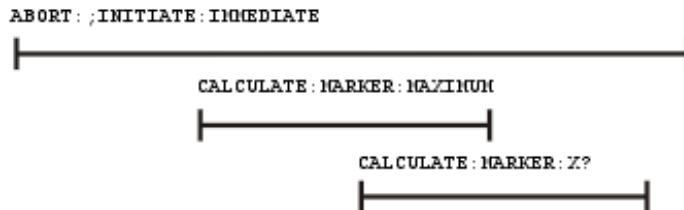


INITIATE:IMMEDIATE is an overlapped command; it allows the immediate processing of the sequential command, CALCULATE:MARKER:SEARCH:MAXIMUM. However, the INITIATE:IMMEDIATE is not considered complete until the measurement is complete. Therefore, the marker searches for maximum amplitude before the measurement completes. **The CALCULATE:MARKER:X? query could return an inaccurate value.**

To solve the problem, insert a *WAI command.

```
GPIB.Write "ABORT;;INITIATE:IMMEDIATE" 'Restart the measurement.
GPIB.Write "*WAI" 'Wait until complete.
GPIB.Write "CALCULATE:MARKER:MAXIMUM" 'Search for max amplitude.
GPIB.Write "CALCULATE:MARKER:X?" 'Which frequency
```

The timeline now looks like this:

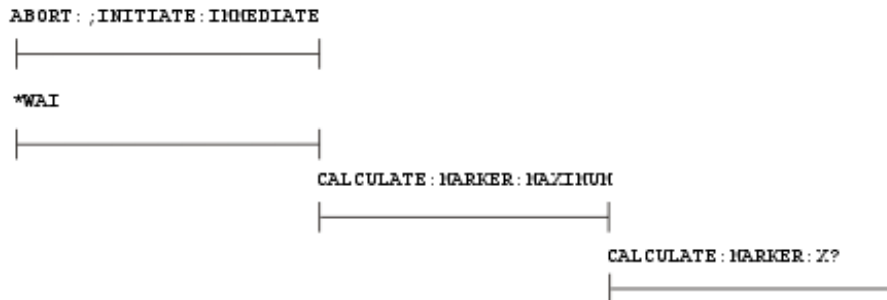

The *WAI command keeps the MARKER:SEARCH:MAXIMUM from taking place until the measurement is completed. The CALCULATE:MARKER:X? query returns the correct value.

Note: Although *WAI stops the analyzer from processing subsequent commands, it does not stop the controller. The controller could send commands to other devices on the bus.

*OPC?

The *OPC? query stops the controller until all pending commands are completed.

In the following example, the **Read** statement following the *OPC? query will not complete until the analyzer responds, which will not happen until all pending commands have finished. Therefore, the analyzer and other devices receive no subsequent commands. A "1" is placed in the analyzer output queue when the analyzer completes processing an overlapped command. The "1" in the output queue satisfies the **Read** command and the

program continues.

Example of the *OPC? query

This program determines which frequency contains the maximum amplitude.

```
GPIB.Write "ABORT; :INITIATE:IMMEDIATE"! Restart the measurement
GPIB.Write "*OPC?" 'Wait until complete
Meas_done = GPIB.Read 'Read output queue, throw away result
GPIB.Write "CALCULATE:MARKER:MAX" 'Search for max amplitude
GPIB.Write "CALCULATE:MARKER:X?" 'Which frequency?
Marker_x = GPIB.Read
PRINT "MARKER at " & Marker_x & " Hz"
```

*OPC

The *OPC command allows the analyzer and the controller to process commands while processing the overlapped command.

When the analyzer completes processing an overlapped command, the *OPC command sets bit 0 of the standard event register to 1. This requires polling of status bytes or use of the service request (SRQ) capabilities of your controller. See [Reading the Analyzer's Status Registers](#) for more information about the standard event status register, generating SRQs, and handling interrupts.

Note: Be careful when sending commands to the analyzer between the time you send *OPC and the time you receive the interrupt. Some commands could jeopardize the integrity of your measurement. It also could affect how the instrument responds to the previously sent *OPC.

[Example](#) of polled bit and SRQ processes.

When To Synchronize the Analyzer and Controller

The need to synchronize depends upon the situation in which the overlapped command is executed. The following section describes situations when synchronization is required to ensure a successful operation.

- [Completion of a Measurement](#)
- [Measurements with External Trigger](#)
- [Averaged Measurements](#)

Completion of a Measurement

To synchronize the analyzer and controller to the completion of a measurement, use the ABORT; INITIATE: IMMEDIATE command sequence to initiate the measurement.

This command sequence forces data collection to start (or restart) under the current measurement configuration. A restart sequence, such as ABORT; INITIATE: IMMEDIATE is an overlapped command. It is complete when all operations initiated by that restart command sequence, including the measurement, are finished. The *WAI, *OPC? and *OPC commands allow you to determine when a measurement is complete. This ensures that valid measurement data is available for further processing.

Measurements with External Trigger

To use an external trigger, synchronize the analyzer and controller before the trigger is supplied to the measurement. Setup the analyzer to receive a trigger from an external source (wired to the EXTERNAL TRIGGER

connector on the rear panel. The trigger system is armed by GPIB with INITIATE:IMMEDIATE. Because the source of the trigger has been specified as external, this command "readies" the analyzer for a trigger but it does not actually generate the trigger.

Averaged Measurements

Averaged measurements are complete when the average count is reached. The average count is reached when the specified number of individual measurements is combined into one averaged measurement result. Use synchronization to determine when the average count has been reached.

If the analyzer continues to measure and average the results after the average count is reached, use synchronization to determine when each subsequent measurement is complete.

Calibrating the PNA Using SCPI

There are several ways to calibrate the PNA using SCPI depending on your measurement needs. As from the Cal Wizard, you can perform a Guided Cal, Unguided Cal, or ECal. This topic explains the differences in these calibration choices when using SCPI commands.

- [Guided Calibrations](#)
- [ECal](#)
- [Creating Cal Sets](#)
- [Applying Cal Sets and Cal Types](#)
- [Uploading Error Terms](#)
- [Unguided Cals and Calibration Classes](#)

[See SCPI Calibration Examples](#)

Guided Calibrations

- Use [Sens:Corr:Coll:Guided](#) commands.
- These commands calibrate the ACTIVE channel. Activate a channel by selecting a measurement on the channel to be calibrated using [Calc:Par:Select](#).
- Full 1,2,3,4-port SOLT and TRL calibrations - No response cals.
- All of the advanced calibration features (Thru method, specify DUT connectors and Cal kits for each port, port pairings).
- A Cal Set is applied to the channel and saved at the completion of a guided cal according to the preference setting [SENS:CORR:PREF:CSET:SAVE](#)

ECal

From the Cal Wizard or from a SCPI program, ECal is fast, accurate, and very repeatable. Unlike from the Cal Wizard, you can use SCPI to perform ECal using either the Guided or Unguided commands. The Unguided commands are easiest to use. However, the following situations require that you use the Guided commands.

- To maximize accuracy, all ECal calibrations on the PNA perform an Unknown Thru measurement of the ECal module Thru state **IF** the PNA model being used has [1 reference receiver per port](#). If your PNA does NOT have 1 reference receiver per port, use Guided ECal commands and specify a Thru method.
- If your ECal module connectors do NOT match the DUT connectors, and you choose not to perform a User Characterization, use Guided ECal commands and specify the Thru method.

ECAL Notes:

- When using either Guided or Unguided ECal commands under low power situations, use the Orientation settings. The Guided example shows the use of these commands. When using Unguided, they must appear before the Acquire command.
- The frequency range of the measurement must be within the range of the ECal module. Otherwise, the calibration will fail.
- Although we recently provided the command, you do NOT have to send the ECal module state command. The ECal algorithm switches ECal states automatically.
- All of these ECal choices are listed in the [Programming Command Search](#) function in this Help file.

See [Using ECal](#) to learn about all of the ECal features.

Creating Cal Sets

There are several ways to store guided cal data into a unique Cal Set. The following is probably the easiest. It does not require the name of an existing Cal Set and it allows you to name the Cal Set.

```
SENS:CORR:COLL:GUID:INIT 'start the cal with no cal set argument  
'Perform the cal  
SENS:CORR:COLL:GUID:SAVE 'create cal set with auto-generated name or to cal  
register  
SENS:CORR:CSET:NAME 'MyCalSet' 'name the current cal set.
```

Applying Cal Sets and Cal Types

A Cal Set is applied to the channel and saved at the completion of a guided cal according to the preference setting [SENS:CORR:PREF:CSET:SAVE](#).

When you select a Cal Set to apply to an uncalibrated channel, the PNA attempts to find the most comprehensive calibration type in the Cal Set and turn it ON. In addition, changing a measurement parameter (for example, from S11 to S21) will also initiate an attempt to apply the best Cal Type and turn correction ON.

There may be times when you do not want the most comprehensive Cal Type. For example, say there is a Full 2-port Cal Set applied, but there is only an S11 measurement displayed. If measurement speed is a concern, you can apply a Full 1-Port Cal Type from that same Cal Set and save time by not doing the extra background sweeps.

[Learn more about background sweeps.](#)

If you change the measurement parameter, the PNA will reapply the Full 2-Port Cal Type.

See the SCPI and COM commands for [Cal Sets](#) and [Cal Types](#).

Uploading Error Terms

There are two ways to upload error terms using SCPI: the old way and the recommended way. The old way will still work but requires a 'preference' setting.

The old way is this:

```
SENS:CORR:COLL:METHod <cal type>
SENS:CORR:COLL:SAVE
CALC:DATA SCORR[n] < data to upload >
```

This technique, used in WinCal software, starts a calibration and immediately saves it without acquiring any standards. In PNA Rev 6.0, executing SAVE without acquiring data will return an error. To suppress the error and continue to use the above technique to upload error terms, send the following command to set the preference:

[SENS:CORR:PREF:SIMCal 1](#)

Or you can execute the script that is saved on the PNA at C:\Program Files\Agilent\Network Analyzer\System\wincal32.reg.

Setting this preference defeats some error checking when performing unguided cal using SCPI. This is not recommended unless needed for backward compatibility.

The recommended way is to upload error terms into a created or selected Cal Set:

```
SENS:CORR:CSET:CREate or SENS:CORR:CSET:GUID
SENS:CORR:CSET:Data <term> <port> <port> <data>
SENS:CORR:CSET:SAVE
```

This method puts error terms into a Cal Set, outside of a Guided or Unguided calibration session. The Cal Set can then be applied at any time.

See [SENS:CORR:CSET](#) commands.

Unguided Cals and Calibration Classes

- Use [Sens:Correction](#) commands.
- 1-port, 2-port, Response.
- Can select 2 sets of standards.
- TRL is NOT recommended.

The following describes how to perform an unguided calibration using SCPI. The objective here is to make clear the relationship between the physical port on which a standard is being measured, the actual device in the cal kit, and the SCPI command used to acquire the device.

Calibration standards classes are 'categories' of standard types. To perform a 2 port calibration, the cal wizard requires the following types of standards to be measured:

3 reflection standards on the forward port:

- Class S11A typically an open
- Class S11B typically a short
- Class S11C typically a load

Likewise, 3 reflection standards are required for the reverse port:

- Class S22A typically an open

- Class S22B typically a short
- Class S22C typically a load

There is also a transmission standard that is measured in both directions:

- Class S21T typically a thru

The following illustrates the relationship between cal kit physical standards and calibration classes. Here is a list of the physical devices in my calibration kit.

Standard #1 = "3.5 mm male short"

Standard #2 = "3.5 mm male open"

Standard #3 = "3.5 mm male broadband load"

Standard #4 = "Insertable thru standard"

Standard #5 = "3.5 mm male sliding load"

Standard #6 = "3.5 mm male lowband load"

Standard #7 = "3.5 mm female short"

Standard #8 = "female to female characterized thru adapter"

Standard #9 = "0-2 Load"

Standard #10 = "Open"

Standard #11 = "Non-insertable thru"

Standard #12 = "3.5 mm female lowband load"

Standard #13 = "3.5 mm female sliding load"

Standard #14 = "3.5 mm female broadband load"

Standard #15 = "3.5 mm female open"

When you perform a calibration remotely using SCPI, you don't specify the device number directly. Rather, you specify the class you want to measure. Each device in the calibration kit is assigned to a class. And since more than one device can be assigned to the same class, each class contains an ordered list of devices. The class assignments are set using the Advanced Modify Cal Kit dialog or the SCPI command:

[SENS:CORR:COLL:CKIT:ORDER](#)<class>, <std>, <std>, <std>, <std>, <std>, <std>, <std>

The 85052B kit used in the example program has the following standard list for each class: The list was obtained by issuing the corresponding SCPI query:

[SENS:CORR:COLL:CKIT:OLIST1?](#) S11A = +2,+15,+0,+0,+0,+0,+0

SENS:CORR:COLL:CKIT:OLIST2? S11B = +1,+7,+0,+0,+0,+0,+0

SENS:CORR:COLL:CKIT:OLIST3? S11C = +6,+5,+3,+12,+13,+14,+0

SENS:CORR:COLL:CKIT:OLIST4? S21T = +4,+8,+0,+0,+0,+0,+0

SENS:CORR:COLL:CKIT:OLIST5? S22A = +2,+15,+0,+0,+0,+0,+0

SENS:CORR:COLL:CKIT:OLIST6? S22B = +1,+7,+0,+0,+0,+0,+0

SENS:CORR:COLL:CKIT:OLIST7? S22C = +6,+5,+3,+12,+13,+14,+0

SENS:CORR:COLL:CKIT:OLIST8? S12T = +4,+8,+0,+0,+0,+0,+0

When you perform the calibration, you acquire data by issuing the ACQUIRE command:

[SENS:CORR:COLL:ACQ <class>\[, <subst> \]](#)

For example:

[SENS:CORR:COLL:SFOR 1](#)

SENS:CORR:COLL:ACQ STANA, SST2

The SFOR command tells the wizard to make the next acquisition in the forward direction. The ACQUIRE command specifies that we are measuring the 2nd device in the list for STANA. And since we are measuring SFORward, then STANA refers to class #1 or S11A. The list of devices for this class are specified in the OLIST1 query above.

Alternately, you could modify the device order for the S11A class to move device #15 into the first position (SENS:CORR:COLL:CKIT:ORDER1). When the desired device is in the first position, you need not specify the order number in the ACQUIRE command. The default is the first device in the OLIST. This works well for two port network analyzers where the order for S11A,B,C classes is set up for port 1 and the order for S22A,B,C is set up for port 2. With the kit set up in the proper order, you eliminate the need to specify the substandard number (SST<n>).

[See an example: Perform an Unguided 2-port Cal on a 4-port PNA.](#)

The PNA as a USB Device

Use of the PNA as a USB Device is not supported at this time.

 
Reading the Analyzer's Status Register

The PNA has several status registers that your program can read to know when specific events occur. There are two methods of reading the status registers in the analyzer: the Polled Bit method and the Service Request method.

- [Polled Bit Method](#)
- [Service Request Method](#)
- [Setting and Reading Bits in Status Registers](#)
- [Positive and Negative Transitions](#)
- [Status Commands](#)

[Other Topics about GPIB Concepts](#)

Most of the status registers in the analyzer have sixteen bits. For simplicity, this topic will illustrate their use with 8-bit registers. Bits in registers represent the status of different conditions inside of the analyzer. In the following graphic, a register is represented by a row of boxes; each box represents a bit. Bit 3 is ON.



The Polled Bit Method

With the Polled Bit Method, your program **continually** monitors a bit in the status register that represents the condition of interest to you. When the analyzer sets the bit to 1, your program immediately sees it and responds accordingly.

Advantage: This method requires very little programming.

Disadvantage: This method renders your program unavailable to do anything other than poll the bit of interest until the condition occurs.

Procedure:

1. Decide which condition to monitor. The [Status Commands](#) topic lists all of the possible conditions that can be monitored in the analyzer.
 2. Determine the command and the bit that will monitor the command.
 3. Construct a loop to poll that bit until it is set.
 4. Construct the routine to respond when the bit is set.
-

The Service Request (SRQ) Method

Your program enables the bits in the status registers representing the condition of interest. When the condition occurs, the analyzer actively interrupts your program from whatever it is doing, and an event handler in your program responds accordingly. Do this method if you have several conditions you want to monitor or the conditions

are such that it is not practical to wait for the condition to occur.

Advantage: This method frees your program to do other things until the condition occurs. The program is interrupted to respond to the condition.

Disadvantage: This method can require extensive programming depending on the number and type of conditions that you want to monitor.

Procedure:

1. Decide which conditions to monitor. The [Status Commands](#) topic lists all of the possible analyzer conditions that can be monitored.

2. Set the enable bits in the **summary** registers and the **status byte** register.

Enabling is like making power available to a light - without power available, the switch can be activated, but the light won't turn ON. In the analyzer, without enabling, the condition may occur, but the controller won't see it unless it is enabled.

The condition, and the bit in the **summary** registers in the reporting path, must be enabled. This is like streams (conditions) flowing into rivers (summary registers), and rivers flowing into the ocean (controller). See the diagram of status registers in [Status Commands](#).

Bit 6 of the **status byte** register is the only bit that can interrupt the controller. When **any** representative bit in the status byte register goes ON, bit 6 is automatically switched ON.

3. Enable your program to interrupt the controller. This is done several ways depending on the programming language and GPIB interface card you use. An [example program](#) is provided showing how this is done with in Visual Basic with a National Instruments GPIB card.

4. Construct a subroutine to handle the interrupt event. If you are monitoring more than one condition in your system, your event handler must determine which condition caused the interrupt. Use the *SPE command to determine the instrument that caused the interrupt, then poll the summary registers, then poll condition registers to determine the cause of the interrupt.

Setting and Reading Bits in Status Registers

Both methods for reading status registers requires that you read bits out of the status registers. Most of the PNA status registers contain 16 bits, numbered 0 to 15. Each bit has a weighted value. The following example shows how to set the bits in a 8-bit status register.

8-bit register

Bit	0	1	2	3	4	5	6	7
Weight	1	2	4	8	16	32	64	128

We want to set bits 4 and 5 in the Standard Event Status Enable register.

Step	Example
1. Read the weighted bit value for these bits	weights 16 and 32 (respectively)
2. Add these values together	$16 + 32 = 48$
3. Send this number as an argument in the appropriate command. (see Status Commands)	STAT:QUES:LIMIT1:ENAB 48

Positive and Negative Transitions

Transition registers control what type of in a condition register will set the corresponding bit in the event register.

- **Positive** transitions (**0 to 1**) are only reported to the event register if the corresponding positive transition bit is set to 1.
- **Negative** transitions (**1 to 0**) are only reported to the event register if the corresponding negative transition bit is set to 1.
- Setting **both** transition bits to 1 causes both **positive and negative** transitions to be reported.

Transition registers are read-write and are unaffected by *CLS (clear status) or queries. They are reset to their default settings at power-up and after *RST and SYSTem:PRESet commands. The **following are the default settings** for the transition registers:

- All Positive Transition registers = 1
- All Negative Transition registers = 0

This means that, by default, the analyzer will latch all event registers on the negative to positive transition (0 to 1).

The following is an example of why you would set transition registers:

A critical measurement requires that you average 10 measurements and then restart averaging. You decide to poll the averaging bit. When averaging is complete, the bit makes a positive transition. After restart, you poll the bit to ensure that it is set back from 1 to 0, a negative transition. You set the negative transition bit for the averaging register.

Configure for SCPI LAN using SICL / VISA

- [PNA Supported Interfaces](#)
- [Agilent I/O Libraries](#)
- [SICL / VISA Programs Running on the PNA](#)
- [Configure the PNA for SICL / VISA](#)
- [Configure the External Controller](#)

[Other Topics about GPIB Concepts](#)

PNA Supported Interfaces

The PNA supports the following interfaces for SICL / VISA communication:

- **LAN** - as a remote GPIB interface. The PNA LAN is presented as a virtual GPIB interface. It does NOT support simple TCPIP-based control. Therefore, when configuring the Agilent IO libraries on your PC, add a **REMOTE GPIB** interface, which uses the LAN client interface.
- **GPIB** - requires that your external controller have a GPIB card.

Note: For optimum LAN interface performance, use [COM](#) to control the PNA. SCPI commands can be sent to the PNA using the COM [SCPIStringParser](#) object.

The following interfaces are NOT supported:

- **USB**
- **Serial**

Important Note:

To enable VISA or SICL communication over LAN, you must do the following:

1. On the PNA, click **System**, point to **Configure**, then click **SICL/GPIB**.
2. Check **SICL Enabled**. To automatically enable SICL when the PNA is booted, check **Automatically enable on Startup**.
3. Click **OK**.

The PNA is now ready to be controlled over LAN.

[Learn more about this dialog box.](#)

Agilent I/O Libraries

The Agilent I/O libraries includes the drivers to allow you to communicate with Agilent test instruments. Every PNA is shipped with the Agilent I/O libraries installed. We recommend you do NOT upgrade the Agilent I/O libraries on the PNA as unexpected results may occur. If you choose to upgrade the Agilent I/O libraries on the PNA, do NOT change the default folder path in the InstallShield Wizard.

To communicate with the PNA, the Agilent I/O libraries must also be installed on your external controller. To purchase the Agilent I/O libraries, or download a free upgrade, go to www.agilent.com and search for IO Libraries. Scroll to find Software, Firmware & Drivers.

SICL / VISA Programs Running on the PNA

You can run your SICL / VISA program on the PNA to control the PNA. Although the Agilent I/O libraries are already installed on the PNA, it is configured as the **Host**. You must also configure a SICL or VISA LAN **Client** interface on the PNA, specifying the LAN hostname of that same PNA.

If your program uses the COM interface to VISA, and is compiled on a PC with the Agilent IO Libraries Suite (version 14 or later), and the resulting executable is copied and run on the PNA, it will produce a "type mismatch error". This is because the PNA has the 'M' version of Agilent I/O libraries. The following Visual Basic code is an example of how to avoid this error when communicating with the PNA from within the PNA:

```
Dim rm As IResourceManager
Dim fmio As IFormattedIO488
Set rm = CreateObject("AgilentRM.SRMClS")
Set fmio = CreateObject("VISA.BasicFormattedIO")
Set fmio.IO = rm.Open("GPIB0::22")
fmio.WriteString "*IDN?" & Chr(10)
MsgBox fmio.ReadString()
```

Controlling the PNA over LAN while controlling other instruments over GPIB

The PNA can NOT be both a controller and talker/listener on the same GPIB bus. Using SICL / VISA, you can use LAN to control the PNA, leaving the PNA free to use the rear-panel GPIB interface to control other GPIB devices.

Configure the PNA for SICL / VISA

1. On the PNA, click **System** then check **Windows Taskbar**
2. Click **Start** then point to **Program Files, Agilent IO Libraries**, then click **IO Config**
3. Select each GPIB Interface and click **Edit** to verify (or make) the default settings in the following table. These settings are REQUIRED when using a [82357A USB / GPIB](#) Interface with the PNA.
4. When complete, click **OK** to close the edit dialog.
5. Click **OK** to close the IO Config dialog.

VISA Interface Name	SICL Interface Name	Dialog box title	Description
GPIB0	gpib0	GPIB Using NI-488.2	PNA Rear-panel GPIB connector. This GPIB interface can be used to control the PNA OR for the PNA to control external equipment. IT CAN NOT DO BOTH IN THE SAME PROGRAM. Learn more about pass-through options.
GPIB1	hpib7	Internal Instrument Configuration	Internal interface for programs running on the PNA to control itself.

Configure the External Controller

Please refer to the Agilent I/O libraries documentation to learn how to configure your controller to communicate with the PNA. These links can show you how to find the following PNA information:

- [PNA full computer name](#)
- [GPIB Address](#)
- [IP Address](#)

This [example program](#) can help test your VISA configuration.

Agilent VEE Pro RunTime Installed

Beginning in Dec. 2005, Agilent VEE Pro RunTime is installed on new PNAs. This means that programs written with Agilent VEE (.vxe files) can be run directly on the PNA. New PNA models with [1.1 GHz CPU](#) have VEE 7.5 runtime with Agilent I/O Libraries suite 14.

PNAs **without** Agilent VEE installed can go to the [Agilent VEE website](#) and download Agilent **VEE Pro 6.2** RunTime to the PNA and begin to run VEE programs directly on the PNA. This version does not require Agilent I/O Libraries suite 14. [Do NOT upgrade to Agilent I/O libraries suite 14 on the PNA.](#)

With Agilent VEE Pro RunTime installed on the PNA, the following examples can be run directly on the PNA:

- [Basic Control](#) of the PNA

For more VEE examples, see the [PNA support website](#).

For more information on Agilent VEE, see www.agilent.com/find/VEE

Basic Control using VEE

This VEE Pro 6.0 example does the following:


- Controls PNA windows and traces.
- Changes stimulus settings.
- Measures all four S parameters.
- Create markers and displays marker readout.

If this Help file is on a PNA and [VEE Pro RunTime is installed](#), then:

1. [Run the BasicControl.vxe example](#)
2. Then click **Open** on the following dialog box to run the program.

Otherwise, you can modify the example program using VEE, [save the VEE BasicControl.vee](#)
[Learn how to run this program as a Macro on the PNA.](#)

The following dialog box will be visible on the PNA when the example program is running.

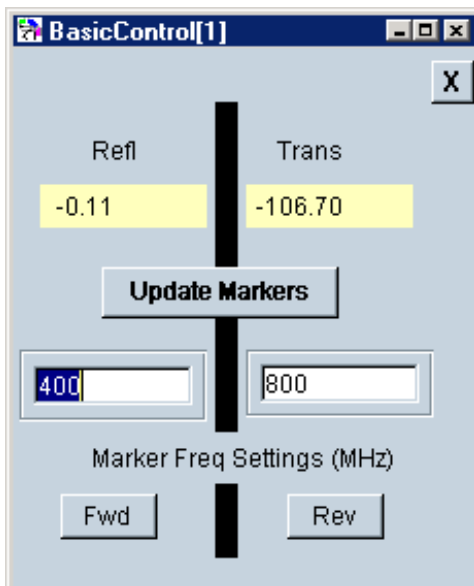

- Click **Fwd** to activate the Forward (S11 and S21) measurements.
- Click **Rev** to activate the Reverse (S22 and S12) measurements.
- Click **Update Markers** to sweep the PNA.
- Type values to change Marker Frequencies.

ECal with Confidence Check using VEE

This VEE Pro 6.0 example performs an ECal and subsequent ECal confidence Check.


If this Help file is on a PNA and [VEE Pro RunTime is installed](#):

- [Run the .vxe example](#)
- Then click **Open** on the following dialog box to run the program.

Or to modify the example program using VEE, [save the VEE BasicControl.vee](#)

[Learn how to run this program as a Macro on the PNA.](#)

The following dialog box will be visible on the PNA when the example program is running.

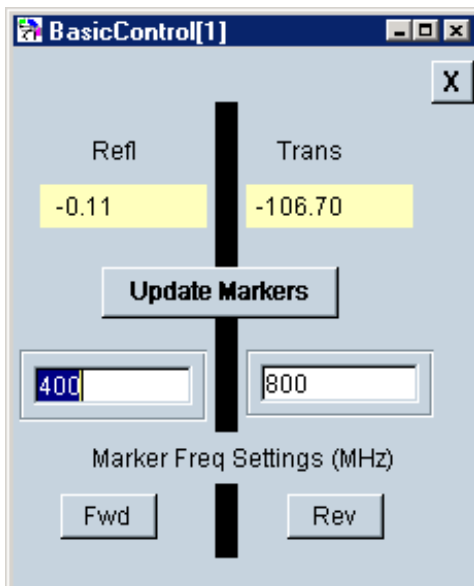

- Click **Fwd** to activate the Forward (S11 and S21) measurements.
- Click **Rev** to activate the Reverse (S22 and S12) measurements.
- Click **Update Markers** to sweep the PNA.
- Type values to change Marker Frequencies.

Interface Control

The Interface Control feature allows you to send remote commands and data to the following PNA rear-panel Interfaces: GPIB, Material Handler I/O, Test Set I/O, and Auxiliary I/O.

- [Overview](#)
- [How to Access Interface Control Settings](#)
- [Interface Control Dialog Box](#)
- [Z5623A H08 Test Set Commands](#)

[Other External Device Control Topics](#)

Overview

The Interface Control feature allows you to send data to control external equipment such as GPIB instruments, a material handler, test set, or other equipment, without needing to create a remote program. The PNA manages the timing and required interface setup. See [Rear Panel Tour](#).

- A unique set of control data can be sent for each channel. In addition, a unique set of control data can be sent before the channel sweep starts, and after the sweep ends.
- Interface Control settings can be saved and recalled from the [Interface Control dialog box](#), or with [Instrument State Save and Recall](#).
- Interface Control settings can be copied to other channels using [Copy Channels](#).
- Control data can only be WRITTEN to the interfaces, NOT READ from the interfaces.
- Control data is sent in the following order. This order cannot be changed.

 
1. [GPIB Interface](#)
2. [Material Handler Interface](#)
3. [Test Set Interface](#)
4. [Aux Interface](#)
5. [Dwell Time](#)

How to access Interface Control settings

Using front-panel HARDKEY [softkey] buttons

Using a mouse with PNA Menus


For [PNA-L](#) and [E836x](#) models



1. [Navigate using MENU/DIALOG](#)

1. Click **Channel**
2. then **Interface Control**

 For [PNA-X](#) models



1. Press TRACE/CHAN
2. then **[Channel]**
3. then **[More]**
4. then **[Interface Control]**

1. Click **Trace/Chan**
2. then **Channel**
3. then **More**
4. then **Interface Control**

Interface Control

☒ Enable Interface Control

Channel **1** Channel Control Label:

Before Sweep Start | After Sweep End

GPIB Commands - BEFORE

☒ Enable Control

Handler I/O Control

☒ Enable Control

Port A (0-255)

Port B (0-255)

Port C (0-15)

Port D (0-15)

Dwell After Command

ms

Test Set I/O Control (addr.data)

☒ Enable Control

Aux I/O Output Voltage

☒ Enable Control

DAC1 (-10V -> +10V)

DAC2 (-10V -> +10V)

Reset All Save Recall OK Cancel Help

Interface Control dialog box help

[See Interface Control Overview \(scroll up\)](#)

An [Instrument Preset](#) will reset all of the fields to their default settings.

Note: If an error is encountered when sending Interface Control data, an error message is displayed on the PNA screen. The [Channel Trigger State](#) is set to Hold. You must fix the condition that caused the error, then change the Channel Trigger State to its original setting.

Enable Interface Control Enables and disables ALL Interface Control communication. When cleared (default setting) Interface Control is disabled and NO data is sent. To send data, the individual interfaces must also be enabled.

Channel Specifies the channel number for dialog settings. Each channel is configured individually. The list box shows the channels that currently have measurements. There must be at least one measurement present in order to make settings.

Channel Label Specifies the label to be displayed on the second status bar at the bottom of the PNA screen. This field is shared with [External Testset control](#). The second status bar is automatically displayed when Interface Control is enabled.



[Learn about the primary status bar.](#)

Before Sweep Start - After Sweep End Tabs

Commands / data for all four interfaces can be sent both Before Sweep Start and After Sweep End. However, they are configured and enabled on separate tabs of the Interface Control dialog box. For example, to send GPIB commands both Before and After a PNA sweep, the Enable Control checkbox must be selected and commands entered on BOTH the Before Sweep Start and After Sweep End tabs.

Before Sweep Start The data is sent BEFORE the first trace on the channel begins sweeping.

After Sweep End The data is sent AFTER the last trace on the channel completes sweeping.

GPIB Commands

Notes:

- While using the rear-panel GPIB port with Interface Control, the PNA must be in GPIB [System Controller mode](#). If the PNA is NOT in System Controller mode, an error message appears AND Interface Control is disabled. To correct this situation,
 1. Put the PNA in System Controller mode, and
 2. Re-enable Interface Control.
- GPIB instruments CAN be connected to the PNA using a [USB/GPIB adapter](#). In this case, the PNA can be in talker-listener mode.
- GPIB Queries are NOT supported.

Enable Control Enables and disables sending commands out the GPIB interface.

Multi-line edit control Each line contains a GPIB command using the following syntax:

address **command**

Where:

address a number between 0 and 31. The PNA will look through all of the GPIB interfaces for an instrument connected to the specified address. If an instrument with that address is not recognized, an error is returned.

command a GPIB command, with or without enclosing quotes. Enclosing quotes are ignored.

Address and command are separated by at least one space.

Commands should be separated by a new line, or carriage return. For example:

```
19 ":init:cont off"  
16 init:imm
```

The front-panel **Enter** key inserts a new line into the field.

The number of GPIB commands that can be entered is limited only by the available memory of the PNA.

See [Z5326A H08 Test Set Commands](#).

Material Handler I/O

Enable Control Enables and disables sending data out the [Material Handler I/O connector](#)

Ports A, B, C, D Sends values to the respective Handler I/O port. Although ports C and D are normally bidirectional, ONLY Output mode is allowed using the Interface Control feature. It cannot read from these, or any other, ports.

Test Set I/O

Note: The PNA has a separate interface for [controlling the E5091A Test Set](#).

Enable Control Enables and disables sending data out the [External Test Set I/O connector](#).

Multi-line edit control Each line contains a Write command using the following syntax:

```
address.value
```

Where:

address any positive integer.

value numeric character. Entries that require **alpha** characters should use the [GPIO interface](#).

Address and value are separated by a period. For example:

```
18.2  
27.3
```

Entries should be separated by a new line, or carriage return. The PNA front-panel **Enter** key inserts a new line into the field.

All entries are sent out the Test Set I/O port using the [WriteData Method](#).

The number of entries is limited only by the available memory of the PNA.

Aux I/O

Enable Control Enables and disables sending data out the [Auxiliary I/O connector](#).

DAC1, DAC2 Sets voltages on the Aux I/O connector pins 2 (DAC1) and pin 3 (DAC2).

Dwell After Command Specifies a wait time, in milliseconds, after all commands to all interfaces are sent. Any positive integer is allowed. This is used to allow all external devices to settle before beginning a measurement. An erratic trace could indicate that more settling time is necessary.

Reset All Sets ALL fields on ALL channels to their default values.

Save and Recall Saves and recalls the contents of this dialog box. If the Interface Control dialog box is populated with settings during an [Instrument State Save](#), the settings are automatically recalled with the Instrument State settings.

Interface control uses an *.xml file type. An example file is stored on the PNA hard drive. You can recall it into the dialog, or you can open and edit it with a word processor, such as Word Pad.

OK Applies the settings and closes the dialog box.

Cancel Does not apply changes that were made, and closes the dialog box.

Z5623A H08 Test Set Commands

The following table lists the commands that are used to control the popular Agilent Z5623A H08 Test Set. These commands can be entered into the [GPIB Interface](#) control.

Connection Path	Test Set Command
Reflection to Port 1	refl_01
Reflection to Port 2	refl_02
Reflection to Port 3	refl_03
Reflection to Port 4	refl_04
Reflection to Port 5	refl_05
Reflection to Port 6	refl_06
Reflection to Port 7	refl_07
Reflection to Port 8	refl_08
Transmission to Port 1	tran_01
Transmission to Port 2	tran_02
Transmission to Port 3	tran_03
Transmission to Port 4	tran_04
Transmission to Port 5	tran_05
Transmission to Port 6	tran_06
Transmission to Port 7	tran_07
Transmission to Port 8	tran_08
Reset	*rst
Reflection Termination	*r_term
Transmission Termination	*t_term
All Termination	*all_term

Auxiliary I/O Connector

General Description

This DB-25 male connector provides a variety of analog I/O, digital I/O, timing I/O, and supply lines. You can change the settings on the Auxiliary IO connector through [SCPI](#) and [COM](#) programming commands. The settings are NOT accessible through the front-panel keys or display menu.

Note: This connector does NOT exist on the PNA-X model.

Note: The AUX IO configuration settings REMAIN after an [Instrument Preset](#) and [Hibernation](#). However, Preset will clear the [DAC](#) values. The settings will revert to their default settings ONLY after the PNA is restarted, or until they are changed by you. AUX IO settings are [saved and recalled with Instrument State](#).



Pin	Name	Description
1	ACOM	Ground reference for analog signals
2	Analog Out 2	-10 to +10Vdc output, 10mA max
3	Analog Out 1	-10 to +10Vdc output, 10mA max
4	no connect	for future enhancements
5	DCOM	Ground reference for digital signals
6	reserved	for future enhancements
7	reserved	for future enhancements
8	reserved	for future enhancements
9	+5V	+5Vdc output, 100mA max.
10	Pass/Fail Write Strobe	Indicates pass/fail line is valid (active low)
11	Sweep End	Indicates sweep is done (programmable modes)
12	Pass/Fail	Indicates pass/fail (programmable logic, modes and scope)
13	Output Port Write Strobe	Writes I/O port data (active low)
14	Analog In	-10 to +10VDC analog input
15	ACOM	Ground reference for analog signals
16	Power Button In	Grounding replicates front panel power button press

17	DCOM	Ground reference for digital signals
18	Ready for Trigger	Indicates ready for external trigger (active low)
19	External Trigger In	Measurement trigger input (programmable to be active high or low)
20	Footswitch In	Active low input latches a user-readable status bit.
21	+22V	+22Vdc output, 100mA max.
22	In/Out port C0	General purpose input / output
23	In/Out port C1	General purpose input / output
24	In/Out port C2	General purpose input / output
25	In/Out port C3	General purpose input / output

ACOM (pins 1, 15)

Description

Analog common (ground) - To be used with the Analog Out and Analog In lines.

ACOM and DCOM are connected to system ground at a star ground point inside the analyzer.

Analog Out 1, 2 (pins 2, 3)

Description

Two analog outputs programmable to +/-10V; $I_{out} < 10\text{mA}$; $R_{out} = 100\text{ ohms}$

12-bit DACs with voltage resolution of approximately 5mV/count.

The DACs are set to constant values using [SCPI](#) or [COM](#), and can be read using [SCPI](#) or [COM](#) commands.

Preset state for both pins is 0 volts.

HW Details

Looking into this output pin is a 100-ohm series resistor followed by two diodes tied to +/-15V for static protection, then the output or an op-amp.

The voltage output is provided by a 12-bit DAC with an op amp buffer.

Specifics:

- Maximum output current = 10mA
- Settling time = 3us

Timing

The DACs are set after the last data point is measured, during retrace. If the analyzer is in single sweep mode, the DACs are set as part of the presweep process, before the sweep is triggered.

DCOM (pins 5, 17)

Description

Digital common (ground).

Used with the digital input and output lines.

ACOM and DCOM are connected to system ground at a star ground point inside the analyzer.

Pins 6, 7, 8

Description

Reserved

+5V (pin 9)

Description

+5V nominal output (100mA max).

Protected by self-healing fuse:

Pass/Fail Write Strobe (pin 10)

Description

See [Handler IO connector](#).

Sweep End (pin 11)

Description

See [Handler IO connector](#).

Pass/Fail (pin 12)

Description

See [Handler IO connector](#).

Output Port Write Strobe (pin 13)

Description

See [Handler IO connector](#).

Analog In (pin 14)

Description

Analog input, +/-10V range, Rin=100k ohm

Bandwidth = 40kHz (2-pole lowpass filter).

This analog input may be read using the [SCPI](#) or [COM](#) commands.

HW Details

Looking into this pin there is 1k-ohm series resistor followed by 100k-ohm resistor to ground, static protection diodes after the 1k resistor limit the signal to +/-15V, then a high impedance buffer and active filter limiting the bandwidth to 40kHz with a lowpass filter.

Power Button In (pin 16)

Description

Short this pin to ground to replicate a front panel power button key press.

HW Details

Looking into the pin there is a 215-ohm series resistor followed by a 10k pull-up to the 3V standby supply, static protection diodes to the 0V/5V and then connects to the front panel power key circuit.

CAUTION: Because this line is internally pulled up to 3V, it should not be driven by a TTL driver.

Timing

Grounding this line for 1us to 2 seconds will simulate pressing the front panel power button.

Grounding this line for >4 seconds will perform a hard reset (similar to a personal computer) and is not recommended.

Ready for Trigger (pin 18)

Description

TTL output.

Active Low signal indicates that system is ready for an external trigger.

Remains High if system is not in External Trigger mode.

Goes High after an External Trigger is acknowledged.

Goes Low after the system has finished with its measurements, the source has been set up, and the next data point is ready to be measured.

HW Details

Looking into this pin there is a 215-ohm series resistor followed by a 10k pullup, diodes to 0V/5V for static protection, then the output of an "ABT" TTL buffer.

This line is enabled only when the analyzer is in External Trigger mode.

Refer to External Trigger In (following pin) for more information.

Timing

Refer to [External Trigger In](#) (following pin)

External Trigger In (pin 19)

Description

This input accepts level trigger signals (High / Low) on all PNA models, or edge trigger signals on some PNA models.

The external trigger configuration is set from the front panel, [SCPI](#) or [COM](#).

For more information, see [External triggering](#).


A single trigger is achieved by asserting the external trigger for a period from 1us to 50us. Continuous triggering is achieved by holding the external trigger in the "asserted" mode (either Low or High).

HW Details

Looking into this pin is a 215-ohm series resistor followed by a 4.64k pullup, 1000pF to ground and then a "FAST" TTL buffer input.

Timing

A level trigger width should be between 1us and 50us.

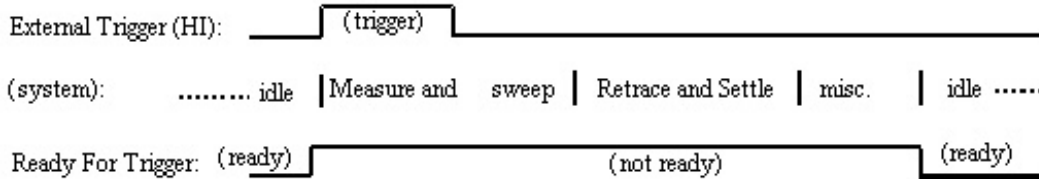

Footswitch In (pin 20)

Description

TTL input.

A Low level input such as shorting this line to ground using a footswitch (where the input stays low for >1us) will be latched.

The latched status may be read using the [SCPI](#) or [COM](#) commands.

Only one footswitch press can be latched (remembered) by the system.

Reading the latch status will reset it if Footswitch In has returned to a high level.

HW Details

Looking into this pin is a 215-ohm series resistor followed by a 4.64k pullup to 5V and 1000pF to ground. This line is an input to a "FAST" TTL buffer.

Timing

Footswitch In must be Low for at least 1us.

+22V (pin 21)

Description

+22V nominal output (100mA max).

Protected by self-healing fuse.

In/Out Port C0-C3 (pins 22-25)

Description

See [Handler IO connector](#)

External Test Set I/O Connector

General Description

This DB-25 female connector is used to control external test sets. The external test set bus consists of 13 multiplexed address and data lines, three control lines, and an open-collector interrupt line. The Test Set IO is not compatible with the 8753 test sets.


You can change the settings on the External Test Set IO connector through [SCPI](#) and [COM](#) programming commands. The settings are NOT accessible through the front-panel keys or display menu.

Notes:

- The External Test Set pin settings are NOT affected by [Instrument State Save/Recall](#) or [Instrument Preset](#).
- At PNA Power Up and return from Hibernation, the External Test Set bus data lines, address lines, and control lines are set HIGH, and no strobe lines are pulsed.

Caution: Do not mistake this connector with a Parallel Printer port. A printer may be damaged if connected to this port.

Other External Device Control Topics

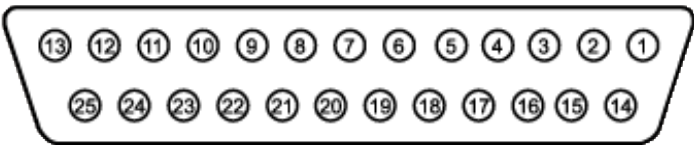

Pin	Name	Description
1	SEL0	Test set select bit 0; tied to GND
2	Sweep Holdoff In	TTL input - state may be read with SCPI or COM command
3	AD12	Address and latched data
4	AD10	Address and latched data
5	AD9	Address and latched data
6	AD8	Address and latched data
7	GND	0V
8	LAS	TTL output Low = Address Strobe

9	AD4	Address and latched data
10	AD3	Address and latched data
11	AD2	Address and latched data
12	GND	0V
13	Interrupt In	TTL input - state may be read with a SCPI or COM command
14	No connect	CAUTION: Older PNAs have +22v on this line; this will damage a printer.
15	SEL1	Test set select bit 1; tied to GND
16	SEL2	Test set select bit 2; tied to GND
17	AD11	Address and latched data
18	SEL3	Test set select bit 3; tied to GND
19	AD7	Address and latched data
20	AD6	Address and latched data
21	AD5	Address and latched data
22	AD0	Address and latched data
23	AD1	Address and latched data
24	LDS	TTL output - active low data strobe
25	RLW	TTL output - high-read, low write

SEL0-SEL3 (pins 1,15,16,18)

Description

Selects addresses of test sets that are "daisy chained" to this port. The select code is set to zero at the PNA connector and is incremented by one as it goes through each successive external test set. Therefore, the first test set in the chain has address zero and so on, for up to 16 test sets.

HW Details

Connected to ground inside the PNA.

Timing

None

Sweep Holdoff In (pin 2)

Description

Input line used by the test set for holding off a sweep. Holding off a sweep is one way of introducing a delay that allows an external device to settle before the PNA starts taking data. You must write a program that will query the line and perform the delay. The program needs to query the line and keep PNA from sweeping while the line remains low. When a subsequent query detects that the line went high the program would then trigger the PNA to start the sweep.

Use either Single or External trigger mode to control the PNA sweep.

HW Details

This pin has a series 215-ohms resistor followed by 4.7k-ohm pull-up and then an "ABT" TTL buffered register.

Timing

This input is not latched by the PNA hardware. Therefore the input level must be held at the desired state by the test set until it's read by your program.

AD0-AD12 (pins 3-6, 9-11, 17, 19-23)

Description

Thirteen lines are used to output data addresses or input / output data. Several [SCPI](#) and [COM](#) commands are available for reading and writing to these lines. You can choose to use commands where the PNA provides the appropriate timing signals needed for strobing the addresses and data. Or you can choose to control the timing signal directly. The timing signals are RLW, LAS and LDS. If you decide to do direct control refer to the corresponding SCPI and COM command details. Close attention to detail is needed to insure the desired results.

After a write command, lines AD0-AD12 are left in the state they were programmed. Default setting for Mode is Read / Input).

After a read command, lines AD0-AD12 are left in input mode. While in this mode an external test set attached to the IO is free to set the level on each line.


HW Details

Each of these I/O pins has a series 215-ohm resistor followed by 4.7k-ohm pull-up resistor.


Write/Read is implemented by an output tri-state TTL buffer / latch for latching and enabling write data in parallel with a TTL input buffer for reading.

Timing

Output Address and data setup and hold times are 1us minimum.

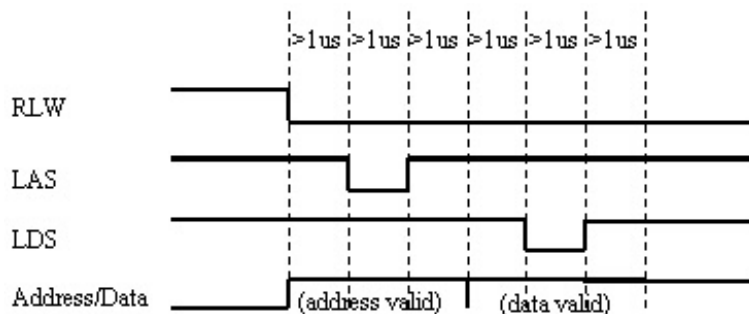

Address & Data I/O Write

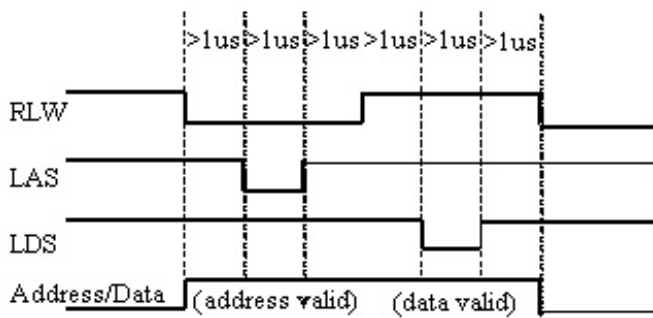

Address & Data I/O Read - Data must be valid for 1us before and after strobe

GND (pins 7, 12)

Description

Two ground pins used as ground references by the test set.

HW Details

Connected to digital ground.

Timing

None.

LAS (Low Address Strobe) (pin 8)

Description

This line has two behaviors that are command dependent. Refer to the [SCPI](#) and [COM](#) commands for further details.

In one behavior LAS is one of the lines used by the PNA to provide appropriate timing for writing Address and Data to the Test Set. In this case LAS is controlled automatically by the PNA and is intended to be used as the strobe for the Address. When LAS is low, lines AD0 - AD12 represent the Address. LAS will return to its normally high state when the transaction is finished.

In the second behavior the PNA will NOT provide appropriate timing. In this case LAS is controlled directly by the user through a [SCPI](#) or [COM](#) command. When the transaction is finished LAS is left set to the state it was programmed to until another command changes it. (Default for LAS is TTL High).

HW Details

This output pin is driven by a TTL latched buffer with a series 215-ohm resistor followed by 2.15k-ohm pull-up.

Timing

Strobe length, setup and hold times are all 1us minimum.

See the description for [AD0-AD12](#) for more timing information.

Interrupt In (pin 13)

Description

Query this line with a [SCPI](#) or [COM](#) command.

HW Details

This line is a non-latched TTL input, has series 215-ohms followed by 4.64k-ohm pullup.

Timing

The Test Set must maintain at the desired TTL level until its read.

(pin 14) No Connect (previously +22V)

WARNING: Early versions of the PNA had +22v on this pin. **Connecting a printer to this port will usually damage the printer.**

Description

+22V, 100mA max. The 25-pin D connector is the same as a computer parallel printer port connector. Pin (14) corresponds to a printer's "autofeed" line. **Connecting a printer to this port will damage the printer if +22v is present** since printers requires less than 5V on all control lines.

HW Details

No connect

Timing

None

LDS (Low Data Strobe) (pin 24)

Description

This line has two behaviors that are command dependent. Refer to the External Test Set IO SCPI and COM commands for further details. (Default setting for LDS is TTL High)

In one behavior LDS is one of lines used by the PNA to provide appropriate timing for writing Address and Data to the Test Set. In this case LDS is controlled automatically by the PNA and is intended to be used as the strobe for the Data. When LDS is low, lines AD0 - AD12 represents Data. LDS will return to its normally high state when the transaction is finished.

In the second behavior the PNA will NOT provide appropriate timing. In this case LDS is controlled directly by the user through a SCPI or COM command. When the transaction is finished the LDS is left set to the state it was programmed to.

HW Details

This output pin is driven by a TTL latched buffer with a series 215-ohm resistor followed by 2.15k-ohm pull-up.

Timing

Strobe length, setup and hold times are all 1us minimum.

See the description for [AD0-AD12](#) for more timing information.

RLW (pin 25)

Description

This line is the output for the Read Write signal. It has two behaviors that are command dependent. Refer to the External Test Set IO SCPI and COM commands for further details. (Default setting for RLW is TTL High)

In one behavior RWL is controlled automatically by the PNA during a Read Write operation. When RLW is low, lines AD0 - AD12 represent output Data. When RLW is high, the lines represent input Data.

In the second behavior the PNA does NOT provide the timing. The user must control it directly through the SCPI or COM command. In this case the line is left set to the state it was programmed to.

HW Details

This pin is a TTL latched output with a series 215-ohm resistor followed by 2.15k-ohm pull-up resistor.

Timing

Strobe length, setup and hold times are all 1us minimum.

See the description for [AD0-AD12](#) for more timing information.

Material Handler I/O Connector

This [rectangular 36-pin female connector](#) provides communication signals between the PNA and a material parts handler. You can change the settings on the Material Handler IO connector using [SCPI](#) and [COM](#) commands. The settings are NOT accessible through the front-panel keys or display menu.

- [Overview - Controlling a Material Handler](#)
- [Pin Assignments](#)
- [Pin Descriptions](#)
- [Timing Diagrams](#)
- [Input Output Electrical Characteristics](#)

Note: On early PNAs this connector is labeled "GPIO". It is covered to indicate that the connector is not functional.

Overview - Controlling a Material Handler

The PNA is capable of interacting with an external material handler or part handler. This allows the PNA to be used in an automated test environment, where devices to be tested are inserted into a test fixture by a part handler, and sorted into pass/fail bins by the handler after testing is complete. By connecting the part handler to the PNA Auxiliary or Material Handler I/O ports, the PNA and part handler can synchronize their activities in a way that makes automated testing possible.


PNA and Part Handler Preparation

1. [Define the measurements](#) you want to make.
2. [Define limits](#) for each of the measurements.
3. Configure the PNAs Material Handler port so that it is compatible with your part handler. This usually involves setting the [handler logic](#), [pass/fail logic](#), [pass/fail scope](#), and [pass/fail mode](#). These settings are made remotely using [SCPI](#) or [COM](#) commands.
4. Use a cable to connect the PNA to your part handler.
5. Put the PNA in [External Trigger](#) mode.
6. Load parts in handler per manufacturer instructions.

Note: The Material Handler configuration settings REMAIN after an [Instrument Preset](#) and [Hibernation](#). The settings will revert to their default settings ONLY after the PNA is restarted, or until they are changed by you. Material Handler settings are [saved and recalled with Instrument State](#).

Flow Diagram

The following diagram and descriptions summarizes the events that occur during automated testing. 'DUT' refers to Device Under Test.

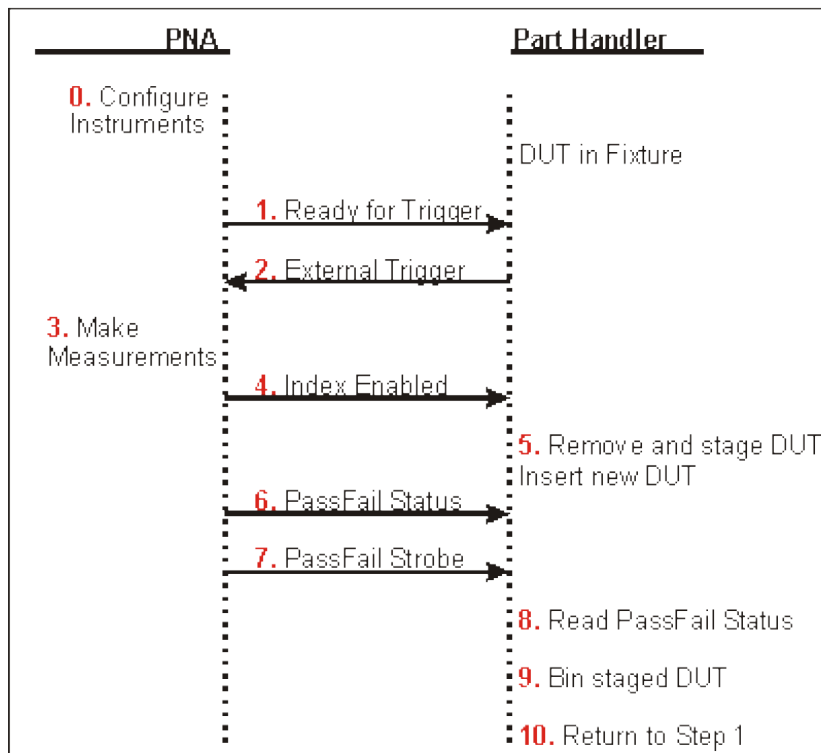


Text Descriptions

0. (Optional). The PNA sends values out the Material Handler and/or [Auxiliary I/O](#) connectors to configure external instruments. The A,B,C, and D ports of the Material Handler can be used to control devices used in testing, such as step attenuators, part handlers, or even the DUT itself. Also, the DAC1 and DAC2 lines on the Aux I/O connector can be used to provide bias voltages for devices and instruments. If you wish to use the Material Handler or Aux connectors for testing, you will need to write a program to send values out the various lines and ports, as there is no activity on these lines by default.
1. The part handler receives a [Ready for Trigger](#) signal from the PNA. This indicates that the PNA is properly configured and ready to take a measurement.
2. The part handler sends an [External Trigger](#) signal to the PNA. This signals that the part handler has settled, and allows the PNA to begin taking measurements.
3. The PNA takes measurements on all triggerable channels.
4. The [Index line](#) on the material handler goes to a Low state, which means that all required data has been collected by the PNA.
5. The part handler removes the DUT from the test fixture, and inserts a new DUT into the fixture. This operation is often referred to as part handler indexing. The device just tested is staged (removed from the fixture and prepared for binning), and the next part to be tested is put into the fixture. The removed DUT cannot be assigned to a Pass/Fail bin yet, as the Pass/Fail status is not available.
6. The PNA sends the [Pass/Fail Status](#).
7. The PNA sends the [Pass/Fail Strobe](#) meaning that the Pass/Fail status has been determined.

8. The part handler reads the Pass/Fail Status line.
9. The part handler bins the staged part based on the Pass/Fail Status.
10. The test process repeats at step 1, waiting for Ready for Trigger from the PNA.

 Material Handler IO Pin Assignments



There are three different Handler IO pin assignment configurations depending on the PNA model:

- **Type 1** - All E835xA, E880xA, N338xA models. You can change the pinout configuration to Type 2 on these models. This requires opening the instrument and changing a connector internally. Refer to the procedure in the Service Guide, Chapter 7. You can download the Service Guide for your PNA model from our website: <http://na.tm.agilent.com/pna> **Caution:** Changing this connection should be done by qualified service personnel.
- **Type 2** - All PNA models EXCEPT E835xA, E880xA, N338xA models and N5230 Opt 240, 245.
- **Type 3** - N5242A (PNA-X) and N5230 Options: 020,025,120,125, 240, 245

[See PNA models and options.](#)

Shaded/bold indicates changes from Type 1

Note: A slash (/) preceding the signal names indicates that the signal uses negative (active low) logic. A low pulse is a logical 1.

Pin	Type 1	Type 2	Type 3
1	Ground	Ground	Ground
2	/ INPUT1	/ INPUT1	/ INPUT1
3	/ OUTPUT1	/ OUTPUT1	/ OUTPUT1
4	/ OUTPUT2	/ OUTPUT2	/ OUTPUT2
5	/ Output port A0	/ Output port A0	/ Output port A0
6	/ Output port A1	/ Output port A1	/ Output port A1
7	/ Output port A2	/ Output port A2	/ Output port A2
8	/ Output port A3	/ Output port A3	/ Output port A3
9	/ Output port A4	/ Output port A4	/ Output port A4
10	/ Output port A5	/ Output port A5	/ Output port A5

11	/ Output port A6	/ Output port A6	/ Output port A6
12	/ Output port A7	/ Output port A7	/ Output port A7
13	/ Output port B0	/ Output port B0	/ Output port B0
14	/ Output port B1	/ Output port B1	/ Output port B1
15	/ Output port B2	/ Output port B2	/ Output port B2
16	/ Output port B3	/ Output port B3	/ Output port B3
17	/ Output port B4	/ Output port B4	/ Output port B4
18	no connect	/ Output port B5	/ Ext. Trigger
19	/ Output port B5	/ Output port B6	/ Output port B5
20	/ Output port B6	/ Output port B7	/ Output port B6 -or / Index Signal Learn more
21	/ Output port B7	/ In/Out port C0	/ Output port B7 or / Ready for Trigger Learn more
22	/ In/Out port C0	/ In/Out port C1	/ In/Out port C0
23	/ In/Out port C1	/ In/Out port C2	/ In/Out port C1
24	/ In/Out port C2	/ In/Out port C3	/ In/Out port C2
25	/ In/Out port C3	/ In/Out port D0	/ In/Out port C3
26	/ In/Out port D0	/ In/Out port D1	/ In/Out port D0
27	/ In/Out port D1	/ In/Out port D2	/ In/Out port D1
28	/ In/Out port D2	/ In/Out port D3	/ In/Out port D2
29	/ In/Out port D3	Port C Status	/ In/Out port D3
30	Port C Status	Port D Status	Port C Status
31	Port D Status	/ Output Port Write Strobe	Port D Status
32	/ Output Port Write Strobe	no connect	/ Output Port Write Strobe
33	/ Pass/Fail	/ Pass/Fail	/ Pass/Fail
34	/ Sweep End	+5V	/ Sweep End

35	+5V	/ Sweep End	+5V
36	/ Pass/Fail Write Strobe	/ Pass/Fail Write Strobe	/ Pass/Fail Write Strobe

Pin Descriptions

Input1

When this Input line receives a Low pulse from the material handler, data is latched on the [OUTPUT1 and OUTPUT2](#) lines. See [OUTPUT1|2 Data Output Write Timing](#)

Note: [Type 1 and Type 2 Behavior](#): The Input line responds to a High (rising edge) pulse.

The Input Line activity can be read:

SCPI	COM
CONTrol:HANDler:INPut?	get_Input1 Method

Output1, Output2

See [OUTPUT1|2 Data Output Write Timing](#)

The **current** state of these latched TTL outputs may be set High or Low (Default setting) using the (non-user) [SCPI put_Output \(COM\)](#) commands.

The **next** state (following a negative edge on the INPUT1 line) may be pre-loaded to High or Low (Default setting) using the user commands.

For example, on the next negative pulse on the INPUT1 line, you want the OUTPUT1 line to go from 0 to 1. To do this:

```

CONT:HAND:OUTP1:DATA 0  'Force the OUTPUT1 line to 0
CONT:HAND:OUTP1:USER 1  'Set the OUTPUT1:USER buffer to 1, indicating the next state

```

	SCPI	COM
Write User Data	CONT:HAND:OUTP<pin>:USER	put_Output Method
Read last value written	CONT:HAND:OUTP<pin>:USER	get_Output Method.
Write non-user data	CONT:HAND:OUTP<pin>:DATA	put_Output Method
Read last value written	CONT:HAND:OUTP<pin>:DATA	get_Output Method

Output Ports A and B

These two general purpose, 8-bit output ports are used to write data to the material handler. When any line changes state, all output lines are latched to the I/O connector as the [Output Write Strobe](#) goes Low.

The default state for data is Low.

[See Data Output Write Timing Diagram](#)

Set Port Logic:

The logic for the data lines can be set to either: Positive (1 = High) or Negative (1 = Low). This setting affects all data ports. They cannot be set independently.

SCPI

[CONTrol:HANDler:LOGic](#)

COM

[PortLogic Property](#)

Combine to read or write data to Port F:

Ports A and B can be virtually combined to write data to one 16-bit I/O port F.

SCPI

[CONTrol:HANDler:F <num>](#)

COM

[put Port \(F\)](#)

Input/Output Ports C and D

These two general purpose 4-bit Input/Output ports are used to write data (Output) or read data (Input). These lines could be used to write to an external device such as a step attenuator.

When any line changes state, all output lines are latched to the I/O connector as the [Output Write Strobe](#) goes Low. [See Data Output Write Timing](#)

The four lines of Port C are connected internally to the [Auxiliary IO](#) connector.

Set Input | Output Mode:

Each port may be independently defined as Output or Input.

SCPI

[CONTrol:HANDler:C:MODE](#)

[CONTrol:HANDler:D:MODE](#)

COM

[PortMode Property](#)

Set Port Logic:

The logic for the data lines can be set to either: Positive (1 = High) or Negative (1 = Low). This setting affects all data ports. They cannot be set independently.

SCPI

[CONTrol:HANDler:LOGic](#)

COM

[PortLogic Property](#)

Read or write data:

Ports C and D can be virtually combined to read or write data to one 8-bit I/O port **E**. When combined, **both** C and D ports must be set to either INPUT or OUTPUT mode.

SCPI

[CONTrol:HANDler:<port>\[:DATA\]>](#)

COM

[get_Port\(x\)](#)

[put_Port \(x\)](#)

Port C Status, Port D Status

These two output lines indicate the Read / Write mode of the C and D ports.

- A Low level indicates that the associated port is in **INPUT** mode (read only).
- A High level indicates that the associated port is in **OUTPUT** mode (write only).

These logic of these status outputs cannot be changed.

See [Input/Output Ports C and D](#) to learn how to set I/O Mode

[See Data Output Write Timing](#)

Output Port Write Strobe

This Output line goes Low to write data from [Ports A and B](#) and [Ports C and D](#) when a change is detected on any of the data lines.

These logic of this strobe output cannot be changed.

This line is shared with Auxiliary IO connector.

[See Data Output Write Timing](#)

External Trigger

When trigger source is set to external, this Input line accepts a trigger signal from the material handler. This usually means that a part is in place and ready to be tested.

[See Trigger Timing Diagram](#)

Index

A Low signal on this Output line indicates to the material handler that the measurement is complete. This usually means that the handler can connect the next device. However, measurement data is not available until data is calculated. [See Trigger Timing Diagram](#).

Set Function:

This line also serves as a data line. Set the function using the following commands:

SCPI

[CONTrol:HANDler:INDEX:STATe](#)

COM

[IndexState](#)

Ready for Trigger

When this output line goes low, it indicates to the material handler that the PNA is ready for a trigger signal.

[See Trigger Timing Diagram](#)

[See Pass/Fail Timing Diagram](#)

Set Function:

This line also serves as a data line. Set the function using the following commands:

SCPI

[CONTrol:HANDler:RTRigger:STATe](#)

COM

[ReadyForTriggerState](#)

Pass/Fail State

This Output line indicates to the handler whether the limit test has passed or failed.

Pass/Fail state is valid only when the [limit test](#) function is ON and while [Pass/Fail strobe](#) line is Low. [See Pass/Fail Timing Diagram](#)

This line is shared with the Auxiliary IO connector.

Set Pass / Fail Logic:

- Positive Logic: High=Pass, Low=Fail. (Default setting)
- Negative Logic: High=Fail, Low=Pass.

SCPI

[CONTrol:HANDler:PASSfail:LOGic](#)

COM

[PassFailLogic Property](#)

Set Default Conditions:

- **PASS**- the line stays in PASS state. When a device fails, then the line goes to fail after the Sweep End line is asserted.
- **FAIL**- the line stays in FAIL state. When a device passes, then the line goes to PASS state after the Sweep End line is asserted.
- **No Wait**- the line stays in PASS state. When a device fails, then the line goes to fail IMMEDIATELY. (Default setting)

SCPI

[CONTrol:HANDler:PASSfail:MODE](#)

COM

[PassFailMode Property](#)

Set Pass / Fail Scope:

- **Channel scope**: The line resets to the default state after the measurements on a channel have completed.
- **Global scope**: The line resets to the default state after the measurements on all triggerable channels have completed. (Default setting)

SCPI

[CONTrol:HANDler:PASSfail:SCOPE](#)

COM

[PassFailScope Property](#)

Pass/Fail Write Strobe

A Low pulse indicates that [Pass/Fail](#) line is valid and the Pass / Fail State is output to the material handler.

This line is shared with the Auxiliary IO connector.

The Pass/Fail Strobe is fixed in duration and timing. However, when the strobe occurs depends on the Pass/Fail Mode and Pass/Fail Scope (Channel or Global) settings. [See Pass/Fail State](#)

[See Pass/Fail Timing Diagram](#)

+5V

+5V nominal output (100mA max).

Protected by self-healing fuse.

Sweep End

This output line indicates the status of the PNA sweep. The sweep includes sweeping the source and taking data.

- **Low** (falling edge) indicates that the specified sweep event has finished. This does NOT indicate that all calculations have finished.
- **High** indicates that the specified sweep event is active.

[See Trigger Timing Diagram](#)

This line is shared with the Auxiliary IO connector.

Set Sweep Event Mode:

- **Sweep**: indicates that a single source sweep has finished. (Default setting)
- **Channel**: indicates that a single channel has finished.
- **Global**: indicates that all enabled channels have finished.

SCPI


[CONTrol:HANDler:SWEepend](#)

COM

[SweepEndMode Property](#)

Timing Diagrams

Trigger Timing

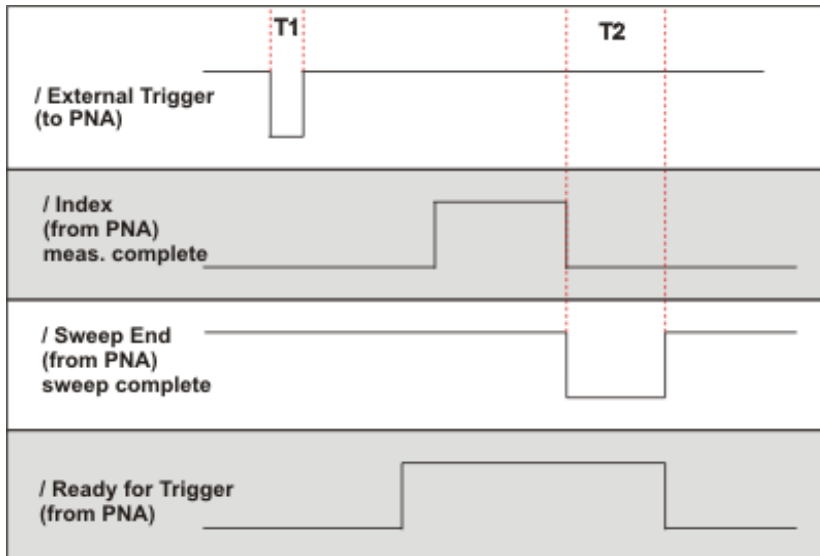


All signals are active low.

T1 = 1 ms External Trigger pulse width

T2 > 10ms Sweep End pulse width (both High and Low)


Pass / Fail Timing

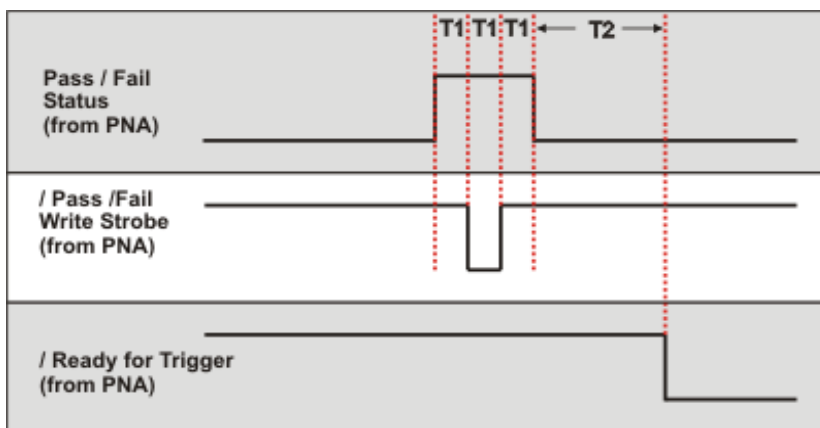

T1 = 1 ms Pulse width and response time of Pass / Fail Strobe

T2 > 10 ms Ready for Trigger lag


Ports A-F Data Output Write Timing

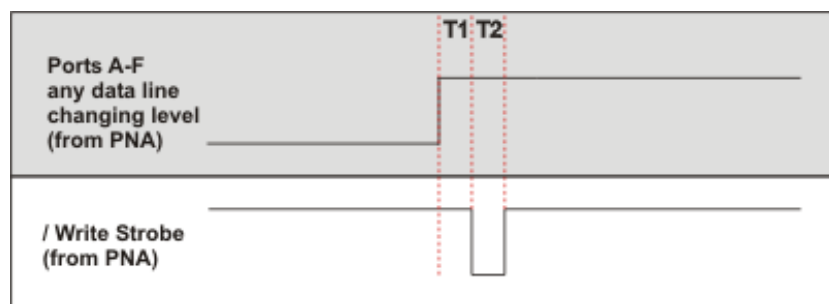

T1 = 1 ns Write Strobe response time

T2 = 1 ns Write Strobe pulse width

OUTPUT1|2 Data Output Write Timing

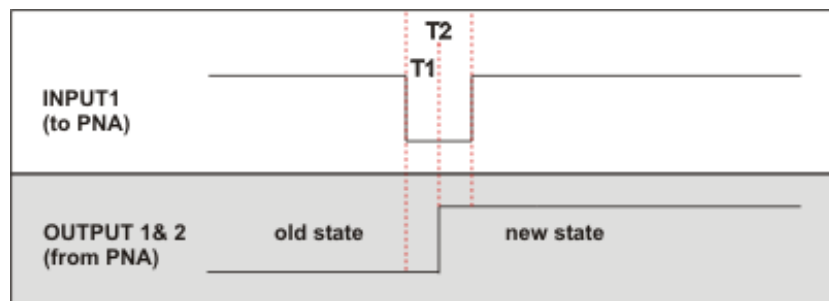

The old state to new state transition can be either low to high (as shown) or high to low.

T1 = .6 ns [Output1|2](#) response time

T2 = 1 ns [Input1](#) Strobe pulse width

Input / Output Electrical Characteristics


All Material Handler I/O Input and Output lines are TTL compatible.

Input and Input/Output lines

Lines carrying information IN (or bidirectional) to the PNA from the material handler.

Maximum Input Voltages:	-0.5 V to 5.5 V
TTL High level:	2.0 V to 5.0 V
TTL Low level:	0 V to 0.5 V

PNA **Input** and **Input/Output** Circuit Diagram

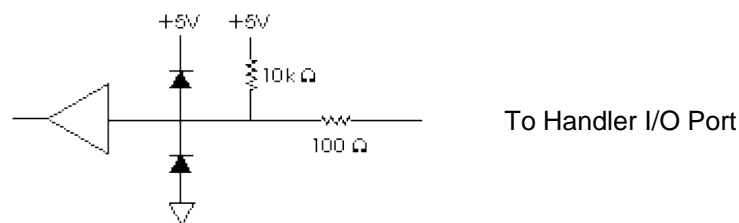


Note: The [INPUT1](#) line does NOT have the 10K pullup resistor.

Output Lines

Lines carrying information OUT of the PNA to the material handler.

Maximum Output Current:		-10 mA to 10 mA
Output Current	TTL High level:	-5 mA
	TTL Low level:	3 mA
Output Voltage	TTL High level:	2.0 V to 3.3 V
	TTL Low level:	0 V to 0.8 V

PNA **Output** Circuit Diagram

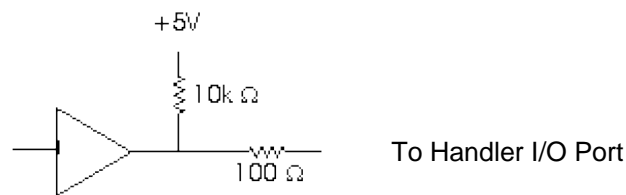


Last modified:

Nov 3, 2006 Added link from pin 20

Pulse I/O Connector

New with the PNA-X, the 15 pin D connector provides access to Pulse Modulators and Generators.

- [See IF Path Configuration block diagram](#), which includes the Pulse Modulators and Generators.
- [See the Pulsed Application \(Opt H08\)](#)

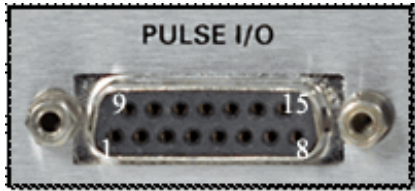

Pin	Name	Description
1	IFGateAIn	IF pulse gate input A (TTL)
2	IFGateBIn	IF pulse gate input B (TTL)
3	IFGateCIn	IF pulse gate input C (TTL)
4	IFGateDIn	IF pulse gate input D (TTL)
5	IFGateRIn	IF pulse gate input R (TTL)
6	DCOM	Ground
7	PulseSyncIn	Pulse gen. synchronization trigger input (TTL)
8	RFPulseModIn	RF source pulse modulation drive input (TTL)
9	DCOM	Ground
10	Pulse1Out	Hardwired pulse train output #1 (TTL)
11	Pulse2Out	Hardwired pulse train output #2 (TTL)
12	Pulse3Out	Hardwired pulse train output #3 (TTL)
13	Pulse4Out	Hardwired pulse train output #4 (TTL)
14	N.C.	No connect -- for future use
15	DCOM	Ground

See Pulse [SCPI](#) and [COM](#) commands

N1966A Pulse I/O Adapter



This D connector to RF adapter makes accessing the Pulse I/O connector more convenient.


Last Modified:

16-Jul-2007 Clarification

18-Jan-2007 MX New topic

Power I/O Connector

New on the PNA-X, the 9-pin D connector replaces much of the functionality of the [AUX I/O connector](#) on older PNA models. [See PNA-X Rear Panel](#)

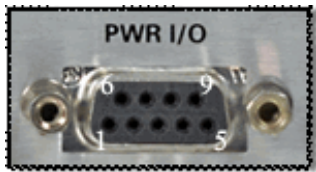

Pin	Name	Description
1	+15V	+15V @ 400 mA
2	-15V	-15V @ 400 mA
3	AnalogOut1	Analog Output Voltage Programmable +/-10V @100 mA out Nominally 0 ohms 2.44mV typical resolution 1MHz BW Read and write voltage programmatically using: <ul style="list-style-type: none">• CONT:AUX:OUTP1:VOLT (SCPI - read and write)• get OutputVoltage Method (COM - read)• put OutputVoltage Method (COM - write)
4	AnalogOut2	Analog Output Voltage Programmable +/-10V @100 mA out Nominally 0 ohms 2.44mV typical resolution 1MHz BW Read and write voltage programmatically using: <ul style="list-style-type: none">• CONT:AUX:OUTP2:VOLT (SCPI - read and write)• get OutputVoltage Method (COM - read)• put OutputVoltage Method (COM - write)
5	ACOM	System ground
6	GndSense	Ground sense for Analog In & Out

		<p>Connected with 51.1-ohm to ACOM</p> <p>Read voltage programmatically using:</p> <ul style="list-style-type: none"> • get InputVoltageEX Method (COM) • CONT:AUX:OUTP3:VOLT (SCPI)
7	AnalogIn1	<p>Analog input:</p> <p>+/-10V @ 1.22mV typical resolution</p> <p>Rin >1 M-ohm</p> <p>BW ~ 1 MHz</p> <p>ADC conversion time < 1 us typical</p> <p>Read voltage programmatically using:</p> <ul style="list-style-type: none"> • CONT:AUX:INP1:VOLT (SCPI) • get InputVoltageEX Method (COM)
8	AnalogIn2	<p>Analog input:</p> <p>+/-10V @ 1.22mV typical resolution</p> <p>Rin >1 M-ohm</p> <p>BW ~ 1 MHz</p> <p>ADC conversion time < 1 us typical</p> <p>Read voltage programmatically using:</p> <ul style="list-style-type: none"> • CONT:AUX:INP2:VOLT (SCPI) • get InputVoltageEX Method (COM)
9	Power Button	<p>Open collector input</p> <p>Active low replicates power button key press.</p>


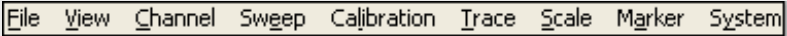
Last Modified:

10-Jul-2007 Added COM commands

18-Jan-2007 MX New topic

Programming Guide

Two ways to find programming commands:

1.	From a simulated PNA User Interface
New	
Legacy	

	GPIO / SCPI	COM
2.	Command Tree	COM Object Model
See Also	Example Programs Learning about GPIO	Example Programs Learning about COM

Important: Potential for programs to BREAK after upgrading to 6.0

If you have a SCPI or COM program that does NOT work after you upgraded to 6.0, it could be for the following reason. With 6.0 we implemented a change that defaults to saving completed calibrations to Cal Registers instead of User Cal Sets. [Learn how to revert to the old behavior.](#)

- [New Programming Commands](#)
- New [Remotely Specifying a Source Port](#)
- [VEE Examples](#) with runtime installed.
- [Using Macros](#)
- [Code Translator App.](#)
- [Superseded / Replacement Commands](#)
- [Data Access Map](#)
- See more PNA programming information and examples at:<http://na.tm.agilent.com/pna/programming/>

New Programming Commands

The following are new programming commands for **PNA release 7.50** [See What's New](#)

USB Power Sensors

Specifies the type of power sensor to be used	SYST:COMM:PSEN	Path
Specifies the location of the power sensor to be used.	SYST:COMM:PSEN	Locator
Returns the ID string of connected USB power meters / sensors.	SYST:COMM:USB:PMET:CAT?	USBPowerMeterCatalog

Miscellaneous

Single trigger	SENS:SWE:MODE SINGLE	
Reads ADC voltages from Power I/O connector		get InputVoltageEX Method
Copies an existing Source Power Calibration to another channel.	SYST:MACR:COPY:CHAN	ApplySourcePowerCorrectionTo
Returns an array of Cal Set names being stored on the PNA.		EnumerateCalSets

The following are new programming commands for **PNA release 7.22** [See What's New](#)

Description	SCPI	COM
Embedded LO		
Embedded LO ON OFF	SENS:MIX:ELO:STAT	IsOn
Select tuning point	SENS:MIX:ELO:NORMALize:POINT	NormalizePoint
Set tuning mode	SENS:MIX:ELO:TUNing:MODE	TuningMode
Set broadband sweep span	SENS:MIX:ELO:TUNing:SPAN	BroadbandTuningSpan
Set precise tuning tolerance	SENS:MIX:ELO:TUNing:TOL	PreciseTuningTolerance
Set precise tuning iterations	SENS:MIX:ELO:TUNing:ITER	MaxPreciseTuningIterations
LO delta frequency	SENS:MIX:ELO:LO:DELTA	LOFrequencyDelta

Resets tuning parameters	SENS:MIX:ELO:TUNing:RESet	ResetTuningParameters
Reset LO Delta frequency	SENS:MIX:ELO:LO:RESET	ResetLOFrequency

Embedded LO Diagnostics

Clear current diagnostic information	SENS:MIX:ELO:DIAG:CLEAr	Clear
Get result of the last tuning sweeps.	SENS:MIX:ELO:DIAG:STATus?	StatusAsString
Get number of tuning sweeps.	SENS:MIX:ELO:DIAG:SWE:COUNT?	NumberOfSweeps
Get a tuning sweep data	SENS:MIX:ELO:DIAG:SWE:DATA?	StepData
Was a marker was used for a tuning sweep?	SENS:MIX:ELO:DIAG:SWE:MARK:STATe?	IsMarkerOn
Get the marker X-axis position.	SENS:MIX:ELO:DIAG:SWE:MARK:POS?	MarkerPosition
Get the marker annotation.	SENS:MIX:ELO:DIAG:SWE:MARK:ANN?	MarkerAnnotation
Get the tuning sweep X axis annotation.	SENS:MIX:ELO:DIAG:SWE:X:ANN?	XAxisAnnotation
Get the tuning sweep Y axis annotation.	SENS:MIX:ELO:DIAG:SWE:Y:ANN?	YAxisAnnotation
Get the Start sweep value.	SENS:MIX:ELO:DIAG:SWE:X:START?	XAxisStart
Get the Stop sweep value.	SENS:MIX:ELO:DIAG:SWE:X:STOP?	XAxisStop
Returns the tuning sweep parameter name.	SENS:MIX:ELO:DIAG:SWE:PAR?	Parameter
Returns the tuning sweep title.	SENS:MIX:ELO:DIAG:SWE:TITL?	StepTitle
Returns the LO frequency delta from this tuning sweep	SENS:MIX:ELO:DIAG:SWE:LO:DELT?	LODeltaFound

Enhanced Response Cal

Set guided Cal method	SENS:CORR:COLL:GUID:PATH:CMET	PathCalMethod
Set guided Thru method	SENS:CORR:COLL:GUID:PATH:TMET	PathThruMethod

The following are new programming commands for **PNA release 7.21** [See What's New](#)

Perform Isolation Cal

Perform ECal Isolation	SENS:CORR:COLL:ISOL:ECAL	ECALIsolation
Increment Avg for ECal Isolation	SENS:CORR:COLL:ISOL:AVER:INCR	IsolationAveragingIncrement
Perform Guided (mech) Isolation	SENS:CORR:COLL:GUID:ISOL:PATHs	GetIsolationPaths Method SetIsolationPaths Method
Increment Avg for Guided Isolation	SENS:CORR:COLL:GUID:ISOL:AVER:INCR	IsolationAveragingIncrement Property

Miscellaneous Cal

Preference to Save Cal to selected Cal Set	SENS:CORR:PREF:CSET:SAVE	RemoteCalStoragePreference
Perform a Reference Receiver cal as part of a Source Power cal.	SOUR:POW:CORR:COLL:SAVE RRECeiver	ApplyPowerCorrectionValuesEx

The following are new programming commands for **PNA release 7.20** [See What's New](#)

Description	SCPI	COM
RF and IF Path Configuration		
Catalog configuration names	SENS:PATH:CONF:CAT?	Configurations
Load a configuration	SENS:PATH:CONF:SEL	LoadConfiguration
Store a configuration	SENS:PATH:CONF:STOR	StoreConfiguration
Delete a configuration	SENS:PATH:CONF:DEL	DeleteConfiguration
Read the name of a configuration	SENS:PATH:CONF:NAME?	config.Name
Write descriptive text	SENS:PATH:CONF:DTEX	DescriptiveText
Catalog all elements	SENS:PATH:CONF:ELEM:CAT?	Elements
Catalog all settings	SENS:PATH:CONF:ELEM:VAL:CAT?	Values
Set element	SENS:PATH:CONF:ELEM	Element
Read name of current element	SENS:PATH:CONF:ELEM	element.Name
Set value for an element	SENS:PATH:CONF:ELEM	Value

IF / DSP Settings

Sets ADC capture mode: auto or manual	SENS:IF:FILT:CMOD	ADCCaptureMode
Sets and returns method for specifying the way the IF Frequency is determined.	SENS:IF:FREQ:AUTO	IFFrequencyMode
Sets and returns the IF frequency.	SENS:IF:FREQ	IFFrequency
Returns errors with manual digital filter settings	SENS:IF:FILT:ERR?	FilterErrors
Sets digital filter mode.	SENS:IF:FILT:AUTO	FilterMode
Sets Stage1Coefficients	SENS:IF:FILT:STAGE<n>:COEF	Stage1Coefficients
Sets Stage1 NCO frequency	SENS:IF:FILT:STAGe1:FREQ	Stage1Frequency
Returns the maximum value of any single stage1coefficient.	SENS:IF:FILT:STAGE<n>:COEF	Stage1MaximumCoefficient
Returns the maximum number of Stage1 coefficients	SENS:IF:FILT:STAG<n>:COUNT?	Stage1MaximumCoefficientCount
Returns the minimum number of Stage1 coefficients	SENS:IF:FILT:STAG<n>:COUNT?	Stage1MinimumCoefficientCount
Sets Stage2Coefficients	SENS:IF:FILT:STAGE<n>:COEF	Stage2Coefficients
Returns the maximum value of any single stage2coefficient.	SENS:IF:FILT:STAGE<n>:COEF	Stage2MaximumCoefficient
Returns the maximum number of Stage2 coefficients	SENS:IF:FILT:STAG<n>:COUNT?	Stage2MaximumCoefficientCount
Returns the minimum number of Stage2 coefficients	SENS:IF:FILT:STAG<n>:COUNT?	Stage2MinimumCoefficientCount
Sets and returns stage3 filter type	SENS:IF:FILT:STAGe3:TYPE	Stage3FilterType
Returns the names of supported types of Stage3 filters.	SENS:IF:FILT:STAGe3:CAT?	Stage3FilterTypes

Sets and returns the parameter value of the current filter type.	SENS:IF:FILT:STAGe3:PAR	Stage3Parameter
Returns maximum parameter value for the current filter type.	SENS:IF:FILT:STAGe3:PAR	Stage3ParameterMaximum
Returns minimum parameter value for the current filter type.	SENS:IF:FILT:STAGe3:PAR	Stage3ParameterMinimum
Returns the names of parameters for the current filter type.	SENS:IF:FILT:STAGe3:PCAT?	Stage3Parameters

Pulse Generator Settings

Turns the pulse output ON and OFF.	SENS:PULSe:STATe	State
Sets the pulse delay	SENS:PULS:DEL	Delay
Sets the pulse delay increment.	SENS:PULS:DINC	DelayIncrement
Sets the pulse-period (1/PRF) for ALL pulse generators.	SENS:PULS:PERiod	Period
Sets the pulse width	SENS:PULS:WIDT	Width

Auxiliary Triggering

Returns the number of the AuxTrig connector pair being used.	Not Applicable	Number
Read number of aux connector pairs.	TRIGger:AUX:COUNt?	AuxiliaryTriggerCount
Turns ON / OFF the trigger output	TRIG:CHAN:AUX	Enable
Turns handshake ON / OFF.	TRIG:CHAN:AUX:HAND	HandshakeEnable
Specifies the polarity of the trigger IN signal.	TRIG:CHAN:AUX:IPOL	TriggerInPolarity
Specifies the polarity of the trigger OUTPUT signal.	TRIG:CHAN:AUX:OPOL	TriggerOutPolarity
Specifies the type of aux Input trigger: Edge or Level.	TRIG:CHAN:AUX:TYPE	TriggerInType

Specifies the pulse width of the Output signal	TRIG:CHAN:AUX:DUR	TriggerOutDuration
Specifies how often a trigger output signal is sent:Point or Sweep.	TRIG:CHAN:AUX:INT	TriggerOutInterval
Specifies whether the aux trigger out signal is sent BEFore or AFTEr the acquisition.	TRIG:CHAN:AUX:POS	TriggerOutPosition
Sets the External Trigger OUT behavior to have either Global or Channel scope.	TRIG:PREF:AIGL	AuxTriggerScopelsGlobal

Preferences

Offset for Receiver Attenuator	SYST:ITEM:OFFS:RCV	OffsetReceiverAttenuator
Offset for Source Attenuator	SYST:ITEM:OFFS:SRC	OffsetSourceAttenuator
Report source unlevelled events as errors?	SYST:ERR:REP:SUNL	EnableSourceUnlevelledEvents

ALC Leveling

Returns list of valid ALC Leveling Modes	SOUR:POW:ALC:MODE:CAT?	GetSupportedALCModes
Set ALC Mode	SOUR:POW:ALC:MODE	ALCLevelingMode

Specifying Source Ports

Returns the number of source ports.	None	SourcePortCount
Returns the string names of source ports.	SOURce:CAT?	SourcePortNames
Returns the source port number of the specified string port name.	None	GetPortNumber

Miscellaneous

Touchscreen ON Off	SYST:TOUChscreen	app.Touchscreen
Launches dialogs	None	app.LaunchDialog
Returns error term data (new behavior).	N/A	Get ErrorTermByString
Turns Trace Title ON and OFF	DISP:WIND:TRAC:TITL:STATe	TraceTitleState
Writes and reads trace title.	DISP:WIND:TRAC:TITL:DATA	TraceTitle
Makes PNA app visible or not	DISP:VISible	Visible
Read voltages on the Power I/O connector.	CONT:AUX:INP:VOLT?	None
Outputs voltages on the Power I/O connector.	CONT:AUX:OUTP:VOLT	None
Segment sweep time		Sweep Time

The following are new programming commands for **PNA release 7.1** [See What's New](#)

Description	SCPI	COM
Frequency Offset Commands		
Freq Offset ON/Off	SENS:FOM	FOM.State
Read available ranges	SENS:FOM:CAT?	
Read number of ranges	SENS:FOM:COUN?	RangeCount
X-Axis display range	SENS:FOM:DISP:SEL	DisplayRange
Read range name	SENS:FOM:RANG:NAME?	Name FOMRange
Read range number	SENS:FOM:RNUM?	rangeNumber
Set range coupling	SENS:FOM:RANG:COUP	Coupled
Set sweep type	SENS:FOM:RANG:SWE:TYPE	SweepType
Set CW freq	SENS:FOM:RANG:FREQ:CW	CWFrequency

Set start freq	SENS:FOM:RANG:FREQ:STAR	StartFrequency
Set stop freq	SENS:FOM:RANG:FREQ:STOP	StopFrequency
Set offset value	SENS:FOM:RANG:FREQ:OFFS	Offset
Set divisor value	SENS:FOM:RANG:FREQ:DIV	Divisor
Set multiplier value	SENS:FOM:RANG:FREQ:MULT	Multiplier
Freq. Offset Segment Sweep		
ON OFF	SENS:FOM:RANG:SEGM	State
Add a segment	SENS:FOM:RANG:SEGM:ADD	FOM.Add
Delete a segment	SENS:FOM:RANG:SEGM:DEL	Remove
Count the segments	SENS:FOM:RANG:SEGM: COUNT?	Count
Center Frequency	SENS:FOM:RANG:SEGM:FREQ:CENT	CenterFrequency
Frequency Span	SENS:FOM:RANG:SEGM:FREQ:SPAN	FrequencySpan
Start Frequency	SENS:FOM:RANG:SEGM:FREQ:STAR	StartFrequency
Stop Frequency	SENS:FOM:RANG:SEGM:FREQ:STOP	Stop Frequency
Number of Points	SENS:FOM:RANG:SEGM:SWE:POIN	Number of Points
IF Bandwidth value	SENS:FOM:RANG:SEGM:BWID	IF Bandwidth
IF Bandwidth control	SENS:FOM:RANG:SEGM:BWID:CONT	IF BandwidthOption
Source Power value	SENS:FOM:RANG:SEGM:POW	Test Port Power
Source Power control	SENS:FOM:RANG:SEGM:POW:CONT	Source Power Option
Sweep time value	SENS:FOM:RANG:SEGM:SWE:TIME	Sweep Time
Sweep time control	SENS:FOM:RANG:SEGM:SWE:TIME:CONT	TimeOption
Miscellaneous		
Source Power (Auto ON OFF)	SOUR:POWer:MODE	SourcePortMode

The following are new programming commands for **PNA release 6.2**. [See What's New](#)

Description	SCPI	COM
Multiport		
Perform Multiport restart	SYST:CONFigure	app.Configure
Returns list of supported testsets		tsets.TestsetCatalog
Returns the testset model		ts.Type
Sets and returns the logical port value		ts.SelectPort
Sets and returns a port mapping for a single port.	SENS:MULT:PORT:SEL	
Sets and returns the display label	SENS:MULT:LAB	
Create new parameter	CALC:PAR:DEF:EXT	
Change parameter	CALC:PAR:MOD:EXT	
Read the Test Set model for a Cal Set.	SENS:CORR:CSET:TSet:ALLPorts?	calset.OutputPorts
Read the Port Mapping for a Cal Set	SENS:CORR:CSET:TSET:TYPE?	calset.TestSetType
Macros		
Specify Path and filename	SYSTem:SHORtcut:PATH	
Specify Arguments	SYSTem:SHORtcut:ARGuments	
Specify Title	SYSTem:SHORtcut:TITLe	
Run a macro	SYSTem:SHORtcut:EXECute	
Remove a macro	SYSTem:SHORtcut:DELete	
Set Mixer Fixed Input and Output		
Set input to fixed or swept	SENS:MIX:INP:FREQ:MODE	mxr.InputRangeMode
Set output to fixed or swept	SENS:MIX:OUT:FREQ:MODE	mxr.OutPutRangeMode
Set input fixed frequency		mxr.InputFixedFrequency
Receiver-only source power cal		
Select and Acquire receiver-only readings	SOUR:POW:CORR:COLL:ACQ:REC	AcquirePowerReadingsEx Method

sNP Data

Reads SnP data for the specified ports. [CALC:DATA:SNP:PORTs?](#) [GetSnpDataWithSpecifiedPorts](#)

Saves SnP data for the specified ports. [CALC:DATA:SNP:PORTs:Save](#) [WriteSnPFileWithSpecifiedPorts](#)

The following are new programming commands for **PNA release 6.04**

Description	SCPI	COM
-------------	------	-----

Equation Editor

Turn equation ON and OFF	CALC:EQUation:STATe	
--------------------------	-------------------------------------	--

Set equation	CALC:EQUation:TEXT	
--------------	------------------------------------	--

Returns validity of the equation	CALC:EQUation:VALid?	
----------------------------------	--------------------------------------	--

Specify THRU adapter and delay for Unknown Thru and Adapter Removal

Specifies the use of a THRU adapter.	SENS:CORR:COLL:GUID:ADAP:CREate?	
--------------------------------------	--	--

Returns the number of THRU adapters that have been created.	SENS:CORR:COLL:GUID:ADAP:COUNt?	
---	---	--

Specifies the adapter delay.	SENS:CORR:COLL:GUID:ADAP:DELay	
------------------------------	--	--

Specifies the adapter description	SENS:CORR:COLL:GUID:ADAP:DESC	
-----------------------------------	---	--

Specifies the port pairs for the THRU connection.	SENS:CORR:COLL:GUID:ADAP:PATHs	
---	--	--

Macros

Specify Path and filename	SYSTem:SHORtcut:PATH	
---------------------------	--------------------------------------	--

Specify Arguments	SYSTem:SHORtcut:ARGuments	
-------------------	---	--

Specify Title	SYSTem:SHORtcut:TITLe	
---------------	---------------------------------------	--

Run a macro	SYSTem:SHORtcut:EXECute	
-------------	---	--

Remove a macro	SYSTem:SHORtcut:DELete	
----------------	--	--

Miscellaneous

At the end of a power sweep, specifies whether to maintain source power at the start or stop power level.

[SYST:PREF:ITEM:PSRT](#)

[PowerSweepRetracePowerMode](#)

For single-band frequency or segment sweeps ONLY, specify whether to turn RF power ON or OFF during a retrace

[SYST:PREF:ITEM:RETR:POW](#)

[PowerOnDuringRetraceMode](#)

Various print options

[Hardcopy commands](#)

New SCPI Programming Examples:

- [Unguided Cal on Multiple Channels](#)
- [Triggering the PNA](#)

Last modified:

December 3, 2007 MX Updated for 7.2

SeptDecember 3, 20076 MQ Updated for 7.1

COM versus SCPI

There are two methods you can use to remotely control the PNA: COM and SCPI. The following topics can help you choose the method that best meets your needs:

- [Software Connection](#)
- [Physical Connection](#)
- [Selecting a Method](#)
- [Programming Languages](#)

[Other Topics about COM Concepts](#)

Software Connection

COM uses a binary protocol, allowing you to directly invoke a PNA feature. This is more efficient than SCPI. For example, the following statement calls directly into the PNA, executing the routine `GetIDString`.

```
PNA.GetIDString( )
```

SCPI is a text based instrument language. To retrieve the ID string, you would send the following text string to the PNA:

```
IbWrite( "*IDN?" )
```

The PNA SCPI parser would first decode this text string to determine that the user has asked for the PNA to identify itself. Then the parser would call `GetIDString()`.

The Physical Connection

Internal Control

With either COM or SCPI, the best throughput is attained by using the PNA's internal PC to execute your test code. However, if your test code uses too much system resources (CPU cycles and/or memory), this will slow the PNA's performance.

Using the SICL I/O Libraries, you can also connect to the PNA from a program running on the PNA.

External Control

You can control the PNA from a remote PC using either COM or SCPI.

COM - (Component Object Model) can be used to access any program like the PNA (835x.exe) or library (.dll) that exposes its features using a COM compliant object model. These programs or libraries are called "servers". Programs (like your remote program on your PC) that connect to and use the features of these servers are called "clients."

With COM, the server and the client do not need to reside on the same machine. DCOM, or distributed COM, is easy to configure and makes the location of the server transparent to the client. When you access the PNA from a remote computer, you are using DCOM. In this case, the mechanical transport is a LAN (local area network).

SCPI - Using a GPIB interface card in a remote computer, you can connect to the instrument using a GPIB cable. There are some constraints on the length of this cable and the number of instruments that can be daisy-chained

together.

Using the Agilent SICL I/O libraries, you can connect to the instrument over a LAN connection. (LAN or INTERNAL) You can send SCPI commands using COM with the [ScpiStringParser](#) object.

Selecting a Method

You should almost always choose COM for the following reasons:

- COM executes faster most of the time.
- COM is generally easier to use. The latest development tools embrace COM and know how to make your life easier with integrated development environments that show automation syntax as you type.
- As time goes on, more emphasis will be put on COM as the preferred programming paradigm.

But choosing a connection method depends on your situation. Here are some additional things to consider:

1. If you want to use the PNA to control other GPIB instruments, you may want to use COM as the means of talking to the PNA. In GPIB, the PNA can not be configured as both **System Controller** and **talker/listener**. Because the PNA does not support pass control mode, only one mode can be used at a time.
2. If you have legacy code written in SCPI for another network analyzer, you may be able to leverage that code to control the PNA. However, the PNA uses a different platform than previous Agilent Network Analyzers. Therefore, not all commands have a direct replacement. See the PNA [Code Translator Application](#).

Programming Languages

You can program the PNA with either COM or SCPI using several languages. The most common include:

Agilent VEE - With this language you can send text based SCPI commands and also use automation. VEE 6.0 or later is recommended.

Visual Basic - This language has great support for automation objects and can be used to drive SCPI commands. The use of VISA drivers for your GPIB hardware interface will make the task of sending SCPI commands easier.

C++ - This language can do it all. It is not as easy to use as the above two, but more flexible.

Remotely Specifying a Source Port

In the 'not-to-distant past', it was a simple task to specify a PNA source port. It was either port 1 or port 2. Now, the following reasons, it is not so simple:

- **Internal 2nd sources** are now offered on various PNA models. However, some source ports do not have an obvious port number. One example is the second source on the PNA-X 2-port model (option 224). [Learn more about Internal Second Sources](#).
- **External sources** can now be controlled by the PNA as though they are internal sources. External sources do not have a source port number, but use String names as identifiers.
 - **For FCA ONLY:** Once configured using the [Configuration dialog](#), an external source can be selected remotely and controlled by the PNA by specifying the LOName using [SCPI](#) or [COM](#).
 - **All other uses for External sources:** The external source must be configured and selected manually. You can then save an Instrument State file, then recall that state file remotely to effectively select an external source.
- **Multiport test sets**...choose between ports 1 through port N, where N is the number of ports on the test set. You still use a port number, but what port number to use may not be easy to recognize because of port mapping. [Learn more about Multiport test sets](#).

Source Port String Names

The PNA User Interface (UI) makes it easy to configure and select the sources and ports. Remotely however, string names are used now, in addition to port numbers, to specify a Source port.

COM - The existing COM commands which specify source ports as numbers, are still used. However, it may be necessary to learn the string name for the source port to be used, then learn the port number using the following commands. Port numbers are assigned dynamically depending on whether [external sources are selected](#).

- [SourcePortNames Property](#)
- [GetPortNumber Method](#)
- [SourcePortCount Property](#).

SCPI - ALL of the existing SCPI commands that specify a source port are extended to also allow the source port to be specified using string names. The following new command was created to list the available source port string names: [Source:Cat?](#)

Last Modified:

5-Nov-2007 MX New topic

Frequency Offset Mode



Frequency Offset Mode (FOM) provides the capability to have the PNA Sources tune to frequencies that are different (offset) from the PNA Receivers.

PNA Option 080 provides you with the hardware and basic software capability to make Frequency Offset Measurements. This topic discusses the PNA settings that are relevant to making these types of measurements. See [Frequency Converting Device Measurements](#) for more information on making specific device measurements.

Note: The Frequency Converter Application [Option 083](#) simplifies the task of making extremely accurate frequency offset measurements on MOST frequency converting devices.

- [Frequency Offset Dialog Box](#)
- [Setup Examples](#)
- [Test Set \(Reference Switch\) Dialog Box](#)

Other Frequency Offset topics

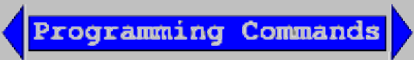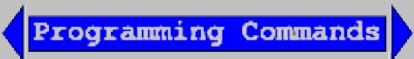How to make Frequency Offset settings	
Using front-panel HARDKEY [softkey] buttons	PNA Menu using a mouse
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Channel 2. then Frequency Offset
For PNA-X models	
1. Press STIMULUS 2. then [Frequency Offset]	1. Click Stimulus 2. then Frequency Offset

Frequency Offset: Channel 1 [X]

☒ Frequency Offset (ON/OFF)

	Mode	Sweep Type	Settings
Primary		Linear Frequency	300.000000 kHz - 20.000000 GHz, 201
Source	Coupled	Linear Frequency	300.000000 kHz - 20.000000 GHz
Receivers	Un-Coupled	Segment Sweep	300.000000 kHz - 1.000000 MHz
Source2	Coupled	Linear Frequency	300.000000 kHz - 20.000000 GHz

X-Axis Display
 Annotation Receivers ☐ X-Axis Point Spacing

OK Cancel Help

Frequency Offset dialog box help

The following are major changes to FOM:

- Stimulus and Response are now called Sources and Receivers.
- Sources and Receivers settings can be made in two ways:
 1. By **Coupling** to the Primary (Channel) settings. This is the only method used in previous releases.
 2. By **Uncoupling** and setting Sources and Receivers values independently. This is the new, simplified method.
- External sources can be controlled from this dialog. [Learn more.](#)

Note: Source2 supplies power for ports 3 and 4. **Turn Source2 power ON** using the [Power and Attenuators dialog](#). This (Frequency Offset) is the only dialog for controlling the frequency of Source 2. Learn more about [Source2](#).

Frequency Offset (ON/OFF) Enables Frequency Offset Mode on ALL measurements that are present in the active channel.

When FOM is NOT enabled, all frequencies are the same as the active channel.

Tip: First make other settings on this dialog box, then click **Frequency Offset ON**.

Primary The current Active Channel settings. When a Source or Receiver is coupled to the Primary settings, its Sweep Type is the same as that of the Primary. The frequency settings of the coupled range are mathematically derived from the Primary settings using the [Multiplier, Divisor, and Offset values](#). With this approach, only the Primary settings need to be changed in order to affect change in the coupled Sources and Receivers. Changes to the Primary channel settings occur when Frequency Offset is checked ON. [See example using Primary and Coupled setting.](#)

Tip: Primary settings are ONLY used when Sources and Receivers are Coupled. It is often easier to Uncouple, then set Sources and Receivers independently.

Source and Source2 if available. [Learn more about Internal Second Source.](#)

Receivers All receivers that are used in the channel, including Reference receivers, are tuned to the specified frequency settings.

Mode

Coupled Source and Receiver settings are mathematically derived from the Primary settings using Multiplier, Divisor, and Offset values. [Learn more.](#)

Uncoupled Source and Receiver settings are entered independently, without reference to Primary settings. When Uncoupled, Source and Receiver Ranges can use separate sweep types.

Sweep Type Click to change the type of sweep for each range. Only available for Primary and Uncoupled Sources and Receivers.

Unsupported Sweep Type combinations

- Power Sweep and Segment Sweep can NOT be used together.
- Uncoupled Log Sweep yields **invalid data** whenever the sources are offset from the receivers.
- Coupled Log Sweep is allowed only for the following two conditions:
 1. The offset = 0, the multiplier = 1, and the divisor = 1.
 2. The multiplier = 0

Settings To change settings, click **IN** the appropriate Settings cell, then click **Edit**.

- If coupled, invokes the [Coupled dialog](#).
- If uncoupled or Primary invokes the [Uncoupled settings dialog](#).

X-Axis Select the settings to be displayed on the X-Axis.

X-Axis Point Spacing Only available when a Segment Sweep Type is selected as the X-Axis display. [Learn more.](#)

Note: When Frequency Offset is enabled, ALL receivers on the channel, including the reference receivers, tune to the new offset frequencies, Therefore the source and reference receiver will be at different frequencies. Therefore, FOM measurements that include a reference receiver, which includes all S-parameters, display invalid data.

To measure and display measurements at both the source and receiver frequencies, you must use two channels. Use [Equation Editor](#) to calculate the conversion loss. [See a calibrated FOM conversion loss example.](#)

[Learn how to calibrate frequency offset measurements.](#)

Source (Coupled)

Frequency

Offset

Multiplier

Divisor

Start Frequency 21.000000 GHz

Stop Frequency 27.500000 GHz

OK Cancel Help

Coupled settings dialog box help

Coupled Formulas:

Range Start = [Primary Start x (Multiplier / Divisor)] + Offset

Range Stop = [Primary Stop x (Multiplier / Divisor)] + Offset

Where:

Offset Specifies an absolute offset frequency in Hz. For mixer measurements, this would be the LO frequency. Range is +/- 1000 GHz. Offsets can be positive or negative.

Multiplier Specifies (along with the divisor) the value to multiply by the stimulus. Range is +/- 1000.

- Negative multipliers cause the stimulus to sweep in decreasing direction. For downconverter mixer measurements, this would be for setups requiring the Input frequency to be less than LO frequency. [See an example.](#)
- 0 (zero) as the multiplier nulls the Primary setting. Then the Offset value adds to zero.

Divisor Specifies (along with the multiplier) the value to multiply the stimulus. Range is 1 to 1000.

Primary (Linear Frequency)

Start/Stop

Frequency

Start

Stop

Points

OK Cancel Help

Primary and Uncoupled settings dialog box help

This dialog will vary depending on the sweep type:

Linear and Log frequency

Uncoupled Log sweep yields **invalid data** whenever the sources are offset from the receivers.

Select Start/Stop or Center/Span

Frequency Enter values

Points (Primary only) Enter number of data points for the sweep.

Power

CW Freq Enter frequency in Hz.

Points (Primary only) Enter number of data points for the power sweep.

CW Time

CW Freq Enter frequency in Hz.

Sweep Time Enter time to complete one sweep. Enter 0 for the fastest sweep.

Segment Sweep Edits are made exactly like the [standard segment table](#).

For Advanced Users: Uncoupled Segment Sweep offers great flexibility in configuring measurements. In segment sweep mode:

- The **OK** button is NOT available until the total number of data points for all segments matches the number of Primary data points.
- [Independent IF Bandwidth](#) and [Independent Sweep Time](#) are available ONLY on the Primary (channel) and the Uncoupled **Receivers** - NOT Sources.
- [Independent Power](#) is available ONLY on the Primary (channel) and the Uncoupled **Sources** - NOT Receivers.

Setup Examples

Although the Frequency Offset settings can be used with many types of devices, these examples include mixer terminology.

[See a calibrated FOM conversion loss example.](#)

1. Fixed LO - Upconverter

- **Swept Stimulus (Mixer Input):** 1000 MHz - 1200 MHz
- **Fixed LO:** 1500
- **Swept Response (Mixer Output):** 2500 MHz to 2700 MHz

Make the following settings on the FOM dialog

Source: Uncoupled

Sweep Type: Linear

Click Settings, then Edit. In the Source dialog:

Start Frequency = 1000 MHz

Stop Frequency = 1200 MHz

Receiver: Uncoupled

Sweep Type: Linear

Click Settings, then Edit. In the Receiver dialog:

Start Frequency = 2500 MHz

Stop Frequency = 2700 MHz

LO Settings

Set external source to CW - 1500 MHz.

Source2: Uncoupled (Only with [Second PNA Internal Source](#))

Sweep Type: CW Time

Click Settings, then Edit. In the Source2 dialog:

CW Frequency = 1500 MHz

2. Fixed LO - Downconverter (Input < LO)

- **Swept DECREASING Stimulus (Mixer Input):** 1100 MHz to 1000 MHz
- **Fixed LO:** 2500 MHz
- **Swept INCREASING Response (Mixer Output)** 1400 MHz to 1500 MHz

Make the following settings on the FOM dialog

Primary: Not used

Source (Input): Uncoupled

Sweep Type: Linear

Click Settings, then Edit. In the Source dialog:

Start Frequency = 1100 MHz

Stop Frequency = 1000 MHz

Receiver (Output): Uncoupled

Sweep Type: Linear

Click Settings, then Edit. In the Receiver dialog:

Start Frequency = 1400 MHz

Stop Frequency = 1500 MHz

LO Settings

Set external source to CW - 2500 MHz.

Source2: Uncoupled (Only with [Second PNA Internal Source](#))

Sweep Type: CW Time

Click Settings, then Edit. In the Source2 dialog:

CW Frequency = 2500 MHz

3. Swept LO - Fixed Output - Upconverter

Swept External LO measurements in Frequency Offset Mode can be very difficult. The external LO source must be synchronized with the swept output or input (as in this case). See [Synchronizing and External Source Control](#) to see how this is done. The [Frequency Converter Application Opt 083](#) performs these measurements easily.

- **Swept Stimulus (Mixer Input):** 1000 MHz to 1100 MHz
- **Swept LO:** 1500 MHz to 1400 MHz
- **Fixed Response (Mixer Output):** 2500 MHz

Make the following settings on the FOM dialog

Source: Uncoupled

Sweep Type: Linear

Click Settings, then Edit. In the Source dialog:

Start Frequency = 1000 MHz

Stop Frequency = 1100 MHz

Receiver: Uncoupled

Sweep Type: CW Time

Click Settings, then Edit. In the Receiver dialog:

CW Frequency = 2500 MHz

LO Settings

- If using external source, set to sweep from 1500 - 1400 MHz.
- If using **Source2** ([Second Internal Source](#)): set to Uncoupled, then:

Sweep Type: Linear

Click Settings, then Edit. In the Source2 dialog:

Start Frequency = 1500 MHz

Stop Frequency = 1400 MHz

4. Power Sweep for Mixers

To measure the gain compression of a mixer, the input power to the mixer is swept. The input and output frequencies are fixed but offset from one another.

This is a good use of Coupled settings because the same compression test can be performed at several different frequencies. With coupled Source and Receiver ranges, the Primary (channel) frequency can be easily changed from the front panel. The coupled source and receiver frequencies will update accordingly.

- **Swept Input Power:** -10 dBm to 0 dBm
- **Fixed Input Frequency:** 1500 MHz
- **Fixed LO:** 500 MHz
- **Fixed Output:** 2000 MHz

Make the following settings on the FOM dialog

Primary:

Sweep Type: Power Sweep

Click Settings, then Edit. In the Primary dialog:

CW Frequency = 1500 MHz

Source: Coupled

Default settings make CW Frequency: 1500 MHz (same as Primary)

Receiver: Coupled

Default settings make Sweep Type: CW Time

Click Settings, then Edit. In the Receiver dialog:

Offset = 500 MHz

LO Settings

- If using external source, set to CW: 500 MHz.
- If using **Source2** ([Internal Second Source](#)), set to Coupled, then:

Sweep Type: Power Sweep

Click Settings, then Edit. In the Source2 dialog:

CW Frequency = 500 MHz

Test Set Reference Switch

PNA models with [option 081](#) have a switch in the test set that allows you to bypass the port 1 reference receiver through the front panel Reference 1 connectors. This switch lets you easily switch between standard S-Parameter measurements and measurements using a reference mixer. You could use this feature to make standard S11 measurements and converter transmission measurements relative to a reference ("golden") mixer.

Note: The Frequency Converter Application [Option 083](#) simplifies the task of making extremely accurate phase measurements on MOST frequency converting devices.

How to access the Test Set dialog box

Using front-panel HARDKEY [softkey] buttons

For [PNA-L](#) and [E836x](#) models

1. [Navigate using MENU/DIALOG](#)

For [PNA-X](#) models

1. Press TRACE/CHAN
2. then [Channel]
3. then [More]
4. then [Path Config]
5. select


PNA Menu using a mouse

◀ Programming Commands ▶

1. Click **Channel**
2. then **Test Set**

◀ Programming Commands ▶

1. Click **Trace/Chan**
2. then **Channel**
3. then **More**
4. then **Path Config**
5. **Select**

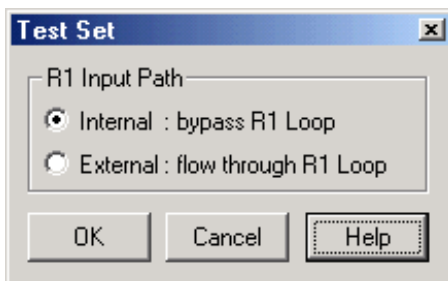

Test Set dialog box help

Note: This feature is only available on PNA models with [Option 081](#) - external reference switch.

R1 Input Path

Internal: bypass R1 Loop Connects the port 1 source directly to the R1 receiver.

External: flow through R1 Loop Allows direct access to the R1 receiver through the Reference 1 front-panel connectors.

See [block diagram of reference switch](#).

Last modified:

December 3, 2007	MX Added UI settings
11/21/06	MQQ Modified for new dialog

Frequency Converting Device Measurements

Many frequency offset measurements can be made using the PNA with option 080. The following is a list of some of those measurements and how they are made.

[Conversion Loss](#)

[Conversion Compression](#)

[Return Loss and VSWR](#)

[Isolation](#)

[Harmonic Distortion](#)

See Also: [Frequency Offset Measurement Accuracy](#)

Frequency Offset Measurement Accuracy

This topic discusses methods that can be used to make accurate frequency offset measurements.

[Calibrations](#)

[Mismatch Errors](#)

[Accurate and Stable LO](#)

[See other Mixer Measurement topics](#)

Calibrations

With Frequency Offset measurements, the stimulus and response frequencies are different. Standard calibration error terms are calculated using reference measurements. Therefore, traditional calibration methods such as full 2-port SOLT cannot be used with frequency offset.

[Source and Receiver Power calibrations](#) can be used to calibrate your Frequency Offset measurements.

[Frequency Converter Application](#) (option 083) offers fully calibrated scalar and vector frequency offset measurements.

Source Power calibration:

- Sets accurate power level at stimulus frequencies regardless of the receiver that will be used in the measurement.
- Can be copied to other channels with copy channels feature.
- Can be interpolated.

Receiver Power Cal:

- Requires a source cal to have already been performed and applied.
- Cannot be copied to other channels.

Therefore:

- Start by performing a [source power cal](#) over the combined stimulus and response frequencies.
- [Copy the channel](#) to other needed channels and the source power cal is copied.
- Change the frequency range of the copied channel to response frequencies.
- Perform a [receiver cal](#) at the response frequencies on individual channels.

- Change the frequency range to stimulus frequency and switch [frequency offset ON](#).
- On [Status Bar](#), ensure that source and receiver cals are ON (source cal will be interpolated).


See [Frequency Offset Conversion Loss Measurements](#) to see a step-by-step example.

Mismatch Errors


Mismatch errors result when there is a connection between two ports that have different impedances. With S-parameter measurements, these mismatches are measured and mathematically removed during a full 2-port calibration. This is much more difficult with frequency offset measurements. A much easier solution is to use high-quality attenuators on the input and output of the mixer.

By adding a high-quality attenuator to a port, the effective port match can be improved by up to twice the value of the attenuation. For example, a 10-dB attenuator, with a port match of 32 dB, can transform an original port match of 10 dB into an effective match of 25 dB. However, as the match of the attenuator approaches the match of the original source, the improvement diminishes.

Note: The Frequency Converter Application (option 083) uses calibration techniques that correct for mismatch errors.

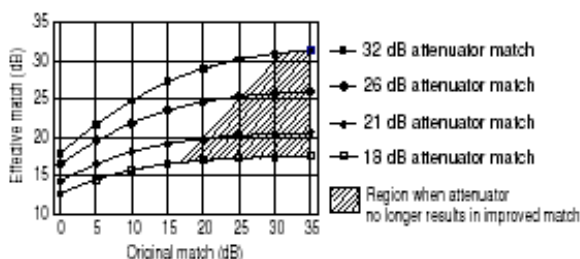

The larger the attenuation, the more nearly the resulting match approaches that of the attenuator, as shown in the following graphic. However, excessive attenuation is not desired because that will decrease the dynamic range of the measurement system.

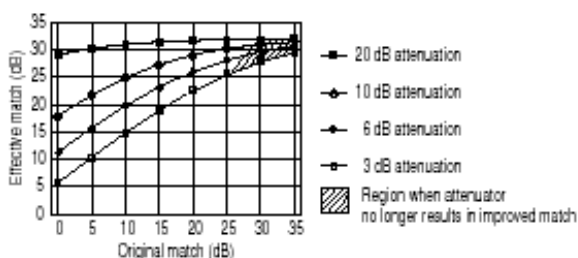

Accurate and Stable LO

When using frequency offset mode, if the LO signal is not accurate and stable, the output signal will not be at the expected response frequency. As a result, the output signal can fall on the skirts of the PNA receiver IF filter, or fall completely outside of the receiver filter passband.

Also, the LO power level is critical in mixer measurements. Be sure to monitor these power levels closely.

Conversion Loss (or Gain)

[What is Conversion Loss?](#)


[Why Measure Conversion Loss?](#)

[How to Measure Conversion Loss](#)

[See other Frequency Converting Device Measurements](#)

What is Conversion Loss?

Conversion loss is defined as the ratio of the power at the output frequency to the power at the input frequency with a given LO (local oscillator) power. This is illustrated in the graphic below. A specified LO power is necessary because conversion loss varies with the level of the LO, as the impedance of the mixer diode changes.

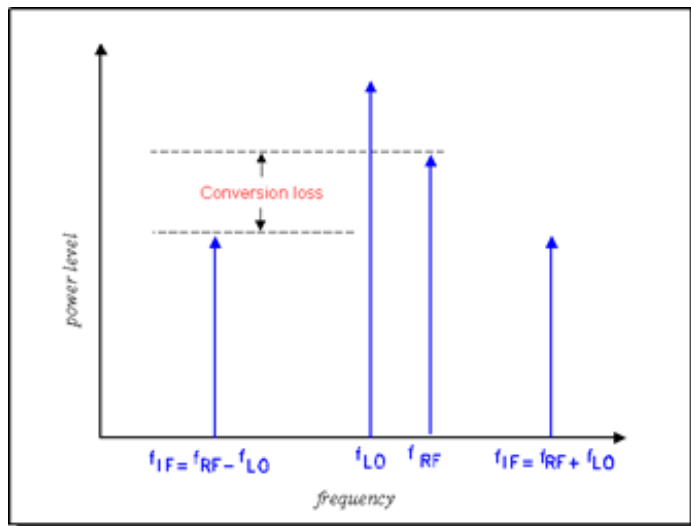

Why Measure Conversion Loss?


Conversion loss (or gain in the case of many converters and tuners) is a measure of how efficiently a mixer converts energy from the input frequency to the output frequency. If the conversion loss response of a mixer or converter is not flat over the frequency span of intended operation, valuable information may be lost from the resulting output signal.

How to Measure Conversion Loss

Conversion loss is a transmission measurement. It is measured by applying an input signal (stimulus) and an LO signal at specific known power levels, and measuring the resulting output signal level. Because the output frequency is different from the input frequency, [frequency offset](#) mode (option 080) must be used for this measurement.

Note: This measurement is made much easier if your PNA has the [Frequency Converter Application](#)

Equipment Setup

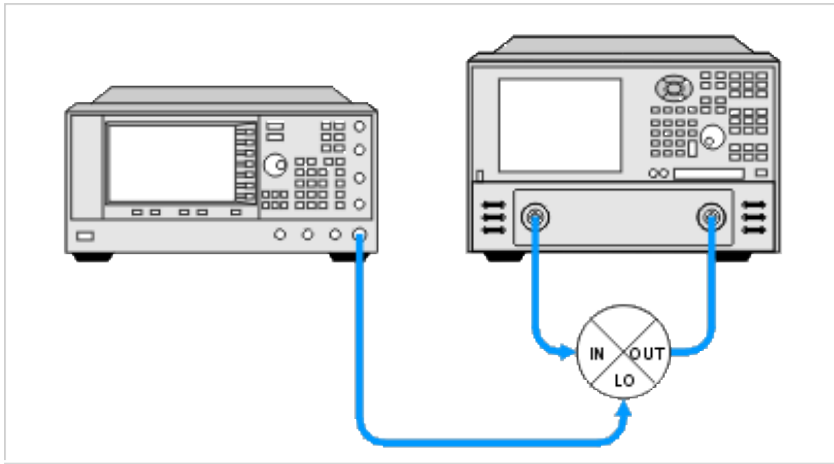

Example: A calibrated Conversion Loss (Down-converter) measurement

Swept Input with Fixed LO = Swept Output

- RF Input: 3.1 - 3.3 GHz
- LO: 2.2 GHz
- IF Output: 900 - 1100 MHz

PNA setup and calibrate on channel 1

1. On channel 1 create an [unratioed](#) R measurement over the ENTIRE input and output frequency span (.9 - 3.3 GHz). This will be the base source power cal that will be copied to the R and B channel measurements.
2. Perform a [source calibration](#) using a power meter. This makes the power level at the input of the mixer very accurate.

Setup Reference measurement on channel 2

1. [Copy channel](#) 1 to channel 2 which will display the reference input to the mixer. The channel 1 source power cal is copied with the other channel settings.
2. Change measurement to R1 unratioed.
3. Change RF Input frequency to 3.1 - 3.3 GHz. The source power cal becomes interpolated.
4. Perform [receiver power cal](#). Do not need to make physical connections. The PNA source is internally connected to the R1 receiver. Makes the R receiver read the source power level.

Setup B measurement on channel 3

1. Copy channel 1 to channel 3. This channel will display the output of the mixer. The channel 1 source power cal is copied with the other channel settings.
2. Change measurement to B unratioed.
3. Change IF Output frequency to .9 - 1.1 GHz. This causes the source power cal becomes interpolated.
4. Connect thru line from port 1 to port 2.
5. Perform receiver power cal. This makes the B receiver read the source power at the IF Output frequencies.
6. [Turn OFF receiver power cal.](#) This prevents an error when changing to input frequencies (next step).
7. Change RF Input frequency to 3.1 - 3.3 GHz. This changes the channel back to the mixer RF Input frequencies.
8. [Enable Frequency Offset.](#)
9. Change Offset to (-2.2 GHz). This tunes the B receiver to the IF Output frequencies .9 to 1.1 GHz. **Note:** The minus sign indicates a down-converter measurement.
10. Turn ON receiver power cal.


Measure the Mixer

1. Connect the mixer.
2. Adjust [scaling](#) to suit your needs.
3. Enable [markers](#) to read power levels for each trace.

The display below shows:

- Ch3 B receiver (bottom trace) absolute output power.
- Ch2 R1 receiver measurement (top trace) absolute input power to the mixer.

With this method, the conversion loss math (B/R1) can be performed with [Equation Editor](#) (not shown). The B/R1 ratio measurement is not supported with receiver power Cal turned on. However, conversion loss (C21) measurements can be made directly and are much easier using the Frequency Converter Application, FCA (Opt 083).

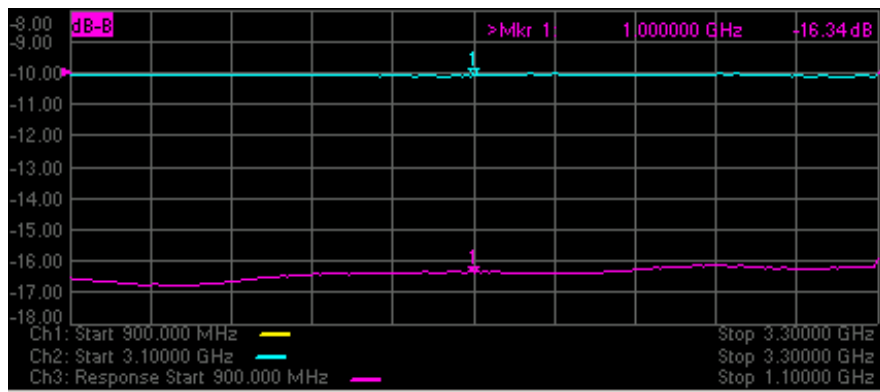

Conversion Compression

[What is Conversion Compression?](#)

[Why Measure Conversion Compression?](#)

[How to Measure Conversion Compression](#)


[Measurement Accuracy Considerations](#)

[See other Frequency Converting Device Measurements](#)

What is Conversion Compression?

Conversion compression is a measure of the maximum input signal level for which a mixer will produce linear operation. It is very similar to the [gain compression](#) experienced in amplifiers.

To understand conversion compression, you must first understand [conversion loss](#). This is the ratio of the mixer output level to the mixer input level. This value remains constant over a specified input power range. When the input power level exceeds a certain maximum level, the constant ratio between input and output power levels begins to change. The point at which the ratio has decreased 1 dB is called the 1-dB compression point. This is illustrated in the graphic below.

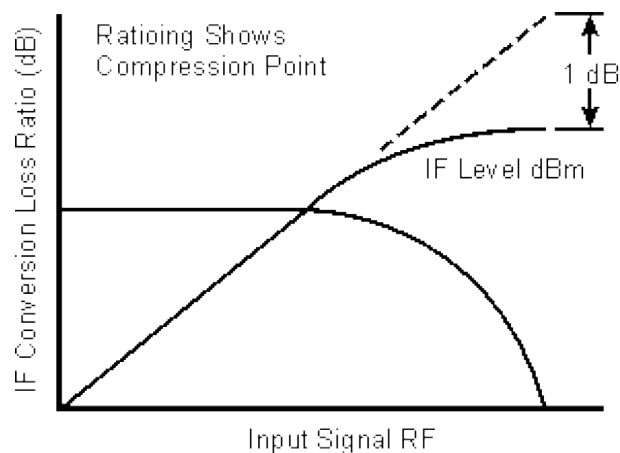

Why Measure Conversion Compression?


Conversion compression is an indicator of the dynamic range of a device. Dynamic range is generally defined as the difference between the noise floor and the 1-dB compression point.

How to Measure Conversion Compression

The equipment and setup used to measure conversion compression are essentially the same as for measuring

conversion loss and is illustrated in the following graphic.

The PNA performs a power sweep using [frequency-offset mode](#) and the resulting display shows the mixer's output power as a function of its input power. The 1-dB compression point (or others such as 3-dB) can be determined using markers.

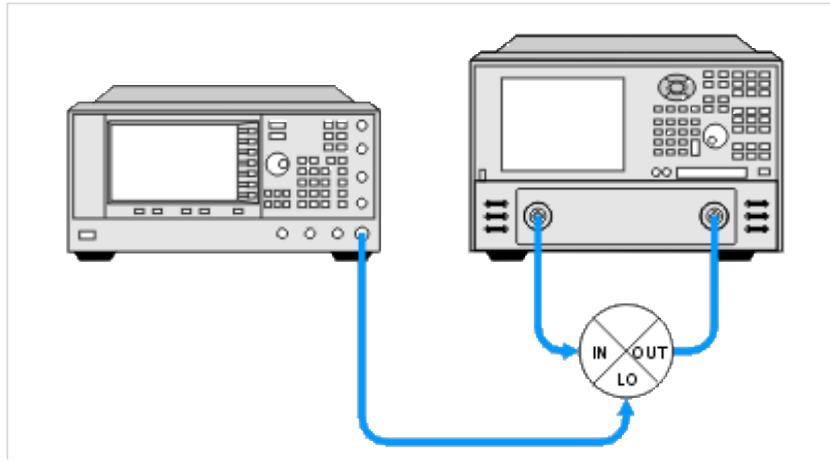

Measurement Accuracy Considerations

Equipment Setup Considerations

- The couplers in the PNA have very good directivity. If the return loss of the DUT is bad, the reflected signal gets sampled by the PNA and can result in errors. This relates to error in DUT gain. To increase the accuracy, an attenuator can be added between the PNA's source port and the DUT's input port. Normally a 6- to 10-dB attenuator is sufficient. Addition of this attenuator, however, decreases the available drive to the DUT.
- With high drive levels the PNA can be driven into compression resulting in measurement error. With excessive drive levels, the PNA can be damaged. Add an attenuator between the output of the DUT and the receiver input of the PNA to avoid these problems.

Calibration Considerations

- [Source power calibration](#) can be used to provide a high level of accuracy for this measurement.
- If your PNA has the [Frequency Converter Application](#) (option 083), you can perform a [Scalar Mixer Calibration](#) to obtain a more accurate measurement.

Isolation Measurements of Frequency Converting Devices

[What is Isolation?](#)

[Why Measure Isolation?](#)

[How to Measure Isolation](#)


[See other Frequency Converting Device Measurements](#)

What is Isolation?

Isolation is a measure of the leakage, or feedthrough, from one port to another. The more isolation a mixer provides, the lower the amount of feedthrough. Isolation is measured at the same frequency as the stimulus, not the converted or shifted frequency. Therefore, Frequency Offset capability is not necessary for these measurements.

Three main isolation terms are of interest for mixer measurements:

- LO-to-OUT isolation (V_{LO})
- LO-to-IN isolation (V_{LO})
- IN-to-OUT feedthrough (V_{IN})

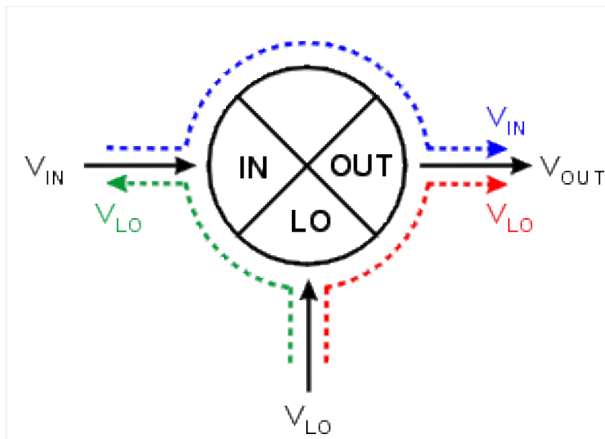

Why Measure Isolation?

Any unwanted signal "leaking" through the device will mix with the desired output signal creating intermodulation products, adding to intermodulation distortion. These unwanted signals may be difficult to filter out.


How to Measure Isolation

Use the following setups to measure the isolation of a mixer:


Note the following:

- The Input to Output isolation is very dependent on the LO power level. Isolation should be measured with the LO power at its normal operating level.
- Each of the ports not being tested should be terminated with an impedance typical of actual operation. This may not always be the characteristic impedance, Z_0 (usually 50 or 75 ohms). For example, if the OUT port of a mixer is intended to be directly connected to a filter, then this filter should be used when measuring the LO-to-IN feedthrough.


LO-TO-IN ISOLATION

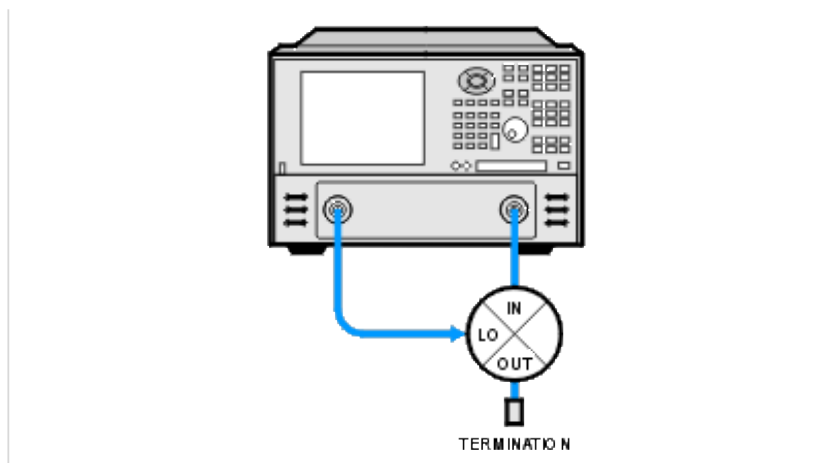

LO-TO-OUT ISOLATION

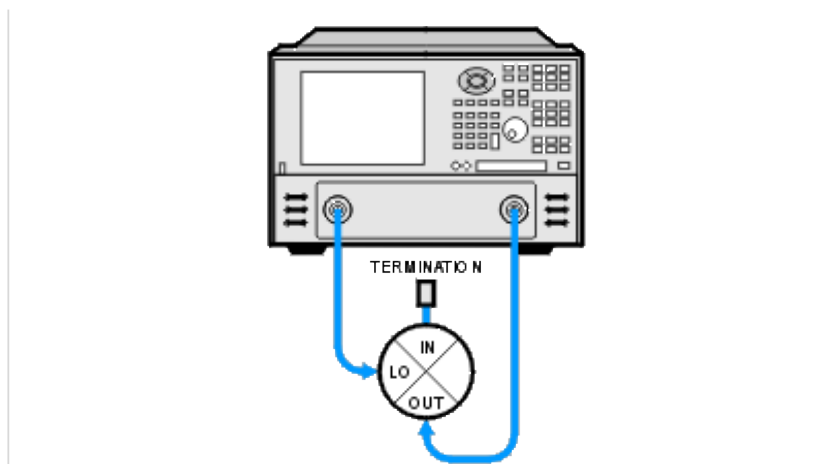

IN-TO-OUT ISOLATION

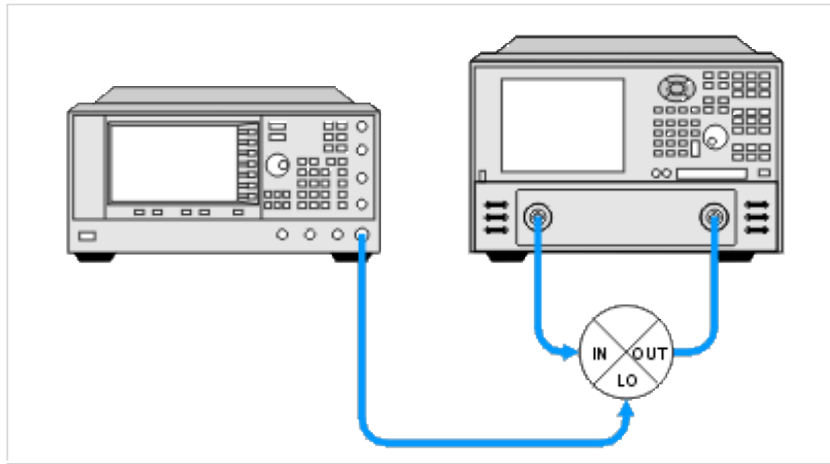

Measuring Converters vs. Mixers

Measuring IN-to-OUT feedthrough of a converter is identical to that of a mixer. The IN-to-OUT feedthrough is generally very small for a converter due to the inclusion of an IF filter in the device. Because of this, the measurement may require the PNA to have increased [dynamic range](#).

Measuring LO leakage (LO-to-OUT and LO-to-IN) of a converter requires a different technique because the LO port is typically not accessible:

- The PNA can be tuned to the frequency of the LO signal and either the OUT or IN port connected to the PNA receiver port. The PNA source port is not connected.
- A spectrum analyzer can be connected to either the OUT or IN port and tuned to the frequency of the LO signal.

Harmonic Distortion

[What is Harmonic Distortion?](#)

[Why Measure Harmonic Distortion?](#)

[How to Measure Harmonic Distortion](#)

[Measurement and Accuracy Considerations](#)

[See other Frequency Converting Device Measurements](#)

What is Harmonic Distortion?

Harmonics are multiples of any signal appearing at the mixer input and also multiples of the LO input. The distortion of the mixer's output characteristics caused by these harmonics is referred to as harmonic distortion. Harmonic distortion is caused by non-linearities in the device.

Harmonics are NOT signals created by two or more signals interacting (mixing); these signals are known as intermodulation products, which result in intermodulation distortion.

Why Measure Harmonic Distortion?

- It can degrade the performance of devices connected to the output of the mixer.
- The harmonics can also mix with other signals present in the mixer, adding to the intermodulation distortion of the mixer.

How to measure Harmonic Distortion

The harmonics can be measured using the PNA with [Frequency Offset](#) (option 80). The frequency of the LO to the mixer is set to zero and multiplier of the RF input is used to set the IF frequency (the harmonic). The equipment setup is shown below.

Since harmonics are specified in dBc, the fundamental RF and both the second and third harmonics are measured and the differences calculated. Multiple channels can be used to do this.

1. Connect the equipment.
2. Setup the measurement for calibration. See also [Measurement and Accuracy Considerations](#).
Use three channels and [frequency offset mode](#):
Channel 1 = F1 to F2
Channel 2 = F1 to 2F2 (frequency offset mode, multiplier = 1)
Channel 3 = F1 to 3F2 (frequency offset mode, multiplier = 1)

- Perform a source power calibration and receiver power calibration over the entire frequency range. See [Measurement and Accuracy Considerations](#).
- Reduce the frequency span and increase the frequency offset multiplier on Channels 2 and 3:
 Channel 2 = F1 to F2 (frequency offset mode, multiplier = 2)
 Channel 3 = F1 to F2 (frequency offset mode, multiplier = 3)
Note: Because the frequency span has been changed from that used for calibration, the source and receiver calibrations will be interpolated.
- Connect the DUT, make the measurement, and calculate the harmonic response:
 Set up markers on Channels 1, 2 and 3, and determine the difference between the marker values to get the dBc value of each harmonic.
 Channel 1 - Channel 2 = 2nd harmonic (dBc)
 Channel 1 - Channel 3 = 3rd harmonic (dBc)
Note: Be sure to set the markers to the appropriate stimulus. Channel 2 markers should be set to twice the frequency of Channel 1 markers. Channel 3 markers should be set to three times the frequency of Channel 1 markers.

Measurement and Accuracy Considerations

Equipment Setup Considerations

- A filter must be used at the input of the mixer to remove the PNA source harmonics.

Calibrations

- If your PNA has the [Frequency Converter Application \(FCA\)](#), you can perform a [Scalar Mixer Calibration](#) to obtain a more accurate measurement.

Return Loss and VSWR

[What are Return Loss and VSWR?](#)

[Why Measure Return Loss and VSWR?](#)

[How to Measure Return Loss and VSWR](#)

[See other Frequency Converting Device Measurements](#)

What is Return Loss and VSWR?

Return loss and VSWR are both linear reflection measurements, even when testing frequency conversion devices, because the reflected frequency is not converted. These measurements are essentially the same as for filters and amplifiers. Learn more about [Reflection Measurements](#).


Why Measure Return Loss and VSWR?

Devices which have poor return loss and VSWR result in loss of signal power or degradation of signal information.


How to Measure Return Loss and VSWR

Setup the PNA measure return loss and VSWR as you would any two-port device. Connect your frequency converting device as shown in the following diagrams:


RETURN LOSS AND VSWR OF MIXER INPUT PORT

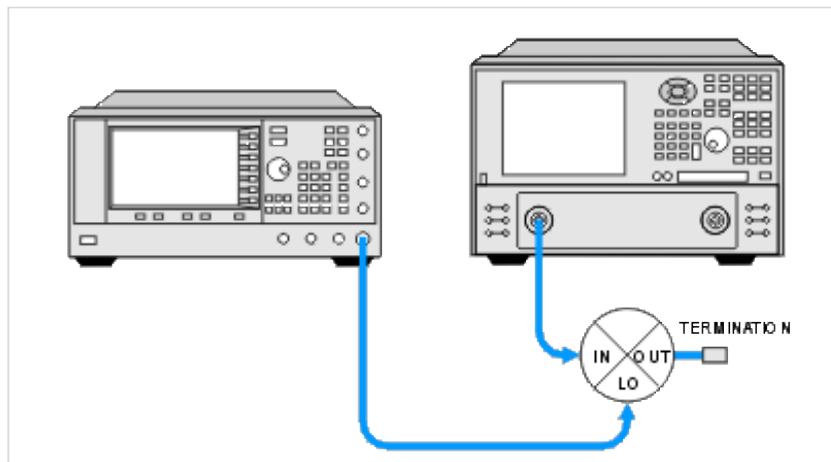

RETURN LOSS AND VSWR OF MIXER OUTPUT PORT

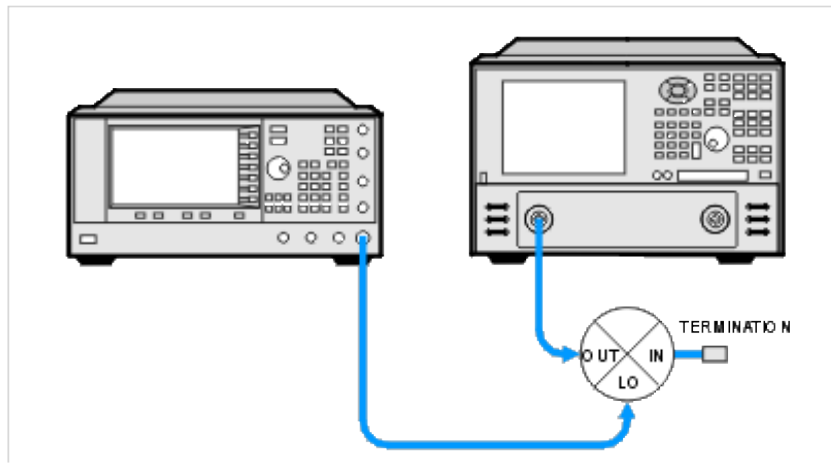

RETURN LOSS AND VSWR OF MIXER LO PORT

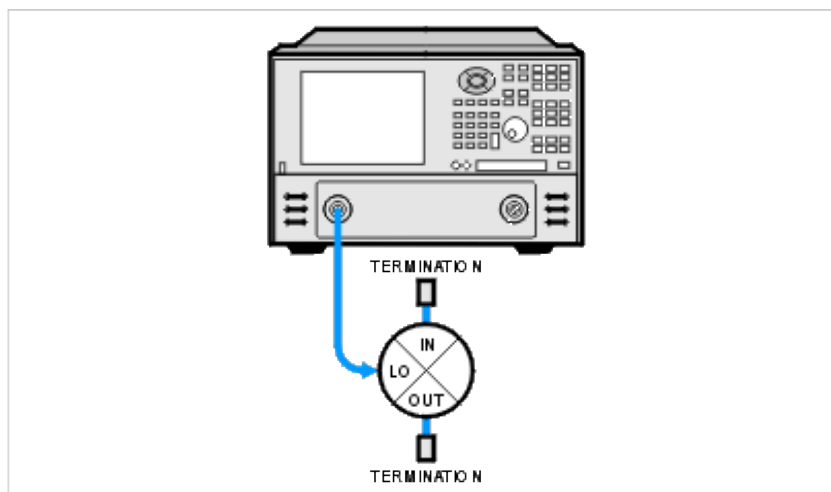

Frequency Converter Application Known Issues

To see the current list of known FCA issues, please visit <http://na.tm.agilent.com/fca/> and click the known FCA issues link.

Frequency Converter Application

The Frequency Converter Application ([Option 083](#)) simplifies testing of frequency converting devices.

Note: [Option 082](#) allows you to make only SMC calibrations and measurements.

- Advanced calibration techniques that provide exceptional amplitude and phase accuracy.
- Simple setup using PNA models with [Internal Second Source](#).
- Control of external signal sources for use as local oscillators.
- A graphical set-up dialog box that lets you:
 - quickly set up the PNA for single or dual conversion devices.
 - calculate and choose where mixing and image products will fall.

For more information, see the following topics:

[Using FCA](#)

[Configure Your Mixer](#)

[FCA Calibrations](#)

[Configure an External LO Source](#)

[SMC with a Booster Amp](#)

[Characterize Adaptor Macro](#)

[Measure a DUT with an Embedded LO](#)

Examples

[How to make a VMC Measurement](#)

[How to make an SMC Measurement](#)

Notes:

- For a detailed understanding of FCA, see our [Mixer Measurements App Notes](#).
- Please submit FCA issues that you find, as well as enhancement requests, to fca_support@agilent.com. See [Known Issues with the FCA](#)
- FCA is **NOT** supported on PNA-L Models. However, [Opt 082](#) (SMC only) IS supported on PNA-L Models.
- FCA is **NOT** supported when using external [Millimeter Modules](#).

Last modified:

Nov 28, 2006 Added clarification to PNA-L note

Using the Frequency Converter Application (Option 083)

[What's New in FCA](#)

[Overview](#)

[How to Create a Measurement](#)

[FCA Measurements Offered](#)

[FCA Measurement Settings](#)

[Change a Measurement](#)

[Speed Up Swept LO SMC Measurements](#)

[Use Nominal Incident Power](#)

[Select X-axis Display](#)

[Save Trace Data](#)

[Avoid Spurs](#)

Examples (not in this topic)

[How to make a VMC Measurement](#)

[How to make an SMC Measurement](#)

Note: Please submit FCA issues that you find, as well as enhancement requests, to fca_support@agilent.com (See Known FCA Issues.)

Not sure if your analyzer is equipped with Option 083? [Here's how to identify your analyzer.](#)

[Other Frequency Converter Application topics](#)

What's new in FCA with Rev 7.2

- Support for PNA-X and [Internal Second Source as LO](#)

What's new in FCA with Rev 6.2

- [Option 082](#) allows you to make SMC calibrations and measurements. (VMC is NOT available.)

What's new in Rev 6.0:

- Calibrated [Swept LO](#) measurements.
- Create any of the [Mixer measurements](#) that are offered. For example, in the past if you wanted an SC12 measurement, you first had to create an SC21 measurement, and then change it to SC12. You can also create more than one mixer measurement at the same time.
- [FCA calibrations](#) are streamlined for consistency and ease of use.
- Added [SMC Power meter and offset](#) settings.
- [Embed/De-embed networks](#) for Waveguide, in-fixture, or on-wafer measurements.
- [Characterize Adaptor Macro](#) creates S2P files from two 1-port cal Sets.
- **SMC-Forward** and **SMC-Reverse** measurements can now be performed in the same channel. Therefore, we no longer refer to them as separate measurement types.
- Previous [Instrument State files](#) that include an FCA measurement can **NOT** be recalled by Revision 6.0.
- FCA is **NOT** supported when using [External Test Set Control](#).

Overview

The following is an overview of how to make an FCA measurement:

1. DECIDE to make either a Scalar measurement or Vector measurement. The calibration method is unique to each of these. [See a comparison of these two measurement types](#).
2. CREATE one or more FCA Mixer measurements.
3. [Setup and CALIBRATE](#) your Scalar or Vector measurement.




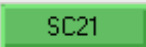
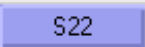

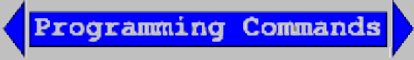
How to Create an FCA Measurement

Note: An FCA measurement and a non-FCA measurement can NOT reside on the same channel.

- **PNA-X:** First assign a VMC or SMC measurement class to a channel. [Learn how.](#)
- **E836x and PNA-L:** From the [New Trace dialog](#), click **Application**

Then change the default measurement to one you choose by doing the following:

How to Change an FCA Measurement

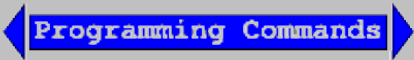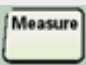Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Press 	1. Click Trace
2. then    	2. then Measure
For PNA-X models	
1. Press MEAS	1. Click Trace/Chan
2. then select parameters	2. then Measure
	3. then select parameters

New FCA Measurement dialog box help

Select one or more Scalar Mixer or Vector Mixer measurements.

- SMC and VMC measurements MUST be made on separate channels.
- After you create a mixer measurement, you can [configure the FCA measurement](#) and make other [FCA settings](#).

FCA Measurements Offered

Learn how to [change the FCA measurement](#).

Important Note: Connecting your DUT to the PNA using FCA:

RF and **IF** terminology is NOT used in the FCA because the PNA does not know how the DUT is labeled or how it will be used. Instead, the general terms **INPUT** and **OUTPUT** are used.

- **INPUT** - The DUT port connected to PNA Port 1.
- **OUTPUT** - The DUT port connected to PNA Port 2.


INPUT and OUTPUT Frequencies are specified using the [Configure Mixer dialog box](#).

Vector Mixer/Converter Measurements

- **VC21 Conversion Loss/Gain (default)** - stimulus at Input, response at Output
- **S11** - stimulus and response at Input
- **S22** - stimulus and response at Output
- **R1** - stimulus at Input, measures absolute power at the R1 receiver (uncorrected)
- **B** - stimulus at Input, measures absolute power at the B receiver (uncorrected)
- VC12 (reverse conversion loss) is NOT offered because of the reference mixer.

See Also: [Measure a DUT with an Embedded LO](#)

Scalar Mixer/Converter Measurements

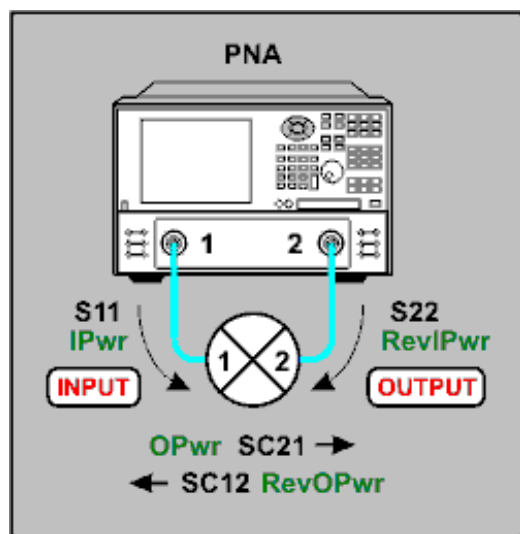

Ratioed

- **SC21 Conversion Loss/Gain** - stimulus at Input, response at Output
- **SC12 Conversion Loss/Gain** - stimulus at Output, response at Input

- **S11** stimulus and response at Input
- **S22** stimulus and response at Output

Unratioed These measurement do NOT use a reference receiver.

- **IPwr** (Incident Power) - stimulus and response at Input
- **RevIPwr** (Reverse Incident Power) - stimulus and response at Output
- **OPwr** (Output Power) - stimulus at Input, response at Output
- **RevOPwr** (Reverse Output Power) - stimulus at Output, response at Input

See Also: [SMC with a Booster Amp](#)

Channel / Window Selections

Channel Number Select the channel for the new traces.

Create in New Window

- Check to create new traces in a new window.
- Clear to create new traces in the active window. When the PNA [traces per window limitation](#) has been reached, no more traces are added.

Auto-Create Windows Check to create new traces in as many windows as necessary. See PNA [number of windows limitation](#).

FCA Measurement Settings

Most of the FCA measurement settings in the remainder of this topic are made using the following menu selection. The choices will be slightly different depending on the active FCA measurement.

How to select several FCA measurement settings

1. First [create an FCA measurement](#), then...

Using front-panel HARDKEY [softkey] buttons

For [PNA-L](#) and [E836x](#) models

1. [Navigate using MENU/DIALOG](#)

PNA Menu using a mouse

◀ Programming Commands ▶

1. Click **Trace**
2. then **Measure**
3. select setting

For [PNA-X](#) models

◀ Programming Commands ▶

1. Press **MEAS**
2. then select setting

1. Click **Response**
2. then **Measure**
3. then select setting

Speeding Up Swept LO SMC Measurements

Swept LO measurements require that an external LO source step in frequency. This can be extremely slow depending on your measurement setup. The following features together will significantly speed up your **SMC** (NOT VMC) swept LO measurement:

- [BNC External LO trigger method](#)
- [Use Nominal Incident Power](#)
- [Apply Cal Set or Cal Type](#)

Use Nominal Incident Power

Each data sweep of a fully corrected SC21 measurement actually requires FOUR data sweeps. Three of the sweeps are not displayed. When you select Use Nominal Incident Power, the reference receiver (R1 or R2) does not measure incident power. Instead, the incident power is assumed to be at the level that was set with the [Source Power Calibration](#) that is done as part of every SMC measurement. The degradation in accuracy is very negligible if the input or output of your test device is well-matched. This selection eliminates sweeps ONLY when either:

- [Output Power](#) is measured OR
- [SMCRsp](#) is applied.

This selection applies to all SMC measurements. This selection never eliminates VMC sweeps.

[See how to select Use Nominal Incident Power.](#)

Select X-axis Display for FCA Measurements

FCA measurements typically have more than one swept parameter. You can choose to view the response (output) of the measurement on the Y-axis while displaying any of the swept parameters (Input, LO1, LO2, Output) on the X-axis of the PNA display.


For example, the following image shows an SMC Fixed Output response versus the swept Input.

Output: 100 MHz (data trace)

Input: 2 GHz to 23 GHz (X-axis)

LO: 1.9 GHz to 22.9 GHz (not shown)

Marker annotation shows Output power at Input frequency.

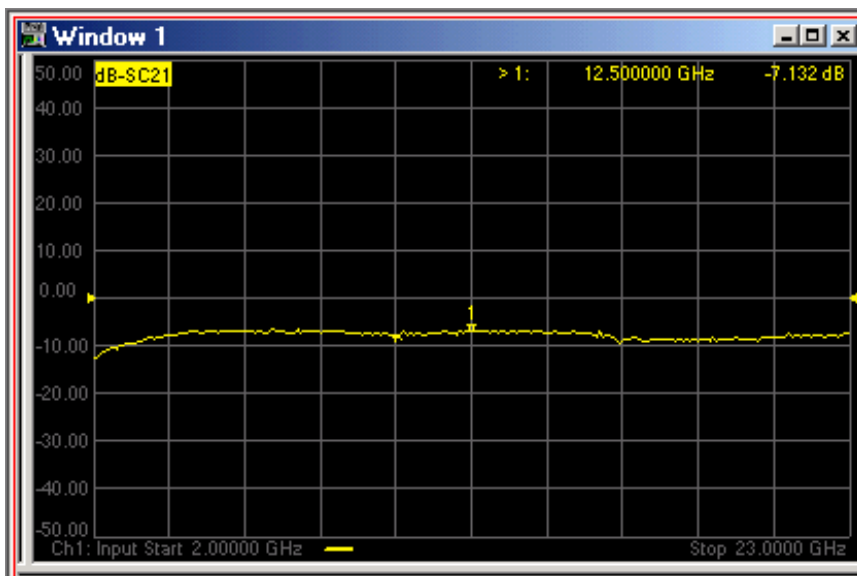

[See How to Select X-axis Display](#)

Save Trace Data


You can save your Frequency Converter measurement data in S2P format to disk.

Note: This is the only method to save Frequency Converter .S2P files from the front panel. Do NOT click **File, Save As...** to save these S2P data files.



Beginning with PNA release 6.03, save FCA .S2P files remotely using the standard [Save SNP](#) programming commands.

[See How to Save Trace Data](#)

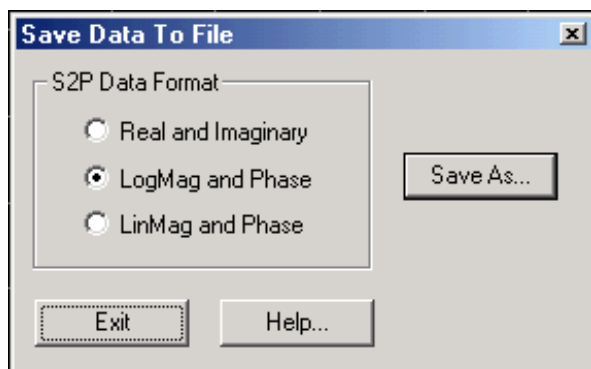

Save Data to File dialog box help

Allows you to save Frequency Converter measurement data to an S2P file. The data is saved in S2P format much like standard PNA data. [Learn more about .S2P files.](#)

Note: This is the only method to save Frequency Converter .S2P files. Do NOT click **File, Save As...** to save these S2P data files.

S2P Data Format Select the data format. This selection is independent of the PNA display.

Save As Click to specify a file name and location for the saved data.

Exit Closes the dialog box without saving the data. To save the data, you must click on the Save As button before clicking the Exit button.

Notes:

Each record contains 1 stimulus value and 4 parameters (total of 9 values) as follows:

Stim Real(p1) Imag(p1) Real(p2) Imag(p2) Real(p3) Imag(p3) Real(p4) Imag(p4)

where **pX** is the parameter depending on measurement type:

Measurement Type	p1	p2	p3	p4
Scalar	S11	SC21 (FWD)	SC12 (REV)	S22
Vector	S11	VC21	VC12	S22
Mixer Characterization	Directivity	Source Match	Reflection Tracking	M21

- If correction is OFF, data is only saved for the active parameter. Zeros are saved for all other parameters.
- If correction is ON, data is saved for all of the parameters.

All files contain the following Header Information: Brackets [] contain parameters.

```
!Agilent [Instrument Model Number]: [version]
!Mixer S2P File: [Mixer Measurement Type]
!Parameters: [Parameter List]
!Calibration State: [On/Off]
```

```
!# Begin Mixer Setup
![Mixer Setup parameters listed here]
![Mixer Parameter 1]
.
.
![Mixer Parameter n]
!# End Mixer Setup

# [S2P data here]
```

Avoid Spurs

The Avoid Spurs feature of the Frequency Converter Application attempts to prevent unwanted mixing products from appearing on the PNA screen. The Avoid Spurs feature does not significantly impact measurement speed.

Note: The Avoid Spurs feature is OFF by default for FCA calibrations. For highest accuracy, make measurements with the Avoid Spurs feature at the same state (ON or OFF) as was used when calibrating.

- To enable Avoid Spurs, check **Avoid Spurs** on the [Mixer Setup](#) dialog box.

Description

A spur, or spurious signal, is a term used to describe the unwanted product of two signals mixing together. When you configure the mixer setup dialog box for a desired Output, the PNA computes the frequencies of potential unwanted signals. By manipulating internal PNA hardware, these signals are avoided and do not appear on the PNA display. This means you do not need to use external filters to prevent spurious signals from appearing on the PNA display.

The time required for the PNA to compute the frequencies of unwanted spurious signals MAY be noticeable depending on the number of data points in your measurement. However, once computed, the time required for the PNA to avoid the spurs is usually insignificant.

Limitations

The Avoid Spurs utility cannot avoid every spur. However, when there is a choice of spurs to avoid, it will avoid the largest spur.

The Computation of Avoided Spurs

The Avoid Spur computer avoids the following spurs:

- LO, and its interaction with internal PNA components, and 16 of its harmonics.
- Input frequencies and 16 of its harmonics.
- Undesired Image frequencies (Sum or Difference) and 16 of its harmonics.

Last modified:

5-Oct-2007 Added link to embedded LO

Frequency Converter Application (Option 083) Calibrations

Frequency Converter Application (Option 083) offers two advanced calibration choices for mixer or converter measurements that provide exceptional amplitude and phase accuracy.

Note: [Option 082](#) allows you to make only SMC calibrations and measurements.

[Comparison of Scalar and Vector Mixer Cals](#)

[SMC Setup and Overview](#)

[VMC Setup and Overview](#)

[FCA Calibration Wizard](#)

[How to Perform an FCA Calibration](#)

[Apply an FCA Cal Set and Cal Type](#)

Examples (not in this topic)

[How to make a VMC Measurement](#)

[How to make an SMC Measurement](#)

Not sure if your analyzer is equipped with Option 083? [Here's how to identify your analyzer.](#)

To learn more about the FCA capability and improving FCA measurement accuracy, see [FCA App notes.](#)

Please submit FCA issues that you find, as well as enhancement requests, to fca_support@agilent.com (See [Known FCA Issues.](#))


[Other Frequency Converter Application topics](#)

Comparison of Scalar and Vector Mixer Cals

	Scalar Mixer Calibration	Vector Mixer Calibration
Overview	<p>Provides highest Scalar (amplitude only) accuracy for measurements of conversion loss/gain.</p> <p>Combines SOLT and power-meter calibration.</p> <p>Simpler setup than Vector Mixer Calibration.</p>	<p>Provides unparalleled accuracy for measurements of relative phase and absolute group delay.</p> <p>Uses combination of SOLT standards and a reciprocal mixer/filter pair during calibration.</p> <p>More complicated setup and calibration procedure than Scalar Mixer Calibration.</p> <p>After calibration, both reciprocal and non-reciprocal mixers and converters can easily be measured.</p>
Types of Transmission Measurements	Both forward (SC ₂₁) and reverse (SC ₁₂) directions.	<p>Amplitude response VC₂₁</p> <p>Phase response</p> <p>Group delay</p>
Equipment Required	Power meter and sensor	<p>Calibration mixer/filter combination (must be reciprocal $S_{21} = S_{12}$.)</p> <p>Reference mixer</p> <p>External source</p>
	<p>Common equipment for both SMC and VMC</p> <ul style="list-style-type: none"> • Mechanical cal kit or ECal module • PNAs with one GPIB port require the Agilent 82357A USB/GPIB Interface (Contact component_test@agilent.com for this product. The 82357B is not a direct replacement.) 	

Note: Find more information comparing these two mixer calibration types at <http://www.tm.agilent.com>. Click "Library" and use the search function to find the white-paper titled "Comparison of Mixer Characterization Using New Vector Characterization Techniques".

SMC Calibration Setup and Overview

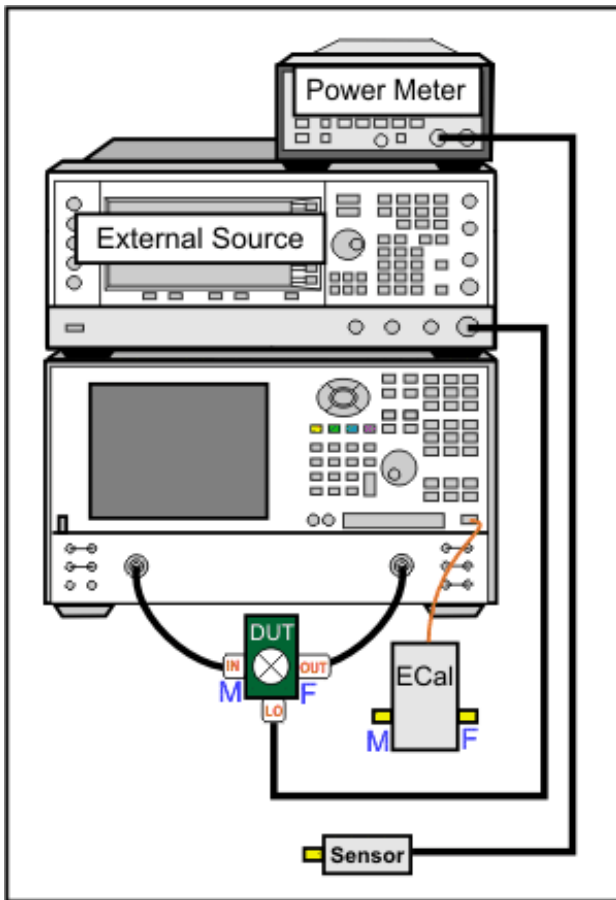

Note: When using a PNA-L or PNA-X with Internal Second Source, the external source is NOT necessary.
[Learn which PNA ports can be used for the LO.](#)

Connect **External Source** and **Power Meter** to the PNA GPIB using any of the following methods:

For PNAs with [two GPIB ports](#), connect these devices to the Controller port.

For PNAs with one GPIB ports:

- The [Agilent 82357A USB/GPIB Interface](#) - **highly recommended** - allows for the use of a remote PC to control the PNA.
- The standard GPIB Interface - with the following limitations:
 - The PNA cannot be controlled remotely as talker / listener over GPIB. First put the PNA in System Controller mode. [Learn how.](#)
 - Available only on PNA releases 4.2 and later.


Learn how to [Configure an External LO Source](#)

Overview of the Scalar Mixer Calibration.

The Calibration Wizard guides you through this process.

1. Connect a power meter sensor to PNA Port 1. At each step of the input and output frequency, the PNA measures:
 - input match of the power sensor
 - source power of the PNA
2. Perform two [2-port SOLT calibrations](#): one over the INPUT frequencies and one over the OUTPUT frequencies of the DUT. (If your DUT is a linear device, the calibration uses only the INPUT frequency range.) Use either a mechanical calibration kit or an ECal module.

VMC Calibration Setup and Overview

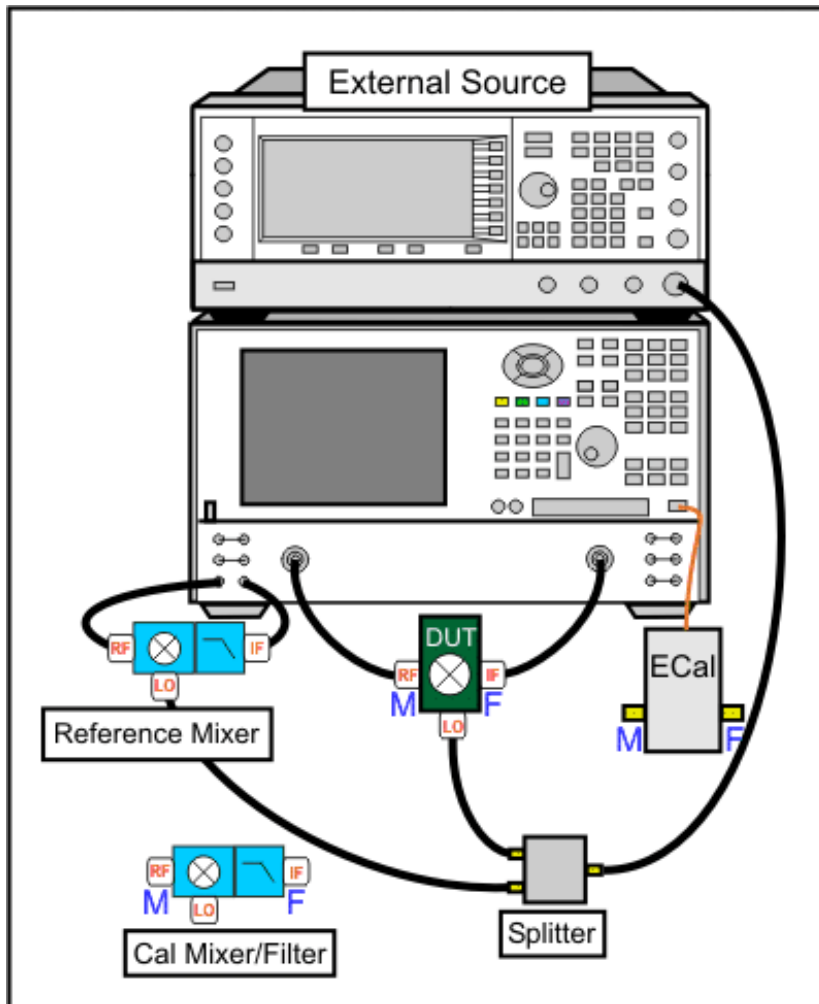

1

Note: When using a PNA-X with Internal Second Source, the external source is NOT necessary.

- [See note regarding LO](#)

[power out both second source ports](#)

- [Learn which PNA ports can be used for the LO.](#)
- [Measure a DUT with an Embedded LO](#)

Reference mixer provides a phase reference for the measurements. The reference mixer is connected in the reference receiver path of the network analyzer, between the source out and receiver R1 in ports, as shown below.

The reference mixer is considered part of the test system setup like the test cables. It remains in place during the entire calibration and measurement process. The reference mixer is switched in and out of the measurement path by the PNA as needed. [See how to manually switch the reference mixer.](#)

The reference mixer does not need to be reciprocal and does not have to match the calibration mixer or the mixer-under-test in performance. The only requirement of the reference mixer is that it cover the same frequency range as the mixer under-test. In general, it is valuable to select a reference mixer that can be used with a variety of different setups. For example, a broadband mixer can be used in place of several narrow-band alternatives.

A low pass filter on the output of the reference mixer can be used to suppress the LO leakage signal that comes out of the reference mixer output. It is not strictly needed, but ensures that the PNA will not have any source unlock or unlevel errors due to the LO leakage.


- Connect the Reference Mixer INPUT to PNA **Ref 1 Source out**
- Connect the Reference Mixer

OUTPUT to PNA Rcvr R1 In

Calibration mixer/filter is

characterized either before or during a VMC calibration. It is used during the VMC calibration as the THRU standard. The calibration mixer/filter combination must meet the following requirements:

- The mixer must be reciprocal over the frequency range of the mixer under test. This means that it has the same magnitude and phase response in the up-converting and down-converting directions ($C_{21} = C_{12}$) as shown in the following diagram.

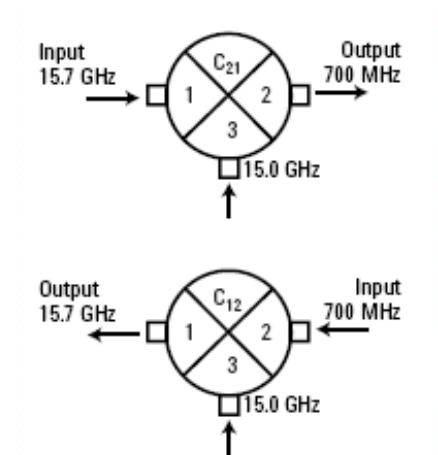

- If the Input and Output frequency ranges are overlapping, the mixer must have Input to Output Isolation greater than 10 dB more than the conversion loss in the overlapping range.
- The filter must reject the undesired mixing product, and pass the desired mixing product, at the output of the cal mixer. This requirement can be made easier by characterizing the mixer/filter as a downconverter. [Learn more.](#)

Power splitter

LO Source(s)

Note: When using a PNA-X with Internal Second Source, the external source is NOT necessary.

- [See note regarding LO power out both second source ports](#)
- [Learn which PNA ports can be used for the LO.](#)

Connect external sources to the PNA GPIB using any of the following:

For PNAs with [two GPIB ports](#), connect to the GPIB Controller port.

For PNAs with one GPIB ports:

- The [Agilent 82357A USB/GPIB Interface](#) - **highly recommended** - allows for the use of a remote PC to control the PNA.
- The standard GPIB Interface - with the following limitations:
 - The PNA cannot be controlled remotely as talker / listener over GPIB. First put the PNA in System Controller mode. [Learn how.](#)
 - Available only on PNA releases 4.2 and later.

Learn how to [Configure an External LO Source](#)

Overview of the Vector Mixer Calibration

The Calibration Wizard guides you through this process. The first three steps characterize the calibration mixer that is used as the THRU standard during the calibration process.

1. Perform a [2-port SOLT calibration](#) over the INPUT frequency range of the DUT, and another [2-port SOLT calibration](#) over the OUTPUT frequency range. Use either a mechanical calibration kit or an ECal module.
2. Characterize the input and output match of the [calibration mixer/filter combination](#) with the external LO connected and the output terminated with an open, short, and load. [Learn how to connect the calibration mixer/filter.](#) Once characterized, an S2P file is saved and can be recalled for use in subsequent VMC calibrations using the same stimulus settings.


3. Connect the reference mixer between the Source Out and Rcvr R1 front-panel connectors. Connect the output port of the calibration mixer/filter combination to PNA Port 2 (or at the end of the cable attached to the port).
4. Measure the calibration mixer/filter combination as the THRU calibration standard.
5. The PNA calculates the error terms necessary to make corrected phase measurements of your mixer/converter under test.

To learn more about VMC capability and improving measurement accuracy, see www.Agilent.com and search for App notes (AN 1408-1) and (AN1408-3).

The FCA Calibration Wizard

The following dialog boxes are presented during SMC, VMC, and [Mixer Characterization](#) (used in VMC).

Click a box to learn about that step.

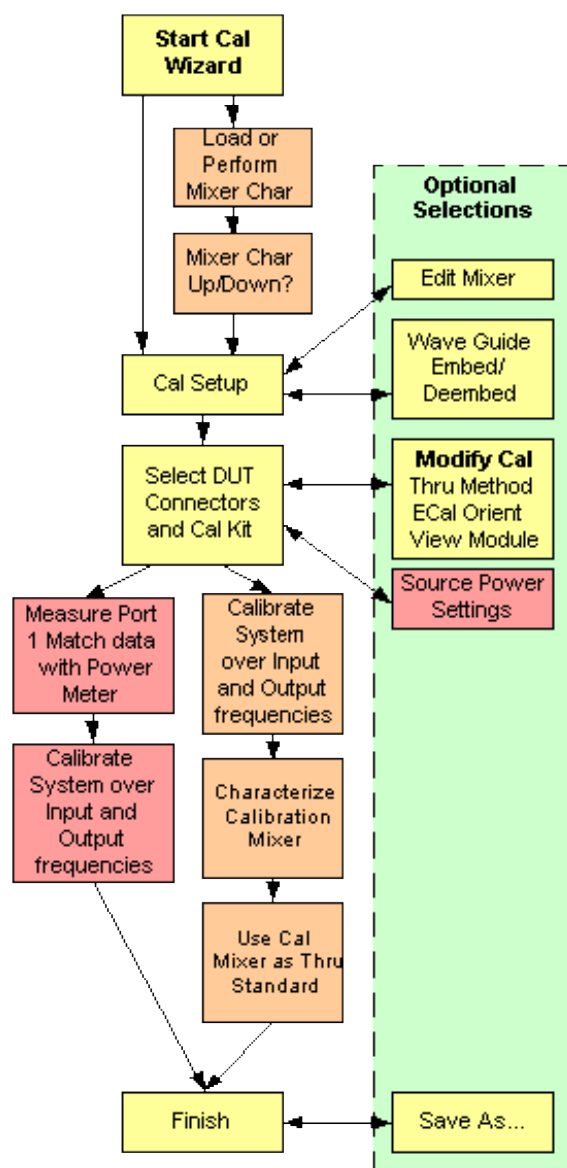


Note: In the above diagram and following procedure:

- **yellow** - steps that are common to both calibration methods.
- **tan** - VMC only steps.
- **red** - SMC only steps

How to Perform an SMC, VMC, or Mixer Characterization Calibration

1. [Create an FCA measurement](#), then...

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	Programming Commands
1. Navigate using MENU/DIALOG	1. Click Calibration 2. then Calibration Wizard or Mixer Characterization
For PNA-X models	Programming Commands
1. Press RESPONSE 2. then [Cal Wizard]	1. Click Response 2. then Cal Wizard

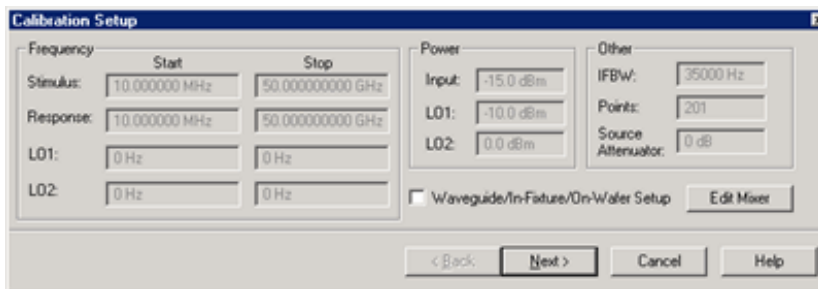

The Calibration Setup dialog box contains the following fields and controls:


- Frequency:**
 - Stimulus: Start (10.000000 MHz), Stop (50.000000000 GHz)
 - Response: Start (10.000000 MHz), Stop (50.000000000 GHz)
 - L01: 0 Hz, L02: 0 Hz
- Power:**
 - Input: -15.0 dBm
 - L01: -10.0 dBm, L02: 0.0 dBm
- Other:**
 - IFBW: 35000 Hz
 - Points: 201
 - Source Attenuator: 0 dB
- ☐ Waveguide/In-Fixture/On-Wafer Setup
-
- Navigation buttons: < Back, Next >, Cancel, Help

Calibration Setup dialog box help

Allows you to review and change the settings for your FCA calibration.

Waveguide/In-fixture/On-Wafer Setup Invokes the following **Setup** dialog box.

Edit Mixer Click to display the [Configure Mixer](#) dialog box.

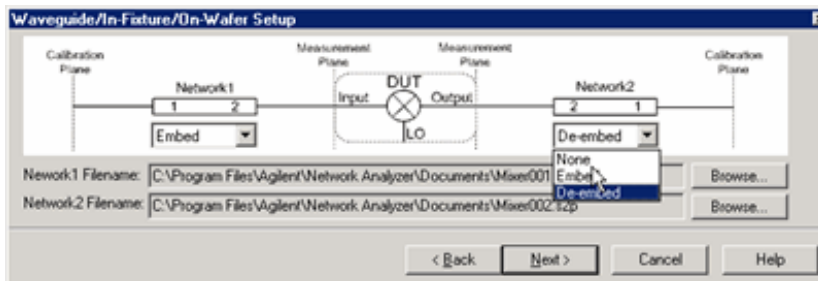

The Waveguide/In-Fixture/On-Wafer Setup dialog box shows a schematic diagram and the following fields:

- Schematic Diagram:** Shows Calibration Plane, Network1 (ports 1, 2), Measurement Plane, DUT (Input, Output, LO), Measurement Plane, Network2 (ports 2, 1), and Calibration Plane.
- Network1:** Embed dropdown menu.
- Network2:** De-embed dropdown menu (with a sub-menu showing None, Embed, and De-embed).
- Network1 Filename:** C:\Program Files\Agilent\Network Analyzer\Documents\Mixer001
- Network2 Filename:** C:\Program Files\Agilent\Network Analyzer\Documents\Mixer002.tcp
- (twice)
- Navigation buttons: < Back, Next >, Cancel, Help

Waveguide/In-fixture/On-Wafer Setup dialog box help

This dialog box appears ONLY if you checked the **Waveguide/In-fixture/On-Wafer Setup** box in the previous [Cal Setup](#) dialog.


Allows you to embed (add) or de-embed (remove) circuit networks on the input and output of your mixer measurement.

For Network1 (Input) and Network2 (Output) select **Embed**, **De-embed**, or **None**.

Browse Click to navigate to the .S2P file that models the network to embed or de-embed.

Notes

- [Characterize Adaptor Macro](#) can be used to create the S2P file from two 1-port Cal Sets.
- The S2P file for Network1 (on the input of the mixer), must cover the Input frequency range. The S2P file for Network2 (on the output of the mixer), must cover the Output frequency range.
- The frequency range of the S2P file must be the same, or larger than, the frequency range of the FCA measurement. If more frequencies are included in the file, and the data points do not exactly match those of the measurement, interpolation will be performed.
- In all cases:
 - Port 1 of each network is assumed to be connected to the PNA.
 - Port 2 of each network is assumed to be connected to the DUT.

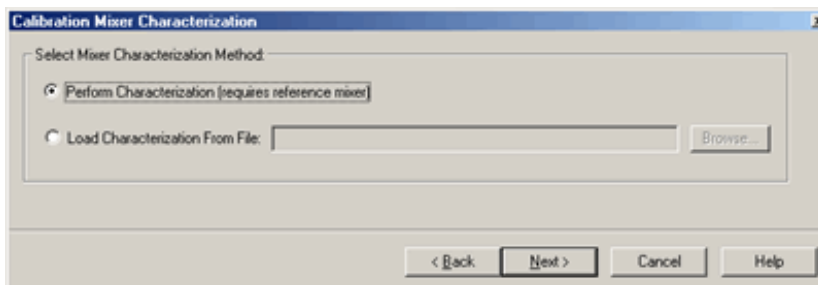

Calibration Mixer Characterization dialog box help

VMC and Mixer Characterization ONLY

What is Calibration Mixer Characterization? For a brief explanation, see [Calibration Mixer](#).

Select Mixer Characterization Method


Perform Characterization (requires a reference mixer) Performs a Mixer characterization in addition to the VMC calibration. The mixer characterization file will be saved at the end for use in subsequent VMC calibrations. Choose this selection if you do NOT already have a mixer characterization file to load.

Load characterization from file Loads an S2P calibration mixer characterization file. Click **Browse** to locate the file.

- The frequency range of the S2P file MUST be the same, or larger than, the frequency range of the FCA measurement. If the S2P file frequency range is larger, or the data points do not exactly match those of the measurement, interpolation will be performed.
- The VMC calibration requires that the calibration mixer be connected in the same orientation as that in which it was characterized. The direction in which it was characterized is not part of the file that is recalled. You have to remember and connect it appropriately.

"Invalid Mixer Characterization File" is displayed if the frequency range of the S2P file is smaller than those of the measurement.

Note: A Mixer Characterization Cal can be performed separately. [Learn how.](#)

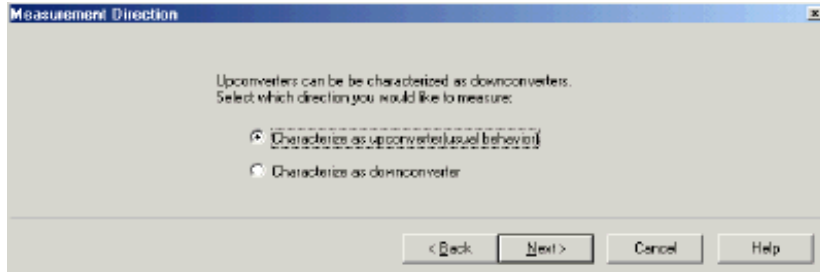

Measurement Direction dialog box help


VMC and Mixer Characterization ONLY

This dialog box appears ONLY if your settings in the [Mixer Setup](#) dialog box indicate that your DUT is being tested as an upconverter (input < output). It allows you to characterize the [Calibration Mixer / Filter](#) as a downconverter (input > output) or an upconverter.

The following example shows why you would choose to characterize the calibration mixer as a downconverter. Consider a DUT being used as an upconverter. The input frequency is 70 MHz, the LO is 20 GHz, and the selected (+) output frequency is 20.07 GHz. If we chose (-) in the [mixer setup dialog](#), the output frequency would be 19.93 GHz.

- **Characterize as upconverter** A very sharp cutoff filter is required to reject the undesired output of 19.93 GHz and pass the desired 20.07 GHz.
- **Characterize as downconverter** The input frequency is 20.07 GHz; the LO is 20 GHz. The sum (+) output is 40.07 GHz and the diff (-) output is 70 MHz. These are very easy to separate with a low-pass filter. The original frequencies are always used in the downconversion process, so be sure to choose a filter that will pass 70 MHz and reject 40.07 GHz.

[See connection diagrams.](#)

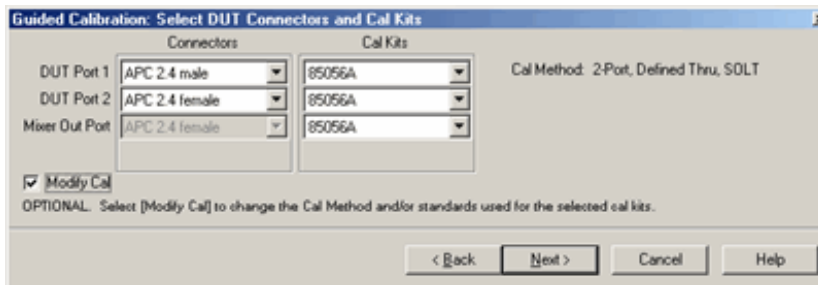

Select DUT Connectors and Cal Kits dialog box help

Allows you to specify the connector type of each DUT port.

The DUT port that is connected to PNA Logical Port 1.

DUT Port 1 Specify the Mixer **Input** connector type and the Cal Kit to use.

DUT Port 2 Specify the Mixer **Output** connector type and the Cal Kit to use.

Mixer Out Port (VMC and Mixer Characterization ONLY) Output port of the image filter that is connected to the [calibration mixer](#). Specify the Cal Kit / standards to use for the measurement of the calibration mixer / filter combination.

View / Modify Source Cal Settings (SMC ONLY) These settings allow you to specify the accuracy of the Input power to the device. Click to invoke the [Source Cal Settings](#) dialog.


Note: If your DUT connectors are:

- **Waveguide** Change the system impedance to 1 ohm before performing a calibration. See [Setting](#)

[System Impedance](#).

- **Not listed** (male and female) Select **Type A** as the connector type. Type A requires a calibration kit file containing the electrical properties of the standards used for calibration (see [Calibration kits](#)).
- **Unspecified** (like a packaged device) Select **Type B** as the connector type. Type B requires a calibration kit file containing the electrical properties of the standards used for calibration (see [Calibration kits](#)).

Modify Cal Check to invoke the [Modify Cal](#) dialog. If performing a Mixer Characterization Cal at the same time as VMC Cal, two Modify Cal dialogs will be presented, one after the other.

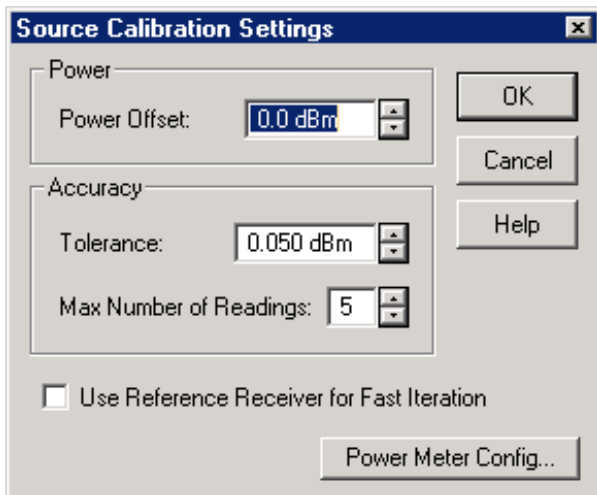

Source Calibration Settings dialog box help

SMC ONLY Allows you to modify the settings that are used during the [Source Calibration](#) portion of an SMC cal. These settings allow you to specify the accuracy of the Input power to the device.

Note: Be sure that the frequency range of your power sensor covers the frequency range of your measurement. This does NOT occur automatically.

Power

Power Offset Allows you to specify a gain or loss (in dB) to account for components you connect between the source and the reference plane of your measurement. For example, specify 10 dB to account for a 10 dB amplifier in the path to your DUT. Offset power is added to, or subtracted from, the power level that is set in the [mixer configuration dialog box](#).

For information about how and when to use this setting, see [SMC with a Booster Amp](#).

Accuracy

At each data point, power is measured using the [specified Power Meter Settling Tolerance](#) and adjusted, until the reading is within this Accuracy **Tolerance** or the **Max Number of Readings** has been met. The **last** power reading is plotted on the screen against the Tolerance limit lines.

Tolerance Sets the maximum desired deviation from the specified **Cal Power** level.

Max Number of Readings Sets the maximum number of readings to take at each data point for iterating the

source power.

Use Reference Receiver for Fast Iteration


When checked, the first reading at each data point is used to calibrate the reference receiver. Subsequent readings, if necessary to meet your accuracy requirement, are measured using the reference receiver. This technique is much faster than using the power meter with almost no degradation in accuracy.

NOTE: Do NOT use the **Reference Receiver for Fast Iteration** feature if there is a component before the power sensor that exhibits non-linear behavior, such as a power amplifier in compression.

Power Meter Config Invokes the [Power Meter Settings](#) dialog box

OK Applies settings and closes dialog.

Cancel Cancels changes and closes dialog.

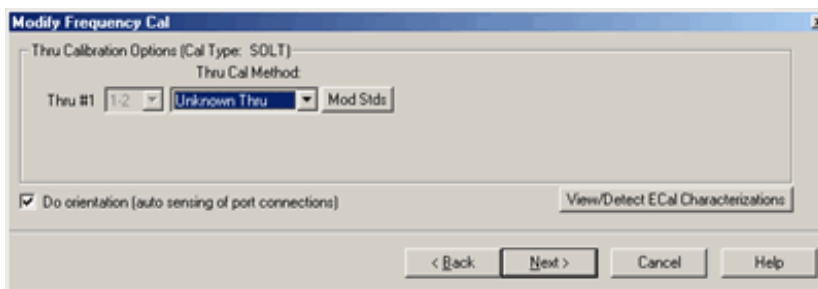

Modify Frequency Cal dialog box help

For SMC and VMC calibrations - NOT for Mixer Characterization.

Thru Calibration Options

Thru Cal Method For each Thru connection, choose the Thru method. [Learn more about these choices.](#)


Mod Stds Click to invoke the [Modify Calibration Selections](#) dialog box.

The following selections are available ONLY if using an ECal module.

Do orientation When this box is checked (default) the PNA senses the ECal model and direction in which the ECal module port is connected to the PNA ports. If power to the ECal module is too low, it will appear as if there is no ECal module connected. If you use low power and are having this problem, clear this check box to provide the orientation manually.

Orientation occurs first at the middle of the frequency range that you are calibrating. If a signal is not detected, it tries again at the lowest frequency in the range. If you have an **E8361A** or **E836xB** PNA and do an ECal completely within 10 - 20 MHz OR 60 - 67 GHz, you may need to do orientation manually. There may not be sufficient power to orient the ECal module at those frequencies.


View/Detect ECal Characterizations Appears only if an ECal module is selected for use. Click to invoke the [View ECal Modules and Characterizations](#) dialog box. Displays a list of ECal modules that are connected to the PNA.

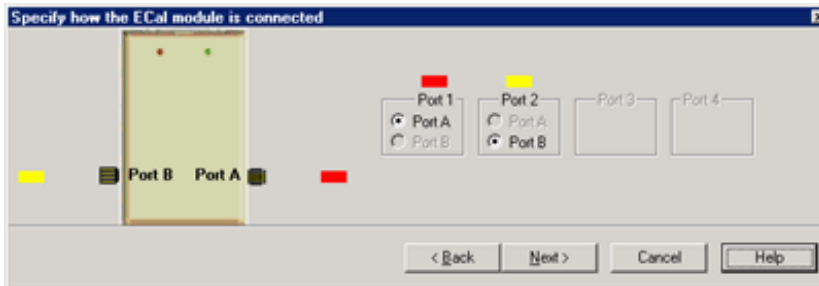

Specify how the ECal module is connected dialog box help

This dialog box appears when the **Do orientation** checkbox in the previous **Modify Frequency** dialog box is cleared.


Click the ECal Port that is connected to each PNA port.

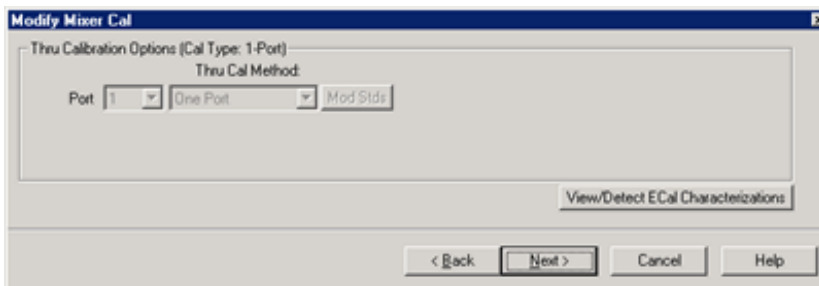

Modify Mixer Cal dialog box help


Mixer Characterization ONLY. The Thru standard is not measured. Therefore, the Thru Cal Method choices are not available.

View / Detect ECal Characterizations Available ONLY if using an ECal module. Invokes the [Select ECal Module and Characterization](#) dialog box.

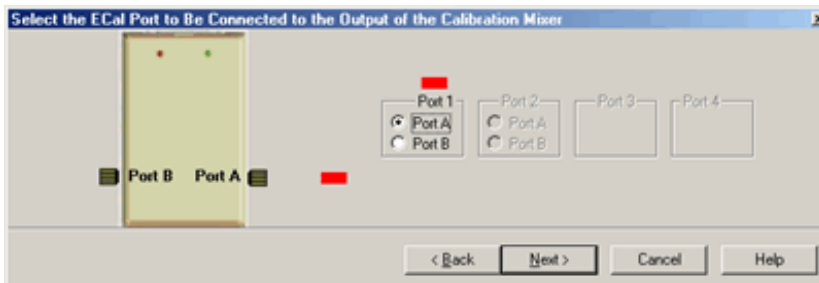

Select the ECal Port to be connected to the Output of the Calibration Mixer dialog box help

Select the ECal Port to be connected to the output of the image filter of the Calibration Mixer / Filter combination. [See connection diagram](#) of Calibration Mixer / Filter combination.

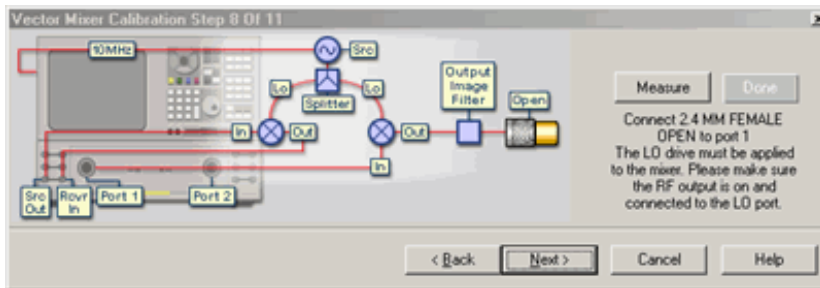

Vector Mixer Cal dialog box help

VMC and Mixer Characterization

Connect the Open, Short, and Load standards to the image filter output, then click **Measure**.


This portion of the calibration characterizes the calibration mixer.

The connection is different depending on if the calibration mixer is an upconverter being characterized as a down converter.


Note:

The following are **simplified** connection diagrams - the reference mixer and LO signals must also be connected.


As a **Downconverter**. (The PNA automatically switches to make the S22 measurement on the device.)

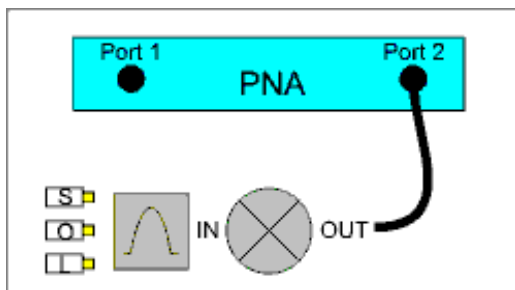

As an **Upconverter**

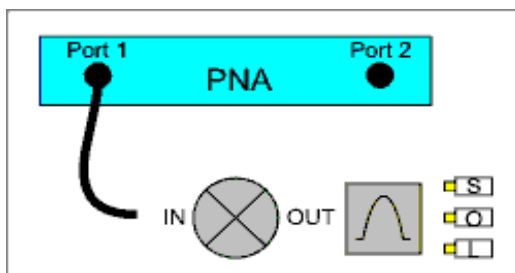

Done Click to proceed to the [Calibration Complete](#) dialog. Available only after all measurements for the calibration are complete.

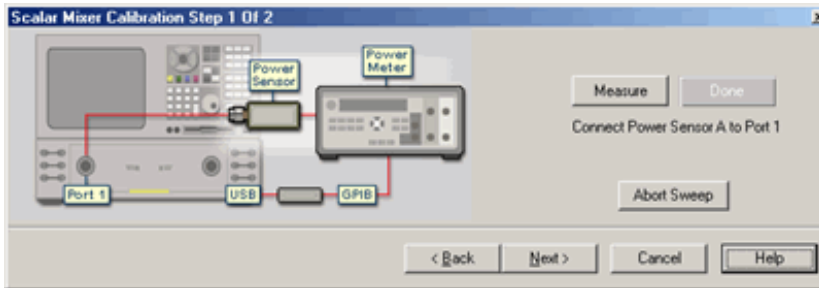

Scalar Mixer Calibration - Power Cal dialog box help.

SMC ONLY Perform the power-meter portion of the calibration.

Connect your power sensor to port 1 as shown in the diagram. Then click **Measure**.

Measure Begins the power meter measurements and then continues to the next step.

Done Click to proceed to the [Calibration Complete](#) dialog. Available only after all measurements for the calibration are complete.


Abort Sweep Stops the power meter measurement.

Back Returns to the previous dialog box.

Next Continues to the next calibration step. Does NOT make a measurement.

Notes

- Beginning with Rev 6.0, a power meter measurement is only necessary on port 1.
- SMC calibration performs 10 averages at the beginning and at the end of the power cal step to ratio the difference between normal and offset R1 measurements in the calibration band of frequencies. The averaging is done to remove a reasonable amount of noise from the ratio measurement.
- From [Source Calibration dialog](#) you can use the [Power Loss Compensation Table](#) to compensate for an adapter used to connect the power meter sensor.

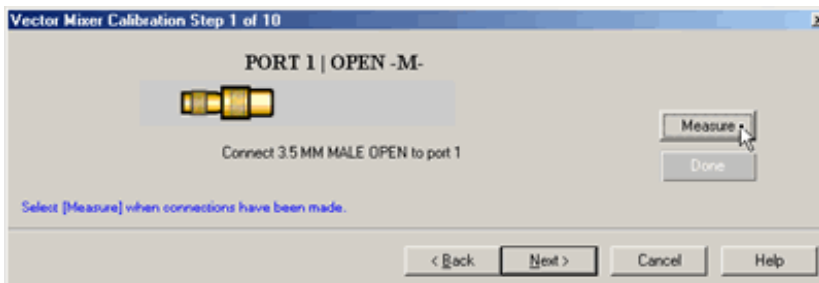

Measure Calibration Standards dialog box help

Prompts for standards to be measured. Connect the standard, then click **Measure**.

Measure Measures the mechanical standard and continue to the next calibration step.


[ReMeasure] Replaces Measure after standard has been measured. Allows you to remeasure a standard.

Done Click to proceed to the [Calibration Complete](#) dialog. Available only after all measurements for the calibration are complete.

Back Returns to the previous dialog box.

Next Does NOT make a measurement. Proceeds to the next required step.

Cancel Exits the Calibration Wizard.

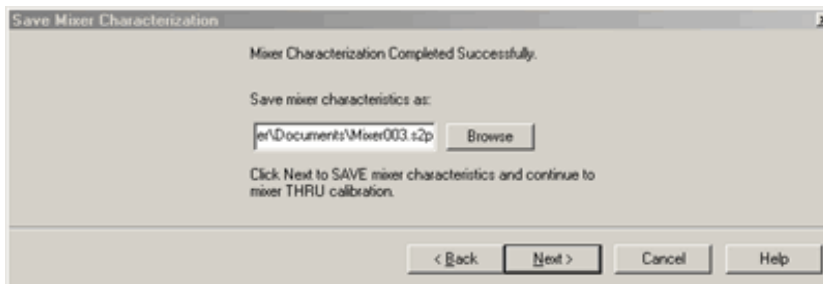

Save Mixer Characterization dialog box help


VMC ONLY

Allows you to save the characterization data of your [calibration mixer](#). When performing another VMC calibration using the same calibration mixer, this [S2P file can then be recalled](#).

Browse Navigate to the location where you want to save the characterization data of your calibration mixer. Either use the default file name or enter a custom file name.

Next Saves the mixer characterization file and continues with the next step in the full system calibration routine.

Finish Replaces **Next** if you are only characterizing the calibration mixer instead of performing a full system calibration. Saves the mixer characterization file and exits the mixer characterization routine.

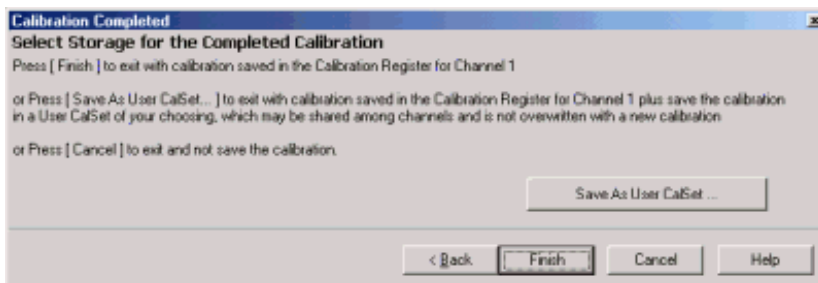

Calibration Completed dialog box help

Finish Save to the channel's calibration register.

Save As User Cal Set Invokes the [Save as User Cal Set dialog box](#) AND save to the channel's calibration register.

Cancel Calibration is NOT applied or saved.

Learn about [Calibration Registers](#).

Learn about [User Cal Sets](#)

Create and Apply an FCA Cal Set or SMC Cal Type

You can create an FCA measurement and apply an existing Cal Set as you can with any PNA measurement. Learn about [Cal Sets](#). In addition, from a Cal Set, you can apply a specific SMC Cal Type to an existing SMC measurement.

Although the Cal Type selection is available for VMC, there is only one VMC Cal Type.

How to apply an SMC Cal Type

1. [Create an SMC measurement](#)
2. Calibrate or apply an existing SMC Cal Set, then...

Using front-panel
HARDKEY [softkey] buttons

Using a mouse with PNA Menus

For [PNA-L](#) and [E836x](#) models

◀ **Programming Commands** ▶

1. [Navigate using MENU/DIALOG](#)
- 2.


1. Click **Calibration**
2. then **Cal Type**

For [PNA-X](#) models

◀ **Programming Commands** ▶

1. Press **CAL**
2. then **[Manage Cals]**
3. then **[Cal Type]**

1. Click **Response**
2. then **Calibration**
3. then **Manage Cals**
4. then **Cal Type**

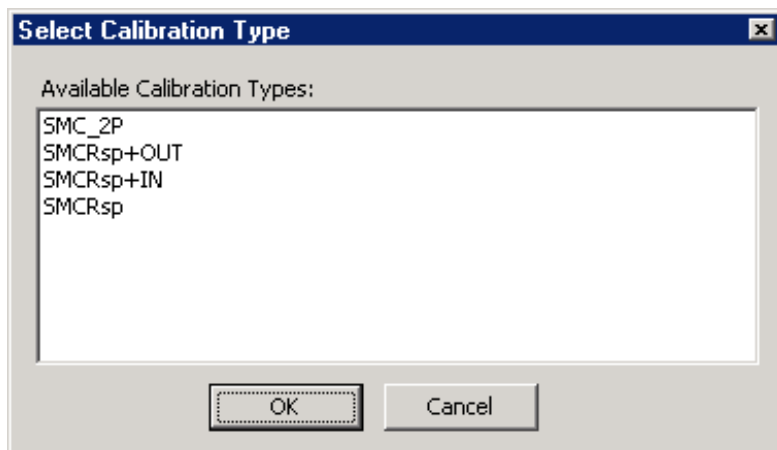

Select Calibration Type dialog box help

Each SMC measurement requires FOUR sweeps. Three of these are hidden. If the input and output of your mixer is well-matched to the PNA, you can apply **SMCRsp** Cal Type to speed up your SMC measurements. This is most noticeable when making fixed input or fixed output measurements, which requires an external LO to sweep with the PNA.

SMC_2P: (Response + Input + Output) All four sweeps required. Most accurate.

SMCRsp: No Input or Output match. Saves two sweeps.

SMCRsp+In: No Output match. All four sweeps required.

SMCRsp+Out: No Input match. All four sweeps required.

Last modified:

August 30, 2007 Modified 82357A text

01-Jan-August 30, 2007 MX Added PNA-X UI

Configure a Mixer

- [How to Start the Mixer Setup dialog box](#)
- [Learning the Mixer Setup Dialog Box](#)
- [Rules for Configuring a Mixer](#)
- [Using Power Sweep for Testing Mixers](#)
- [Input > LO Example](#)
- [Configure Swept LO Measurements](#)
- [Fractional Multiplier Examples](#)

See Also



- [How to make a VMC Measurement example](#)
- [How to make an SMC Measurement example](#)
- [Measure a DUT with an Embedded LO](#)

Note: Please submit FCA issues that you find, as well as enhancement requests, to fca_support@agilent.com (See Known FCA Issues.)

[Other Frequency Converter Application topics](#)

How to start the Mixer Setup dialog box

- [Create an FCA measurement](#). Then...

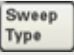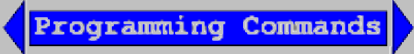Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
<div>1. </div>	<div></div> <div><ol style="list-style-type: none">Click Tracethen Measurethen Configure Mixer</div>

For [PNA-X](#) models

Programming Commands

1. Press **FREQ**
2. then **[Input, LO, or Output]**

1. Click **Response**
2. then **Measure**
3. then **Configure Mixer**

Learning the Mixer Setup dialog box

Click on sections of the image to learn about a setting.

Note: This image shows two LOs.

Important Note: Connecting your DUT to the PNA using FCA:

RF and **IF** terminology is NOT used in the FCA because the PNA does not know how the DUT is labeled or how it will be used. Instead, the general terms **INPUT** and **OUTPUT** are used to describe the following PNA behavior:

- **INPUT** - the stimulus frequencies, BEFORE conversion by your DUT.
- **OUTPUT** - the response frequencies, AFTER conversion by your DUT. Specify + (sum) or - (difference) symbol for each output.

See [Fractional Multiplier Examples](#) (below)

Mixer Setup dialog box help

Throughout the dialog box, the Mixer / converter ports are color coded (Input, LO1, IF1, LO2, Output)

Rules for Configuring a Mixer

Red **Apply** and **OK** buttons indicate that one or more of the following settings are invalid.

1. The INPUT start frequency can NOT exceed the stop frequency. (The OUTPUT start frequency CAN exceed the stop frequency.)
2. INPUT or OUTPUT frequencies cannot be outside the range of the PNA.
3. Any combination of INPUT and LO which results in an OUTPUT that sweeps through zero Hz is NOT allowed.
4. The range for the numerator and denominator of a fractional multiplier is from +1 to +10. Negative values are NOT allowed.

Power Sets the power level of the input signal, and both LO signals.

Frequency Format Selects the format to specify the frequency information for each signal in your test setup. The Input, LO1, LO2, IF, and Output frequency information can be specified using start/stop or center/span formats. Only LO1, LO2, IF, and Output formats can be set to Fixed. When you select a swept LO, you can also select the information you want to [display on the X-axis](#).

LO1 and LO2 Source Configuration Buttons Performs the same function as the **configuration** buttons on the lower diagram. The current source, or **Not Controlled** is displayed on the button label. Click to launch the [Select Source dialog](#).

Resulting Frequencies Either sets or calculates the frequency values for each of the signals in your test setup. For example, if you enter the Input frequency range and press the Calculate button adjacent to the Input, the PNA will calculate and display the Output frequencies.

[Go to the Mixer Setup image](#)

Input > LO

These check boxes remove ambiguity when using the Calculate button to determine the INPUT frequency.

<input checked="" type="checkbox"/> Input > LO	Check if the INPUT is GREATER THAN the LO Clear if the INPUT is LESS THAN the LO
<input checked="" type="checkbox"/> IF1 > LO2	Check if the IF1 is GREATER THAN the LO2 Clear if the IF1 is LESS THAN the LO2

These boxes are only used when all 3 of the following conditions are TRUE:
(If ALL 3 are NOT true, the PNA does not read these boxes).



1. Difference (Low) sideband is selected for the corresponding Calculate button AND
2. Output frequency is less than the LO frequency AND

3. The Green or Blue [Calculate](#) button is used to calculate the Input frequency.

[To learn more, see this example.](#)

Fractional Multiplier

The combination of (numerator / denominator) forms a fractional value that is multiplied by the input and LO frequency ranges (also the IF and LO2 frequency ranges for a test setup with two LOs). These values are used to Calculate the response frequency of the PNA receiver. Use the fractional multipliers to:

- replicate the action of harmonic mixers
- replicate the action of multipliers and dividers that may exist in your test setup
- tune the PNA receiver frequency to a harmonic of the mixer/converter

See [Fractional Multiplier examples](#).

[Go to the Mixer Setup image](#)

Mixer-Product Selector Determines whether the receivers will tune to the Sum (+) or the Difference (-) of the Input and LO frequencies. Click the adjacent Calculate button after your selection.

Calculate buttons Calculates frequency information based on your other mixer settings. The mixer port settings next to the Calculate button you press remain fixed. For example, in a 1-LO scenario, specify the Input and LO frequencies, specify + (sum), then click the **Calculate** button next to the Input. The input remains fixed and the output frequency range is calculated for you.

Hide / Show Diagrams Hides and displays the test setup diagram. Your measurement trace is displayed when the diagram is hidden.

LOs Click **1** or **2** to select the number of external LO sources in your test setup. When you select 2 LOs, the IF1 frequencies are set for you. You can also measure devices with an [Embedded LO](#).

Avoid Spurs Check to invoke the [Avoid Spurs](#) feature.

Load Loads a previously-configured mixer attributes file (.mxr).

Note: A .mxr file includes an LO source name. However, It does NOT include the LO Source configuration. Therefore, when using a .mxr file that was created on a different PNA, the PNA will display an error if does not find the LO Source configuration using EXACTLY the same LO source name.

Save Saves the settings for your mixer/converter test setup to a mixer attributes file (.mxr).

Apply Applies the settings for your mixer/converter test setup to the measurement. The mixer setup dialog box remains OPEN. If shaded red, [see rules](#).

OK Applies the settings for your mixer/converter test setup to the measurement. The mixer setup dialog box CLOSES. If shaded red, [see rules](#).

Cancel Closes the mixer setup dialog box and does NOT apply the settings.

Frequency Diagram: Provides a display of the frequency information for the signals in the test setup.

[Go to the Mixer Setup image](#)



Select Source dialog box help

This dialog is launched when clicking the Mixer Setup **LO1** or **LO2** button.

Click one of the following to select a source for LO control:

- An existing External Source setup
- A port number to use an [internal second source](#)
- **Not controlled** the PNA will not attempt communication to control a source for the LO.
- **Manage External Sources** button to launch the [External Source Configuration](#) dialog.

Note: VMC measurements using a PNA-X with [Internal Second Source](#)

Source 2 is automatically configured to supply power to BOTH available ports simultaneously. This setting can NOT be changed.

In addition, [power can be uncoupled](#) to provide different power levels at each port. This feature allows power to be delivered to both the DUT LO and Reference Mixer LO without use of a splitter. [See VMC setup.](#)

Using Power Sweep for Testing Mixers

To measure the gain compression of a mixer, you need to sweep the input power to the mixer. The input and output frequencies are fixed but offset from one another. To set Power Sweep and the input and output frequencies of the mixer under test:

1. On the mixer dialog box, set the LO frequency, identical input start and stop frequencies, and identical output start and stop frequencies. These selections create fixed input and output frequencies.
2. On the PNA menu, click **Sweep**, then **Sweep Type**. Select **Power Sweep**. Do NOT change the CW

frequency on the Power Sweep dialog box. The mixer dialog box settings will not be automatically updated.

For more information, see [Conversion Compression](#).

Input > LO Example

For the following single stage mixer:

- Output = 2 GHz
- LO = 3 GHz
- Diff (-) selected

Clicking **Calculate Input** could yield two Input frequencies:

Formula for **Diff**:

$$\text{Input} - \text{LO} = \text{Output}$$

Substitute our example values in the formula:

$$\text{Input} - 3\text{GHz} = 2\text{GHz}$$

Solving the formula can yield either:

$$\text{Input} = 5\text{GHz}$$

OR

$$\text{Input} = 1\text{GHz}$$

(Although $1 - 3 = -2$ GHz, the analyzer displays the absolute value of the frequency.)

5.000000000 GHz	5.000000000 GHz	Calculate Output
3.000000000 GHz	<input checked="" type="checkbox"/> Input > LO	
<input type="radio"/> +	8.000000000 GHz	Calculate Input
<input checked="" type="radio"/> -	2.000000000 GHz	

Check - use the Input frequency (5 GHz) that is greater than LO (3 GHz)

1.000000000 GHz	1.000000000 GHz	Calculate Output
3.000000000 GHz	<input type="checkbox"/> Input > LO	
<input type="radio"/> +	4.000000000 GHz	Calculate Input
<input checked="" type="radio"/> -	2.000000000 GHz	

Clear - use the Input frequency (1 GHz) that is less than LO (3 GHz)

Configure Swept LO Measurements

Note: With a corrected VC21Swept LO measurement, the phase data is displayed relative to the phase of the [calibration mixer](#) that was used during the VMC calibration. In addition, Group delay display format is NOT valid.


See Examples of Fixed Output Measurements

- [SMC](#)
- [VMC](#)

Fractional Multiplier Examples

Example 1

Use the LO fractional multiplier to replicate the action of the third-harmonic mixer so the PNA can accurately calculate the receiver frequency. The input and LO frequencies are known.

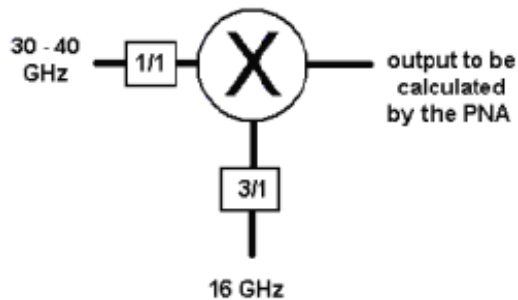

Enter these settings in the **Mixer Setup** dialog box:

- **Input Start Freq:** 30 GHz
- **Input Stop Freq:** 40 GHz
- **LO Fixed Freq:** 16 GHz
- **Mixer-Product Selector:** - (difference)
- **LOs:** 1
- **LO fractional multiplier:** 3/1
- **INPUT fractional multiplier:** 1/1

Click **Calculate Output**


Results:

- **Output Start Freq:** 18 GHz
- **Output Stop Freq:** 8 GHz

Example 2

Use the fractional multipliers to tune the PNA receiver frequency to the second harmonic of the mixer's 14 GHz

fundamental output. The input, LO, and output frequencies are known.

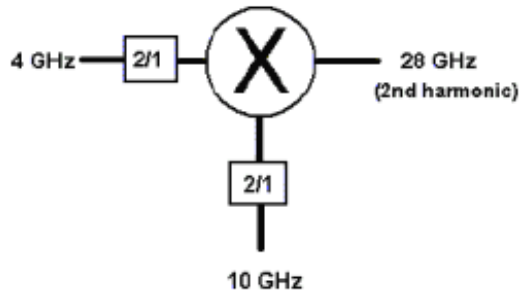

Enter these settings in the **Mixer Setup** dialog box:

- **Input Start Freq: 4 GHz**
- **Input Stop Freq: 4 GHz**
- **LO Fixed Freq: 10 GHz**
- Mixer-Product Selector: + (Sum) of the input and LO signals
- LOs: 1
- INPUT fractional multiplier = 2/1
- LO fractional multiplier = 2/1


Click **Calculate Output**

Results:

- **Output Start Freq: 28 GHz**
- **Output Stop Freq: 28 GHz**

Example 3

Use the LO fractional multiplier to replicate the action of the divide-by-two mechanism inside the mixer package. Having done this, the PNA can accurately calculate the receiver frequency. The input and LO frequencies are known.

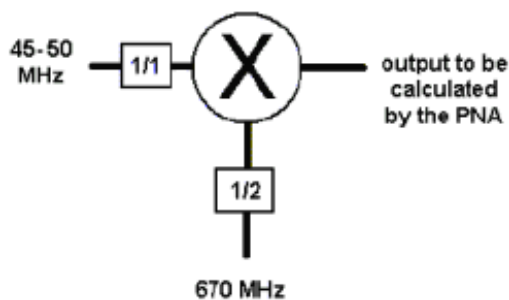

Enter these settings in the **Mixer Setup** dialog box:

- **Input Start Freq: 45 MHz**
- **Input Stop Freq: 50 MHz**
- **LO Fixed Freq: 670 MHz**
- Mixer-Product Selector: + (Sum) of the input and LO signals
- LOs: 1
- INPUT fractional multiplier = 1/1
- LO fractional multiplier = 1/2

Click **Calculate Output**

Results:

- **Output Start Freq: 380 MHz**
- **Output Stop Freq: 385 MHz**

Last Modified:

20-Apr-2007 MX Updated for internal second source

Configure an External Source

Beginning with [PNA Rev. 7.22](#), an external source can be configured and controlled by the PNA for all [FOM \(opt 080\)](#), Opt 083 ([FCA](#)), or Opt H11 ([Millimeter Wave](#)) measurements. Without one of these options you must control an external source manually. For help, see [synchronize an external source](#) with the PNA.

After a one-time [Configuration of an External Source](#), it must be selected for each measurement using the [Select Sources dialog](#).

In this topic:

[How to Select an External Source](#)

[How to Connect an External Source to the PNA](#)

[How to Configure an External Source](#)

[Add New Source](#)

See Also the following examples:

- [How to make a VMC Measurement](#)
- [How to make an SMC Measurement](#)

Beginning with PNA Rev 7.5...

- Generic (Non-Agilent) sources are not supported with this release.
 - With an external source selected, the PNA **WILL** now allow an S-parameter measurement to be made at the same time as an FCA measurement.
 - FCA LO calibration is now performed by doing a standard [Source Power Calibration](#).
 - FCA external sources are now selected and managed using the standard dialogs shown in this topic.
-


How to Select an External Source

For an [FCA measurement](#)

1. In the [Configure Mixer](#) dialog box, click the LO 'Control' button
2. In the [Select Source](#) dialog, click **Select External Sources** to launch the [Select Sources](#) dialog.

For all other FOM (opt 080) measurements, do the following:

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	See Remotely Specifying a Source Port
1. Navigate using MENU/DIALOG	1. Click System 2. then Configure 3. then Select External Source
For PNA-X models	See Remotely Specifying a Source Port
1. Press SYSTEM 2. then [Configure] 3. then [Select External Source]	1. Click Utility 2. then System 3. then Configure 4. then Select External Source

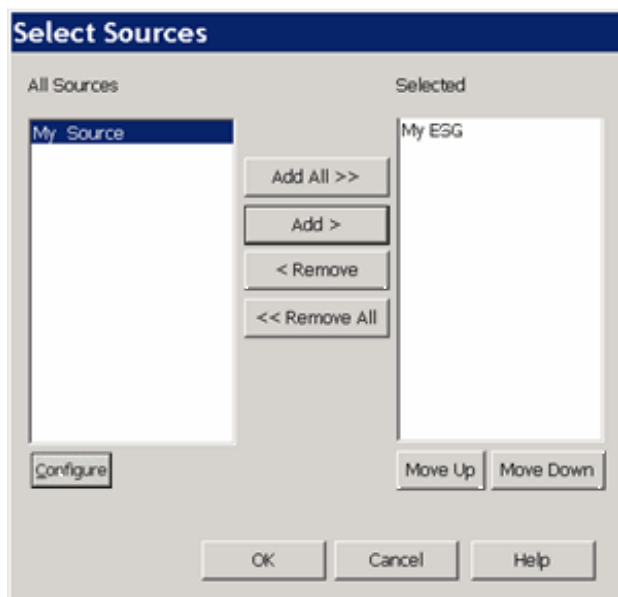

Select Sources dialog box help

See [What's new](#) with External Source Control with PNA Rev. 7.5.

For FOM (Opt 080) measurements, once you select an external source from this dialog box, it becomes available from the following PNA dialog boxes as if it were an internal PNA source:

- [FOM](#) (turn **ON** and set freq, power)
- [Power](#) (set power level)
- [Source Power Cal](#) (Calibrate the external source)
- [New / Change Trace](#) (set source port for a measurement)

All Sources The sources that are currently configured appear in this list. There is no limit to the number of sources that can be selected.

- Click **Add All>>** to move all sources to the Selected list.
- Click a source name, then click **Add>** to add that source to the Selected list.

Configure Click to launch the [Configure External Source](#) dialog to add a source to the list.

Selected The sources that are currently selected.

- Click **<Remove All** to un-select all sources.
- Click a source name, then click **<Remove** to un-select that source.

Move Up and Down Changes the order of the sources in the list. The order indicates the order that the sources appear in the FOM, Power, Source Power Cal, and New / Change Trace dialog boxes.


Notes:

- **Important:** All newly selected or reordered sources are preset, with source power OFF. Source power must be turned ON in the [Power dialog](#). Frequency Offset must be enabled in the [FOM dialog](#).
- The PNA controls the triggering of an external source. Therefore, [PNA triggering must be set to Internal](#), not External.
- Your source selections remain until you recall an instrument state with different selections, or perform a factory preset.
- Communication with the selected sources is checked when **OK** is pressed. Make sure that the source is turned ON and the GPIB address in the configure dialog is accurate.
- If communication with a source is broken after the dialog box is closed, a message appears and channel triggering is put in Hold mode.
- The same source can NOT be used more than once in the same channel.

How to Connect an External Source to the PNA

1. GPIB or LAN, use one of the following methods:

- The [Agilent 82357A USB/GPIB Interface](#).
- [Dedicated Controller and Talker/Listener GPIB ports](#).
- **USB or LAN using Visa Alias**. Both of these interfaces are configured using Agilent ACE (IO libraries) which is installed on the PNA.

1. In ACE, click  **Add Instrument**
2. Select **LAN (TCPIP0)** or **USB0**, then click **OK**.
3. Click, then enter the **IP address** of the external source.
4. Click **Test Connection** to verify communication.
5. Click **OK**.
6. In the list of connected instruments, right click the external source, then **Add VISA Alias**.
7. Enter the same PNA source name that was, or will be, used in the **Add New Source** dialog.

- The standard GPIB Interface (One GPIB port) - with the following limitations:
 - The PNA cannot be controlled remotely as talker / listener over GPIB. First put the PNA in System Controller mode. [Learn how](#).
 - If this method does not work initially, first close, then restart the PNA application, then [put the PNA in System Controller mode](#), then click **Controlled** on this dialog box. This should resolve any GPIB hang-up issues with the external source.

2. External sources should always share the same [10 MHz Reference signal](#) as the PNA. Connect a BNC cable from the PNA 10 MHz Ref Output to the External Source Input.
3. See [Hardware List Triggering Connections](#)

How to Configure an External Source

For an [FCA measurement](#):


- In the [Configure Mixer](#) dialog box, click **LO Control** OR
- In the [Select Source](#) dialog, click **Manage External Sources**

For all other measurements:

- Click **Configure** from the [Select Sources](#) dialog OR
- As follows:

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	See Remotely Specifying a Source Port
1. Navigate using MENU/DIALOG	1. Click System 2. then Configure 3. then External Source Config
For PNA-X models	See Remotely Specifying a Source Port
1. Press SYSTEM 2. then [Configure] 3. then [External Source Config]	1. Click Trace/Chan 2. then Channel 3. then Hardware Setup 4. then External Source Config

Note: If an **External Source Not Found** error occurs, the Agilent I/O Library may no longer be running. To check, look in the Windows task bar of the PNA for the **IO** icon. If not present, restart the IO library. Click Start, Programs, Agilent I/O Libraries, IO Control.

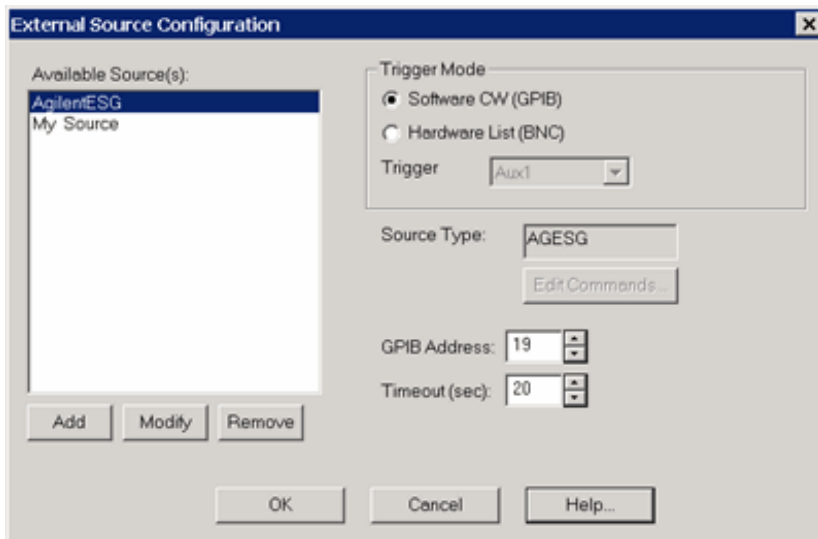

External Source Configuration dialog box help

This dialog box is used to perform a one-time configuration of an external source.

Available Sources

Lists the sources that have been previously configured.

Add Displays the [Add New Source dialog box](#). Type a **unique** source name.

Modify Makes changes to the selected source. Launches Modify Source dialog, exactly like [Add New Source](#).

Remove Removes an external source from your setup.

Trigger Mode ONLY used when the external source is stepped, as with FCA swept LO measurements.

Notes

- **MM Wave Test Heads:** The PNA trigger settings are automatically configured and must not be changed.
- The PNA automatically controls triggering of the external source. PNA triggering can be set to Internal, Manual, or External. When set to External, the trigger signal must come through a PNA rear panel connector that is not being used to trigger the external source.
- See [SCPI](#) and [COM](#) examples of an SMC fixed output measurement.
- For more information, see:
 - [Speeding Up Fixed Output SMC Measurements](#)
 - [PNA Trigger model](#)

Software CW (GPIB) Slowest method.

- The external source receives the CW frequency and trigger signal from the PNA over GPIB.


- Used with ALL sources, including generic (not listed), and Agilent 837X sources.

Hardware List (BNC) Fastest method.

Note: If the number of data points used in the measurement exceeds the capability of the external source, the PNA automatically switches to Software CW (GPIO) trigger mode. This will slow the measurement significantly.

Trigger Select the PNA rear panel connector to be used for triggering.

- The external source receives a list of CW frequencies from the PNA, then receives trigger signals as required from the PNA.
- Used with ALL except generic (not listed) sources.
- **MM Wave Test Heads:** Hardware List mode is ALWAYS used.
- The sources must be connected as follows:
 - **PNA-X models:** Connect sources directly or daisy-chained to Aux1 or Aux2. [See rear panel Aux connectors](#)
 - **E836x and PNA-L models** - Use rear-panel BNC [Trigger](#) connectors as follows:

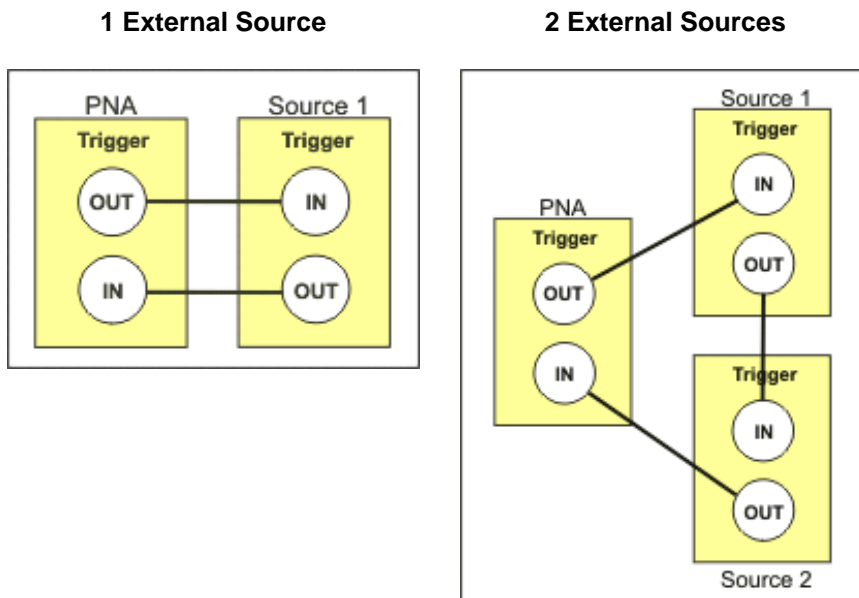

Source Type

Shows the model number of the external source that is selected in the displayed list.


Edit Commands Only available with generic (non-Agilent) sources. Not available in the A.07.50 release.

GPIO Address Sets the GPIO address of the selected external source.

Timeout (sec) Sets a time limit for the source to make contact with the PNA. If this time limit is exceeded,

the PNA stops the measurement procedure and displays a diagnostic-type error message. If this occurs, check the connections of your PNA and source.

Use the standard [Source Power Calibration](#) to calibrate the external source.

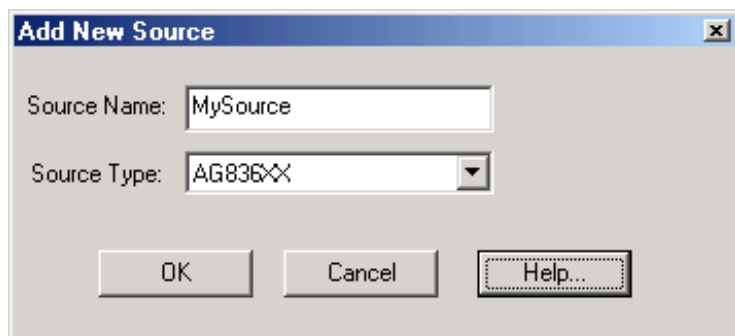

Add / Modify New Source dialog box help

Allows you to add or modify an external source. The new or modified source appears in the list of sources displayed in the [External Source Configuration dialog box](#).

Source Name Enter a unique name for your source.

Note: If you enter a source name that existed since that last PNA Shutdown, the old Source Type will be remembered and displayed on the External Source dialog. Either use a new name, or delete the old name, then restart the PNA application before re-entering the name.

Source Type Select a source type from the scrolling list.

Generic (Non-Agilent) sources are not supported with this release.

Last Modified:

5-Nov-2007 Added links for remote selection

18-Jul-2007 Edited for FCA LO Cal changes

30-Apr-2007 MX Modified for ALL external source config.

How to make a VMC Fixed Output Measurement

The following is a step-by-step example illustrating how to measure a mixer in swept LO mode using FCA Vector Mixer Calibration.

There are fewer components required for [SMC](#) as compared to VMC, and fewer measurement steps. Therefore, if you do NOT need to make relative phase measurements, SMC is an easier measurement. Also, ONLY SMC (not VMC) can measure the reverse conversion loss of the mixer.

This procedure can also be used for making **fixed** LO measurements, which is quite similar. Although the external source is still required, the physical triggering cables that connect the PNA and External Source are not required.

Required Equipment

- N5242A (PNA-X), E8362B, E8363B, E8364B or E8361A PNA series network analyzer
 - with option 083 (FCA)
 - with PNA Rev 6.03 or greater
- GPIB External Source (Agilent ESG or PSG works best) **
- Reference Mixer ([see requirements](#))
- Calibration Mixer/Filter ([see requirements](#))
- Power splitter **
- ECal module with connectors that match the Input and Output connectors of the DUT. You can use adapters to make the ECal module match the DUT connectors, but first perform an [ECal user-characterization](#) with the adapters attached. ECal makes the FCA calibration much easier.
- Cables and adapters
- **Optional** GPIB Power meter and sensor (for LO power calibration)

** Not necessary when using PNA-X with Internal Second source

The example mixer

The example device is a mixer with the following characteristics:

- LO and Input Frequency Range: 2 GHz to 4.2 GHz
- Output Frequency Range: DC to 1.3 GHz

We will measure:


- Fwd Conversion Loss (VC21)
- Input match (S11)

- Output match (S22)
- Rev Conversion Loss is NOT possible because of the reference mixer.

VMC Setup

Connect the devices as shown in the following diagram:

Note: This setup can also be used for SMC measurements, allowing you to make VMC and SMC measurements simultaneously on separate channels. The Reference Mixer is automatically switched during SMC measurements. The Cal Mixer/Filter is not used.

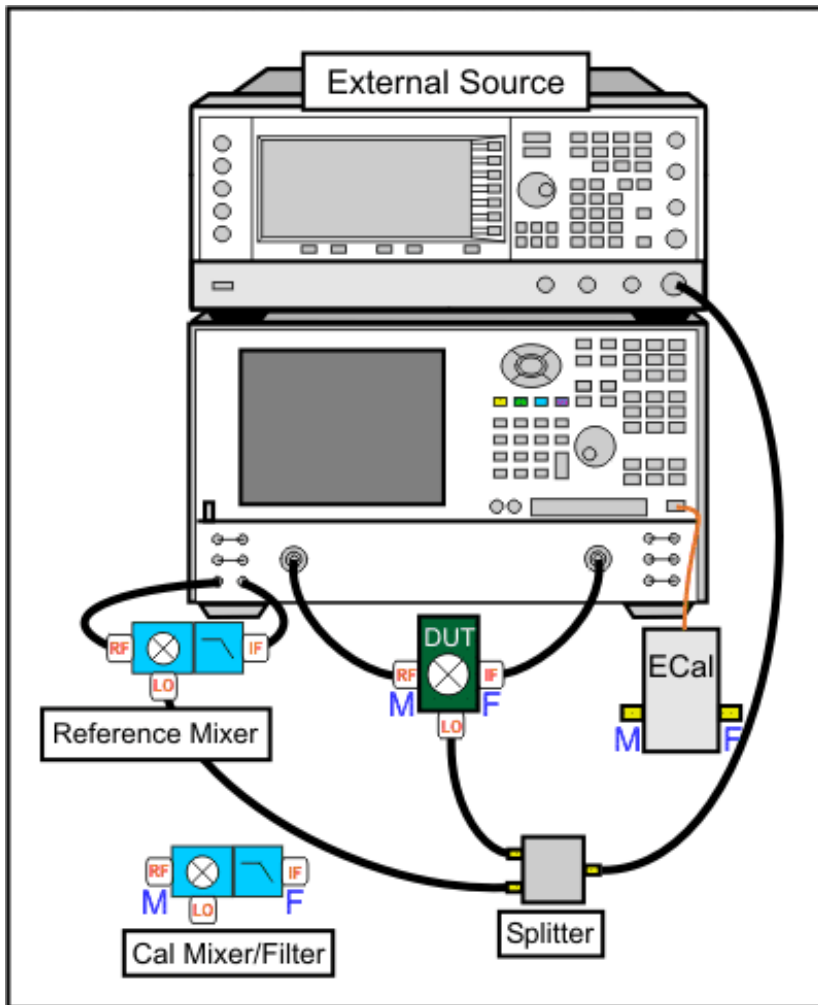


Notes:

- When using a PNA-X with Internal Second Source, the external source is NOT necessary.
- [See note regarding LO power out both second source ports](#)
- [Learn which PNA ports can be used for the LO.](#)
- The low-pass filter on the output of the Reference Mixer is recommended, but NOT required. [Learn more.](#)

Make Connections on the Instrument rear panels:

1. Connect the PNA and Source using two GPIB cables. A USB to GPIB adapter can also be used if you need to control the PNA from a remote PC.
2. Using a BNC cable, connect the Source **10 MHz Reference Output** to the PNA **10 MHz Reference Input**.
3. Using two BNC cables, connect the Source and PNA Trigger connectors as shown in the following image. This is not necessary when making fixed LO measurements.

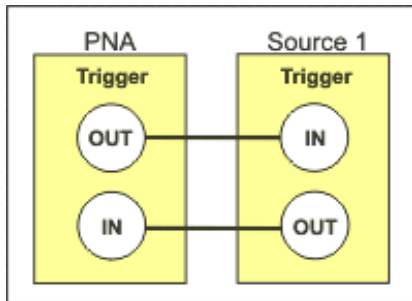

Create the Measurement

For this document:

- Front-panel hardkeys are formatted as "Press ***Trace***"
- Menus are formatted as "Click **System**"

1. Connect the DUT.
2. On the PNA, click **System**, then point to **Configure**, then click **SICL/GPIB/SICL**. On the **SICL/GPIB/SICL** dialog, click **System Controller**. This allows the PNA to control the Source and Power Meter.
3. On the Source, note the GPIB address.
4. Press **Preset** to make sure you are starting with a known state.
5. Press **Trace**, then **Delete** to delete the default trace.
6. Press **Application** to create a new FCA measurement.
7. Under **Choose an application**, select **Vector Mixer/Converter**.
8. Under **Select measurement parameter**, select **VC21**.
9. Click **OK**.

Configure the Mixer settings

1. Press **Measure Setups**, then **Mixer**
2. Enter the Mixer setup values as shown in the image below.

Notes:


- Rather than enter ALL of the frequency settings, you can enter the Input and the Output frequencies, then click **Calculate LO**.
- If **Input>LO** is NOT checked, the PNA assumes you want the Input < LO frequencies, and higher LO frequencies are calculated as a result.
- The <Controlled> LO power level setting specifies the power out of the external source (not at the DUT) unless an LO power cal is performed.
- The Avoid Spurs feature is useful for eliminating spurs in test setups with excessive LO leakage.
- When the settings are valid, the background color around the **Apply** and **OK** buttons changes from Red to Green.

Configure the External LO Source


When using a PNA-X with Internal Second Source, the external source is NOT necessary.

- [See note regarding LO power out both second source ports](#)
- [Learn which PNA ports can be used for the LO.](#)

1. Click **Not Controlled** to set up the External LO source. The following dialog appears:

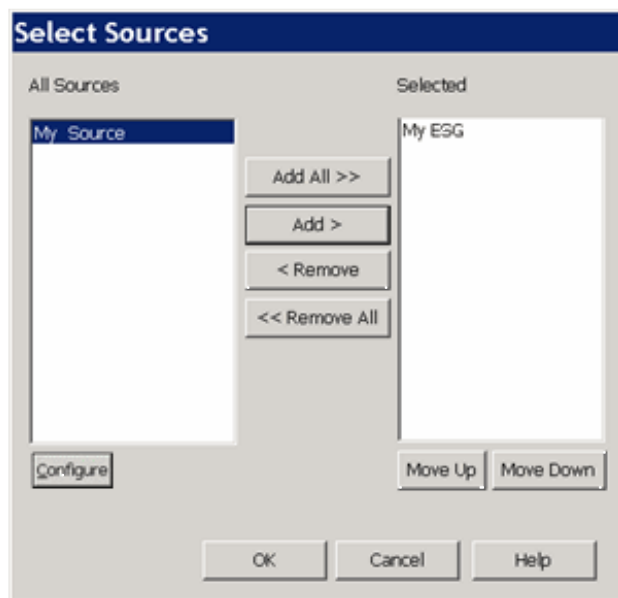


2. Select a configured source from the **All Sources** column and click **Add**. If no sources appear, then click **Configure**. The following dialog appears:

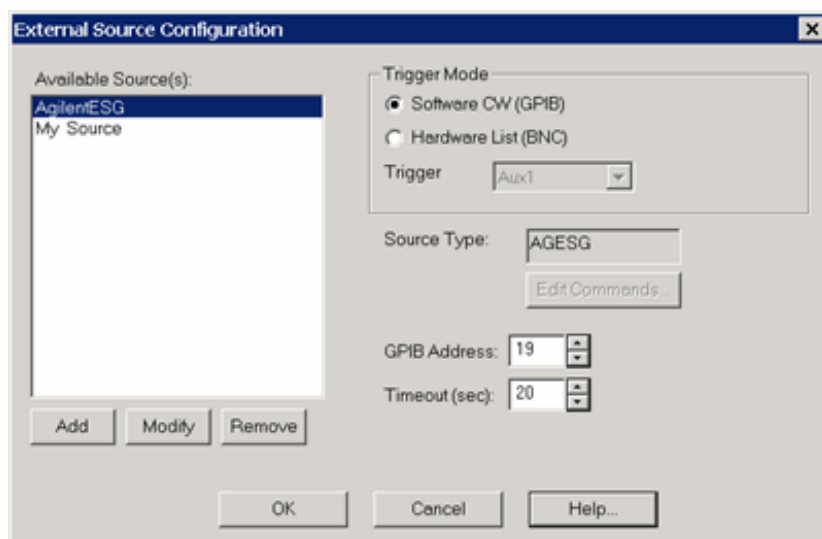


Depending on the model of your source, this is what it looks like AFTER entering the settings.

3. Click **Add**, to add a source.

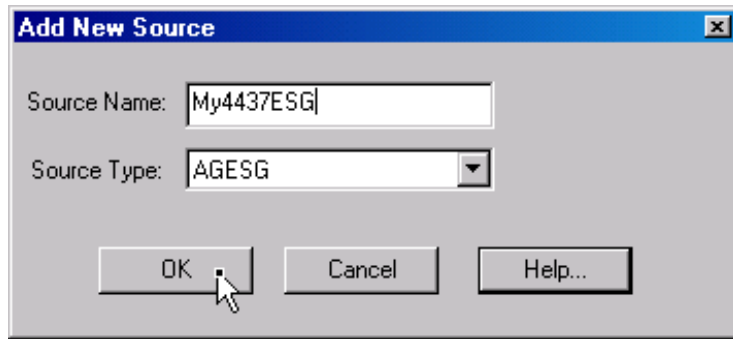

4. In the Add New Source dialog, type an identifying Source Name, such as the model of your source. In Source Type, select the model of source you are using. Then click **OK**.
5. Back in the External Source Configuration dialog, click **Controlled**, to tell the PNA to assume control of the source.
6. Click **Hardware List (BNC)**, which is the fastest measurement method. This method requires the BNC Trigger cables that connect the PNA and source. If not available, **Software CW** can be used, but measurements are much slower.
7. If necessary, change the GPIB Address to match that of the source. This is NOT automatically detected.
8. Click **OK** to return to the Mixer Setup dialog. The Not Controlled should now read **Controlled**.
9. Save the mixer settings in a file so you can recall them easily. Click **Save...**, then type a descriptive filename, such as "FixedOutputMixer".
10. Click **OK** to close the Mixer Setup dialog. If there is a problem communicating with the source, the PNA will display an error here. [See Problems?](#)
11. The two traces should begin to sweep, as the external source steps in frequency. It should look something like this:

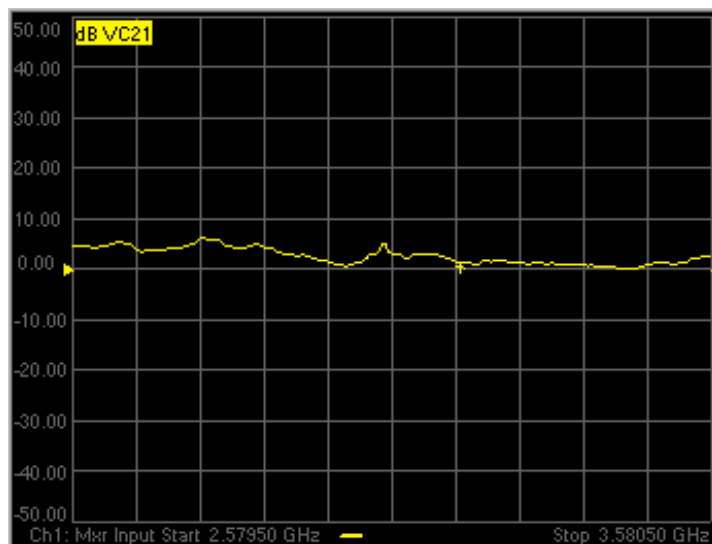

Because of the reference mixer, the uncorrected VMC measurement can look like it has gain.

Problems?

Not sweeping:

- On the PNA, press **Sweep**, then **Trigger**, then **Continuous** to start the PNA sweeping. Watch for error messages on the PNA and source.

Problems communicating with the source:

- Press **Measure Setup**, then **Mixer** to start the Mixer setup dialog. Click **Software CW trigger**, then close the dialog. Perform the previous statement to start sweeping. If this works, then something is wrong with **Hardware (BNC)**. Check the trigger cables on the rear panel.
- As a last resort, try rebooting the PNA. First, [save the entire setup to a .csa file](#). When the PNA preset measurement appears, recall the .csa file to resume at this step.

If the source is sweeping, and the PNA Input is sweeping, but there is still no output.

- Check power levels at the LO and Input.
- Check the DUT by making a fixed LO measurement - much easier.

Perform a VMC Calibration

Note: Optionally perform a [Source Power Cal](#) before the VMC Cal to specify the LO Power at the DUT. This requires a power meter be connected to the GPIB.

1. Disconnect the DUT.
2. Connect the ECal module to a PNA USB port.
3. Click **Calibration**, then **Calibration Wizard**. Because the VC21 measurement is active, the Cal Wizard automatically begins a VMC Calibration.
4. At the **Calibration Setup** dialog, click **Next**.
5. At the **Calibration Mixer Characterization** dialog, click **Next**. We will perform characterization of the Calibration mixer as part of the VMC cal. Later we will save the Calibration mixer characterization so that, in future VMC calibrations that use this same frequency range, we can recall the Calibration mixer characterization by clicking **Load Characterization from file**.
6. At the **Select DUT Connectors and Cal Kits** dialog, for **DUT Port 1** select the connector type and gender of your DUT INPUT. For **DUT Port 2** select the connector type and gender of your DUT OUTPUT. Then select ECal as the Cal Kit to use for each connector. Click **Next**.
7. At the **Select the ECal Port to be Connected** dialog, ensure that **Port A** is selected for **Port 1**, then click **Next**.
8. At the **Vector Mixer Calibration Step 1 of 3** dialog, connect the ECal module Port A to the Port 1 cable, and

Port B to the Port 2 cable. Then click **Measure**. This portion of the calibration gathers the linear (non-frequency-translating) error terms of the test setup at the input and output frequencies.

9. At the **Vector Mixer Calibration Step 2 of 3** dialog, connect the following, then click **Measure**. This portion of the calibration will connect reflection standards to characterize the S-parameters of the calibration mixer/filter.
 - Port 1 cable to the Input of the calibration mixer.
 - LO cable to the LO port of the calibration mixer.
 - ECal module to the Output of the calibration mixer/filter.
10. At the **Vector Mixer Calibration Step 3 of 3** dialog, disconnect the ECal module and connect the Port 2 cable to the output of the calibration mixer/filter, then click **Measure**. This step completes the calibration using the characterized mixer/filter as a Thru standard.
11. At the **Save Mixer Characterization** dialog, click **Browse**, then type a unique filename and click **OK**. Then click **Next**. This saves the Calibration Mixer characterization to an S2P file. This file can be recalled for subsequent VMC calibrations.
12. At the **Calibration completed** dialog, you can choose to save the VMC calibration as a User Cal Set. Otherwise, click **Finish** to complete the VMC calibration. Correction is turned ON and applied to the VMC trace that we set up earlier.

What is happening?


Because Fixed Output or Fixed Input FCA measurements require an external source to sweep, the measurements are much slower. When correction is ON, you will see that there are times when nothing is happening on the screen. This is because there are background measurements being made but not displayed.

This is exactly the same as when full 2-port correction is applied to an S-parameter. All four parameters are measured, then correction is applied, then all four measurements are updated. This occurs much faster when there is no external source. With a VMC measurement, there is no VC12 (reverse transmission measurement), so there are only three background measurements. With correction OFF, the traces are updated as the data is measured. You can see this taking place by creating the following measurements.

Create S11 Input and S22 Output Match

1. Press **Trace**, then **Application**. Click **S11** and **S22**, then click **OK** to add these measurements to the same channel.
2. While the source is sweeping, watch the source port indicator on the front of the PNA. First, the port 1 indicator will light for two sweeps, then the port 2 indicator will light for 1 sweep while all 3 traces update.
3. Turn correction OFF for ALL measurements. Notice that the relevant traces will update as the sweep is occurring.

The following image shows the corrected Conversion Loss (VC21), Input Match (S11), Output Match (S22) and the uncorrected Conversion Loss (VC21), which is a memory trace.

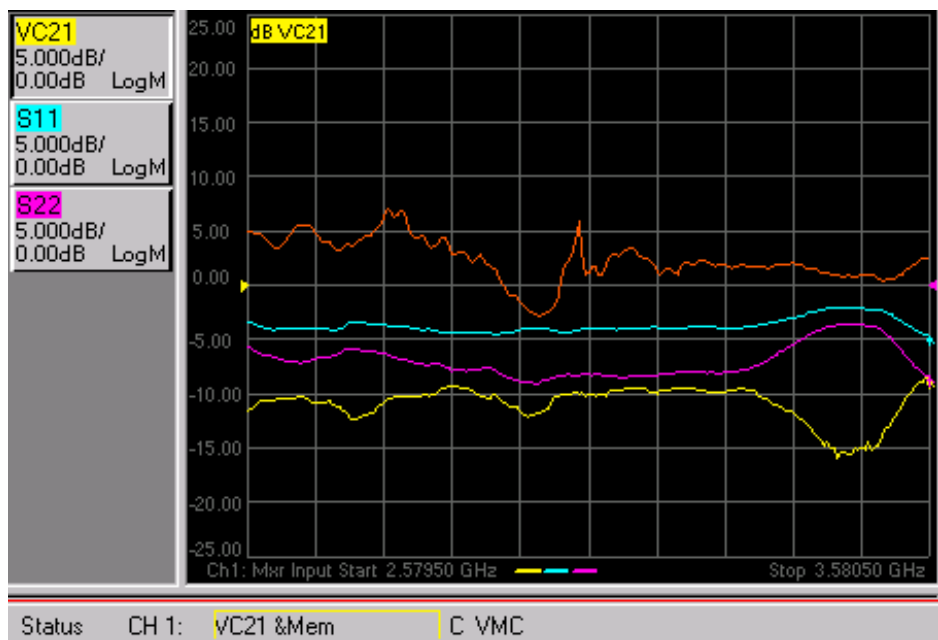

How to make an SMC Fixed Output Measurement

The following is a step-by-step example illustrating how to measure a mixer in swept LO mode using FCA Scalar Mixer Calibration.

There are fewer components required for SMC as compared to [VMC](#), and fewer measurement steps. Therefore, if you don't need to make relative phase measurements, SMC is an easier measurement. Also, ONLY SMC (not VMC) can measure the reverse conversion loss of the mixer.

This procedure can also be used for making **fixed** LO measurements, which is quite similar. Although the external source is still required, the physical triggering cables that connect the PNA and External Source are not required.

Required Equipment

- E8362B, E8363B, E8364B or E8361A PNA series network analyzer
 - with option 083 (FCA)
 - with PNA Rev. 6.03 or greater
- GPIB External Source (Agilent ESG or PSG works best)
- ECal module with connectors that match the Input and Output connectors of the DUT. You can use adapters to make the ECal module match the DUT connectors, but first perform an [ECal user-characterization](#) with the adapters attached. ECal makes the FCA calibration much easier.
- GPIB Power meter and sensor
- Cables and adapters

The example mixer

The example device is a down-converter mixer with the following characteristics:


- LO and Input Frequency Range: 2 GHz to 4.2 GHz
- Output Frequency Range: DC to 1.3 GHz

We will measure:

- Fwd Conversion Loss (SC21)
- Input Match (S11)
- Output Match (S22)
- Reverse Conversion Loss (SC12)


SMC Setup

Connect the devices as shown in the following diagram:

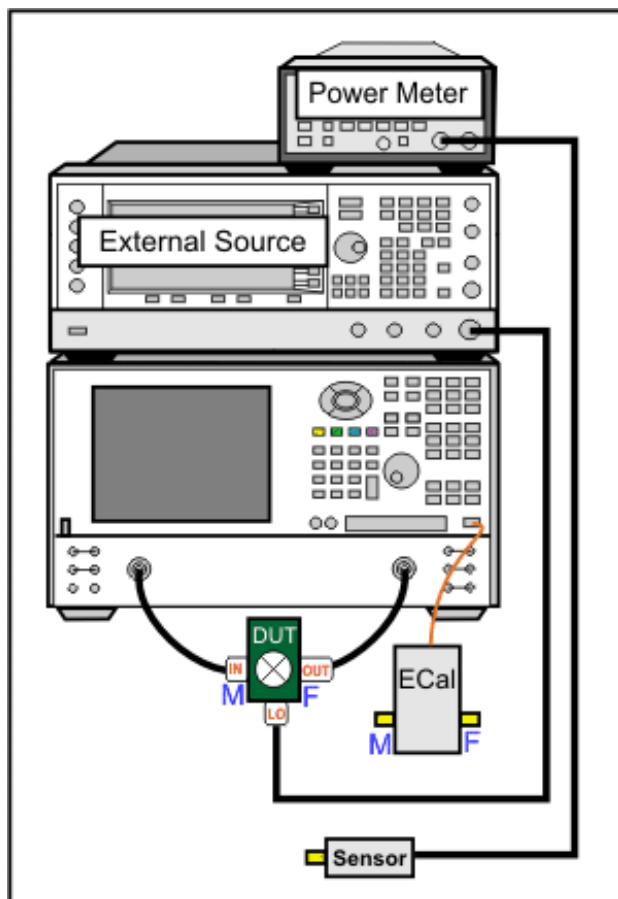

Make Connections on the Instrument rear panels:

1. Connect the PNA, Source, and Power Meter using two GPIB cables. A USB to GPIB adapter can also be used if you need to control the PNA from a remote PC.
2. Using a BNC cable, connect the Source **10 MHz Reference Output** to the PNA **10 MHz Reference Input**.
3. Using two BNC cables, connect the Source and PNA Trigger connectors as shown in the following image. This is not necessary when making fixed LO measurements.

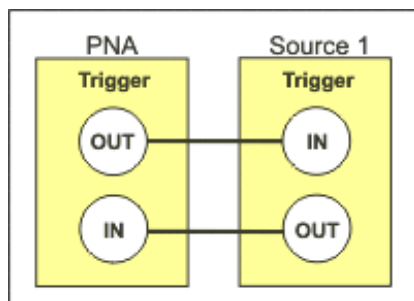

Create the Measurement

For this document:

- Front-panel hardkeys are formatted as "Press **Trace**"
- Menus are formatted as "Click **System**"


1. Connect the DUT.
2. On the PNA, click **System**, then point to **Configure**, then click **SICL/GPIB/SCPI**. On the SICL/GPIB/SCPI dialog, click **System Controller**. This allows the PNA to control the Source and Power Meter.
3. On the Source and Power Meter, record the GPIB addresses.
4. Press **Preset** to make sure you are starting with a known state.
5. Press **Trace**, then **Delete** to delete the default trace.
6. Press **Application** to create a new FCA measurement.
7. Under **Choose an application**, select **Scalar Mixer/Converter**.
8. Under **Select measurement parameter**, select **SC21**.
9. Click **OK**.

Configure the Mixer settings

1. Press **Measure Setups**, then **Mixer**
2. Enter the Mixer setup values as shown in the image below.


Notes:

- Rather than enter ALL of the frequency settings, you can enter the Input and the Output frequencies, then click **Calculate LO**.
- If **Input>LO** is NOT checked, the PNA assumes you want the Input < LO frequencies, and higher LO frequencies are calculated as a result.
- The LO power level setting specifies the power out of the external source; not at the DUT) unless an LO power cal is performed.
- The Avoid Spurs feature is useful for eliminating spurs in test setups with excessive LO leakage.
- When the settings are valid, the background color around the **Apply** and **OK** buttons changes from Red to Green.

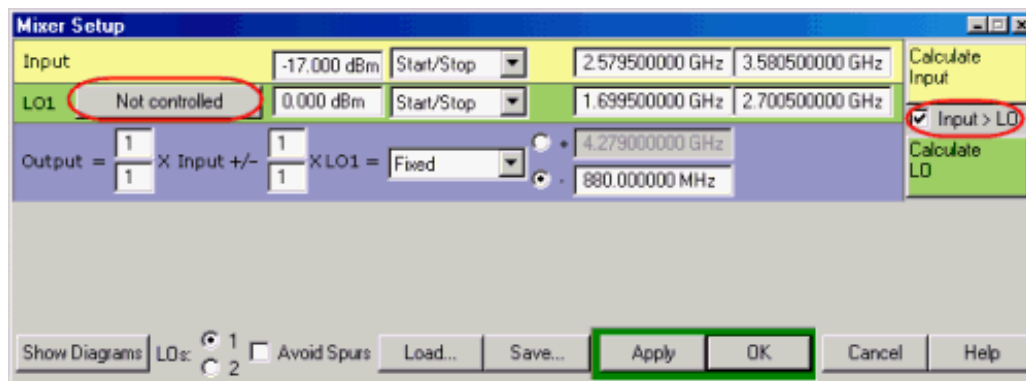


Configure the External LO Source

1. Click **Not Controlled** to set up the External LO source. The following dialog appears:

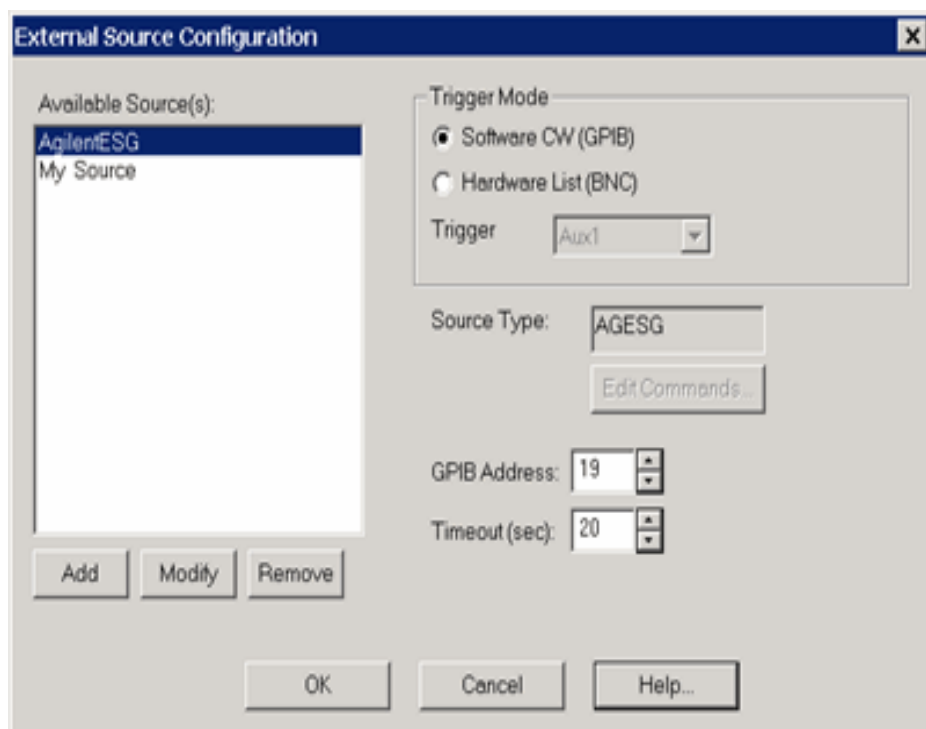


Depending on the model of your source, this is what it looks like AFTER entering the settings.

2. Click **Add**, to add a source.

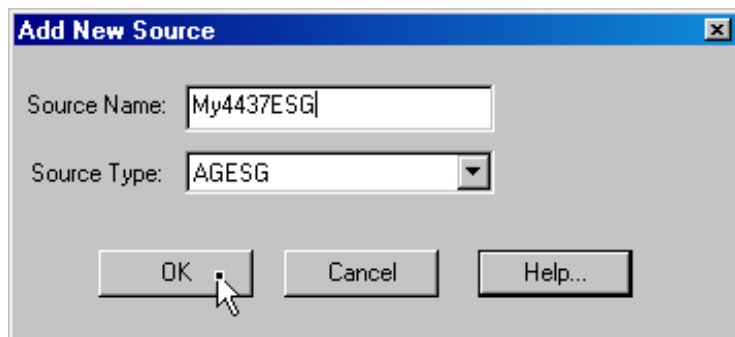

3. In the Add New Source dialog, type an identifying Source Name, such as the model of your source. In Source Type, select the model of source you are using. Then click **OK**.
4. Back in the External Source Configuration dialog, click **Controlled**, to tell the PNA to assume control of the source.
5. Click **Hardware List (BNC)**, which is the fastest measurement method. This method requires the BNC Trigger cables that connect the PNA and source. If not available, **Software CW** can be used, but measurements are much slower.
6. If necessary, change the GPIB Address to match that of the source. This is NOT automatically detected.
7. Optional: Click **LO Power Calibration** to calibrate the LO Power level at the DUT.
8. Click **OK** to return to the Mixer Setup dialog. The Not Controlled should now read **Controlled**.
9. Save the mixer settings in a file so you can recall them easily. Click **Save...**, then type a descriptive filename, such as "FixedOutputMixer".
10. Click **OK** to close the Mixer Setup dialog. If there is a problem communicating with the source, the PNA will display an error here. [See Problems?](#)
11. The trace should begin to sweep as the external source steps in frequency. It should look something like this:

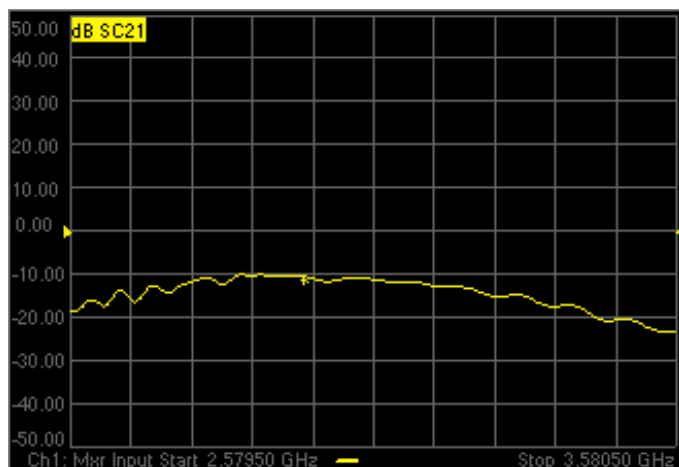

Problems?

Not sweeping:

- On the PNA, press **Sweep**, then **Trigger**, then **Continuous** to start the PNA sweeping. Watch for error messages on the PNA and source.

Problems communicating with the source:

- Press **Measure Setup**, then **Mixer** to start the Mixer setup dialog. Click **Software CW trigger**, then close the dialog. Perform the previous statement to start sweeping. If this works, then something is wrong with **Hardware (BNC)**. Check the trigger cables on the rear panel.
- Can the PNA communicate with the power meter? If not, there is something wrong with the GPIB communication.
- As a last resort, try rebooting the PNA. First, [save the entire setup to a .csa file](#). When the PNA preset measurement appears, recall this .csa file and continue at this step.

If the source is sweeping, and the PNA Input is sweeping, but there is still no output.

- Check power levels at the LO and Input.
- Check the DUT by making a fixed LO measurement - much easier.

Perform an SMC calibration

1. Disconnect the DUT.
2. Connect the ECal module to a PNA USB port.
3. Click **Calibration**, then **Calibration Wizard**. Because the SC21 measurement is active, the Cal Wizard automatically begins an SMC calibration.
4. At the **Calibration Setup** dialog, click **Next**.
5. At the **Select DUT Connectors and Cal Kits** dialog, for **DUT Port 1** select the connector type and gender of your DUT INPUT. For **DUT Port 2** select the connector type and gender of your DUT OUTPUT. Then select ECal as the Cal Kit to use for each connector. Click **Next**.
6. At the **Scalar Mixer Calibration Step 1 of 2** dialog, connect the power sensor to the Port 1 test cable, then click **Measure**. The data will be used to correct for input mismatch errors. Beginning with PNA Rev 6.0, power measurements are no longer required at port 2.
7. At the **Scalar Mixer Calibration Step 2 of 2** dialog, connect the ECal module Port A to the Port 1 cable, and Port B to the Port 2 cable. Then click **Measure**. This portion of the calibration gathers the linear (non-frequency-translating) error terms of the test setup at the input and output frequencies.

- At the **Calibration completed** dialog, you can choose to save the SMC calibration as a User Cal Set. Otherwise, click **Finish** to complete the SMC calibration. Correction is turned ON and applied to the SMC trace.

What is happening?

Because Fixed Output or Fixed Input FCA measurements require an external source to sweep, the measurements are much slower. When correction is ON, you will see that there are times when nothing is happening on the screen. This is because there are background measurements being made but not displayed.


This is exactly the same as when full 2-port correction is applied to an S-parameter. All four parameters are measured, then correction is applied, then all four measurements are updated. This occurs much faster when there is no external source. With correction OFF, the traces are updated as the data is measured. You can see this taking place by creating the following measurements.

Create S12 Upconverter, S11 Input and S22 Output Match

- Press **Trace**, then **Application**. Click **S11**, **SC12**, and **S22**, then click **OK** to add these measurements to the same channel.
- While the source is sweeping, watch the source port indicator on the front of the PNA. First, the port 1 indicator will light for two sweeps, then the port 2 indicator will light for 2 sweeps. During the last sweep, all 4 traces update.
- Turn correction OFF for ALL measurements. Notice that the relevant traces update as the sweep is occurring.

With the SC12 measurement you can see the reciprocity of the mixer.

Note: With the recent improvements to FCA, this step is MUCH easier than before. SMC forward and reverse measurements can now reside in the same channel and are calibrated automatically at the same time.

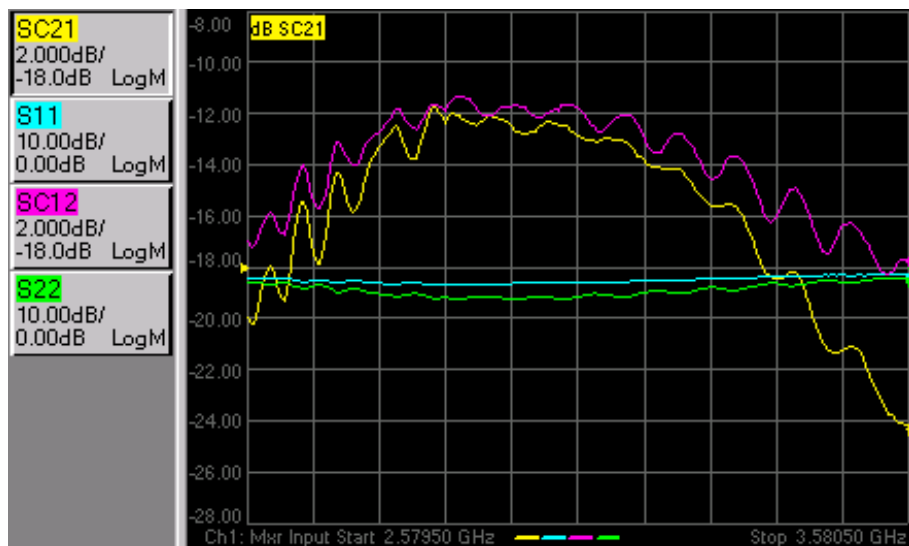

Last Modified:

1-Jan-2007 MX New topic

Embedded LO Measurements

The Embedded LO feature allows you to make VMC measurements of mixers that have a FIXED LO inside the DUT. SMC (Scalar) measurements are not allowed because phase information is used in the LO measurement process.

Note: This feature is available as Opt 084, and must be [enabled](#).

Measurements of these devices are challenging for a couple of reasons:

1. The VMC measurement process requires the use of a [reference mixer](#) that has the same LO frequency as the DUT. A separate internal or external source must be used for the reference mixer LO. [This LO must be controlled by the PNA](#). A PNA with an internal second source is much faster.
2. The PNA receivers need to be tuned to the correct frequency to measure the mixer output, which is highly dependent on the exact LO frequency.

For both of these reasons, the PNA is required to accurately know the frequency of the Embedded LO.

How we measure the embedded LO

The nominal frequency of the embedded LO is input into the [Mixer Setup dialog](#). The LO source for the reference mixer is tuned to this value.

Before each DUT measurement sweep, background sweeps are made to determine the frequency of the embedded LO to a configurable degree of accuracy.

Background sweeps...

- **Broadband Sweep** - rough measurement of the embedded LO frequency, made around a selectable data point over a selectable frequency span. The input signal to the DUT is tuned to a selectable CW frequency. The reference mixer is not used. The B receiver is swept across a selectable span around the anticipated output frequency. The difference between the frequency of the found signal and the desired output frequency is then applied as an adjustment to the Reference Mixer LO frequency.
- **Precise Sweep** The reference mixer LO is tuned to the result of the broadband measurement. VC21 is measured at the selectable data point. Measurements of phase versus time are made, from which the exact offset frequency is computed, until either the tolerance value or maximum iterations are met.

How to make a VMC measurement of a DUT with an Embedded LO


1. [Create a standard VMC measurement](#).
2. In the [mixer setup dialog](#), enter the nominal frequency of the embedded LO as the LO frequency.
3. Perform a [VMC calibration](#).
4. [Launch and complete the Embedded LO Mode dialog box](#) (below)

The LO source for the Reference Mixer can be either:

- An **Internal** source when using a [PNA-X that has two sources](#).
- An **External** source:
 - Must be controlled by the PNA. [Learn how.](#)
 - Must be locked to the PNA using the [10 MHz reference](#).


During Calibration

The LO source is shared between the Reference Mixer and the Calibration Mixer/Filter. This requires a splitter when using an external source.

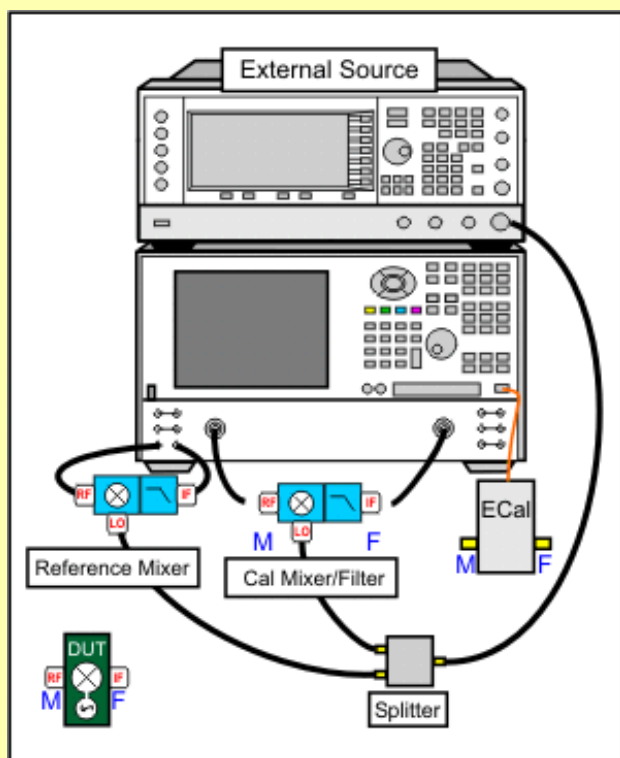


During the Measurement

Only the Reference Mixer uses the LO source. Terminate the LO source port that is no longer used by the Calibration Mixer/Filter to ensure that the match seen by the Reference Mixer LO port does not change after the calibration. This precaution is not necessary if using the internal second source (ports 3 and 4) of the PNA-X.

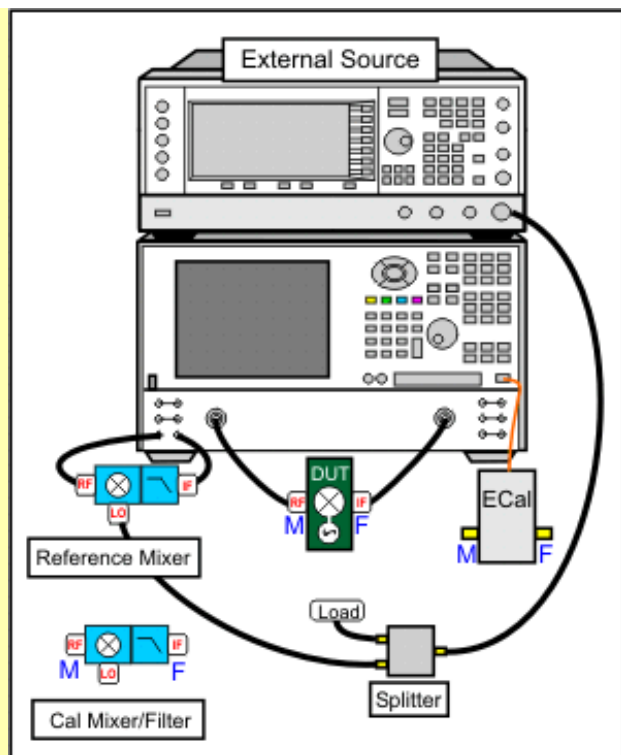

How to Launch the Embedded LO Mode dialog box

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	◀ Programming Commands ▶
1. Navigate using MENU/DIALOG	1. Click Trace 2. then Measure 3. then Embedded LO
For PNA-X models	◀ Programming Commands ▶
1. Not Available	1. Click Trace/Chan 2. then Measure 3. then Embedded LO

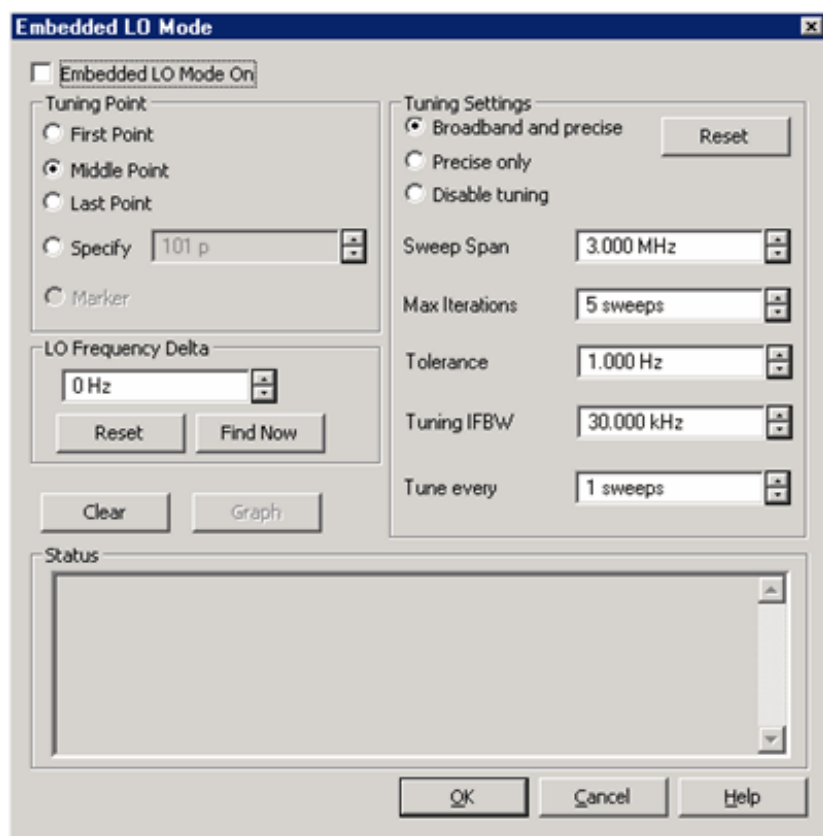

Embedded LO dialog box help

The Tuning Settings balance LO measurement speed versus accuracy. You can tell that accuracy is becoming compromised when noise starts to appear on the VMC measurement trace.

[Scroll up](#) to learn more about the Embedded LO measurement process.

Embedded LO Mode On Check to enable measurement of the Embedded LO.

Tuning Point Select, or specify, the data point in the mixer sweep that will be used to find the embedded LO frequency. If a marker is enabled, that data point can be used. For broadband and Precise sweeps, choose a point in the mixer sweep where noise is least likely to be found. This is generally the center of a sweep or the center of a filter if used.

LO Frequency Delta The absolute difference between the measured embedded LO frequency and the LO setting that is entered in the [Mixer Setup dialog](#). This value is updated each time the embedded LO frequency is measured. Entering a value is a way to change the LO frequency on the mixer setup without invalidating the calibration.

Reset Set the LO Frequency Delta back to 0 Hz

Find Now The PNA finds and measures the actual LO frequency using the current dialog settings. This data is displayed in the **Status** box.

Tuning Settings These settings determine the amount of time spent versus the degree of accuracy to which the LO Frequency is measured. You can tell that accuracy is becoming compromised when noise starts to appear on the VMC measurement trace.

Reset Set all Tuning Settings back to the defaults.

Broadband and Precise Do the entire tuning process for each background sweep.

Precise only Does NOT perform broadband tuning on each sweep. Use this setting when the embedded LO is stable.

Disable tuning Only the previously measured LO Frequency Delta is applied to the reference mixer LO and PNA receivers.

Sweep Span Narrowing the sweep span limits the number of data points that are measured in the broadband sweep and makes the measurement faster.

Max Iterations The maximum number of Precise sweeps to make. When this number is reached, the final measurement is used.

Tolerance When two consecutive Precise measurements are made within this value, the final measurement is used. If this is not achieved within the Max Iterations value, then the last measurement is used. This is the best of the 'Tunings settings' to change to improve accuracy.


Tuning IFBW IF Bandwidth used for Broadband and Precise tuning sweeps. The larger the IFBW, the faster the sweep, but the signal may not be found.

Tune every Set the interval at which tuning is performed before a measurement sweep. 'Tune every 3 sweeps' means that every third measurement sweep is preceded by tuning sweeps. If the embedded LO drifts, or if regularly changing DUTs, use 'Tune every 1 sweep'.

Status Allows textual and graphical representation of the Embedded LO measurement sweeps.

Clear Removes the text information currently being displayed.

Graph Launches the following graphical (spectrum analyzer type) display sweeps of the latest embedded LO measurement.

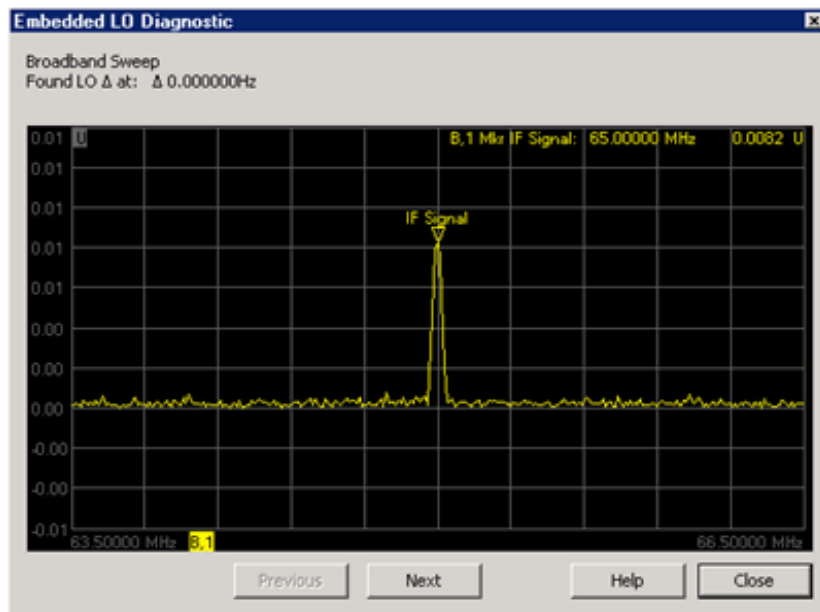

Embedded LO Diagnostic dialog box help

Presents a graphical (spectrum analyzer type) display of the latest embedded LO measurement.

Click **Previous** and **Next** to view available Broadband and Precise sweeps. The LO Frequency is displayed in the Marker annotation.

Last Modified:

5-Oct-2007 Added config image and text

5-Jul-2007 Update access point

6-Apr-2007 MX New topic

- **Test Port power** is the power level out of the source.
- **Corrected power** is the power level you require at the mixer input and output.

This procedure assumes you will applying stimulus power to the mixer **input** to make SC11 and SC21 measurements, and to the **output** of the mixer to make SC22 and SC12 measurements.

1. Determine the gain of the booster amplifier. If the gain has significant slope across the **input and output range** of the mixer, see [Booster Amp with a Gain Slope](#).
2. Determine the corrected power for both the input (port 1) and output (port 2) of the mixer.
3. Calculate the Test Port power for both ports by subtracting the gain of the amplifier from both the input and output corrected power levels.

For example, the following values assume a 25 dB booster amp on port 1 as in the diagram above.

	Corrected Power	-	Amp Gain	=	Test Port Power
Port 1 (input)	0 dBm	-	25 dB	=	-25 dBm
Port 2 (output)	-20 dBm	-	25 dB	=	-45 dBm

4. On the PNA [Power dialog](#), clear the **Port Power Coupled** checkbox, which allows different power levels for each port.
5. Enter the calculated **Test Port Power** values for each port.
6. During the SMC Cal Wizard **Select DUT Connectors and Cal Kits** dialog, click **View/Modify Source Cal Settings** to invoke the [Source Calibration Settings dialog](#).
7. In **Power Offset**, enter the booster amplifier gain.

Booster Amp with a Gain Slope

SMC calibration takes place over the entire input and output range of the mixer. Therefore, the booster amplifier will also be subjected to the entire input and output frequency range of the mixer.

To compensate for a gain slope, you might have to experiment with the source attenuator setting, power-offset value, and initial power value to get a combination that will not cause the PNA source to go unlevelled during or after the cal.

For example, assume the booster amp gain is 30 dB at the low end, and 20 dB at the high end. If you enter 30 dB for the power offset value, the PNA might run out of ALC range when the actual gain drops to 20 dB. The PNA will try to increase its source power to account for the 10 dB gain drop. Therefore, pick a power offset value that is in the middle of the amplifier gain band (25dB).

If possible, select a PNA attenuator setting that puts the ALC approximately in the middle of its range at the desired corrected power with the mid-band gain. This condition means the ALC can set the power higher and lower to account for the gain slope, without unleveling.

If the gain slope is too large, then there may not be a setting that prevents a source unlevel. In this case, a flatter booster amp must be used.

Connecting the PNA to a PC

This document describes how to temporarily connect a PC to a PNA using a LAN cable. This is not necessary if your PNA is already connected to a network. This type of connection is for conveniently transferring large files, such as firmware, that may have already been downloaded and stored on the PC.

The PC can have any version of Windows (Windows 95 or newer.)

You will need the following:

- RJ-45 LAN crossover cable (or two normal cables with a suitable hub).
- Must be logged on the PNA with an [Administrator User name](#) and password.

Note: If your PC is on a domain, do not leave that domain by changing to a workgroup. This may prevent you from later rejoining your domain unless you involve your IT systems administrator. The following procedure will work regardless of whether or not you are on a domain and will not change any domain settings on the PC.

Procedure for All Operating Systems

1. Disconnect the PC from any existing LAN and connect it to the PNA using a crossover cable or hub. There is no need to turn it off to do this.
2. Find the current IP address of your PC. Open a DOS prompt (command window) and type **ipconfig**. This should then show your current IP address. Note this number. For this example, we will assume a PC IP address of 10.0.0.100. If it shows 0.0.0.0, you will have to assign an IP address. [See procedure below.](#)
3. On the PNA, click **File**, then **Exit** to close the PNA application.
4. Right-click on **My Network Places** and select **Properties**.
5. Right-click on **Local Area Connection** and select **Properties**.
6. Select **Internet Protocol (TCP/IP)** then click **Properties**.
7. Click **Use the following IP address** then enter an IP address that is ONE more or ONE less than that noted for the PC. Do not use a number that ends in 000. For this example, one could use either 10.0.0.101 or 10.0.0.99. We'll assume the use of 101.
8. For **Subnet mask**, enter 255.255.255.0. Click **OK**, then **OK** again

For Windows 95/98 systems, go to [Win95/98 step 9](#) below.

9. On the PC, open Windows Explorer. Click **Tools**, then **Map Network Drive**. Note the drive letter shown (for this example we'll assume it is "X".)
10. In **Folder or Path** type the IP address that was just entered for the PNA followed by C\$ in the following format: \\10.0.0.101\C\$
11. In **Connect As** dialog, enter the PNA User name and Password. Unless it has been changed, this is either Administrator with NO password or PNA-Admin, Password Agilent. Click **OK**.

12. In Windows Explorer on the PC, you should now see a new drive letter entry (X) with the description of C\$ on 10.0.0.101. The entire contents of the PNA C drive will now be available for reading or writing. Files can now be transferred by simply dragging them from one location to the other.
13. When you are done transferring files, disconnect the LAN cable connection between the two and reconnect your PC to the network if needed. If the PNA will never be connected to any network, the current network settings could remain. However it may be safer to reset the TCP/IP settings (changed in step 7) back to **Obtain an IP address automatically**.

If your PC currently has no IP address assigned

Follow steps 4 through 8 to add an IP address for the PC. The actual steps may vary slightly depending upon your operating system (NT4 uses Network Neighborhood and you must click on Protocols.) Assign the PC an IP address of 10.0.0.100. The last digits can be anything between 1 and 255, but do not alter the first 3 numbers (10.0.0.) When complete, reset the PC network configuration back to its previous settings.

Win95/98 Procedure for Accessing/Transferring Files

Because Windows 95/98 does not have the security features of NT-based operating systems (NT, Win2k, XP), the PC cannot access the drive on the PNA. To get around this limitation, any files that need to be transferred to/from the PC must be placed in a shared folder. The PNA can then read or write within this folder. This procedure will work for all versions of Windows.

Steps 1 through 8 are identical to the above and must be performed first.

9. On the PC, open Windows Explorer. Create a directory under the C drive named **Shared**. Right click the Shared folder name and select **Sharing**. Share the directory with full read/write permissions. If Sharing does not appear as a choice, then file sharing is not enabled. To enable file sharing,
 1. Right click **Network Neighborhood**, then click **Properties**.
 2. Click **File and Print Sharing** and enable **give others access to my files**
 3. Click **OK**, then **OK** again.
 4. Repeat the beginning of this step.
10. Copy the files to be transferred to the PNA to this shared folder.
11. On the PNA, open Windows Explorer. Click on Tools, Map Network Drive. Note the drive letter shown (for this example we'll assume it is "X".) Uncheck "Reconnect at Logon" if it is currently checked.
9. Under the Folder entry, enter the IP address of the PC and the shared folder name in the following format:
\\10.0.0.100\Shared
10. The PNA should immediately connect to this folder and display its contents as drive "X". Files can now be read from, or written to, this shared directory (shown as Drive X.) Files can be transferred by simply dragging them from one location to the other.
11. When you are done transferring files, disconnect the LAN cable connection between the two and reconnect your PC to the network if needed. If the PNA will never be connected to any network, its current network settings could remain, however it is probably safer to reset the TCP/IP settings (changed in step 7) back to

Obtain an IP address automatically.

Easy versus Secure Configuration

When upgrading Firmware on the PNA, you encounter a **Choose Configuration** dialog box. This is used to determine the level of security set for the DCOM interface on the PNA. For more detailed information on the security settings for the DCOM interface, including a procedure for making these settings manually, see [Configure for COM-DCOM Programming](#).

Comparison of the "Easy and More Secure" settings are as follows:

Easy Connection:

- No configuration of the PNA required for remote access to connect.
- Anyone on the local subnet can access the PNA remotely.
- People from other NT domains can connect to the PNA.

More Secure:

- Requires creating users on the PNA or adding the PNA to a domain
- An administrator of the PNA can specify users or groups that are allowed remote access to the PNA application

Changing Network Client

If your PC network uses Novell NetWare servers, a change must be made to the PNA setup before it can operate on your network. If you are unsure, ask your local IT department.

Note: Do NOT **Uninstall** "Client for Microsoft Networks". This will prevent proper operation of the PNA..

To remove "Client for Microsoft Networks" (Remove is different from Uninstall):

1. From the PNA Desktop, right-click **My Network Places**
2. Click **Properties**
3. Right-click **Local Area Connection**
4. Click **Properties**
5. Click (remove the check from) **Client for Microsoft Networks**

To install "Client Service for NetWare".

1. Click **Install**
2. In **Select Network Component Type**, make sure **Client** is selected
3. Click **Add**
4. In **Select Network Client**, make sure **Client Service for NetWare** is selected
5. Click **OK**.

Troubleshooting the PNA

By running a few checks, you can identify if the analyzer is at fault. Before calling Agilent Technologies or returning the instrument for service, please make the following checks.

- [Check the Basics](#)
- [PNA Application Terminates Unexpectedly](#)
- [Check Error Terms](#)
- [Check the Service Guide](#)

[Other Support Topics](#)

Check the Basics

A problem can often be solved by repeating the procedure you were following when the problem occurred. Before calling Agilent Technologies or returning the instrument for service, please make the following checks:

Note: Problems with the PNA application (slow or terminates unexpectedly) can be caused by a faulty Hard Disk Drive (HDD). For more information, see [Preventing PNA Hard Drive Problems](#) and [The PNA HDD Recovery Process](#).

1. Is there power at the power socket? Is the instrument plugged in?
2. Is the instrument turned on? Check to see if the front panel line switch and at least one of the LED rings around the test ports glows green. This indicates the power supply is on.
3. If you are experiencing difficulty with the front-panel keypad or peripherals, the USB bus may be overloaded. Remove the USB devices, restart the PNA, and reconnect the USB devices. See [Power-up](#).
4. If other equipment, cables, and connectors are being used with the instrument, make sure they are connected properly and operating correctly.
5. Review the procedure for the measurement being performed when the problem appeared. Are all the settings correct?
6. If the instrument is not functioning as expected, return the unit to a known state by pressing the **Preset** key.
7. Is the measurement being performed, and the results that are expected, within the [specifications](#) and capabilities of the instrument?
8. If the problem is thought to be due to firmware, check to see if the instrument has the [latest firmware](#) before starting the troubleshooting procedure.
9. Check that the measurement calibration is valid. See [Accurate Measurement Calibrations](#) for more information.
10. If the necessary test equipment is available, perform the operator's check and system verification in Chapter

2 of the PNA Service Guide, "System Tests, Verifications, and Adjustments," . You can download a copy of the Service Guide from our Web site: <http://www.agilent.com>.

11. **Phase lock lost message** - This usually occurs when there is not enough source power to phase lock the PNA. It can occur during an errant [FCA setup](#) or [Source Power Calibration](#). It can also occur if one of the front panel [reference channel loops](#) is not connected. Otherwise, this indicates a hardware problem.


PNA Application Terminates Unexpectedly

If an unexpected and irrecoverable error occurs, Agilent would like to know about it. The PNA attempts to save pertinent information about the state of the system. **The PNA does NOT send this information to Agilent.**

We respect the privacy of our customers. However, access to information that helps us improve the PNA is a benefit to both Agilent and you. Please take the time to contact us or email the saved information to **na_support@agilent.com**.

The following procedure shows how to do this:

1. A message box immediately appears on the screen containing the location of a directory. Please record this message. If you miss the message, you can find the directory location using the Windows Event Log: On the PNA, click Start, Settings, Control Panel, Administrative Tools, Event Viewer. Double-click the top line (most recent event). The location of the directory is seen in the Description.
2. A dialog box may appear on the screen (shown below) allowing you to add comments to help us replicate the crash.
3. Find the directory (described in Step 1) which contains the following files:
 - 835x.dmp which is the 835x.exe capturing the context in which the program crashed.
 - 835x.xml which reports some very basic information (exception code, OS version, and the list of modules loaded at the time of the crash and their respective version numbers).
 - 835xCrashLog.txt: The text file with your comments (described in Step 2), if submitted.
4. If your PNA is not connected to LAN or is not configured to send email, copy the files to a PC. Then, please email the files to na_support@agilent.com

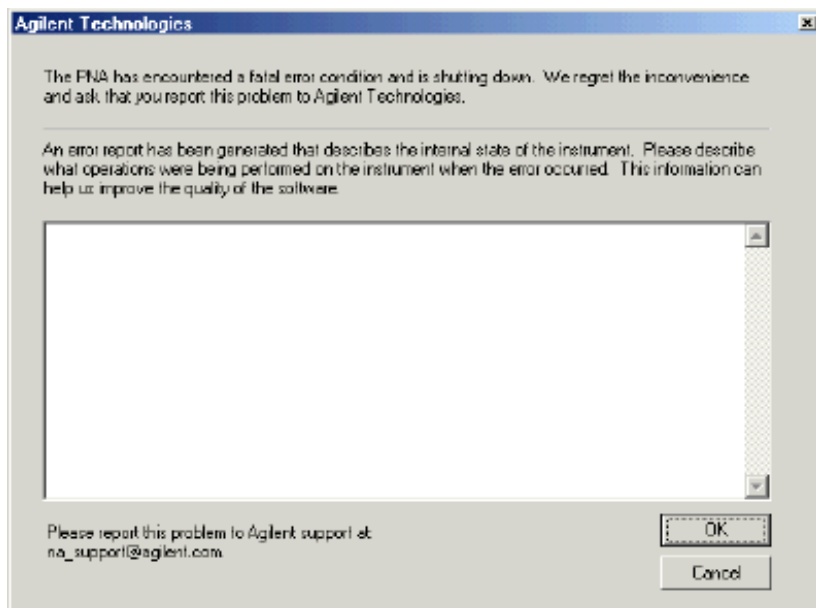

Check Error Terms

If you print the error terms at set intervals (weekly, monthly, and so forth), you can compare current error terms to these records. A stable, repeatable system should generate repeatable error terms over long time intervals, for example, six months. If a subtle failure or mild performance problem is suspected, the magnitude of the error terms should be compared against values generated previously with the same instrument and calibration kit. See the [procedure for monitoring error terms](#).

- A long-term trend often reflects drift, connector and cable wear, or gradual degradation, indicating the need for further investigation and preventative maintenance. Yet, the system may still conform to specifications. The cure is often as simple as cleaning and gaging connectors or inspecting cables.
- A sudden shift in error terms reflects a sudden shift in systematic errors, and may indicate the need for further troubleshooting.

Consider the following while troubleshooting:

- All parts of the system, including cables and calibration devices, can contribute to systematic errors and impact the error terms.
- Connectors must be clean and gauged, and within specification for error term analysis to be meaningful. See the Chapter 2 in the PNA Service Guide for information on cleaning and gaging connectors.
 - Avoid unnecessary bending and flexing of the cables following measurement calibration, thus minimizing cable instability errors.
 - Use good connection techniques during the measurement calibration. The connector interface must be repeatable. See the PNA Service Guide for information on connection techniques.
- It is often worthwhile to perform the procedure twice (using two distinct measurement calibrations) to establish the degree of repeatability. If the results do not seem repeatable, check all connectors and cables.

- Use error-term analysis to troubleshoot minor, subtle performance problems. See Chapter 3, "Troubleshooting," in the PNA Service Guide if a blatant failure or gross measurement error is evident.

Check the Service Guide

Check the PNA Service Guide for specific troubleshooting procedures to help identify problems. You can download a copy of the Service Guide from our Web site: <http://www.agilent.com>.

Last modified:

10/16/06 Added phase lock lost

PNA Error Messages

- [500 - 750 Calibrate](#)
- [770 - 1000 Hardware](#)
- [1000 - 1200 Measure](#)
- [1281 - 1535 Parser](#)
- [1536 - 1650 Display](#)
- [1700 - 2000 Channel](#)
- [2048 - 2200 General](#)
- [Standard SCPI Errors](#)

Note: The **EventID**'s listed below are provided for COM programming. For more information, see [Working with PNA Events](#)

For more information on PNA error messages [\(see Error Messages\)](#).

Cal Errors

Message: 512

"A secondary parameter (power, IFBW, sweeptime, step mode) of the calibrated state has changed."

Severity: Informational

Further explanation: The calibration is questionable when any of these secondary parameters change after the calibration is performed.

Suggestions: If you require an accurate measurement with the new settings, repeat the calibration.

EventID: 68020200 (hex)

Message: 513

"Calibration cannot be completed until you have measured all the necessary standards for your selected Cal Type."

Severity: Informational

Further explanation: You probably received this message because you attempted to turn correction on without first measuring all of the calibration standards

Suggestions: Finish measuring the cal standards

EventID: 68020201 (hex)

Message: 514

"Calibration set has been recalled using a file previously saved on an analyzer that had a different hardware configuration."

Severity: Informational

Further explanation:

Suggestions:

EventID: 68020202 (hex)

Message: 515

"Calibration is required before correction can be turned on. Channel number is <x>, Measurement is <x>."

Severity: Informational

Further explanation: There are no error correction terms to apply for the specified channel and measurement.

Suggestions: Perform or recall a calibration

EventID: 68020203 (hex)

Message: 516

"Critical parameters in your current instrument state do not match the parameters for the calibration set, therefore correction has been turned off. The critical instrument state parameters are sweep type, start frequency, frequency span, and number of points."

Severity: Informational

Further explanation: None

Suggestions: You can either recalibrate using the new settings or change back to the original setting that was used when the calibration was performed.

EventID: 68020204 (hex)

Message: 517

"Interpolation is turned off and you have changed the stimulus settings of the original calibration, so correction has been turned off."

Severity: Informational

Further explanation: The most accurate calibration is maintained only when the original stimulus settings are used.

Suggestions: If reduced accuracy is OK, set interpolation ON to allow stimulus setting changes.

EventID: 68020205 (hex)

Message: 518

"Interpolation is turned off and you have selected correction ON. Correction has been restored with the previous stimulus settings."

Severity: Informational

Further explanation: None

Suggestions: None

EventID: 68020206 (hex)

Message: 519

"Stimulus settings for your current instrument state exceeded the parameters of the original calibration, so

correction has been turned off."

Severity: Informational

Further explanation: Correction data outside the stimulus settings does not exist.

Suggestions: Perform a broadband calibration, with increased numbers of points with interpolation ON, to maintain calibration over the widest possible stimulus frequency settings.

EventID: 68020207(hex)

Message: 520

"Cal Type is set to NONE for Channel <x>, Measurement <x>; please select Calibration menu or press Cal hard key."

Severity: Informational

Further explanation: A cal operation can not proceed until a calibration exists or the cal type is selected. This error can occur if the calibration can not be found. Also this error can happen if a calibration type is not specified before attempting to programmatically execute cal acquisitions.

Suggestions To find a calibration, select a Cal Set that contains the calibration needed for the current measurements. OR specify the cal type before beginning a calibration procedure.

EventID: 68020208 (hex)

Message: 521

"The measurement you set up does not have a corresponding calibration type, so correction has been turned off or is not permitted."

Severity: Informational

Further explanation: The calibration for the channel may apply only to certain S-Parameters. For example, a 1-Port calibration for S11 can not be applied to a 1-Port calibration applied to S22.

Suggestions: Select a calibration type, such as full 2-Port cal, that can be applied to all the measurements to be selected.

EventID: 68020209 (hex)

Message: 522

"The calibration type you selected cannot be set up."

Severity: Informational

Further explanation: "Please use the SCPI command ROUTe:PATH:DEFine:PORT <num>,<num> for full 2 port type port assignment."

Suggestions:

EventID: 6802020A (hex)

Message: 523

"The calibration path you selected cannot be set up because it is not valid for the current measurement."

Severity: Informational

Further explanation: "Please use the SCPI command ROUTe:PATH:DEFine:PORT <num>,<num> for full 2 port type port assignment related to your current measurement."

Suggestions:

EventID: 6802020B (hex)

Message: 524

"The source power calibration is complete."

Severity: Informational

Further explanation:

Suggestions:

EventID: 6802020C (hex)

Message: 525

"You have specified more than 7 standards for one or more calibration classes."

Severity: Informational

Further explanation: These have been truncated to 7 selections.

EventID: 6802020D (hex)

Message: 526

"No user calibration found for this channel."

Severity: Informational

Further explanation: A cal operation can not proceed until a calibration exists.

Suggestions: To find a calibration, you can select a Cal Set that contains the calibration needed for the current measurement.

EventID: 6802020E (hex)

Message: 527

"You do not need to acquire this standard for this calibration type."

Severity: Informational

Further explanation: This error can happen as a result of PROGRAMMATICALLY requesting the measurement of an un-needed calibration standard during a calibration procedure.

Suggestions: Check the specified cal type or eliminate the request for the measurement of the standard.

EventID: 6802020F (hex)

Message: 528

"Could not configure the Electronic Calibration system. Check to see if the module is plugged into the proper connector."

Severity: Informational

Further explanation: During an ECal operation, communication could not be established with the ECal module. The calibration will not be initiated until the presence of the ECal module is verified.

Suggestions: Verify the USB cable is connected properly. Disconnect and re-connect the cable to ensure the analyzer recognizes the module.

EventID: 68020210 (hex)

Message: 529

"DATA OUT OF RANGE: Design Limits Exceeded"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020211(hex)

Message: 530

"EXECUTION ERROR: Could not open ECal module memory backup file"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020212 (hex)

Message: 531

"EXECUTION ERROR: Access to ECal module memory backup file was denied"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020213 (hex)

Message: 532

"EXECUTION ERROR: Failure in writing to ECal module memory backup file"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020214 (hex)

Message: 533

"EXECUTION ERROR: Failure in reading from ECal module memory backup file"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020215 (hex)

Message: 534

"EXECUTION ERROR: Array index out of range"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020216 (hex)

Message: 535

"EXECUTION ERROR: Arrays wrong rank"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020217 (hex)

Message: 536

"EXECUTION ERROR: CPU"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020218 (hex)

Message: 537

"EXECUTION ERROR: Cannot ERASE module"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020219 (hex)

Message: 538

"EXECUTION ERROR: Cannot WRITE module"

Severity: Error

Further explanation:

Suggestions:

EventID: E802021A (hex)

Message: 539

"EXECUTION ERROR: Entry Not Found"

Severity: Error

Further explanation:

Suggestions:

EventID: E802021B (hex)

Message: 540

"EXECUTION ERROR: Invalid command while system is busy"

Severity: Error

Further explanation:

Suggestions:

EventID: E802021C (hex)

Message: 541

"Electronic Cal: Unable to orient ECal module. Please ensure the module is connected to the necessary measurement ports."

Severity: Error

Further explanation: There is no RF connection to the ECal module during a calibration step. An ECal orientation measurement has been attempted but the signal was not found.

Suggestions: Connect the ECal module RF connections to ports specified for the calibration step. The ECal module typically requires at least -18dBm for measurements. If your measurement requires the power level to be less than that, clear the **Do orientation** checkbox to bypass the automatic detection step.

EventID: E802021D (hex)

Message: 542

"EXECUTION ERROR: NO SPACE for NEW CAL, DELETE A CAL"

Severity: Error

Further explanation:

Suggestions:

EventID: E802021E (hex)

Message: 543

"EXECUTION ERROR: No More Room"

Severity: Error

Further explanation:

Suggestions:

EventID: E802021F (hex)

Message: 544

"EXECUTION ERROR: Other array error"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020220 (hex)

Message: 545

"EXECUTION ERROR: Ranks not equal"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020221 (hex)

Message: 546

"EXECUTION ERROR: Too few CONSTANT ranks"

Severity: Error

EventID: E8020222 (hex)

Message: 547

"EXECUTION ERROR: Too few VARYing ranks"

Severity: Error

EventID: E8020223 (hex)

Message: 548

"EXECUTION ERROR: Unknown error"

Severity: Error

EventID: E8020224 (hex)

Message: 549

"EXECUTION ERROR: ecaldrvr.dll bug or invalid module #"

Severity: Error

EventID: E8020225 (hex)

Message: 550

"EXECUTION ERROR: unexpected error code from ecal driver"

Severity: Error

EventID: E8020226 (hex)

Message: 551

"EXECUTION ERROR: unexpected internal driver error"

Severity: Error

EventID: E8020227 (hex)

Message: 552

"HARDWARE ERROR: Can't access ECal Interface Module"

Severity: Error

EventID: E8020228 (hex)

Message: 553

"HARDWARE ERROR: Can't release LPT port, reboot"

Severity: Error

EventID: E8020229 (hex)

Message: 554

"HARDWARE ERROR: VNA Error"

Severity: Error

EventID: E802022A (hex)

Message: 555

"HARDWARE ERROR: not enough data read from ECal module"

Severity: Error

EventID: E802022B (hex)

Message: 556

"OPERATION ABORTED BY HOST COMPUTER"

Severity: Error

EventID: E802022C (hex)

Message: 557

"OPERATION ABORTED BY USER"

Severity: Error

EventID: E802022D (hex)

Message: 558

"OUT OF MEMORY"

Severity: Error

EventID: E802022E (hex)

Message: 559

"QUERY INTERRUPTED:Message(s Abandoned"

Severity: Error

EventID: E802022F (hex)

Message: 560

"QUERY UNTERMINATED: INCOMPLETE PROGRAM Message"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020230 (hex)

Message: 561

"QUERY UNTERMINATED: NOTHING TO SAY"

Severity: Error

Further explanation:

Suggestions:

EventID: E8020231 (hex)

Message: 562

"QUEUE OVERFLOW"

Severity: Error

EventID: E8020232 (hex)

Message: 563

"SETTINGS CONFLICT: ADDITIONAL STANDARDS ARE NEEDED"

Severity: Error

EventID: E8020233 (hex)

Message: 564

"SETTINGS CONFLICT: Adapter Cal is NOT possible"

Severity: Error

EventID: E8020234 (hex)

Message: 565

"SETTINGS CONFLICT: COMMAND OUT OF SEQUENCE"

Severity: Error

EventID: E8020235 (hex)

Message: 566

"SETTINGS CONFLICT: Cal STOPPED - VNA SETUP CHANGED"

Severity: Error

EventID: E8020236 (hex)

Message: 567

"SETTINGS CONFLICT: Calibration is NOT in progress"

Severity: Error

EventID: E8020237 (hex)

Message: 568

"SETTINGS CONFLICT: Can't find specified GPIB board"

Severity: Error

EventID: E8020238 (hex)

Message: 569

"SETTINGS CONFLICT: Can't find/load gpib32.dll"

Severity: Error

EventID: E8020239 (hex)

Message: 570

"SETTINGS CONFLICT: Can't find/load sicl32.dll"

Severity: Error

EventID: E802023A (hex)

Message: 571

"SETTINGS CONFLICT: Can't initialize VNA (bad address?)"

Severity: Error

EventID: E802023B (hex)

Message: 572

"SETTINGS CONFLICT: Can't load LPT port driver or USB driver DLL"

Severity: Error

EventID: E802023C (hex)

Message: 573

"SETTINGS CONFLICT: Invalid Calibration Sweep Mode."

Severity: Error

EventID: E802023D (hex)

Message: 574

"SETTINGS CONFLICT: Invalid Calibration Type"

Severity: Error

EventID: E802023E (hex)

Message: 575

"SETTINGS CONFLICT: Invalid Calibration"

Severity: Error

EventID: E802023F (hex)

Message: 576

"SETTINGS CONFLICT: Invalid GPIB board number specified"

Severity: Error

EventID: E8020240 (hex)

Message: 577

"SETTINGS CONFLICT: Invalid GPIB board type specified"

Severity: Error

EventID: E8020241 (hex)

Message: 578

"SETTINGS CONFLICT: Invalid Module Status"

Severity: Error

EventID: E8020242 (hex)

Message: 579

"SETTINGS CONFLICT: Invalid States"

Severity: Error

EventID: E8020243 (hex)

Message: 580

"SETTINGS CONFLICT: LPT port must be between 1 and 4"

Severity: Error

EventID: E8020244 (hex)

Message: 581

"Could not configure the Electronic Calibration system. Check to see if the module is properly connected."

Severity: Error

EventID: E8020245 (hex)

Message: 582

"SETTINGS CONFLICT: Specified LPT port does not exist"

Severity: Error

EventID: E8020246 (hex)

Message: 583

"SETTINGS CONFLICT: Use frequency domain for cal"

Severity: Error

EventID: E8020247 (hex)

Message: 584

"SETTINGS CONFLICT: Use step sweep type for cal."

Severity: Error

EventID: E8020248 (hex)

Message: 585

"SETTINGS CONFLICT: VNA address must be between 0 and 30"

Severity: Error

EventID: E8020249 (hex)

Message: 586

"SETTINGS CONFLICT: Wrong LPT port driver or USB driver DLL"

Severity: Error

EventID: E802024A (hex)

Message: 587

"SYNTAX ERROR: ECAL:DELAY command must have 2 numbers"

Severity: Error

EventID: E802024B (hex)

Message: 588

"SYNTAX ERROR: INCORRECT SYNTAX"

Severity: Error

EventID: E802024C (hex)

Message: 589

"SYNTAX ERROR: UNKNOWN COMMAND"

Severity: Error

EventID: E802024D (hex)

Message: 590

"Wrong port of module in RF path"

Severity: Error

EventID: E802024E (hex)

Message: 591

"User characterization not found in module"

Severity: Error

EventID: E802024F (hex)

Message: 592

Severity:Informational

"No source power calibration found for the channel and source port of the current measurement."

Further explanation: You tried to turn on source power cal but there is no source power cal data.

Suggestions: Perform a source power calibration

EventID: 68020250 (hex)

Message: 593

Severity:Informational

"A source power calibration sweep was not performed, so there is no correction for the channel and source port of the current measurement."

Further explanation: You tried to turn on source power cal but there is incomplete source cal data.

Suggestions:Perform a complete source power calibration

EventID: 68020251 (hex)

Message: 594

Severity: Informational

"A new trace could not be added to the active window for viewing the source power cal sweep, because it would have exceeded the limit on number of traces/window. Please remove a trace from the window before proceeding with source power cal."

Further explanation: The source power cal attempts to add a data trace to the active window. The active window already contains four traces.

Suggestions:Make the active window contain less than four traces.

EventID: 68020252 (hex)

Message: 595

Severity: Informational

"A new measurement could not be added for performing the source power cal sweep, because the limit on number of measurements has been reached. Please remove a measurement before proceeding with source power cal."

Further explanation: The source power cal attempts to add a measurement. The PNA already has the maximum number of measurements.

Suggestions: Delete a measurement.

EventID: 68020253 (hex)

Message: 596

Severity: Informational

"The calibration power value associated with the source power calibration of Port %1 on Channel %2 was changed with the calibration on. The calibration was not turned off, but the power value might no longer represent the calibration."

Further explanation: The source power cal accuracy is questionable.

Suggestions: If high accuracy is required, perform another source power calibration.

EventID: 68020254 (hex)

Message: 597

Severity: Informational

- Message that is passed from the power meter driver for a source power calibration. -

Further explanation: This error is generated by the power meter driver and passed through the PNA.

EventID: 68020255 (hex)

Message: 598

"During the acquisition of the sliding load standard, the slide was not properly moved to perform a circle fit. The standard's raw impedance was used to determine the directivity for one or more points."

Severity: Informational

Further Explanation: To accurately characterize the standard, the sliding load must be move sufficiently to ensure enough samples around the complex circle or Smith Chart. Under-sampling will cause an inaccurate result.

Suggestions: For best results when using a sliding load, be sure to use multiple slide positions that cover the full range of movement from front to back of the slot.

EventID: 68020256 (hex)

Message: 599

"This feature requires an unused channel, but could not find one. Please free up a channel and try again."

Severity: Informational

Further Explanation: You attempted to view an item within a calset. However, the calset viewer requires that the result be displayed in a channel that is not currently in use. All the channels are currently used. The view can not display the requested item.

Suggestions: You must delete at least one channel that is currently in use.

EventID: 68020257 (hex)

Message: 600

"Interpolation of the original calibration is not allowed since it was performed using Segment Sweep. Correction has been turned off."

Severity: Informational

EventID: 68020258 (hex)

Message: 601

"Cal preferences saved. Cal preference settings can be changed from the 'Cal Preferences' drop down Cal menu."

Severity: Informational

Further explanation: [See Save Preference](#)

EventID: 68020259 (hex)

Message: 608

"CalType not set."

Severity: Error

Further explanation: A cal operation can not proceed until a calibration exists or the proper cal type is selected.

Suggestions: This error can happen if the calibration can't be found. To find a calibration, you can select a Cal Set that contains the calibration needed for the current measurements. This error can also happen if a calibration type is not specified before attempting to programmatically execute cal acquisitions. Specify the cal type before beginning a calibration procedure.

EventID: E8020260 (hex)

Message: 609

"The Calibration feature requested is not implemented."

Further explanation: The specified cal type can be one of many choices. For example, response calibrations require single standards, 1-Port calibrations require 3 standards, and 2-Port calibrations require up to 12 standards.

Suggestions: Be sure to measure only the standards needed for the specified cal type.

EventID: E8020261 (hex)

Message: 610

"The Calibration Class Acquisition requested is not valid for the selected Calibration Type. Please select a different acquisition or a different Calibration Type."

EventID: E8020262 (hex)

Message: 611

"The Calibration Standard data required for the selected caltype was not found."

Severity: Error

Further explanation: An unsuccessful attempt was made to retrieve a specified standard from the raw measurement buffer. The buffer should contain the raw measurements of cal standards stored during a calibration procedure.

Suggestions: Be sure the requested standard is required for the current cal type. Not all standards are needed for all cal types.

EventID: E8020263 (hex)

Message: 612

"The Error Term data required for the selected caltype was not found."

Severity: Error

Further explanation: An unsuccessful attempt was made to retrieve a specified error term from the error correction buffer. The buffer should contain the error correction arrays for the current calibration.

Suggestions: Be sure the requested error term is required for the current cal type. Not all error terms are needed for all cal types.

EventID: E8020264 (hex)

Message: 613

The Calibration data set was not found.

Severity: Error

Further explanation: An unsuccessful attempt to access a cal set has been made. This may indicate a calset has been deleted or has been corrupted.

Suggestions: Try again or select another cal set. If the cal set appears in the cal set list, it may need to be deleted.

EventID: E8020265 (hex)

Message: 614

"The specified measurement does not have a calibration valid for Confidence Check. Please select a different measurement, or recall or perform a different Calibration Type."

Severity: Error

Further explanation: The measurement choice is prevented so that calibration will not be turned off. Not all cal types support all measurements. For example, an 1-Port cal on S11 can not be used to calibrate an S12 measurement. When a measurement is selected that does not have a calibration which can be applied, an informational message is displayed and calibration is turned off.

Suggestions: Use a full 2-Port calibration to be compatible with any S-Parameter.

EventID: E8020266 (hex)

Message: 615

" New calset created."

Severity: Informational message.

Further explanation: The newly created cal set will be automatically named and time stamped. If this is the beginning of a calibration procedure, the cal set will not be stored to memory until the calibration has completed successfully. The new cal set will be deleted if the calibration is canceled or does not otherwise complete successfully.

Suggestions: Informational

EventID: 68020267

Message: 617

The calset file: <x> appears to be corrupted and cannot be removed. Exit the application, remove the file, and restart.

Severity: Error

Suggestions: The cal set file is stored in the application home directory C:/Program Files/Agilent/Network Analyzer/PNACalSets.dat. Remove this file, then restart the application.

EventID: E8020269 (hex)

Message: 634

"The calset file: <x> load failed."

Severity: Error

Further explanation: The calset file contains a collection of calsets. The file resides on the hard drive.

Suggestions: Try restarting the application. If the failure persists, you may have to delete the cal set data file and restart the application. The cal set file is stored in the application home directory. C:/Program Files/Agilent/Network Analyzer/PNACalSets.dat. Remove this file, then restart the application.

EventID: E802027A (hex)

Message: 635

"The calset file: <x> save failed."

Severity: Error

Further explanation: The file operation detected an error. The save operation was aborted.

Suggestions: Retry.

EventID: E802027B (hex)

Message: 636

"A calset was deleted."

Severity: Informational

Further explanation: One of the calsets has been successfully deleted from the collection of calsets available. This can happen as the result of a user request or intentional operation.

Suggestions: None

EventID: 6802027C (hex)

Message: 637

"The version of the calset file: <x> is not compatible with the current instrument."

Severity: Error

Further explanation: A versioning error can prevent a calset from being used. This can happen as a result of instrument firmware upgrades.

Suggestions: If the versioning error is the result of firmware upgrade, you will have to re-install the old version of firmware to re-use the calset file. Or you can re-create the calsets with the current version of firmware.

The cal set file is stored in the application home directory C:/Program Files/Agilent/Network Analyzer/PNACalSets.dat. Remove this file, then restart the application.

EventID: E802027D (hex)

Message: 638

"Incompatible CalSets found: <x> of <y> stored calsets have been loaded."

Severity: Error

Further explanation: Errors were found on some of the calsets stored in the calset file. The errors may have been caused by versioning issues that may have corrupted the various calset keys.

Suggestions: Use the calset viewer to look at the contents of calset files. Delete the files that are corrupted.

EventID: 6802027E (hex)

Message: 639

"The Calset file: <x> was not found. A new file has been created."

Severity: Informational

Further explanation: The calset file should be stored on the hard drive. When the application is started, a search is done and the file is loaded if it can be found. If the file is not found, the analyzer will create a new file and display

this message.

Suggestions: None

EventID: 6802027F (hex)

Message: 640

"The Calset specified is currently in use."

Severity: Error

Further explanation: This may indicate a conflict between multiple calset users attempting calibration tasks.

Suggestions: Save the instrument state. Preset the analyzer and recall the instrument state. This may abort any processes that may be in progress.

EventID: E8020280 (hex)

Message: 641

"The calset specified has not been opened."

Severity: Error

Further explanation: Multiple users may be attempting to access the calset.

Suggestions: Close multiple calset users so that only one user will access the calset.

EventID: E8020281 (hex)

Message: 642

"The maximum number of cal sets has been reached. Delete old or unused cal sets before attempting to create new ones."

Severity: Error

Suggestions: You may also delete the calsets data file.

The cal set file is stored in the application home directory. C:/Program Files/Agilent/Network_Analyzer/PNACalSets.dat. Remove this file, then restart the application.

EventID: E8020282 (hex)

Message: 643

The requested power loss table segment was not found.

Severity: Error

EventID: E8020283 (hex)

Message: 644

"A valid calibration is required before correction can be turned on."

Severity: Error

Further explanation: This usually indicates a calibration procedure has not run to completion or that the selected measurement does not have a valid calibration available from within the currently selected cal set.

Suggestions: To find a calibration, you can select a Cal Set that contains the calibration needed for the current measurements. This error can happen if a calibration type is not specified before attempting to programmatically execute cal acquisitions. Specify the cal type before beginning a calibration procedure.

EventID: E8020284 (hex)

Message: 645

The cal data for <x> is incompatible and was not restored. Please recalibrate."

Severity: Warning

Further explanation: None

Suggestions: None

EventID: A8020285 (hex)

Message: 646

"CalSet not loaded, version is too new."

Severity: Error

Further explanation: An old version of firmware is attempting to run with a new calset version. The version is incompatible.

Suggestions: The calset can be removed. You may also delete the calsets data file if you are migrating between various firmware revisions often and you would like to avoid this error. The cal set file is stored in the application home directory. C:/Program Files/Agilent/Network Analyzer/PNACalSets.dat. Remove this file, then restart the application.

EventID: E8020286 (hex)

Message: 647

"Custom cal type not found."

Severity: Error

Further explanation:

Suggestions:

EventID: E8020287 (hex)

Message: 648

"Custom correction algorithm defers to the client for interpolation."

Severity: Informational

EventID: 68020288 (hex)

Message: 649

"Custom cal dll threw an exception."

Severity: Error

EventID: E8020289 (hex)

Message: 650

"Could not load the ecal.dll library"

Severity: Error

EventID: E802028A (hex)

Message: 656

"The argument specified is not a valid cal type."

Severity: Error

EventID: E8020290 (hex)

Message: 657

"The function found existing interpolated data"

Severity: Informational

EventID: 68020291 (hex)

Message: 658

"The function computed new interpolation values."

Severity: Informational

EventID: 68020292 (hex)

Message: 659

"The source power measurement failed."

Severity: Error

Suggestions: Please check GPIB, power meter settings and sensor connections.

EventID: E8020293 (hex)

Message: 660

"Duplicate session found. Close session and retry."

Severity: Error

EventID: E8020294 (hex)

Message: 661

"The session does not exist. Open the session and try again."

Severity: Error

Further explanation:

EventID: E8020295 (hex)

Message: 662

"Attempt to launch a custom calibration failed."

Severity: Error

Further explanation:

EventID: E8020296 (hex)

Message: 663

"Request to measure a cal standard failed."

Severity: Error

Further explanation: Please ensure you are requesting to measure standards which are defined for this calibration.

EventID: E8020297 (hex)

Message: 664

"Since Electronic Calibration Kit is selected, Mechanical Cal Kit parameter cannot be changed."

Severity: Error

Further explanation:

EventID: E8020298 (hex)

Message: 665

"Frequencies of the active channel are below minimum or above maximum frequencies of the ECal module factory characterization."

Suggestions: Change the channel frequencies, or select another ECal module.

Severity: Error

EventID: E8020299 (hex)

Message: 666

"Calset chosen for characterizing the ECal Module Ports %1 does not contain a calibration for PNA Ports %2."

Severity: Error

Suggestions: Go back to select another calset or to perform another cal.

EventID: E802029A (hex)

Message: 667

"ECal module only has sufficient memory remaining to store a maximum of %1 points in User Characterization %2."

Severity: Error

Suggestions: Decrease your number of points, or choose to overwrite another user characterization.

EventID: E802029B (hex)

Message: 668

Input values are non-monotonic. Cannot interpolate.

Severity: Error

EventID: E802029C (hex)

Message: 669

Interpolation target is out of range. Cannot interpolate.

Severity: Error

EventID: E802029D (hex)

Message: 670

Guided Calibration Error: <>

Severity: Error

EventID: E802029E (hex)

Message: 671

The first call to the guided calibration interface must be Initialize.

Severity: Error

EventID: E802029F (hex)

Message: 672

The selected thru cal method was not recognized.

Severity: Error

EventID: E80202A0 (hex)

Message: 673

Could not generate the error terms.

Severity: Error

EventID: E80202A1 (hex)

Message: 674

Guided calibration must be performed on the active channel

Severity: Error

EventID: E80202A2 (hex)

Message: 675

You can not start using calibration steps until you have successfully called [generate steps](#).

Severity: Error

EventID: E80202A3 (hex)

Message: 676

The step number given is out of range. Step numbers should be between 1 and the number of steps. 0 is not a valid step number.

Severity: Error

EventID: E80202A4 (hex)

Message: 677

A calset was selected for channel: <n> without restoring stimulus.

Severity: Informational

EventID: 680202A5 (hex)

Message: 678

A calset was selected for channel: <n> restoring stimulus.

Severity: Informational

EventID: 680202A6 (hex)

Message: 679

The selected calset stimulus could not be applied to the channel.

Severity: Informational

EventID: 680202A7 (hex)

Message: 680

You attempted to measure power at a frequency outside the frequency range defined for the specified power sensor. Select another sensor or adjust the range for this sensor.

Severity: Error

EventID: E80202A8 (hex)

Message: 681

Specified frequency is outside the frequency ranges currently defined for the power meter's sensors.

Severity: Error

EventID: E80202A9 (hex)

Message: 682

Additional Calibration Standards need to be acquired in order to calibrate over the entire frequency range currently being measured.

Severity: Informational

EventID: 680202AA (hex)

Message: 683

The PNA failed to convert cal kits for use by unguided calibrations. The recommended action is to restore Cal Kit defaults.

Severity: Error

EventID: E80202AB (hex)

Message: 684

The PNA failed to convert cal kits for use by unguided calibrations. CalKit defaults have been restored.

Severity: Error

EventID: E80202AC (hex)

Message: 685

Power meter is reserved by a source power cal acquisition already in progress.

Severity: Error

EventID: E80202AD (hex)

Message: 686

Source power calibration has not been performed or uploaded for the specified channel and source port.

Severity: Error

EventID: E80202AE (hex)

Message: 687

Source power calibration data array size for the specified channel and source port does not match it's associated stimulus number of points.

Severity: Error

EventID: E80202AF (hex)

Message: 688

Source power calibration of Port <n> on Channel <n> was turned off because the correction array no longer exists.

Severity: Error

EventID: E80202B0 (hex)

Message: 689

This command can only be used on a measurement created with a specified calibration loadport.

Severity: Error

EventID: E80202B1 (hex)

Message: 690

Interpolation is turned off and you have changed the stimulus settings of the original calibration, so correction has been turned off.

Severity: Error

EventID: E80202B2 (hex)

Message: 691

Stimulus settings for your current instrument state exceeded the parameters of the original calibration, so correction has been turned off.

Severity: Error

EventID: E80202B3 (hex)

Message: 692

Fixturing: the requested S2P file cannot be read. Possible formatting problem.

Severity: Error

EventID: E80202B4 (hex)

Message: 693

Fixturing: the requested S2P file cannot be opened.

Severity: Error

EventID: E80202B5 (hex)

Message: 694

Fixturing: the requested S2P file cannot be interpolated. This is usually because the frequency range in the file is a subset of the current channel frequency range.

Severity: Error

EventID: E80202B6 (hex)

Message: 695

Cal Registers can only be used by one channel: the channel conveyed in the name of the cal register. The name cannot be changed.

Severity: Error

Further explanation: See [Cal Registers](#)

EventID: E80202B7 (hex)

Message: 696

Fixturing: cannot be enabled with Response Calibrations and has been turned off.

Severity: Error

EventID: E80202B8 (hex)

Message: 697

The selected calibration cannot be performed for this measurement.

Severity: Error

EventID: E80202B9 (hex)

Message: 698

Fitting: RemoveAllConnectors() should be called prior to calling AddConnector after a fit has been attempted.

Severity: Error

EventID: E80202BA (hex)

Message: 699

An attempt was made to acquire calibration data before the system was properly initialized.

Severity: Error

EventID: E80202BB (hex)

Message: 700

Use IGuidedCalibration for multiport calibration types.

Severity: Error

EventID: E80202BC (hex)

Message: 701

Guided calibration requires number of thru measurement paths be at least equal to the number of calibration ports minus 1.

Severity: Error

EventID: E80202BD (hex)

Message: 702

A thru path was specified that includes a port which the calibration was not specified to include.

Severity: Error

EventID: E80202BE (hex)

Message: 703

One or more of the ports to be calibrated was not found in the set of specified thru paths.

Severity: Error

EventID: E80202BF (hex)

Hardware Errors

Message: 770

Input power too high. Source power is off.

Severity: Warning

EventID: A8030302 (hex)

Message: 771

Source power restored.

Severity: Informational

EventID: 68030303 (hex)

Message: 772

"The spampnp.sys driver is not working. Check system hardware. ! Data will be simulated. !"

Severity: Error

Further explanation: The Network Analyzer application cannot locate the DSP board. Hardware or a driver may be malfunctioning. This is also common when attempting to run the Network Analyzer on a workstation.

EventID: E8030304 (hex)

Message: 773

"Instrument Serial Bus Not Working."

Severity: Error

Further explanation: The instrument EEPROM appears to contain either all ones or all zeros. A serial bus hardware failure prevents reading the EEPROM.

EventID: E8030305 (hex)

Message: 848

"Phase lock lost"

Severity: Error

Further explanation: The instrument source was not able to lock properly. This can be the result of broken hardware, poor calibration, or bad EEPROM values.

Suggestions: Perform source calibration. Click System / Service / Adjustments / Source Calibration

EventID: E8030350 (hex)

Message: 849

Phaselock restored.

Severity: Success

EventID: 0x28030351 (hex)

Message: 850

"Unknown hardware error."

Severity: Error

Further explanation: Hardware malfunctioned prevents communication with the DSP.

EventID: E8030352 (hex)

Message: 851

DSP communication lost.

Severity: Error

EventID: E8030353 (hex)

Message: 852

RF power off.

Severity: Error

EventID: E8030354 (hex)

Message: 853

RF power on.

Severity: Success

EventID: 28030355 (hex)

Message: 854

Hardware OK.

Severity: Success

EventID: 28030356 (hex)

Message: 855

"Source unleveled."

Severity: Error

Further explanation: The source was unable to properly level at the requested power. The indicated power may not be accurate.

Suggestions: Try a different power level. Recalibrate source, if problem persists.

EventID: E8030357 (hex)

Message: 856

Source leveled.

Severity: Success

EventID: 28030358 (hex)

Message: 857

Input overloaded.

Severity: Error

EventID: E8030359 (hex)

Message: 858

Input no longer overloaded.

Severity: Success

EventID: 2803035A (hex)

Message: 859

"Yig calibration failed."

Severity: Error

Further explanation: Internal self-calibration of YIG oscillator tuning failed.

EventID: E803035B (hex)

Message: 860

Yig calibrated.

Severity: Success

EventID: 2803035C (hex)

Message: 861

"Analog ramp calibration failed."

Severity: Error

Further explanation: Internal analog sweep ramp calibration has failed.

EventID: E803035D (hex)

Message: 862

Analog ramp calibrated.

Severity: Success

EventID: 2803035E (hex)

Message: 863

Source temperature high.

Severity: Error

EventID: E803035F (hex)

Message: 864

Source temperature OK.

Severity: Success

EventID: 28030360 (hex)

Message: 865

"EEPROM write failed."

Severity: Error

Further explanation: Attempt to store calibration data to EEPROM has failed. There is a possible hardware failure.

EventID: E8030361 (hex)

Message: 866

EEPROM write succeeded.

Severity: Success

EventID: 28030362 (hex)

Message: 867

Attempted I/O write while port set to read only.

Severity: Error

Further explanation: Attempt to write to an I/O data port while the port set to input/read only.

Suggestions: Set data port to write/output before attempting to write to port.

EventID: E8030363 (hex)

Message: 868

" Attempted I/O read from write only port.

Severity: Error

Further explanation: Attempt to read from an I/O data port while the port set to output/write only.

Suggestions: Set data port to read/input before attempting to read from port.

EventID: E8030364 (hex)

Message: 869

Invalid hardware element identifier.

Severity: Error

EventID: E8030365 (hex)

Message: 870

Invalid gain level setting.

Severity: Error

EventID: E8030366 (hex)

Message: 871

Device driver was unable to allocate enough memory. Please try rebooting.

Severity: Error

EventID: E8030367 (hex)

Message: 872

DSP Error. Please Contact Agilent Support. Technical Information: DSP Type 1

Severity: Error

EventID: E8030368 (hex)

Message: 873

DSP Error. Please Contact Agilent Support. Technical Information: DSP Type 2

Severity: Error

EventID: E8030369 (hex)

Message: 874

DSP Error. Please Contact Agilent Support. Technical Information: DSP Type 3

Severity: Error

EventID: E803036A (hex)

Message: 875

DSP Error. Please Contact Agilent Support. Technical Information: DSP Type 4

Severity: Error

EventID: E803036B (hex)

Message: 876

DSP Error. Please Contact Agilent Support. Technical Information: DSP Type 5

Severity: Error

EventID: E803036C (hex)

Message: 910

The trigger connection argument was not recognized as valid by the firmware.

Severity: Error

EventID: 0xE803038E (hex)

Message: 911

The trigger connection specified does not support this trigger behavior

Severity: Error

EventID: E803038F (hex)

Message: 912

The trigger behavior specified was not recognized as valid by the firmware.

Severity: Error

EventID: E8030390 (hex)

Message: 913

The trigger connection specified does not physically exist on this network analyzer

Severity: Error

EventID: E8030391 (hex)

Message: 914

Cannot set "Accept Trigger Before Armed", since this hardware configuration does not support edge triggering.

Severity: Error

EventID: E8030392 (hex)

Message: 915

Cannot set "Trigger Output Enabled", since this hardware configuration does not support BNC2.

Severity: Error

EventID: E8030393 (hex)

Message: 916

Exceeded maximum trigger delay.

Severity: Error

EventID: E8030394 (hex)

Message: 917

Exceeded minimum trigger delay.

Severity: Error

EventID: E8030395 (hex)

Measure Errors

Message: 1024

If you are going to display or otherwise use a memory trace, you must first store a data trace to memory.

Severity: Warning

EventID: A8040400 (hex)

Message: 1025

"The measurement failed to shut down properly. The application is in a corrupt state and should be shut down and restarted."

Severity: Error

Further explanation: This message is displayed if the PNA application becomes corrupt. If you continue to get this error, please call customer service

EventID: E8040401 (hex)

Message: 1026

The measurement failed to shut down properly. The update thread failed to exit properly.

Severity: Warning

EventID: A8040402 (hex)

Message: 1027

"Group Delay format with CW Time or Power sweeps produces invalid data."

Severity: Warning

Further explanation: Group Delay format is incompatible with single-frequency sweeps. Invalid data is produced.

Suggestions: Ignore the data or choose a different format or sweep type.

EventID: A8040403 (hex)

Message: 1028

Severity: Informational

"MSG_LIMIT_FAILED"

Further explanation: Limit line test failed.

EventID: 68040404 (hex)

Message: 1029

Severity: Informational

"MSG_LIMIT_PASSED"

Further explanation: Limit line test passed.

EventID: 68040405 (hex)

Message: 1030

"Exceeded the maximum number of measurements allowed."

Severity: Warning

Further explanation: See [Traces, Channels, and Windows on the PNA](#) for learn about maximum measurements.

EventID: A8040406 (hex)

Message: 1031

"Network Analyzer Internal Error. Unexpected error in AddNewMeasurement."

Severity: Warning

Further explanation: If you continue to get this message, contact product support.

EventID: A8040407 (hex)

Message: 1032

"No measurement was found to perform the selected operation. Operation not completed."

Severity: Warning

Further explanation: None

Suggestions: Create a measurement before performing this operation.

EventID: A8040408 (hex)

Message: 1033

The Markers All Off command failed.

Severity: Warning

EventID: A8040409 (hex)

Message: 1034

"A memory trace has not been saved for the selected trace. Save a memory trace before attempting trace math operations."

Severity: Warning

Further explanation: Must have a memory trace when trying to do Trace Math,

EventID: A804040A (hex)

Message: 1035

"MSG_SET_AVERAGE_COMPLETE"

Severity: Informational

Further explanation: Informational for COM programming. Averaging factor has been reached.

EventID: 6804040B (hex)

Message: 1036

"MSG_CLEAR_AVERAGE_COMPLETE"

Further explanation: Informational for COM programming. Averaging factor has NOT been reached.

EventID: 6804040C (hex)

Message: 1037

"Time Domain transform requires at least 3 input points. The transform has been deactivated."

Severity: Informational

Further explanation: None

Suggestions: Increase the number of points.

EventID: 6804040D (hex)

Message: 1038

Smoothing requires a scalar format, and has been deactivated.

Severity: Informational

EventID: 6804040E (hex)

Message: 1039

A receiver power calibration in this instrument state file cannot be recalled into this firmware version.

Severity: Warning

EventID: A804040F (hex)

Message: 1104

"Exceeded limit on number of measurements."

Severity: Error

Further explanation: See [Traces, Channels, and Windows on the PNA](#) for measurement limits.

EventID: E8040450 (hex)

Message: 1105

"Parameter not valid."

Severity: Error

Further explanation: A measurement parameter that was entered programmatically is not valid.

EventID: E8040451 (hex)

Message: 1106

"Measurement not found."

Severity: Error

Further explanation: Any of these could be the cause:

Trying to calibrate but already have maximum measurements.

Trying to do a confidence check but there is not a measurement.

Trying to create, activate, or alter a measurement through COM that has been deleted through the front panel.

Trying to use a trace name through programming that is not unique.

EventID: E8040452 (hex)

Message: 1107

"No valid memory trace."

Severity: Error

Further explanation: Must have a memory trace when trying to do Trace Math,

Suggestions: Store a memory trace.

EventID: E8040453 (hex)

Message: 1108

"The reference marker was not found."

Severity: Error

Further explanation: Attempted to create a delta marker without first creating a reference marker (COM only).

EventID: E8040454 (hex)

Message: 1109

"Data and Memory traces are no longer compatible. Trace Math has been turned off."

Severity: Error

Further explanation: Warning - channel setting has changed while doing trace math.

Suggestions: Store another memory trace and turn trace math back on.

EventID: A8040455 (hex)

Message: 1110

"Data and Memory traces are not compatible. For valid trace math operations, memory and data traces must have similar measurement conditions."

Severity: Error

Further explanation: Tried to do trace math without compatible data and memory traces.

Suggestions: Store another memory trace.

EventID: E8040456 (hex)

Message: 1111

"Marker Bandwidth not found."

Severity: Error

Further explanation: Could not find a portion of trace that meets the specified bandwidth criteria.

EventID: E8040457 (hex)

Message: 1112

"The peak was not found."

Severity: Error

Further explanation: Could not find portion of trace that meets peak criteria.

Suggestions: See Marker Peak criteria.

EventID: E8040458 (hex)

Message: 1113

"The target search value was not found."

Severity: Error

Further explanation: Could not find interpolated data point that meets search value.

EventID: E8040459 (hex)

Message: 1114

"Reflection measurement, such as S11, must supply an auxiliary port to disambiguate 2-port measurements on multiport instruments."

Severity: Error

Further explanation:

EventID: E804045A (hex)

Message: 1115

"The receiver power calibration has been turned off because the type of measurement or source port has changed, so the calibration is no longer valid."

Severity: Warning

Further explanation:

EventID: A804045B (hex)

Message: 1116

"Receiver power cal requires the active measurement to be of unratiod power."

Severity: Warning

Further explanation:

EventID: A804045C (hex)

Message: 1117

"There is currently no source power calibration associated with the channel and source port of the active measurement. A source power cal should be performed or recalled before performing a receiver power calibration."

Severity: Warning

Further explanation:

EventID: A804045D (hex)

Message: 1118

"The attempted operation can only be performed on a standard measurement type."

Severity: Error

Further explanation:

EventID: E804045E (hex)

Message: 1119

"The custom measurement cannot be loaded because it is not compatible with the Network Analyzer hardware."

Severity: Error

Further explanation:

Suggestions:

EventID: E804045F (hex)

Message: 1120

"The custom measurement cannot be loaded because it is not compatible with the Network Analyzer software."

Severity: Error

Further explanation:

EventID: E8040460 (hex)

Message: 1121

"The custom measurement load operation failed for an unspecified reason."

Severity: Error

Further explanation:

EventID: E8040461 (hex)

Message: 1122

"The custom measurement data processing has generated an unhandled exception, and will be terminated. The PNA software may be in an unstable state and it is recommended that the PNA software be shutdown and restarted."

Severity: Error

Further explanation:

EventID: E8040462 (hex)

Message: 1123

"The attempted operation can only be performed on a custom measurement type."

Severity: Error

Further explanation:

EventID: E8040463 (hex)

Message: 1124

"The requested custom measurement is not available."

Severity: Error

Further explanation:

EventID: E8040464 (hex)

Message: 1125

"The requested custom algorithm was not found."

Severity: Error

Further explanation:

EventID: E8040465 (hex)

Message: 1126

"Normalization cannot be turned on because the measurement does not have a valid divisor buffer."

Severity: Error

Further explanation:

EventID: E8040466 (hex)

Message: 1127

"The Raw Data requested by the measurement could not be provided."

Severity: Warning

Further explanation:

EventID: A8040467 (hex)

Message: 1128

"The selected Sweep Type does not allow Transform and Gating. Transform and Gating disabled. "

Severity: Error

Further explanation:

EventID: E8040468 (hex)

Message: 1129

Memory trace can not be applied to this measurement

Severity: Error

EventID: E8040469 (hex)

Message: 1130

Normalization can not be applied to this measurement

Severity: Error

EventID: E804046A (hex)

Message: 1131

The data provided has an invalid number of points. It could not be stored

Severity: Error

EventID: E804046B (hex)

Message: 1132

The measurement stored in the save/recall state has an invalid version. It could not be loaded

Severity: Error

EventID: E804046C (hex)

Message: 1133

This data format argument for this operation must be "naDataFormat_Polar"

Severity: Error

EventID: E804046D (hex)

Message: 1134

This data format argument for this operation must be a scalar data format

Severity: Error

EventID: E804046E (hex)

Message: 1135

The memory trace is not valid for the current measurement setup.

Severity: Error

EventID: E804046F (hex)

Message: 1136

This measurement is incompatible with existing measurements in this channel. Choose another channel.

Severity: Error

EventID: E8040470 (hex)

Message: 1137

Port extension correction is not available for offset frequency measurements. Port extension correction has been disabled.

Severity: Error

EventID: E8040471 (hex)

Message: 1138

Physical port number assignments for logical port mappings must be unique.

Severity: Error

EventID: E8040472 (hex)

Parser Errors

Message: 1281

"You have sent a read command to the analyzer without first requesting data with an appropriate output command. The analyzer has no data in the output queue to satisfy the request."

Severity: Error

EventID: 68050501 (hex)

Message: 1282

"You must remove the active controller from the bus or the controller must relinquish the bus before the analyzer can assume the system controller mode."

Severity: Error

EventID: E8050502(hex)

Message: 1283

"The analyzer did not receive a complete data transmission. This is usually caused by an interruption of the bus transaction."

Severity: Error

EventID: E8050503 (hex)

Message: 1284

"The instrument status byte has changed."

Severity: Informational

EventID: 68050504 (hex)

Message: 1285

"The SCPI command received has caused error number %1: "%2"."

Severity: Informational

EventID: 68050505 (hex)

Message: 1286

"The INET LAN server has been started as process number %1."

Severity: Informational

EventID: 68050506 (hex)

Message: 1360

"Execution of the SCPI command has failed"

Severity: Error

EventID: E8050550 (hex)

Message: 1361

" The INET/LAN device is not accessible."

Severity: Error

EventID: E8050551 (hex)

Message: 1362

"The INET/LAN driver was not found. "

Severity: Error

EventID: E8050552 (hex)

Message: 1363

"The INET/LAN driver was not found."

Severity: Error

EventID: E8050553 (hex)

Message: 1364

"The INET/LAN device is unable to acquire the necessary resources. "

Severity: Error

EventID: E8050554 (hex)

Message: 1365

"The INET/LAN device generated a generic system error. "

Severity: Error

EventID: E8050555 (hex)

Message: 1366

"Invalid address for the INET/LAN device."

Severity: Error

EventID: E8050556 (hex)

Message: 1367

"The INET I/O library was not found. "

Severity: Error

EventID: E8050557 (hex)

Message: 1368

"An error occurred in the INET system. "

Severity: Error

EventID: E8050558 (hex)

Message: 1369

"Access to the INET/LAN driver was denied. "

Severity: Error

EventID: E8050559 (hex)

Message: 1370

"Could not load error system message dll."

Severity: Error

EventID: E805055A (hex)

Message: 1371

"ErrorSystemMessage.dll does not export the right function."

Severity: Error

EventID: E805055B (hex)

Message: 1372

"Custom scpi library was not able to be knitted"

Severity: Error

EventID: E805055C (hex)

Message: 1373

"Could not knit the scpi error messages from the ErrorSystemMessage lib"

Severity: Error

EventID: E805055D (hex)

Message: 1374

Command is obsolete with this software version.

Severity: Error

EventID: E808055E (hex)

Message: 1375

CALC measurement selection set to none. Use [Calc:Par:Sel](#)

Severity: Error

EventID: E808055F (hex)

Message: 1535

"Parser got command: %1."

Severity: Informational

EventID: 680505FF (hex)

Display Errors 1536 - 1621

Message: 1536

"Exceeded the maximum of 4 traces in each window. The trace for <x> will not be added to window <x>."

Severity: Warning

Further explanation: None

Suggestions: Create the trace in another window. See the [PNA window limits](#).

EventID: A8060600 (hex)

Message: 1537

"Exceeded the maximum of 16 data windows. New window will not be created."

Severity: Warning

Further explanation: None

Suggestions: Create the trace in an existing window. See the [PNA window limits](#).

EventID: A8060601 (hex)

Message: 1538

"No Data Windows are present. Unable to complete operation."

Severity: Warning

Further explanation: Your remote SCPI operation tried to create a new measurement while there were no windows present

Suggestions: Create a new window before creating the measurement. See example [Create a measurement using SCPI](#)

EventID: A8060602 (hex)

Message: 1539

"No data traces are present in the selected window. Operation not completed."

Severity: Warning

Further explanation: None

EventID: A8060603 (hex)

Message: 1540

"Cannot complete request to arrange existing measurements in <x> windows due to the limit of <x> traces per window."

Severity: Informational

Further explanation: The arrange window feature cannot put the existing traces into the number of windows you requested because only 4 traces per window are allowed. [See Arranging Existing Measurements](#)

Suggestions: Either create more windows or delete some traces.

EventID: 68060604 (hex)

Message: 1541

"Unable to establish a connection with the specified printer."

Severity: Warning

Further explanation: None

Suggestions: Refer to Printer Help

EventID: A8060605 (hex)

Message: 1542

"Printout canceled."

Severity: Informational

EventID: 68060606 (hex)

Message: 1616

"Window not found."

Severity: Error

Further explanation: A window was specified in your program which does not exist.

Suggestions: Query the name of your window before specifying.

EventID: E8060650 (hex)

Message: 1617

"Duplicate window ID specified."

Severity: Error

Further explanation: None

EventID: E8060651 (hex)

Message: 1618

"Exceeded limit on number of windows."

Severity: Error

Further explanation: There is a limit of 4 windows per screen.

EventID: E8060652 (hex)

Message: 1619

"Exceeded limit on number of traces/window."

Severity: Error

Further explanation: There is a limit of 4 traces per window. See the [Traces, Channels, and Windows on the PNA](#).

Suggestions: Create the trace in another window

EventID: E8060653 (hex)

Message: 1620

"Trace not found."

Severity: Error

Further explanation: Your program tried to communicate with a non-existing trace.

Suggestions:Query the trace ID before writing to it.

EventID: E8060654 (hex)

Message: 1621

"The operating system does not recognize this printer."

Severity: Warning

EventID: A8060655 (hex)

Message: 1622

Duplicate trace ID specified.

Severity: Error

EventID: E8060656 (hex)

Channel Errors 1792 -1878

Message: 1792

"Sweep Complete."

Severity: Informational

Further explanation: None

Suggestions:None

EventID: 68070700 (hex)

Message: 1793

"All triggerable acquisitions have completed."

Severity: Informational

Further explanation:

EventID: 68070701 (hex)

Message: 1794

"The last trigger produced an aborted sweep."

Severity: Informational

Further explanation:

EventID: 68070702 (hex)

Message: 1795

"The segment list must be adjusted to have at least one active segment with more than 0 points to use segment sweep."

Severity: Informational

Further explanation: You attempted to change **Sweep type** to Segment sweep, but there is either no segments defined or no sweep points in the defined segments

Suggestions: Define at least one segment with at least one measurement point. See Segment sweep for more information

EventID: 68070703 (hex)

Message: 1796

"MSG_SET_CHANNEL_DIRTY"

Severity: Informational

Further explanation: This informational message occurs when a channel setting has changed but the channel still has data that was taken with the previous setting. The following CLEAR message occurs when new channel data is taken.

EventID: 68070704 (hex)

Message: 1797

"MSG_CLEAR_CHANNEL_DIRTY"

Severity: Informational

Further explanation: The previous SET message occurs when a channel setting has changed but the channel still has data that was taken with the previous setting. This CLEAR message occurs when new channel data is taken.

EventID: 68070705 (hex)

Message: 1798

Sweep time has changed from Auto to Manual mode. If desired to return to Auto mode, enter sweep time value of 0.

Severity: Informational

EventID: 68070706 (hex)

Message: 1799

"Set Sweep Completed"

Severity: Informational

Further explanation: This event occurs when a sweep and it's associated sweep calculations finish. This is typically when all sweeps on a channel complete.

EventID: 68070707 (hex)

Message: 1800

"Clear Sweep Completed"

Severity: Informational

Further explanation: This event occurs immediately after the SET SWEEP COMPLETED event. These two events set and clear the "Sweep Completed" bit (bit 4) on the SCPI Device Status register.

EventID: 68070708 (hex)

Message: 1801

"All Sweeps Completed and Processed"

Severity: Informational

Further explanation: This event occurs when all of the sweeps and sweep calculations are complete for a channel.

EventID: 68070709 (hex)

Message: 1802

Low Pass : Frequency limits have been changed.

Severity: Informational

EventID: 6807070A (hex)

Message: 1803

Low Pass : Number of points have been changed.

Severity: Informational

EventID: 6807070B (hex)

Message: 1804

Low Pass : Frequency limits and number of points have been changed.

Severity: Informational

EventID: 6807070C (hex)

Message: 1805

"Channel created"

Severity: Informational

EventID: 6807070D (hex)

Message: 1806

"Channel deleted"

Severity: Informational

EventID: 6807070E (hex)

Message: 1872

"Channel not found."

Severity: Error

Further explanation: A non-existent channel is being referenced under program control.

Suggestions: Query the channel number, then refer to it by number.

EventID: E8070750 (hex)

Message: 1873

"The requested sweep segment was not found."

Severity: Error

Further explanation: A non-existent sweep segment is being referenced under program control.

EventID: E8070751 (hex)

Message: 1874

"The sweep segment list is empty."

Severity: Error

Further explanation: Segment Sweep cannot be specified unless there is at least one defined segment. This error will only occur under remote control.

EventID: E8070752 (hex)

Message: 1875

"The number of points in active sweep segment list segments is 0."

Severity: Error

Further explanation: Segment Sweep cannot be specified unless there is at least data point specified in a segment. This error will only occur under remote control.

EventID: E8070753 (hex)

Message: 1876

"The specified source attenuator is not valid."

Severity: Error

Further explanation: You tried to set the Attenuator property on the Channel object on a PNA that doesn't have a source attenuator.

EventID: E8070754 (hex)

Message: 1877

"Log Frequency sweep cannot be selected with the current Number of Points. Please reduce Number of Points."

Severity: Error

Further explanation: The maximum number of points that can be used for Log sweep is 401.

EventID: E8070755 (hex)

Message: 1878

"The requested Number of Points is greater than can be selected for Log Frequency sweep."

Severity: Error

Further explanation: The maximum number of points that can be used for Log sweep is 401.

EventID: E8070756 (hex)

Message: 1879

"Response frequencies exceeded instrument range so Frequency Offset has been turned off."

Severity: Error

Further explanation: This error is returned whenever the instrument detects that the stimulus sweep setup and Frequency Offset settings result in computed response frequencies that exceed instrument limits. When this occurs, the instrument automatically turns off Frequency Offset to avoid the out-of-range conditions.

Suggestions: When this condition has occurred, change settings for either the stimulus frequencies or Frequency Offset so that the Response frequencies are within instrument bounds. Once this is done, Frequency Offset can once again be turned on.

EventID: E8070757 (hex)

Message: 1880

The total number of points for all the given segments exceeds the maximum number of points supported. The segments were not changed.

Severity: Error

EventID: E8070758 (hex)

Message: 1881

This instance of the Channels object was not used to place the channels in Hold, so no channels were resumed.

Severity: Error

EventID: E8070759 (hex)

Message: 1882

The port number was outside the range of allowed port numbers.

Severity: Error

EventID: E807075A (hex)

Message: 1883

More ports than are present are required for this operation.

Severity: Error

EventID: E807075B (hex)

General Errors

Message: 2048

"The function you requested requires a capability provided by an option to the standard analyzer. That option is not currently installed."

Severity: Error

Further explanation: None

Suggestions: To view the options on your analyzer, click **Help / About Network Analyzer**. For more information see [PNA Options](#)

EventID: 68080800 (hex)

Message: 2049

"The feature you requested is not available on the current instrument."

Severity: Error

Further explanation: None

EventID: 68080801 (hex)

Message: 2050

"The feature you requested is incompatible with the current instrument state."

Severity: Error

Further explanation: None

Suggestions: None

EventID: 68080802 (hex)

Message: 2051

"File<x> has been saved."

Severity: Informational

Further explanation: None

EventID: 68080803 (hex)

Message: 2052

"Attempt to save <x> failed."

Severity: Error

Further explanation: None

Suggestions: If using a floppy disk, ensure it is inside the drive and the disk is not full. Check the filename for special characters.

EventID: E8080804 (hex)

Message: 2053

"Attempt to recall file failed because <x> was not found."

Severity: Error

Further explanation: None

EventID: E8080805 (hex)

Message: 2054

"<x> has a bad header."

Severity: Error

Further explanation: None

Suggestions: Recopy the file and / or delete the file.

EventID: E8080806 (hex)

Message: 2056

"Request to enter hibernate state."

Further explanation: None

EventID: 68080808 (hex)

Message: 2057

"Power up from automatic hibernate state. Program received PBT_APMRESUMEAUTOMATIC Message."

Further explanation: None

EventID: 68080809 (hex)

Message: 2058

"Power up from suspend hibernate state. Program received PBT_APMRESUMESUSPEND Message."

Further explanation: None

EventID: 6808080A (hex)

Message: 2059

"Power up from suspend hibernate state. Program received PBT_APMRESUMECRITICAL Message."

Severity: Warning

Further explanation: None

EventID: A808080B (hex)

Message: 2060

"Power up from unknown hibernate state UI recovery called. Program received no PBT_Message within the time allotted and is attempting recovery."

Severity: Warning

Further explanation: None

EventID: A808080C (hex)

Message: 2061

"<x> already exists. File is being overwritten."

Further explanation: Used only for remote applications

EventID: 6808080D (hex)

Message: 2062

"File has not been saved."

Severity: Error

Further explanation: Used only for remote applications

EventID: E808080E (hex)

Message: 2063

"File <x> has been recalled."

Further explanation: Used only for remote applications

EventID: 6808080F (hex)

Message: 2064

"State version in <x> is considered obsolete by this version of this code."

Severity: Error

Further explanation: You attempted to recall a file that is no longer valid.

Suggestions: You must recreate the file manually.

EventID: E8080810 (hex)

Message: 2065

"State version in <x> is newer than the latest version supported by this code."

Severity: Error

Further explanation: You attempted to recall a file that was created by a later version of the PNA application.

Suggestions: You must recreate the file manually.

EventID: E8080811 (hex)

Message: 2066

"Error occurred while reading file <x>"

Severity: Error

Further explanation: The file may be corrupt.

Suggestions: Try to recreate the file.

EventID: E8080812 (hex)

Message: 2067

"Windows shell error: <x>"

Severity: Error

Further explanation: None

EventID: E8080813 (hex)

Message: 2068

Send message timed out returning: <x>.

Severity: Error

Further explanation: None

EventID: E8080814 (hex)

Message: 2069

"Changing GPIB mode to System Controller."

Severity: Informational

Further explanation: None

EventID: 68080815 (hex)

Message: 2070

"Changing GPIB mode to Talker Listener."

Severity: Informational

Further explanation: None

EventID: 68080816 (hex)

Message: 2071

"The Network Analyzer can not be put in GPIB System Controller mode until the GPIB status is Local. Stop any remote GPIB programs which may be using the Network analyzer, press the Macro/Local key and try again. "

Severity: Informational

Further explanation: See [LCL and RMT Operation](#)

Suggestions: Press the Macro/Local key and try again.

EventID: 68080817 (hex)

Message: 2120

"This method can not be invoked through a late-bound COM call."

Severity: Error

Further explanation: None

Suggestions: Use the alternate method described in the [COM programming documentation](#)

EventID: E8080878 (hex)

Message: 2128

"The specified format is invalid."

Severity:Error

Further explanation: None

EventID: E8080850 (hex)

Message: 2129

"WINNT exception caught by Automation layer."

Severity: Error

Further explanation: None

EventID: E8080851 (hex)

Message: 2130

"Bad port specification."

Severity: Error

Further explanation: None

EventID: E8080852 (hex)

Message: 2131

"Failed to find a printer."

Severity: Error

Further explanation: None

Suggestions: See [Connecting to a Printer](#)

EventID: E8080853 (hex)

Message: 2132

"Manual trigger ignored."

Severity: Error

Further explanation: None

EventID: E8080854 (hex)

Message: 2133

"Attempt to set trigger failed."

Severity: Error

Further explanation: None

EventID: E8080855 (hex)

Message: 2134

"Macro execution failed."

Severity: Error

Further explanation: None

EventID: E8080856 (hex)

Message: 2135

"Specified macro definition is incomplete."

Severity: Error

Further explanation:

EventID: E8080857 (hex)

Message: 2137

"Block data length error."

Severity: Error

Further explanation: See [Getting Data from the Analyzer](#)

EventID: E8080859 (hex)

Message: 2139

"Requested data not found."

Severity: Error

Further explanation: None

EventID: E808085B (hex)

Message: 2142

"The parameter supplied was out of range, so was limited to a value in range before being applied to the instrument."

Severity: Success

Further explanation: None

Suggestions: View range limits before sending programming commands.

EventID: 2808085E (hex)

Message: 2143

The parameter supplied was out of range, so was limited to a value in range before being applied to the instrument.

Severity: Error

EventID: E808085F (hex)

Message: 2144

"Request failed. The required license was not found."

Severity: Error

Further explanation: None

EventID: E8080860 (hex)

Message: 2145

"A remote call to the front panel has returned hresult <x>"

Severity: Error

Further explanation: This may indicate a problem with the front panel

Suggestions: Contact Technical support

EventID: E8080861 (hex)

Message: 2146

The recall operation failed.

Severity: Error

Further explanation:

EventID: E8080862 (hex)

Message: 2147

Attempt to save file failed.

Severity: Error

Further explanation:

EventID: E8080863 (hex)

Message: 2148

Recall attempt failed because file was not found.

Severity: Error

Further explanation:

EventID: E8080864 (hex)

Message: 2149

Recall file has a bad header.

Severity: Error

Further explanation:

EventID: E8080865 (hex)

Message: 2150

Recall file version is obsolete and no longer compatible with this instrument.

Severity: Error

Further explanation:

EventID: E8080866 (hex)

Message: 2151

The recall file contains an istate version newer than this instrument. A remote call to the front panel has returned hresult %1

Severity: Error

Further explanation:

EventID: E8080867 (hex)

Message 2152

"Front Panel <x>

Severity: Error

Further explanation: None

EventID: E8080868 (hex)

Message 2153

"Front Panel message"

Severity: Informational

Further explanation: None

EventID: 68080869 (hex)

Message 2154

"Power Service <x>

Severity: Error

Further explanation: There is more than 1 instance of powerservice running. There should only be one running. This might happen after running install shield - especially when upgrading the CPU board.

Suggestions: Try rebooting. If this persists, please call [Customer Support](#).

EventID: E808086A (hex)

Message 2155

"Power Service <x>

Severity: Informational

Further explanation: None

EventID: 6808086B (hex)

Message 2156

"The Agilent Technologies GPIB driver can not be loaded or unloaded."

Severity: Error

Further explanation: None

Suggestions: If the problem persists, from the PNA desktop, right-click on My Computer. Click Properties, Click Hardware Tab. Click Device Manager Button. Expand GPIB Devices. Right-click and click Uninstall all GPIB interfaces devices. Reboot the PNA.

EventID: E808086C (hex)

Message 2157

"The National Instruments GPIB driver can not be loaded or unloaded."

Severity: Error

Further explanation: None

Suggestions: If the problem persists, from the PNA desktop, right-click on My Computer. Click Properties, Click Hardware Tab. Click Device Manager Button. Expand GPIB Devices. Right-click and click Uninstall all GPIB interfaces devices. Reboot the PNA.

EventID: E808086D (hex)

Message 2158

"The Agilent GPIB driver is loaded but it can not start its parser."

Severity: Error

Further explanation: None

EventID: E808086E (hex)

Message: 2159

The front panel is in remote mode.

Severity: Warning

EventID: A808086F (hex)

Message: 2160

The Registry Key specified could not be found.

Severity: Error

EventID: E8080870 (hex)

Message: 2161

An overcurrent condition has been detected on a probe plugged into the front panel.

Severity: Warning

EventID: A8080871 (hex)

Message: 2162

The operation timed out.

Severity: Error

EventID: E8080872 (hex)

Message 2163

"The Network Analyzer executed a preset."

Severity: Informational

Further explanation: None

EventID: 68080873 (hex)

Message 2164

"Access to file denied."

Severity: Error

Further explanation: This means that the system can not open an output file for writing. Most likely because the file is write protected.

Suggestions: Pick another file name or file directory, check floppy disk hard disk write access.

EventID: E8080874 (hex)

Message 2165

"File type is structured storage."

Severity: Informational

Further explanation: None

EventID: 68080875 (hex)

Message 2166

"The trigger operation failed."

Severity: Error

Further explanation: None

EventID: E8080876 (hex)

Message 2167

"Argument out of range error."

Severity: Error

Further explanation: None

Suggestions: None

EventID: E8080877 (hex)

Message: 2169

The given COM object is not a custom application

Severity: Error

EventID: E8080879 (hex)

Message: 2170

The eventID supplied was not recognized as a valid PNA eventID

Severity: Error

EventID: E808087A (hex)

Message: 2171

The operation was canceled.

Severity: Error

EventID: E808087B (hex)

Message: 2172

High security level cannot be disabled directly. Only an instrument preset or recall of lower security instrument state will reset this security level.

Severity: Error

EventID: E808087C (hex)

Message: 2173

Local lockout mode is on. The PNA application will not accept input from front panel, keyboard or mouse until this mode is turned off from a remote interface.

Severity: Error

EventID: E808087D (hex)

Message: 2174

The SnP request is not valid for the selected measurement.

Severity: Error

EventID: E808087E (hex)

Message: 2175

Preset is not supported while this dialog or wizard is open. Close the dialog or wizard and then try again.

Severity: Error

EventID: E808087F (hex)

Message: 2176

The function you requested requires a capability provided by an option to the standard analyzer. That option is not currently installed.

Severity: Error

EventID: E8080880 (hex)

Message: 2177

Catastrophic error. Crash dump recorded at <n>

Severity: Error

EventID: E8080881 (hex)

Message: 2178

<n>

Severity: Error

EventID: E8080882 (hex)

Message: 2179

Failed to open gen.lic.

Severity: Error

EventID: E8080883 (hex)

Last modified:

Nov. 29, Updated bookmarks
2006

About Error Messages

PNA errors and Operating System errors are displayed and logged in an error file. You can choose how to display PNA errors, or choose to not display PNA errors at all.

[Error Preferences](#)

[View Error Log](#)

[List of PNA Errors](#)

[SCPI Errors](#)


[Other Support topics](#)

Error Preferences

By default, error messages appear on the PNA screen for a brief period. You can choose to have them stay on the screen until you click an OK button, or have them not appear at all. When they stay on the screen, a Help button is available to provide further assistance.

How to select Error Preferences

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	No programming commands
1. Navigate using MENU/DIALOG	1. Click Help 2. then Error Messages 3. then Error Preferences
For PNA-X models	No programming commands
1. Press SYSTEM 2. then [Help] 3. then [Error Messages] 4. then [Error Preferences]	1. Click Help 2. then Error Messages 3. then Error Preferences

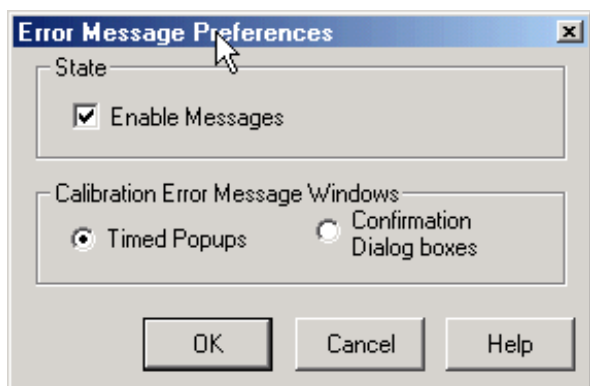

Error Preferences dialog box help

Enable Messages Check to display all PNA error messages as they occur. Clear to suppress the display of PNA error messages. You can still view them in the [error log](#).

Calibration Error Message Windows

Timed Popups Displays error messages on the screen for a duration of time proportional to the length of the message. You can then view the message in the [error log](#) and get further assistance.

Confirmation Dialog boxes Displays error messages in a standard dialog box. You then choose OK or Cancel to close the dialog box, or press Help to get further information on the error message.

View Error Log

The PNA Error Log is a list of all events that have occurred. (Events are used in programming the PNA using COM.) PNA errors is a subset of PNA events. Only events with severity codes of ERROR are displayed on the PNA screen as they occur. From the error log, you can access further help with an error by selecting the error and clicking Help.



How to view the Error Log

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	No programming commands
1. Navigate using MENU/DIALOG	1. Click Help
	2. then Error Messages
	3. then View Error Log
For PNA-X models	No programming commands
1. Press SYSTEM	1. Click Utility
2. then [Help]	2. then System

3. then **[Error]**

3. then **Help**

4. then **Error**

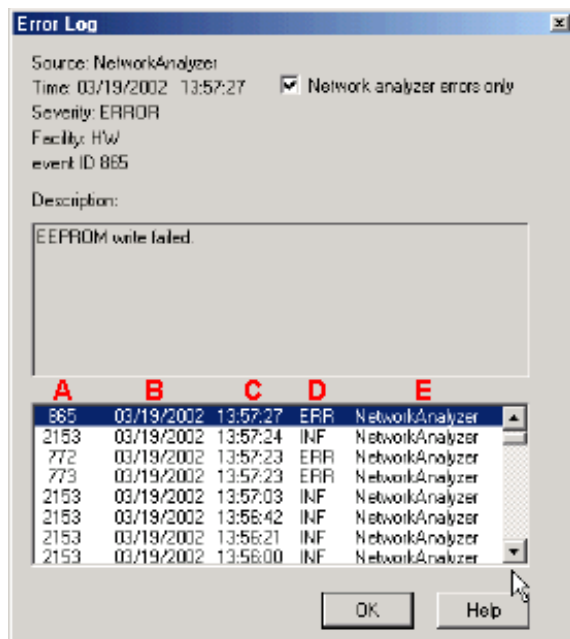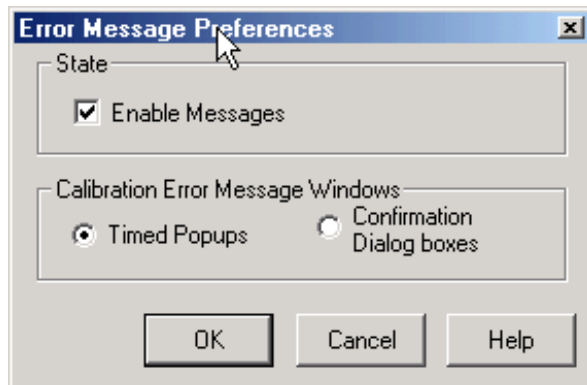

Error Log dialog box help

Network analyzer errors only Select to view only PNA errors. Clear to view all errors that occur on all applications of the computer.

Description Error message that appears on the PNA screen.

A - Event ID Error message number

B - Date the Error occurred

C - Time the Error occurred

D - Severity Code - All events have one of the following severity codes:

- SUCcess - the operation completed successfully
- INFormational - events that occur without impact on the measurement integrity
- WARning - events that occur with potential impact on measurement integrity
- ERRor - events that occur with serious impact on measurement integrity

E - Application in which the error occurred.

OK Closes the Dialog box

Help Provides further information on the selected Error message

To clear the Error Log:

1. From the **View** menu click **Minimize Application**
2. On the desktop, select **Start, Settings, Control Panel**
3. On the Control Panel, click **Administrative Tools**
4. On the Administrative Tools window, click **Event Viewer**
5. On the Event Viewer window, right-click **Application Log**
6. Select **Clear all Events**
7. If you want to save a file with the contents of the Event Log, click **Yes**. Otherwise, click **No**

To restore the PNA application, click on the PNA Analyzer taskbar button at the bottom of the screen

Last Modified:

1-Jan-2007 MX Added UI

Analyzer Accessories

- [Coax Mechanical Calibration Kits](#)
- [Waveguide Mechanical Calibration Kits](#)
- [Electronic Calibration \(ECal\)](#)
- [Mechanical Verification Kits](#)
- [Adapter and Accessory Kits](#)
- [Test Port Cables](#)
- [USB Peripherals](#)
- [Connector Care and Cleaning Supplies](#)
- [ESD Protection](#)

[Other Support topics](#)

For product and order information:

- Call 1-800-452-4844 (8am-8pm EST)
- Visit www.agilent.com/find/accessories
Use the search function to locate information about a particular accessory or view the entire RF and Microwave Test Accessories Catalog.

Accessories are available in these connector types:

- 50 ohm Type-N
- 75 ohm Type-N
- 3.5 mm
- 7 mm (APC-7)
- 7-16
- 2.92 mm
- 2.4 mm
- 1.85 mm
- 1 mm

Test port cables and a calibration kit are necessary for a complete measurement system.

A verification kit is used to verify corrected system performance.

[See the connector type for each PNA model](#)

Coax Mechanical Calibration Kits

Model	Connector Type	Frequency Upper Limit
85032B	Type-N (50 Ohm)	6 GHz
85032F	Type-N (50 Ohm)	9 GHz
85054B	Type-N (50 Ohm)	18 GHz
85036E	Type-N (75 Ohm)	3 GHz
85050B	7 mm	18 GHz
85033D	3.5 mm	6 GHz
85038A	7-16	7.5 GHz
85033E	3.5 mm	9 GHz
85052B	3.5 mm	26.5 GHz
85052C	3.5 mm TRL	26.5 GHz
85056K	2.92 mm	50 GHz
85056A	2.4 mm	50 GHz
85058B/E (data-based)	1.85 mm	67 GHz
85059A (data-based)	1.00 mm	110 GHz

Waveguide Mechanical Calibration Kits

Model	Connector Type	Frequency Range
X11644A	WR-90	8.2-12.4 GHz
P11644A	WR-62	12.4-18 GHz
K11644A	WR-42	18-26.5 GHz
R11644A	WR-28	26.5-40 GHz
Q11644A	WR-22	33-50 GHz
U11644A	WR-19	40-60 GHz
V11644A	WR-15	50-75 GHz

Electronic Calibration (ECal)

Model	Connector Type	Frequency Range
RF Two-Port		
85091C	7 mm (APC-7)	300 kHz-9 GHz
85092C	Type-N (50 ohm) Port B available with 3.5 mm or 7-16 ^a	300 kHz-9 GHz
85093C	3.5 mm Port B available with Type-N (50 ohm) or 7-16 ^a	300 kHz-9 GHz
85096C	Type-N (75 ohm)	300 kHz-3 GHz
85098C	7-16 ^a Port B available with Type-N (50 ohm) or 3.5 mm	300 kHz-7.5 GHz
85099C	Type-F	300 kHz-3 GHz
RF Four-Port		
N4431B Option 010	3.5mm (f) (four-port)	300 kHz-13.5 GHz

N4431B Option 020	Type-N (f) (four-port)	300 kHz-13.5 GHz
N4432A Option 020	Type-N (f) (four-port)	300 kHz-18 GHz (available Feb. 2006)
N4432A Option 030	APC 7 (four-port)	300 kHz-18 GHz (available Feb. 2006)
N4433A Option 010	3.5mm (f) (four-port)	300 kHz-20 GHz (available Feb. 2006)
Microwave Two-Port		
N4690B	Type-N (50 ohm)	300 kHz-18 GHz
N4691B	3.5 mm	300 kHz-26.5 GHz
N4692A	2.92 mm	10 MHz-40 GHz
N4693A	2.4 mm	10 MHz-50 GHz
N4694A	1.85 mm	10 MHz-67 GHz
N4696BA	7 mm	300 kHz-18 GHz

a Limits ECal module high frequency to 7.5 GHz.

Verification Kits

Model	Connector Type	Frequency Range
85055A	Type-N (50 Ohm)	300 kHz-9 GHz
85053B	3.5 mm	300 kHz-26.5 GHz
85057B	2.4 mm	.045-50 GHz
R11645A	WR-28	26.5-40 GHz
Q11645A	WR-22	33-50 GHz

Adapters and Accessory Kits

Model	Description
11878A	Type-N to 3.5 mm Adapter Kit
11525A	Type-N (m) to 7 mm (APC-7)
11853A	Type-N Accessory Kit
11900B	2.4 mm (f) to 2.4 mm (f)
11900C	2.4 mm (f) to 2.4 mm (m)
85130G	Test Port Adapter Set, 2.4 mm (f) to 2.4 mm (m,f)
11901B	2.4 mm (f) to 3.5 mm (f)
11901D	2.4 mm (f) to 3.5 mm (m)
85130F	Test Port Adapter Set, 2.4 mm (f) to 3.5 mm (m,f)
11902B	2.4 mm (f) to 7 mm (APC-7)
11920A	1 mm (m) to 1 mm (m)
11920B	1 mm (f) to 1 mm (f)
11920C	1 mm (m) to 1 mm (f)
11921A	1 mm (m) to 1.85 mm (m)
11921B	1 mm (f) to 1.85 mm (f)
11921C	1 mm (m) to 1.85 mm (f)
11921D	1 mm (f) to 1.85 mm (m)
11922A	1 mm (m) to 2.4 mm (m)
11922B	1 mm (f) to 2.4 mm (f)
11922C	1 mm (m) to 2.4 mm (f)
11922D	1 mm (f) to 2.4 mm (m)

Test Port Cables

Model	Description
N4697E	1.85 mm (f) to 1.85 mm (rugged f) flexible (single)
N4697F	1.85 mm (rugged f, f) to 1.85 mm (rugged m, rugged f) flexible (set)
N6315A	Type-N (m) to Type-N (f), 16 in. (single)
N6314A	Type-N (m) to Type-N (m), 24 in. (single)
85133D	2.4 mm (f) to 2.4 mm (m,f) semi-rigid (set)
85133F	2.4 mm (f) to 2.4 mm (m,f) flexible (set)
85134D	2.4 mm (f) to 3.5 mm (m,f) semi-rigid (set)
85134F	2.4 mm (f) to 3.5 mm (m,f) flexible (set)

USB Peripherals

Model	Description
N4688A	CD RW drive - with USB cable.
N4689A	USB 4-port hub - for connecting additional USB peripherals.
82357A	USB/GPIB Interface - for controlling GPIB devices through USB. Learn more about using the 82357A with the PNA

Connector Care and Cleaning Supplies

Part Number	Description
9301-1243	Lint-Free Swabs (small), 100 ct.
8500-5344	IPA 99.5% alcohol, 30 ml. bottle
8500-6659	Compressed Air, 235 ml. can
5021-7607	Type-N Contact Removal Tool
1401-0225	Standard End-Cap, Type-N (m)
1401-0248	ESD Safe End-Cap, Type-N (m)
1401-0225	Standard End-Cap, Type-N (f)
1401-0247	ESD Safe End-Cap, Type-N (f)

ESD Supplies

Part Number	Description
9300-1367	Adjustable antistatic wrist strap
9300-0980	Antistatic wrist strap grounding cord (5 foot)
9300-0797	Static control table mat (2 foot x 4 foot) with earth ground wire
9300-1126	ESD heel strap

82357A USB / GPIB Interface

The Agilent 82357A is an adapter that creates a GPIB Interface from one of your unused PNA USB ports.

- [Applications](#)
 - [Installing](#)
 - [Configuring](#)
 - [Connecting](#)
 - [Communicating with other Equipment](#)
-

Applications

The 82357A can be used for the following PNA applications:

- **Frequency Converter Application** - The 82357A is included with the Frequency Converter Application ([option 083](#)). External sources **MUST** be connected to this Interface if controlling the PNA using an external PC. See [connecting diagram](#) below. To learn more, see [Configure an external LO source](#).

Note: If the PNA is [hibernated](#) during an FCA measurement involving an external source under FCA control, and then the PNA is restarted, a VISA error message will appear stating "VI_ERROR_INV_OBJECT." To correct this problem, the 82357 USB/GPIB interface must be reinitialized after hibernation. This is done by clicking on the Accept button in the interface initialization dialog box. The green READY light on the interface will illuminate.


- **PNA Controller** - The 82357A can be used by the PNA to control other GPIB devices. This frees the default GPIB interface to perform other GPIB operations, such as control the PNA from an external PC.
- **Source Power Cal** - The 82357A can be used to run a source power calibration.

Installing the 82357A USB/GPIB Interface

1. [Download and install firmware](#) PNA revision 3.0 or greater. To check the revision of your PNA firmware, click **Help** then **About Network Analyzer**.
2. Upgrade to the latest Agilent IO libraries from the CDROM that was shipped with the 82357A. If not available, download them from www.Agilent.com (search for **82357A**)

Configure the 82357A USB/GPIB Interface

When the 82357A is connected to the PNA USB, the following dialog box appears:

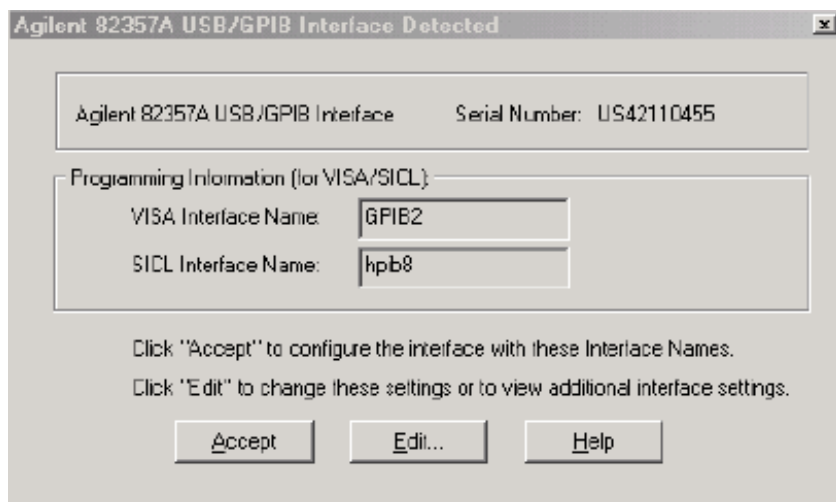


Normally, you do NOT need to edit these settings. The 82357A USB/GPIB Interface is configured automatically as the next unused VISA interface. This is usually **GPIB2** unless you have already configured it for another purpose.

If the VISA Interface Name appears as GPIB0 or GPIB1, these Interfaces must be returned to their default settings for the 82357A to work properly with the PNA. [See Configure for VISA / SICL to learn how.](#)

Connecting the 82357A USB/GPIB Interface

The following diagram illustrates how to connect GPIB test equipment using the USB/GPIB Interface.

- Plug the USB/GPIB Interface into any unused PNA USB port.
- The default GPIB Interface and USB/GPIB Interface should never be connected together.

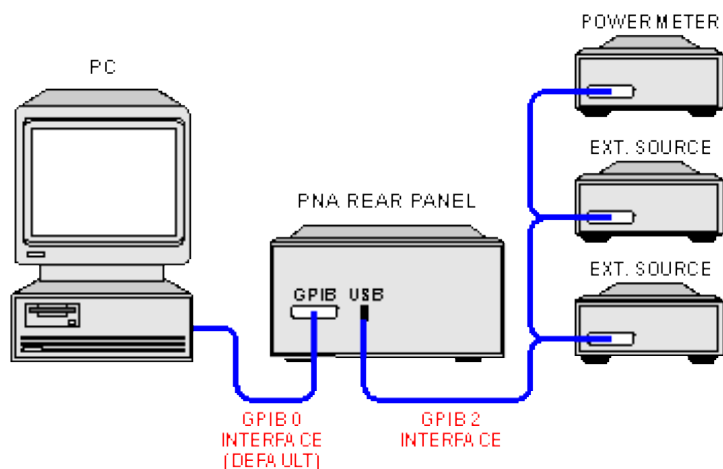

Communicating with Equipment Connected to the USB/GPIB Interface

- The Frequency Converter Application will automatically find and communicate with test equipment that is connected to the USB/GPIB Interface.
- Source power calibration will automatically find and communicate with the power meter that is connected to the USB/GPIB Interface.

- To control other devices through your own program using the 82357A, you must include the new GPIB Interface number when addressing the devices.

Firmware Upgrade

PNA firmware upgrades are available to you at no cost in a self-extracting Install Shield file. The upgrade includes the PNA application, Online help, and Service Utilities. Note: The file is **at least** 50 MB.

The following options are available for you to upgrade your PNA application:

- [Auto-Check](#) and [AgileUpdate](#) If your PNA is connected to the Internet, these utilities will automatically check for, download, and install, the new firmware and associated files when the PNA application is started. You will be prompted before this occurs.
- [Website Access](#) If your PNA is NOT connected to the Internet, but you have a PC that is, you can download the PNA firmware and associated files to a storage medium.

To manually check the version of firmware on the PNA, click Help, then [About Network Analyzer](#).

Note: After a firmware upgrade...

- Custom Cal Kits must be imported. [Learn more](#)
- If a different desktop icon named "Network Analyzer" exists, the shortcut to the PNA application will assume the same icon. Right-click on the desktop, then click **Refresh**.

[Other Support Topics](#)

Auto-Check

With Internet access to your PNA, Auto-Check automatically and regularly checks the Internet for new PNA firmware revisions. If a new revision is found, a notification message prompts you to run the [AgileUpdate](#) utility, which then performs the actual download.

Without Internet access to your PNA, Auto-Check provides a reminder prompt at the selected intervals.

Auto-Check is run only when the PNA application is started. Once the PNA application is running, it will not check for updates again until it is restarted.


When Auto-Check runs, it checks the following conditions:

- Is there an active connection to the Internet?
- Is the Auto-Check utility enabled?
- Is it time to check for new firmware?
- Does new firmware exist?

If all of these conditions are true, Auto-Check shows the following dialog box.

If all of these conditions are NOT true, or to change these settings at any time, click **System, Service**, then **AgileUpdate**. From within AgileUpdate, click **AutoCheck**. These preferences are stored in the PNA registry. Future

firmware upgrades will not change these settings.

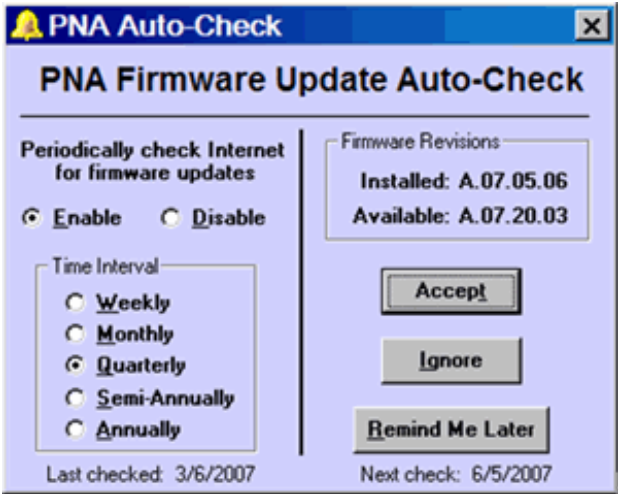

PNA Auto-Check dialog box help

Enable When the PNA application is started, Auto-Check will search the PNA website for firmware updates at the selected time interval.

Disable When the PNA application is started, Auto-Check will NOT search the PNA website for firmware updates.

Time Interval Select the time interval Auto-Check is to search for firmware updates.

Accept Starts update process.

Ignore No further action is taken until the selected time interval has elapsed.


Remind Me Later: This window is displayed again after 1-20 days depending upon the time interval selected.

AgileUpdate

Note: You must have administrative privileges on the analyzer to run this utility. See [Set Up Analyzer Users](#).

How to start AgileUpdate	
Connect the PNA to the Internet. A LAN connection is recommended because a firmware download can take many hours using a modem.	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	No programming commands
1. Navigate using MENU/DIALOG	1. Click System 2. then Service 3. then AgileUpdate

For PNA-X models	No programming commands
<ol style="list-style-type: none"> 1. Press SYSTEM 2. then [Service] 3. then [AgileUpdate] 	<ol style="list-style-type: none"> 1. Click Utility 2. then System 3. then Service 4. then AgileUpdate
<ol style="list-style-type: none"> 1. Click Check for Updates. 2. If updates exist, click Download & Install. 	

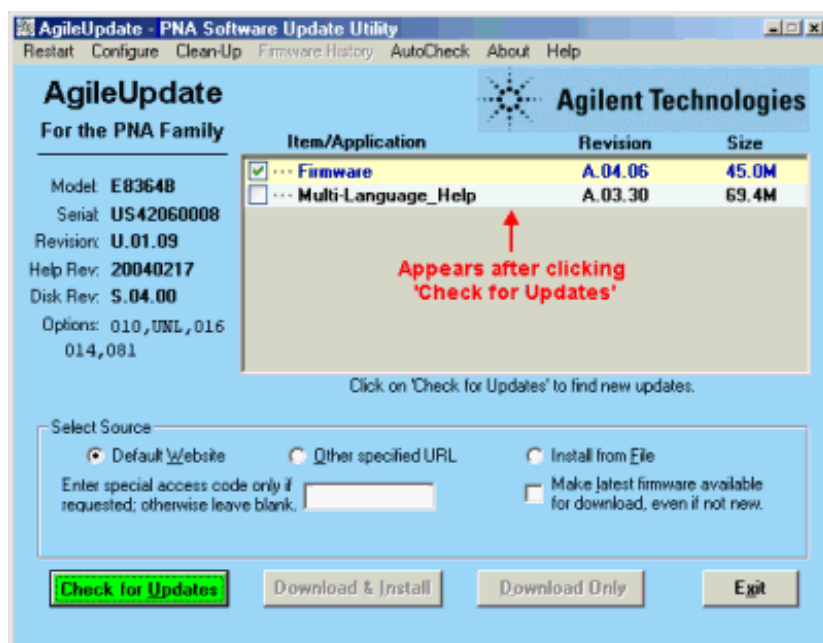

AgileUpdate dialog box help

Note: Your privacy is important to Agilent. AgileUpdate does NOT send ANY information from the PNA to the server. It only downloads from the server to the PNA.

Restart Click to restart from the beginning.

Configure Click to launch the [Configure dialog box](#).

Clean-up Click to delete all but the two most recent install shield packages from the PNA hard drive.

Firmware History Available after clicking **Check for Updates**.

Auto-Check Launches the [Auto-Check](#) dialog box.

Item / Application Lists the items available for download at the firmware website.

- Click on items with **i** to read more information about the download.
- Items in **RED** should be downloaded and installed individually.
- Multi-language help includes all help files except English.

Note: The firmware includes the help file. Therefore, only the firmware checkbox will be selected if a new version for both the firmware and the help file are available.

Select Source

Default Website The Agilent site that contains upgrade FW.

Other Specified URL Click if you were instructed to get firmware from a different website.

Install from File Click if you have already downloaded the InstallShield package and want AgileUpdate to install it for you.

Special Access Code... Type in the code if you were given one from Agilent Technical Support. Otherwise, leave blank.

Make Latest Firmware Available... Select this checkbox if you want to download the latest firmware, even if it is not new.

Check for Updates Click to look for firmware updates at the Agilent website. If there are newer versions, the files will be listed.

Download and Install When updates are found, this selection becomes available. Some files may be pre-checked. Be sure the corresponding boxes are checked for the files you want to download. Then click to download and install the update.

Download Only Click to download the files to the analyzer hard disk and install the files at a later time. At that time, click **Install from File**.



Configuration dialog box help

Note: If AgileUpdate will not connect, try to access ANY Internet website. Contact your local IT department if necessary.

Proxy Setting

No Proxy or Default Proxy Click if you use a LAN connection. AgileUpdate will automatically use the proxy specified in Internet Explorer.

Use specified Proxy / Port Click to enter the proxy name and port. The format is: proxyName:portNumber. (The proxy port number is typically 8088).

Internet timeout If you are using an automatic dial-up Internet connection you may need to increase the timeout.

Current Connection Status Shows the current status of the PNA connection to the Internet.

Note: These settings are NOT saved; they must be re-entered each time AgileUpdate is run.

Agilent Website Access

If you cannot access the Internet directly with your PNA, you can use an external PC with Internet access to download the file from the Agilent website. You can then transfer the file from your PC to your analyzer over a LAN or other means.

1. Go to <http://na.tm.agilent.com/pna/firmware>
2. Click on the firmware to be downloaded.
3. Save the program to disk (hard drive of your PC).
4. Transfer the file from your PC to your PNA using LAN, CD, or USB Pen drive.
5. Double-click the file on the PNA.

Warning: You can save the upgrade file to your PC, but do not attempt to install the PNA application on your PC. It will alter system settings and can result in system crashes.

PNA Configurations and Options

Included with each PNA is a mouse, keyboard. This topic presents standard PNA models and the available options and upgrades.

- **PNA Models**
 - [PNA-X Series](#)
 - [PNA L Series](#)
 - [Microwave Models](#)
 - [RF Models](#) (Discontinued)
 - [mmWave Model](#)
- [Options and Upgrade Kits](#) (Common to all models)
- [Warranty Period](#)

To view the options that are installed on your analyzer, click **Help** then **About Network Analyzer**

A documentation CD-ROM is no longer included in each PNA shipment (Feb.05).

Note: To see if your PNA has a **Reference Receiver for each Test Port**, scroll down to find your PNA model/option. Then see the number of test ports and number of reference receivers. If they are equal, then there is a reference receiver for each test port. Click the model or option number to see a block diagram.

[Other Support Topics](#)

PNA-X Series Model N5242A

Base Options

Click the **Option number** to see the block diagram.

Click the **Connector type** to see the connector specifications.

Option	Frequency Range	Requires	Test Ports	Reference Receivers	Sources	Test Set
200	10 MHz to 26.5 GHz	Opt 080	2	2	1	Includes six front-panel access loops
400	10 MHz to 26.5 GHz	None	4	4	2	Includes twelve front-panel access loops

Extended capabilities

Option	Requires Options...	Description
224	200, 219, and 080	Add internal 2nd source, combiner, and mechanical switches
423	400, 419 and 080	Add combiner and mechanical switches
219	200	Adds: <ul style="list-style-type: none"> • 65 dB source attenuator (5dB steps) • Bias-tees between each source and each test port • 35 dB receiver attenuator (5dB steps).
419	400 (080 recommended)	Adds: <ul style="list-style-type: none"> • 65 dB source attenuator (5dB steps). • Bias-tees between each source and each test port • 35 dB receiver attenuator (5dB steps).
020	None	Add IF inputs on the rear panel for antenna and millimeter-wave.
021	None	Add pulse modulator to internal Source1. Learn more.
022	None	Add pulse modulator to internal Source2. Learn more.
025	None	Add four internal pulse generators. Learn more.

PNA-L Series Model N5230A

Click the **Option number** to see the block diagram.

Click the **Connector type** to see the connector specifications.

Option	Frequency Range	Test Ports	Reference Receivers	Connector	Test Set
020	300 KHz* to 6 GHz	2	2	3.5 mm Male	Standard
025	300 KHz* to 6 GHz	2	2	3.5 mm Male	Configurable
120	300 KHz* to 13 GHz	2	2	3.5 mm Male	Standard
125	300 KHz* to 13 GHz	2	2	3.5 mm Male	Configurable
140	300 KHz* to 13.5 GHz	4	1	3.5 mm Male	Standard
145	300 KHz* to 13.5 GHz	4	1	3.5 mm Male	Configurable ²
146	300 KHz* to 13.5 GHz	4	1	3.5 mm Male	Configurable ³ + Second Source
220	10 MHz* to 20 GHz	2	2	3.5 mm Male	Standard
225	10 MHz* to 20 GHz	2	2	3.5 mm Male	Configurable
240	300 KHz* to 20 GHz	4	1	3.5 mm Male	Standard
245	300 KHz* to 20 GHz	4	1	3.5 mm Male	Configurable ²
246	300 KHz* to 20 GHz	4	1	3.5 mm Male	Configurable ³ + Second Source
420	10 MHz* to 40 GHz	2	2	2.4 mm Male	Standard
425	10 MHz* to 40 GHz	2	2	2.4 mm Male	Configurable
520	10 MHz* to 50 GHz	2	2	2.4 mm Male	Standard
525	10 MHz* to 50 GHz	2	2	2.4 mm Male	Configurable

* [Typical specs](#) apply

Test Set

Standard NO Configurable Test Set.

Configurable (2-port) - Adds six front panel access loops and two 60 dB step attenuators in 10 dB steps.

Configurable² (4-port) - Adds nine front panel access loops and one 60 db step attenuator in 10 dB steps.

Configurable³ - Adds nine front panel access loops and two 60 db step attenuators in 10 dB steps.

Microwave Standard Models ([see options](#))

Click the **PNA model** to see the block diagram.

Click the **Connector type** to see the connector specifications.

PNA Model	Frequency Range	Test Ports	Reference Receivers	Connector Type	Front Panel Jumpers
E8361A	10 MHz* to 67 GHz (tunable to 70 GHz)**	2	2	1.85 mm Male	0
E8362A	45 MHz to 20 GHz	2	2	3.5 mm Male	0
E8363A	45 MHz to 40 GHz	2	2	2.4 mm Male	0
E8364A	45 MHz to 50 GHz	2	2	2.4 mm Male	0
E8362B	10 MHz* to 20 GHz	2	2	3.5 mm Male	0
E8363B	10 MHz* to 40 GHz	2	2	2.4 mm Male	0
E8364B	10 MHz* to 50 GHz	2	2	2.4 mm Male	0
Legend <p>No longer produced</p> <p>* Typical specs apply from 10 to 45 MHz</p> <p>** Typical specs apply from 67 to 70 GHz</p>					

RF Standard Models ([see options](#))

Click the **Connector type** to see the connector specifications.

PNA Model	Frequency Range	Ports	Connector Type	Reference Receivers	Front Panel Jumpers
E8356A	300 kHz to 3 GHz	2	Type-N Female	2	4
E8357A	300 kHz to 6 GHz	2	Type-N Female	2	4
E8358A	300 kHz to 9 GHz	2	Type-N Female	2	4
E8801A	300 kHz to 3 GHz	2	Type-N Female	1	0
E8802A	300 kHz to 6 GHz	2	Type-N Female	1	0
E8803A	300 kHz to 9 GHz	2	Type-N Female	1	0

N3381A	300 kHz to 3 GHz	3	Type-N Female	1	0
N3382A	300 kHz to 6 GHz	3	Type-N Female	1	0
N3383A	300 kHz to 9 GHz	3	Type-N Female	1	0
All RF models are no longer produced (June 1, 2005).					

Millimeter Wave PNA

PNA Model	Frequency Range	Ports	Connector Type	Reference Receivers	Front Panel jumpers
N5250A	10 MHz* to 110 GHz	2	1.0 mm	2	N5260A
<p>* Typical specs apply from 10 to 45 MHz</p> <p>Test heads to 325 GHz are also available</p> <p>Upgrade your existing E836xB with the following:</p> <ul style="list-style-type: none"> • H11 option • N5260A Test Set • Millimeter-Wave VNA Frequency Extension Modules from Oleson Microwave Labs Extension Modules 					

Options and Upgrade Kits

The following options are installed at the time of purchase, and some are also available after the initial purchase of a PNA. To order an upgrade, contact your [Agilent representative](#).

Option	Supported Models	Description
006	E8356A E8801A N3381A	Upgrade to 6 GHz frequency range. (No longer available) Adds 6 GHz operation. Includes installation at an Agilent service center. Instrument calibration (required after frequency upgrade) is available for an additional fee.
009	E8356/7A E8801/2A N3381/2A	Upgrade to 9 GHz frequency range.(No longer available) Adds 9 GHz operation. Includes installation at an Agilent service center. Instrument calibration (required after frequency upgrade) is available for an additional fee.
010	All	Time-domain

		<p>Adds time-domain capability to analyzer. The serial number of the analyzer must be specified when ordering this kit. Software upgrade. Learn more about Time Domain</p> <p>Learn how this option is enabled.</p>
014	E8361A E8362/ 63/ 64B	<p>Configurable test set</p> <p>Adds front panel access to the source output and coupler input on test ports 1 and 2. Adds front panel access directly to all receivers, including the reference receiver.</p> <p>Upgrade includes installation at an Agilent service center.</p>
015	E8356/ 57/ 58A	<p>Configurable test set (No longer available)</p> <p>Adds front panel access to the source output and coupler input on test ports 1 and 2.</p> <p>Adds 35 dB step attenuators between the couplers and receivers.</p> <p>Upgrade includes installation at an Agilent service center.</p>
016	E8361A E8362/ 63/ 64B	<p>Receiver Step Attenuators</p> <p>Adds two step attenuators. (E8361A adds 50 dB step attenuators with 10 dB resolution; all other PNA models add 35 dB step attenuators with 5 dB resolution.) Each attenuator is inserted between a test port and its corresponding receiver. Requires option UNL.</p>
022	E8361A E8362/ 63/ 64B	<p>Extended Memory</p> <p>Adds more RAM for a total of 512MB. Learn more about PNA RAM</p>
080	E8361A E8362/ 63/ 64B N5230A N5242A	<p>Frequency Offset</p> <p>Enables you to set the PNA source independently from where the receivers are tuned. This capability is important for measuring mixers, converters, and amplifiers. To control the additional hardware, a basic user interface, SCPI, and COM commands are provided. Requires option 014 or Active test set (N5230A).</p>
081	E8361A E8362/ 63/ 64B	<p>Reference Switch</p> <p>Adds an internal solid state switch in the R1 reference path for controlling an external reference mixer. Requires option 014 and opt 080</p> <p>See a block diagram which includes the reference switch.</p>
082	All	<p>Scalar Mixer Measurements</p> <p>Allows Only the Scalar Mixer Converter (SMC) portion of the Frequency Converter Measurement Application. Provides the same intuitive user-interface, easy calibration, and external source control for making fixed and swept LO Scalar Mixer measurements. When used with a multiport PNA or external test set, SMC is only available on PNA ports 1 and 2.</p> <p>Requires Opt 080.</p>

		Learn more.
083	E8361A E8362B/ 63B/ 64B N5242A	Frequency Converter Measurement Application Provides an intuitive user-interface for making extremely accurate conversion loss and absolute group delay measurements on mixers and converters. Exceptional amplitude and phase accuracy is achieved through two new calibration techniques: Scalar Mixer Calibration and Vector Mixer Calibration. The application also provides automatic control of all of Agilent's major signal sources. Requires option 014, 080, and 081. Learn more
084	E8361A E8362B/ 63B/ 64B N5242A	Embedded LO Provides the ability to measure frequency converters that have an embedded LO. Learn more
098	E8356/ 57/ 58A	CPU board upgrade (No longer available) Replaces the 266 MHz CPU board with a 500 MHz CPU board. Upgrade includes installation at an Agilent service center. Learn how to check your PNA CPU speed . See also 1.1 GHz CPU board (Dec. 2005)
1E1	E8801/ 02/ 03A N3381/ 82/ 83A	70 dB step attenuator (No longer available) Adds a single 70 dB step attenuator that is switched between the source and each output port to extend the output power to -85 dBm. Note: Two 70 dB step attenuators are standard equipment with PNA models E8356/ 57/ 58A. Upgrade includes installation at an Agilent service center.
1E5	E8801/ 02/ 03A N3381/ 82/ 83A	High stability 10 MHz time base (No longer available) Replaces 10 ppm time base with a 1 ppm time base. High stability time base is standard with PNA models E8356/ 57/ 58A and E8362/ 63/ 64B.
550	E8361A E8362B/ 63B/ 64B N5230A	Add full 4 port capability and differential measurements - Learn more. Requires a PNA with configurable test set. E836x Opt 014 or N5230A Opt. x25
551	E8361A E8362B/ 63B/ 64B N5230A	Add fully integrated measurements at all of the available test ports. Solutions and PNA requirements depend on the supported test set. See http://www.agilent.com/find/multiport
H08	E8361A E8362B/ 63B/ 64B N5242A	Narrowband Pulsed Measurement Application Provides the Pulsed Application for average pulse and point-in-pulse measurements.

		E836x models require options H11, UNL, 014, 080, and 081. Learn more See N5242A options for more information.
H11	E8361A E8362B/ 63B/ 64B	IF Access Provides rear panel access to the PNA IF paths for: <ul style="list-style-type: none"> • Extended frequency coverage to 325 GHz • Pulsed measurement capability • Advanced antenna measurements Requires options UNL, 014, 080, and 081. Learn more
UNL	E8361A E8362/ 63/ 64A E8362/ 63/ 64B	Extended power range and bias tees Adds two step attenuators and two bias tees. (E8361A adds 50 dB step attenuators; E8362/ 63/ 64A/B adds 60 dB step attenuators. All attenuators have a 10 dB resolution.) A step attenuator and bias-tee set is inserted between the source and test port 1 and another set between the source and test port 2. Upgrade includes installation at an Agilent service center.

Certification Options

Option	Supported Models	Description
1A7	E8361A E8362B/ 63B/ 64B N5250A	Complete set of measurement data which was acquired from testing your PNA to published specifications. Includes calibration label, calibration certificate, and data report. Conforms to ISO 9001.
UK6	E8361A E8362B/ 63B/ 64B N5250A	Complete set of measurement data which was acquired from testing your PNA to published specifications. Includes calibration label, ISO 17025 calibration certificate, data report, measurement uncertainties and guard bands on all specifications. Conforms to ISO17025 and ISO 9001.

Documentation and Localization Options

Description

Printed versions of PNA Help in pdf format are available at www.agilent.com/find/pna. (Apr.2005)

A documentation CD-ROM is no longer included with each PNA shipment (Feb.2005).

To download a service guide for your PNA, or the latest version of PNA Help, visit www.agilent.com/find/pna, search for your PNA model, then click Library.

PNA Warranty Period

The actual warranty on your instrument depends on the date it was ordered as well as whether or not any warranty options were purchased at that time. To determine the exact warranty on your instrument, contact [Agilent Technologies](#) with the model and serial number of your instrument.

For online information about Agilent's service and support products visit: www.agilent.com/find/tm_services.

Last modified:

5-Sep-2007 Added Embedded LO

9/26/06 MQ Added PNA-L 4port models

9/27/06 MX Added PNA-X

Option Enable Utility

The Option Enable utility allows you to perform the following activities on your PNA.

- Enable or remove software options and some hardware options.
- Recover option data if the hard drive or other data-containing assembly is replaced.
- Input or change a serial number.

The following items are discussed in this topic:

[Keywords](#)

[Running the Program](#)

[Removing an Option](#)

[Installing an Option](#)

[Repairing and Recovering Option Data](#)

[Installing or Changing the Serial Number](#)

See Also

[See PNA Configurations and Options](#)

Keywords

To add certain options, you need a keyword that is provided by Agilent. There are two types of keywords:

- **Option Keywords** add a software option.
- **Model Keywords** may be required if you replace multiple assemblies.

Keywords are linked to the PNA **Host ID**, which is displayed on the Option Enable dialog box (below).

Temporary and Permanent Options


Any software option can also be installed on a temporary basis for a specified amount of time. This allows you to evaluate a specific feature or capability at no cost.

If the license key provided by Agilent has an expiration date, you must select the "temporary" option and enter the expiration date exactly as stated in the license statement. If you decide to make this option permanent, Agilent will provide a new keyword that converts the option to permanent status.

For either permanent or temporary software options, a provided keyword must be entered.

Running the Program

On the PNA, click **System**, point to **Service**, then click **Option Enable**.

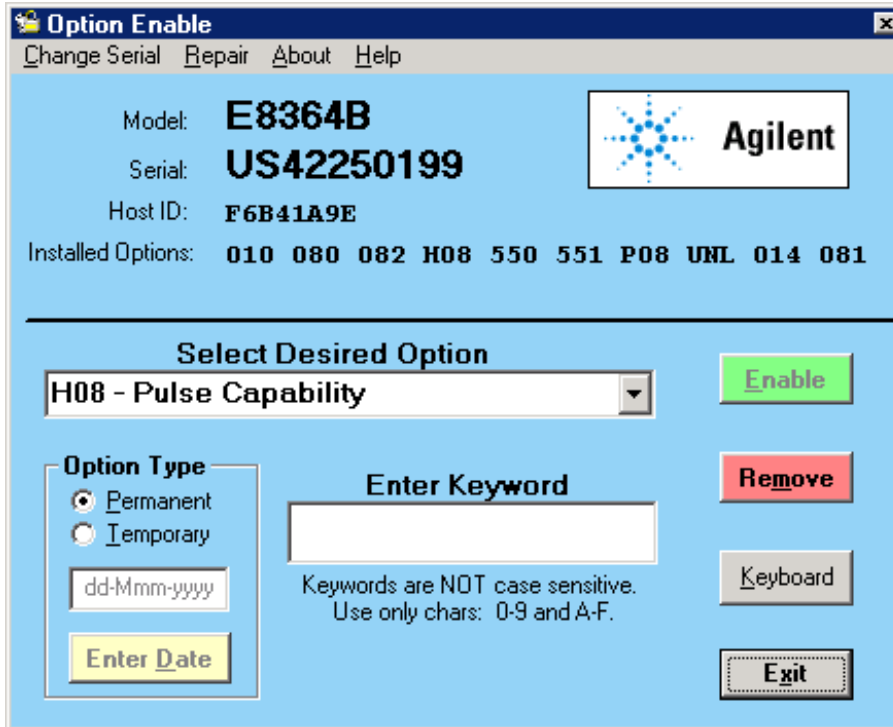The image shows a software window titled "Option Enable" with a menu bar containing "Change Serial", "Repair", "About", and "Help". The window displays device information: Model: E8364B, Serial: US42250199, Host ID: F6B41A9E, and Installed Options: 010 080 082 H08 550 551 P08 UNL 014 081. An Agilent logo is in the top right. Below this is a section titled "Select Desired Option" with a drop-down menu currently showing "H08 - Pulse Capability". To the right of the menu is a green "Enable" button. Below the menu is an "Option Type" section with radio buttons for "Permanent" (selected) and "Temporary", a date input field "dd-Mmm-yyyy", and an "Enter Date" button. To the right of this is an "Enter Keyword" text box, a "Remove" button, and a "Keyboard" button. Below the keyword box is a note: "Keywords are NOT case sensitive. Use only chars: 0-9 and A-F." At the bottom right is an "Exit" button.

1. To enable or remove an option, select it from the drop-down list of available options. If the desired option is not listed, select the last choice in the list, labeled **Enter Unlisted Option**.
2. Enter the 3-character option name and click **Enter**

If a software option was chosen, the following occurs.

- The **Remove** button will be enabled.
- The keyword entry area becomes visible.
- The permanent/temporary selection is enabled.

If a hardware option is selected, the following occurs.

- With the hardware option already installed, the **Remove** button is enabled.
- With the hardware option not installed, the **Enable** button is enabled.

Removing an Option

1. To remove an option, click **Remove**.
2. After the option is removed, restart the network analyzer application for the changes to take effect.

Note: Removal of a licensed option (such as Option 010, Time Domain) will permanently remove the license

keyword. If this option **may** be needed in the future, then record the license keyword before removing the option. Do this by copying the file “gen.lic” to another location (such as a floppy disk), or print it using notepad. The file, located at “C:\Program Files\Agilent\Network Analyzer” contains all the information needed to recreate the license.

Installing an Option

1. If the keyword entry area is visible, enter a keyword. (The keyword is not case sensitive.)
2. Click **Enable**.
3. After the option is installed, restart the network analyzer application for the changes to take effect.

Note: If a desired option is not visible, it may be because a prerequisite option has not yet been installed. For example, Option 083 will not be visible if Option 080 is not already present. [See PNA options.](#)

Repairing and Recovering Option Data

Use this part of the Option Enable Utility in the following situations:

- If the hard drive is replaced
- If the frequency reference assembly is replaced

This routine rebuilds the option information contained on the hard drive and frequency reference assembly (primary and backup).

1. Select **Repair** from the **Option Enable** menu bar.

Note: If you are unsure if this routine needs to be done, run it; no harm will result.

2. The model and serial number are displayed, along with four check boxes.
3. Select the boxes that apply.
4. Click **Begin Repair**. The routine checks all data files and performs any needed repairs. You may be asked to verify certain information and processes.
5. If the routine finds that the model number is incorrect or invalid, you will be asked to select the correct model number.
 - Along with this model number, a model keyword will be required. If this is not labeled on the analyzer, or is not otherwise known, contact Agilent
 - After you have entered the requested data, click **Change Model**. This process takes about 30 seconds.
6. When done, click **Exit Repair**.
7. If you do not need to install any other options, click **Exit**.

Installing or Changing the Serial Number

It may be necessary to install or change a serial number if certain assemblies are replaced.

1. To change the serial number, select **Change Serial** from the **Option Enable** menu bar. The current serial number will be displayed. If no serial number has previously been entered, the word "NONE" will be displayed.
2. Type the new serial number into the space provided, and click **Change Serial**. (The serial number is not case sensitive.)

Note: Use extreme care when entering the serial number; only one entry chance is allowed!

3. To change an incorrect serial number, a clear-code password is required. Contact Agilent to obtain this clear code and have the existing serial number available. Enter the clear code in the space provided, along with the new serial number, then click **Change Serial**.

Last Modified:

20-Sep-2007 Added Install note

Instrument Calibration

An instrument calibration is a process where the analyzer performance is measured to ensure that the analyzer operates within specifications. If any performance parameter does not conform to the published specifications, adjustments are made to bring the performance into conformance.

Why Should I Get an Instrument Calibrated?

Over time, the active components in the analyzer age and the performance may degrade or drift. To ensure that the analyzer is performing to the published specifications, you must have an instrument [calibration](#) performed periodically.

How Often Should I Get an Instrument Calibrated?

The instrument specifications are set to consider the performance drift that may occur over a 12 month period. Therefore, getting the instrument calibrated at 12 month intervals ensures that the analyzer maintains performance within the operating specifications. If you need the analyzer to maintain more consistent operation parameters, you may want to have the instrument calibrated more often than the suggested 12-month interval.

How Do I Get an Instrument Calibrated?

To get the instrument calibrated, send it to one of the Agilent Technologies service centers. See [Technical Support](#).

The PNA must be fully functional when it is sent to the service center, or they will charge for their repair services. If the PNA is being used in a secure environment where the hard drive can not be sent with the PNA, a second hard drive must be purchased and configured for use with the PNA in an "unclassified" environment before the PNA is sent to the service center.

To perform the instrument calibration yourself, you must have the following required items:

- Instrument Calibration Test Equipment
- Performance Test Software

What Are My Choices of Instrument Calibration?

The following types of instrument calibration are available from Agilent Technologies:

Standard	Includes a certificate of calibration, stating the instrument has been calibrated and is operating within the published specifications.
Option UK6	Includes the test data from the calibration and the standard certificate, stating the instrument has been calibrated and is operating within the published specifications.
Option M40 (Special)	Includes the test data from the calibration and a certificate, stating the instrument has been calibrated using a process in compliance with ANSI Z540 and is operating within the published specifications.

[Other Support Topics](#)

Other Resources

The following network analysis resources are also available.

Document Resources

Application Notes

You can also access application notes at this URL:

<http://www.agilent.com/find/PNA>

Third-Party Resources

For information about test fixtures and part handlers, contact:

Inter-Continental Microwave

www.icmicrowave.com

For information about probing equipment and accessories, contact:

Cascade Microtech, Inc.

www.cascademicrotech.com

SCPI Errors

Standard SCPI Errors

[-100 to -200 Command Errors](#)

[-200 to -299 Execution Errors](#)

[-300 to -399 SCPI Specified Device-Specific Errors](#)

[-400 to -800 Query and System Errors](#)

[PNA specific Errors](#)

Note: See also [PNA Errors](#)

-100 to -200 Command Errors

A command error indicates that the test set's GPIB parser has detected an IEEE 488.2 syntax error. When one of these errors is generated, the command error bit in the event status register is set.

-100	std_command	Command - This event bit (Bit 5) indicates a syntax error, or a semantic error, or a GET command was entered, see IEEE 488.2, 11.5.1.1.4.
-101	std_invalidChar	Invalid character - Indicates a syntactic elements contains a character which is invalid for that type.
-102	std_syntax	Syntax - Indicates that an unrecognized command or data type was encountered. For example, a string was received when the device does not accept strings.
-103	std_invalidSeparator	Invalid separator - The parser was expecting a separator and encountered an illegal character. For example, the semicolon was omitted after a program message unit.
-104	std_wrongParamType	Data type -The parser recognized a data element different than one allowed. For example, numeric or string data was expected but block data was encountered.
-105	std_GETNotAllowed	GET not allowed - Indicates a Group Execute Trigger was received within a program message. Correct the program so that the GET does not occur within the program code.
-108	std_tooManyParameters	Parameter not allowed - Indicates that more parameters were received than expected for the header. For example, *ESE common command only accepts one parameter, so *ESE 0,1 is not allowed.
-109	std_tooFewParameters	Missing parameter - Indicates that less parameters were received than required for the header. For example, *ESE requires one parameter, *ESE is not allowed.
-110	std_cmdHeader	Command header - Indicates an error was detected in the header. This error is used when the device cannot detect the more specific errors -111 through -119.
-111	std_headerSeparator	Header separator - Indicates that a character that is not a legal header separator was encountered while parsing the header.

-112	std_IDTooLong	Program mnemonic too long - Indicates that the header contains more than twelve characters, see IEEE 488.2, 7.6.1.4.1.
-113	std_undefinedHeader	Undefined header - Indicates the header is syntactically correct, but it is undefined for this specific device. For example, *XYZ is not defined for any device.
-114	std_suffixOutOfRange	Header suffix out of range - Indicates the value of a header suffix attached to a program mnemonic makes the header invalid.
-120	std_numericData	Numeric data - This error, as well as errors
-121	std_invalidCharInNumber	Invalid character in number - Indicates an invalid character for the data type being parsed was encountered. For example, an alpha in a decimal numeric or a "9" in octal data.
-123	std_exponentTooLarge	Exponent too large - Indicates the magnitude of an exponent was greater than 32000, see IEEE 488.2, 7.7.2.4.1.
-124	std_decimalTooLong	Too many digits - Indicates the mantissa of a decimal numeric data element contained more than 255 digits excluding leading zeros, see IEEE 488.2, 7.7.2.4.1.
-128	std_numericNotAllowed	Numeric data not allowed - Indicates that a legal numeric data element was received, but the device does not accept one in this position for the header.
-130	std_suffix	Suffix - This error, as well as errors -131 through -139, are generated when parsing a suffix. This particular error message is used if the device cannot detect a more specific error.
-131	std_badSuffix	Invalid suffix - Indicates the suffix does not follow the syntax described in IEEE 488.2, 7.7.3.2, or the suffix is inappropriate for this device.
-134	std_suffixTooLong	Suffix too long - Indicates the suffix contains more than 12 characters, see IEEE 488.2, 7.7.3.4.
-138	std_suffixNotAllowed	Suffix not allowed - Indicates that a suffix was encountered after a numeric element that does not allow suffixes.
-140	std_charData	Character data - This error, as well as errors
-141	std_invalidCharData	Invalid character data - Indicates that the character data element contains an invalid character or the particular element received is not valid for the header.
-144	std_charDataTooLong	Character data too long - Indicates the character data element contains more than twelve characters, see IEEE 488.2, 7.7.1.4.
-148	std_charNotAllowed	Character data not allowed - Indicates a legal character data element was encountered where prohibited by the device.
-150	std_stringData	String data - This error, as well as errors

-151	std_stringInvalid	Invalid string data - Indicates that a string data element was expected, but was invalid, see IEEE 488.2, 7.7.5.2. For example, an END message was received before the terminal quote character.
-158	std_stringNotAllowed	String data not allowed - Indicates that a string data element was encountered but was not allowed by the device at this point in parsing.
-160	std_blockData	Block data - This error, as well as errors -161 through -169, are generated when parsing a block data element. This particular error message is used if the device cannot detect a more specific error.
-161	std_badBlock	Invalid block data - Indicates a block data element was expected, but was invalid, see IEEE 488.2, 7.7.6.2. For example, an END message was received before the end length was satisfied.
-168	std_blockNotAllowed	Block data not allowed - Indicates a legal block data element was encountered, but not allowed by the device at this point in parsing.
-170	std_expr	Expression - This error, as well as errors -171 through -179, are generated when parsing an expression data element. This particular error message is used if the device cannot detect a more specific error.
-171	std_invalidExpression	Invalid expression - Indicates the expression data element was invalid, see IEEE 488.2, 7.7.7.2. For example, unmatched parentheses or an illegal character.
-178	std_exprNotAllowed	Expression data not allowed - Indicates a legal expression data was encountered, but was not allowed by the device at this point in parsing.
-180	std_macro	Macro - This error, as well as error -181 through -189, are generated when defining a macro or execution a macro. This particular error message is used if the device cannot detect a more specific error.
-181	std_validOnlyInsideMacro	Invalid outside macro definition - Indicates that a macro parameter place holder was encountered outside of a macro definition.
-183	std_invalidWithinMacro	Invalid inside macro definition - Indicates that the program message unit sequence, sent with a *DDT or a *DMC command, is syntactically invalid, see IEEE 488.2, 10.7.6.3.
-184	std_macroParm	Macro parameter - Indicates that a command inside the macro definition had the wrong number or type of parameters.

-200 to -299 Execution Errors

These errors are generated when something occurs that is incorrect in the current state of the instrument. These errors may be generated by a user action from either the remote or the manual user interface

-200	std_execGen	Execution - This event bit (Bit 4) indicates a PROGRAM DATA element following a header was outside the legal input range or otherwise inconsistent with the device's capabilities, see IEEE 488.2, 11.5.1.1.5.
-201	std_invalidWhileInLocal	Invalid while in local

-202	std_settingsLost	Settings lost due to rtl
-203	std_commandProtected	Command protected - Indicates that a legal password-protected program command or query could not be executed because the command was disabled.
-210	std_trigger	Trigger
-211	std_triggerIgnored	Trigger ignored
-212	std_armIgnored	Arm ignored
-213	std_initIgnored	Init ignored
-214	std_triggerDeadlock	Trigger deadlock
-215	std_armDeadlock	Arm deadlock
-220	std_parm	Parameter - Indicates that a program data element related error occurred.
-221	std_settingsConflict	Settings conflict - Indicates that a legal program data element was parsed but could not be executed due to the current device state.
-222	std_dataOutOfRange	Data out of range - Indicates that a legal program data element was parsed but could not be executed because the interpreted value was outside the legal range defined by the devices
-223	std_tooMuchData	Too much data - Indicates that a legal program data element of block, expression, or string type was received that contained more data than the device could handle due to memory or related device-specific requirements.
-224	std_illegalParmValue	Illegal parameter value - Indicates that the value selected was not part of the list of values given.
-225	std_noMemoryForOp	Out of memory - The device has insufficient memory to perform the requested operation.
-226	std_listLength	Lists not same length - Attempted to use LIST structure having individual LIST's of unequal lengths.
-230	std_dataCorruptOrStale	Data corrupt or stale - Indicates invalid data, a new reading started but not completed since the last access.
-231	std_dataQuestionable	Data questionable - Indicates that measurement accuracy is suspect.
-232	std_invalidFormat	Invalid format
-233	std_invalidVersion	Invalid version - Indicates that a legal program data element was parsed but could not be executed because the version of the data is incorrect to the device. For example, a not supported file version, a not supported instrument version.

-240	std_hardware	Hardware - Indicates that a legal program command or query could not be executed because of a hardware problem in the device.
-241	std_hardwareMissing	Hardware missing - Indicates that a legal program command or query could not be executed because of missing device hardware. For example, an option was not installed.
-250	std_massStorage	Mass storage - Indicates that a mass storage error occurred. The device cannot detect the more specific errors described for errors -251 through -259.
-251	std_missingMassStorage	Missing mass storage - Indicates that a legal program command or query could not be executed because of missing mass storage.
-252	std_missingMedia	Missing media - Indicates that a legal program command or query could not be executed because of missing media. For example, no disk.
-253	std_corruptMedia	Corrupt media - Indicates that a legal program command or query could not be executed because of corrupt media. For example, bad disk or wrong format.
-254	std_mediaFull	Media full- Indicates that a legal program command or query could not be executed because the media is full. For example, there is no room left on the disk.
-255	std_directoryFull	Directory full - Indicates that a legal program command or query could not be executed because the media directory was full.
-256	std_fileNotFound	File name not found - Indicates that a legal program command or query could not be executed because the file name was not found on the media.
-257	std_fileName	File name - Indicates that a legal program command or query could not be executed because the file name on the device media was in error. For example, an attempt was made to read or copy a nonexistent file.
-258	std_mediaProtected	Media protected - Indicates that a legal program command or query could not be executed because the media was protected. For example, the write-protect switch on a memory card was set.
-260	std_expression	Expression
-261	std_math	Math in expression
-270	std_macroExecution	Macro - Indicates that a macro related execution error occurred.
-271	std_macroSyntax	Macro syntax - Indicates that a syntactically legal macro program data sequence, according to IEEE 488.2, 10.7.2, could not be executed due to a syntax error within the macro definition.
-272	std_macroExec	Macro execution - Indicates that a syntactically legal macro program data sequence could not be executed due to some error in the macro definition, see IEEE 488.2, 10.7.6.3.

-273	std_badMacroName	Illegal macro label - Indicates that the macro label was not accepted, it did not agree with the definition in IEEE 488.2, 10.7.3
-274	std_macroPlaceholder Ma	cro parameter - Indicates that the macro definition improperly used a macro parameter placeholder, see IEEE 488.2, 10.7.3.
-275	std_macroTooLong	Macro definition too long - Indicates that a syntactically legal macro program data sequence could not be executed because the string of block contents were too long for the device to handle, IEEE 488.2, 10.7.6.1.
-276	std_macroRecursion	Macro recursion - Indicates that a syntactically legal macro program data sequence count not be executed because it would be recursive, see IEEE 488.2, 10.7.6.6.
-277	std_cantRedefineMacro	Macro redefinition not allowed - Indicates that redefining an existing macro label, see IEEE 488.2, 10.7.6.4.
-278	std_macroNotFound	Macro header not found - Indicates that a legal macro label in the *GMS?, see IEEE 488.2, 10.13, could not be executed because the header was not previously defined.
-280	std_program	Program
-281	std_cantCreateProgram	Cannot create program
-282	std_illegalProgramName	Illegal program name
-283	std_illegalVarName	Illegal variable name
-284	std_programRunning	Program currently running
-285	std_programSyntax	Program syntax
-286	std_programRuntime	Program runtime
-290	std_memoryUse	Memory use
-291	std_execOutOfMemory	Out of memory
-292	std_nameNotFound	Referenced name does not exist
-293	std_nameAlreadyExists	Referenced name already exists
-294	std_incompatibleType	Incompatible type

-300 to -399 SCPI Specified Device-Specific Errors

A device-specific error indicates that the instrument has detected an error that occurred because some operations did not properly complete, possibly due to an abnormal hardware or firmware condition. For example, an attempt by the user to set an out of range value will generate a device specific error. When one of these errors is generated,

the device specific error bit in the event status register is set.

-300 std_deviceSpecific	Device specific - This event bit (Bit 3) indicates that a device operation did not properly complete due to some condition, such as overrange see IEEE 488.2, 11.5.1.1.6.
-310 std_system	System
-311 std_memory	Memory - Indicates some physical fault in the devices memory, such as a parity error.
-312 std_PUDmemoryLost	PUD memory lost - Indicates protected user data saved by the *PUD command has been lost, see IEEE 488.2, 10.27.
-313 std_calMemoryLost	Calibration memory lost - Indicates that nonvolatile calibration data used by the *CAL? command has been lost, see IEEE 488.2, 10.2.
-314 std_savRclMemoryLost	Save/recall memory lost - Indicates that the nonvolatile data saved by the *SAV command has been lost, see IEEE 488.2, 10.33.
-315 std_configMemoryLost	Configuration memory lost - Indicates that nonvolatile configuration data saved by the device has been lost.
-320 std_storageFault	Storage fault - Indicates that the firmware detected a fault when using data storage. This is not an indication of physical damage or failure of any mass storage element.
-321 std_outOfMemory	Out of memory - An internal operation needed more memory than was available
-330 std_selfTestFailed	Self-test failed - Indicates a problem with the device that is not covered by a specific error message. The device may require service.
-340 std_calFailed	Calibration failed - Indicates a problem during calibration of the device that is not covered by a specific error.
-350 std_queueOverflow	Queue overflow - Indicates that there is no room in the queue and an error occurred but was not recorded. This code is entered into the queue in lieu of the code that caused the error.
-360 std_comm	Communication - This is the generic communication error for devices that cannot detect the more specific errors described for error -361 through -363.
-361 std_parity	Parity in program message - Parity bit not correct when data received for example, on a serial port.
-362 std_framing	Framing in program message - A stop bit was not detected when data was received for example, on a serial port (for example, a baud rate mismatch).
-363 std_inputBufferOverrun	Input buffer overrun - Software or hardware input buffer on serial port overflows with data caused by improper or nonexistent pacing.

-400 to -800 Query and System Errors

A Query error is generated either when data in the instrument's GPIB output queue has been lost, or when an attempt is being made to read data from the output queue when no output is present or pending.

-400 std_queryGen	Query - This event bit (Bit 2) indicates that an attempt to read data from the Output Queues when no output is present or pending, to data in the Output Queue has been lost see IEEE488.2, 11.5.1.1.7.
-410 std_interrupted	Query INTERRUPTED - Indicates the test set has been interrupted by a new program message before it finishes sending a RESPONSE MESSAGE see IEEE 488.2, 6.3.2.3.
-420 std_unterminated	Query UNTERMINATED - Indicates an incomplete Query in the program see IEEE 488.2, 6.3.2.2.
-430 std_deadlocked	Query DEADLOCKED - Indicates that the Input Buffer and Output Queue are full see IEEE 488.2, 6.3.1.7.
-440 std_responseNotAllowed	Query UNTERMINATED after indefinite response - Indicates that a query was received in the same program message after a query requesting an indefinite response was executed see IEEE 488.2, 6.5.7.5.
-500 std_powerOn	Power on
-600 std_userRequest	User request
-700 std_requestControl	Request control
-800 std_operationComplete	Operation complete

PNA Specific SCPI Errors

100 dupWindNum	"Duplicate window number"
101 windNumNotFound	"Window number not found"
102 failedWindCreate	"Window creation failed"
103 noCalcParamSelection	"CALC measurement selection set to none"
104 dupMeasName	"Duplicate measurement name"
105 dataNotFound	"Requested data not available"
106 measNotFound	"Requested measurement not found"
107 traceNotFound	"Requested trace not found"
108 notImplemented	"Mnemonic not yet implemented"
109 noDocument	"No measurement container found"
110 dupTraceNum	"Duplicate trace number"

111 titleStrTooLong	"Title string exceeds 50 characters"
112 memoryNotFound	"Requested memory not found"
113 exceedMaxTraces	"Exceeded the maximum number of traces per window"
114 SerNumNotFound	"The serial number was not found. Please store the serial number."
115 LoadFailed	"The state was not loaded. Please check the file name."
116 StoreFailed	"The state was not stored. Please check the file and path names."
117 File	"An in the File operation occurred. Please check file and path names."
118 measChanConflict	"Measurement does not belong to specified channel."
119 exceedMaxWindows	"Exceeded the maximum number of data windows"
120 markerNotFound	"The specified marker was not found."
121 diagnostic	"Diagnostic ."
122 channelNotFound	"The specified channel was not found."
123 exceedMaxMeasurements	"Exceeded the maximum number of allowed measurements."
124 parameterOutOfRange	"The specified value was out of range."
125 userRangeNotValid	"The currently selected user range is not valid."
126 referenceMarkerNotFound	"The reference marker is not active."
127 sweepSegmentNotFound	"The sweep segment was not found."
128 markerNotDelta	"The specified marker is not a delta marker."
129 printoutFailed	"Attempt to output to a printer failed."
130 memory_trace_not_compatible	"Memory not compatible. Trace Math not applied."
131 trace_math_reset	"Memory not compatible. Trace Math turned off."
132 hw_read_failed	"Hardware read failed."
133 hw_write_failed	"Hardware write failed."
134 dsp_active	"Failed because DSP was not halted."
135 secure_memory	"Attempt to access secure memory region."
136 snum_protected	"The serial number is protected."

137	snm_format_bad	"The serial number format is bad."
138	snm_already_set	"The serial number is already set."
139	hw_setting_failed	"Hardware setting failed."
140	cal_access_failed	"Calibration data access failed."
141	db_access_failed	"Database access failed."
142	memory_range_exceeded	"Command exceeds usable memory range."
143	lost_phase_lock	"Phase lock has been lost."
144	over_power	"Detected too much power at input."
145	ee_wrt_failed	"EEPROM write failed."
146	yig_cal_failed	"YTO calibration failed."
147	ramp_cal_failed	"Analog ramp calibration failed."
148	dspcom_bad	"DSP communication failed."
149	no_license_found	"Request failed. The required license was not found."
150	argLimited	"The argument was out of range"
151	markerBWNotFound	"The Marker Bandwidth was not found."
153	peakNotFound	"The Peak was not found."
154	targetNotFound	"The Target search value was not found."
155	calNotImpl	"The Calibration feature requested is not implemented."
156	calClassNotValidForCalType	"SENS:CORR:CCH measurement selection set to none"
158	calNotValidForConfidenceChe	"Selected measurement does not have a calibration valid for Confidence Check"
159	invalidPort	"Specified port is out of range"
160	invalidPortPath	"ROUT:PATH:DEF:PORT x, y does not match measurement; setting to defaults"
161	ioInvalidWrite	"Attempted I/O write while port set to read only."
162	ioInvalidRead	"Attempted I/O read from write only port."
163	calsetNotFound	"Requested Cal Set was not found in Cal Set Storage."

164	noCalSetSelected	"There is no Cal Set currently selected for the specified channel."
165	cantDeleteCalSetInUse	"Cannot delete a Cal Set while it is being used."
166	calSetStimChange	"Channel stimulus settings changed to match selected Cal Set."
167	exceedMaxCalSets	"Exceeded the maximum number of cal sets."
168	calCouldNotTurnOn	"A valid calibration is required before correction can be turned on."
169	standardMeasurementRequired	"The attempted operation can only be performed on a standard measurement type."
170	noDivisorBuffer	"A valid divisor buffer is required before normalization can be turned on."
171	InvalidReceiverPowerCalParagraph	"Receiver power cal requires the measurement to be of unratioed power."
172	ecalCouldNotConfigure	"Could not configure the Electronic Calibration system. Check to see if the module is plugged into the proper connector."
173	measHasNoMemoryAlg	"This measurement does not support memory operations"
174	measHasNoNormalizeAlg	"This measurement does not support normalize operations."
175	userCharacterizationNotFound	"User characterization was not found in the Electronic Calibration module."
176	measInvalidBufferSize	"The data provided has an invalid number of points. It could not be stored."

Technical Support

Click on the region of interest.



- For assistance with your test and measurement needs go to www.agilent.com/find/assist
- Or contact the test and measurement experts at Agilent Technologies.

Other Support Topics

United States:

(tel) (+1) 800 452 4844

(alt) (+1) 303 662 3999

(fax) (+1) 888 900 8921

Canada

(tel) 1 877 894 4414

(fax) 1 (905) 206 4120

Europe:

Austria

(tel) 0820 87 44 11*

(fax) 0820 87 44 22

Belgium

(tel) (+32) (0)2 404 9340

(alt) (+32) (0)2 404 9000

(fax) (+32) (0)2 404 9395

Denmark

(tel) (+45) 7013 1515

(alt) (+45) 7013 7313

(fax) (+45) 7013 1555

Finland

(tel) 08 0052 4000

(alt) (+358) 10 855 2100

(fax) (+358) 92 536 0176

France

(tel) 0825 010 700*

(alt) (+33) (0)1 6453 5623

(fax) 0825 010 701*

Germany

(tel) 01805 24 6333*

(alt) 01805 24 6330*

(fax) 01805 24 6336*

Ireland

(tel) (+353) (0)1 890 924 204

(alt) (+353) (0)1 890 924 206

(fax) (+353) (0)1 890 924 024

Israel

(tel) (+972) 3 9288 500

(fax) (+972) 3 9288 501

Italy

(tel) (+39) (0)2 9260 8484

(fax) (+39) (0)2 9544 1175

Luxemburg

(tel) (+32) (0)2 404 9340

(alt) (+32) (0)2 404 9000

(fax) (+32) (0)2 404 9395

Netherlands

(tel) (+31) (0)20 547 2111

(alt) (+31) (0)20 547 2000
(fax) (+31) (0)20 547 2190

Russia

(tel) (+7) 095 797 3963
(alt) (+7) 095 797 3900
(fax) (+7) 095 797 3901

Spain

(tel) (+34) 91 631 3300
(alt) (+34) 91 631 3000
(fax) (+34) 91 631 3301

Sweden

(tel) 0200 88 22 55*
(alt) (+46) (0)8 5064 8686
(fax) 020 120 2266*

Switzerland (French)

(tel) 0800 80 5353 opt. 2*
(alt) (+33) (0)1 6453 5623
(fax) (+41) (0)22 567 5313

Switzerland (German)

(tel) 0800 80 5353 opt. 1*
(alt) (+49) (0)7031 464 6333
(fax) (+41) (0)1 272 7373

Switzerland (Italian)

(tel) 0800 80 5353 opt. 3*
(alt) (+39) (0)2 9260 8484
(fax) (+41) (0)22 567 5314

United Kingdom

(tel) (+44) (0)7004 666666
(alt) (+44) (0)7004 123123
(fax) (+44) (0)7004 444555

Japan:

(tel) 0120 421 345

(alt) (+81) 426 56 7832

(fax) 0120 421 678

Latin America:

Mexico

(tel) (+52) 55 5081 9469

(alt) 01800 5064 800

(fax) (+52) 55 5081 9467

Brazil

(tel) (+55) 11 4197 3600

(fax) (+55) 11 4197 3800

Australia:

((tel) 1800 629 485

(alt) 1800 143 243

(fax) 1800 142 134

New Zealand

(tel) 0 800 738 378

(fax) 64 4 495 8950

Asia Pacific:

China

(tel) 800 810 0189

(alt) (+86) 10800 650 0021

(fax) 800 820 2816

Hong Kong

(tel) 800 930 871

(alt) (+852) 3197 7889

(fax) (+852) 2 506 9233

India

(tel) 1600 112 929

(fax) 000800 650 1101

Malaysia

(tel) 1800 888 848

(alt) 1800 828 848

(fax) 1800 801 664

Singapore

(tel) 1800 375 8100

(fax) (+65) 6836 0252

South Korea

(tel) 080 769 0800

(alt) (+82) 2 2004 5004

(fax) (+82) 2 2004 5115

Taiwan

(tel) 0800 047 866

(alt) 00801 651 317

(fax) 0800 286 331

Thailand

(tel) 1800 226 008

(alt) (+66) 2 268 1345

(fax) (+66) 2 661 3714

3.8 GHz Frequency Adjustment

This routine adjusts the internal fixed-frequency YIG Oscillator to 3.8 GHz by changing a DAC value. This DAC value is stored in the analyzer's non-volatile memory. This adjustment is only needed on some PNA models.

Typically, the oscillator can be set to within 12 kHz of 3.8GHz; it is not necessary for it to be exactly 3.8GHz.

Spectrum Analyzers Compatibility


This routine is compatible with Agilent 856x and 859x spectrum analyzers, and may also work on some other Agilent spectrum analyzers.

If no compatible analyzer is available, select "NONE" for the spectrum analyzer. You can then adjust the DAC manually by viewing the 3.8 GHz signal on another analyzer.

Procedure (For Compatible Spectrum Analyzers Only)

Note: The viewable 3.8 GHz signal level will be low; typically be around -70dBm. Do not use any attenuators in the adjustment, other than the default 10 dB attenuation used in most spectrum analyzers.

1. Connect spectrum analyzer input to the network analyzer's PORT 1 output.
2. Connect GPIB cable from analyzer to spectrum analyzer. Make sure no other controllers are active on the same connection.

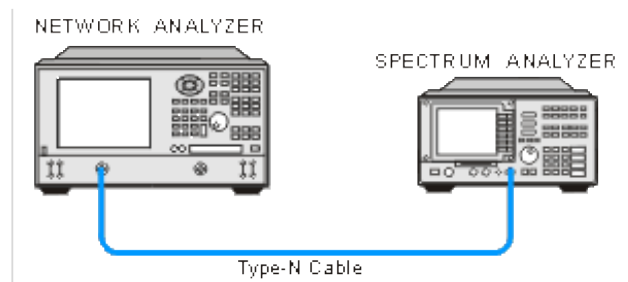

3. Set the spectrum analyzer GPIB address to 18.
4. In the analyzer **System** menu, point to **Service, Adjustments**, and click **3.8 GHz Freq. Adjust**.
5. Click **Begin Adj.** for the program to adjust the internal oscillator for minimal error and store the results. When the status area indicates the adjustment is complete, select **Exit**.

Procedure (For Non-Compatible Spectrum Analyzers Only)

Note: The viewable 3.8 GHz signal level will be low; typically be around -70dBm. Do not use any attenuators in the adjustment, other than the default 10 dB attenuation used in most spectrum analyzers.

1. Connect the spectrum analyzer input to the network analyzer's PORT 1 output.

2. Set the spectrum analyzer to the following settings:
 - Center frequency=3.8 GHz
 - Span= 100 MHz
 - Bandwidth= 10 kHz
 - Scaling where a signal of -70 dBm will be clearly visible
3. In the analyzer **System** menu, point to **Service, Adjustments**, and click **3.8 GHz Freq. Adjust**.
4. Under **Spectrum Analyzer**, select **NONE** option for spectrum analyzer.
5. Click **Begin Adj.**
6. The application presets the DAC to an initial value equal to the current value stored. View the spectrum analyzer to see if the signal is above or below 3.800 GHz.
 - If the signal frequency is above 3.8 GHz, move the slider to adjust the DAC to a lower value (left).
 - If the frequency is below 3.8 GHz, move the slider to adjust the DAC to a higher value (right).

Note: The valid DAC values are from 0 to 4095. The oscillator will shift about 23 kHz per DAC value.

7. Set the DAC value to reach a frequency very close to 3.8 GHz. If you made large changes in DAC values, allow several seconds for thermal effects to stabilize.
8. Change the spectrum analyzer settings to better view the frequency signal:
 - Frequency span = 500 kHz
 - Bandwidth = 3 kHz
9. Change the DAC value to keep the signal centered at 3.8 GHz.
10. Once you have determined the correct DAC value, click **SAVE DAC** to permanently store that value into EEPROM. Click **Exit**.

Note: If large changes are made to the existing DAC value, then this test should be repeated again after 15-30 minutes. This allows the thermal effects to fully stabilize.

10 MHz Reference Frequency Adjustment

This routine adjusts the analyzer's internal time-base to exactly 10 MHz by changing a DAC value. This DAC value is stored in the analyzer's non-volatile memory. This routine should only be necessary in the following situations:

- The frequency reference assembly is replaced.
- The 10 MHz reference has drifted significantly from the factory adjusted value.

WARNING: The range of this adjustment is only about 20 Hz. It is highly recommended that a very accurate frequency standard be used to measure this 10 MHz signal.

Frequency Counter Compatibility

This procedure uses SCPI commands (over GPIB) to communicate with the frequency counter. It should work with the Agilent 5313xA, 5315xA, 53181A series of counters as well as the older 5350 series.

If no compatible counters are available, select the "Manual" mode of operation. If you do choose the manual mode, you must input the measured frequency manually.

Procedure for GPIB Counters Only

1. Connect the analyzer rear panel 10 MHz Reference output to the frequency counter .
2. Connect a GPIB cable from the analyzer to the counter. Make sure no other controllers are active on the same connection.
3. If applicable, connect the house frequency standard to the counter reference input.
4. Set the counter GPIB address to 03. Ensure that the counter is the only device at this address.
5. In the analyzer **System** menu, point to **Service, Adjustments**, and click **10 MHz Freq. Adjust**.
6. Click **Begin Adj.** The application adjusts the internal reference for minimal error and stores the results.
7. Click **Read Freq** to trigger another reading of the 10 MHz signal.
8. Click **Read DAC** to view the current DAC value stored in the analyzer's non-volatile memory (value = 0 - 4095).
9. When the status area indicates the adjustment is complete, click **Exit**.

Procedure for Non-GPIB Counters

1. Connect the counter input to the rear panel 10 MHz Reference Output.
2. Set the counter to at least 1 Hz resolution.
3. If applicable, connect the house-frequency standard to the counter reference input.
4. In the analyzer **System** menu, point to **Service, Adjustments** and click **10 MHz Freq. Adjust**.

5. Under **Frequency Counter**, select **Manual**.
6. Click **Begin Adj.**
7. The application presets the DAC to an initial value. Enter the measured frequency offset from 10 MHz. If the measured frequency is less than 10 MHz, use a minus (-) sign to indicate a negative error. For example:
 - If the counter reads 10000003.5 Hz, enter 3.5 (or +3.5) in the indicated window.
 - If the counter reads 9999997.8 Hz, enter -2.2 in the indicated window.
8. The adjustment loops at least 3 times unless the entered value is exactly zero.
 - Click **Read Freq** to trigger another reading of the 10 MHz signal.
 - Click **Read DAC** to view the current DAC value stored in the analyzer's non-volatile memory (value = 0 - 4095).
9. When the status area indicates the adjustment is complete, click **Exit**.

Note: If the counter is misreading the frequency, it may be necessary to attenuate the input, or set the input impedance to 50 ohms, or both.

Display Test

The PNA screen should be bright with all annotations and text readable. The display test allows you to check for non-functioning pixels and other problems.

Note If the display is dim or dark, refer to “Troubleshooting LCD Display Problems” in the PNA Service Guide.

What Is a Damaged Pixel?

A pixel is a picture element that combines to create the image on the display. They are about the size of a small pin point. Damaged pixels can be either “stuck on” or “dark.”

- Stuck on pixel - red, green, or blue; always displayed regardless of the display setting. It will be visible on a dark background.
- Dark pixel - always dark; displayed against a background of its own color.

How to Run the Display Test

On the **System** menu, point to **Service**, and then click **Display Test**.

A multi-color screen is displayed. Be prepared to look for the symptoms described below. Click the Start Test button. To continue to the next test, click the moving Next Test button. The button moves to allow you to see all of the display. After the test is completed, the display defaults to the network analyzer screen.

How to Identify a Faulty Display

One or more of the following indicate a bad display:

- Complete row or column of “stuck on” or “dark” pixels
- More than six “stuck on” pixels (but not more than three green)
- More than twelve “dark” pixels (but not more than seven of the same color)
- Two or more consecutive “stuck on” pixels or three or more consecutive “dark” pixels (but no more than one set of two consecutive dark pixels)
- “Stuck on or “dark” pixels less than 6.5 mm apart (excluding consecutive pixels)

If any of these symptoms occur, your display is considered faulty. See the Service Guide for your PNA model.

LO Power Adjustment

This procedure adjusts the receiver's LO input power to a specific level by changing DAC values. These DAC values are then stored in the analyzer's non-volatile memory. The procedure will vary depending upon the model number. This adjustment is only applicable to some PNA models.

Power Meter Compatibility

This routine is only compatible with the Agilent EPM series of power meters. Different sensors may be used. For 9 GHz analyzers and below, an 8482 or E4412A sensor can be used. For the higher frequency units (20 GHz or above), a sensor must be able to measure a maximum of 20 GHz. At no time during this test will a frequency higher than 20 GHz be measured, even if the PNA has a maximum frequency of 50 GHz.

If the older HP 84xx series of sensors are used, the correct calibration data should be entered into the appropriate cal table of the EPM series power meter, although for this adjustment, high accuracy is not required. Inaccuracies in the order of several tenths of a dB are acceptable.

Procedure

1. Allow the analyzer and power meter to warm up for 30 minutes.
2. Manually zero and calibrate the power sensor. (This allows you to skip this step later)
3. Connect a GPIB cable from the analyzer to the power meter. Make sure no other controllers are active on the same connection.
4. Set the power meter GPIB address to 13. (others can also be used; 13 is the default)
5. Remove the outer cover on the analyzer.
6. In the PNA **System** menu point to **Service**, then **Adjustments**, and click **LO Power Adjust**.
7. Connect the power sensor to the LO output, using adapters if needed.. The LO output location varies with model number. Click on the LO Power Adjust **Setup** menu selection to see a diagram of the exact location.
8. **For 9 GHz units and below:**
Click **Begin Adj** to start the LO power cal routine. The routine adjusts the power level for each band (1 through 3) to fall within certain bounds. If any changes are made, it automatically stores them.

For 20GHz units and above:

If using an 84xx power sensor, click **Configure** and select the proper sensor model number. Click **Close**.

Click **Calibrate** to begin the adjustment. The entire calibration process takes about 5 minutes. Once completed, you can verify the current calibration accuracy by clicking **Verify Cal**.

Note: Correction constants are defaulted at the beginning of calibration. Once the calibration process has started, it must be completed in order to regenerate proper data.

9. Click **Read DAC** to view the current DAC values (0-4095) stored in the PNA non-volatile memory for each band (0-7).

10. When the message/status area indicates the adjustment is complete, click **Exit**.
11. Reconnect the semi-rigid cable and replace the covers.

Offset LO Power Adjustment

Note: This adjustment is only performed on PNAs with Frequency Offset Mode (option 080), and only on certain models.

The Offset LO Adjustment sets the LO power for the offset mixer to a consistent value across all bands. It requires access to the internal components of the PNA so that the power sensor can be connected to the LO output.

Because the LO frequency does not exceed 3 GHz, almost any power sensor can be used. The adjustment is relatively simple and only takes a couple of minutes.

When to perform

This adjustment should be performed when any of the following occur:

- the A13 Frequency Offset Receiver is significantly modified or replaced
- the A9 Synthesizer is replaced (that is where the correction data resides)

How to perform Offset LO Power adjustment

1. To start the Offset LO adjustment, click **System**, point to **Service, Adjustments**, then click **Offset LO Adjust**.
2. You will be prompted to zero and cal the power sensor. (You can do this before beginning.)
3. Connect the sensor to J3 of the A13 LO output by removing the existing cable (or simply disconnecting one end) as shown in the Set-up diagram in the program.
4. Connect the power meter to the PNA using a GPIB cable. Make sure the GPIB address shown in the program matches the actual power meter address (default is 13.)
5. Click **Adjust** to begin the test and follow the instructions.

The program automatically adjusts all bands; no user input is needed. The program repeats several times as this is an iterative process. The progress of the adjustment is shown on the screen.

The Configure menu selection is for factory personnel ONLY.

Once completed, to verify the actual results, click Verify.

Upon exiting, the PNA application will restart; this takes several seconds.

Operator's Check

- [Overview](#)
- [How to Run the Operator's Check](#)
- [Operators Check Dialog Box Help](#)

Overview

The Operator's Check should be performed when you first receive your PNA, and any time you wish to have confidence that the PNA is working properly.

Notes


- The Operator's Check does not verify performance to specifications. To verify PNA performance to specifications, run [System Verification](#).
- Allow the PNA to warm up for 90 minutes before considering a failed test to be valid.

The Pass/Fail criteria used in the Operator's Check identifies **obvious failures** in the following portions of the PNA hardware:

- Repeatability of the RF switch in the test set
- Attenuation ranges of the test port attenuators (if installed)
- Calibration of the receivers
- Frequency response of the receivers
- Phase lock and leveling
- Noise floor and trace noise

How to Run the Operator's Check

Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	◀ Programming Commands ▶
1. Navigate using MENU/DIALOG	1. Click System 2. then Service 3. then Operator's Check
For PNA-X models	◀ Programming Commands ▶
1. Press SYSTEM 2. then [Service] 3. then [Operator's Check]	1. Click Utility 2. then System 3. then Service 4. then Operator's Check
1. Connect one or more standards (see Configure). 2. Click Begin and Continue (if necessary) until "Operator's Check is complete!" appears.	

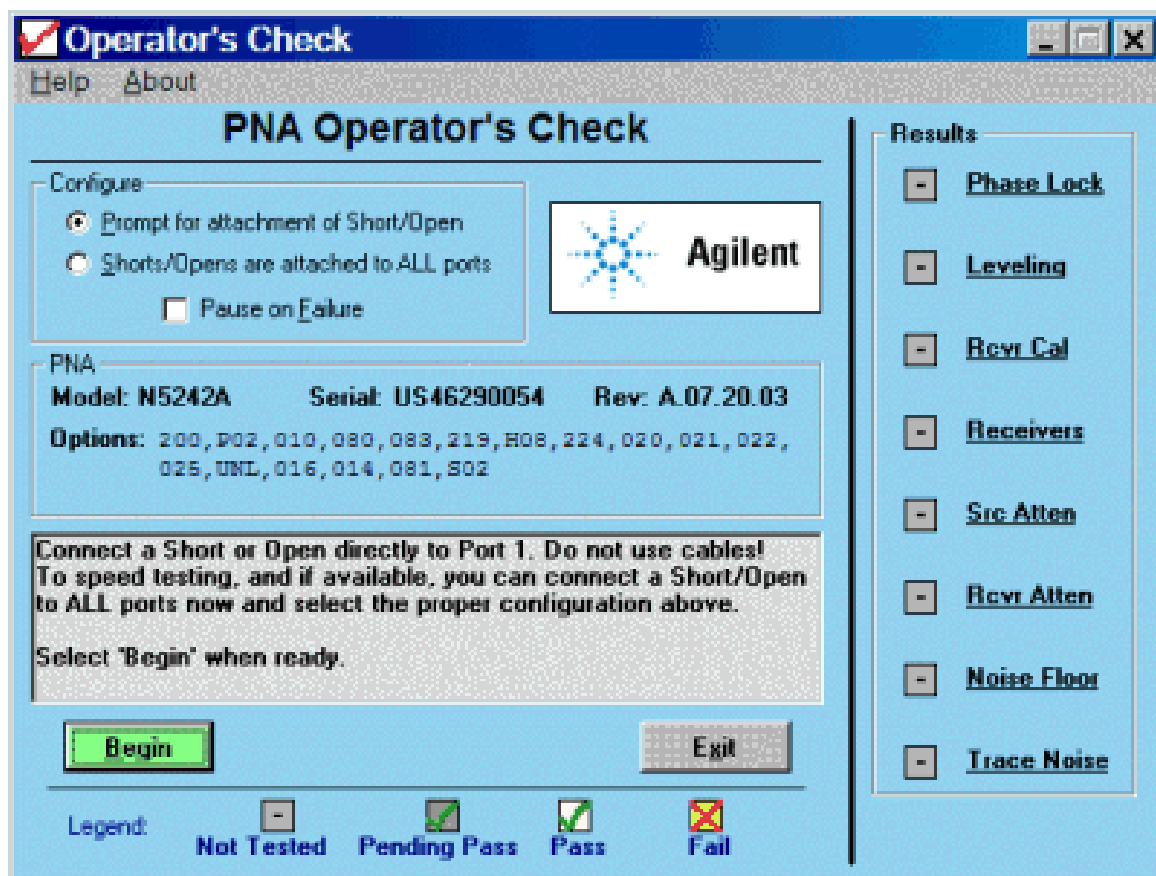

This dialog box will look slightly different, depending on PNA model number and installed options. Some of the tests are not run if the appropriate option is not installed.

Operators Check dialog box help

Note: It is normal for a momentary unlevelled condition to appear during portions of the Operators Check.

Configure

Prompt for attachment of Short / Open If you do not have enough shorts or opens for all test ports, you will be prompted to move the standard to the next test port. Connect either a short or open to port 1, then click Begin.

Shorts / Opens are attached to all ports Connect either a short or open for each test port, then click Begin. All ports are tested without interruption. You can mix shorts and opens on the test ports.

PNA Shows information about the PNA that is being tested.

Legend Shows the status icons used in the Operator's Check and their meaning. **Pending Pass** means that a portion of the testing has been completed successfully.

Results Shows the current status of each test. Click on the test name to learn how that test is performed. This may help in troubleshooting failed tests. If any tests Fail, refer to Chapter 3 of the PNA service guide.

Begin Starts the Operator's Check.

View Results Shows all results in text format. Failed items are preceded by ==>>>.


This text file can be printed or saved with a unique file name to compare results with previous or subsequent testing.

Exit Ends the program and closes the window.

Option H11 Test Verification

The PNA Option H11 Test / Verification utility verifies the PNA's option H11 functionality. The associated [H11 inputs and outputs](#) are tested and the results are compared against [expected levels at the factory](#). These tests are used in conjunction with the [Operator's Check](#) and [System Verification](#) programs to check PNA functionality.

How to Run Option H11 Verification	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click System 2. then Service 3. then Rear Panel/H11 Test or H11 Verification
For PNA-X models	
1. Not Available	1. Not Available

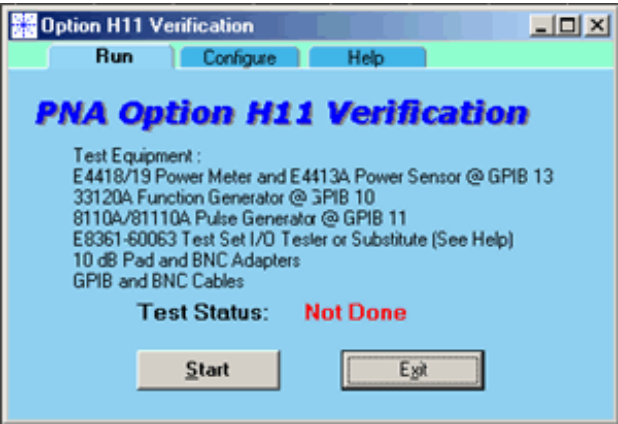

Option H11 Verification dialog box help

The Option H11 Verification software leads you through each of the tests listed on the Configure Tab.

Important: Required Configuration of the PNA being tested:

- All connections to external devices and test sets must be removed from the Option H11 connectors and Test Set I/O connector on the PNA rear panel.
- On the [Millimeter Module Configuration](#) dialog box, make the following settings:

- PNA Model E8361A - Select **Agilent N5250A**, and check **Use Standard PNA operation when N5260A is NOT connected**.
- All other PNA models - Select **Standard PNA**.

Run Tab

The list of test equipment is the complete list that is required to run ALL of the tests (recommended).

Start Click to run the tests that are selected on the Configure Tab.

Exit Exits Option H11 Verification.

Configure Tab

All of the tests are selected by default. Tests can be run separately for troubleshooting purposes by checking or clearing the boxes.

Power Tests

Output power is measured at each of the selected [RF and LO Test Set connectors](#) on the rear panel. The results are displayed against limit lines that represent the [expected levels at the factory](#).

Equipment Required:

- [PNA supported power meter and 26.5 GHz power sensor](#) (Recommended: Agilent E4418/19 Power Meter and E4413A Power Sensor). Set GPIB address = 13.
- GPIB and Sensor cables.
- On E8361A ONLY, a device is required to simulate an N5260A Test Set is connected to the Test Set I/O. All other PNA models do NOT require this device for this test.
 - Agilent Service personnel: Use the E8361-60063 Test Set I/O Tester.
 - All others: On a commercially available DB-25 male connector, connect a jumper between pins 12 and 22. See the [Test Set I/O connector diagram](#). Insert the male connector into the PNA rear panel Test set I/O connector.

External IF Input and Crosstalk Tests

A 8.33 MHz signal is injected into each of the selected [8.33 MHz IF IN connectors](#) on the rear panel. The signal is measured at each of the selected receivers. The results are displayed against limit lines that represent the [expected levels at the factory](#).

Equipment Required:

- 33120A Function Generator. Set GPIB address = 10.
- 10 dB Attenuator (Agilent 8493B or equivalent) and BNC adapters.
- GPIB and BNC cables

External Pulse Input Test

A pulse train is injected into each of the selected [Pulse IN connectors](#) on the rear panel. The signal is measured at each of the selected receivers. The results are displayed against limit lines that represent the [expected levels at the factory](#).

Note: A noisy pulse generator can cause a false failure of the "1% Duty Cycle Pulse Input" portion of the External Pulse Input Test.

Equipment Required:

- 8110A or 81110A Pulse Generator. Set GPIB address = 11.
- GPIB and BNC cables

Test Set I/O Connector Test

Tests the ability of the PNA to detect and control an external test set through the PNA rear panel TEST SET I/O connector.

Equipment Required:

- Agilent Service personnel: Use the E8361-60063 Test Set I/O Tester.
- All others: Use a DVM to measure the TTL voltage level on the following pin numbers using pin 1 as ground:
 - Pins: 3, 4, 5, 6, 8, 9, 10, 11, 17, 19, 20, 21, 22, 23, 24
 - See [Test Set I/O connector diagram](#) to determine the pin number location.
 - The software toggles all pins HIGH, then LOW.
 - TTL HIGH should read approximately +5.0 volts.
 - TTL LOW should read approximately +0.1 volts.

Help Tab

Displays the Option H11 Verification program revision number and information about the PNA being tested.

Advanced Help Click to display this help topic.

View Results Appears after the test is run. Click to show all results in text format. Failed items are preceded by **====>> Fail**. This text file can be printed or saved with a unique file name to compare results with previous or subsequent testing.

Last Modified:

129-Aug-2007 MX added UI

IF Gain Adjustment

Phase-Lock IF Gain Adjustment for E836x models only!

The E836x A/B PNA models have a variable gain control for the phase-lock loop IF signal. By dynamically changing the gain as a function of frequency and power, the phase-lock signal amplitude can be adjusted to a constant level for the entire operating range of the instrument. This constant level is important for phase-lock acquisition and stability.

When to perform

Phase-Lock IF Gain Adjustment should be performed when any of the following occur:

- A source calibration
- An assembly in the reference receiver path (R1,R2) is replaced.
- The Test Set Motherboard is replaced
- The Phase Lock board is replaced
- **Phase Lock Lost** error message appears after replacing a source or receiver assembly
- The external R path has changed. For example, when a multiport test set with R channel path has been added or removed.

How to perform Phase-Lock IF Gain adjustment

Ensure the Reference Channel paths are properly configured and the connections are properly torqued.

1. From the **System** menu, click **Service**, then **Adjustments**, then **IF Gain Adjustment**.
2. Under Select Specials, select **None**.
3. No connections to the test ports are required.
4. Click **Begin Adj.** The adjustment takes about a minute to complete.
5. The advanced screen is for factory personnel only.

IF Gain Adjustment for N524x models only!

The N524x PNA models have a variable gain control for the loop IF signal. By dynamically changing the gain as a function of frequency and power, the phase-lock signal amplitude can be adjusted to a constant level for the entire operating range of the instrument. This constant level is important for phase-lock acquisition and stability.

When to perform

IF Gain Adjustment should be performed when any of the following occur:

- An assembly in the reference receiver path (R1,R2) is replaced.
- The Test Set Motherboard is replaced
- The IF Mux assembly or SPAM assembly is replaced

How to perform IF Gain adjustment

Ensure the Reference Channel paths are properly configured and the connections are properly torqued.

1. From the **System** menu, click **Service**, then **Adjustments**, then **IF Gain Adjustment**.
2. An appropriate power meter and sensor will be required. The sensor must cover the upper frequency range of the PNA. A good quality cable will also be needed. Adapters can be used as needed.
3. Connect the power meter to the GPIB port labeled System Controller.
4. Click **Begin Adj.**
5. Set the GPIB address in the program accordingly and select the sensor being used.
6. Follow the instructions displayed in the program.

The adjustment takes about 5 minutes to complete for a 26.5 GHz PNA. Higher frequency units may take longer.

The Default menu selection is for factory personnel only. This will preset all values to default levels for troubleshooting purposes only. If this is selected, a full IF gain adjustment will need to be performed.

Last modified:

3/7/07 Added N5242x information.

System Verification

The performance of the network analyzer is specified in two ways: system specifications, and instrument specifications. It is the end user's responsibility to determine which set of specifications is applicable to their use of the PNA.

A network analyzer measurement "system" includes the analyzer, calibration kit, test cables, and any necessary adapters. The system verification software in the PNA is used to verify the system's conformance to the "system" specifications. A "pass" result demonstrates that the analyzer, test cables, and adapters, perform correctly as a system. It DOES NOT demonstrate that any one component performs according to its individual specifications. A change to any part of this measurement system requires a re-verification of the system.

Instrument specifications specify the network analyzer's uncorrected measurement port characteristics and its output and input behavior. The PNA performance tests are used to verify the analyzer's conformance to "instrument" specifications.

The system verification utility verifies the PNA system specifications by automatically measuring the magnitude and phase for all four S-parameters for each verification device, and comparing the values against the following:

- Factory measured data from files on the verification disk
- Limit lines based on the measurement uncertainty

System Verification requires the use of a calibration kit and verification kit which has been certified within the past 12 months by Agilent. System Verification can NOT be used to perform this kit certification.

[Operator's Check](#) should also be performed to verify the basic operation of the PNA.

- [Equipment Used in the System Verification](#)
- [Precautions for Handling Airlines](#)
- [Flow Diagram of Procedure](#)
- [Procedure for System Verification](#)
- [If the System Fails the Verification Test](#)
- [Interpreting the Verification Results](#)

Note: Although the performance for all S-parameters is measured, the S₁₁, S₂₂, S₃₃, and S₄₄ phase uncertainties are less important for verifying system performance. Therefore, the limit lines will not appear on the printouts.

Equipment Used in the System Verification

For PNA models:

E8356A, E8357A, E8358A
N3381A, N3382A, N3383A
E8801A, E8802A, E8803A
(Type-N test ports)

Equipment Type	Type-N	3.5 mm
Calibration kit or ECAL Module	85032F 85092B	85033E 85093B
Verification kit	85055A	85053B
RF Cable	N6314A	See Cable substitution

E8362A/B
N5230A (20 GHz)
(3.5 mm test ports)
N5242A

Equipment Type	3.5 mm	Type-N
Calibration kit or ECAL Module	85052B/C/D N4691A	85054B/D N4690A
Verification kit	85053B	85055A
RF Cable(s)	Single: 85131C/E Pair: 85131D/F	Single: 85132C/E Pair: 85132D/F
Adapters	None	Single: 85130C and one 7mm-to-Type-N from 85054B cal kit <u>Pair:</u> Two 7mm-to-Type-N from 85054B cal kit

E8363A/B, E8364A/B
N5230A (40 or 50 GHz)
(2.4 mm test ports)

Equipment Type	2.4 mm	3.5 mm	Type-N
Calibration kit or ECAL Module	85056A/D N4693A	85052B/C/D N4691A	85054B/D N4690A
Verification kit	85057B	85053B	85055A
RF Cable(s)	Single: 85133C/E Pair: 85133D/F	Single: 85134C/E Pair: 85134D/F	Single: 85135C/E Pair: 85135D/F
Adapters	None	<u>Single:</u> 85130F <u>Pair:</u> None	<u>Single:</u> 85130E and two 7mm-to-Type-N from 85054B cal kit <u>Pair:</u> Two 7mm-to-Type-N from 85054B cal kit

E8361A (1.85 mm test ports)

Equipment Type	1.85 mm	2.4 mm 3.5 mm Type-N
Calibration kit or ECAL Module	85058B N4694A	See 2.4 mm test port table above
Verification kit	85058V	See 2.4 mm test port table above
RF Cable(s)	Single: N4697E Pair: N4697F	See 2.4 mm test port table above
Adapters	None	See 2.4 mm test port table above

Cable Substitution

The test port cables specified for the PNA have been characterized for connector repeatability, magnitude and phase stability with flexing, return loss, insertion loss, and aging rate. Since test port cable performance is a significant contributor to the system performance, cables of lower performance will increase the uncertainty of your measurement. It is highly recommended that the test port cables be regularly tested.

If the system verification is performed with a non-Agilent cable, ensure that the cable meets or exceeds the operation of the specified cable. Refer to the cable User's Guide for specifications.


Calibration Kit Substitution

Non-Agilent calibration kits are not recommended nor supported.

Precautions for Handling Airlines


When you are using the airlines in the verification kit, observe the following practices to ensure good measurement techniques.

- Be very careful not to drop the airline's center or outer conductor. Damage will result if these devices are dropped.
- Use proper Electro-Static Discharge (ESD) procedures.
- Clean your hands or wear gloves as skin oils will cause a change in electrical performance.

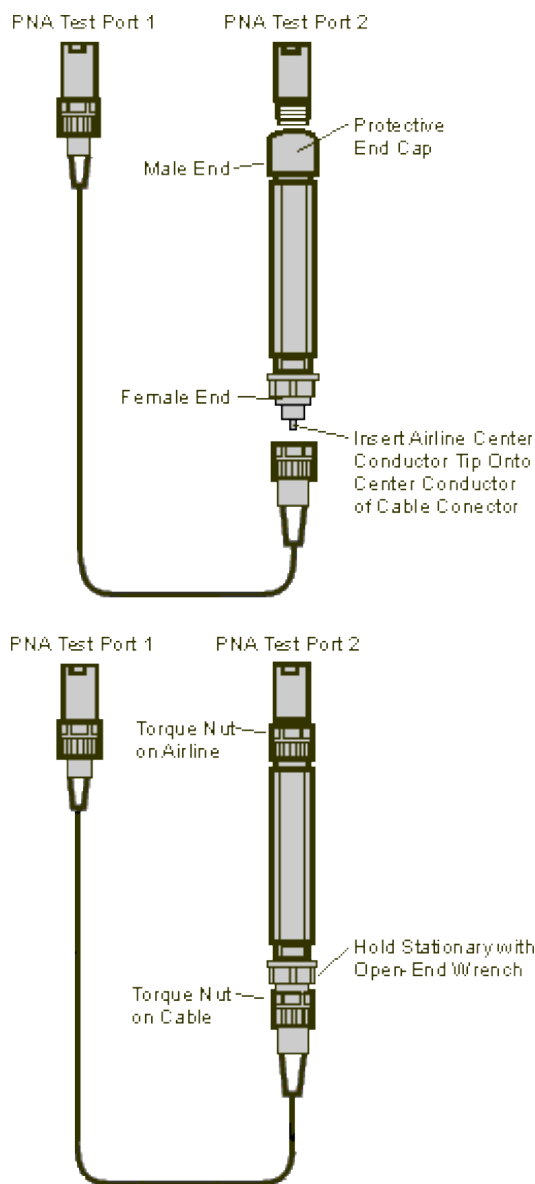

Flow Diagram of Procedure


The operational flow of the software is depicted by the flowchart shown below.

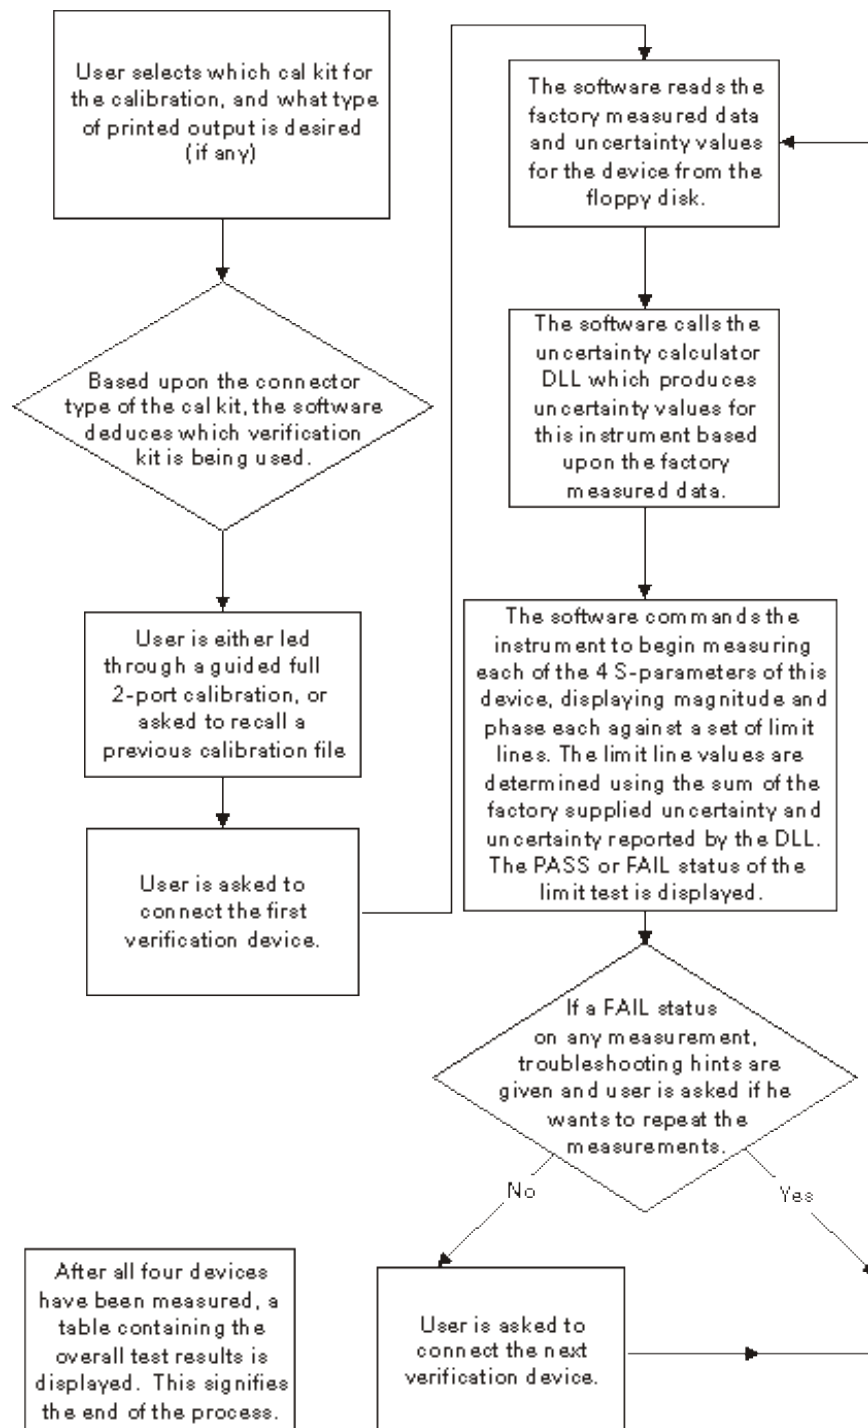

Procedure for System Verification

1. If you want printed test outputs, connect a printer to the analyzer. Let the analyzer warm up for at least 30 minutes.
2. Insert the PNA verification kit floppy disk into the analyzer disk drive.

3. On the **System** menu, point to **Service**, and click **System Verification**. The System Verification window similar to this will be displayed.

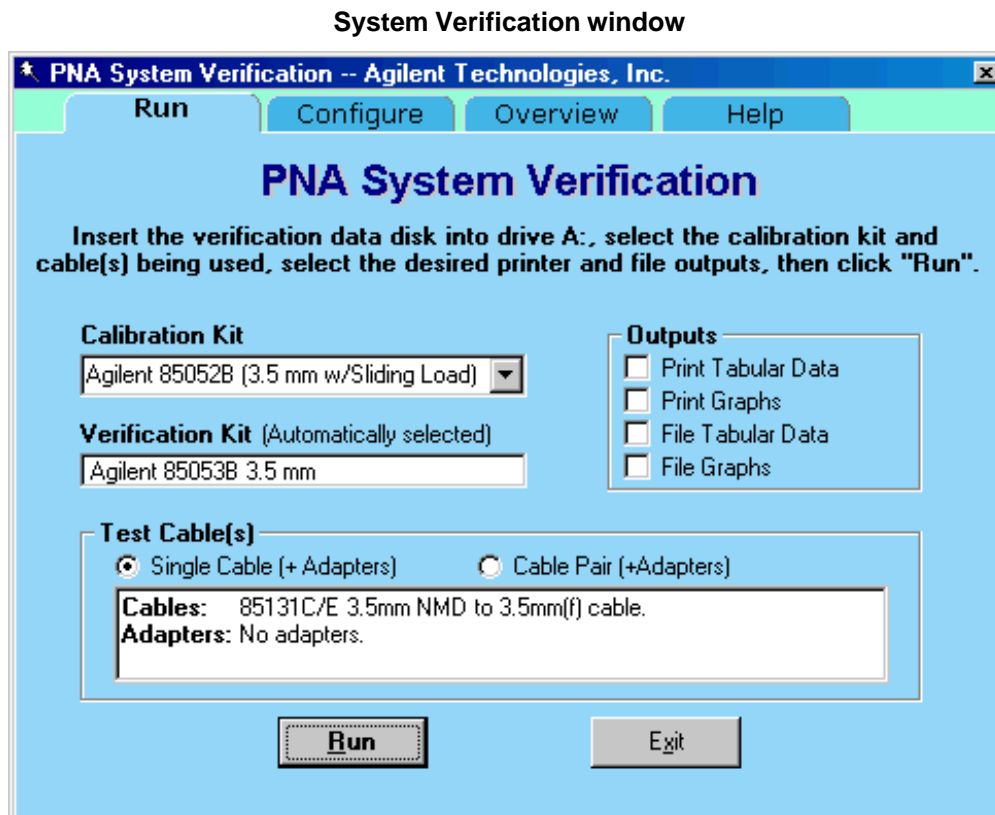

4. In the **Calibration Kit** box, select the calibration kit or ECal module that is being used. The corresponding verification kit to use appears in the **Verification Kit** box.
5. Under **Printer Output** click on any of the following options.
- **Print Tabular Data:** Prints the verification data in tabular form which includes measured data and uncertainty limits. Refer to a tabular data example, later in this topic.
 - **Print Graphs:** Prints the verification data in graphical form. The graphic form includes the measured data trace, factory supplied data trace and uncertainty limits. Refer to a plot data example, later in this topic.
 - **File Tabular Data:** Writes the verification data in tabular form to a text file in the C:\Program Files\Agilent\Network Analyzer\Documents\ directory.
 - **File Graphs:** Saves a screen image in .PNG format in the C:\Program Files\Agilent\Network Analyzer\Documents\ directory.

Note: If you want printed output, it is assumed you have already installed the Windows driver for your particular printer, and have tested that you can print to the printer from the network analyzer. This software is designed to print to whichever printer is currently set as the Default printer (see Printers in the Windows Control Panel).

6. To modify the number of ports to be verified, to change the number of devices to measure, or to use a

previously stored verification calibration, click on the **Configure** tab and make the desired selections.

- For the system verification to be truly adequate, the software must measure all devices in the kit with a recent calibration applied. Removing and reattaching any test port cables or adapters invalidates all previous calibrations.

7. Click **Run**.

8. Follow the instructions on the analyzer for performing the system verification, inserting the verification devices as prompted.

Note for 3 Port PNA:

The System Verification Procedure is **repeated three times**. The first time, **Ports 1 and 2** are measured as a pair; then **Ports 1 and 3** are measured; and lastly, **Ports 2 and 3** are measured.

Note for 4 Port PNA:

The System Verification Procedure is **repeated two times**. The first time, **Ports 1 and 2** are measured as a pair, then **Ports 3 and 4** are measured.

Step-by-Step Process Description


1. Depending upon the selected choice in the Calibration submenu of the Configure menu, the user is either prompted to recall a previous calibrated instrument state, or is guided through a full 2-port calibration using the selected calibration kit. For ECal, the ECal module is connected just once; a standby message is posted while the software is performing the calibration.
2. The user is prompted to connect the first verification device.
3. The software reads the factory measured data for that device and uncertainty values for that data (CITIfiles) from the floppy disk supplied with the verification kit.
4. The software sends the factory measured data, calibration kit and instrument state information to the uncertainty calculator DLL, which generates uncertainty values specific to the PNA.
5. The analyzer first sets up for magnitude measurements of all four S-parameters, each parameter in a separate window (lin mag for S₁₁ and S₂₂, log mag for S₂₁ and S₁₂). Each of the factory measured S-parameters are fed to the appropriate window as a memory trace. Limit line offsets are calculated as the sum of the factory measured data uncertainties and PNA uncertainties reported by the DLL. Upper and lower limits are displayed (factory measured data + uncertainty sum, factory measured data - uncertainty sum). The PNA takes a sweep, limit test is turned on and PASS/FAIL status is reported in each of the four windows.
6. The user clicks a button when ready to view phase measurements. The four windows get updated for phase format, phase memory traces, phase limits and PASS/FAIL result.
7. If the limit test of any of the four S-parameters (magnitude or phase) indicates a FAIL status, the software suggests troubleshooting tips and asks if the user would like to repeat measurement of that device or proceed to the next device. If proceeding to the next device, the factory measured data and uncertainties for the next device are read from floppy, the uncertainty DLL gets called with this next set of factory measured data, and the four measurement windows get updated for magnitude measurement of the next device.
8. The software follows this same process until all selected devices have been measured, at which point a summary window is displayed containing the set of PASS/FAIL results for all four parameters of each device.

If the System Fails the Verification Test

IMPORTANT: Inspect all connections. Do not remove the cable from the analyzer test port. This will invalidate the calibration that you have done earlier.

1. Repeat this verification test. Make good connections with correct torque specifications for each verification device.
2. Disconnect, clean and reconnect the device that failed the verification test. Then measure the device again.
3. If the analyzer still fails the test, check the measurement calibration by viewing the error terms as described in "Front Panel Access to Error Terms" on page 4-7 of the Service Guide.
4. Refer to the graphic below, for additional troubleshooting steps.

Verification Fails Flowchart

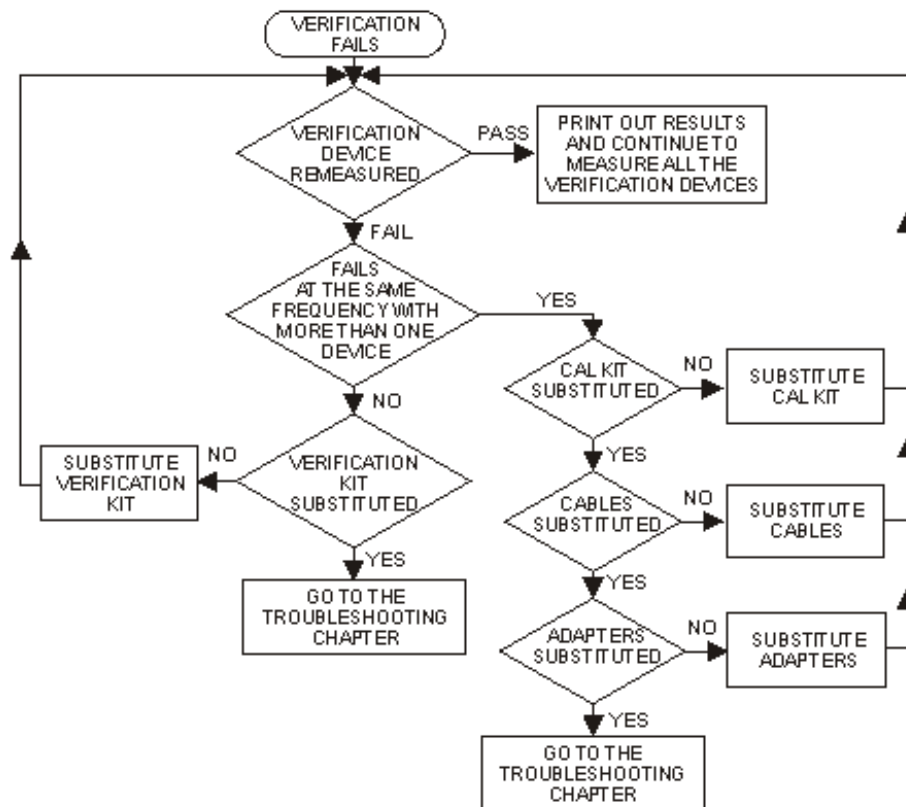

Interpreting the Verification Results

The graphic below shows an example of typical verification results with **Tabular Data** selected in the **Printer Output** area of the **System Verification** window. A graphic later in this topic shows an example of typical verification results with **Measurement Plots** selected in the **Printer Output** area of the **System Verification** windows. These printouts include a comparison of the data from your measurement results with the traceable data and corresponding uncertainty specifications. Use these printouts to determine whether your measured data falls

within the total uncertainty limits at all frequencies.

The tabular data consists of:

- Frequency of the data points (in MHz).
- Lower limit line as defined by the total system uncertainty specification.
- Results of the measurement.
- Upper limit line as defined by the total system uncertainty specification.
- Test status (PASS or FAIL) of that measurement point.

Printout of Tabular Verification Results





The image shows two overlapping printouts of tabular verification results. The top sheet displays a table with columns for Frequency (MHz), Lower Limit (dBm), Measured (dBm), Upper Limit (dBm), and Result. The data points are listed for frequencies from 100 MHz to 1000 MHz. The bottom sheet shows a similar table, but with different data values, likely representing a different measurement or configuration. The tables are printed in a monospaced font, typical of technical documentation.

Frequency (MHz)	Lower Limit (dBm)	Measured (dBm)	Upper Limit (dBm)	Result
100	-100.0	-100.0	-100.0	PASS
101	-100.0	-100.0	-100.0	PASS
102	-100.0	-100.0	-100.0	PASS
103	-100.0	-100.0	-100.0	PASS
104	-100.0	-100.0	-100.0	PASS
105	-100.0	-100.0	-100.0	PASS
106	-100.0	-100.0	-100.0	PASS
107	-100.0	-100.0	-100.0	PASS
108	-100.0	-100.0	-100.0	PASS
109	-100.0	-100.0	-100.0	PASS
110	-100.0	-100.0	-100.0	PASS
111	-100.0	-100.0	-100.0	PASS
112	-100.0	-100.0	-100.0	PASS
113	-100.0	-100.0	-100.0	PASS
114	-100.0	-100.0	-100.0	PASS
115	-100.0	-100.0	-100.0	PASS
116	-100.0	-100.0	-100.0	PASS
117	-100.0	-100.0	-100.0	PASS
118	-100.0	-100.0	-100.0	PASS
119	-100.0	-100.0	-100.0	PASS
120	-100.0	-100.0	-100.0	PASS
121	-100.0	-100.0	-100.0	PASS
122	-100.0	-100.0	-100.0	PASS
123	-100.0	-100.0	-100.0	PASS
124	-100.0	-100.0	-100.0	PASS
125	-100.0	-100.0	-100.0	PASS
126	-100.0	-100.0	-100.0	PASS
127	-100.0	-100.0	-100.0	PASS
128	-100.0	-100.0	-100.0	PASS
129	-100.0	-100.0	-100.0	PASS
130	-100.0	-100.0	-100.0	PASS
131	-100.0	-100.0	-100.0	PASS
132	-100.0	-100.0	-100.0	PASS
133	-100.0	-100.0	-100.0	PASS
134	-100.0	-100.0	-100.0	PASS
135	-100.0	-100.0	-100.0	PASS
136	-100.0	-100.0	-100.0	PASS
137	-100.0	-100.0	-100.0	PASS
138	-100.0	-100.0	-100.0	PASS
139	-100.0	-100.0	-100.0	PASS
140	-100.0	-100.0	-100.0	PASS
141	-100.0	-100.0	-100.0	PASS
142	-100.0	-100.0	-100.0	PASS
143	-100.0	-100.0	-100.0	PASS
144	-100.0	-100.0	-100.0	PASS
145	-100.0	-100.0	-100.0	PASS
146	-100.0	-100.0	-100.0	PASS
147	-100.0	-100.0	-100.0	PASS
148	-100.0	-100.0	-100.0	PASS
149	-100.0	-100.0	-100.0	PASS
150	-100.0	-100.0	-100.0	PASS

The printed graphical results show:

- Upper limit points as defined by the total system uncertainty specifications.
- Lower limit points as defined by the total system uncertainty specifications.
- Data measured at the factory.
- Results of measurements.
- Measurement parameter names and formats (Lin Mag or Log Mag).
- Serial number of device (00810).
- Device being measured (Sys Ver 20 dB attenuator).

Printout of Graphical Verification Results

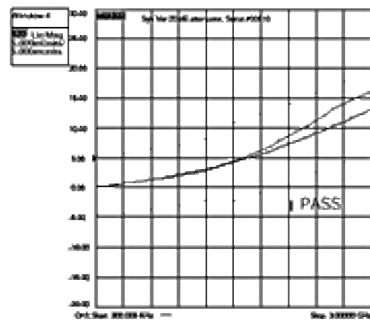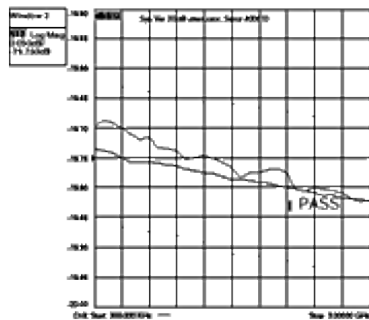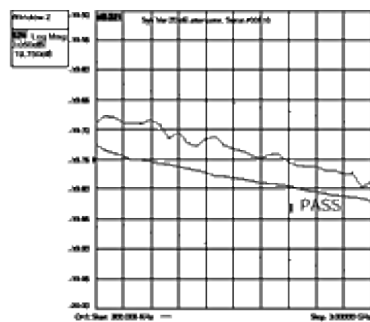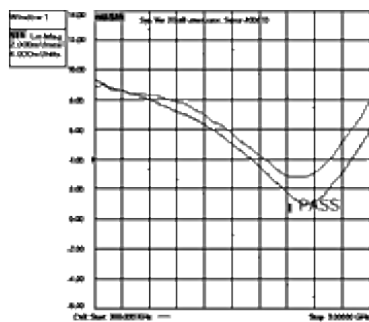

Source Calibration

Source calibration adjusts the PNA source power for flatness across its full frequency range. This adjustment is for service only; not for measurement calibration.

Required Equipment

Preferred Power Meter: E4419B

Alternate Power Meters: E4419A or EPM-442A

Note: The power sensor depends on the PNA frequency range. Depending on the PNA model, two power sensors may be required to test the full frequency range.

The PNA front panel connector type will determine the cable used and if an adapter is required with the power sensor(s).

PNA Model	Power Sensor(s)	Cable
E8356A	8482A	N6314A
E8357A E8358A	8482A and E4412A	N6314A
E8801A	8482A	N6314A
E8802A E8803A	8482A and E4412A	N6314A
N3381A	8482A	N6314A
N3382A/N3383A	8482A and E4412A	N6314A
E8361A	8487A (use with adapter 11900B) and V8486A (use with adapter V281B) ** See E8361A procedure below	N4697-60001
E8362A / B	E4413A	85131E
E8363A/B E8364A/B	8487A (use with adapter 11900B)	85133E
N5242A	E4413A	85131E


[See PNA Accessories](#)

Procedure

1. Refer to your power meter documentation to ensure the proper calibration factors for the power sensor have been entered into the table on the power meter.

2. Connect a GPIB cable between the power meter and network analyzer (use the System Controller GPIB port if applicable.)
3. Ensure the power sensor(s) are connected to the power meter.
4. In the analyzer **System** menu, point to **Service, Adjustments**, and click **Source Calibration**.
5. There are 3 different version of the Source Calibration software; all are slightly different. All have a button that is labeled "Calibrate" or "Adjust". This is the button that will begin the calibration process. Some versions will also have a button labeled "Verify" that will test the source calibration without making any changes. Other selections are for factory personnel use only.
6. Once begun, you must enter the power meter and sensor information. The software will verify the power meter and sensor. You are then prompted to connect the sensor(s) and cable as needed.

Connecting sensors to the PNA

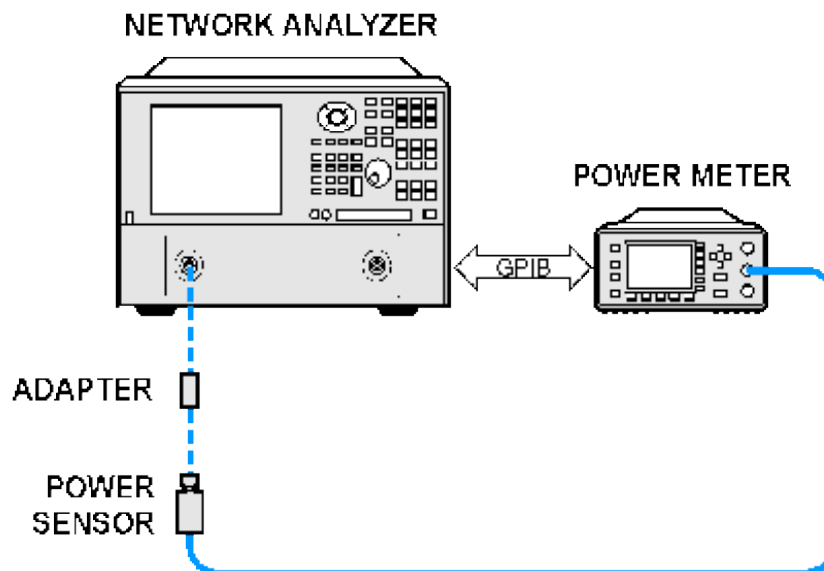

Additional Information

All ports are tested on all PNAs. Source calibration takes approximately 10 to 45 minutes to complete depending on the frequency range and model number of the PNA. The E8361 models may take up to 90 minutes.

Troubleshooting

In the event there is a problem with Source Calibration, please refer to the "Troubleshooting" chapter in the PNA Service Guide.

E8361 Procedure

Source and Receiver calibration requires the power meter to measure the source power over the full range of each of the PNA internal bands. Because the 8487A can not measure accurately above 50 GHz, it can only be used up to the next highest band switch frequency at 46.2 GHz. The V8486A sensor and V281B adapter are used from 46.2 GHz to 67 GHz.

For highest accuracy, the V8486A and V281B should be sent to Agilent for a custom calibration from 45 GHz to 70 GHz.

For the next highest accuracy level, the following procedure shows how to measure correction factors yourself from 46 to 50 GHz. This procedure assumes you have already loaded correction factors for both sensors into the power meter.

1. On your power meter, add 46 and 48 GHz to the Cal Factor Table.
2. Preset the PNA
3. Tune the PNA to 46 GHz (CW frequency)
4. Using the 8487A, measure power at port 1. Record this value.
5. Tune the PNA to 48 GHz (CW frequency)
6. Using the 8487A, measure power at port 1. Record this value.
7. Connect the V8486A, V281A, and 1.85 f-f adapter to the power meter.
8. Tune the PNA to 46 GHz (CW frequency)
9. Adjust the cal factor table 46 GHz setting until the power meter reading matches the power readings from step 4.
10. Tune the PNA to 48 GHz (CW frequency)
11. Adjust the cal factor table 48 GHz setting until the power meter reading matches the power readings from step 8.

Receiver Calibration

Receiver calibration adjusts the network analyzer receivers for a flat response across its full frequency range. This adjustment is for service only; not for measurement calibration.

Required Equipment

Preferred Power Meter: E4419B

Alternate Power Meters: E4419A or EPM-442A

Note: The power sensor depends on the PNA frequency range. Depending on the PNA model, two power sensors may be required to test the full frequency range.


The PNA front panel connector type will determine the cable used and if an adapter is required with the power sensor(s).

See [PNA Accessories](#)


Procedure

1. Refer to your power meter documentation to ensure the proper calibration factors for the power sensor have been entered into a table on the power meter.
2. Connect a GPIB cable between the power meter and network analyzer.
3. Ensure the power sensor(s) are connected to the power meter.
4. In the analyzer **System** menu, point to **Service, Adjustments**, and click **Receiver Calibration**.
5. The software presents you with two choices:
 - a. Click **Inspect Flatness** to observe flatness of receiver response versus frequency. Although there is no explicit specification for receiver flatness, Receiver Calibration should improve Transmission and Reflection Tracking error terms which are specified.
 - b. Click **Calibrate** to begin the receiver calibration process. The software prompts you to connect the sensor(s), cable and adapter as needed (see the following graphics).

Connecting sensor(s) to the PNA

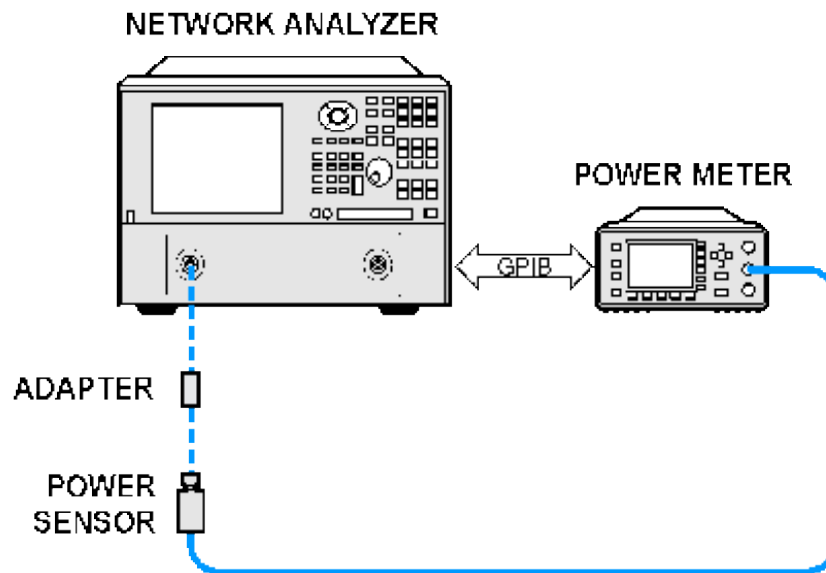


Connecting adapter and cable between sensor and PNA

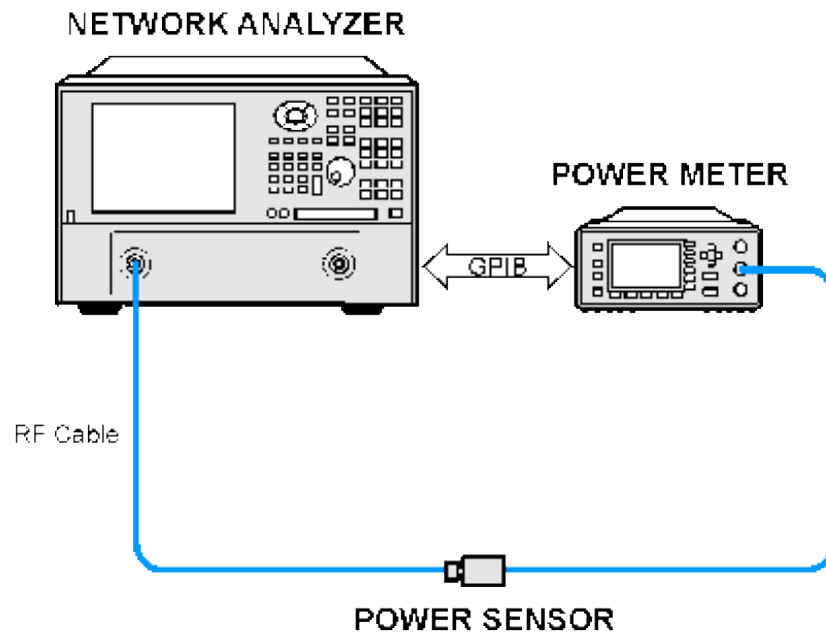

Through connection using the specified cable

NETWORK ANALYZER

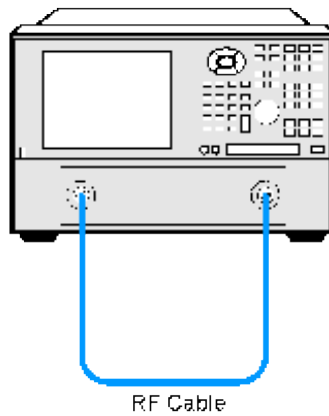

Additional Information

Receiver Calibration tests all PNA receivers, taking approximately 15 and 45 minutes. Length is dependent on frequency range and number of ports.

Troubleshooting

In the event there is a problem with Receiver Calibration, please refer to the "Troubleshooting" chapter in your PNA Service Guide.

Last Modified:

12-Jul-2007 Removed outdated table of supported power meters

Receiver Display

- [The Receiver Display as a Troubleshooting Tool](#)
- [How to start the Receiver Display](#)



[Other Support Topics](#)

The Receiver Display as a Troubleshooting Tool

The Receiver Display is a Troubleshooting Tool. It enables the analyzer to isolate faulty functional groups within its own Measurement System. Traces for each Receiver are Displayed in individual windows. Identifying discrepancies of the traces in these windows can help isolate the faulty assembly.

For a thorough description of Receiver Display and the troubleshooting steps see Chapter 3 of the PNA Service Guide. You can download the Service Guide for your PNA model from our website: <http://na.tm.agilent.com/pna/>

How to Start the Receiver Display

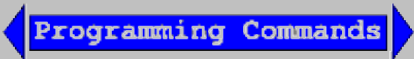Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click System 2. then Service 3. then Utilities 4. then Receiver Display
For PNA-X models	
1. Press SYSTEM 2. then [Service] 3. then [Utilities] 4. then [Receiver Display]	1. Click Utilities 2. then System 3. then Service 4. then Utilities 5. then Receiver Display

IF Access User Interface Settings

The following IF receiver settings can be made through the UI (User Interface) on the [E836x Option H11](#) and [PNA-X Opt 020](#).

- [IF Gain Configuration](#)
- [IF Switch Configuration](#)
- [IF Filter Configuration](#)

Other IF Access Topics

See Also

E836X Opt H11

- See the [H11 option rear panel connectors](#)
- See if your PNA can be [upgraded to the H11 option](#).
- [See the H11 specs](#)
- [Opt H08 Pulsed Application](#)

PNA-X Opt 020

- See the [PNA-X rear panel connectors](#).
- [See IF Path Config Block Diagram](#)

IF Gain Configuration

The IF Gain Configuration settings allow you to manually set the gain of the IF amplifiers.

Available on the [E836x Option H11](#) ONLY.

How to Make IF Access Settings


Using front-panel
HARDKEY [softkey] buttons

Using a mouse with PNA Menus

Programming Commands

1. [Navigate using MENU/DIALOG](#)

1. Click **Channel**
2. then **Advanced**
3. then **IF Gain Configuration**

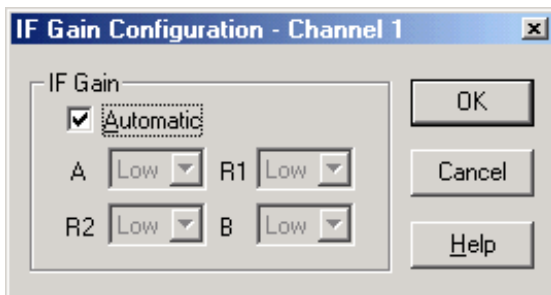

IF Gain Configuration dialog box help

Note: This dialog is NOT available on the PNA-X models.

Automatic - check to allow the PNA to set the IF gain automatically. Clear to enable manual IF gain settings.

Note: Clearing the **Automatic** checkbox can result in inaccurate measurements.

A, R1, R2, B Receivers

Auto Gain - The PNA selects the best gain level to make pulsed measurements.



- **Low** - about 0 dB of gain
- **Med** - about 17 dB of gain
- **Hi** - about 34 dB of gain


IF Switch Configuration

The IF Switch setting allows you to select the input path for each IF receiver.

Available on the [E836x with Opt H11](#) and on the [PNA-X with Opt 020](#).

How to Make IF Switch Settings

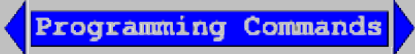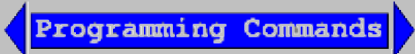Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For E836x models	
1. Navigate using MENU/DIALOG	1. Click Channel 2. then Advanced 3. then IF Switch Configuration
For PNA-X models	
1. Press TRACE/CHAN 2. then [Channel] 3. then [Hardware Setup] 4. then [IF Switch Configuration]	1. Click Trace/Chan 2. then Channel 3. then Hardware Setup 4. then IF Switch Configuration

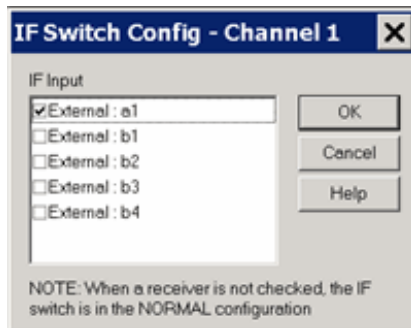

IF Switch Configuration dialog box help

Select a receiver path to switch to External.

This is **Switch 1** on the [PNA-X IF Path Config Block diagram](#).

Unchecked (Normal) - Allow the PNA to decide the input path to the PNA IF / Receiver path.

Checked (External) - Always use the rear panel input to the selected PNA IF / Receiver path.

IF Filter Configuration

The following IF settings allow you to select the filter path for each IF receiver in the **PNA-X ONLY**.

How to Make IF Access Settings

Using front-panel
HARDKEY [softkey] buttons


Using a mouse with PNA Menus

For [PNA-X](#) models

◀ [Programming Commands](#) ▶

1. None

1. Click **Trace/Chan**
2. then **Channel**
3. then **Hardware Setup**
4. then **IF Filter Config** setting

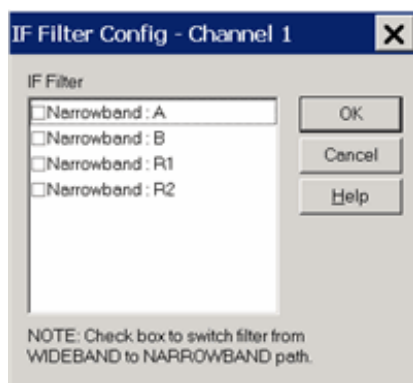

IF Filter Config dialog box help

Select a PNA-X IF Filter path to switch between Narrowband and Wideband filtering.

This is **Switch 2** on the [IF Path Config Block diagram](#).

Unchecked Wideband filtering

Checked - Narrowband filtering

Last modified:

26-Jul-2007 Added IF Filter config

9/12/06 Added link to programming commands

External Millimeter Module Configuration

You can use external Millimeter Modules to extend the frequency coverage of your PNA. To use this feature your PNA must have the [H11 Option](#). PNA-X models require [Opt 020](#).

- [PNA Limitations when using External Millimeter Modules](#)
- [How to Configure Millimeter Modules](#)

Other IF Access Topics

PNA Limitations when using External Millimeter Modules

Power Settings When using external Millimeter Modules, the PNA cannot control the power level into your DUT above 67 GHz. Because of this limitation, PNA power settings will not function correctly. Some of these settings are: Power level in standard or segment sweep, source and receiver power calibrations, and calibration interpolation. Your modules may have a manual power control.

Frequency Offset and FCA Measurements Because of the various switch settings and configurations, [Frequency Offset](#) and [FCA measurements](#) are NOT supported when using external Millimeter Modules.

PNA-X models


- **CAUTION:** Connect a 10 dB attenuator to the N5260A LO input from the [PNA-X LO Output](#). Otherwise, damage will occur to the N5260A test set.
- The PNA-X rear panel [IF Inputs use 4 SMA connectors](#). Previous PNA models use BNC. Adapters may be required.

How to Configure Millimeter Modules	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	No programming comands
1. Navigate using MENU/DIALOG	1. Click System 2. then Configure 3. then Millimeter Module Config
For PNA-X models	No programming comands
1. Press SYSTEM 2. then [Configure]	1. Click Utility 2. then System

3. then **[Millimeter Module]**

3. then **Configure**

4. then **Millimeter Module Config**

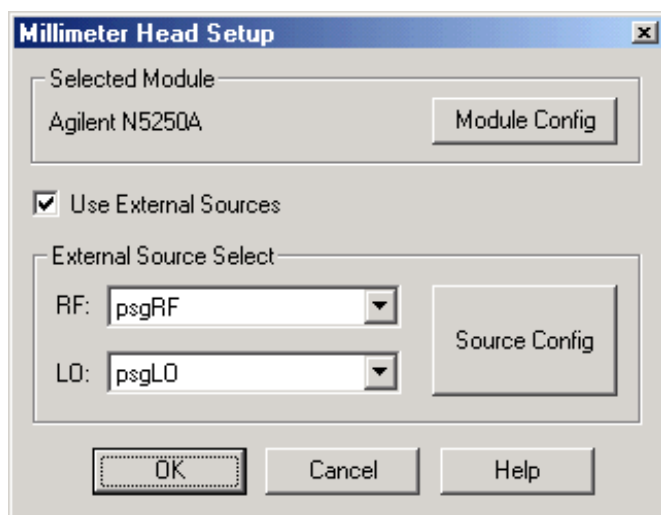

Millimeter Head Setup dialog box help

Important Notes

- The External Sources will become UNSYNCHRONIZED after recalling an instrument state. When this occurs, launch this dialog box again and click **OK**. We strongly recommend using only one channel to make measurements using external sources.
- For measurements up to 110 GHz, the amount of phase noise is comparable when using either the internal PNA sources or external sources. For the best measurement accuracy at frequencies above 110 GHz, it is strongly recommended that external sources be used.
- Only Agilent PSG sources are supported.
- When **Use External Sources** is checked, the PNA trigger settings are automatically configured and must not be changed.

Selected Module Displays the currently selected module. To select and configure a different module, click [Module Config](#).

Use External Sources Check to use external sources to provide an LO for the Millimeter Modules.

Source Config Click to invoke the [External Source Configuration](#) dialog box. This dialog box is also used to configure external sources for the [FCA application](#). Ignore references to FCA in the help topic.

Millimeter Module Configuration dialog box help

Millimeter Module Configuration List Lists the standard PNA configuration and others that you have created.

New Click to create a new Millimeter Module Configuration. Invokes the **Name** dialog box. Type a unique name for the new configuration using only alphanumeric characters and underscore, then click OK.

Delete Remove a Millimeter Module Configuration.

Restore Defaults Prompts, then REMOVES all configurations except for the standard PNA (and N5250A if installed).

Save Saves the current settings to the PNA hard drive.

Testport Frequency Range Set the Start and Stop frequencies of the selected configuration at the test ports. When Activated (click **Activate Selected Config**), this becomes the displayed Start and Stop frequency of the PNA.

RF Freq Range Multiplier RF Frequency Range (displayed in grey fields) multiplied by this value = Testport Frequency Range.

Use the Multiplier values that are specified in your test head documentation.

LO Freq Range Multiplier LO Frequency Range (displayed in grey field) multiplied by this value + 8.33 MHz = Testport Frequency Range.

Note: If the LO and RF frequency ranges are not within the operating range of the PNA, a warning message appears along with a red box around the invalid field. Click the appropriate Multiplier value up or down to correct the problem.

Use Standard PNA operation when N5260A is NOT connected When Activate Selected Config is clicked, the PNA detects if a N5260A is connected. If one is NOT connected and:

- This box is checked, then the selected configuration is NOT activated, but uses the Standard PNA configuration.
- This box is cleared, then the selected configuration IS activated anyhow.

Cancel Closes dialog box without saving changes.

Close Prompts to save changes, then closes the dialog box.

Activate Selected Config Saves the configuration, then closes and restarts the PNA application with the new configuration. To change to another configuration, including the standard PNA configuration, you must make this selection again.

Last modified:


April 9, 2007 Updated for PNA-X

9/12/06 Note - NOT compatible with Freq Offset

IF Path Configuration Settings

For Advanced Users: the following block diagram shows the IF Configuration capability of the PNA-X.

Note: The PNA [Pulsed Application](#) (Opt H08) provides an intuitive user interface to easily make average pulse, point-in-pulse, and pulse profiling measurements.

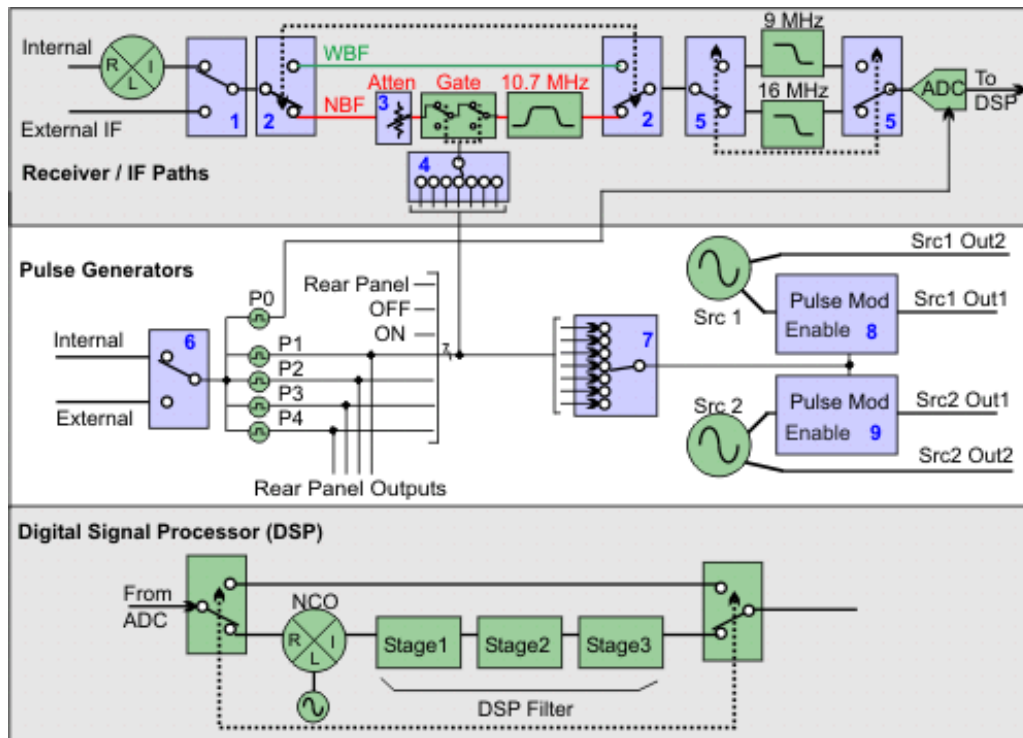

Legend:

Blue boxes with Ref #s are configurable elements.

Click a blue box, or scroll down, to see how to make settings using [SCPI](#) and [COM](#) commands.

Description:

Receiver / IF Path (top block)

This section is duplicated for each of the receivers (A, B, C/R1, D/R2, R). [See how to make settings remotely below.](#)

- **Switch 1** Internal input is a test port or reference receiver input. External Input is through the [rear-panel connectors \(A, B, C/R1, D/R2, R\)](#)
- **Switch 2** Select Wideband IF or Narrowband IF, which includes the ability to pulse gates.
- **Programmable attenuator #3** Specify IF attenuation for the selected receiver.

- **Switch 4** IF Gates - 1 of 7 lines from pulse generator section to each of the receiver gates.
- **Switch 5** Select Auto, 9 MHz, or 16 MHz filters for all receivers.
- **ADC** Analog to digital converter for the selected receiver, with the ability to be pulsed by the P0 generator. ADC output goes to Digital Signal Processor (DSP).

Pulse Generators (middle block)

[See how to make settings remotely below.](#)

- **Switch 6 Internal** or **External** inputs provide the REPETITION RATE (clock) for the pulse generator. From that rate, the generator creates five pulse outputs with unique delays and pulse widths. External input is on the [Pulse I/O connector](#) pin 7 (Synch IN).
- **P0** Hardwired to pulse the ADC for each receiver.
- **P1 thru P4** These four pulse generator outputs are hardwired to rear panel outputs on the [Pulse I/O connector](#) (pins 10 - 13). They are also routed to two switches (#4 and #7 on the above diagram) along with the following three lines:
 - **Rear Panel** External pulse generator input from [Pulse I/O connector](#) pin 8 (RFPulseModIn).
 - **OFF** Pulse is constantly in LOW state causing gate and source to be OFF.
 - **ON** Pulse is constantly in HIGH state causing gate and source to be ON.
- **Switch 7** Pulse Modulation - 1 of 7 lines to each of the sources. **Important:** When internally modulating the sources, [source leveling must be set to Open-loop](#).
- Rear-panel [Pulse I/O connector](#) (pins 10 - 13) hardwired.
- Source1 and Source2 pulse modulators (#8 and #9 on the above diagram)

DSP (bottom block)

- Filters the ADC (digital) output from top block and outputs data to the PNA display.
- See [SCPI](#) and [COM](#) commands to control DSP settings.

See Also

- [Remote RF Path Configuration](#)
- [Rear Panel Pulse I/O connector](#)

Most of the following elements highlighted in BLUE in the above diagram, have settings that are made using SCPI or COM commands ONLY. These are the same commands that are used to make settings in the [RF Path Configurator](#). In general the command specifies an element name and a setting.

[See SCPI command](#)

See [COM object](#) and [example](#).

Ref#	Element Name Description	Settings
1	<p>"IFSWn"</p> <p>For 2-port PNA-X, n = A, B, R1, R2</p> <p>For 4-port PNA-X, n = A, B, C, D, R (for R1 to R4)</p> <p>For example: "IFSWB"</p> <p>Requires Opt 020 external IF inputs on the rear panel</p> <p>This switch CAN also be set from the PNA-X UI.</p>	<ul style="list-style-type: none"> • "Internal" • "External" Rear Panel IF connectors. 4-port PNA-X use R for Ref 1 to 4
2	<p>"IFSigPathn"</p> <p>For 2-port PNA-X, n = A, B, R1, R2</p> <p>For 4-port PNA-X, n = A, B, C, D, R1, R2, R3, R4</p> <p>"IFSigPathAll" makes setting for ALL receivers.</p> <p>This switch CAN also be set from the PNA-X UI.</p>	<ul style="list-style-type: none"> • "WBF" Wide Band Filter Path (default) • "NBF" Narrow Band Filter Path
3	<p>"NBFATNn"</p> <p>For 2-port PNA-X, n = A, B, R1, R2</p> <p>For 4-port PNA-X, n = A, B, C, D, R1, R2, R3, R4</p> <p>For example: "NBFATNB"</p>	<p>0 to 31 in 1 dB steps</p> <p>For example: "28"</p>
4	<p>"IFGaten"</p> <p>For 2-port PNA-X, n = A, B, R1, R2</p> <p>For 4-port PNA-X, n = A, B, C, D, R1, R2, R3, R4</p> <p>For example: "IFGateB"</p>	<ul style="list-style-type: none"> • "On" Gate is always ON • "Off" Gate is always OFF • "RearPanel" (use Pulse IO pins 1 to 5) • "Pulse1" • "Pulse2" • "Pulse3"

		<ul style="list-style-type: none"> • "Pulse4"
5	<p>"IFAntiAliasFilter"</p> <p>This setting affects ALL receivers. It can NOT be made for individual receivers.</p>	<ul style="list-style-type: none"> • "Auto" PNA selects which filter to use based on other IF settings. • "9MHZ" • "16MHZ"
6	<p>"PulseTrigInput"</p> <p>Requires Opt 025 - Four Internal Pulse Generators</p>	<ul style="list-style-type: none"> • "Internal" Internal Pulse In - pulse generators are triggered each period. • "External" External Pulse Synch In - Pulse I/O pin 7) - An external trigger signal is required to trigger the pulse generators for each pulse.
7	<p>"PulseModDrive"</p> <p>Select from 1 of 7 lines to modulate the OUT1 path of Sources 1 and 2 .</p> <p>Important: When Pulse 1-4 is selected to modulate the sources, source leveling must be set to Open-loop.</p>	<p>"On" Pulse Mod drive is always ON, leaving "SRC1 2 Out 1" ON and not modulated. Default setting.</p> <p>"Off" Pulse Mod drive is always OFF, leaving "SRC1 2 Out 1" OFF.</p> <p>"RearPanel" (use Pulse IO pin 8)</p> <p>"Pulse1"</p> <p>"Pulse2"</p> <p>"Pulse3"</p> <p>"Pulse4"</p>
8	<p>"Src1Out1PulseModEnable"</p> <p>Requires Opt 021 - Source1 Pulse Modulator</p>	<p>"Enable"</p> <p>"Disable"</p>
9	<p>"Src2Out1PulseModEnable"</p> <p>Requires Opt 022 - Source2 Pulse Modulator</p>	<p>"Enable"</p> <p>"Disable"</p>

Last Modified:

5-Sep-2007 New Image and minor edits

February 5, 2007 MX New topic

Narrowband Pulsed Application

The Narrowband Pulsed Application is a Visual Basic program that provides a user interface for making pulsed measurements.

Learn about the **New** [Wideband Pulsed Application](#).

[Required Options](#)

[Using the Narrowband Pulsed Application](#)

[How to Configure Pulse Generators and Receivers](#)

[Calibration in Pulse Mode](#)

[Pulse Profiling](#)

[Signal Reduction versus Gate Width](#)

[Pulsed Frequency Converter Measurements](#)

[Writing your own Narrowband Pulsed Application](#)

What's New with Pulsed App in PNA Rev. 7.2

- [Enhanced Pulse Measurement Capabilities](#)
- [Support for Internal Pulse Generators / Modulators \(PNA-X only\)](#)

For more conceptual information see our [Pulsed Measurement App Notes](#).

See [PNA-X Block Diagram of IF Path / Pulse Generators / Source Modulation](#)

Other IF Access Topics



Required Options and Equipment

The PNA H08 option provides the Narrowband Pulsed Application. The following options are also required. If your PNA does not have the required options, a message is displayed on the screen. For more information, see [Pulsed-RF Measurements Configuration Guide](#)

- E836x models: [Opt 014 \(front panel access\)](#) and [Opt 080 \(frequency offset\)](#). To use the internal receiver gating feature of the Narrowband Pulsed Application, your PNA must have the [H11 hardware option](#).
- PNA-X models: None; however [Opts 021, 022, and 025](#) greatly enhance speed, performance, and convenience.
- PNA-L models: H08 NOT available
- Agilent 81104A or 81110A Pulse Generator with ONLY the 81105A or 81111A output modules. The 81112A

module does NOT have selectable 50 ohm/1K ohm output impedance/load compensation to drive the 1K ohm PNA IF gates. For more information, see the 81100 Family of Pulse Pattern Generators Technical Specifications at: <http://cp.literature.agilent.com/litweb/pdf/5980-1215E.pdf>

Using the Narrowband Pulsed Application

How to start the Narrowband Pulsed Application	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	<div> <div>Programming Commands</div> </div>
1. Press  until Pulse is visible 2. then 	1. Click System 2. then Macro 3. then Pulse
For PNA-X models	<div> <div>Programming Commands</div> </div>
1. Press SYSTEM 2. then [Macro] 3. then [Pulse]	1. Click Utility 2. then System 3. then Macro 4. then Pulse

See Also

[See programming commands to launch the Macro remotely.](#)

[See how to write your own custom Narrowband Pulsed Application.](#)

Keypad Data Entry

The PNA front-panel Numeric Entry and Navigation keys can be used for dialog box input. Also, a keyboard can be used to enter values, including alpha characters for prefixes (for example, **u** for usec.) . After typing values, first press **Enter**, then press **Tab** to go to the next field.

The following is an image of the main dialog box:

Agilent PNA Pulse Application

Configure View Help

Desired PRF and IFBW

Pulse Repetition Frequency : 5.000 kHz ☒ Fixed PRF

Pulse Repetition Interval : 200.0 usec

Receiver IF Bandwidth : 276 Hz

Modulation/Gates

	Width	Delay
Source Modulation :	1.00 usec	0 psec
A IF Gate :	1.00 usec	0 psec
B IF Gate :	1.00 usec	0 psec
C IF Gate :	1.00 usec	0 psec
D IF Gate :	1.00 usec	0 psec
R IF Gate :	1.00 usec	0 psec

Duty Cycle

Source Modulation : 0.5%

A IF Gate : 0.5%

B IF Gate : 0.5%

C IF Gate : 0.5%

D IF Gate : 0.5%

R IF Gate : 0.5%

Pulsed Mode On ☒

Apply Calculate

Pulse Profile Minimize Save Recall Close

Pulsed Application Main dialog box help

Note: An **error message** may appear on the PNA stating that the response frequency has exceeded the maximum allowed frequency.

The Narrowband Pulsed Application may set the offset frequency ([option 080](#)) of the PNA to some value other than zero (the default value). If the stop frequency is set to the maximum of the PNA model, then the error message will appear.

To fix this, set the stop frequency to a value that is at least 2 KHz less than the maximum allowed. For example, if you have a 20 GHz PNA, and the stop frequency is set to 20 GHz, and the error message appears, then set the stop frequency to 19.999998 GHz

[See Block Diagram of IF Path / Pulse Generators / Source Modulation](#)

Configure

You can configure more than one channel to make pulsed measurements, but the channels must use the same [pulse generator settings](#).

Only the Agilent 81110A Pulse Generator is supported with the Narrowband Pulsed Application. Refer to the 81110A documentation for pulse repetition frequency and duty cycle capabilities.

See also:

[Configure Receivers](#)

[Converter Measurements](#)

Edit / Undo Pulse Application settings revert to those when Apply was last pressed.

Desired PRF and IFBW Enter the DESIRED values. When **Calculate** is pressed, one or both of these values may change.

Pulse Repetition Frequency (PRF): Frequency of the pulses from the Pulse Generator.

Pulse Repetition Interval: $1/\text{PRF}$ Changes to either PRF or this setting changes both.


Receiver IF Bandwidth: IF Bandwidth of the PNA. Choose a setting from 1 Hz to 10 KHz.

Fixed PRF When checked, (default setting) the **Calculate** algorithm will NOT adjust the PRF, but only change the IF Bandwidth.

Modulation/Gates The Source Modulation and four PNA receiver gates can each have their own, or share, Pulse Generator outputs. Shared outputs have identical Width and Delay values. To configure and enable outputs, click **Configure**, then **Pulse Generators** to launch the [Pulsed Generator Configuration](#) dialog box.

Width Pulse Width.

Delay The delay that occurs before the pulse.

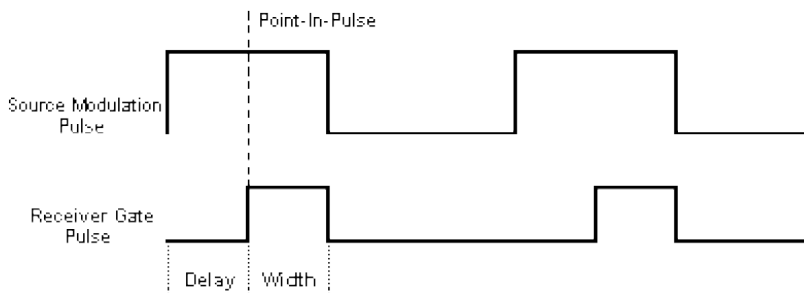

Duty Cycle Calculated Duty Cycle of the source and each of the selected receivers. Updated when **Calculate** is pressed.

Pulse Mode On When this box is checked, the PNA is enabled for Pulsed measurements. The PNA [Status Bar](#) annotation indicates the following:

- **G** Internal IF gates enabled.
- **F** Filtering for Pulsed Measurements enabled.

Apply All selections are sent to the pulse generator and the active channel of the PNA.

Calculate All selections are calculated and valid PRF and IFBW values are entered in their fields. If these settings are not acceptable, try changing the values you previously entered and click Calculate again. When acceptable values are attained, click **Apply** to send these values to the pulse generator and PNA.

Pulse Profile Launches the Pulse Profile dialog box. Same as clicking **View / Pulse Profile**. If not available, check **Pulse Mode ON**, click **Calculate**, then **Apply**.

Minimize Click to minimize the dialog box to make changes in the PNA application. To see the dialog again, select **Macro, Pulse**, or turn the [Status Bar](#) ON.


Save All settings from the Narrowband Pulsed Application are saved in a *.ppf file. These settings are NOT saved with PNA instrument state.

Recall Restore settings from the specified *.ppf file that were previously saved.

Close Closes the dialog box without saving changes.


How to configure Pulse Generators / Modulators and Receivers

From the [Pulse App main dialog box](#)

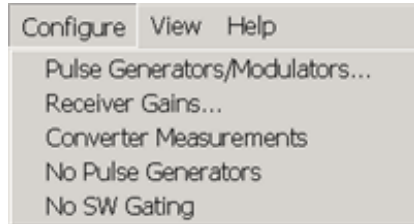

Learn about...

- [Configure Receiver Gain](#)
- [Converter Measurements](#)
- **No Pulse Generators** When checked, the Narrowband Pulsed Application does NOT attempt to communicate with internal or external pulse generators. This setting is used for troubleshooting purposes.
- **No SW Gating** When checked, the improved SW gating sensitivity is turned OFF. This setting is used for troubleshooting purposes.

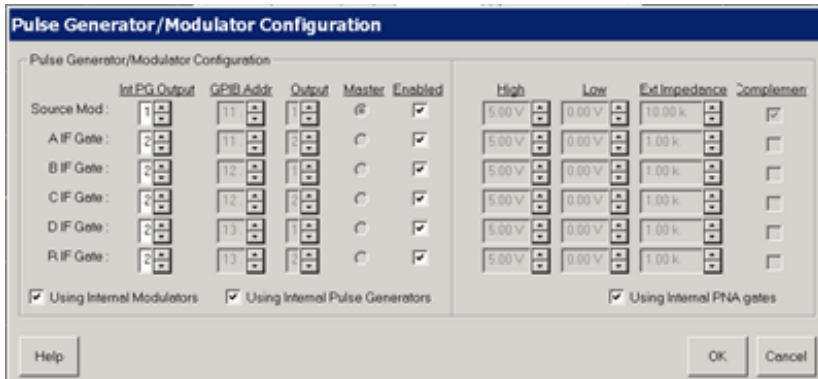

Pulsed Generator Configuration dialog box help

[See Block Diagram of IF Path / Pulse Generators / Source Modulation](#)

This dialog may look different depending on the PNA model and number of receivers available.

Configures either the internal pulse generators (PNA-X models with relevant options), or Agilent 81110A Pulse Generator outputs. You can configure each 81110A Pulse Generator with either one or two 81111A output modules.

The Source Mod and four PNA receiver gates can each have their own, or shared, pulsed generators allowing identical **Width** and **Delay** values which are selected on the Main dialog.

To share an external generator output between one or more PNA inputs, use the same GPIB address and output module for each PNA input.

Internal Pulse Gen Output (available ONLY on the [PNA-X opt 025](#))

Specify the Pulse Gen (1 through 4) to use to modulate each of the PNA receiver IF gates or Sources.

External Pulse Generator settings

GPIB Addr: The GPIB address of the 81110A.

Output: The output module of the 81110A.

Master: The 81110A that uses the 10 MHz reference signal from the PNA.

Enabled: Turns the pulse output ON.

External Gate/Modulator settings

High: Specify a 'TTL-High' voltage level

Low: Specify a 'TTL-Low' voltage level


Ext Impedance: Impedance of the modulator used to create the pulse.

Complement: When this box is cleared, TTL HIGH is the pulse. When checked, TTL LOW is the pulse.

Using Internal Modulators When this box is checked, the voltage, impedance, and complement values are forced to settings that prevent damage to the internal modulator.

Using Internal Pulse Generators Makes the appropriate settings on this dialog available.

Using Internal PNA gates When this box is checked, the voltage, impedance, and complement values are forced to settings that prevent damage to the internal gates.

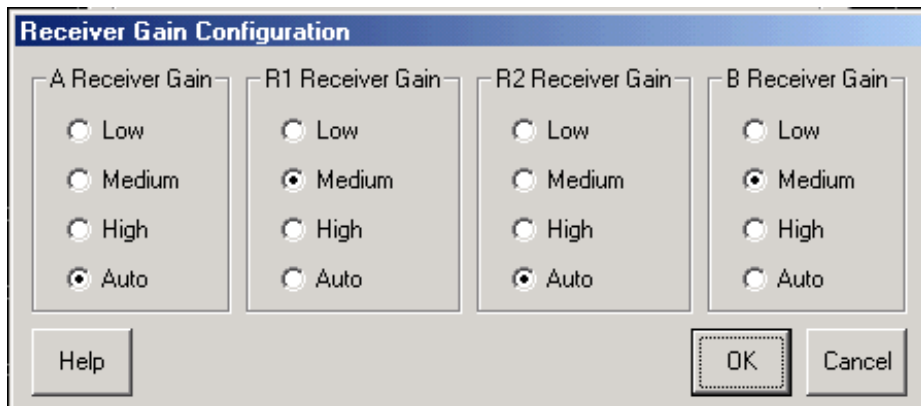

The image shows a screenshot of the 'Receiver Gain Configuration' dialog box. It has a title bar with the text 'Receiver Gain Configuration'. The dialog is divided into four sections, each with a title and four radio button options: 'A Receiver Gain', 'R1 Receiver Gain', 'R2 Receiver Gain', and 'B Receiver Gain'. Each section has radio buttons for 'Low', 'Medium', 'High', and 'Auto'. In the 'R1 Receiver Gain' section, the 'Medium' option is selected. At the bottom of the dialog, there are three buttons: 'Help', 'OK', and 'Cancel'. The 'OK' button is highlighted with a dashed border.

Section	Low	Medium	High	Auto
A Receiver Gain	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
R1 Receiver Gain	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>
R2 Receiver Gain	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>
B Receiver Gain	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>

Buttons: Help, OK, Cancel

Receiver Gain Configuration dialog box help

[See Block Diagram of IF Path / Pulse Generators / Source Modulation](#)

This dialog may look different depending on the PNA model and number of receivers available.

Sets the gain of each PNA receiver manually or automatically.

Auto - The PNA selects the best gain level to make pulsed measurements.

Use the following to manually set the gain for each receiver.

Low - about 0 dB of gain

Medium - about 17 dB of gain

High - about 24 dB of gain

The **PNA-X** has the following attenuation settings:

Low - 30 dB of attenuation

Medium - 15 dB of attenuation

Hi - 0 dB of attenuation

Calibration in Pulse Mode

To perform a calibration in pulse mode (option H08), first configure and apply the pulse parameters (PRF, Pulse Width, Delays, IF gating, and so forth) **before** calibrating the system. This will ensure the PNA is configured properly during the calibration and measurement.

When performing [Unknown Thru](#) or [TRL calibrations](#), ALL receivers must be gated. Otherwise, the error terms will not be correct after the calibration has completed. This can be accomplished by either having a separate pulse generator output for each of the IF gates, or by connecting pairs of the IF gates together with BNC-T's. For example, if the pulse generator does not have enough outputs, then connect the R1 and R2 IF gates to the same pulse generator output. Also, connect the A and B IF gates to either separate outputs (recommended) or one output (reduces flexibility). The error terms will then be valid after the calibration is complete.

Pulse Profiling

Pulse profiling provides a time domain view of the pulse envelope. Profiling is performed using a measurement technique that "walks" a narrow receiver "snapshot" across the width of the pulse. This is analogous to using a camera to take many small snapshots of a wide image, then piecing them together to form a single, panoramic view.

- Pulse Profiling can be performed using ratioed or unratioed measurements.
- Pulse Profiling is performed at a single CW frequency.


How to perform Pulse Profiling

From the [Pulse App main dialog box](#),

Click the **Pulse Profile** button. or:



If this setting is unavailable, check **Pulse Mode ON**, click **Calculate**, then **Apply**.

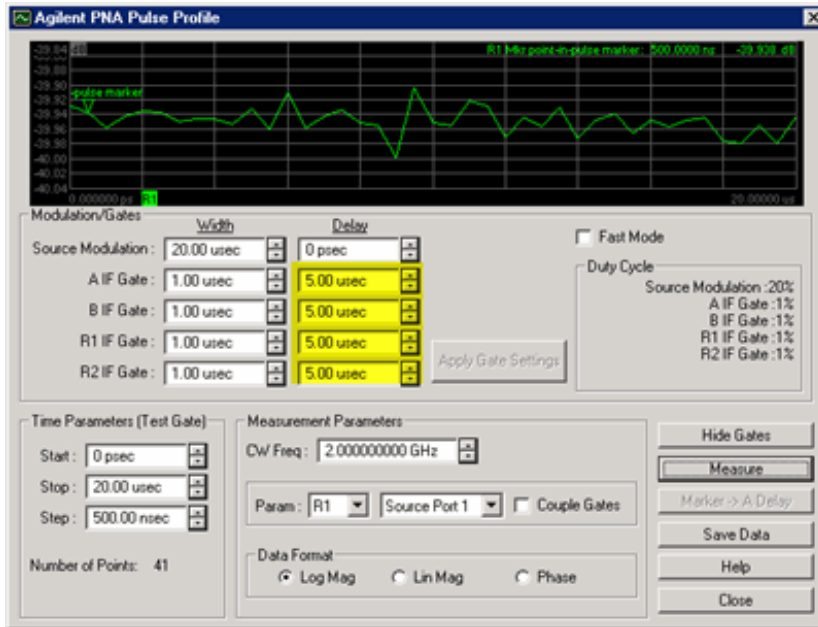

Pulse Profile dialog box help

[Learn about Pulse Profiling \(scroll up\)](#)

[See Block Diagram of IF Path / Pulse Generators / Source Modulation](#)

Modulation / Gates

These settings duplicate those found on the main [Pulse App dialog box](#).

In Pulse Profile, the Gate Delay settings (highlighted in yellow) are significant only with certain **Measurement Parameter** and **Couple Gates** settings.

Time Parameters

Start, Stop These two combine to make the window of the assembled pulse profile. To view the entire pulse, the start and stop values must be at least as wide as the Source Modulation **Width** plus **Delay** value.

Step Each consecutive snapshot is incremented by this value until the stop value is reached. Therefore, the number of points for the pulse profile measurement can be calculated as: $(\text{Stop} - \text{Start}) / \text{Step}$. The higher the number of points, the longer it takes to make the measurement.

Measurement Parameter


CW Freq. Frequency of the PNA source.

Source Port The PNA port supplying the source power. Only required for single receiver (unratioed) measurements.

Param(eter) Only those receiver gates (and relevant measurements) that are configured in [Pulsed Generator Configuration](#) are available.

Note: When a single receiver (unratioed) is selected, **Gate Delay** Settings (highlighted in yellow on above dialog image) are ignored.

If the reference receiver gate is NOT configured, the average of the Source Modulation pulse is used as the reference. **For example:** With **S21** Selected, but ONLY **B** receiver gate is configured, then...

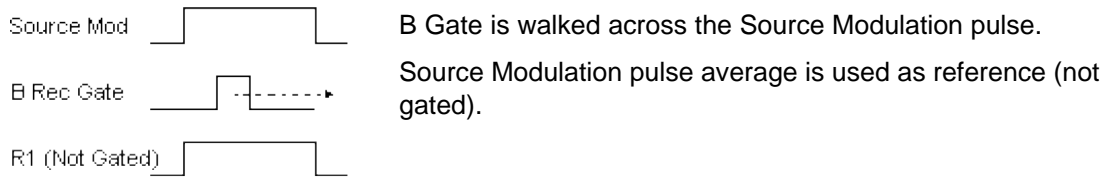


Coupled Gates Used when the appropriate receiver gates are [configured](#) for your **S-parameter** measurement ONLY. This setting is ignored when a single receiver (**Param**) is selected.

- **Uncoupled** (box cleared) The reference gate is **FIXED** at the delay setting as the test gate is walked across the Source Modulation pulse as dictated by the **Time Parameter** settings.

For example:

S21 Selected, **B** and **R1** receiver gates configured, Gates **Uncoupled**

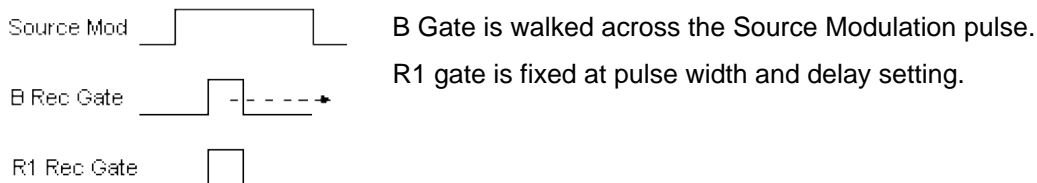

- **Coupled** (box checked) The reference gate is walked synchronously with the test gate as dictated by the **Time Parameter** settings. Only the **difference** between the test and reference gate delay values is significant; NOT the absolute values.


For example:

S21 Selected, **B** and **R1** receiver gates configured, Gates **Coupled**

B gate delay = 3 microseconds,

R1 gate delay = 2 microseconds

Difference = 1 microsecond

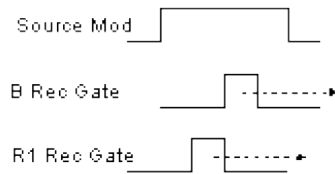

B Gate is walked across the Source Modulation pulse.

R1 gate is fixed at pulse width and delay setting.

B gate leads R1 gate by 1 microsecond.

Data Format Log Magnitude, Linear Magnitude, or Phase (only available if S-parameter selected).

Buttons

Show Gates Allows you to change the receiver gating width and delay while looking at the results.

Apply Gate Settings Click after making changes to gate settings.

Continuous Sweep Check, then click **Measure**, to continuously measure pulse profiling.

Measure Click to start the pulse profile measurement. Becomes **Stop** when continuously sweeping.

Marker to Delay After making a measurement, you can drag the display maker to any point along the trace. Click this button and the marker time is entered into the Receiver **Delay** field on the [main dialog box](#).

Save Data Saves time domain data to the PNA hard drive in any of the following formats:

- Touchstone (*.s1p)
- Comma delimited (*.prn)
- Citifile (*.cti)


[Learn more about these data formats](#)

Signal Reduction versus Gate Width


Signal Reduction versus Gate Width

PRF = 1 MHz

The following two figures show the performance of the internal IF gates as the width is narrowed.

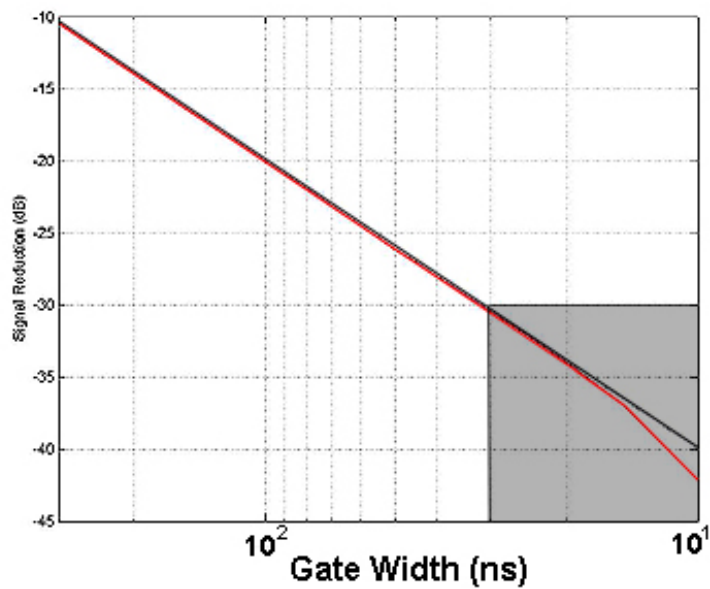

The following is a zoomed image of the shaded area (above).

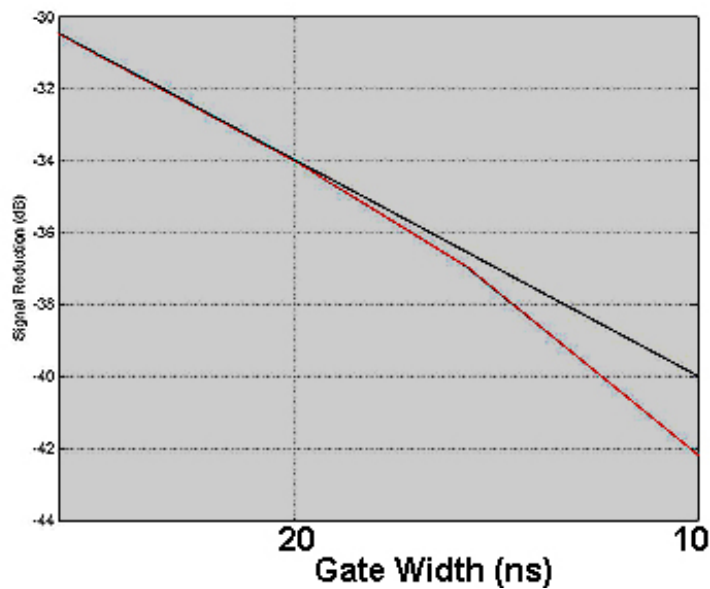


- The straight line shows the theoretical loss in dynamic range due to duty cycle effects when using narrowband detection.
- The curved (red) line shows the actual measured performance of the gates.
- The minimum gate width for <1dB deviation from theoretical is approximately 20ns.

See the specifications for the [option H11](#) and [option H08](#).

Pulsed Frequency Converter Measurements

The Narrowband Pulsed Application works with both [FCA \(option 083\)](#) and standard [Frequency Offset \(opt 080\)](#) measurements. On the **Configure** menu, check **Converter Measurements**. When checked, this setting prevents the Narrowband Pulsed Application from [overwriting frequency offset values](#). This may limit the number of **PRF** and **IFBW** solutions that are returned when **Calculate** is pressed on the main Pulsed Application dialog box.

Note: Pulse Profiling can NOT be performed with frequency converter measurements.

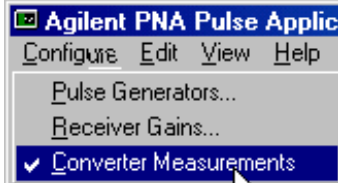

Writing your own Narrowband Pulsed Application

You can use the Narrowband Pulsed Application or use an example program as a template for making your own Narrowband Pulsed Application.

The Narrowband Pulsed Application uses a custom .dll to perform the calculations that are necessary to make pulsed measurements. Use the COM Method below to send and return values to **agilentpnapulsed.dll**. Then use SCPI or COM commands to control the PNA.

	E836x	PNA-X
Example Program	E836x Create	PNA-X Create
COM Methods	ConfigNarrowBand3	ConfigEnhancedNB2 ConfigEnhancedNBIFatten
SCPI commands	SCPI	SCPI
COM commands	COM	COM

Install and Register the Pulsed .dll on your PC

To create your own Narrowband Pulsed Application, or run the Narrowband Pulsed Application from a remote PC, you must do the following:

1. Copy the following files from the PNA C:\program files\agilent\network analyzer\ to a directory on your PC.
 - **agilentpnapulsed.dll**
 - **OffsetList.txt**
 - **prfbw.txt**
 - **prfbwmixer.txt**
2. To register the ActiveX DLL in Microsoft Windows Operating System:

- From a command prompt on your PC, navigate to the directory where you copied the DLL.
- Type: **regsvr32 agilentpnapulsed.dll** and press **Enter**

For Operating Systems other than Windows, see their associated help files to learn how to register DLL files.

Last Modified:

6-Nov-2007	Edited Ext Impedance
22-Jun-2007	converted to NB pulsed
122-Jun-2007	Updated for MX

E5091 Testset Control

The E5091A is a popular Agilent Technologies 7-port / 9-port testset. Although the testset was originally designed to work with the ENA Network Analyzer, it also works well with the PNA. This topic describes how to control the testset from the PNA. For more information about the testset, refer to your E5091A documentation.

[Overview](#)

[Connecting the E5091A](#)

[How to make E5091A Testset Control Settings](#)

[Calibrating with the E5091A](#)

[Other External Device Control Topics](#)

Overview

When connected to the PNA, the E5091A Testset provides full 7-port or 9-port test capability. The E5091A can be configured to switch a different testset path for each PNA channel. When all channels have been configured, the entire measurement setup and calibration can be [saved to a .cst or .csa file](#) to be recalled later. In addition, the [Channel Settings Table](#) that is appended to a printed hardcopy of a measurement includes the E5091A Port Control settings.

Notes:

- The E5091A Testset has a maximum useful frequency of 11 GHz.
- The E5091A Testset Control can be automated using [SCPI](#) and [COM](#) commands.
- When [enabled](#), a second status bar row appears which indicates the testset that is being controlled and the current switch state.
- Testset path switching occurs just before a channel is triggered. If a [channel trigger state is Hold](#), switching for that channel does not occur.
- PNA sweep speed will be slightly slower when using the E5091A to switch measurement paths.

Connect and Configure the E5091A

The E5091A can be connected to any one of the PNA USB ports. When first installed, Windows will automatically launch the "Add New Hardware" wizard. Click **Next** to install the E5091A Testset.


Note: See the [power handling limitations](#) of the PNA USB ports.

Connect the PNA test ports to the E5091A test ports. Match PNA test port 1 to E5091A test port 1, and so forth.

Selecting ID for E5091A

The PNA can control up to two E5091A testsets. Set the Instrument ID bit switch to 1 or 2. The testsets will then be


identified automatically and referred to by the DIP switch setting on the E5091A rear-panel. Change the ID bit switch setting before connecting to the PNA USB.

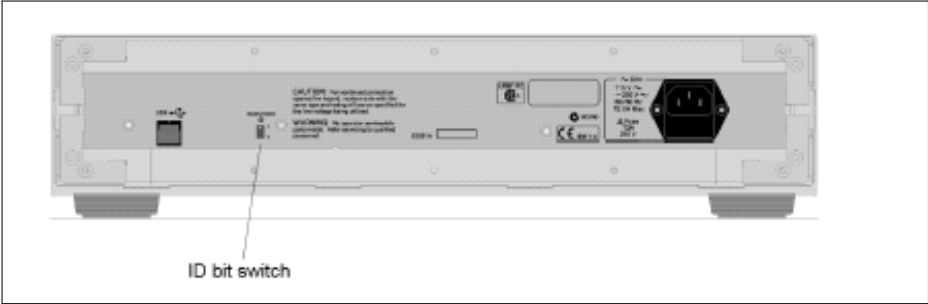

Power ON

Immediately after power-on, all of the port connection indicator LEDs of the E5091A go ON. Then, after the PNA detects the E5091A, the four LEDs that indicate the connected test ports remain ON. If the PNA is not powered on or if the E5091A is not connected using a USB cable, all of the LEDs stay ON.

How to make E5091A Testset Control Settings	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	◀ Programming Commands ▶
1. Navigate using MENU/DIALOG	1. Click Channel
	2. then External Testset
	3. then E5091A
For PNA-X models	
1. Press TRACE/CHAN	1. Click Trace/Chan
2. then [Channel]	2. then Channel
3. then [More]	3. then More
4. then [External Testset]	4. then External Testset
5. then [E5091A]	5. then E5091A

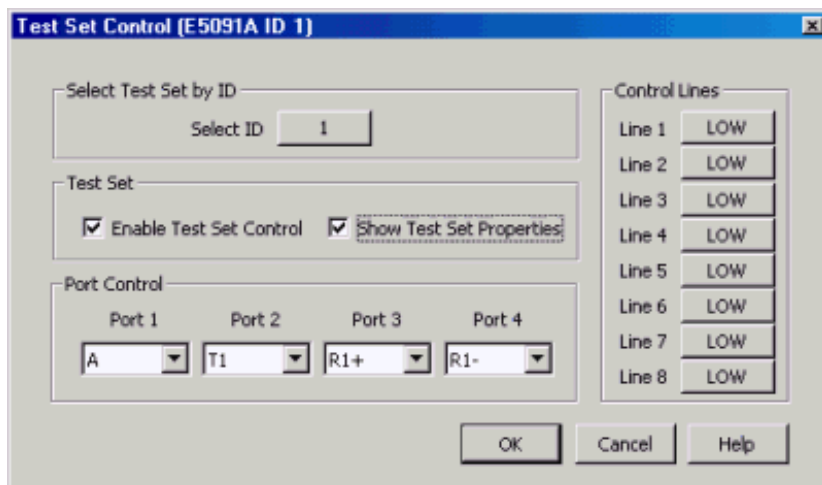

E5091A Testset control dialog box help

The title of the dialog shows the testset model and ID number of the active testset..

Select ID ID of the testset to be configured. Up to two E5091A testsets can be controlled. Click to change testset ID. [Learn how to set the testset ID.](#)

Enable Test Set Control When cleared, port switching and control line settings are disabled. This selection affects all channels using the selected testset.

Show Test Set Property When checked, a second row on the status bar appears which indicates the testset that is being controlled and the current port control selection. For example, the following image shows the status bar when controlling an E5091A testset and a [Z5623A K64 testset](#):



- A. Configured channel
- B. Port Control settings for E5091A
- C. Port Control settings for Z5623A K64
- D. Testset Label. E5091A control does not use this field. It is shared between [Interface Control](#) and [External Testset Control](#). The two labels are separated by /.

Control of the second status bar is completely separate from the first status bar, which is controlled from the [View, Status Bar](#) menu.

Port Control Controls **mapping** of Physical ports to Logical ports.

- Physical ports are the port numbers that are labeled on the test set front panel. ([see N44xx test sets](#))
- Logical ports are the port numbers that are referred to by most of the PNA application prompts and dialog boxes.

Port Mapping Notes

- Port Control and Control Line settings effect the channel of the active (selected) measurement. These settings will occur as the channel is being measured.
- Correction is NOT turned OFF when port mappings are changed. However, the **calibration is NO LONGER VALID!**

Control Lines Specifies the values of individual control lines. These general purpose control lines on the test set front-panel can be used in your test setup. Each button toggles the control line HIGH and LOW. When first opened, the selections reflect the current control lines. See your test set documentation for more information about the control lines.

OK When clicked, the changes to the dialog box are implemented and the port selections and control values are immediately sent to the specified test sets. The Port Control and Control line settings are stored with other channel data and used when those channels are swept.

Cancel (or Escape) Changes to the dialog are not implemented and revert to the settings before the dialog box was opened.

Calibrating with the E5091A

The following are a few changes in the way you calibrate the PNA with the E5091A connected:

1. Create the measurements for the channel and configure the Port Control (switching) on the E5091A Testset Control dialog box. Enable **Show Testset Property**.
2. To calibrate, start the Calibration wizard and select a Calibration method (ECAL, SmartCal, Unguided).
3. Select the DUT connectors that are used at the E5091A measurement reference plane.
4. When prompted to connect a standard to a PNA port, instead connect the standard to the E5091A port as indicated on the Testset status bar. For example, if the status bar indicates **1 A**, instead of connecting a standard to port 1, connect it to port A reference plane of the E5091A.

Last Modified:

18-Jun-2007 MX added UI

External Multiport Test Set Control

■ Supported Test Sets

- [Option 551](#)
- [Option 550](#)
- [E5091A](#) (separate topic)

■ Procedure

1. [Connect Test Set](#)
2. [Restart as Multiport](#)
3. [Optional External Test Set Control Settings](#)

■ [External Test Set Control and other PNA Functions](#)

[Other External Device Control Topics](#)

Supported Test Sets

The list of test sets that provide integrated solutions with the PNA is constantly growing. For a current list of supported multiport test sets, see www.agilent.com/find/multiport

Option 551

- **With** Option 551 enabled on your PNA, any supported multiport test set can be controlled directly from the PNA to make fully integrated measurements at ALL of the available test ports. To understand what test ports are available to source and receive, see the test set documentation.
- **Without** Option 551, basic operation depends on the number of PNA test ports.
 - For a 2-port PNA, configure two available test ports.
 - For a 4-port PNA, configure four available test ports.

Option 550

- **With** Option 550 enabled on your PNA, the N44xx test sets, and other supported test sets, can be controlled directly from the PNA to make fully integrated 4-port balanced measurements.
- **Without** Option 550, basic operation allows you to configure any **two** of the test ports to make standard S-parameter or receiver measurements. A different pair of ports can be configured for each channel.

N44xx Test Set Model	PNA Model (must have front-panel loops)	Frequency Range
N4419B	E8362B and N5230A Opt 225	10 MHz to 20 GHz
N4420B	E8363B and N5230A Opt 425	10 MHz to 40 GHz
N4421B	E8364B and N5230A Opt 525	10 MHz to 50 GHz
N4421B Opt H67	E8361A	10 MHz to 67 GHz

Note: By default, the system logical test ports are mapped as follows:




- **Port 1** - PNA port 1
- **Port 2** - Test Set port 2
- **Port 3** - PNA port 2
- **Port 4** - Test Set port 4

The ports can be **remapped** using the [Port Control Setting](#).

Block Diagram of a 2-port PNA and N44xx Test Set

Click one of the S-parameters to see switch and path changes. Because the test set does NOT contain receivers, [measurement speed](#) and [calibration](#) can be affected.

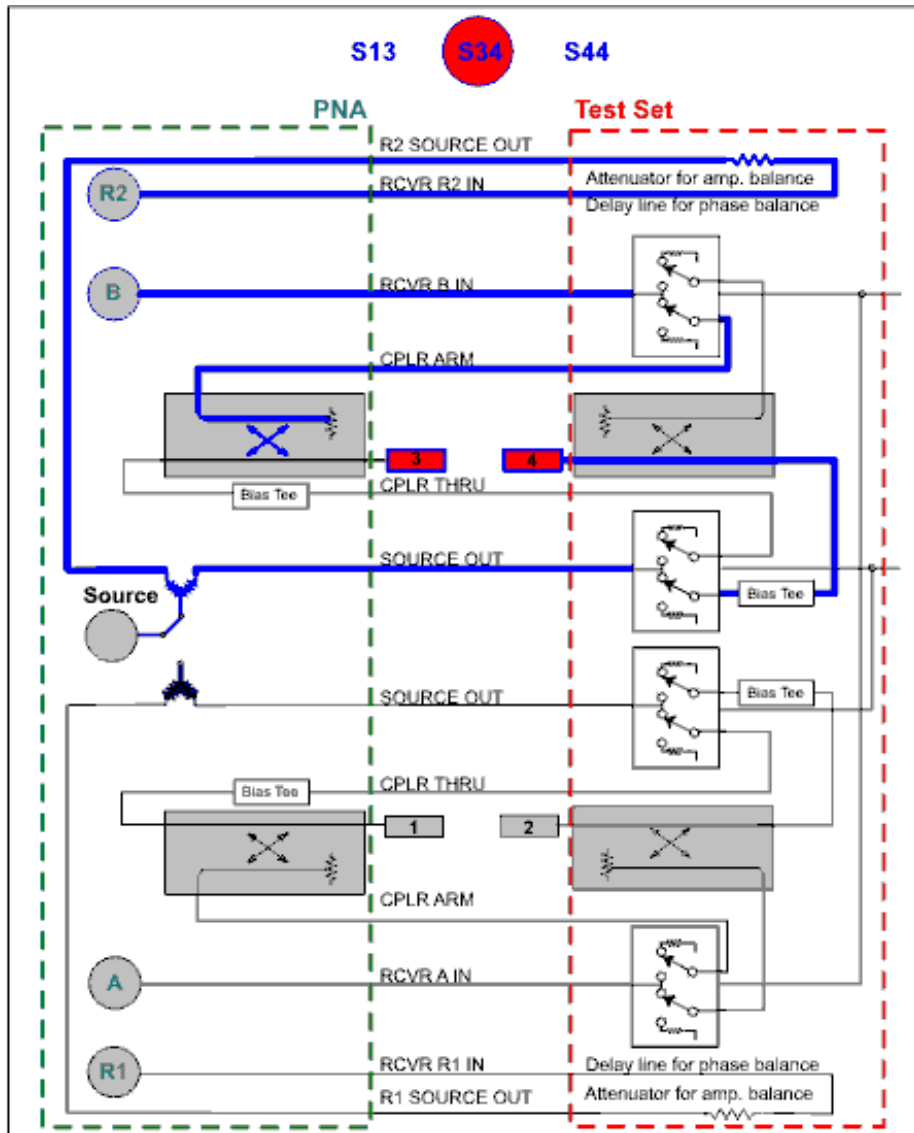

Procedure - How to enable full Multiport Capability

1. [Enable Option 550 or 551.](#)
2. Connect the test set to the PNA using the documentation that was shipped with the test set.
3. [Restart as Multiport PNA](#)

4. [Make optional External Test Set Control Settings](#)

Connect and Configure the Test Set

Connect the test set to the PNA using the test set documentation. Most test set documentation can found at www.Agilent.com

Test Set I/O-controlled test sets

Test sets that are controlled using the [Test Set I/O connector](#), have NO return communication capability. The PNA sends commands out the rear panel connector. It is assumed that the test set is responding appropriately.

GPIB-controlled test sets



Connect the test set to the GPIB using one of the following methods:


- If the **PNA will NOT be controlled** by a remote computer using GPIB, then the test set can be connected directly to the PNA GPIB port. The PNA is automatically switched to [System Controller](#) mode.
- If the **PNA WILL be controlled** by a remote computer using GPIB, [then learn how to connect the test set](#)

Restart as Multiport PNA

How to Enable Multiport capability

Note: If [Option 550](#) or Option 551 has not been enabled, the following **Multiport Capability** menu selection will NOT be available.

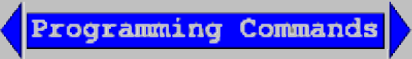Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click System 2. then Configure 3. then Multiport Capability
For PNA-X models	
1. Press SYSTEM 2. then [Configure] 3. then [Multiport Capability]	1. Click Utility 2. then System 3. then Configure 4. then Multiport Capability

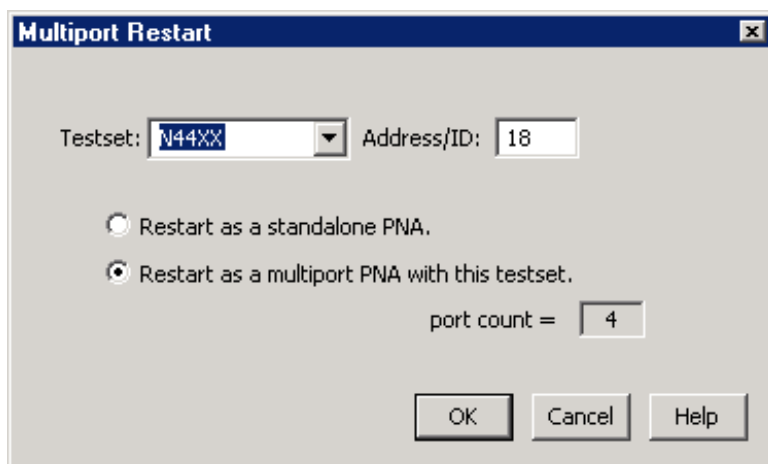

Multiport Restart dialog box help

See Also [External Test Set Control and other PNA Functions](#)

After the test set is connected and [PNA Option 550 or 551 is enabled](#), the following settings are used to enable Multiport operation.

Test Set Select the test set file to load. Only the files that are appropriate for use on that PNA model are displayed.

To Add a new Test Set file:

1. On the PNA, click **File**, then **Exit** to quit the PNA application.
2. Download the Test Set file from: <http://na.tm.agilent.com/multiport/testsets/>
3. Save it to the PNA C:\program files\agilent\network analyzer\testsets
4. Start the PNA application.
5. Click **System, Configure, Multiport, Testset**. The new test set should now be visible.

Address Enter the test set address.

- **Restart as a standalone PNA.** The PNA shuts down and restarts as a standard PNA. If the test set is left connected to the PNA, switch the test set OFF, then back ON to ensure that the test set routes signals to ports 1 and 2 of the PNA. In this condition, there is more loss in the test paths than without a test set connected. If the power switch is OFF, there is SIGNIFICANTLY more loss in the test paths.
- **Restart as a multiport PNA with this testset.** The PNA shuts down and restarts as a multiport PNA with the selected test set.

Click **OK** The PNA shuts down and restarts in the selected configuration.

To learn how to change port mapping, see [Port Control](#).

Problems

If the PNA cannot find the test set, the following error is displayed on the PNA:

GPB ERROR Address xx cannot open VISA session.

To correct the problem, verify the following:



- The test set is connected to the PNA using [one of the methods described above](#).
- The correct test set address is set.
- The test set is turned ON.


Important: After the problem has been fixed:

1. On the External Test Set Control dialog, click [Enable Test Set Control](#).
2. Restart Triggering - click **Sweep, Trigger, Continuous**.
3. The PNA again tries to find the test set.

External Test Set Control Settings

The following External Test Set Control Settings are used to configure Multiport test sets. For the N44xx test sets, the only setting that is necessary is port control.

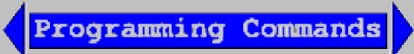How to access the External Test Set Control Settings	
Using front-panel HARDKEY [softkey] buttons	Using a mouse with PNA Menus
For PNA-L and E836x models	
1. Navigate using MENU/DIALOG	1. Click Channel 2. then External Testset 3. then Other
For PNA-X models	
1. Press TRACE/CHAN 2. then [Channel] 3. then [More] 4. then [External Testset] 5. then [Other]	1. Click Trace/Chan 2. then Channel 3. then More 4. then External Testset 5. then Other

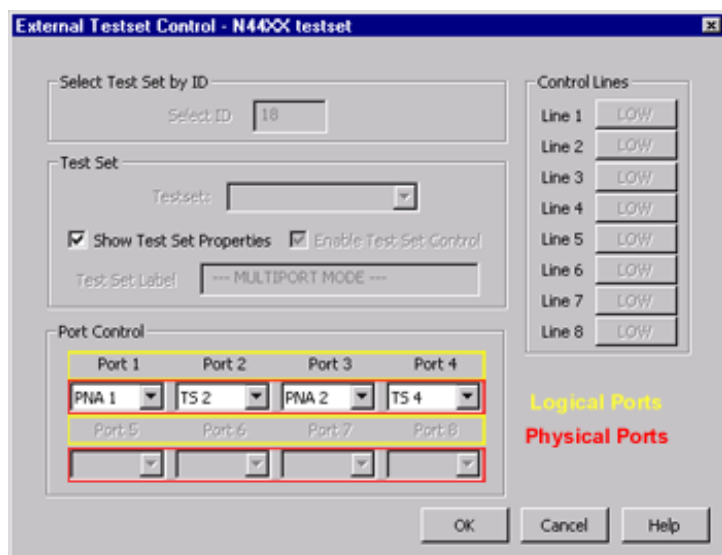

External Test Set Control dialog box help

Important Notes:

- With Options 500 and 551, **first** use the [Multiport Restart](#) dialog to **Restart as Multiport PNA with this test set**. The test set file is loaded and the test set is enabled automatically.
- When using GPIB to control an external test set, the PNA is automatically put in [System Controller mode](#). It can NOT also be in talker-listener mode. To have the PNA control a GPIB test set AND be controlled by a remote PC, use a [USB to GPIB adapter](#) to control the external test set. This does NOT apply for PNA models with a [1.1 GHz CPU board](#), which has both a GPIB controller port and a talker/listener port.
- See also [External Test Set Control and other PNA Functions](#)

Select ID

- For N44xx test sets: the GPIB address
- Multiport test sets: either GPIB address or 0 for Test Set I/O controlled test sets.

Enable Test Set Control When cleared, port switching and control line settings are disabled. This selection affects all channels using the selected test set. When checked, the 'Show Test Set Properties' checkbox is also checked automatically.

Load Test Set File For operating **without** Options 500 or 551.

If your Test Set is not visible, see [Add a new Test Set](#).

The selected test set file is loaded.

1. Navigate to the folder: C:/Program Files/Agilent/Network Analyzer/testsets/
2. Select a test set control file.

The title of the dialog shows the model of the test set file that is currently loaded.

[See a list of supported test sets.](#)

Show Test Set Properties This box becomes checked by default when the Enable Test Set Control is checked. When checked, a second row on the [status bar](#) appears which indicates the test set that is being controlled and the current port control selection. For example, the following image shows the status bar when controlling an [E5091A](#) test set and a Z5623A K64 test set:



- A. Configured channel
- B. Port Control settings for E5091A
- C. Port Control settings for Z5623A K64
- D. Test Set Label. This field is shared between [Interface Control](#) and External Test Set Control. The two labels are separated by */*.

Control of the second status bar is completely separate from the first status bar, which is controlled from the [View, Status Bar](#) menu.

Test Set Label NOT available with options 550 and 551. Add text to appear on the second status bar when **Show Test Set Properties** is checked. See image above.

Port Control Controls **mapping** of Physical ports to Logical ports. ([Refer to image of dialog box above.](#))

- Physical ports are the port numbers that are labeled on the test set front panel.
- Logical ports are the port numbers that are referred to by most of the PNA application prompts and dialog boxes.

Port Mapping Notes

- Port Control and Control Line settings effect the channel of the active (selected) measurement. These settings occur as the channel is being measured.
- Correction is turned OFF when port mappings are changed.
- After the physical ports are mapped to logical ports, all PNA references to port numbers refer to LOGICAL port numbers. The only exception to this is during calibrations.

Control Lines Specifies the values of individual control lines. These general purpose control lines on the test set front-panel can be used in your test setup. Each button toggles the control line HIGH and LOW. When first opened, the selections reflect the current control lines. See your test set documentation for more information about the control lines.

OK When clicked, the changes to the dialog box are implemented and the port selections and control values are immediately sent to the specified test set. The Port Control and Control line settings are stored with other channel data and used when those channels are swept.

Cancel (or Escape) Changes to the dialog are not implemented and revert to the settings before the dialog box was opened.

External Test Sets and other PNA Functions

The following features may work differently with a test set connected to the PNA.

Remote Commands

See [SCPI](#) and [COM](#) commands for controlling an External Testset.

Use [*OPT?](#) (SCPI) or [NumberofPorts](#) (COM) to query the number of ports for a PNA/External Test set.

Interface Control

When both [Interface Control](#) and External Test Set Control are configured, the commands on the Interface Control **Before Sweep Start** tab are sent out before any External Test Set Control commands are executed on that channel. Similarly, commands on the **After Sweep End** tab are sent after Test Set Control commands.

Calibration

With an External Test Set connected, calibration is performed exactly like a PNA with the following exceptions:

- Correction is turned OFF when port mappings are modified. This also applies to Source Power Cal.
- A [TRL Cal](#), [QSOLT](#), or [Unknown Thru](#) can be performed on these systems ONLY when other portions of the calibration fully characterize all ports using SOLT with [Defined Thru](#) or [Flush Thru](#). For example, when calibrating all four ports of a PNA with N44xx test set, perform a SOLT between ports 1 and 2, and also between ports 3 and 4 using a Defined Thru or Flush Thru. Then Unknown Thru could be used between any combination of the remaining ports.

A [Delta Match Calibration](#) can **NOT** be performed on External Test Set systems.

- With an External Test Set connected, you may be required to perform more than [3 THRU connections](#).

As with ALL PNA calibrations, when error correction is ON, both forward and reverse sweeps are required for EACH port pair that is corrected, even if only one reflection measurement is displayed. For example, any displayed measurement with full 4-port calibration ON will require 12 measurement sweeps. [Learn more.](#)

Source Power Cal

[Source power calibration](#) involves adjusting the source so that the power at an output port is flat across a frequency range. Because of additional loss through some of the test set paths, it may NOT be possible to obtain corrected output power because of limitations on the source signal.

During a Source Power Cal, you are prompted when and where to connect the power sensor. When one of the supported test sets are connected, the prompt refers to the PHYSICAL port number, NOT the LOGICAL port number. To help with translating physical to logical port mappings, enable [Show Test Set Properties](#).

Measurements with Shared Receivers

External test sets do not contain receivers. The PNA receivers are always used to measure signals at the external test set ports. Therefore, when a channel contains two measurements that share a PNA [test port receiver](#), additional sweeps are necessary.

For example, to make S34 and S44 measurements in the same channel with correction OFF:

- On a 4-port PNA, only ONE sweep is required using the C (port 3), D (port4), and R (reference for All receivers).
- On a N44xx system, TWO sweeps are required since both measurements use the B and R2 receivers. [See interactive block diagram above.](#)

Create Ratioed and Unratioed Measurements

When using an external test set, it IS possible to create a Ratioed measurement using two logical receivers that share the same physical PNA receiver. However, this measurement data is NOT valid. Invalid measurement traces show all data at -200dB. [Learn about Logical Receiver Notation](#)


Logical Port References

When an external test set is enabled, all references to PNA port numbers and test set port numbers (except during calibrations) refer to LOGICAL port numbers. Logical ports can be remapped using the [Port Control settings](#). During a calibration, you are prompted to connect standards to physical port numbers.

Balanced Port Mapping

"Logical Ports" is a term that is used with both External Test Sets and balanced measurements. While the concept is the same, they refer to different scenarios. The two can be easily confused when making Balanced measurements with an External Test Set connected. The important principle to remember is the order in which the logical ports for each are mapped:

1. In the [External Test Set - Port Control settings dialog](#), the physical PNA ports and test set ports are mapped to logical ports as noted above.
2. In the [Balanced Topology Dialog](#), the new (step 1) logical ports are mapped again to become Balanced logical ports.

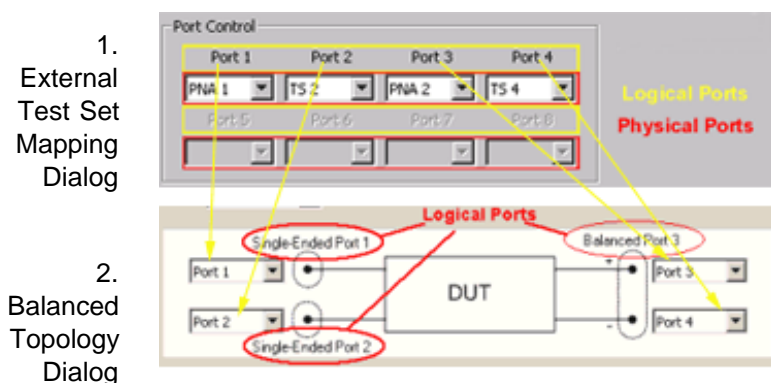

Preset

[Instrument Preset](#) will reset [Port Control](#) settings to defaults and remove the [test set label](#). All other settings remain. To maintain port control settings and the test set label, create a [User Preset](#).

Instrument State Save and Recall

[Instrument State files](#) include Test Set model, Enable and Status bar settings, and Port mappings and DUT control values for each channel.

If an Instrument State recall requires that a test set configuration file be loaded, recall time may be significant. For example, this would occur if a 2-port PNA with attached test set is configured as a 2-port PNA and then recalls a state file which requires 4-port operation.

Recall Cal Sets

If a Cal Set is saved while an external test set is enabled, when the Cal Set is recalled, then the external test set must be enabled or an error message is displayed.

Copy Channel

[Copy Channel](#) copies all relevant test set data from the source channel to the target channel.

FCA

Although the FCA application will run, it is NOT supported with External Test Set Control, even if using only two ports. The test set does not switch properly.

Option 082 (SMC Only)

Option 082 is supported with an external test set enabled. However, SMC can only be used on physical PNA ports 1 and 2. Disregard any PNA reference to other mapped logical ports.

Pulsed Application

[Pulsed Application](#) Option H08 is NOT supported with External Test Set Control.

Print

Port mapping information appears on the [Channel Settings Table](#) when printing.

Save sNp Files

To save sNp data with an [external test set](#) enabled, click File, [Save As](#), then select **Snp File(*.s*p)**, then complete the [Choose ports dialog](#).

Last modified:

19-Nov-2007	Note to Add TS files
9-Nov-2007	Fixed S13 image and added delta match notes
17-Sep-2007	Added note for PNA-X test set files
23-Feb-2007	Modifed DM Cal for 6.20.
15-Jan2007	MX Added UI
10/16/06	Added clarification to opts.
9/18/6	MQ Many edits for Opt 551
9/12/06	Added link to programming commands

Technical Specifications for the E8356A, E8357A, E8358A

(Rev. 2005-09-23)

Because the **E8356A, E8357A, E8358A** network analyzers are no longer produced, the technical specifications are stored only on the Internet. To view or print the .pdf version of the specifications, visit our web site at <http://www.agilent.com/find/pna>, and search for "E8356A Specifications"

The uncertainty curves contained in this document apply only to the setup conditions listed. Please download our free Uncertainty Calculator from http://www.agilent.com/find/na_calculator to generate the curves for your PNA setup. View the [equations](#) used to generate the uncertainty curves.

Technical Specifications for the E8801A, E8802, E8803A

(Rev. 2005-09-26)

Because the E8801A, E8802, E8803A network analyzers are no longer produced, the technical specifications are stored only on the Internet. To view or print the .pdf version of the specifications, visit our web site at <http://www.agilent.com/find/pna>, and search for "E8801A Specifications"

The uncertainty curves contained in this document apply only to the setup conditions listed. Please download our free Uncertainty Calculator from http://www.agilent.com/find/na_calculator to generate the curves for your PNA setup. View the [equations](#) used to generate the uncertainty curves.

Technical Specifications for the N3381A, N3382A, N3383A

(Rev. 2005-09-26)

Because the N3381A, N3382A, N3383A network analyzers are no longer produced, the technical specifications are stored only on the Internet. To view or print the .pdf version of the specifications, visit our web site at <http://www.agilent.com/find/pna>, and search for "N3381A Specifications"

The uncertainty curves contained in this document apply only to the setup conditions listed. Please download our free Uncertainty Calculator from http://www.agilent.com/find/na_calculator to generate the curves for your PNA setup. View the [equations](#) used to generate the uncertainty curves.

Technical Specifications for the E8361A

(Rev. 10/11/2007)

This is a complete list of the E8361A network analyzer technical specifications.

- To optimize viewing of uncertainty curves, click the Maximize button.
 - To view or print the .pdf version of the specifications, visit our web site at <http://www.agilent.com/find/pna>, and search for "E8361A Specifications"
 - The uncertainty curves contained in this document apply only to the setup conditions listed. Please download our free Uncertainty Calculator from http://www.agilent.com/find/na_calculator to generate the curves for your PNA setup. View the [equations](#) used to generate the uncertainty curves.
-

- [Definitions](#)
- [Corrected System Performance](#)
 - [System Dynamic Range](#)
 - [Receiver Dynamic Range](#)
 - [1.85mm Connectors](#)
 - [2.4mm Connectors](#)
- [Uncorrected System Performance](#)
- [Test Port Output](#)
- [Test Port Input](#)
- [Dynamic Accuracy](#)
- [Group Delay](#)
- [General Information](#)
- [Measurement Throughput Summary](#)
- [Front-panel Jumper Specs \(Option 014 only\)](#)
- [Test Set Block Diagrams](#)
- [Test Set with Option 014 Block Diagrams](#)

See [Specs for other PNA models](#)

Definitions

All specifications and characteristics apply over a 25 °C \pm 5 °C range (unless otherwise stated) and 90 minutes after the instrument has been turned on.

Specification (spec.): Warranted performance. Specifications include guardbands to account for the expected statistical performance distribution, measurement uncertainties, and changes in performance due to environmental conditions.

Characteristic (char.): A performance parameter that the product is expected to meet before it leaves the factory, but that is not verified in the field and is not covered by the product warranty. A characteristic includes the same guardbands as a specification.

Typical (typ.): Expected performance of an average unit which does not include guardbands. It is not covered by the product warranty.

Nominal (nom.): A general, descriptive term that does not imply a level of performance. It is not covered by the product warranty.

Calibration: The process of measuring known standards to characterize a network analyzer's systematic (repeatable) errors.

Corrected (residual): Indicates performance after [error correction](#) (calibration). It is determined by the quality of calibration standards and how well "known" they are, plus system repeatability, stability, and noise.

Uncorrected (raw): Indicates instrument performance without error correction. The uncorrected performance affects the stability of a [calibration](#).

Standard: When referring to the analyzer, this includes no options unless noted otherwise.

Corrected System Performance

The specifications in this section apply for measurements made with the E8361A analyzer with the following conditions:

- 10 Hz IF bandwidth
- No averaging applied to data

- [System Dynamic Range](#)
- [Receiver Dynamic Range](#)
- [1.85mm Connectors](#)
- [2.4mm Connectors](#)

Table 1. System Dynamic Range^a

Description	Specification (dB) at Test Port ^b	Typical (dB) at Direct Receiver Access Input ^c	Supplemental Information
Dynamic Range (in a 10 Hz BW)			

Standard Configuration
(E8361A - Standard)

10 MHz to 45 MHz ^d	61	NA	--
45 MHz to 500 MHz ^e	87	NA	--
500 MHz to 750 MHz	112	NA	--
750 MHz to 2 GHz	111	NA	--
2 GHz to 10 GHz	111	NA	--
10 GHz to 24 GHz	114	NA	--
24 GHz to 30 GHz	103	NA	--
30 GHz to 40 GHz	104	NA	--
40 GHz to 45 GHz	96	NA	--
45 GHz to 50 GHz	100	NA	--
50 GHz to 60 GHz	97	NA	--
60 GHz to 67 GHz	94	NA	--
67 GHz to 70 GHz ^d	94	NA	--

Configurable Test Set

(E8361A - Option 014 or Option 014 and 080)

10 MHz to 45 MHz ^d	61	99	--
45 MHz to 500 MHz ^e	87	102	--
500 MHz to 750 MHz	112	125.5	--
750 MHz to 2 GHz	111	125.5	--
2 GHz to 10 GHz	111	125	--
10 GHz to 24 GHz	112	128	--
24 GHz to 30 GHz	101	117.5	Option 016 degrades performance by 2 dB.
30 GHz to 40 GHz	102	115	
40 GHz to 45 GHz	94	109	
45 GHz to 50 GHz	98	110.5	
50 GHz to 60 GHz	95	107	

60 GHz to 67 GHz	90	101	Option 016 degrades performance by 3 dB.
67 GHz to 70 GHz ^d	90	100	
Configurable Test Set & Extended Power Range (E8361A - Option 014 & UNL or Option 014 & UNL & 080)			
10 MHz to 45 MHz ^d	61	99	--
45 MHz to 500 MHz ^e	87	102	--
500 MHz to 750 MHz	112	125.5	--
750 MHz to 2 GHz	111	124	--
2 GHz to 10 GHz	111	124	--
10 GHz to 24 GHz	112	125	--
24 GHz to 30 GHz	101	114.5	Option 016 degrades performance by 2 dB.
30 GHz to 40 GHz	99	112	
40 GHz to 45 GHz	92	105	
45 GHz to 50 GHz	94	106.5	
50 GHz to 60 GHz	91	103	
60 GHz to 67 GHz	84	95	Option 016 degrades performance by 3 dB.
67 GHz to 70 GHz ^d	84	94	

a The system dynamic range is calculated as the difference between the noise floor and the source maximum output power. System Dynamic Range is a specification when the source is set to Port 1, and a characteristic when the source is set to Port 2. The effective dynamic range must take measurement uncertainties and interfering signals into account as well as the insertion loss resulting from a thru cable connected between Port 1 and Port 2..

b The test port system dynamic range is calculated as the difference between the test port noise floor and the source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account as well as the insertion loss resulting from a thru cable connected between Port 1 and Port 2..

c The direct receiver access input system dynamic range is calculated as the difference between the receiver access input noise floor and the source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account. This set-up should only be used when the receiver input will never exceed its damage level. When the analyzer is in segment sweep mode, the analyzer can have predefined frequency segments which will output a higher power level when the extended dynamic range is required (i.e. devices with high insertion loss), and reduced power when receiver damage may occur (i.e. devices with low insertion loss). The extended range is only available in one-path transmission measurements.

d Typical performance.

e May be limited to 100 dB at particular frequencies below 500 MHz due to spurious receiver residuals. Methods are available to regain the full dynamic range.

Note: This E8361A document does NOT provide technical specifications for Receiver Dynamic Range.

Note: This E8361A document provides technical specifications for the following calibration kits and Ecal modules only: 85056A, 85058B, N4693A, N4694A. Please download our free Uncertainty Calculator from http://www.agilent.com/find/na_calculator to generate the curves for your PNA setup.

Table 10. Uncorrected System Performance^a

Specifications apply over environmental temperature of 23° ±3 °C, with < 1 °C deviation from the calibration temperature

Description	Specification	Supplemental Information
Directivity		
		typical:
10 MHz to 45 MHz ^b	--	22 dB
45 MHz to 2 GHz	24 dB	27 dB
2 GHz to 10 GHz	20 dB	24 dB
10 GHz to 20 GHz	16 dB	20 dB
20 GHz to 30 GHz	14 dB	17 dB
30 GHz to 50 GHz	13 dB	17 dB
50 GHz to 60 GHz	13 dB	17 dB
60 GHz to 67 GHz	10 dB	18 dB
67 GHz to 70 GHz ^b	--	14 dB
Source Match - Standard		
		typical:
10 MHz to 45 MHz ^b	--	7 dB
45 MHz to 2 GHz	18 dB	23 dB
2 GHz to 10 GHz	14 dB	18 dB
10 GHz to 20 GHz	12 dB	15 dB
20 GHz to 30 GHz	8 dB	11.5 dB
30 GHz to 40 GHz	7.5 dB	10 dB
40 GHz to 45 GHz	8 dB	11 dB
45 GHz to 50 GHz	7 dB	10 dB
50 GHz to 60 GHz	6 dB	8.5 dB
60 GHz to 67 GHz	5.5 dB	7.5 dB

67 GHz to 70 GHz ^b	--	7.5 dB
Source Match - Option 014		
		typical:
10 MHz to 45 MHz ^b	--	7 dB
45 MHz to 2 GHz	17 dB	21 dB
2 GHz to 10 GHz	12 dB	17 dB
10 GHz to 20 GHz	11 dB	14 dB
20 GHz to 30 GHz	10 dB	13 dB
30 GHz to 40 GHz	8.5 dB	11 dB
40 GHz to 45 GHz	8.5 dB	11 dB
45 GHz to 50 GHz	8.5 dB	11.5 dB
50 GHz to 60 GHz	6.5 dB	9 dB
60 GHz to 67 GHz	6 dB	8.5 dB
67 GHz to 70 GHz ^b	--	8.5 dB
Source Match - UNL & 014		
		typical:
10 MHz to 45 MHz ^b	--	5 dB
45 MHz to 2 GHz	15 dB	20 dB
2 GHz to 10 GHz	9 dB	13 dB
10 GHz to 20 GHz	7.5 dB	10.5 dB
20 GHz to 30 GHz	8.5 dB	11 dB
30 GHz to 40 GHz	8 dB	11 dB
40 GHz to 45 GHz	8.5 dB	12 dB
45 GHz to 50 GHz	8 dB	12 dB
50 GHz to 60 GHz	7 dB	11 dB

60 GHz to 67 GHz	6 dB	10 dB
67 GHz to 70 GHz ^b	--	10 dB
Load Match - Standard		
		typical:
10 MHz to 45 MHz ^b	--	5.5 dB
45 MHz to 2 GHz	9 dB	10 dB
2 GHz to 10 GHz	9 dB	11 dB
10 GHz to 20 GHz	8.5 dB	10 dB
20 GHz to 30 GHz	7 dB	9 dB
30 GHz to 40 GHz	6 dB	8 dB
40 GHz to 45 GHz	6.5 dB	9 dB
45 GHz to 50 GHz	6.5 dB	8.5 dB
50 GHz to 60 GHz	5.5 dB	7.5 dB
60 GHz to 67 GHz	5.5 dB	7.5 dB
67 GHz to 70 GHz ^b	--	5 dB
Load Match - Option 014		
		typical:
10 MHz to 45 MHz ^b	--	5.5 dB
45 MHz to 2 GHz	8.5 dB	10 dB
2 GHz to 10 GHz	8 dB	10 dB
10 GHz to 20 GHz	8 dB	10 dB
20 GHz to 30 GHz	7.5 dB	10 dB
30 GHz to 40 GHz	7 dB	9.5 dB
40 GHz to 45 GHz	7.5 dB	9.5 dB
45 GHz to 50 GHz	7.5 dB	10 dB

50 GHz to 60 GHz	6 dB	8.5 dB
60 GHz to 67 GHz	6 dB	8.5 dB
67 GHz to 70 GHz ^b	--	5 dB
Load Match - Option UNL & 014		
		typical:
10 MHz to 45 MHz ^b	--	6 dB
45 MHz to 2 GHz	8.5 dB	10 dB
2 GHz to 10 GHz	7 dB	9 dB
10 GHz to 20 GHz	6 dB	9 dB
20 GHz to 30 GHz	7.5 dB	11 dB
30 GHz to 40 GHz	8 dB	11.5 dB
40 GHz to 45 GHz	8 dB	12 dB
45 GHz to 50 GHz	8 dB	12 dB
50 GHz to 60 GHz	7.5 dB	11.5 dB
60 GHz to 67 GHz	6 dB	10 dB
67 GHz to 70 GHz ^b	--	13 dB
Reflection Tracking		
	--	typical:
10 MHz to 45 MHz	--	±1.5 dB
45 MHz to 20 GHz	--	±1.5 dB
20 GHz to 40 GHz	--	±2.0 dB
40 GHz to 50 GHz	--	±2.0 dB
50 GHz to 67 GHz	--	±3.0 dB
67 GHz to 70 GHz	--	±4.5 dB
Transmission Tracking^c		

	--	typical:
10 MHz to 45 MHz	--	±1.5 dB
45 MHz to 20 GHz	--	±1.5 dB
20 GHz to 40 GHz	--	±2.0 dB
40 GHz to 50 GHz	--	±2.0 dB
50 GHz to 67 GHz	--	±3.0 dB
67 GHz to 70 GHz	--	±4.5 dB
Crosstalk^d - Standard		
10 MHz to 45 MHz ^b	--	-63 dB (typical)
45 MHz to 500 MHz	-87 dB	--
500 MHz to 2 GHz	-110 dB	--
2 GHz to 10 GHz	-105 dB	--
10 GHz to 24 GHz	-111 dB	--
24 GHz to 30 GHz	-106 dB	--
30 GHz to 40 GHz	-104 dB	--
40 GHz to 45 GHz	-98 dB	--
45 GHz to 50 GHz	-100 dB	--
50 GHz to 60 GHz	-97 dB	--
60 GHz to 67 GHz	-94 dB	--
67 GHz to 70 GHz ^b	-94 dB	--
Crosstalk^d - Option 014		
		typical (for Option 080 enabled ^e)
10 MHz to 45 MHz ^b	--	-63 dB
45 MHz to 500 MHz	-87 dB	-87 dB
500 MHz to 2 GHz	-110 dB	-110 dB

2 GHz to 10 GHz	-105 dB	-105 dB
10 GHz to 24 GHz	-111 dB	-111 dB
24 GHz to 30 GHz	-104 dB	-104 dB
30 GHz to 40 GHz	-102 dB	-102 dB
40 GHz to 45 GHz	-96 dB	-96 dB
45 GHz to 50 GHz	-98 dB	-98 dB
50 GHz to 60 GHz	-95 dB	-95 dB
60 GHz to 67 GHz	-90 dB	-90 dB
67 GHz to 70 GHz ^b	--	-90 dB
Crosstalk^d - Option 014 & UNL		
		typical (for Option 080 enabled ^e)
10 MHz to 45 MHz ^b	--	-63 dB
45 MHz to 500 MHz	-87 dB	-87 dB
500 MHz to 2 GHz	-110 dB	-110 dB
2 GHz to 10 GHz	-104 dB	-104 dB
10 GHz to 24 GHz	-108 dB	-108 dB
24 GHz to 30 GHz	-101 dB	-101 dB
30 GHz to 40 GHz	-99 dB	-99 dB
40 GHz to 45 GHz	-92 dB	-92 dB
45 GHz to 50 GHz	-94 dB	-94 dB
50 GHz to 60 GHz	-91 dB	-91 dB
60 GHz to 67 GHz	-84 dB	-84 dB
67 GHz to 70 GHz ^b	--	-84 dB

a Specifications apply over environment temperature of 23°C +/- 3°C, with less than 1°C deviation from the calibration temperature.

b Typical performance.

cTransmission tracking performance noted here is normalized to the insertion loss characteristics of the cable used so that the indicated

performance is independent of the cable used.

d Measurement conditions: normalized to a thru, measured with two shorts, 10 Hz IF bandwidth, averaging factor of 16, alternate mode, source power set to the lesser of the maximum power out or the maximum receiver power.

e 0 Hz offset.

Table 11. Test Port Output

Description	Specification			Supplemental
Frequency Range				
	Standard	Options		
E8361A	45 MHz to 67 GHz (Operates 10 MHz to 70 GHz)			--
Nominal Power ^C				
	Std and Options without UNL	Options with UNL		
E8361A	-15 dBm	-17 dBm		--
Frequency Resolution				
	1 Hz			--
CW Accuracy				
	+/-1 ppm			--
Frequency Stability				
				+/-0.05 ppm. -10° to 70° C, typical; +/-0.1 ppm/yr maximum, typical
Power Level Accuracy ^a				
	Standard	Opt 014	Opt 014 & UNL	
10 MHz to 45 MHz ^b	+/-1.5 dB (typical)	+/-1.5 dB (typical)	+/-1.5 dB (typical)	--
45 MHz to 10 GHz	+/-1.5 dB	+/-1.5 dB	+/-1.5 dB	Variation from nominal power in range 0 (step attenuator at 0 dB)

10 GHz to 20 GHz	+/-1.5 dB	+/-1.5 dB	+/-2.0 dB	0 dB)
20 GHz to 30 GHz	+/-2.0 dB	+/-2.0 dB	+/-2.5 dB	
30 GHz to 40 GHz	+/-3.0 dB	+/-3.0 dB	+/-3 dB	
40 GHz to 45 GHz	+/-3.0 dB	+/-3.0 dB	+/-3 dB	
45 GHz to 50 GHz	+/-3.5 dB	+/-3.5 dB	+/-3.5 dB	
50 GHz to 60 GHz	+/-4.0 dB	+/-4.0 dB	+/-4.0 dB	
60 GHz to 67 GHz	+/-4.0 dB	+/-4.0 dB	+/-4.5 dB	
67 GHz to 70 GHz ^b	+/-4.0 dB (typical)	+/-4.0 dB (typical)	+/-4.5 dB (typical)	
Power Level Linearity ^d				
				Any Option
Test reference is at the nominal power level (step attenuator at 0 dB)				
10 MHz to 45 MHz ^b	+/-1.0 dB for power<=-5 dBm ^g (typical)			--
45 MHz to 67 GHz	+/-1.0 dB for power<=-5 dBm ^g			--
67 GHz to 70 GHz ^b	+/-1.0 dB for power<=-5 dBm ^g (typical)			--
Power Range ^{a,e,f}				
Note: If power is set above the maximum specified leveled power, the test port output signal may show non-linear effects that are dependent on the DUT.				
	Standard	Opt 014	Opt 014 & UNL	
10 MHz to 45 MHz ^b	-25 to -9 dBm (typical)	-25 to -9 dBm (typical)	-75 to -9 dBm (typical)	--

45 MHz to 500 MHz	-25 to -3 dBm	-25 to -3 dBm	-75 to -3 dBm	--
500 MHz to 750 MHz	-25 to 0 dBm	-25 to 0 dBm	-75 to 0 dBm	--
750 MHz to 10 GHz	-27 to -1 dBm	-27 to -1 dBm	-77 to -1 dBm	--
10 GHz to 30 GHz	-27 to -2 dBm	-27 to -3 dBm	-77 to -3 dBm	--
30 GHz to 40 GHz	-27 to -1 dBm	-27 to -2 dBm	-77 to -5 dBm	--
40 GHz to 45 GHz	-27 to -7 dBm	-27 to -8 dBm	-77 to -10 dBm	--
45 GHz to 50 GHz	-27 to -1 dBm	-27 to -2 dBm	-77 to -6 dBm	--
50 GHz to 60 GHz	-27 to -3 dBm	-27 to -4 dBm	-77 to -8 dBm	--
60 GHz to 67 GHz	-27 to -5 dBm	-27 to -7 dBm	-77 to -13 dBm	--
67 GHz to 70 GHz ^b	-27 to -5 dBm (typical)	-27 to -7 dBm (typical)	-77 to -13 dBm (typical)	--
Power Sweep Range (ALC)				
	Standard	Opt 014	Opt 014 & UNL	ALC range starts at maximum leveled output power and decreases by power level indicated in the table.
10 MHz to 45 MHz ^b	16 dB (typical)	16 dB (typical)	16 dB (typical)	
45 MHz to 500 MHz	22 dB	22 dB	22 dB	
500 MHz to 750 MHz	25 dB	25 dB	25 dB	

750 GHz to 10 GHz	26 dB	26 dB	26 dB
10 GHz to 30 GHz	25 dB	24 dB	24 dB
30 GHz to 40 GHz	26 dB	25 dB	22 dB
40 GHz to 45 GHz	20 dB	19 dB	17 dB
45 GHz to 50 GHz	26 dB	25 dB	21 dB
50 GHz to 60 GHz	24 dB	23 dB	19 dB
60 GHz to 67 GHz	22 dB	20 dB	14 dB
67 GHz to 70 GHz ^b	22 dB (typical)	20 dB (typical)	14 dB (typical)
Power Resolution			
	0.01 dB		--
Phase Noise			
			Any Option
10 kHz offset from center frequency, nominal power at test port			
	--	--	typical:
10 MHz to 45 MHz	--	--	-80 dBc
45 MHz to 10 GHz	--	--	-70 dBc
10 GHz to 24 GHz	--	--	-60 dBc
24 GHz to 70 GHz	--	--	-55 dBc
10 kHz offset from center frequency, nominal power at test port - Option 080 enabled			

				typical:
10 MHz to 45 MHz	--	--	--	-80 dBc
45 MHz to 10 GHz	--	--	--	-70 dBc
10 GHz to 24 GHz	--	--	--	-60 dBc
24 GHz to 70 GHz	--	--	--	-55 dBc
100 kHz offset from center frequency, nominal power at test port				
				typical:
10 MHz to 45 MHz	--	--	--	-90 dBc
45 MHz to 10 GHz	--	--	--	-90 dBc
10 GHz to 24 GHz	--	--	--	-85 dBc
24 GHz to 70 GHz	--	--	--	-75 dBc
100 kHz offset from center frequency, nominal power at test port - Option 080 enabled				
				typical:
10 MHz to 45 MHz	--	--	--	-85 dBc
45 MHz to 10 GHz	--	--	--	-80 dBc
10 GHz to 24 GHz	--	--	--	-70 dBc
24 GHz to 70 GHz	--	--	--	-60 dBc
1 MHz offset from center frequency, nominal power at test port				
				typical:

10 MHz to 45 MHz	--	--	--	-115 dBc
45 MHz to 10 GHz	--	--	--	-110 dBc
10 GHz to 24 GHz	--	--	--	-105 dBc
24 GHz to 70 GHz	--	--	--	-95 dBc
1 MHz offset from center frequency, nominal power at test port - Option 080 enabled				
				typical:
10 MHz to 45 MHz	--	--	--	-110 dBc
45 MHz to 10 GHz	--	--	--	-105 dBc
10 GHz to 24 GHz	--	--	--	-95 dBc
24 GHz to 70 GHz	--	--	--	-85 dBc
Harmonics (2nd or 3rd)				
				Any Option
				typical:
10 MHz to 500 MHz	--	--	--	-10 dBc
500 MHz to 10 GHz	--	--	--	-15 dBc
10 GHz to 24 GHz	--	--	--	-23 dBc
24 GHz to 50 GHz	--	--	--	-16 dBc
50 GHz to 60 GHz	--	--	--	-13 dBc

60 GHz to 70 GHz	--	--	--	-19 dBc
Non-Harmonic Spurious (at Nominal Output Power)				
10 MHz to 20 GHz	--	--	--	-50 dBc typical, for offset frequency > 1 kHz
20 GHz to 70 GHz	--	--	--	-30 dBc typical, for offset frequency > 1 kHz

a Test port output is a specification when the source is set to Port 1, and a characteristic when the source is set to Port 2.

b Typical performance.

c Preset power.

d Power Level Linearity is a specification when the source is set to Port 1, and a typical when the source is set to Port 2.

e Test port power is specified into nominal 50 ohms.

f Power to which the source can be set and phase lock is assured.

g +/-1.6 dB for power>-5 dBm.

Table 12: Test Port Input

Description	Specification		Supplemental
	Standard or UNL	Opt 014 or 014 & UNL	
Test Port Noise Floor ¹			
10 Hz IF Bandwidth			
10 MHz to 45 MHz ²	<-70 dBm (typical)	<-70 dBm (typical)	--
45 MHz to 500 MHz ^{3, 4}	<-90 dBm	<-90 dBm	--
500 MHz to 2 GHz	<-112 dBm	<-112 dBm	--
2 GHz to 10 GHz	<-112 dBm	<-112 dBm	--
10 GHz to 24 GHz	<-116 dBm	<-115 dBm	--
24 GHz to 30 GHz	<-105 dBm	<-104 dBm	Option 016 degrades performance by 2 dB.
30 GHz to 40 GHz	<-105 dBm	<-104 dBm	
40 GHz to 45 GHz	<-103 dBm	<-102 dBm	
45 GHz to 50 GHz	<-101 dBm	<-100 dBm	

50 GHz to 60 GHz	<-100 dBm	<-99 dBm	
60 GHz to 67 GHz	<-99 dBm	<-97 dBm	Option 016 degrades performance by 3 dB.
67 GHz to 70 GHz ²	<-99 dBm (typical)	<-97 dBm (typical)	
1 KHz IF Bandwidth			
10 MHz to 45 MHz ²	<-50 dBm (typical)	<-50 dBm (typical)	--
45 MHz to 500 MHz ^{3, 4}	<-70 dBm	<-70 dBm	--
500 MHz to 2 GHz	<-92 dBm	<-92 dBm	--
2 GHz to 10 GHz	<-92 dBm	<-92 dBm	--
10 GHz to 24 GHz	<-96 dBm	<-95 dBm	--
24 GHz to 30 GHz	<-85 dBm	<-84 dBm	Option 016 degrades performance by 2 dB.
30 GHz to 40 GHz	<-85 dBm	<-84 dBm	
40 GHz to 45 GHz	<-83 dBm	<-82 dBm	
45 GHz to 50 GHz	<-81 dBm	<-80 dBm	
50 GHz to 60 GHz	<-80 dBm	<-79 dBm	
60 GHz to 67 GHz	<-79 dBm	<-77 dBm	Option 016 degrades performance by 3 dB.
67 GHz to 70 GHz ²	<-79 dBm (typical)	<-77 dBm (typical)	
Test Port Noise Floor ¹ Option 080 enabled ⁵			
			Option 014 or 014 & UNL (typical)
10 Hz IF Bandwidth			
10 MHz to 45 MHz	--	--	<-70 dBm
45 MHz to 500 MHz ^{3, 4}	--	--	<-90 dBm
500 MHz to 2 GHz	--	--	<-112 dBm
2 GHz to 10 GHz	--	--	<-112 dBm

10 GHz to 24 GHz	--	--	<-115 dBm
24 GHz to 30 GHz	--	Option 016 degrades performance by 2 dB.	<-104 dBm
30 GHz to 40 GHz	--		<-104 dBm
40 GHz to 45 GHz	--		<-102 dBm
45 GHz to 50 GHz	--		<-100 dBm
50 GHz to 60 GHz	--		<-99 dBm
60 GHz to 67 GHz	--	Option 016 degrades performance by 3 dB.	<-97 dBm
67 GHz to 70 GHz	--		<-97 dBm
1 KHz IF Bandwidth			
			typical:
10 MHz to 45 MHz	--	--	<-50 dBm
45 MHz to 500 MHz ^{3, 4}	--	--	<-70 dBm
500 MHz to 2 GHz	--	--	<-92 dBm
2 GHz to 10 GHz	--	--	<-92 dBm
10 GHz to 24 GHz	--	--	<-95 dBm
24 GHz to 30 GHz	--	Option 016 degrades performance by 2 dB.	<-84 dBm
30 GHz to 40 GHz	--		<-84 dBm
40 GHz to 45 GHz	--		<-82 dBm
45 GHz to 50 GHz	--		<-80 dBm
50 GHz to 60 GHz	--		<-79 dBm
60 GHz to 67 GHz	--	Option 016 degrades performance by 3 dB.	<-77 dBm
67 GHz to 70 GHz	--		<-77 dBm
Direct Receiver Access Input Noise Floor ¹			
	Standard		Option 014 or 014 & UNL (typical)

10 Hz IF Bandwidth			
10 MHz to 45 MHz ²	--		<-106 dBm
45 MHz to 500 MHz ^{3, 4}	--		<-105 dBm
500 MHz to 2 GHz	--		<-125.5 dBm
2 GHz to 10 GHz	--		<-125 dBm
10 GHz to 24 GHz	--		<-128 dBm
24 GHz to 30 GHz	--	Option 016 degrades performance by 2 dB.	<-117.5 dBm
30 GHz to 40 GHz	--		<-117 dBm
40 GHz to 45 GHz	--		<-115 dBm
45 GHz to 50 GHz	--		<-112.5 dBm
50 GHz to 60 GHz	--		<-111 dBm
60 GHz to 67 GHz	--	Option 016 degrades performance by 3 dB	<-108 dBm
67 GHz to 70 GHz ²	--		<-107 dBm
1 KHz IF Bandwidth			
10 MHz to 45 MHz ²	--		<-86 dBm
45 MHz to 500 MHz ^{3, 4}	--		<-85 dBm
500 MHz to 2 GHz	--		<-105.5 dBm
2 GHz to 10 GHz	--		<-105 dBm
10 GHz to 24 GHz	--		<-108 dBm
24 GHz to 30 GHz	--	Option 016 degrades performance by 2 dB.	<-97.5 dBm
30 GHz to 40 GHz	--		<-97 dBm
40 GHz to 45 GHz	--		<-95 dBm
45 GHz to 50 GHz	--		<-92.5 dBm

50 GHz to 60 GHz	--		<-91 dBm
60 GHz to 67 GHz	--	Option 016 degrades performance by 3 dB.	<-88 dBm
67 GHz to 70 GHz ²	--		<-87 dBm
Direct Receiver Access Input Noise Floor ¹ - Option 080 enabled ⁵			
	Standard		Option 014
10 Hz IF Bandwidth			
			typical:
10 MHz to 45 MHz ²	--		<-106 dBm
45 MHz to 500 MHz ^{3, 4}	--		<-105 dBm
500 MHz to 2 GHz	--		<-125.5 dBm
2 GHz to 10 GHz	--		<-125 dBm
10 GHz to 24 GHz	--		<-128 dBm
24 GHz to 30 GHz	--	Option 016 degrades performance by 2 dB.	<-117.5 dBm
30 GHz to 40 GHz	--		<-117 dBm
40 GHz to 45 GHz	--		<-115 dBm
45 GHz to 50 GHz	--		<-112.5 dBm
50 GHz to 60 GHz	--		<-111 dBm
60 GHz to 67 GHz	--	Option 016 degrades performance by 3 dB.	<-108 dBm
67 GHz to 70 GHz ²	--		<-107 dBm
1 KHz IF Bandwidth			
			typical:
10 MHz to 45 MHz ²	--		<-86 dBm
45 MHz to 500 MHz ^{3, 4}	--		<-85 dBm
500 MHz to 2 GHz	--		<-105.5 dBm

2 GHz to 10 GHz	--		<-105 dBm
10 GHz to 24 GHz	--		<-108 dBm
24 GHz to 30 GHz	--	Option 016 degrades performance by 2 dB.	<-97.5 dBm
30 GHz to 40 GHz	--		<-97 dBm
40 GHz to 45 GHz	--		<-95 dBm
45 GHz to 50 GHz	--		<-92.5 dBm
50 GHz to 60 GHz	--		<-91 dBm
60 GHz to 67 GHz	--	Option 016 degrades performance by 3 dB.	<-88 dBm
67 GHz to 70 GHz ²	--		<-87 dBm

Receiver Compression Level (measured at test ports)				
	Specifications			Supplemental Information
	Standard	Option 014	014 & UNL	Typical
10 MHz to 45 MHz ^{2, 6}	negligible			
45 MHz to 500 MHz ^{6, 7}	<0.1 dB at -9.5 dBm ⁸ and <0.25 dB at -3 dBm	<0.1 dB at -9.5 dBm ⁸ and <0.25 dB at +3 dBm		<0.1 dB at +0.5 dBm ⁸ and <0.25 dB at +8 dBm
500 MHz to 5 GHz	<0.1 dB at -8 dBm ⁸ and <0.25 dB at -1 dBm	<0.1 dB at -8 dBm ⁸ and <0.25 dB at 0 dBm	<0.1 dB at -7 dBm ⁸ and <0.25 dB at 0 dBm	<0.1 dB at -4.0 dBm ⁸ and <0.25 dB at +3 dBm
5 GHz to 30 GHz	<0.1 dB at -8.5 dBm ⁸ and <0.25 dB at -2 dBm	<0.1 dB at -8.5 dBm ⁸ and <0.25 dB at +1 dBm	<0.1 dB at -6 dBm ⁸ and <0.25 dB at +1 dBm	<0.1 dB at -1.0 dBm ⁸ and <0.25 dB at +6 dBm
30 GHz to 67 GHz	<0.1 dB at -10.5 dBm ⁸ and <0.15 dB at -7 dBm	<0.1 dB at -8.0 dBm ⁸ and <0.15 dB at -3 dBm	<0.1 dB at -9.5 dBm ⁸ and <0.15 dB at -6 dBm	<0.1 dB at -2.0 dBm ^{8, 9} and <0.15 dB at +2 dBm ⁹

67 GHz to 70 GHz ²	NA		
System Compression Level			
	Standard	Option 014 or 014 & UNL	
	maximum leveled output power		See dynamic accuracy table
Third Order Intercept ¹⁰ - Tone spacing from 100 kHz - 5 MHz			
			Any Option
			typical
10 MHz to 500 MHz	--	--	+30 dBm
500 MHz to 24 GHz	--	--	+24 dBm
24 GHz to 40 GHz	--	--	+23 dBm
40 to 50 GHz	--	--	+24 dBm
50 to 67 GHz	--	--	+26 dBm
Third Order Intercept ¹⁰ - Tone spacing from 5 MHz - 20 MHz			
			Any Option
			typical
10 MHz to 500 MHz	--		NA
500 MHz to 24 GHz	--	--	+20 dBm
24 GHz to 40 GHz	--	--	+20 dBm
40 to 50 GHz	--	--	+22 dBm
50 to 67 GHz	--	--	+24 dBm
Third Order Intercept ¹⁰ - Tone spacing from 20 MHz - 50 MHz			
			Any Option
			typical

10 MHz to 500 MHz			NA
500 MHz to 24 GHz	--	--	+26 dBm
24 to 40 GHz	--	--	+24 dBm
40 to 50 GHz	--	--	+25 dBm
50 to 67 GHz	--	--	+27 dBm
Trace Noise Magnitude 1 kHz IF bandwidth. Ratio measurement, nominal power at test port.			
	Standard or 014	014 & UNL	
10 MHz to 45 MHz ²	<0.150 dB rms (typical)	<0.150 dB rms (typical)	--
45 MHz to 500 MHz ^{11, 4}	<0.010 dB rms	<0.010 dB rms	--
500 MHz to 24 GHz	<0.006 dB rms	<0.006 dB rms	--
24 GHz to 67 GHz	<0.006 dB rms	<0.009 dB rms	--
67 GHz to 70 GHz ²	<0.006 dB rms (typical)	<0.009 dB rms (typical)	--
Trace Noise Magnitude - Option 080 enabled^{2,5} 1 kHz IF bandwidth. Ratio measurement, nominal power at test port.			
	Standard or 014	014 & UNL	
10 MHz to 45 MHz	<0.150 dB rms (typical)	<0.150 dB rms (typical)	--
45 MHz to 500 MHz ^{11, 4}	<0.010 dB rms (typical)	<0.010 dB rms (typical)	--
500 MHz to 24 GHz	<0.006 dB rms (typical)	<0.006 dB rms (typical)	--

24 GHz to 67 GHz	<0.009 dB rms (typical)	<0.012 dB rms (typical)	--
67 GHz to 70 GHz	<0.009 dB rms (typical)	<0.012 dB rms (typical)	--
Trace Noise Phase 1 kHz IF bandwidth. Ratio measurement, nominal power at test port.			
	Any Option		
10 MHz to 45 MHz ²	--	--	<0.800° rms (typical)
45 MHz to 500 MHz ⁴	<0.100° rms	--	--
500 MHz to 24 GHz	<0.060° rms	--	--
24 GHz to 67 GHz	<0.100° rms	--	--
67 GHz to 70 GHz ²	--	--	<0.100° rms (typical)
Trace Noise Phase - Option 080 enabled^{2, 5} 1 kHz IF bandwidth. Ratio measurement, nominal power at test port.			
			typical:
10 MHz to 45 MHz	--	--	<0.800° rms
45 MHz to 500 MHz ⁴	--	--	<0.100° rms
500 MHz to 24 GHz	--	--	<0.060° rms
24 GHz to 67 GHz	--	--	<0.100° rms

67 GHz to 70 GHz	--	--	<0.100° rms
Reference Level Magnitude			
Range	+/-500 dB	--	--
Resolution	0.001 dB	--	--
Reference Level Phase			
Range	+/-500°	--	--
Resolution	0.01°	--	--
Stability Magnitude¹²			
			Any Option
Typical ratio measurement, made at the test port.			
10 MHz to 45 MHz	--	--	+/-0.05 dB/°C
45 MHz to 50 GHz	--	--	+/-0.02 dB/°C
50 GHz to 70 GHz	--	--	+/-0.04 dB/°C
Stability Phase¹²			
			Any Option
Typical ratio measurement, measured at the test port.			
10 MHz to 45 MHz	--	--	+/-0.5°/°C
45 MHz to 20 GHz	--	--	+/-0.2°/°C
20 GHz to 40 GHz	--	--	+/-0.5°/°C
40 GHz to 70 GHz	--	--	+/-0.8°/°C

Damage Input Level			
			typical:
Test Port 1 and 2	--	--	+27 dBm or +/-40 VDC
R1, R2 in	--	--	+15 dBm or +/-15 VDC
A, B in	--	--	+15 dBm or +/-7 VDC
Coupler Thru (Option 014 or 014 & UNL)	--	--	+27 dBm or +/-40 VDC
Coupler Arm (Option 014 or 014 & UNL)	--	--	+30 dBm or +/-7 VDC

1Total average (rms) noise power calculated as the mean value of a linear magnitude trace expressed in dBm.

2Typical performance.

3Noise floor may be degraded by 10 dB at particular frequencies (multiples of 5 MHz) due to spurious receiver residuals.

4 Specified value is for worst-case noise floor at 45 MHz

50 Hz offset

6 Coupler roll-off will reduce compression below 500 MHz. Ultimately, at 45 MHz, compression is negligible.

7 Specified value is for worst-case compression at 500 MHz.

8 This compression level comes from the dynamic accuracy curve with -30 dBm reference test port power.

9 Option 016 degrades performance by 3 dB.

10 TOI is a typical specification that applies while the network analyzer receiver is in its linear range.

11Trace noise magnitude may be degraded to 20 mdB rms at harmonic frequencies of the first IF (8.33 MHz) below 80 MHz.

12Stability is defined as a ratio measurement made at the test port.


Table 13. Dynamic Accuracy (Specification^a)

Accuracy of the test port input power reading relative to the reference input power level.


Note: If power is set above the maximum specified leveled power, the test port output signal may show non-linear effects that are dependent on the DUT

Dynamic Accuracy, 0.045 GHz

Magnitude

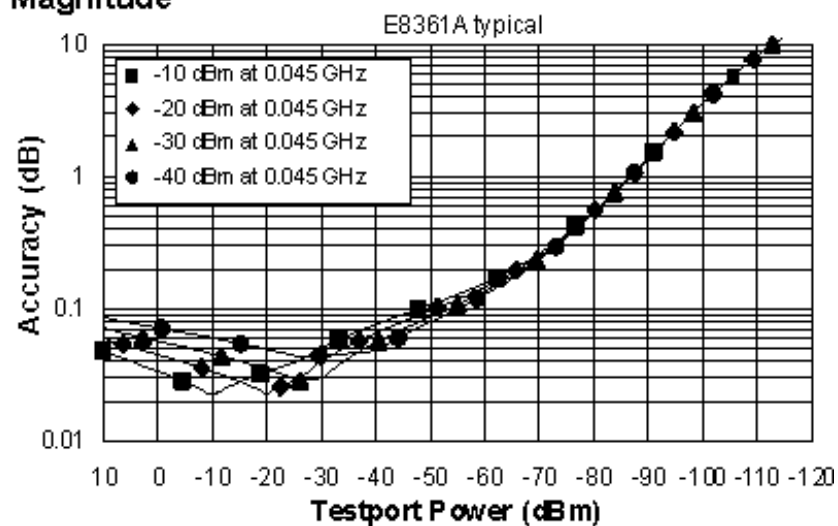


Phase

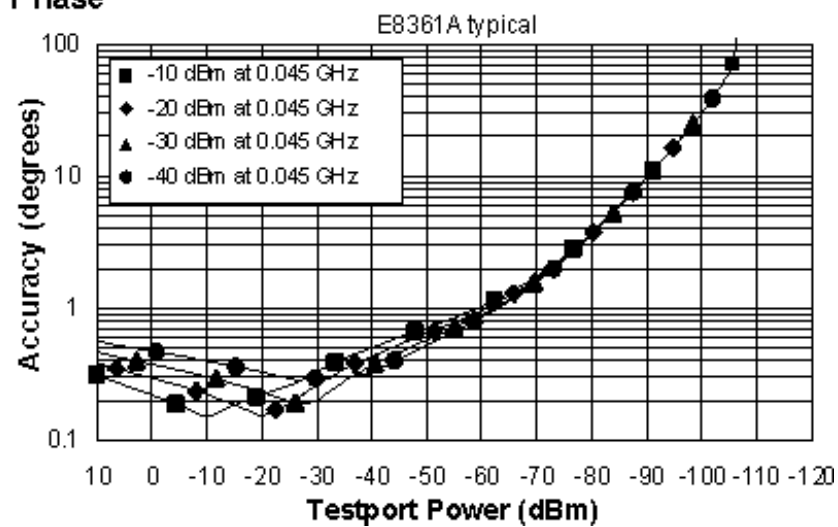


Dynamic Accuracy, 0.500 GHz


Magnitude

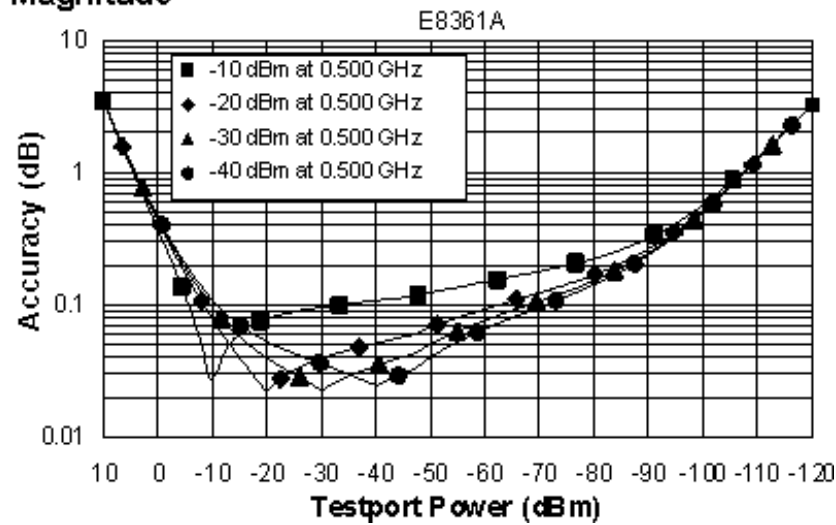


Phase

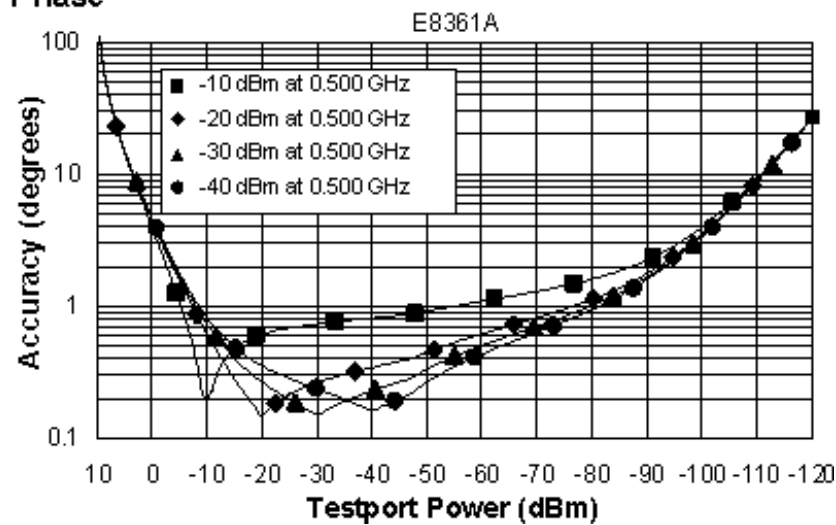


Magnitude

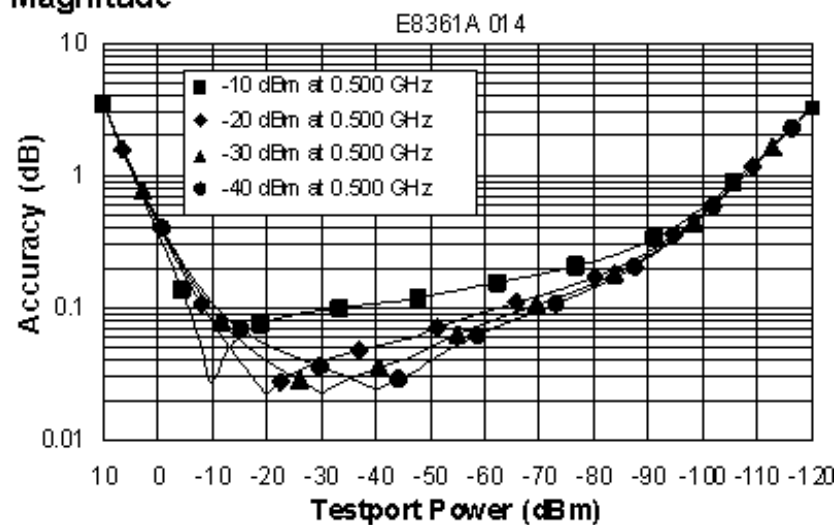


Phase

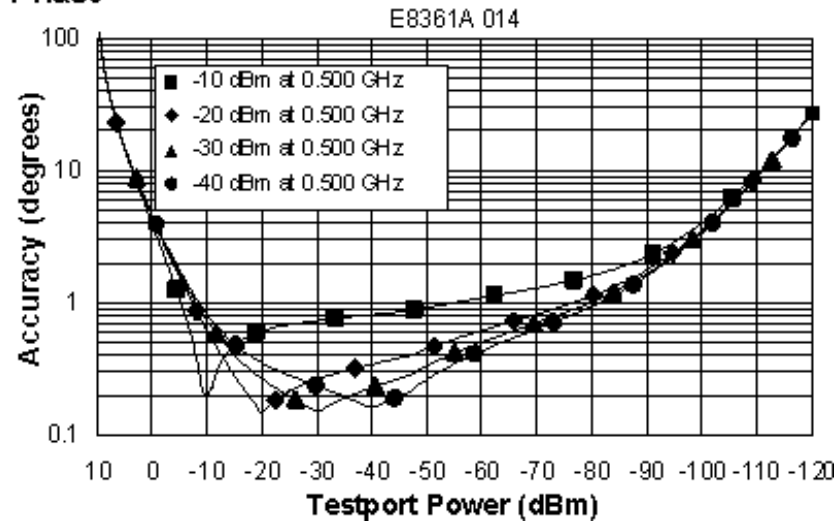


Magnitude

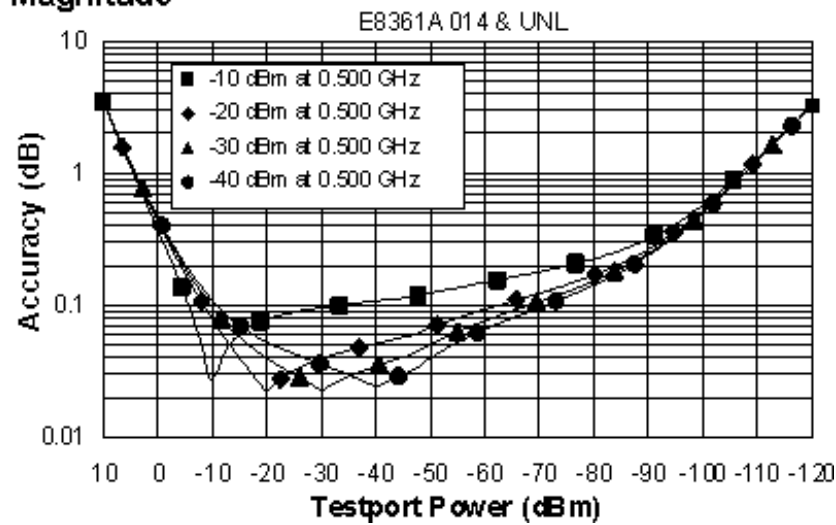


Phase

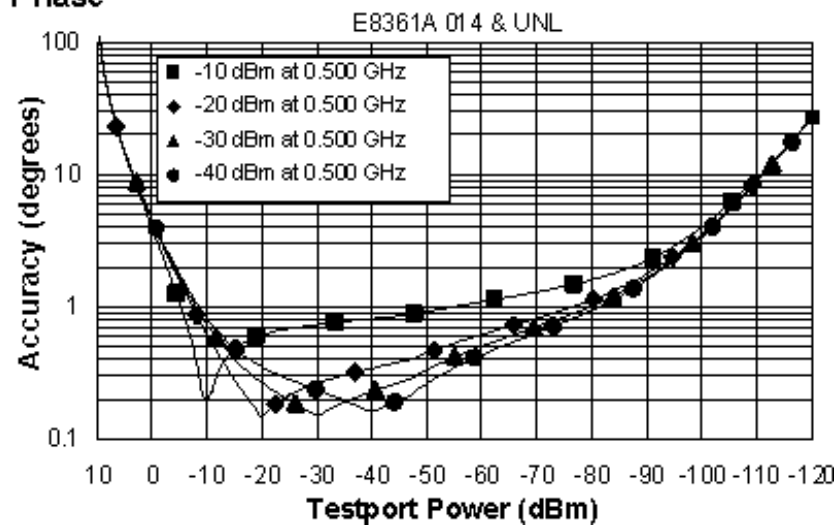

Magnitude

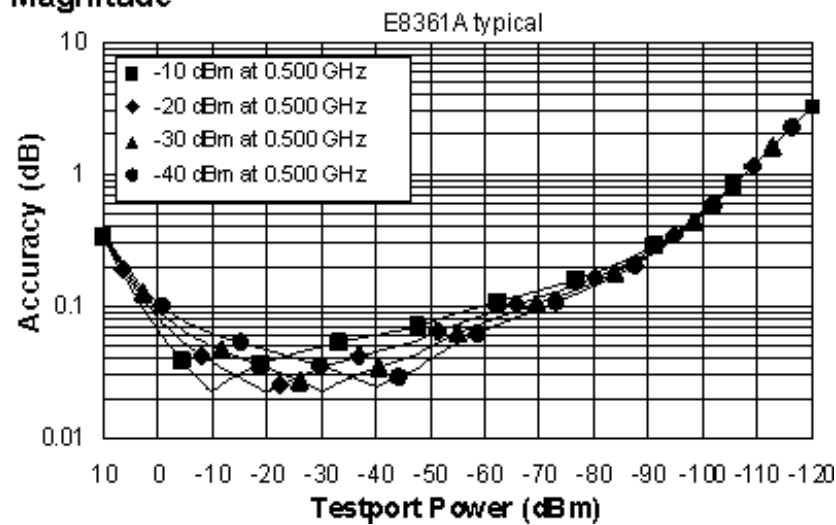


Phase

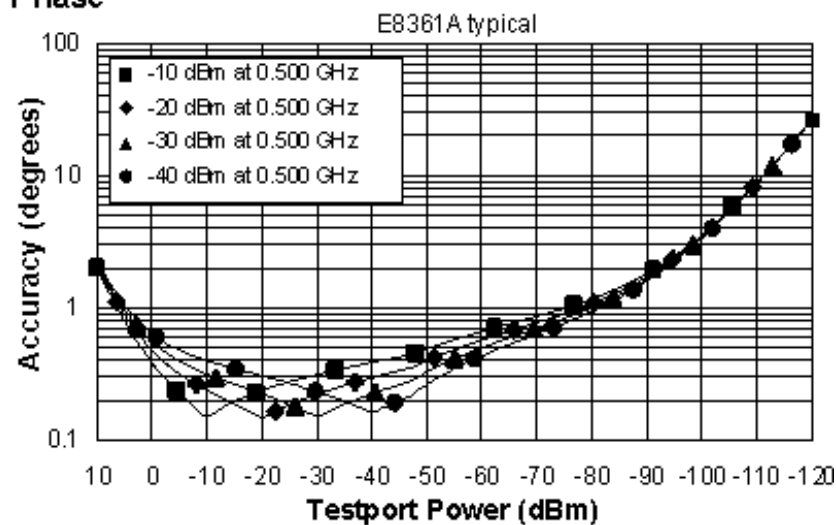


Dynamic Accuracy, 0.500 - 5 GHz


Magnitude

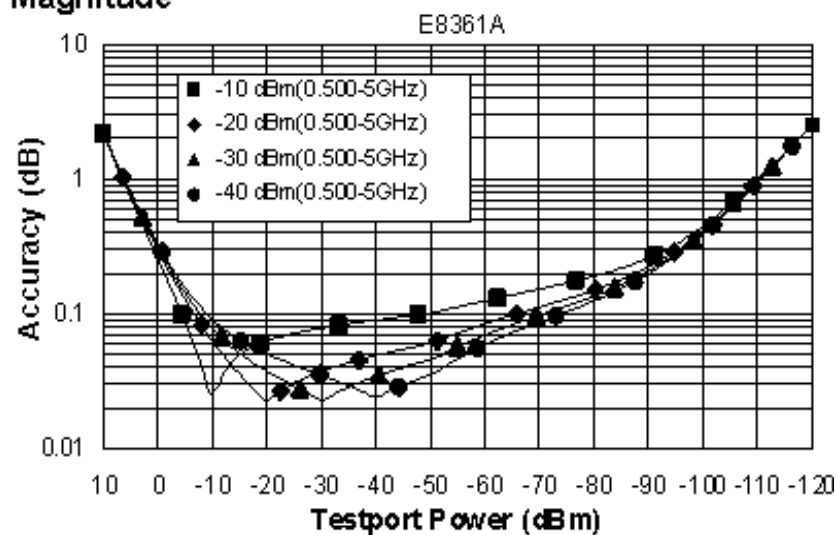


Phase

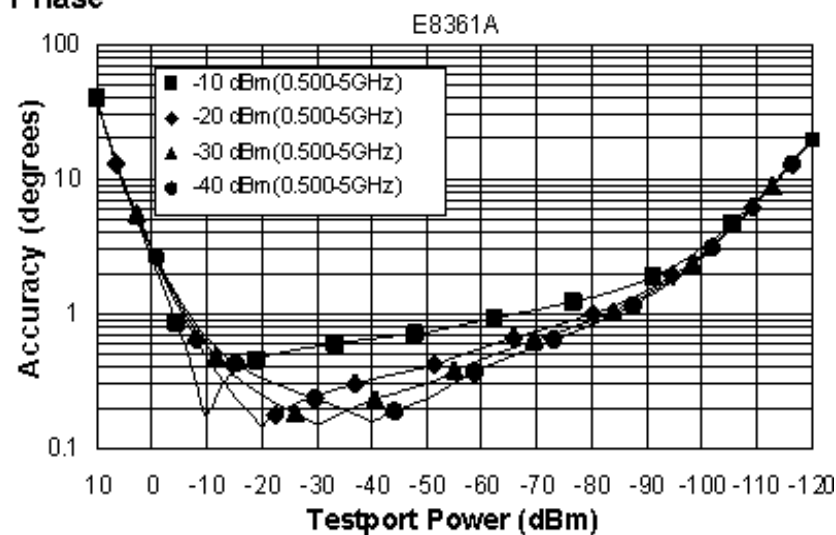


Magnitude

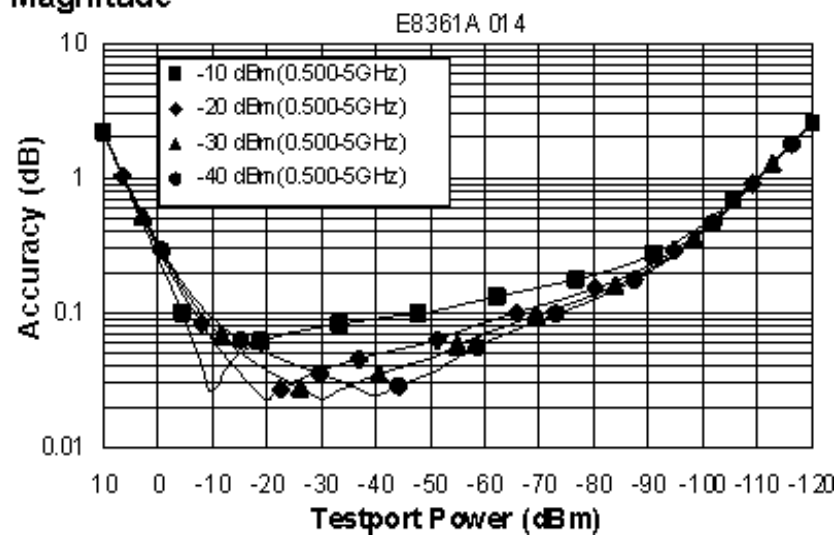


Phase

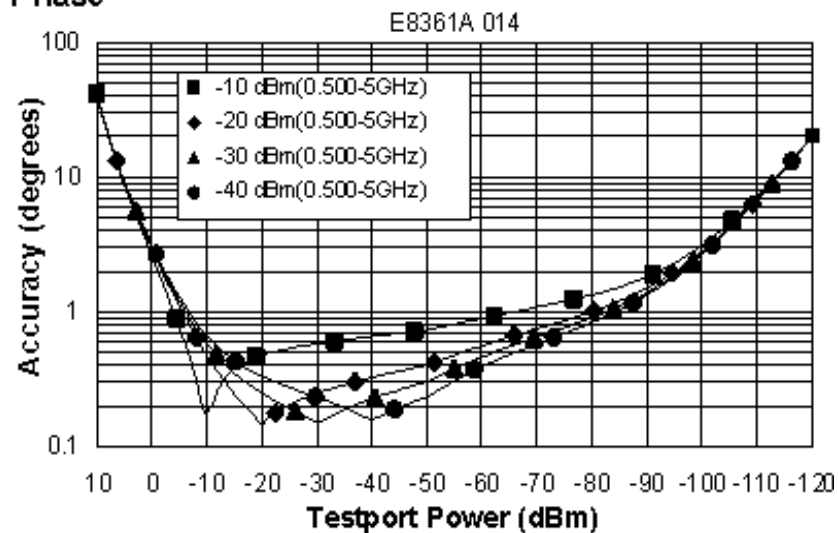


Magnitude

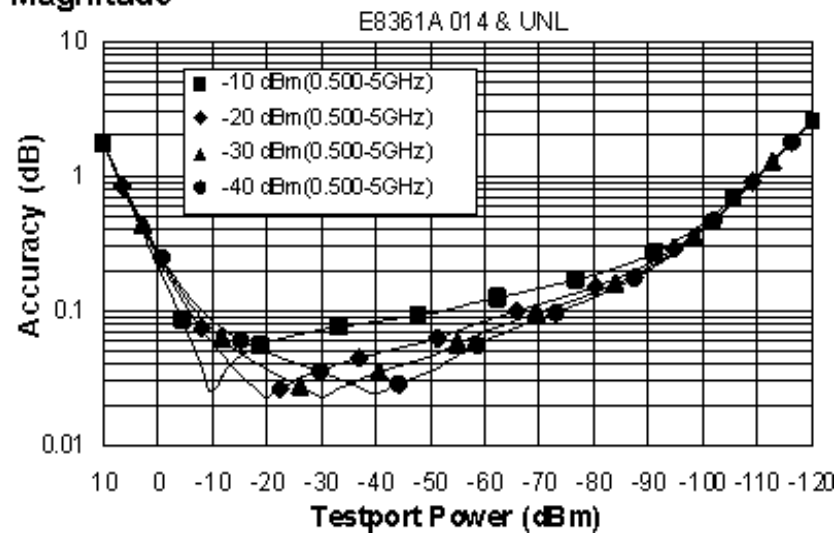


Phase

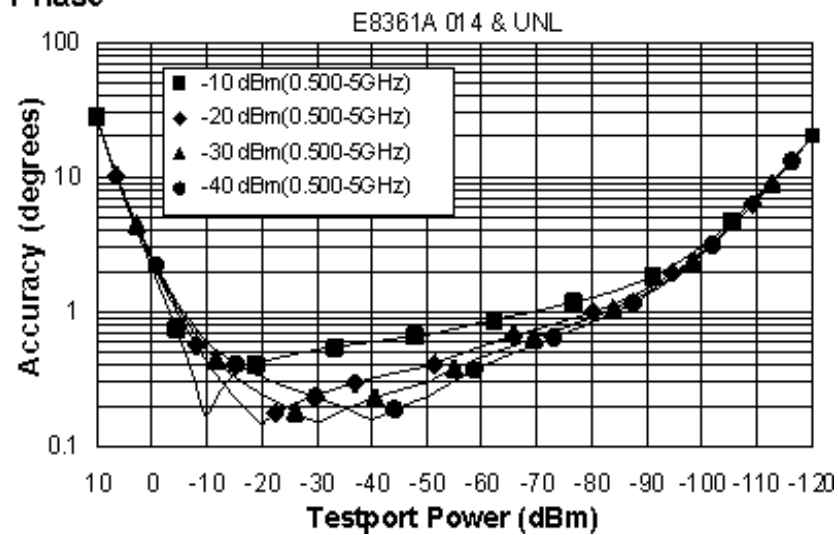

Magnitude

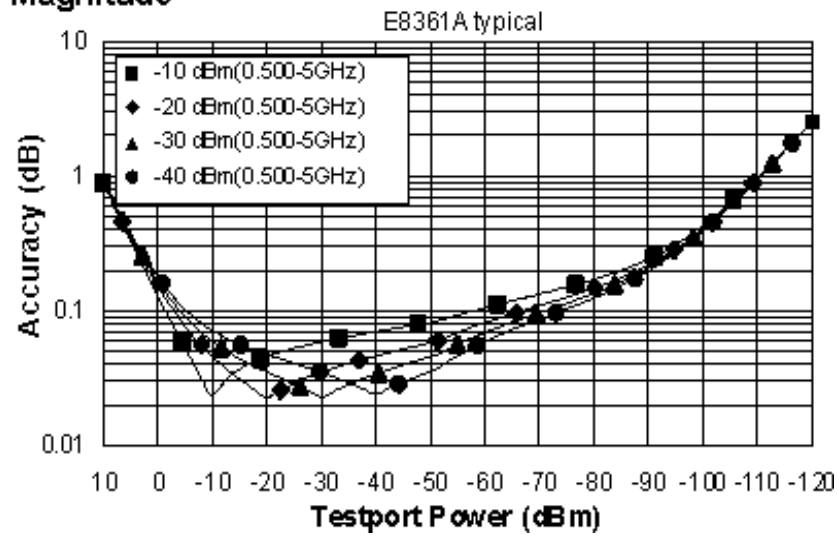


Phase

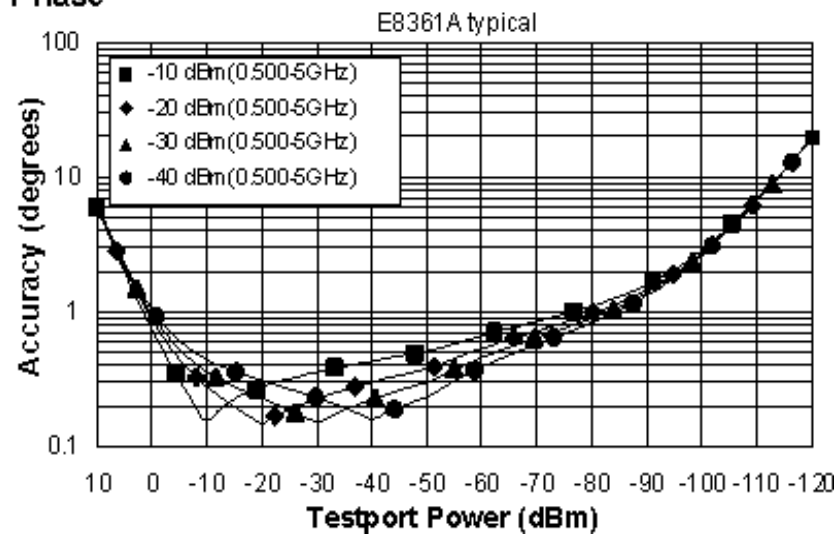


Dynamic Accuracy, 5 - 30 GHz


Magnitude

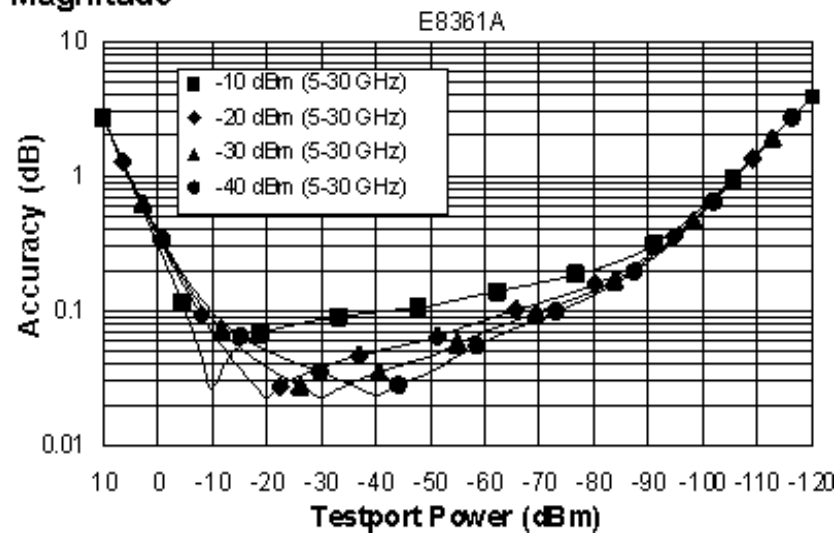


Phase

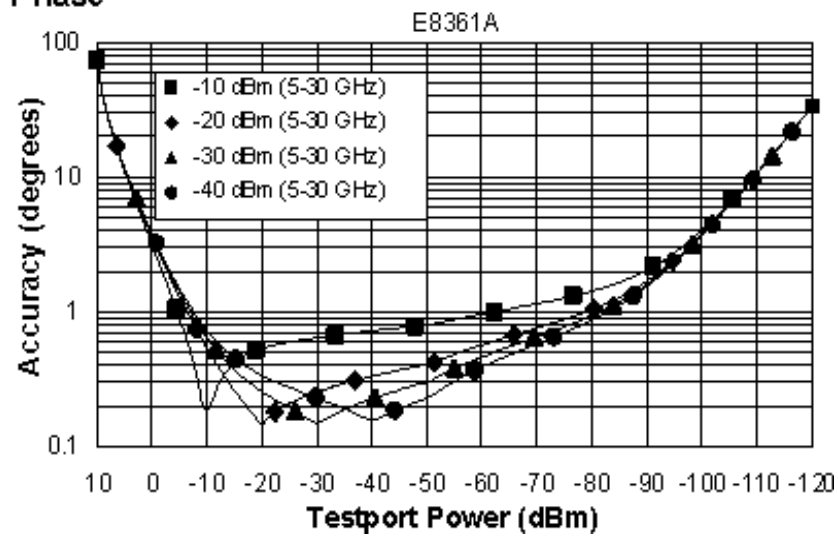


Magnitude

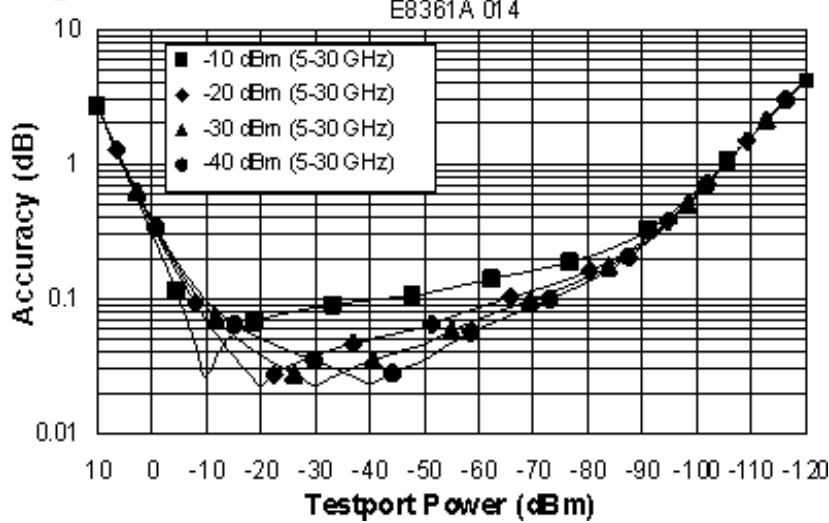


Phase

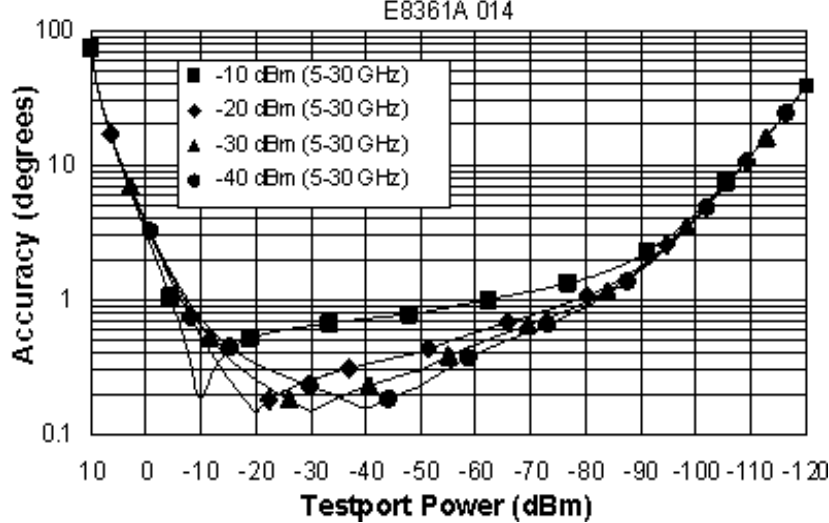


Magnitude

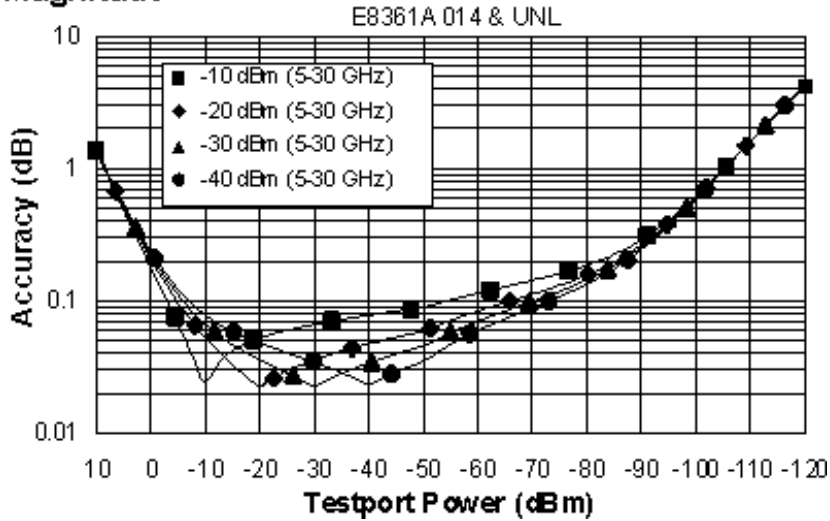


Phase

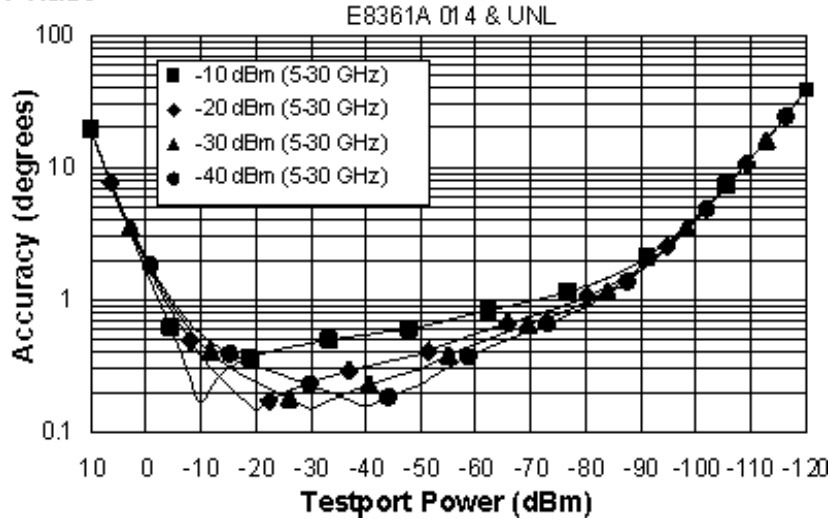

Magnitude

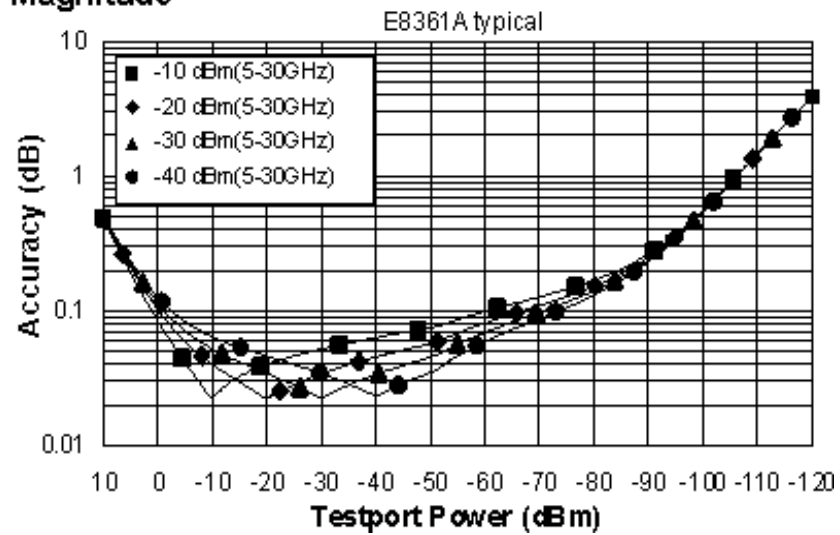


Phase

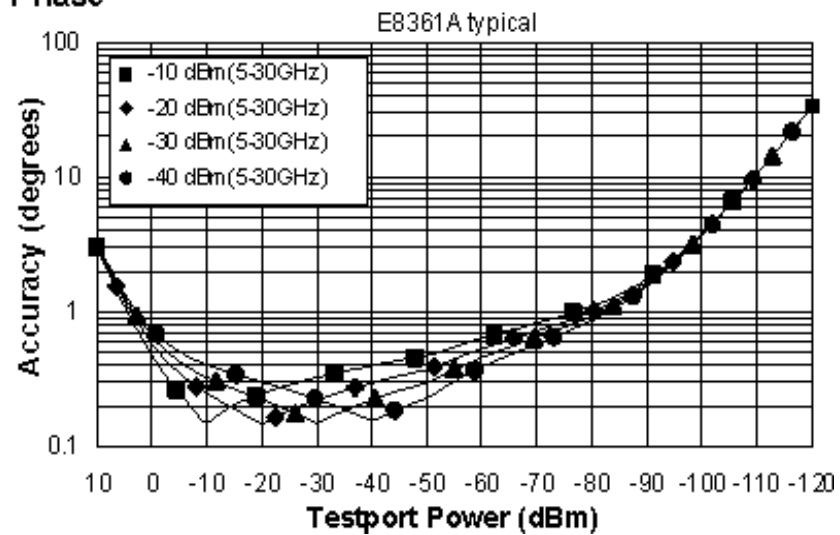


Dynamic Accuracy, 30 - 67 GHz


Magnitude

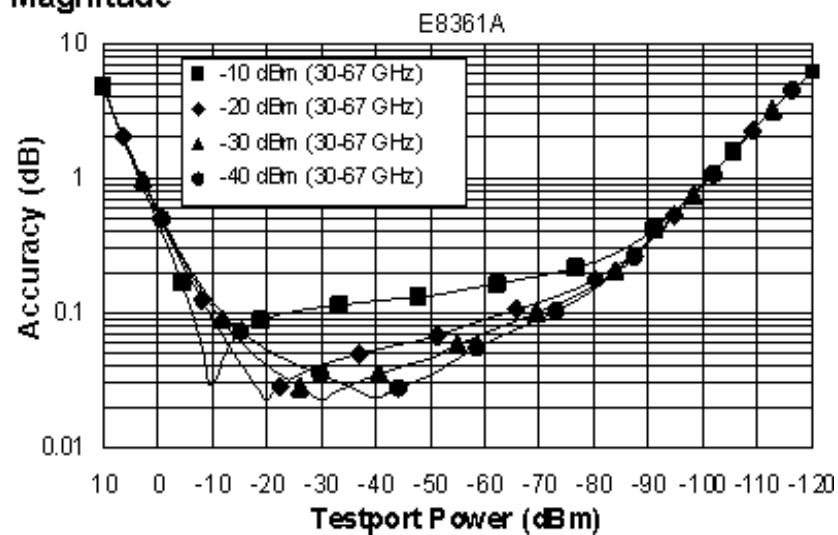


Phase

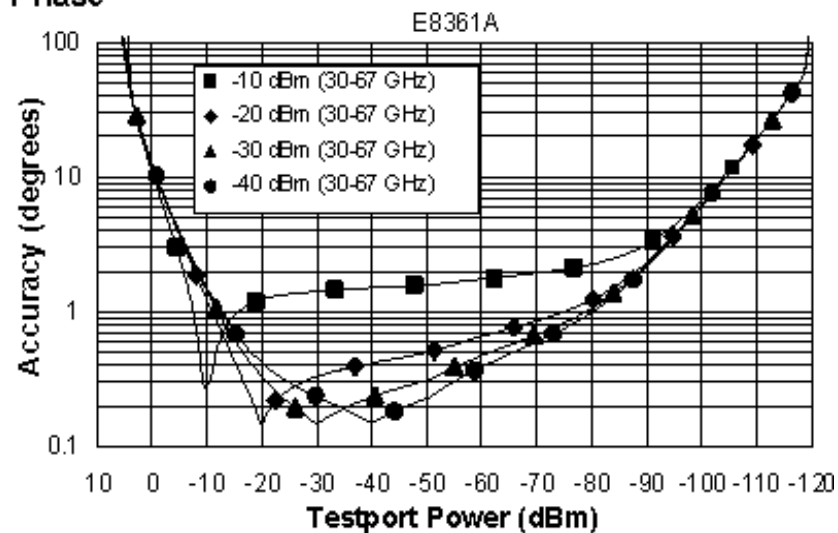


Magnitude

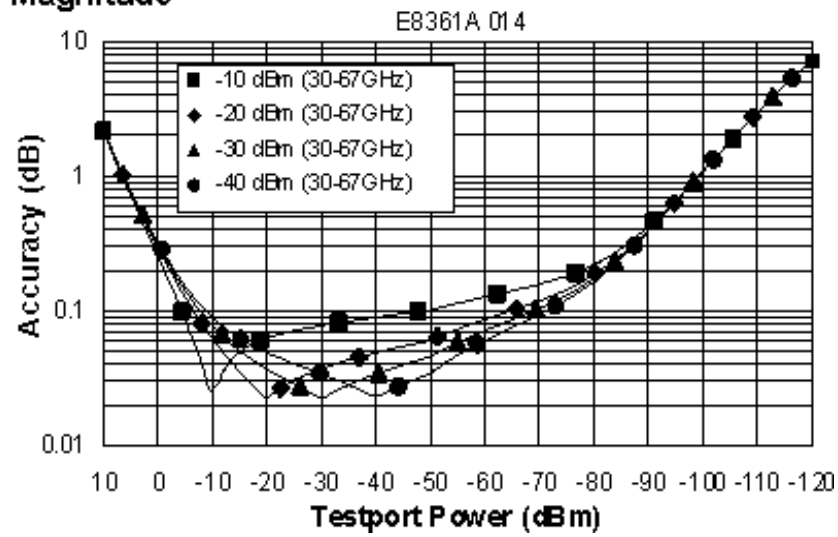


Phase

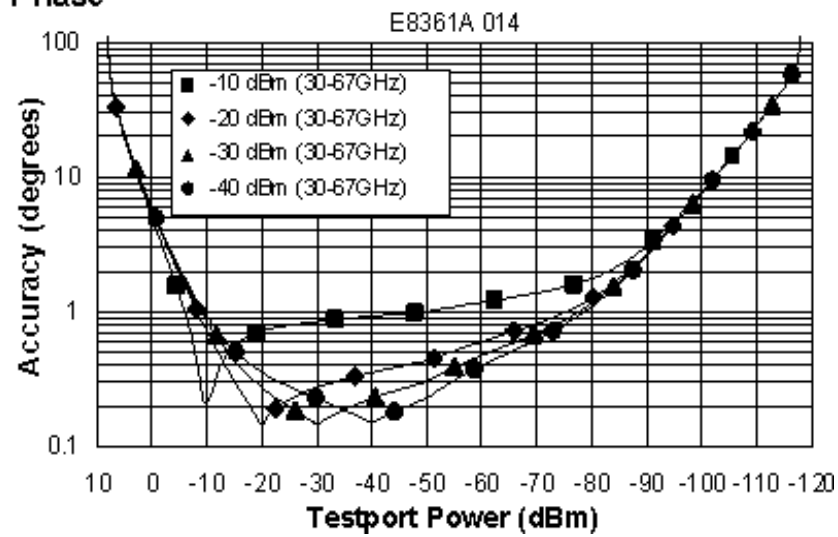


Magnitude

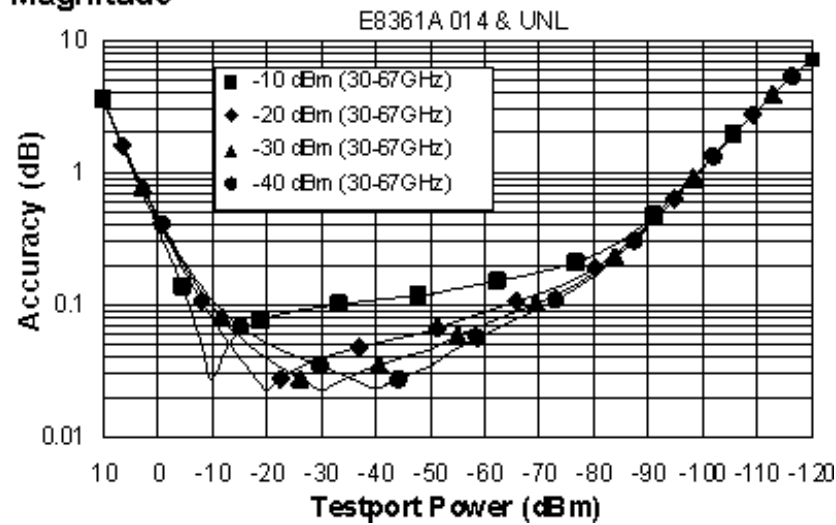


Phase

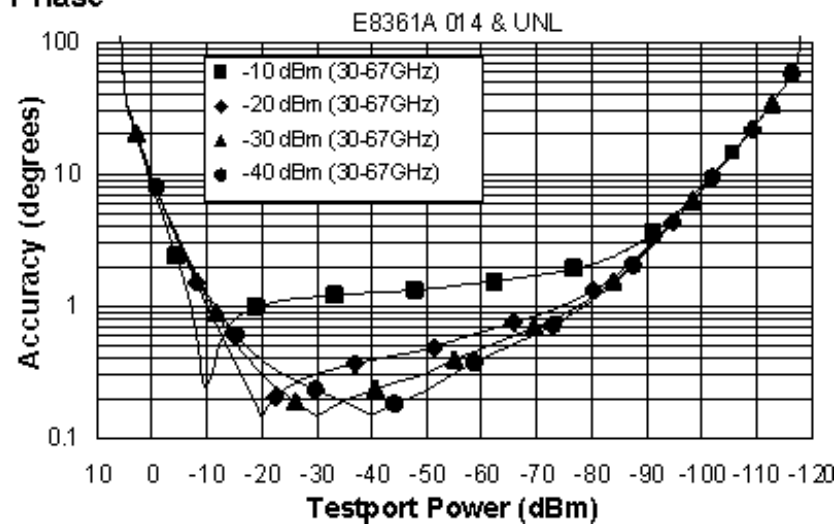

Magnitude

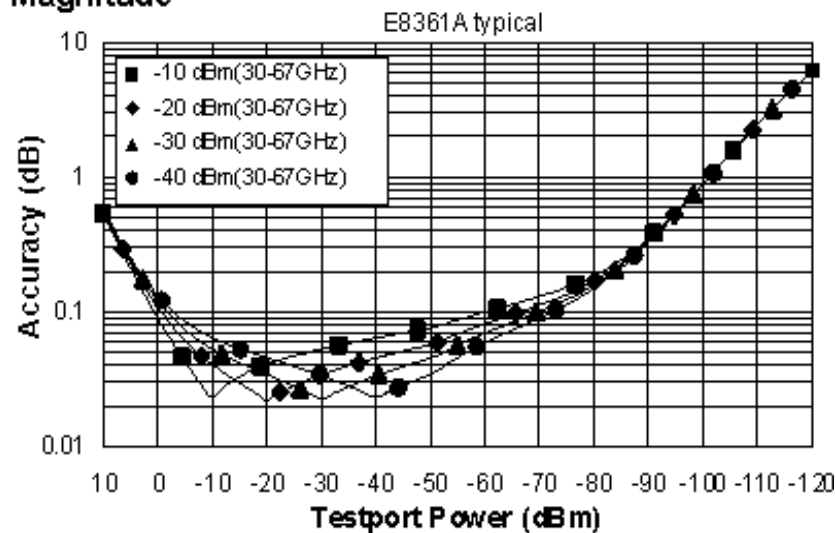


Phase

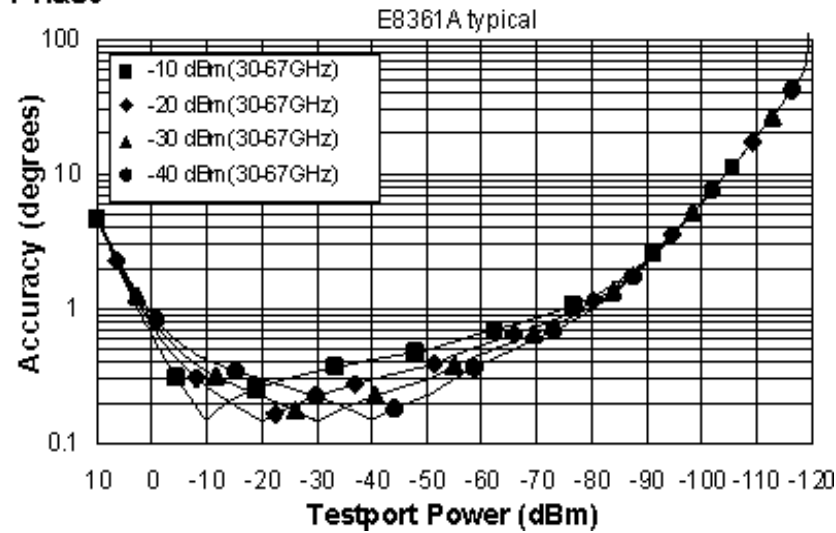


Dynamic Accuracy, 67 - 70 GHz

Magnitude

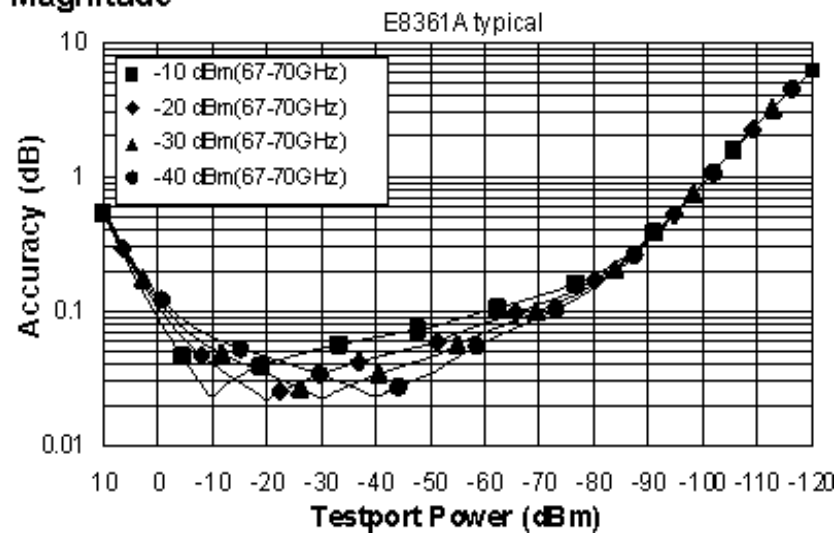

Phase

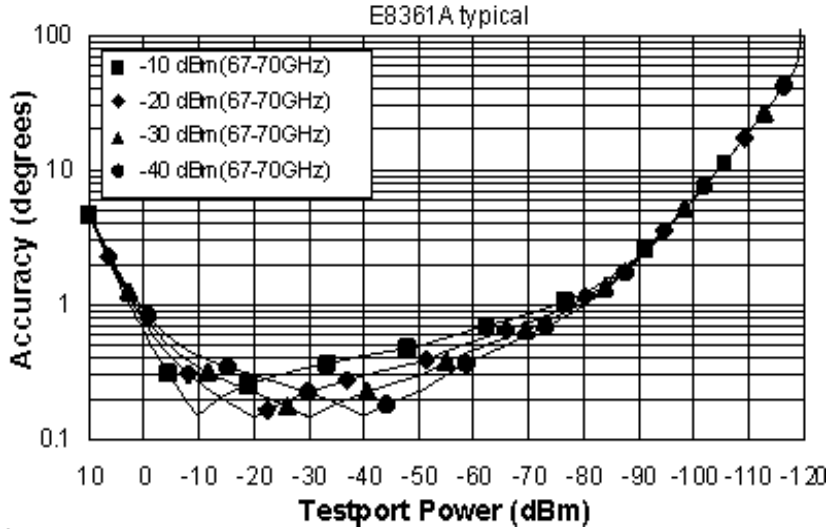

^a Dynamic accuracy is verified with the following measurements:


- compression over frequency
- IF linearity at a single frequency of 1.195 GHz and a reference level of -20 dBm for an input power range of 0 to -120 dBm.

Table 14. Test Port Input (Group Delay)^a

Description	Specification	Supplemental Information (typ.)
Aperture (selectable)	--	(frequency span)/(number of points -1)
Maximum Aperture	--	20% of frequency span
Range	--	0.5 x (1/minimum aperture)
Maximum Delay	--	Limited to measuring no more than 180° of phase change within the minimum aperture.)
Accuracy	--	See graph below. Char.

The following graph shows characteristic group delay accuracy with full 2-port calibration and a 10 Hz IF bandwidth. Insertion loss is assumed to be < 2 dB and electrical length to be ten meters.

Group Delay (Typical)

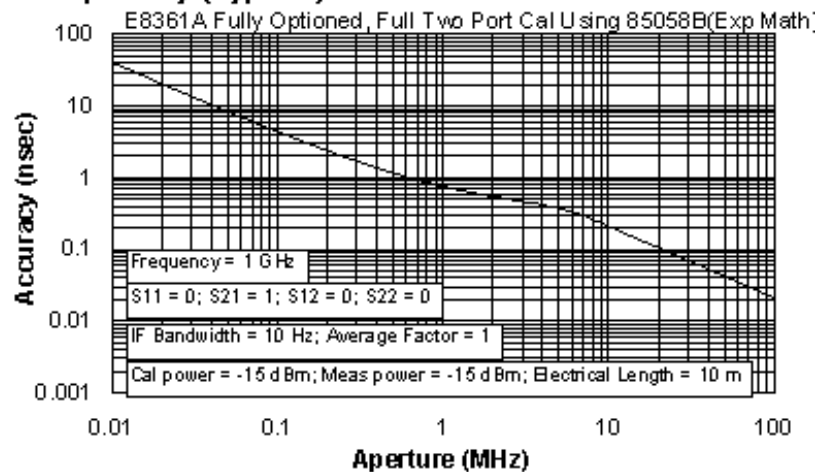

In general, the following formula can be used to determine the accuracy, in seconds, of specific group delay measurement:

$$\pm \text{Phase Accuracy (deg)} / [360 \times \text{Aperture (Hz)}]$$

Depending on the aperture and device length, the phase accuracy used is either incremental phase accuracy or worst case phase accuracy.

^a Group delay is computed by measuring the phase change within a specified frequency step (determined by the frequency span and the number of points per sweep).

General Information

- [Miscellaneous Information](#)
- [Front Panel](#)
- [Rear Panel](#)
- [Environment and Dimensions](#)

Table 15. Miscellaneous Information

Description	Specification	Supplemental Information
System IF Bandwidth Range	--	1 Hz to 40 kHz, nominal
CPU	--	Intel® 1.1 GHz Pentium® M with 1 GByte RAM.

Table 16. Front Panel Information

Description	Supplemental Information
RF Connectors	
E8361A	
Type	1.85 mm (male), 50 ohm, (nominal)
Center Pin Recession	0.002 in. (characteristic)
Display	
Size	21.3 cm (8.4 in) diagonal color active matrix LCD; 640 (horizontal) X 480 (vertical) resolution
Refresh Rate	Vertical 59.83 Hz; Horizontal 31.41 kHz
Pixels	<p>When running the analyzer's built-in Display Test, one or more of the following symptoms indicate a faulty display assembly:</p> <ul style="list-style-type: none"> • A complete row or column of "stuck on" or "dark" pixels. • More than six "stuck on" pixels (but not more than three green) • More than twelve "dark" pixels (but not more than seven of the same color) • Two or more consecutive "stuck on" pixels or three or more consecutive "dark" pixels (but no more than one set of two consecutive "dark" pixels) • "Stuck on" or "dark" pixels less than 6.5 mm apart (excluding consecutive pixels)
Display Range	
Magnitude	±200 dB (at 20 dB/div), max
Phase	±500°, max
Polar	10 pUnits, min 1000 Units, max
Display Resolution	
Magnitude	0.001 dB/div, min
Phase	0.01°/div, min
Marker Resolution	
Magnitude	0.001 dB, min
Phase	0.01°, min
Polar	0.01 mUnit, min; 0.01°, min

Table 17. Rear Panel Information

Description	Supplemental Information
10 MHz Reference In	
Connector	BNC, female
Input Frequency	10 MHz \pm 10 ppm, typical
Input Level	-15 dBm to +20 dBm, typical
Input Impedance	200 Ω , nom.
10 MHz Reference Out	
Connector	BNC, female
Output Frequency	10 MHz \pm 1 ppm, typical
Signal Type	Sine Wave, typical
Output Level	+10 dBm \pm 4 dB into 50 Ω , typical
Output Impedance	50 Ω , nominal
Harmonics	<-40 dBc, typical
Option H08 & H11 Rear Panel Connectors (Typical)	
IF Connectors	A, R1, R2, B (BNC Connectors)
IF Connector Input Frequency	8 1/3 MHz
Nominal Input Impedance at IF Inputs	50 Ω
RF Damage Level to IF Connector Inputs	-20.0 dBm
DC Damage Level to IF Connector Inputs	25 volts
0.1 dB Compression Point at IF Inputs	-27.0 dBm
Pulse Input Connectors ¹	A, R1, R2, B (BNC Connectors)
Nominal Input Impedance at Pulse Inputs	1 Kohm

Minimum IF Gate Width	20 ns for less than 1 dB deviation from theoretical performance ² .
DC Damage Level to Pulse Connector Inputs	5.5 volts
Drive Voltage	TTL (0, +5.0) Volts
Rear Panel LO Power - Test Port Frequency	
1.7 GHz to 20 GHz	-7 to -16 dBm
Rear Panel RF Power - Test Port Frequencies	
1.7 GHz to 20 GHz	-2 to -12 dBm (at -5 dBm test port power ³)
10 GHz to 16 GHz	0 to -8 dBm (at -5 dBm test port power ³)
16 GHz to 20 GHz	+5 to -1 dBm (at -5 dBm test port power ³)
VGA Video Output	
Connector	15-pin mini D-Sub; Drives VGA compatible monitors
Devices Supported:	
	Resolutions:
Flat Panel (TFT)	1024 X 768, 800 X 600, 640 X 480
Flat Panel (DSTN)	800 X 600, 640 X 480
CRT Monitor	1280 X 1024, 1024 X 768, 800 X 600, 640 X 480
	Simultaneous operation of the internal and external displays is allowed, but with 640 X 480 resolution only. If you change resolution, you can only view the external display (internal display will "white out").
Bias Input Connectors (Option UNL)	
Bias current	500 mA, maximum
Bias voltage	40 Volts, maximum
Test Set IO	
	25-pin D-Sub connector, available for external test set control
Aux IO	

	25-pin D-Sub connector, male, analog and digital IO
Handler IO	
	36-pin parallel I/O port; all input/output signals are default set to negative logic; can be reset to positive logic via GPIB command
GPIB	
	24-pin D-sub (Type D-24), female; compatible with IEEE-488.
Parallel Port (LPT1)	
	25-pin D-Sub miniature connector, female; provides connection to printers or any other parallel port peripherals
Serial Port (COM 1)	
	9-pin D-Sub, male; compatible with RS-232
USB Port	
	One port on front panel and five ports on rear panel. Universal Serial Bus jack, Type A configuration (4 contacts inline, contact 1 on left); female
Contact 1	Vcc: 4.75 to 5.25 VDC, 500 mA, maximum
Contact 2	-Data
Contact 3	+Data
Contact 4	Ground
LAN	
	10/100BaseT Ethernet, 8-pin configuration; auto selects between the two data rates
Line Power	
Frequency, Voltage	50/60/400 Hz for 100 -120 V 50/60 Hz for 220 - 240 V Power supply is auto switching
Max	350 Watts

1 Pulse input connectors are operational only with Option H08 (Pulse Measurement Capability) enabled.

2 Based on deviation from signal reduction equation: $\text{Signal Reduction (dB)} = 20\log_{10}(\text{Duty_cycle}) = 20\log_{10}(\text{pulse_width/period})$. Measured at Pulse Repetition Frequency (PFR) of 1 MHz.

3 Test port power has to be at a high enough level such that the Drop Cal does not occur. If Drop Cal occurs then the power out of the rear panel RF connector will drop by about 15 dB.

Table 18. Analyzer Dimensions and Weight

Description	Supplemental Information		
Cabinet Dimensions			
	Height	Width	Depth
Excluding front and rear panel hardware and feet	267 mm 10.5 in	426 mm 16.75 in	427 mm 16.8 in
As shipped - includes front panel connectors, rear panel bumpers, and feet.	280 mm 11.0 in	435 mm 17.1 in	470 mm 18.5 in
As shipped plus handles	280 mm 11.0 in	458 mm 18 in	501 mm 19.7 in
As shipped plus rack-mount flanges	280 mm 11.0 in	483 mm 19 in	470 mm 18.5 in
As shipped plus handles and rack-mount flanges	280 mm 11.0 in	483 mm 19 in	501 mm 19.70 in
Weight			
Net			
E8361A	29 kg (64 lb), nominal		
Shipping			
E8361A	36.3 kg (80 lb), nominal		

Note: For Regulatory and Environmental information, refer to the PNA Series Installation and Quick Start Guide, located at <http://cp.literature.agilent.com/litweb/pdf/E8356-90001.pdf>.

Measurement Throughput Summary

- [Typical Cycle Time for Measurement Completion](#)
- [Cycle Time vs IF Bandwidth](#)
- [Cycle Time vs Number of Points](#)
- [Data Transfer Time](#)

Table 19 Typical Cycle Time^{a,b} (ms) for Measurement Completion

	Number of Points			
	201	401	1601	16,001
Start 28 GHz, Stop 30 GHz, 35 kHz IF bandwidth				
Uncorrected, 1-port cal	12	19	55	503
2-Port cal	29	44	124	1112
Start 10 MHz, Stop 10 GHz, 35 kHz IF bandwidth				
Uncorrected, 1-port cal	86	93	121	583
2-Port cal	179	199	267	1301
Start 10 MHz, Stop 20 GHz, 35 kHz IF bandwidth				
Uncorrected, 1-port cal	126	130	153	597
2-Port cal	264	275	335	1321
Start 10 MHz, Stop 40 GHz, 35 kHz IF bandwidth				
Uncorrected, 1-port cal	185	190	213	621
2-Port cal	382	401	459	1374
Start 10 MHz, Stop 50 GHz, 35 kHz IF bandwidth				
Uncorrected, 1-port cal	210	216	243	643
2-Port cal	436	450	522	1405
Start 10 MHz, Stop 67 GHz, 35 kHz IF bandwidth				
Uncorrected 1-port cal	244	254	300	645
2-Port cal	502	524	591	1423

a Typical performance.

b Includes sweep time, retrace time and band-crossing time. Analyzer display turned off with DISPLAY:ENABLE OFF. Add 21 ms for display on. Data for one trace (S11) measurement.

Table 20. Cycle Time vs IF Bandwidth^a

Applies to the [Preset condition](#) (201 points, correction off) except for the following changes:

- CF = 28 GHz
- Span = 100 MHz
- Display off (add 21 ms for display on)

IF Bandwidth (Hz)	Cycle Time (ms) ^b	Cycle Time (ms) Option 080 enabled
40,000	11	100
35,000	12	101
30,000	13	102
20,000	16	106
10,000	30	127
7000	38	138
5000	50	152
3000	74	182
1000	274	326
300	694	782
100	1905	2054
30	6091	6355
10	17916	18372

^a Typical performance.

^b Cycle time includes sweep and retrace time.

Table 21. Cycle Time vs Number of Points^a

Applies to the [Preset condition](#) (35 kHz IF bandwidth, correction off) except for the following changes:

- CF = 28 GHz
- Span = 100 MHz
- Display off (add 21 ms for display on)

Number of Points	Cycle Time (ms) ^b
3	6
11	6
51	7
101	9
201	12
401	18
801	30
1601	55
16,001	497

a Typical performance.

b Cycle time includes sweep and retrace time.

Table 22. Data Transfer Time (ms)^a


	Number of Points			
	201	401	1601	16,001
SCPI over GPIB				
(program executed on external PC)				
32-bit floating point	7	12	43	435
64-bit floating point	12	22	84	856
ASCII	64	124	489	5054
SCPI (program executed in the analyzer)				
32-bit floating point	1	2	3	30
64-bit floating point	2	2	4	40
ASCII	29	56	222	2220
COM (program executed in the analyzer)				
32-bit floating point	<0.4	0.4	0.5	1.9
Variant type	0.7	1	3	32
DCOM over LAN (program executed on external PC)				
32-bit floating point	<0.8	1	1.5	7.1

Variant type	1.8	2.7	8.5	80
--------------	-----	-----	-----	----


a Typical performance

Test Set Block Diagrams

E8361A - Standard Configuration and Standard Power Range

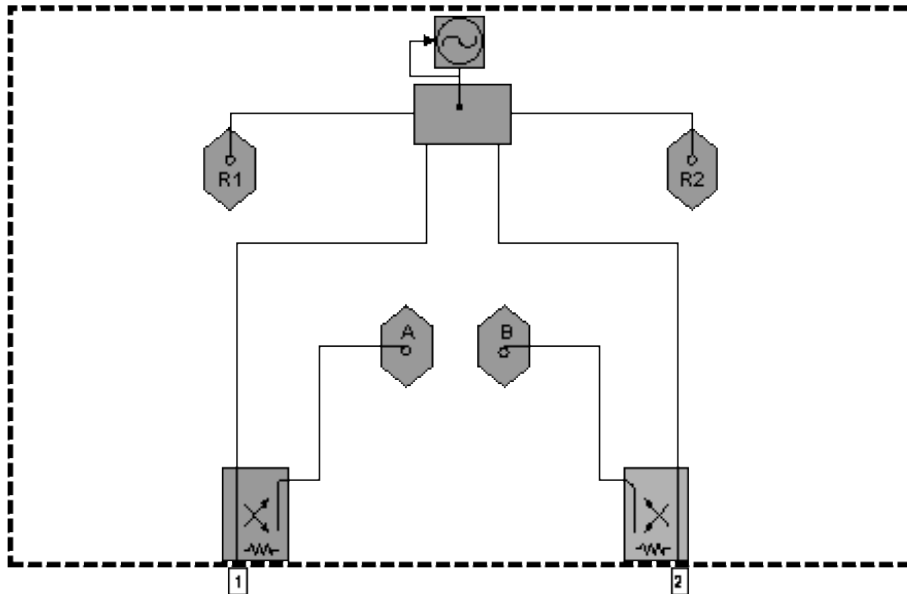


E8361A - Option UNL Standard Configuration with Extended Power Range and Bias - Tees

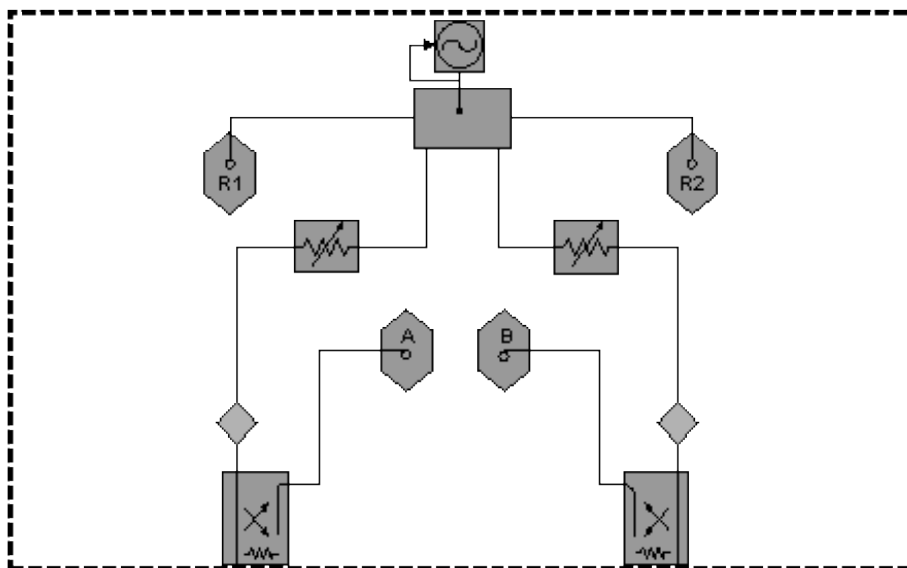

1


2

E8361A - Option UNL Standard Configuration with Extended Power Range and Bias - Tees, and Option 016, Receiver Attenuators

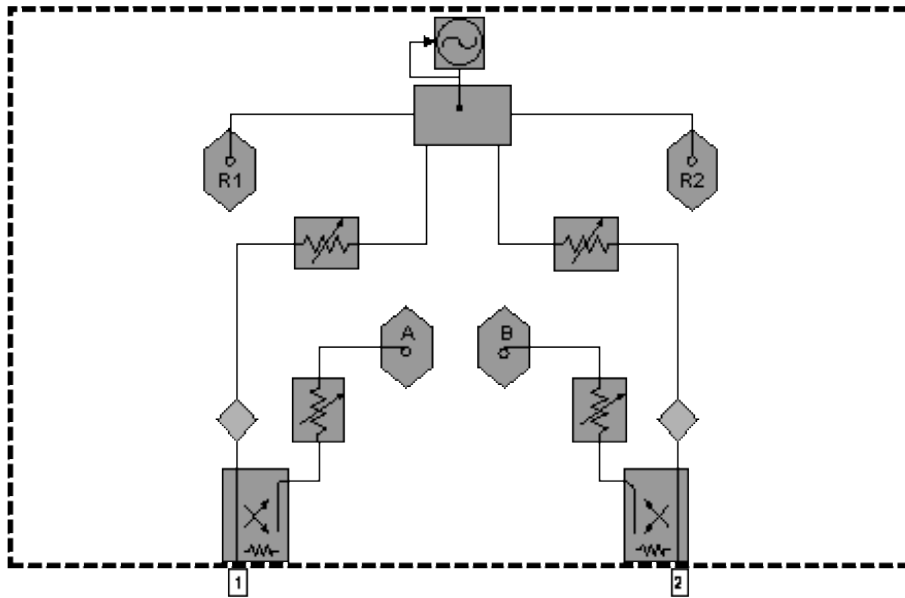

Test Set with Option 014 Block Diagrams


E8361A - Option 014 – Configurable Test Set and Standard Power Range

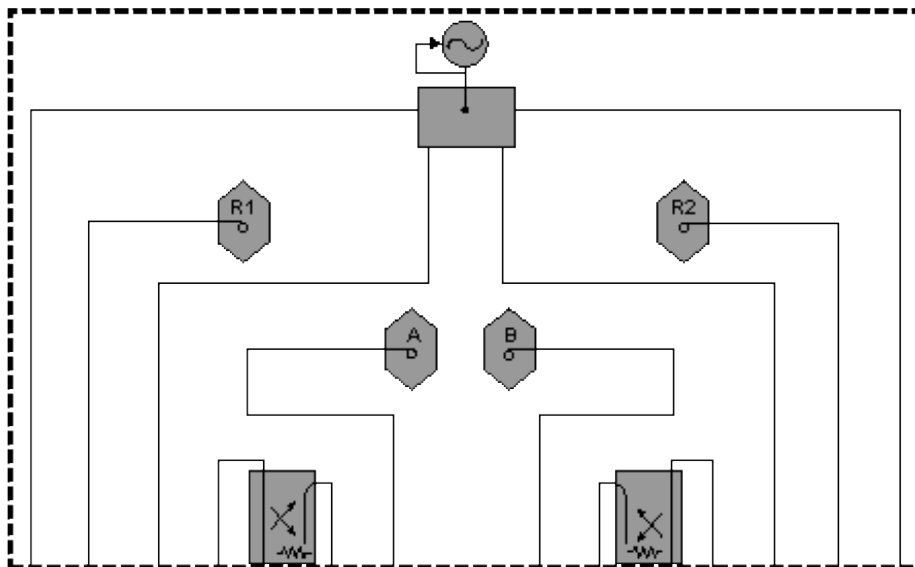




Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

E8361A - Option 014 – Configurable Test Set and Standard Power Range, and Option 081 Reference Channel Transfer Switch

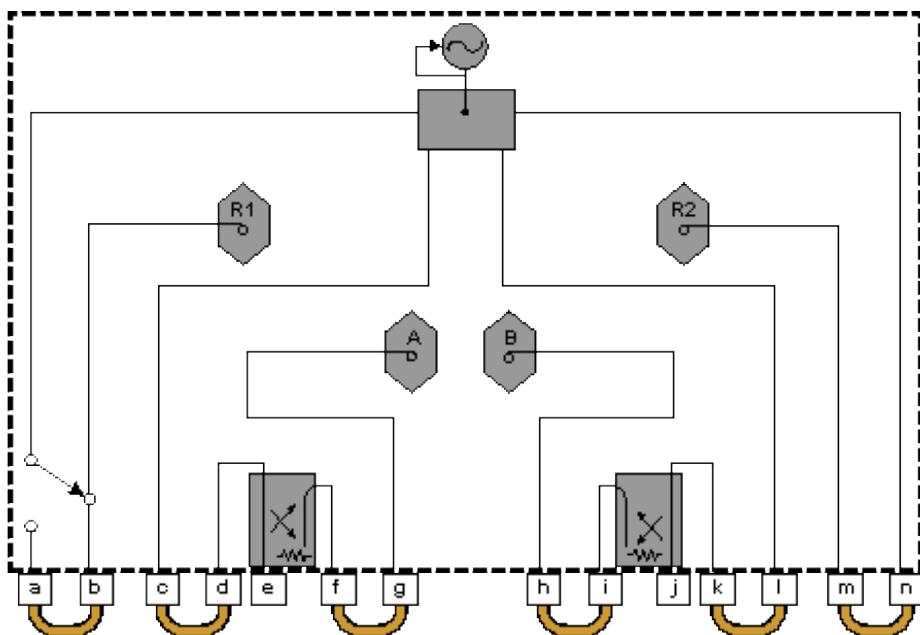


Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

E8361A - Option 014 Configurable Test Set, and Option UNL Extended Power Range and Bias - Tees

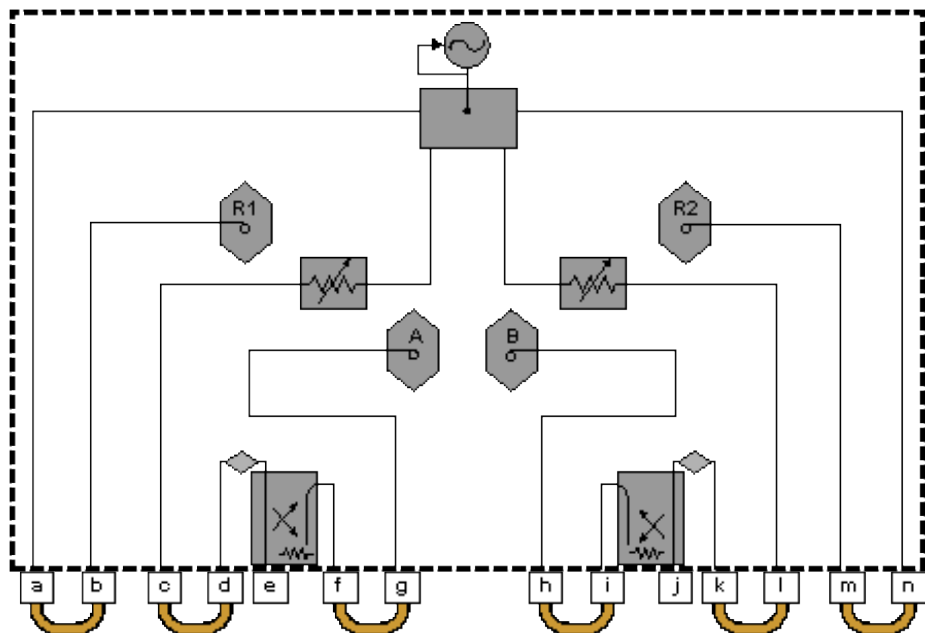


Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

E8361A - Option 014 Configurable Test Set, and Option UNL Extended Power Range and Bias - Tees, and Option 081 Reference Channel Transfer Switch

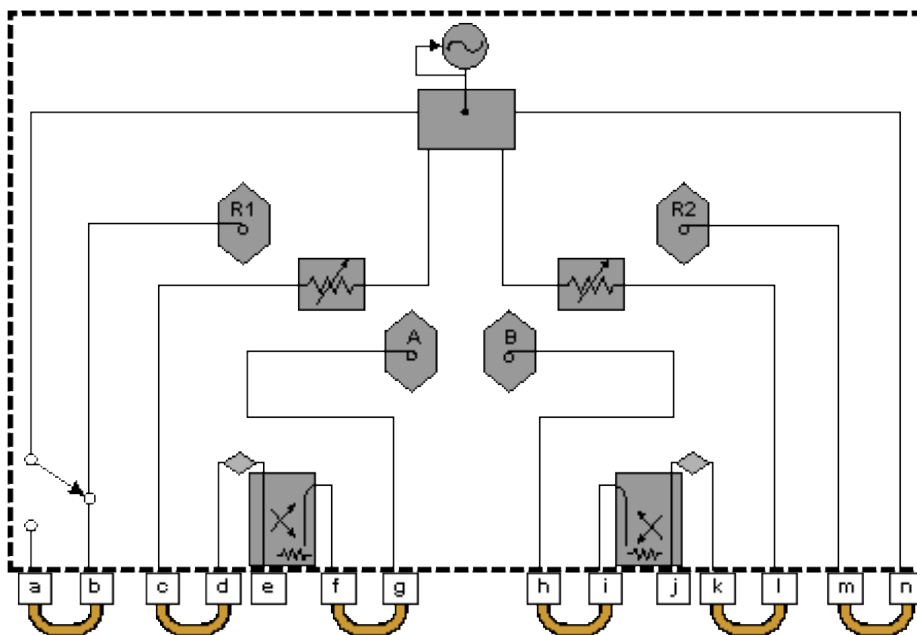


Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

E8361A - Option 014 Configurable Test Set and Option UNL, Extended Power Range and Bias - Tees and Option 016 Receiver Attenuators

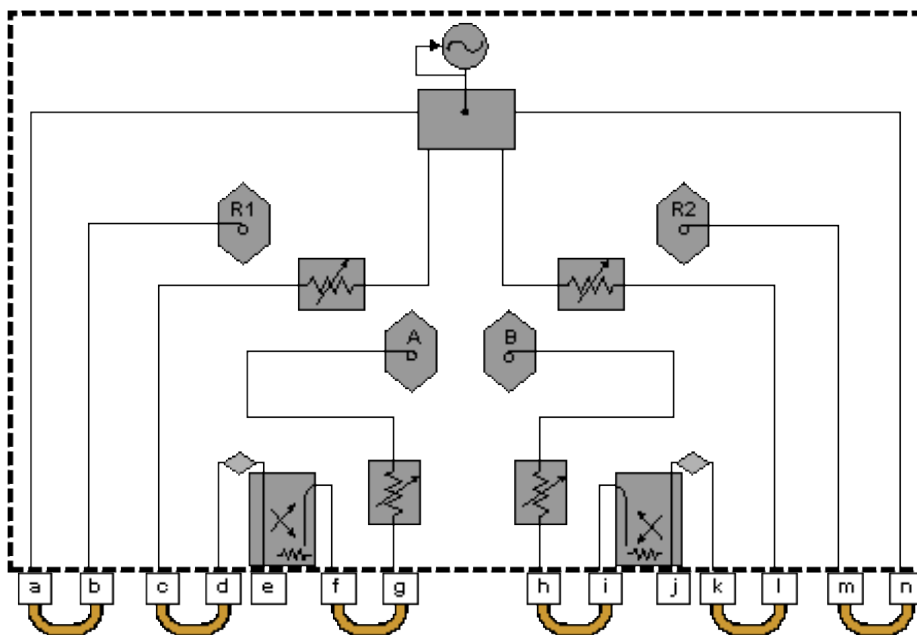

Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

E8361A - Option 014 Configurable Test Set, and Option UNL Extended Power Range and Bias - Tees, and Option 016 Receiver Attenuators, and Option 081 Reference Channel Transfer Switch

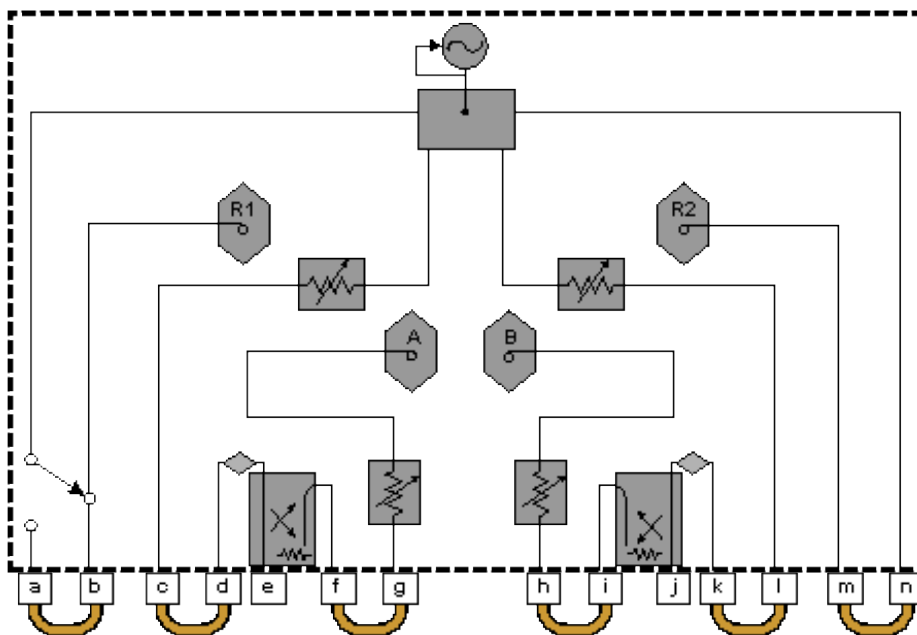

Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

Last modified:

Jan. 10, 2007 Revised line power, and CPU values; moved regulatory, operating, and non-operating info to the I&QS Guide.

Oct. 05, 2006 Added 350W typical to line power

July 10, 2006 Previous revision

Technical Specifications for the E8362A, E8363A, E8364A

Because the E8362A, E8363A, and E8364A network analyzer is no longer produced, the technical specifications are stored only on the Internet. To view or print the .pdf version of the specifications, visit our web site at <http://www.agilent.com/find/pna>, and search for "E836xA Specifications"

The uncertainty curves contained in this document apply only to the setup conditions listed. Please download our free Uncertainty Calculator from http://www.agilent.com/find/na_calculator to generate the curves for your PNA setup. View the [equations](#) used to generate the uncertainty curves.

Technical Specifications for the E8362B, E8363B, E8364B

(Rev. 2007-10-11)

This is a complete list of the E8362B, E8363B, and E8364B network analyzer technical specifications.

- To optimize viewing of uncertainty curves, click the Maximize button.
- To view or print the .pdf version of the specifications, visit our web site at <http://www.agilent.com/find/pna>, and search for "E836xB Specifications"
- The uncertainty curves contained in this document apply only to the setup conditions listed. Please download our free Uncertainty Calculator from http://www.agilent.com/find/na_calculator to generate the curves for your PNA setup. View the [equations](#) used to generate the uncertainty curves.

■ [Definitions](#)

■ [Corrected System Performance](#)

- [System Dynamic Range](#)
- [Receiver Dynamic Range](#)
- [2.4mm Connectors](#)
- [2.92mm Connectors](#)
- [3.5mm Connectors](#)
- [7mm Connectors](#)
- [Type-N Connectors](#)
- [WR-28 Connectors](#)
- [WR-42 Connectors](#)
- [WR-62 Connectors](#)
- [WR-90 Connectors](#)

■ [Uncorrected System Performance](#)

- [Test Port Output](#)
- [Test Port Input](#)
- [Dynamic Accuracy](#)
- [Group Delay](#)

- [General Information](#)
- [Measurement Throughput Summary](#)
- [Front-panel Jumper Specs \(Option 014 only\)](#)
- [Test Set Block Diagrams](#)
- [Test Set with Option 014 Block Diagrams](#)

See [Specs for other PNA models](#)

Definitions

All specifications and characteristics apply over a 25 °C \pm 5 °C range (unless otherwise stated) and 90 minutes after the instrument has been turned on.

Specification (spec.): Warranted performance. Specifications include guardbands to account for the expected statistical performance distribution, measurement uncertainties, and changes in performance due to environmental conditions.

Characteristic (char.): A performance parameter that the product is expected to meet before it leaves the factory, but that is not verified in the field and is not covered by the product warranty. A characteristic includes the same guardbands as a specification.

Typical (typ.): Expected performance of an average unit which does not include guardbands. It is not covered by the product warranty.

Nominal (nom.): A general, descriptive term that does not imply a level of performance. It is not covered by the product warranty.

Calibration: The process of measuring known standards to characterize a network analyzer's systematic (repeatable) errors.

Corrected (residual): Indicates performance after [error correction](#) (calibration). It is determined by the quality of calibration standards and how well "known" they are, plus system repeatability, stability, and noise.

Uncorrected (raw): Indicates instrument performance without error correction. The uncorrected performance affects the stability of a [calibration](#).

Standard: When referring to the analyzer, this includes no options unless noted otherwise.

Corrected System Performance

The specifications in this section apply for measurements made with the E836xB analyzer with the following conditions:

- 10 Hz IF bandwidth
- No averaging applied to data
- Isolation calibration with an averaging factor of 8

- [System Dynamic Range](#)

- [Receiver Dynamic Range](#)
- [2.4mm Connectors](#)
- [2.92mm Connectors](#)
- [3.5mm Connectors](#)
- [7mm-Connectors](#)
- [Type-N Connectors](#)
- [WR-28 Connectors](#)
- [WR-42-Connectors](#)
- [WR-62 Connectors](#)
- [WR-90 Connectors](#)

Table 1. System Dynamic Range^a

Description	Specification (dB) at Test Port ^b	Typical (dB) at Direct Receiver Access Input ^c	Supplemental Information
Dynamic Range (in a 10 Hz BW)			
Standard Configuration and Standard Power Range (E836xB - Standard)			
10 MHz to 45 MHz ^d	79 (typical)	NA	--
45 MHz to 500 MHz ^e	94	NA	--
500 MHz to 2 GHz	119	NA	--
2 GHz to 10 GHz	122	NA	--
10 GHz to 20 GHz	123	NA	--
20 GHz to 30 GHz	114	NA	--
30 GHz to 40 GHz	110	NA	--
40 GHz to 45 GHz	109	NA	----
45 GHz to 50 GHz	104	NA	
Configurable Test Set and Standard Power Range (E836xB - Option 014)			
10 MHz to 45 MHz ^d	79 (typical)	129 (typical)	Option 016 degrades

45 MHz to 500 MHz ^e	94	132	performance by 2 dB.
500 MHz to 2 GHz	119	138	
2 GHz to 10 GHz	122	137	
10 GHz to 20 GHz	121	136	
20 GHz to 30 GHz	111	123	
30 GHz to 40 GHz	107	119	
40 GHz to 45 GHz	105	116	
45 GHz to 50 GHz	100	111	
Standard Configuration and Extended Power Range & Bias-Tees (E836xB - Option UNL)			
10 MHz to 45 MHz ^d	79 (typical)	NA	Option 016 degrades performance by 2 dB.
45 MHz to 500 MHz ^e	92	NA	
500 MHz to 2 GHz	117	NA	
2 GHz to 10 GHz	120	NA	
10 GHz to 20 GHz	121	NA	
20 GHz to 30 GHz	112	NA	
30 GHz to 40 GHz	108	NA	
40 GHz to 45 GHz	105	NA	
45 GHz to 50 GHz	99	NA	
Configurable Test Set and Extended Power Range & Bias-Tees (E836xB - Option 014/UNL)			
10 MHz to 45 MHz ^d	79 (typical)	129 (typical)	Option 016 degrades performance by 2 dB.
45 MHz to 500 MHz ^{e, f}	92	130	
500 MHz to 2 GHz ^f	117	136	
2 GHz to 10 GHz ^f	120	135	
10 GHz to 20 GHz ^g	119	134	
20 GHz to 30 GHz	109	121	
30 GHz to 40 GHz	105	117	
40 GHz to 45 GHz	101	112	

45 GHz to 50 GHz	95	106	
------------------	----	-----	--

a The system dynamic range is calculated as the difference between the noise floor and the source maximum output power. System dynamic range is a specification when the source is set to Port 1, and a characteristic when the source is set to Port 2. The effective dynamic range must take measurement uncertainties and interfering signals into account as well as the insertion loss resulting from a thru cable connected between Port 1 and Port 2..

b The test port system dynamic range is calculated as the difference between the test port noise floor and the source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account as well as the insertion loss resulting from a thru cable connected between Port 1 and Port 2..

c The direct receiver access input system dynamic range is calculated as the difference between the receiver access input noise floor and the source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account. This set-up should only be used when the receiver input will never exceed its damage level. When the analyzer is in segment sweep mode, the analyzer can have predefined frequency segments which will output a higher power level when the extended dynamic range is required (i.e. devices with high insertion loss), and reduced power when receiver damage may occur (i.e. devices with low insertion loss). The extended range is only available in one-path transmission measurements.

d Typical performance.

e May be limited to 100 dB at particular frequencies below 500 MHz due to spurious receiver residuals. Methods are available to regain the full dynamic range.

f E8362B only: Option H11 decreases value by 1 dB.

g E8362B only: Option H11 decreases value by 2 dB.

Table 2. Receiver Dynamic Range^a

Description	Specification (dB) at Test Port ^b	Typical (dB) at Direct Receiver Access Input ^c	
Dynamic Range (in a 10 Hz BW)			
Standard Configuration and Standard Power Range (E836xB - Standard)			
OR			
Standard Configuration and Extended Power Range & Bias Tees (E836xB - Option UNL)			
10 MHz to 45 MHz ^d	82 (typical)	NA	--
45 MHz to 500 MHz ^e	94	NA	--
500 MHz to 2 GHz	119	NA	--
2 GHz to 10 GHz	122	NA	--
10 GHz to 20 GHz	125	NA	--
20 GHz to 30 GHz	114	NA	Option 016 degrades performance by 2 dB.
30 GHz to 40 GHz	111	NA	
40 GHz to 50 GHz	111	NA	
Configurable Test Set and Standard Power Range (E836xB - Option 014)			
OR			
Configurable Test Set and Extended Power Range & Bias Tees (E836xB - Option 014/UNL)			
10 MHz to 45 MHz ^d	82 (typical)	132 (typical)	--

45 MHz to 500 MHz ^e	94	132	--
500 MHz to 2 GHz	119	138	--
2 GHz to 10 GHz	122	137	--
10 GHz to 20 GHz	124	139	--
20 GHz to 30 GHz	113	125	Option 016 degrades performance by 2 dB.
30 GHz to 40 GHz	110	122	
40 GHz to 50 GHz	109	120	

a The receiver dynamic range is calculated as the difference between the noise floor and the receiver maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account.

b The test port receiver dynamic range is calculated as the difference between the test port noise floor and the receiver maximum input level. The effective dynamic range must take measurement uncertainties and interfering signals into account.

c The direct receiver access input receiver dynamic range is calculated as the difference between the direct receiver access input noise floor and the receiver maximum input level. The effective dynamic range must take measurement uncertainties and interfering signals into account. This set-up should only be used when the receiver input will never exceed its compression or damage level. When the analyzer is in segment sweep mode, the analyzer can have predefined frequency segments which will output a higher power level when the extended dynamic range is required (i.e. devices with high insertion loss), and reduced power when compression or receiver damage may occur (i.e. devices with low insertion loss). The extended range is only available in one-path transmission measurements.

d Typical performance.

e May be degraded by 10 dB at particular frequencies (multiples of 5 MHz) below 500 MHz due to spurious receiver residuals. Methods are available to regain the full dynamic range.

Note: This E836xB document provides technical specifications for the following calibration kits only: 85056A, 85056D, 85056K, 85052B, 85052C, 85052D, 85050B, 85050C, 85050D, 85054B, 85054D, K11644A, P11644A, R11644A, and the X11644A.

Table 33. Uncorrected System Performance^a

Specifications apply over environmental temperature of 23° ±3 °C, with < 1 °C deviation from the calibration temperature

Description	Specification	Supplemental Information
Directivity		
10 MHz to 45 MHz ^b	--	11 db (typical)
45 MHz to 2 GHz	24 dB	--
2 GHz to 10 GHz	22 dB	--
10 GHz to 20 GHz	16 dB	--
20 GHz to 40 GHz	16 dB	--
40 GHz to 45 GHz	15 dB	--
45 GHz to 50 GHz	13 dB	--
Source Match - Standard		

10 MHz to 45 MHz ^b	--	11 db (typical)
45 MHz to 2 GHz	23 dB	--
2 GHz to 10 GHz	16 dB	--
10 GHz to 20 GHz	14 dB	--
20 GHz to 40 GHz	10 dB	--
40 GHz to 45 GHz	9 dB	--
45 GHz to 50 GHz	7.5 dB	--
Source Match - Opt UNL, 014 or 014/UNL		
10 MHz to 45 MHz ^b	--	11 db (typical)
45 MHz to 2 GHz	18 dB	--
2 GHz to 10 GHz	14 dB	--
10 GHz to 20 GHz	12 dB	--
20 GHz to 40 GHz	9 dB	--
40 GHz to 45 GHz	8 dB	--
45 GHz to 50 GHz	6 dB	--
Load Match - Standard		
10 MHz to 45 MHz ^b	--	11 db (typical)
45 MHz to 2 GHz	23 dB	--
2 GHz to 10 GHz	14 dB	--
10 GHz to 20 GHz	10 dB	--
20 GHz to 40 GHz	9 dB	--
40 GHz to 45 GHz	9 dB	--
45 GHz to 50 GHz	8 dB	--
Load Match - Opt UNL, 014 or 014/UNL		
10 MHz to 45 MHz ^b	--	11 db (typical)

45 MHz to 2 GHz	17 dB	--
2 GHz to 10 GHz	13 dB	--
10 GHz to 20 GHz	10 dB	--
20 GHz to 40 GHz	9 dB	--
40 GHz to 45 GHz	9 dB	--
45 GHz to 50 GHz	7 dB	--
Reflection Tracking		
	--	Typical:
10 MHz to 45 MHz	--	±1.5 dB
45 MHz to 20 GHz	--	±1.5 dB
20 GHz to 40 GHz	--	±1.5 dB
40 GHz to 50 GHz	--	±2.0 dB
Transmission Tracking^c		
	--	Typical:
10 MHz to 45 MHz	--	±3.0 dB
45 MHz to 2 GHz	--	±1.5 dB
2 GHz to 10 GHz	--	±2.0 dB
10 GHz to 20 GHz	--	±2.5 dB
20 GHz to 40 GHz	--	±3.5 dB
40 GHz to 45 GHz	--	±4.0 dB
45 GHz to 50 GHz	--	±4.5 dB
Crosstalk^d - Standard		
10 MHz to 45 MHz ^b	--	-65 dB (typical)
45 MHz to 1 GHz	-85 dB	--
1 GHz to 2 GHz	-100 dB	--

2 GHz to 20 GHz	-110 dB	--
20 GHz to 40 GHz	-108 dB	--
40 GHz to 45 GHz	-105 dB	--
45 GHz to 50 GHz	-100 dB	--
Crosstalk^d - Option UNL or 014		
10 MHz to 45 MHz ^b	--	-65 dB (typical)
45 MHz to 1 GHz	-85 dB	--
1 GHz to 2 GHz	-100 dB	--
2 GHz to 20 GHz	-109 dB	--
20 GHz to 40 GHz	-106 dB	--
40 GHz to 45 GHz	-103 dB	--
45 GHz to 50 GHz	-98 dB	--
Crosstalk^d - Option 014/UNL		
10 MHz to 45 MHz ^b	--	-65 dB (typical)
45 MHz to 1 GHz	-85 dB	--
1 GHz to 2 GHz	-98 dB	--
2 GHz to 10 GHz	-108 dB	--
10 GHz to 20 GHz	-107 dB	--
20 GHz to 40 GHz	-104 dB	--
40 GHz to 45 GHz	-100 dB	--
45 GHz to 50 GHz	-95 dB	--
Crosstalk - Option 080 enabled^{b,e}		
	--	Typical:
10 MHz to 45 MHz	--	-65
45 MHz to 1 GHz	--	-85

1 GHz to 2 GHz	--	-100
2 GHz to 10 GHz	--	-109
10 GHz to 20 GHz	--	-110
20 GHz to 40 GHz	--	-106
40 GHz to 45 GHz	--	-103
45 GHz to 50 GHz	--	-98

a Specifications apply over environment temperature of 23°C +/- 3°C, with less than 1°C deviation from the calibration temperature.

b Typical performance.

cTransmission tracking performance is strongly dependent on cable used. These typical specifications are based on the use of the Agilent thru cable (part number 85133-60016).

d Measurement conditions: normalized to a thru, measured with two shorts, 10 Hz IF bandwidth, averaging factor of 16, alternate mode, source power set to the lesser of the maximum power out or the maximum receiver power.

e 0 Hz offset.

Table 34. Test Port Output

Description	Specification				Supplemental
Frequency Range					
	Standard	Opt 014	Opt UNL	Opt 014/UNL	--
E8362B	10 MHz to 20 GHz				--
E8363B	10 MHz to 40 GHz				--
E8364B	10 MHz to 50 GHz				--
Nominal Power ^C					
E8362B	0 dBm	-5 dBm	-5 dBm	-5 dBm	--
E8363/4B	-12 dBm	-17 dBm	-17 dBm	-17 dBm	--
Frequency Resolution					
	1 Hz				--
CW Accuracy					

	+/-1 ppm				--
Frequency Stability					
					+/-0.05 ppm. - 10° to 70° C, typical; +/-0.1 ppm/yr maximum, typical
Power Level Accuracy ^a					
10 MHz to 45 MHz ^b	+/-2.0 dB (typical)	+/-2.0 dB (typical)	+/-2.0 dB (typical)	+/-2.0 dB (typical)	--
45 MHz to 10 GHz	+/-1.5 dB	+/-1.5 dB	+/-1.5 dB	+/-1.5 dB	Variation from nominal power in range 0 (step attenuator at 0 dB)
10 GHz to 20 GHz	+/-2.0 dB	+/-2.0 dB	+/-2.0 dB	+/-2.0 dB	
20 GHz to 40 GHz	+/-3.0 dB	+/-3.0 dB	+/-3.0 dB	+/-3.0 dB	
40 GHz to 45 GHz	+/-3.0 dB	+/-3.5 dB	+/-3.0 dB	+/-3.5 dB	
45 GHz to 50 GHz	+/-3.0 dB	+/-4.0 dB	+/-3.0 dB	+/-4.0 dB	
Power Level Linearity ^d					
10 MHz to 45 MHz ^b	+/-1.0 dB ^g (typical)				Test reference is at the nominal power level (step attenuator at 0 dB)
45 MHz to 20 GHz	+/-1.0 dB ^g				
20 GHz to 40 GHz	+/-1.0 dB ^g				
40 GHz to 50 GHz	+/-1.0 dB ^g				
Power Range ^{a, e, f}					
10 MHz to 45 MHz ^b	-25 to +2 dBm (typical)	-25 to +2 dBm (typical)	-87 to +2 dBm (typical)	-87 to +2 dBm (typical)	--

45 MHz to 10 GHz	-25 to +5 dBm	-25 to +5 dBm	-87 to +3 dBm	-87 to +3 dBm ^h	--
10 GHz to 20 GHz	-24 to +3 dBm	-25 to +2 dBm	-86 to +1 dBm	-87 to 0 dBm ⁱ	--
20 GHz to 30 GHz	-23 to 0 dBm	-25 to -2 dBm	-85 to -2 dBm	-87 to -4 dBm	--
30 GHz to 40 GHz	-23 to -4 dBm	-25 to -6 dBm	-85 to -6 dBm	-87 to -8 dBm	--
40 GHz to 45 GHz	-25 to -5 dBm	-27 to -7 dBm	-87 to -9 dBm	-87 to -11 dBm	--
45 GHz to 50 GHz	-25 to -10 dBm	-27 to -12 dBm	-87 to -15 dBm	-87 to -17 dBm	--
Power Sweep Range (ALC)					
10 MHz to 45 MHz ^b	27 dB (typical)	27 dB (typical)	29 dB (typical)	29 dB (typical)	--
45 MHz to 10 GHz	30 dB	30 dB	30 dB	30 dB ^j	ALC range starts at maximum leveled output power and decreases by power level indicated in the table.
10 GHz to 20 GHz	27 dB	27 dB	27 dB	27 dB ^k	
20 GHz to 30 GHz	23 dB	23 dB	23 dB	23 dB	
30 GHz to 40 GHz	19 dB	19 dB	19 dB	19 dB	
40 GHz to 45 GHz	20 dB	20 dB	18 dB	16 dB	
45 GHz to 50 GHz	15 dB	15 dB	12 dB	10 dB	
Power Resolution					
	0.01 dB				--
Phase Noise					
1 kHz offset from center frequency, nominal power at test port					
	--	--	--	--	Typical:
10 MHz to 10 GHz	--	--	--	--	-60 dBc

10 GHz to 20 GHz	--	--	--	--	-55 dBc
20 GHz to 50 GHz	--	--	--	--	-50 dBc
1 kHz offset from center frequency, nominal power at test port - Option 080 enabled					
	--	--	--	--	Typical:
10 MHz to 10 GHz	--	--	--	--	-60 dBc
10 GHz to 20 GHz	--	--	--	--	-60 dBc
20 GHz to 50 GHz	--	--	--	--	-50 dBc
10 kHz offset from center frequency, nominal power at test port					
	--	--	--	--	Typical:
10 MHz to 45 MHz	--	--	--	--	-70 dBc
45 MHz to 10 GHz					-70 dBc
10 GHz to 20 GHz	--	--	--	--	-65 dBc
20 GHz to 40 GHz	--	--	--	--	-55 dBc
40 GHz to 50 GHz	--	--	--	--	-55 dBc
10 kHz offset from center frequency, nominal power at test port - Option 080 enabled					
	--	--	--	--	Typical:
10 MHz to 45 MHz	--	--	--	--	-70 dBc
45 MHz to 10 GHz	--	--	--	--	-70 dBc
10 GHz to 20 GHz	--	--	--	--	-65 dBc
20 GHz to 40 GHz	--	--	--	--	-55 dBc
40 GHz to 50 GHz	--	--	--	--	-55 dBc
100 kHz offset from center frequency, nominal power at test port					
	--	--	--	--	Typical:
10 MHz to 10 GHz	--	--	--	--	-60 dBc
10 GHz to 20 GHz	--	--	--	--	-55 dBc

20 GHz to 50 GHz	--	--	--	--	-50 dBc
100 kHz offset from center frequency, nominal power at test port - Option 080 enabled					
	--	--	--	--	--
10 MHz to 10 GHz	--	--	--	--	-75 dBc
10 GHz to 20 GHz	--	--	--	--	-70 dBc
20 GHz to 50 GHz	--	--	--	--	-65 dBc
1 MHz offset from center frequency, nominal power at test port					
	--	--	--	--	Typical:
10 MHz to 10 GHz	--	--	--	--	-106 dBc
10 GHz to 20 GHz	--	--	--	--	-103 dBc
20 GHz to 50 GHz	--	--	--	--	-90 dBc
1 MHz offset from center frequency, nominal power at test port - Option 080 enabled					
	--	--	--	--	Typical:
10 MHz to 10 GHz	--	--	--	--	-103 dBc
10 GHz to 20 GHz	--	--	--	--	-97 dBc
20 GHz to 50 GHz	--	--	--	--	-85 dBc
Harmonics (2nd or 3rd)					
	--	--	--	--	-23 dBc typical, in power range 0
Non-Harmonic Spurious (at Nominal Output Power)					
10 MHz to 45 MHz	--	--	--	--	-50 dBc typical, for offset frequency > 1 kHz

45 MHz to 20 GHz	--	--	--	--	-50 dBc typical, for offset frequency > 1 kHz
20 GHz to 40 GHz	--	--	--	--	-30 dBc typical, for offset frequency > 1 kHz
40 GHz to 50 GHz	--	--	--	--	-30 dBc typical, for offset frequency > 1 kHz

a Test port output is a specification when the source is set to Port 1, and a characteristic when the source is set to Port 2.

b Typical performance.

c Preset power.

d Power Level Linearity is a specification when the source is set to Port 1, and a typical when the source is set to Port 2.

e Test port power is specified into nominal 50 ohms.

f Power to which the source can be set and phase lock is assured.

g +/-1.5 dB for power <= -23 dBm.

h E8362B only: Option H11 decreases maximum power level by 1 dB.

i E8362B only: Option H11 decreases maximum power level by 2 dB.

j E8362B only: Option H11 decreases power level by 1 dB.

k E8362B only: Option H11 decreases power level by 2 dB.

Table 35: Test Port Input

Description	Specification				Supplemental
	Standard	Opt 014	Opt UNL	Opt 014/UNL	
Test Port Noise Floor^a					
10 Hz IF Bandwidth					
10 MHz to 45 MHz ^b	<-77 dBm (typical)	<-77 dBm (typical)	<-77 dBm (typical)	<-77 dBm (typical)	--
45 MHz to 500 MHz ^c	<-89 dBm	<-89 dBm	<-89 dBm	<-89 dBm	--

500 MHz to 2 GHz	<-114 dBm	<-114 dBm	<-114 dBm	<-114 dBm	--
2 GHz to 10 GHz	<-117 dBm	<-117 dBm	<-117 dBm	<-117 dBm	--
10 GHz to 20 GHz	<-120 dBm	<-119 dBm	<-120 dBm	<-119 dBm	--
20 GHz to 40 GHz	<-114 dBm	<-113 dBm	<-114 dBm	<-113 dBm	Option 016 degrades performance by 2 dB.
40 GHz to 50 GHz	<-114 dBm	<-112 dBm	<-114 dBm	<-112 dBm	
1 KHz IF Bandwidth					
10 MHz to 45 MHz ^b	<-57 dBm (typical)	<-57 dBm (typical)	<-57 dBm (typical)	<-57 dBm (typical)	--
45 MHz to 500 MHz ^c	<-69 dBm	<-69 dBm	<-69 dBm	<-69 dBm	--
500 MHz to 2 GHz	<-94 dBm	<-94 dBm	<-94 dBm	<-94 dBm	--
2 GHz to 10 GHz	<-97 dBm	<-97 dBm	<-97 dBm	<-97 dBm	--
10 GHz to 20 GHz	<-100 dBm	<-99 dBm	<-100 dBm	<-99 dBm	--
20 GHz to 40 GHz	<-94 dBm	<-93 dBm	<-94 dBm	<-93 dBm	Option 016 degrades performance by 2 dB.
40 GHz to 50 GHz	<-94 dBm	<-92 dBm	<-94 dBm	<-92 dBm	
Test Port Noise Floor ^{a,b} Option 080 enabled ^d					
10 Hz IF Bandwidth					
10 MHz to 45 MHz ^b	<-77 dBm (typical)	<-77 dBm (typical)	<-77 dBm (typical)	<-77 dBm (typical)	--

45 MHz to 500 MHz ^C	<-88 dBm	<-88 dBm	<-88 dBm	<-88 dBm	--
500 MHz to 2 GHz	<-113 dBm	<-113 dBm	<-113 dBm	<-113 dBm	--
2 GHz to 10 GHz	<-116 dBm	<-116 dBm	<-116 dBm	<-116 dBm	--
10 GHz to 20 GHz	<-118 dBm	<-118 dBm	<-118 dBm	<-118 dBm	--
20 GHz to 40 GHz	<-112 dBm	<-112 dBm	<-112 dBm	<-112 dBm	Option 016 degrades performance by 2 dB.
40 GHz to 50 GHz	<-111 dBm	<-111 dBm	<-111 dBm	<-111 dBm	
1 KHz IF Bandwidth					
10 MHz to 45 MHz ^b	<-57 dBm (typical)	<-57 dBm (typical)	<-57 dBm (typical)	<-57 dBm (typical)	--
45 MHz to 500 MHz ^C	<-68 dBm	<-68 dBm	<-68 dBm	<-68 dBm	--
500 MHz to 2 GHz	<-93 dBm	<-93 dBm	<-93 dBm	<-93 dBm	--
2 GHz to 10 GHz	<-96 dBm	<-96 dBm	<-96 dBm	<-96 dBm	--
10 GHz to 20 GHz	<-98 dBm	<-98 dBm	<-98 dBm	<-98 dBm	--
20 GHz to 40 GHz	<-92 dBm	<-92 dBm	<-92 dBm	<-92 dBm	Option 016 degrades performance by 2 dB.
40 GHz to 50 GHz	<-91 dBm	<-91 dBm	<-91 dBm	<-91 dBm	
Direct Receiver Access Input Noise Floor ^{a,b}					
10 Hz IF Bandwidth					

10 MHz to 45 MHz	--	<-127 dBm	--	<-127 dBm	--
45 MHz to 500 MHz ^C	--	<-127 dBm	--	<-127 dBm	--
500 MHz to 2 GHz	--	<-133 dBm	--	<-133 dBm	--
2 GHz to 10 GHz	--	<-132 dBm	--	<-132 dBm	--
10 GHz to 20 GHz	--	<-134 dBm	--	<-134 dBm	--
20 GHz to 40 GHz	--	<-125 dBm	--	<-125 dBm	Option 016 degrades performance by 2 dB.
40 GHz to 50 GHz	--	<-123 dBm	--	<-123 dBm	
1 KHz IF Bandwidth					
10 MHz to 45 MHz	--	<-107 dBm	--	<-107 dBm	--
45 MHz to 500 MHz ^C	--	<-107 dBm	--	<-107 dBm	--
500 MHz to 2 GHz	--	<-113 dBm	--	<-113 dBm	--
2 GHz to 10 GHz	--	<-112 dBm	--	<-112 dBm	--
10 GHz to 20 GHz	--	<-114 dBm	--	<-114 dBm	--
20 GHz to 40 GHz	--	<-105 dBm	--	<-105 dBm	Option 016 degrades performance by 2 dB.
40 GHz to 50 GHz	--	<-103 dBm	--	<-103 dBm	

Direct Receiver Access Input Noise Floor ^{a,b} - Option 080 enabled ^d					
10 Hz IF Bandwidth					
10 MHz to 45 MHz	--	<-127 dBm	--	<-127 dBm	--
45 MHz to 500 MHz ^c	--	<-126 dBm	--	<-126 dBm	--
500 MHz to 2 GHz	--	<-132 dBm	--	<-132 dBm	--
2 GHz to 10 GHz	--	<-131 dBm	--	<-131 dBm	--
10 GHz to 20 GHz	--	<-133 dBm	--	<-133 dBm	--
20 GHz to 40 GHz	--	<-124 dBm	--	<-124 dBm	Option 016 degrades performance by 2 dB.
40 GHz to 50 GHz	--	<-122 dBm	--	<-122 dBm	
1 KHz IF Bandwidth					
10 MHz to 45 MHz	--	<-107 dBm	--	<-107 dBm	--
45 MHz to 500 MHz ^c	--	<-106 dBm	--	<-106 dBm	--
500 MHz to 2 GHz	--	<-112 dBm	--	<-112 dBm	--
2 GHz to 10 GHz	--	<-111 dBm	--	<-111 dBm	--
10 GHz to 20 GHz	--	<-113 dBm	--	<-113 dBm	--
20 GHz to 40 GHz	--	<-104 dBm	--	<-104 dBm	Option 016 degrades performance by 2 dB.
40 GHz to 50 GHz	--	<-102 dBm	--	<-102 dBm	

Receiver Compression Level		
10 MHz to 20 GHz	<0.1 dB at -5 dBm ⁹ and <0.45 dB at +5 dBm	--
20 GHz to 30 GHz	<0.1 dB at -9.5 dBm ⁹ and <0.45 dB at 0 dBm	--
30 GHz to 40 GHz	<0.1 dB at -12.5 dBm ⁹ and <0.45 dB at -3 dBm	--
40 GHz to 50 GHz	<0.1 dB at -12.5 dBm ⁹ and <0.45 dB at -3 dBm	--
System Compression Level		
	maximum output power	See dynamic accuracy table
Third Order Intercept - Tone spacing from 100 kHz - 5 MHz		
		Typical
10 MHz to 150 MHz	--	+33 dBm
150 MHz to 300 MHz	--	+34 dBm
300 MHz to 500 MHz	--	+30 dBm
500 MHz to 20 GHz	--	+24 dBm
20 to 40 GHz	--	+18 dBm
40 to 50 GHz	--	+15 dBm
Third Order Intercept - Tone spacing from 5 MHz - 20 MHz		
		Typical
10 MHz to 500 MHz	--	+20 dBm
500 MHz to 20 GHz	--	+20 dBm

20 to 40 GHz	--	+16 dBm
40 to 50 GHz	--	+15 dBm
Third Order Intercept - Tone spacing from 20 MHz - 50 MHz		
	--	Typical
10 MHz to 500 MHz	--	+26 dBm
500 MHz to 20 GHz	--	+26 dBm
20 to 40 GHz	--	+20 dBm
40 to 50 GHz	--	+19 dBm
Trace Noise Magnitude		
1 kHz IF bandwidth. Ratio measurement, nominal power at test port.		
10 MHz to 45 MHz ^b	--	<0.050 dB rms (typical)
45 MHz to 500 MHz ^e	<0.010 dB rms	--
500 MHz to 20 GHz	<0.006 dB rms	--
20 GHz to 40 GHz	<0.006 dB rms	--
40 GHz to 50 GHz	<0.006 dB rms	--
Trace Noise Magnitude - Option 080 enabled^{b,d}		
1 kHz IF bandwidth. Ratio measurement, nominal power at test port.		
10 MHz to 45 MHz ^b	--	<0.060 dB rms (typical)
45 MHz to 500 MHz ^e	<0.010 dB rms	--

500 MHz to 20 GHz	<0.006 dB rms	--
20 GHz to 40 GHz	<0.007 dB rms	--
40 GHz to 50 GHz	<0.008 dB rms	--
Trace Noise Phase 1 kHz IF bandwidth. Ratio measurement, nominal power at test port.		
10 MHz to 45 MHz ^b	--	<0.350° rms (typical)
45 MHz to 500 MHz	<0.100° rms	--
500 MHz to 20 GHz	<0.060° rms	--
20 GHz to 40 GHz	<0.100° rms	--
40 GHz to 50 GHz	<0.100° rms	--
Trace Noise Phase - Option 080 enabled^{b,d} 1 kHz IF bandwidth. Ratio measurement, nominal power at test port.		
10 MHz to 45 MHz	<0.350° rms	--
45 MHz to 500 MHz ^e	<0.100° rms	--
500 MHz to 20 GHz	<0.060° rms	--
20 GHz to 40 GHz	<0.100° rms	--

40 GHz to 50 GHz	<0.100° rms				--
Reference Level Magnitude					
Range	+/-200 dB				--
Resolution	0.001 dB				--
Reference Level Phase					
Range	+/-500°				--
Resolution	0.01°				--
Stability Magnitude ^d					
Typical ratio measurement, made at the test port.					
10 MHz to 45 MHz	--	--	--	--	+/-0.05 dB/°C
45 MHz to 20 GHz	--	--	--	--	+/-0.02 dB/°C
20 GHz to 40 GHz	--	--	--	--	+/-0.03 dB/°C
40 GHz to 50 GHz	--	--	--	--	+/-0.04 dB/°C
Stability Phase ^d					
Typical ratio measurement, measured at the test port.					
10 MHz to 45 MHz	--	--	--	--	+/-0.5°/°C
45 MHz to 20 GHz	--	--	--	--	+/-0.2°/°C
20 GHz to 40 GHz	--	--	--	--	+/-0.5°/°C
40 GHz to 50 GHz	--	--	--	--	+/-0.8°/°C

Damage Input Level					
Test Port 1 and 2	--	--	--	--	+30 dBm or +/-40 VDC, typical
R1, R2 in	--	--	--	--	+15 dBm or +/-15 VDC, typical
A, B in	--	--	--	--	+15 dBm or +/-15 VDC, typical
Coupler Thru (Option 014 or UNL/014)	--	--	--	--	+30 dBm or +/-40 VDC, typical
Coupler Arm (Option 014 or UNL/014)	--	--	--	--	+30 dBm or +/-7 VDC, typical

aTotal average (rms) noise power calculated as the mean value of a linear magnitude trace expressed in dBm.

bTypical performance.

cNoise floor may be degraded by 10 dB at particular frequencies (multiples of 5 MHz) due to spurious receiver residuals.

d0 Hz offset

eTrace noise magnitude may be degraded to 20 mdB rms at harmonic frequencies of the first IF (8.33 MHz) below 80 MHz.


fStability is defined as a ratio measurement made at the test port.

g This compression level comes from the dynamic accuracy curve with -30 dBm reference test port power.


Table 36. Dynamic Accuracy (Specification^a)

Accuracy of the test port input power reading relative to the reference input power level.

Magnitude*

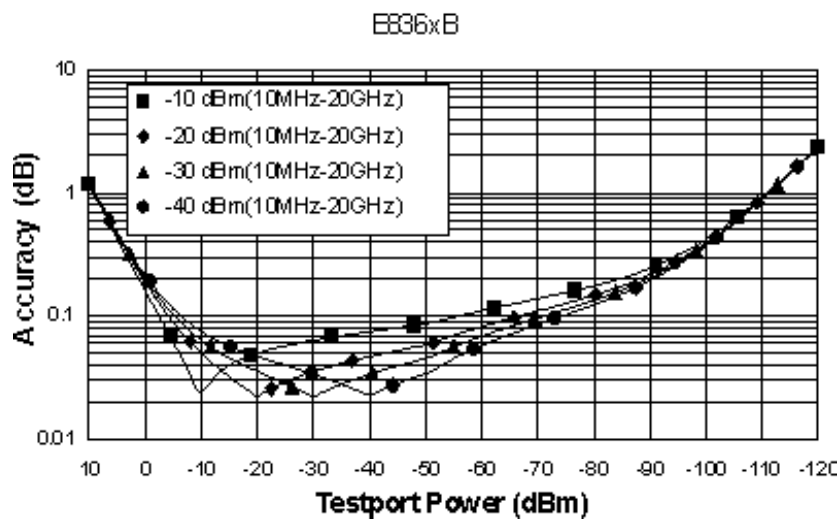


Phase*

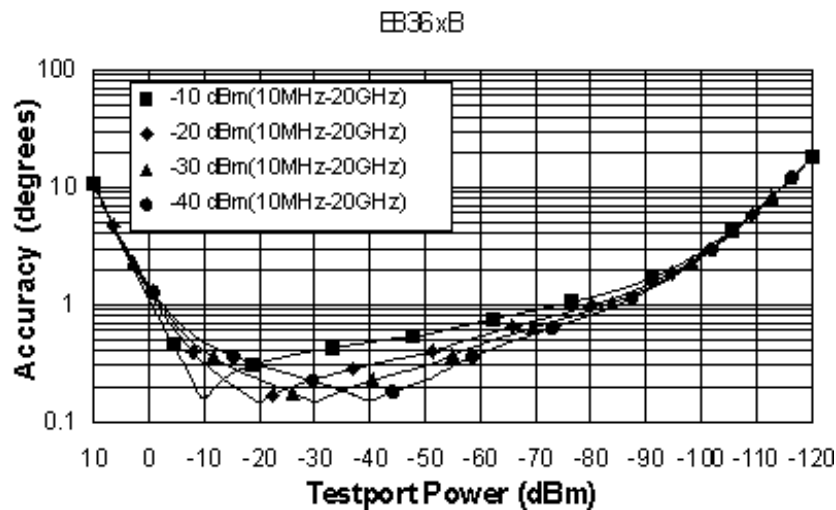


*Below 800 MHz the coupling factor rolls off 20 dB per decade causing a shift in the dynamic accuracy curves. Please see the Uncertainty Calculator (http://www.agilent.com/find/na_calculator) for detailed compression values.


Magnitude

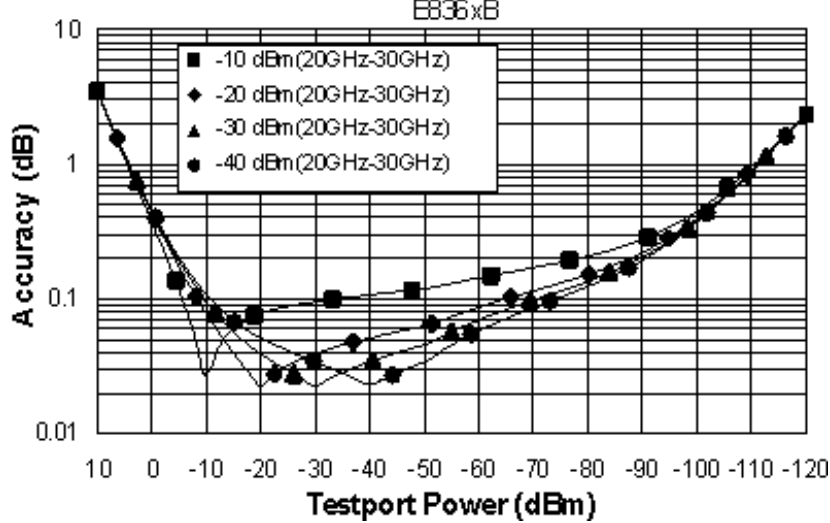


Phase

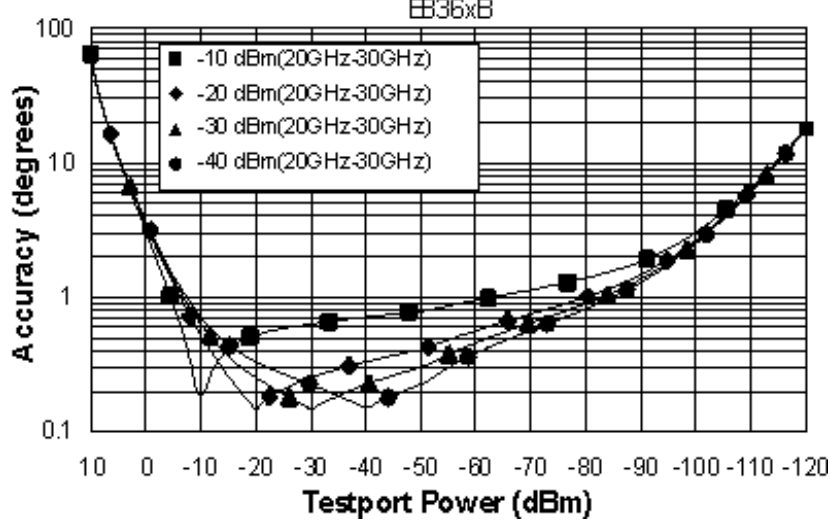


Magnitude

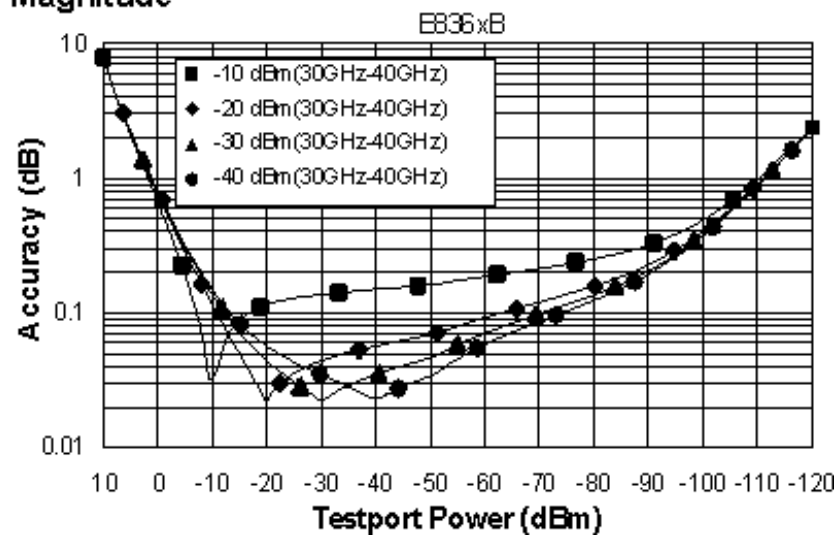


Phase

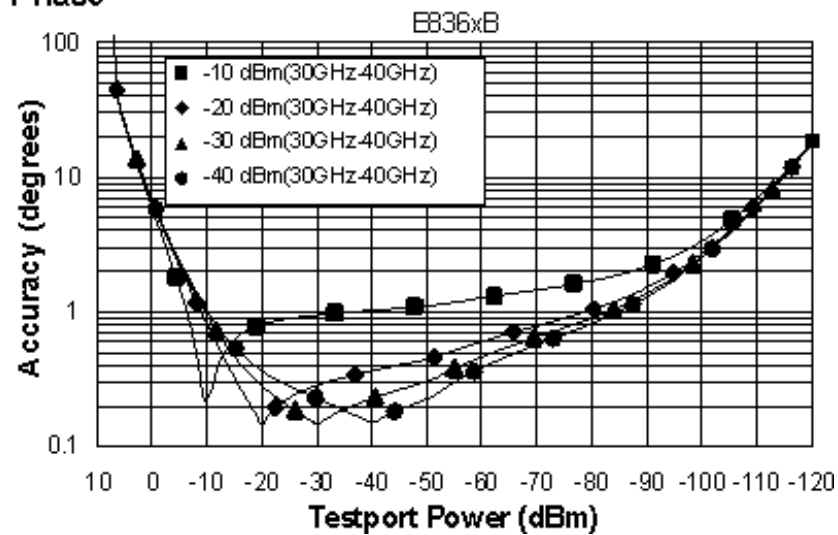

Magnitude

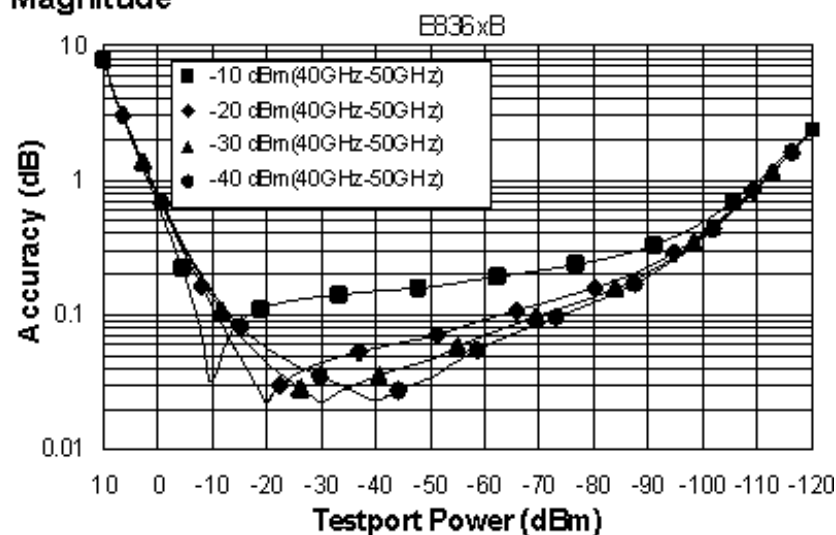

Phase

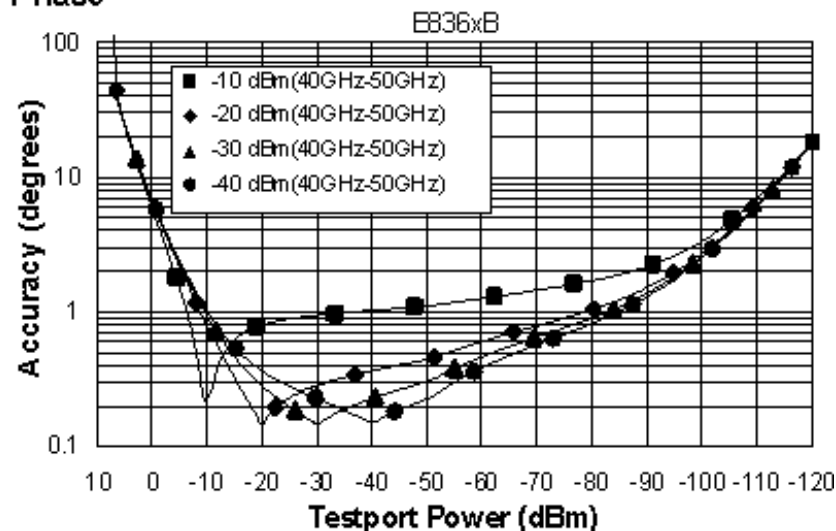

^a Dynamic accuracy is verified with the following measurements:


- Compression over frequency.
- IF linearity at a single frequency of 1.195 GHz and a reference level of -20 dBm for an input power range of 0 to -120 dBm.

Table 37. Test Port Input (Group Delay)^a

Description	Specification	Supplemental Information (typ.)
Aperture (selectable)	--	(frequency span)/(number of points -1)
Maximum Aperture	--	20% of frequency span
Range	--	0.5 x (1/minimum aperture)
Maximum Delay	--	Limited to measuring no more than 180° of phase change within the minimum aperture.)
Accuracy	--	See graph below. Char.

The following graph shows characteristic group delay accuracy with full 2-port calibration and a 10 Hz IF bandwidth. Insertion loss is assumed to be < 2 dB and electrical length to be ten meters.

Group Delay (Typical)

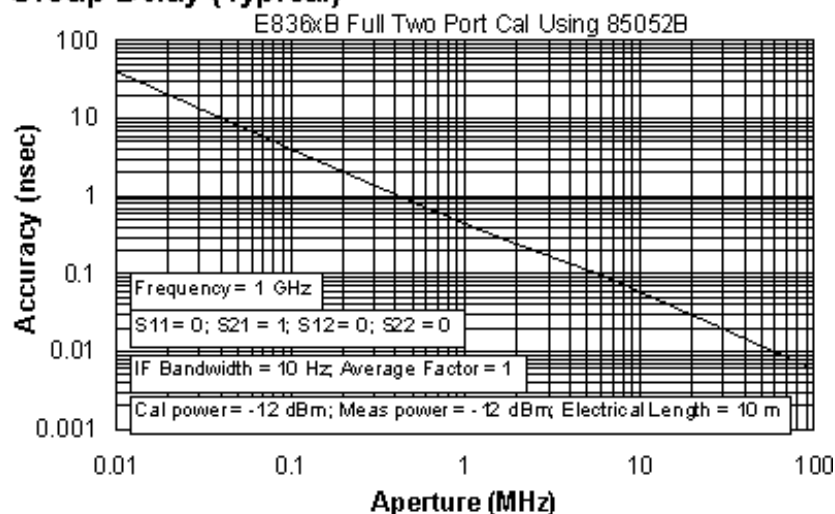

In general, the following formula can be used to determine the accuracy, in seconds, of specific group delay measurement:

$$\pm \text{Phase Accuracy (deg)} / [360 \times \text{Aperture (Hz)}]$$

Depending on the aperture and device length, the phase accuracy used is either incremental phase accuracy or worst case phase accuracy.

a Group delay is computed by measuring the phase change within a specified frequency step (determined by the frequency span and the number of points per sweep).

General Information

- [Miscellaneous Information](#)
- [Front Panel](#)
- [Rear Panel](#)
- [Environment and Dimensions](#)

Table 38. Miscellaneous Information

Description	Specification	Supplemental Information
System IF Bandwidth Range	--	1 Hz to 40 kHz, nominal
CPU	--	Intel® 1.1 GHz Pentium® M with 1 GByte RAM

Table 39. Front Panel Information

Description	Supplemental Information
RF Connectors	
E8362B	
Type	3.5 mm (male), 50 ohm, (nominal)
Center Pin Recession	0.002 in. (characteristic)
E8363/4B	
Type	2.4 mm (male), 50 ohm, (nominal)
Center Pin Recession	0.002 in. (characteristic)
Display	
Size	21.3 cm (8.4 in) diagonal color active matrix LCD; 640 (horizontal) X 480 (vertical) resolution; 59.83 Hz vertical refresh rate; 31.41 Hz horizontal refresh rate
Refresh Rate	Vertical 59.83 Hz; Horizontal 31.41 kHz
Display Range	
Magnitude	±200 dB (at 20 dB/div), max
Phase	±500°, max
Polar	10 pUnits, min 1000 Units, max
Pixels	<p>When running the analyzer's built-in Display Test, one or more of the following symptoms indicate a faulty display assembly:</p> <ul style="list-style-type: none"> • A complete row or column of "stuck on" or "dark" pixels. • More than six "stuck on" pixels (but not more than three green)

	<ul style="list-style-type: none"> • More than twelve "dark" pixels (but not more than seven of the same color) • Two or more consecutive "stuck on" pixels or three or more consecutive "dark" pixels (but no more than one set of two consecutive 'dark' pixels) • "Stuck on" or "dark" pixels less than 6.5 mm apart (excluding consecutive pixels)
Display Resolution	
Magnitude	0.001 dB/div, min
Phase	0.01°/div, min
Marker Resolution	
Magnitude	0.001 dB, min
Phase	0.01°, min
Polar	0.01 mUnit, min; 0.01°,min

Table 40. Rear Panel Information

Description	Supplemental Information
10 MHz Reference In	
Connector	BNC, female
Input Frequency	10 MHz \pm 10 ppm, typical
Input Level	-15 dBm to +20 dBm, typical
Input Impedance	200 Ω , nom.
10 MHz Reference Out	
Connector	BNC, female
Output Frequency	10 MHz \pm 1 ppm, typical
Signal Type	Sine Wave, typical
Output Level	+10 dBm \pm 4 dB into 50 Ω , typical
Output Impedance	50 Ω , nominal
Harmonics	<-40 dBc, typical
Option H08 & H11 Rear Panel Connectors (typical)	

IF Connectors	A, R1, R2, B (BNC Connectors)
IF Connector Input Frequency	8 1/3 MHz
Nominal Input Impedance at IF Inputs	50 Ω
RF Damage Level to IF Connector Inputs	-20.0 dBm
DC Damage Level to IF Connector Inputs	25 volts
0.1 dB Compression Point at IF Inputs	-27.0 dBm
Pulse Input Connectors ¹	A, R1, R2, B (BNC Connectors)
Nominal Input Impedance at Pulse Inputs	1 Kohm
Minimum IF Gate Width	20 ns for less than 1 dB deviation from theoretical performance ²
DC Damage Level to Pulse Connector Inputs	5.5 volts
Drive Voltage	TTL (0, +5.0) Volts
Rear Panel LO Power (Typical)	
1.7 GHz- 20 GHz	-7 to -16 dBm
Rear Panel RF Power 8362B (Typical)	
1.7 GHz to 20 GHz	-5 to -16 dBm (at -5 dBm test port power ³)
Rear Panel RF Power 8363B/8364B (Typical)	
1.7 GHz to 10 GHz	-2 to -12 dBm (at -5 dBm test port power ³)
10 GHz to 16 GHz	0 to -8 dBm (at -5 dBm test port power ³)
16 GHz to 20 GHz	+5 to -1 dBm (at -5 dBm test port power ³)
VGA Video Output	

Connector	15-pin mini D-Sub; Drives VGA compatible monitors
Devices Supported:	
	Resolutions:
Flat Panel (TFT)	1024 X 768, 800 X 600, 640 X 480
Flat Panel (DSTN)	800 X 600, 640 X 480
CRT Monitor	1280 X 1024, 1024 X 768, 800 X 600, 640 X 480
	Simultaneous operation of the internal and external displays is allowed, but with 640 X 480 resolution only. If you change resolution, you can only view the external display (internal display will "white out").
Bias Input Connectors (Option UNL)	
Bias current	500 mA, maximum
Bias voltage	40 Volts, maximum
Test Set IO	
	25-pin D-Sub connector, available for external test set control.
Aux IO	
	25-pin D-Sub connector, male, analog and digital IO.
Handler IO	
	36-pin parallel I/O port; all input/output signals are default set to negative logic; can be reset to positive logic via GPIB command.
GPIB	
	24-pin D-sub (Type D-24), female; compatible with IEEE-488.
Parallel Port (LPT1)	
	25-pin D-Sub miniature connector, female; provides connection to printers or any other parallel port peripherals
Serial Port (COM 1)	
	9-pin D-Sub, male; compatible with RS-232
USB Port	
	One port on front panel and five ports on rear panel. Universal Serial Bus jack, Type A configuration (4 contacts inline, contact 1 on left); female

Contact 1	Vcc: 4.75 to 5.25 VDC, 500 mA, maximum
Contact 2	-Data
Contact 3	+Data
Contact 4	Ground
LAN	
	10/100BaseT Ethernet, 8-pin configuration; auto selects between the two data rates
Line Power	
Frequency, Voltage	50/60/400 Hz for 100 - 120 V 50/60 Hz for 220 - 240 V Power supply is auto switching
Max	350 Watts

1 Pulse input connectors are operational only with Option H08 (Pulse Measurement Capability) enabled.

2 Based on deviation from signal reduction equation: Signal Reduction (dB) = $20\log_{10}(\text{Duty_cycle}) = 20\log_{10}(\text{pulse_width/period})$.
Measured at Pulse Repetition Frequency (PFR) of 1 MHz.

3 Test port power has to be at a high enough level such that the Drop Cal does not occur. If Drop Cal occurs then the power out of the rear panel RF connector will drop by about 15 dB.

Table 41. Analyzer Dimensions and Weight

Description	Supplemental Information		
Cabinet Dimensions			
	Height	Width	Depth
Excluding front and rear panel hardware and feet	267 mm 10.5 in	426 mm 16.75 in	427 mm 16.8 in
As shipped - includes front panel connectors, rear panel bumpers, and feet.	280 mm 11.0 in	435 mm 17.1 in	470 mm 18.5 in
As shipped plus handles	280 mm 11.0 in	458 mm 18 in	501 mm 19.70 in
As shipped plus rack-mount flanges	280 mm 11.0 in	483 mm 19 in	470 mm 18.5 in
As shipped plus handles and flanges	280 mm 11.0 in	483 mm 19 in	501 mm 19.70 in
Weight			

Net	
E8362B	28.6 kg (63.5 lb), nominal
E8363/4B	29 kg (64 lb), nominal
Shipping	
E8362B	35.8 kg (79.5 lb), nominal
E8363/4B	36.3 kg 80 lb), nominal

Note: For Regulatory and Environmental information, refer to the PNA Series Installation and Quick Start Guide, located online at <http://cp.literature.agilent.com/litweb/pdf/E8356-90001.pdf>.

Measurement Throughput Summary

- [Typical Cycle Time for Measurement Completion](#)
- [Cycle Time vs IF Bandwidth](#)
- [Cycle Time vs Number of Points](#)
- [Data Transfer Time](#)

Table 42 Typical Cycle Time^{a,b} (ms) for Measurement Completion

	Number of Points			
	201	401	1601	16,001
Start 28 GHz, Stop 30 GHz, 35 kHz IF bandwidth				
Uncorrected, 1-port cal	12	19	55	503
2-Port cal	29	44	124	1112
Start 10 MHz, Stop 10 GHz, 35 kHz IF bandwidth				
Uncorrected, 1-port cal	86	93	121	583
2-Port cal	179	199	267	1301
Start 10 MHz, Stop 20 GHz, 35 kHz IF bandwidth				
Uncorrected, 1-port cal	126	130	153	597
2-Port cal	264	275	335	1321

Start 10 MHz, Stop 40 GHz, 35 kHz IF bandwidth				
Uncorrected, 1-port cal	185	190	213	621
2-Port cal	382	401	459	1374
Start 10 MHz, Stop 50 GHz, 35 kHz IF bandwidth				
Uncorrected, 1-port cal	210	216	243	643
2-Port cal	436	450	522	1405
Start 10 MHz, Stop 67 GHz, 35 kHz IF bandwidth				
Uncorrected 1-Port cal	244	254	300	645
2-Port cal	502	524	591	1423

^a Typical performance.

^b Includes sweep time, retrace time and band-crossing time. Analyzer display turned off with DISPLAY:ENABLE OFF. Add 21 ms for display on. Data for one trace (S11) measurement.

Table 43. Cycle Time vs IF Bandwidth^a

Applies to the [Preset condition](#) (201 points, correction off) except for the following changes:

- CF = 28 GHz
- Span = 100 MHz
- Display off (add 21 ms for display on)

IF Bandwidth (Hz)	Cycle Time (ms) ^b	Cycle Time (ms) Option 080 enabled
40,000	11	100
35,000	12	101
30,000	13	102
20,000	16	106
10,000	30	127
7000	38	138

5000	50	152
3000	74	182
1000	274	326
300	694	782
100	1905	2054
30	6091	6355
10	17916	18372

a Typical performance.

b Cycle time includes sweep and retrace time.

Table 44. Cycle Time vs Number of Points^a

Applies to the [Preset condition](#) (35 kHz IF bandwidth, correction off) except for the following changes:

- CF = 28 GHz
- Span = 100 MHz
- Display off (add 21 ms for display on)

Number of Points	Cycle Time (ms) ^b
3	6
11	6
51	7
101	9
201	12
401	18
801	30
1601	55
16,001	497

a Typical performance.

b Cycle time includes sweep and retrace time.


Table 45. Data Transfer Time (ms)^a

	Number of Points			
	201	401	1601	16,001
SCPI over GPIB (program executed on external PC)				
32-bit floating point	7	12	43	435
64-bit floating point	12	22	84	856
ASCII	64	124	489	5054
SCPI (program executed in the analyzer)				
32-bit floating point	1	2	3	30
64-bit floating point	2	2	4	40
ASCII	29	56	222	2220
COM (program executed in the analyzer)				
32-bit floating point	1	1	1	6
Variant type	1	2	6	68
DCOM over LAN (program executed on external PC)				
32-bit floating point	1	1	2	121
Variant type	3	6	19	939


a Typical performance

Test Set Block Diagrams


E836xB - Standard Configuration and Standard Power Range

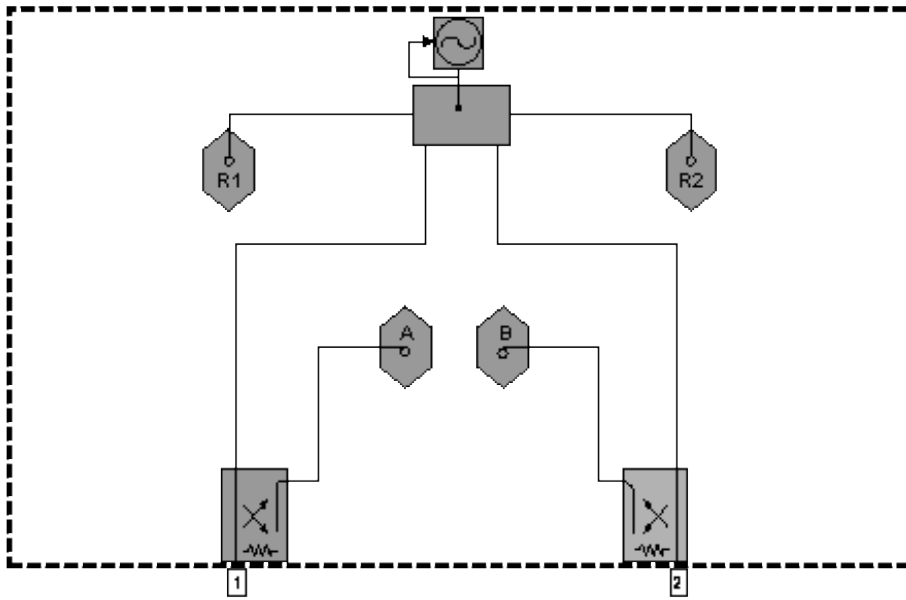

E836xB - Option UNL Standard Configuration with Extended Power Range and Bias - Tees

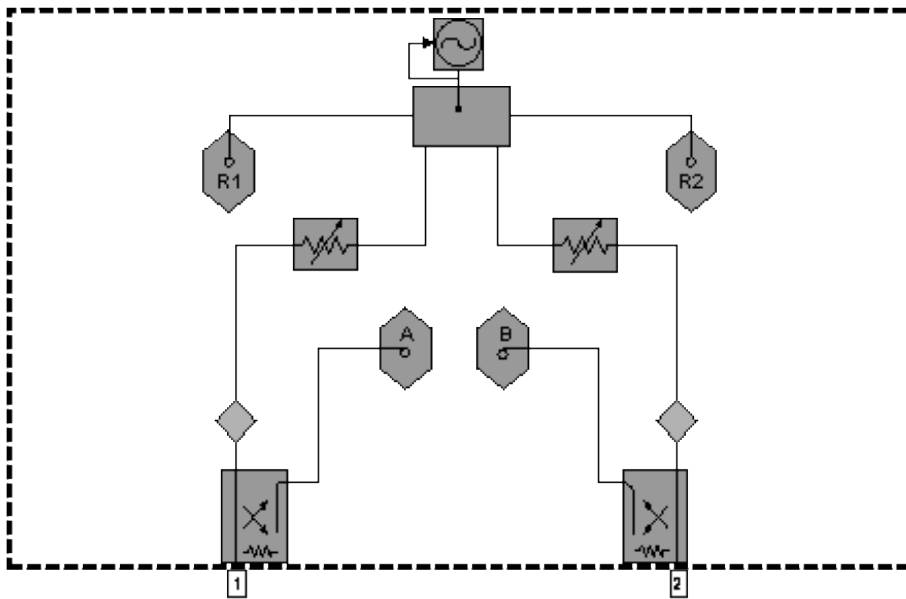


E836xB - Option UNL Standard Configuration with Extended Power Range and Bias - Tees, and Option 016, Receiver Attenuators

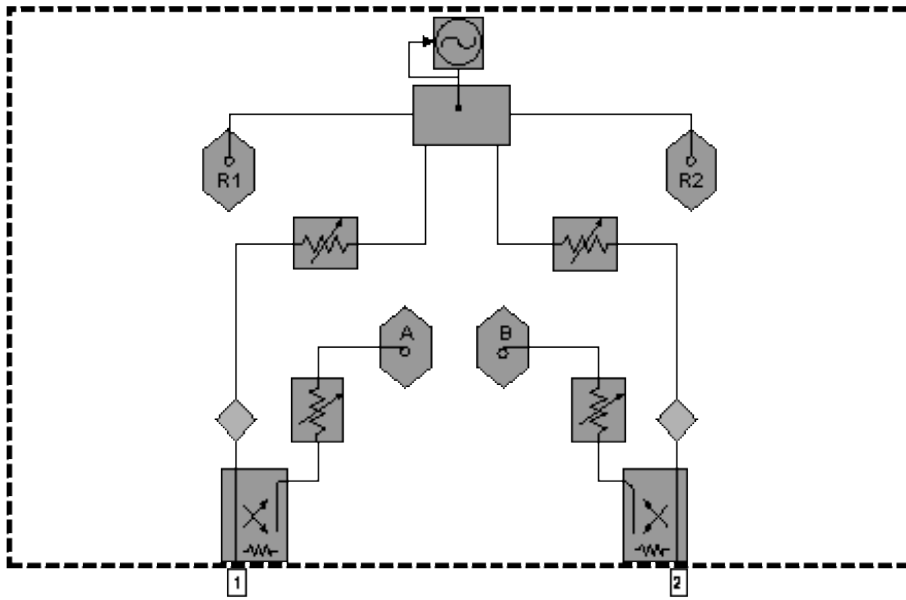


Test Set with Option 014 Block Diagrams

E836xB - Option 014 – Configurable Test Set and Standard Power Range

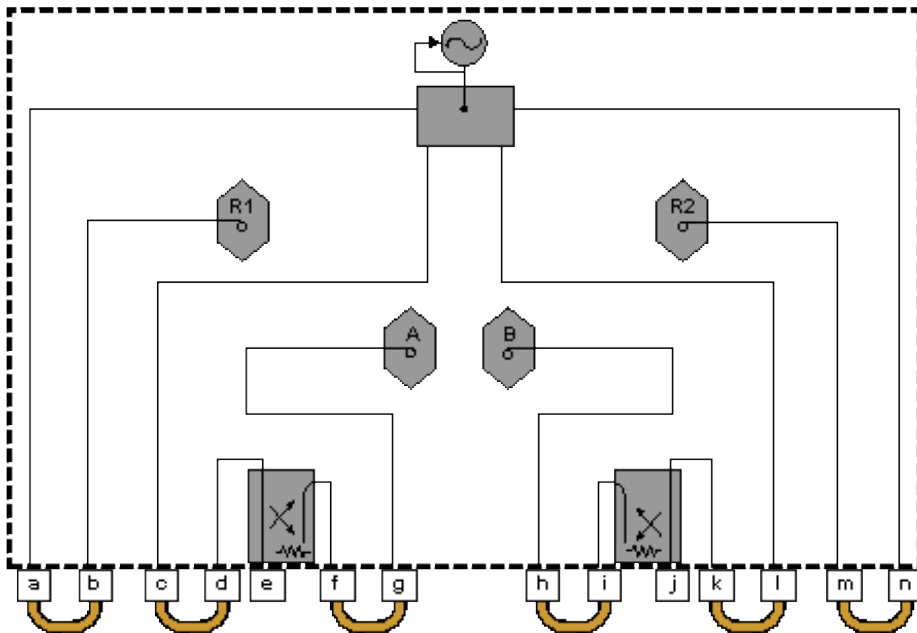


Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

E836xB - Option 014 – Configurable Test Set and Standard Power Range, and Option 081 Reference Channel Transfer Switch

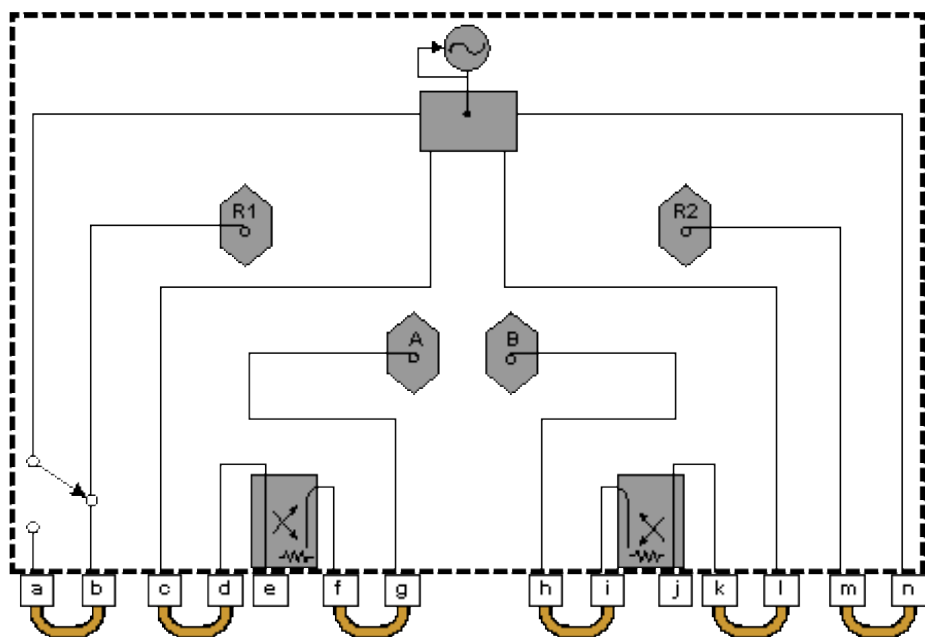


Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

E836xB - Option 014 Configurable Test Set, and Option UNL Extended Power Range and Bias - Tees

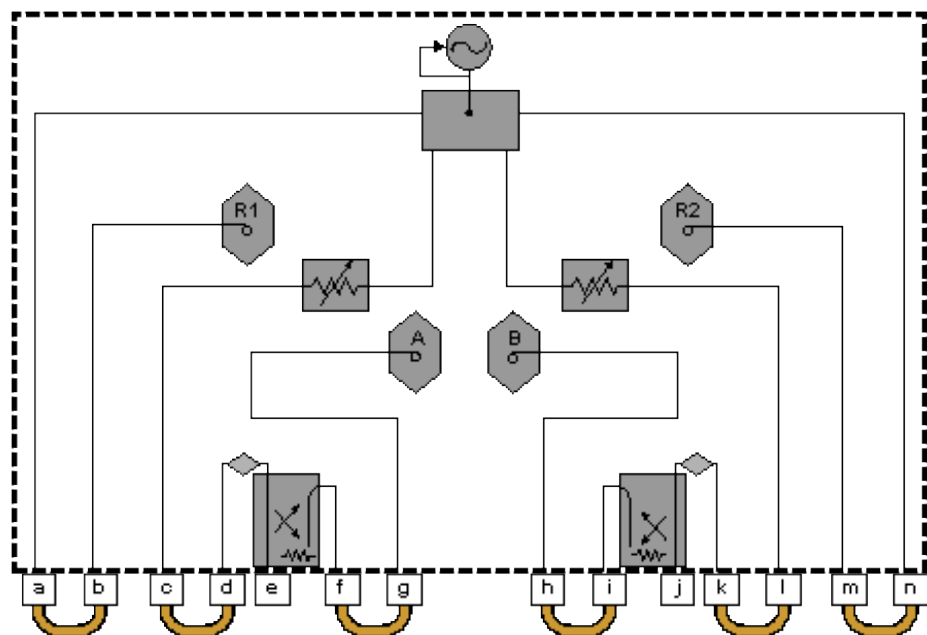


Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

E836xB - Option 014 Configurable Test Set, and Option UNL Extended Power Range and Bias - Tees, and Option 081 Reference Channel Transfer Switch

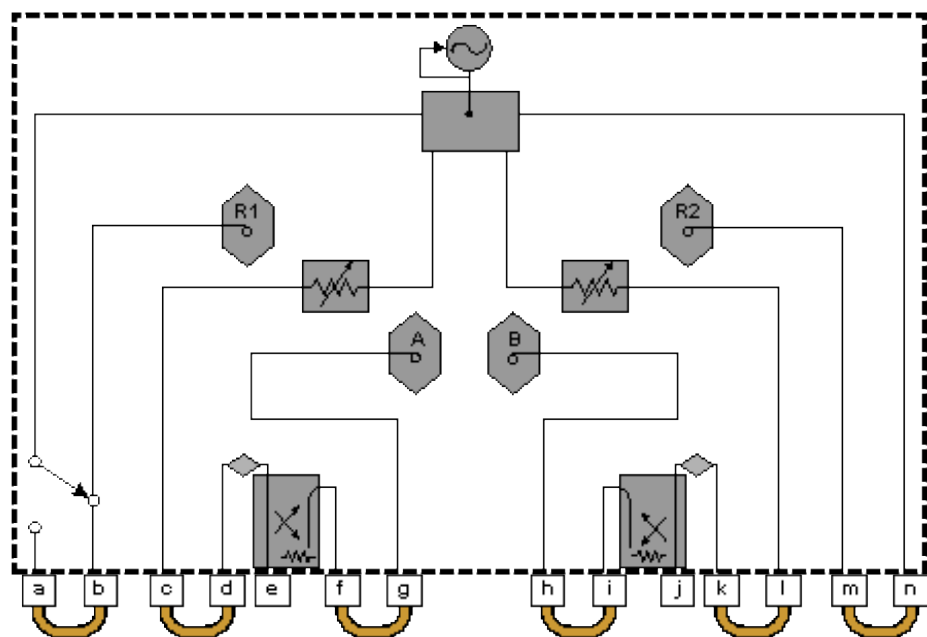


Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

E836xB - Option 014 Configurable Test Set and Option UNL, Extended Power Range and Bias - Tees and Option 016 Receiver Attenuators

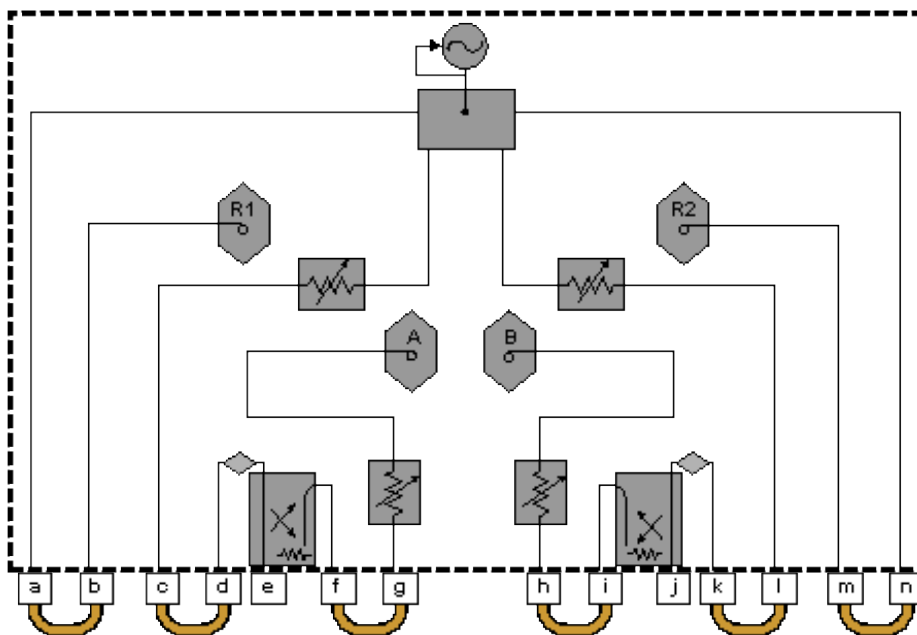

Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

E836xB - Option 014 Configurable Test Set, and Option UNL Extended Power Range and Bias - Tees, and Option 016 Receiver Attenuators, and Option 081 Reference Channel Transfer Switch

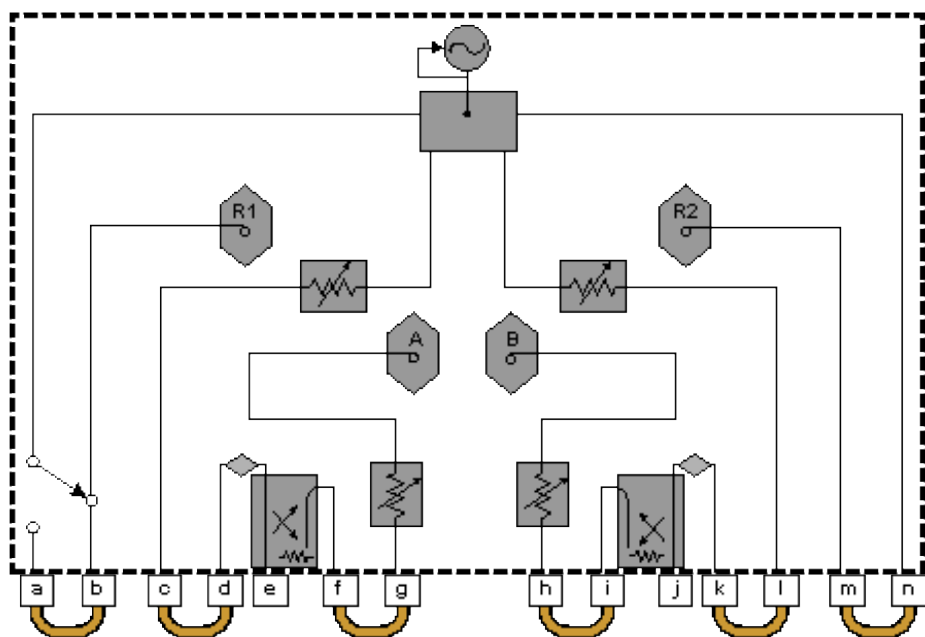

Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

Last modified:

Jan. 10, 2007 Revised line power, and CPU values; moved regulatory, operating, and non-operating info to the I&QS Guide.

Oct. 5, 2006 Added 350W typical to line power

Oct. 28, 2005 Previous revision

Technical Specifications for the N5230A

Options 020/025, 120/125, 220/225, 420/425, or 520/525 (2-Port PNA)

(Rev. 2007-01-10)

This is a complete list of the N5230A Options 020, 025, 120, 125, 220, 225, 420, 425, 520, 525 network analyzer technical specifications.

- To optimize viewing of uncertainty curves, click the Maximize button.
- To view or print the .pdf version of the specifications, visit our web site at <http://www.agilent.com/find/pna>, and search for "N5230A Specifications"
- This N5230A document provides technical specifications for the 85056A 2.4 mm, 85052B 3.5 mm, and 85032B Type-N calibration kits and the N4691A, and N4693A ECal modules. Please download our free Uncertainty Calculator from http://www.agilent.com/find/na_calculator to generate the curves for your calibration kit and PNA setup.

-
- [Definitions](#)
 - [Corrected System Performance](#)
 - [System Dynamic Range](#)
 - [Extended Dynamic Range](#)
 - [3.5mm Connectors](#)
 - [2.4mm Connectors](#)
 - [Type-N Connectors](#)
 - [Uncorrected System Performance](#)
 - [Test Port Output](#)
 - [Test Port Input](#)
 - [Dynamic Accuracy](#)
 - [Group Delay](#)
 - [General Information](#)
 - [Measurement Throughput Summary](#)
 - [Front-panel Jumper Specs \(Options 025, 125, 225, 425, 525\)](#)
 - [Option 020, or 120, or 220, or 420, or 520 \(Standard Test Set and Standard Power Range\) Analyzer Block Diagram](#)

- [Option 025, or 125, or 225, or 425, or 525 \(Configurable Test Set and Extended Power Range\) Analyzer Block Diagram](#)

See [Specs for other PNA models](#)

Definitions

All specifications and characteristics apply over a 25 °C \pm 5 °C range (unless otherwise stated) and 90 minutes after the instrument has been turned on.

Specification (spec.): Warranted performance. Specifications include guardbands to account for the expected statistical performance distribution, measurement uncertainties, and changes in performance due to environmental conditions.

Characteristic (char.): A performance parameter that the product is expected to meet before it leaves the factory, but that is not verified in the field and is not covered by the product warranty. A characteristic includes the same guardbands as a specification.

Typical (typ.): Expected performance of an average unit which does not include guardbands. It is not covered by the product warranty.

Nominal (nom.): A general, descriptive term that does not imply a level of performance. It is not covered by the product warranty.

Calibration: The process of measuring known standards to characterize a network analyzer's systematic (repeatable) errors.

Corrected (residual): Indicates performance after error correction (calibration). It is determined by the quality of calibration standards and how well "known" they are, plus system repeatability, stability, and noise.

Uncorrected (raw): Indicates instrument performance without error correction. The uncorrected performance affects the stability of a calibration.

Standard: When referring to the analyzer, this includes no options unless noted otherwise.

Corrected System Performance

The specifications in this section apply for measurements made with the N5230A analyzer with the following conditions:

- 10 Hz IF bandwidth
- No averaging applied to data
- Isolation calibration with an averaging factor of 8

- [System Dynamic Range](#)
- [Extended Dynamic Range](#)
- [3.5mm Connectors](#)
- [2.4mm Connectors](#)
- [Type-N Connectors](#)

Table 1. System Dynamic Range¹

Description	Specification (dB) at Test Port				Typical (dB) at Test Port			
	Options 020, 120	Option 220	Option 420	Option 520	Options 020, 120	Option 220	Option 420	Option 520
Standard Configuration and Standard Power Range								
300 kHz to 3 MHz ³	93 ⁴	--	--	--	--	--	--	--
3 MHz to 10 MHz	113	--	--	--	--	--	--	--
10 MHz to 45 MHz	122	--	--	--	--	103	89	89
45 MHz to 70 MHz ²	122	101	90	90	--	--	--	--
70 MHz to 500 MHz ²	122	105	90	90	--	--	--	--
500 MHz to 2 GHz	122	110	110	110	--	--	--	--
2 GHz to 6 GHz	122	110	110	110	--	--	--	--
6 GHz to 8 GHz	120	110	110	110	--	--	--	--
8 GHz to 9 GHz	120	110	100	100	--	--	--	--
9 GHz to 10.5 GHz	116	110	100	100	--	--	--	--
10.5 GHz to 12.5 GHz	111	110	100	100	--	--	--	--
12.5 GHz to 13.5 GHz	109	108	100	100	--	--	--	--
13.5 GHz to 20 GHz	--	108	100	100	--	--	--	--
20 GHz to 31.25 GHz	--	--	95	95	--	--	--	--
31.25 GHz to 40 GHz	--	--	90	90	--	--	--	--
40 GHz to 50 GHz	--	--	--	79	--	--	--	--

Table 1. System Dynamic Range¹ (Continued)

Description	Specification (dB) at Test Port				Typical (dB) at Test Port			
	Options 025, 125	Option 225	Option 425	Option 525	Options 025, 125	Option 225	Option 425	Option 525
Configurable Test Set and Extended Power Range								
300 kHz to 3 MHz ³	92 ⁴	--	--	--	--	--	--	--
3 MHz to 10 MHz	112	--	--	--	--	--	--	--
10 MHz to 45 MHz	121	--	--	--	--	103	88	88
45 MHz to 70 MHz ²	121	101	90	90	--	--	--	--
70 MHz to 500 MHz ²	121	105	90	90	--	--	--	--
500 MHz to 2 GHz	121	110	110	110	--	--	--	--
2 GHz to 6 GHz	121	110	110	110	--	--	--	--
6 GHz to 8 GHz	120	110	110	110	--	--	--	--
8 GHz to 9 GHz	120	110	100	100	--	--	--	--
9 GHz to 10.5 GHz	116	110	100	100	--			
10.5 GHz to 12.5 GHz	111	110	100	100	--	--	--	--
12.5 GHz to 13.5 GHz	108	108	100	100	--	--	--	--
13.5 GHz to 20 GHz	--	108	100	100	--	--	--	--
20 GHz to 31.25 GHz	--	--	92	92	--	--	--	--
31.25 GHz to 40 GHz	--	--	87	87	--	--	--	--
40 GHz to 50 GHz	--	--	--	75	--	--	--	--

1 The system dynamic range is calculated as the difference between the noise floor and the specified source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account.

2 May be degraded by 10 dB at particular frequencies (multiples of 5 MHz) below 500 MHz due to spurious receiver residuals. Methods are available to regain the full dynamic range.

3 May be limited by Crosstalk at certain frequencies below 3MHz.

4 Value and frequency band changed July 2006.

Receiver Dynamic Range technical specifications are not provided in this N5230A specs document.

Table 2. Extended Dynamic Range¹

Description	Specification (dB) at Direct Receiver Access Input				Typical (dB) at Direct Receiver Access Input			
	Option 025, 125	Option 225	Option 425	Option 525	Option 025, 125	Option 225	Option 425	Option 525
Configurable Test Set and Extended Power Range								
300 kHz to 3 MHz ³	108 ⁴	--	--	--	--	--	--	--
3 MHz to 10 MHz	128	--	--	--	--	--	--	--
10 MHz to 45 MHz	137	--	--	--	--	115	109	109
45 MHz to 70 MHz ²	137	113	111	111	--	--	--	--
70 MHz to 500 MHz ²	137	117	111	111	--	--	--	--
500 MHz to 2 GHz	137	122	122	122	--	--	--	--
2 GHz to 6 GHz	137							
6 GHz to 8 GHz	136	122	122	122	--	--	--	--
8 GHz to 9 GHz	136							
9 GHz to 10.5 GHz	132	122	112	112	--	--	--	--
10.5 GHz to 12.5 GHz	127	122	112	112	--	--	--	--
12.5 GHz to 13.5 GHz	124	120	112	112	--	--	--	--
13.5 GHz to 20 GHz	--	120	112	112	--	--	--	--
20 GHz to 31.25 GHz	--	--	103	103	--	--	--	--
31.25 GHz to 40 GHz	--	--	98	98	--	--	--	--

40 GHz to 50 GHz	--	--	--	83	--	--	--	--
------------------	----	----	----	----	----	----	----	----

1 The direct receiver access input extended dynamic range is calculated as the difference between the direct receiver access input noise floor and the source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account. This set-up should only be used when the receiver input will never exceed its compression or damage level. When the analyzer is in segment sweep mode, it can have predefined frequency segments which will output a higher power level when the extended dynamic range is required (i.e. devices with high insertion loss), and reduced power when receiver compression or damage may occur (i.e. devices with low insertion loss). The extended range is only available in one-path transmission measurements.

2 May be degraded by 10 dB at particular frequencies (multiples of 5 MHz) below 500 MHz due to spurious receiver residuals. Methods are available to regain the full dynamic range.

3 May be limited by Crosstalk at certain frequencies below 3MHz.

4 Value and frequency band changed July 2006.

[Corrected System Performance with 3.5mm Connectors](#) (Tables 3 - 8)

[Corrected System Performance with 2.4mm Connectors](#) (Tables 9 - 12)

[Corrected System Performance with Type-N Connectors](#) (Tables 13 - 14)

Table 15. Uncorrected System Performance

Description	Specifications				Typical			
	Options 020, 025, 120, 125	Options 220, 225	Options 420, 425	Options 520, 525	Options 020, 025, 120, 125	Options 220, 225	Options 420, 425	Options 520, 525
Directivity								
300 kHz to 10 MHz	16 dB	--	--	--	--	23 dB	--	
10 MHz to 45 MHz	28 dB	--	--	--	--		20 dB	20 dB
45 MHz to 500 MHz	28 dB	24 dB	23 dB	23 dB	--	--	--	--
500 MHz to 1 GHz	28 dB	27 dB	23 dB	23 dB	--	--	--	--
1 GHz to 2 GHz	25 dB	27 dB	23 dB	23 dB	--	--	--	--
2 GHz to 3 GHz	25 dB	21 dB	21 dB	21 dB	--	--	--	--

3 GHz to 5 GHz	20 dB	21 dB	21 dB	21 dB	--	--	--	--
5 GHz to 8 GHz	17 dB	21 dB	21 dB	21 dB	--	--	--	--
8 GHz to 11.5 GHz	17 dB	16 dB	16 dB	16 dB	--	--	--	--
11.5 GHz to 13.5 GHz	15 dB	16 dB	16 dB	16 dB	--	--	--	--
13.5 GHz to 20 GHz	--	16 dB	16 dB	16 dB	--	--	--	--
20 GHz to 40 GHz	--	--	15 dB	15 dB	--	--	--	--
45 GHz to 50 GHz	--	--	--	13 dB	--	--	--	--
Source Match								
300 kHz to 10 MHz	18 dB	--	--	--	--	--	--	--
10 MHz to 45 MHz	25 dB	--	--	--	-	12 dB	11 dB	11 dB
45 MHz to 500 MHz	25 dB	20 dB	17 dB	17 dB	--	--	--	--
500 MHz to 2 GHz	21 dB	17 dB	17 dB	17 dB	--	--	--	--
2 GHz to 3 GHz	19 dB	12 dB	12 dB	12 dB	--	--	--	
3 GHz to 8 GHz	12 dB	12 dB	12 dB	12 dB	--	--	--	--
8 GHz to 9 GHz	12 dB	11 dB	11 dB	11 dB	--	--	--	
9 GHz to 12.5 GHz	10 dB	11 dB	11 dB	11 dB	--	--	--	--
12.5 GHz to 13.5 GHz	8 dB	10 dB	11 dB	11 dB	--	--	--	--

13.5 GHz to 20 GHz	--	10 dB	11 dB	11 dB	--	--	--	--
20 GHz to 40 GHz	--	--	7 dB	7 dB	--	--	--	--
40 GHz to 50 GHz	--	--	--	6 dB	--	--	--	--

Table 15. Uncorrected System Performance (Continued)

Description	Specifications				Typical			
	Options 020, 025, 120, 125	Options 220, 225	Options 420, 425	Options 520, 525	Options 020, 025, 120, 125	Options 220, 225	Options 420, 425	Options 520, 525
Load Match								
300 kHz to 10 MHz	17 dB	--	--	--	--	--	--	--
10 MHz to 45 MHz	22 dB	--	--	--	--	15 dB	13 dB	13 dB
45 MHz to 500 MHz	22 dB	22 dB	18 dB	18 dB	--	--	--	--
500 MHz to 2 GHz	17 dB	20 dB	18 dB	18 dB	--	--	--	--
2 GHz to 3 GHz	14 dB	12 dB	14 dB	14 dB	--	--	--	--
3 GHz to 8 GHz	10 dB	12 dB	14 dB	14 dB	--	--	--	--
8 GHz to 9 GHz	9 dB	10 dB	12 dB	12 dB	--	--	--	--
9 GHz to 12.5 GHz	9 dB	10 dB	12 dB	12 dB	--	--	--	--
12.5 GHz to 13.5 GHz	7 dB	9 dB	9 dB	9.5 dB	--	--	--	--

13.5 GHz to 20 GHz	--	9 dB	9 dB	9.5 dB	--	--	--	--
20 GHz to 40 GHz	--	--	8 dB	8.5 dB	--	--	--	--
40 GHz to 50 GHz	--	--	--	5 dB	--	--	--	--

Table 15. Uncorrected System Performance (Continued)

Description	Specifications				Typical			
	Options 020, 025, 120, 125	Options 220, 225	Options 420, 425	Options 520, 525	Options 020, 025, 120, 125	Options 220, 225	Options 420, 425	Options 520, 525
Crosstalk¹								
300 kHz to 10 MHz	--	--	--	--	75 dB ²	--	--	--
10 MHz to 45 MHz	--	--	--	--	115 dB	88 dB	88 dB	88 dB
45 MHz to 500 MHz	--	--	--	--	122 dB	95 dB	94 dB	94 dB
500 MHz to 2 GHz	--	--	--	--	122 dB	96 dB	95 dB	95 dB
2 GHz to 8 GHz	--	--	--	--	122 dB	110 dB	108 dB	108 dB
8 GHz to 10.5 GHz	--	--	--	--	120 dB	116 dB	113 dB	113 dB
10.5 GHz to 12.5 GHz	--	--	--	--	115 dB	116 dB	113 dB	113 dB
12.5 GHz to 13.5 GHz	--	--	--	--	109 dB	115 dB	112 dB	112 dB
13.5 GHz to 20 GHz	--	--	--	--	--	115 dB	112 dB	112 dB

20 GHz to 40 GHz	--	--	--	--	--	--	97 dB	97 dB
40 GHz to 50 GHz	--	--	--	--	--	--	--	89 dB

1 Measurement conditions: normalized to a thru, measured with two shorts, 10 Hz IF bandwidth, averaging factor of 8, alternate mode, source power set to the specified maximum power output or the minimum receiver input power specified by the 0.1 dB compression power.

6 Value changed July 2006

Table 16. Test Port Output¹

Description	Specifications					Typicals			
	Options 020, 025	Options 120, 125	Options 220, 225	Options 420, 425	Options 520, 525	Options 020, 025, 120, 125	Options 220, 225	Options 420, 425	Options 520, 525
Frequency Range									
N5230A	300kHz to 6 GHz	300kHz to 13.5 GHz	10 MHz to 20 GHz	10 MHz to 40 GHz	10 MHz to 50 GHz	--			
Nominal Power									
Preset power; attenuator switch point 10 dB below nominal power									
	0 dBm	0 dBm	-5 dBm	-10 dBm	-15 dBm	--			
Frequency Resolution									
	1 Hz					--			
CW Accuracy									
	+/-1 ppm					--			
Frequency Stability									
	--					+/-0.05 ppm. -10° to 70° C +/-0.1 ppm/yr maximum			

Table 16. Test Port Output¹ (Continued)

Description	Specifications					Typical		
	Options 020, 025, 120, 125	Options 220, 225	Options 420, 425	Option 520	Option 525	Options 020, 025, 120, 125	Option 220, 225	Option 420, 425, 520, 525
Power Level Accuracy								
Variation from nominal power in range 0								
300 kHz to 10 MHz	+/-1.0 dB	--	--	--	--	--	--	--
10 MHz to 45 MHz	+/-1.0 dB	--	--	--	--	--	+/-0.5 dB	+/-0.5 dB
45 MHz to 6 GHz	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	--	--	--
6 GHz to 8 GHz	+/-1.5 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	--	--	--
8 GHz to 9 GHz	+/-1.5 dB	+/-1.0 dB	+/-1.5 dB	+/-1.5 dB	+/-1.5 dB	--	--	--
9 GHz to 10.5 GHz	+/-1.5 dB	+/-1.0 dB	+/-1.5 dB	+/-1.5 dB	+/-1.5 dB	--	--	--
10.5 GHz to 13.5 GHz	+/-2.0 dB	+/-1.0 dB	+/-1.5 dB	+/-1.5 dB	+/-1.5 dB	--	--	--
13.5 to 20 GHz	--	+/-1.0 dB	+/-1.5 dB	+/-1.5 dB	+/-1.5 dB	--	--	--
20 GHz to 40 GHz	--	--	+/-2.5 dB	+/-2.5 dB	+/-2.5 dB	--	--	--

40 GHz to 50 GHz	--	--	--	+/-3.5 dB	+/-3.5 dB	--	--	--
------------------	----	----	----	-----------	-----------	----	----	----

Table 16. Test Port Output¹ (Continued)

	Specifications							Typical
	Options 020, 120	Options 025, 125	Options 220, 225	Option 420	Option 425	Option 520	Option 525	Options 220, 225
Max Levelled Power								
300 kHz to 10 MHz	10 dBm	9 dBm	--	--	--	--	--	--
10 MHz to 45 MHz	10 dBm	9 dBm	--	--	--	--	--	5 dBm
45 MHz to 6 GHz	10 dBm	9 dBm	5 dBm	0 dBm	0 dBm	0 dBm	0 dBm	--
6 GHz to 9 GHz	8 dBm	8 dBm	5 dBm	0 dBm	0 dBm	0 dBm	0 dBm	--
9 GHz to 12.5 GHz	4 dBm	4 dBm	5 dBm	0 dBm	0 dBm	0 dBm	0 dBm	--
12.5 GHz to 13.5 GHz	2 dBm	1 dBm	3 dBm	0 dBm	0 dBm	0 dBm	0 dBm	--
13.5 GHz to 20 GHz	--	--	3 dBm	0 dBm	0 dBm	0 dBm	0 dBm	--
20 GHz to 40 GHz	--	--	--	-5 dBm	-8 dBm	-5 dBm	-8 dBm	--
40 GHz to 50 GHz	--	--	--	--	--	-11 dBm	-15 dBm	--
Power Level Linearity²								Options as Indicated
Test reference is at the nominal power level								

300 kHz to 1 MHz	+/-4.5 dB	+/-4.5 dB	--	--	--	--	--	+/-2.0 dB (Opt 020, 025, 120, 125)
1 MHz to 10 MHz	+/-1.0 dB	+/-1.0 dB	--	--	--	--	--	--
10 MHz to 45 MHz	+/-2.0 dB	+/-2.0 dB	--	--	--	--	--	+/-0.35 dB (Opt 220 & 225) +/-0.40 dB (Opt 420, 425, 520, 525)
45 MHz to 1 GHz	+/-2.0 dB	+/-2.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	--
1 GHz to 12.5 GHz	+/-1.5 dB	+/-1.5 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	--
12.5 GHz to 13.5 GHz	+/-1.5 dB	+/-1.5 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	--
13.5 GHz to 20 GHz	--	--	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	--
20 GHz to 40 GHz	--	--	--	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	+/-1.0 dB	--
40 GHz to 50 GHz	--	--	--	--	--	+/-1.0 dB	+/-1.0 dB	--
Power Sweep Range (ALC)³								Options 220, 225
300 kHz to 10 MHz	37 dB	36 dB	--	--	--	--	--	--
10 MHz to 45 MHz	37 dB	36 dB	--	--	--	--	--	25 dB
45 MHz to 6 GHz	37 dB	36 dB	25 dB	25 dB	25 dB	25 dB	25 dB	--
6 GHz to 9 GHz	35 dB	35 dB	25 dB	25 dB	25 dB	25 dB	25 dB	--

9 GHz to 12.5 GHz	31 dB	31 dB	25 dB	25 dB	25 dB	25 dB	25 dB	--
12.5 GHz to 13.5 GHz	29 dB	28 dB	23 dB	25 dB	25 dB	25 dB	25 dB	--
13.5 GHz to 20 GHz	--	--	23 dB	25 dB	25 dB	25 dB	25 dB	--
20 GHz to 40 GHz	--	--	--	20 dB	17 dB	20 dB	17 dB	--
40 GHz to 50 GHz	--	--	--	--	--	14 dB	10 dB	--
Power Resolution								Options as Indicated
								0.01 dB (All Options)

Table 16. Test Port Output¹ (Continued)

Description	Specifications	Typical					
		Option 020, 120	Option 025, 125	Option 220	Option 225	Option 420, 520	Option 425, 525
Power Range							
300 kHz to 10 MHz	--	-30 to +10 dBm	-90 to +9 dBm	--	--	--	--
10 MHz to 45 MHz	--	-30 to +10 dBm	-90 to +9 dBm	-27 to +12 dBm	-87 to +12 dBm	-27 to +9 dBm	-87 to +8 dBm
45 MHz to 6 GHz	--	-30 to +10 dBm	-90 to +9 dBm	-27 to +12 dBm	-87 to +12 dBm	-27 to +8 dBm	-87 to +8 dBm
6 GHz to 9 GHz	--	-30 to +8 dBm	-90 to +8 dBm	-27 to +12 dBm	-87 to +12 dBm	-27 to +8 dBm	-87 to +8 dBm

9 GHz to 12.5 GHz	--	-30 to +4 dBm	-90 to +4 dBm	-27 to +12 dBm	-87 to +12 dBm	-27 to +8 dBm	-87 to +8 dBm
12.5 GHz to 13.5 GHz	--	-30 to +2 dBm	-90 to +1 dBm	-27 to +7 dBm	-87 to +7 dBm	-27 to +5 dBm	-87 to +4 dBm
13.5 GHz to 20 GHz	--	--	--	-27 to +7 dBm	-87 to +7 dBm	-27 to +5 dBm	-87 to +4 dBm
20 GHz to 40 GHz	--	--	--	--	--	-27 to +1 dBm	-87 to -2 dBm
40 GHz to 50 GHz	--	--	--	--	--	-27 to -5 dBm	-87 to -9 dBm
Power Settings							
Minimum Power Setting	--	-33 dBm	-93 dBm	-30 dBm	-90 dBm	-30 dBm	-90 dBm
Maximum Power Setting	--	+20 dBm					

Table 16. Test Port Output¹ (Continued)

Description	Specifications	Typical					
	--	Options 020, 025, 120, 125			Options 220, 225, 420, 425, 520, 525		
Phase Noise (Nominal power at test port)							
	--	10 kHz Offset	100 kHz Offset	1 MHz Offset	10 kHz Offset	100 kHz Offset	1 MHz Offset
300 kHz to 10 MHz	--	-86 dBc/Hz	-86 dBc/Hz	-95 dBc/Hz	--	--	--
10 MHz to 1.5 GHz	--	-86 dBc/Hz	-91 dBc/Hz	-95 dBc/Hz	-77 dBc/Hz	-77 dBc/Hz	-89 dBc/Hz

1.5 GHz to 3.125 GHz	--	-83 dBc/Hz	-91 dBc/Hz	-95 dBc/Hz	-83 dBc/Hz	-91 dBc/Hz	-95 dBc/Hz
3.125 GHz to 6.25 GHz	--	-77 dBc/Hz	-85 dBc/Hz	-89 dBc/Hz	-77 dBc/Hz	-85 dBc/Hz	-89 dBc/Hz
6.25 GHz to 12.5 GHz	--	-71 dBc/Hz	-79 dBc/Hz	-83 dBc/Hz	-71 dBc/Hz	-79 dBc/Hz	-83 dBc/Hz
12.5 GHz to 13.5 GHz	--	-65 dBc/Hz	-73 dBc/Hz	-77 dBc/Hz	-65 dBc/Hz	-73 dBc/Hz	-77 dBc/Hz
13.5 GHz to 20 GHz	--	--	--	--	-65 dBc/Hz	-73 dBc/Hz	-77 dBc/Hz
20 GHz to 40 GHz	--	--	--	--	-59 dBc/Hz	-67 dBc/Hz	-71 dBc/Hz
40 GHz to 50 GHz	--	--	--	--	-59 dBc/Hz	-67 dBc/Hz	-71 dBc/Hz

Table 16. Test Port Output¹ (Continued)

Description	Specifications	Typicals
	--	Options 020, 025, 120, 125, 220, 225, 420, 520, 425, 525
Non-Harmonic Spurious (at Nominal Output Power)		
300 kHz to 10 MHz	--	-50 dBc for offset frequency > 1 kHz
10 MHz to 13.5 GHz	--	
13.5 GHz to 20 GHz	--	
20 GHz to 40 GHz	--	-30 dBc for offset frequency > 1 kHz
40 GHz to 50 GHz	--	

Table 16. Test Port Output¹ (Continued)

Description	Specifications	Typical			
	--	Option 020, 025, 120, 125	Option 220, 225	Option 420, 520	Option 425, 525
Harmonics (2nd or 3rd) at Maximum Output Power					
300 kHz to 10 MHz	--	-17 dBc	--	--	--
10 MHz to 500 MHz	--	-17 dBc	-22 dBc	-15 dBc	-15 dBc
500 MHz to 1 GHz	--	-17 dBc	-22 dBc	-15 dBc	-15 dBc
1 GHz to 13.5 GHz	--	-20 dBc	22 dBc	-20 dBc	-20 dBc
13.5 GHz to 20 GHz	--	--	-22 dBc	-20 dBc	-20 dBc
20 GHz to 40 GHz	--	--	--	-22 dBc	-22 dBc
40 GHz to 50 GHz	--	--	--	--	-22 dBc

¹Performance specified on Port 1 only. Port 2 performance is a characteristic.

²Power level linearity specified on Port 1 only. Port 2 performance is Typical. Test reference is at the nominal power level.

³ALC range starts at maximum leveled power and decreases in power level by the dB amount specified here.

Table 17. Test Port Input

Description	Specification				Typical			
	Options 020, 025, 120, 125	Options 220, 225	Options 420, 425	Options 520, 525	Options 020, 025, 120, 125	Options 220, 225	Options 420, 425	Options 520, 525

Test Port Noise Floor ¹								
10 Hz IF Bandwidth ⁵								
300 kHz to 3 MHz	<-83 dBm ⁶	--	--	--	<-94 dBm ⁶	--	--	--
3 MHz to 10 MHz	<-103 dBm	--	--	--	<-110 dBm	--	--	--
10 MHz to 45 MHz	<-112 dBm	--	--	--	<-116 dBm	<-89 dBm	<-80 dBm	<-80 dBm
45 MHz to 70 MHz	<-112 dBm	<-96 dBm	<-90 dBm	<-90 dBm	<-116 dBm	--	--	--
70 MHz to 500 MHz	<-112 dBm	<-100 dBm	<-90 dBm	<-90 dBm	<-116 dBm	--	--	--
500 MHz to 2 GHz	<-112 dBm	<-105 dBm	<-110 dBm	<-110 dBm	<-120 dBm	--	--	--
2 GHz to 4 GHz	<-112 dBm	<-105 dBm	<-110 dBm	<-110 dBm	<-120 dBm	--	--	--
4 GHz to 8 GHz	<-112 dBm	<-105 dBm	<-110 dBm	<-110 dBm	<-119 dBm	--	--	--
8 GHz to 10.5 GHz	<-112 dBm	<-105 dBm	<-100 dBm	<-100 dBm	<-119 dBm	--	--	--
10.5 GHz to 13.5 GHz	<-107 dBm	<-105 dBm	<-100 dBm	<-100 dBm	<-114 dBm	--	--	--
10.5 GHz to 13.5 GHz	--	<-105 dBm	<-100 dBm	<-100 dBm	--	--	--	--
13.5 GHz to 20 GHz	--	<-105 dBm	<-100 dBm	<-100 dBm	--	--	--	--
20 GHz to 31.25 GHz	--	--	<-100 dBm	<-100 dBm	--	--	--	--
31.25 GHz to 40 GHz	--	--	<-95 dBm	<-95 dBm	--	--	--	--
40 GHz to 50 GHz	--	--	--	<-90 dBm	--	--	--	--
1 kHz IF Bandwidth								

300 kHz to 3 MHz	<-73 dBm	--	--	--	<-83 dBm	--	--	--
3 MHz to 10 MHz	<-83 dBm	--	--	--	<-90 dBm	--	--	--
10 MHz to 45 MHz	<-92 dBm	--	--	--	<-96 dBm	<-69 dBm	<-60 dBm	<-60 dBm
45 MHz to 70 MHz	<-92 dBm	<-76 dBm	<-70 dBm	<-70 dBm	<-96 dBm	--	--	--
70 MHz to 500 MHz	<-92 dBm	<-80 dBm	<-70 dBm	<-70 dBm	<-96 dBm	--	--	--
500 MHz to 2 GHz	<-92 dBm	<-85 dBm	<-90 dBm	<-90 dBm	<-100 dBm	--	--	--
2 GHz to 4 GHz	<-92 dBm	<-85 dBm	<-90 dBm	<-90 dBm	<-100 dBm	--	--	--
4 GHz to 8 GHz	<-92 dBm	<-85 dBm	<-90 dBm	<-90 dBm	<-99 dBm	--	--	--
8 GHz to 10.5 GHz	<-92 dBm	<-85 dBm	<-80 dBm	<-80 dBm	<-99 dBm	--	--	--
10.5 GHz to 13.5 GHz	<-87 dBm	<-85 dBm	<-80 dBm	<-80 dBm	<-94 dBm	--	--	--
13.5 GHz to 20 GHz	--	<-85 dBm	<-80 dBm	<-80 dBm	--	--	--	--
20 GHz to 31.25 GHz	--	--	<-80 dBm	<-80 dBm	--	--	--	--
31.25 GHz to 40 GHz	--	--	<-75 dBm	<-75 dBm	--	--	--	--
40 GHz to 50 GHz	--	--	--	<-70 dBm	--	--	--	--

Table 17. Test Port Input (Continued)

Description	Specification				Typical			
-------------	---------------	--	--	--	---------	--	--	--

	Options 025, 125	Options 225	Options 425	Options 525	Options 025, 125	Options 225	Options 425	Options 525
Direct Receiver Access Input Noise Floor¹ (Options 025, 125, 225, 425, and 525 only)								
10 Hz IF Bandwidth								
300 kHz to 3 MHz	<-99 dBm ⁶	--	--	--	--	--	--	--
3 MHz to 10 MHz	<-119 dBm	--	--	--	--	--	--	--
10 MHz to 45 MHz	<-128 dBm	--	--	--	--	<-120 dBm	<-126 dBm	<-126 dBm
45 MHz to 70 MHz	<-128 dBm	<-108 dBm	<-111 dBm	<-111 dBm	--	--	--	--
70 MHz to 500 MHz	<-128 dBm	<-112 dBm	<-111 dBm	<-111 dBm	--	--	--	--
500 MHz to 2 GHz	<-128 dBm	<-117 dBm	<-122 dBm	<-122 dBm	--	--	--	--
2 GHz to 8 GHz	<-128 dBm	<-117 dBm	<-122 dBm	<-122 dBm	--	--	--	--
8 GHz to 10.5 GHz	<-128 dBm	<-117 dBm	<-112 dBm	<-112 dBm	--	--	--	--
10.5 GHz to 13.5 GHz	<-128 dBm	<-117 dBm	<-112 dBm	<-112 dBm	--	--	--	--
13.5 GHz to 20 GHz	<-123 dBm	<-117 dBm	<-112 dBm	<-112 dBm	--	--	--	--
20 GHz to 31.25 GHz	--	--	<-111 dBm	<-111 dBm	--	--	--	--
31.25 GHz to 40 GHz	--	--	<-106 dBm	<-106 dBm	--	--	--	--
40 GHz to 50 GHz	--	--	--	<-98 dBm	--	--	--	--
1 kHz IF Bandwidth								

300 kHz to 3 MHz	<-89 dBm	--	--	--	--	--	--	--
3 MHz to 10 MHz	<-99 dBm	--	--	--	--	--	--	--
10 MHz to 45 MHz	<-108 dBm	--	--	--	--	<-100 dBm	<-106 dBm	<-106 dBm
45 MHz to 70 MHz	<-108 dBm	<-88 dBm	<-91 dBm	<-91 dBm	--	--	--	--
70 MHz to 500 MHz	<-108 dBm	<-92 dBm	<-91 dBm	<-91 dBm	--	--	--	--
500 MHz to 2 GHz	<-108 dBm	<-97 dBm	<-102 dBm	<-102 dBm	--	--	--	--
2 GHz to 8 GHz	<-108 dBm	<-97 dBm	<-102 dBm	<-102 dBm	--	--	--	--
8 GHz to 10.5 GHz	<-108 dBm	<-97 dBm	<-92 dBm	<-92 dBm	--	--	--	--
10.5 GHz to 13.5 GHz	<-108 dBm	<-97 dBm	<-92 dBm	<-92 dBm	--			
13.5 GHz to 20 GHz	<-103 dBm	<-97 dBm	<-92 dBm	<-92 dBm	--	--	--	--
20 GHz to 31.25 GHz	--	--	<-91 dBm	<-91 dBm	--	--	--	--
31.25 GHz to 40 GHz	--	--	<-86 dBm	<-86 dBm	--	--	--	--
40 GHz to 50 GHz	--	--	--	<-78 dBm	--	--	--	--

Table 17. Test Port Input (Continued)

Description	Specification						Typical	
	Options 220, 225		Options 420, 520		Options 425, 525		Options 220, 225	
Compression Level								
	Power	Com- pression	Power	Com- pression	Power	Com- pression	Power	Com- pression
10 MHz to 45 MHz ²	--	--	--	--	--	--	+5 dBm	0.10 dB
45 MHz to 500 MHz	+5 dBm	0.10 dB	+5 dBm	0.40 dB	+5 dBm	0.40 dB	--	--
500 MHz to 2 GHz	+5 dBm	0.15 dB	+5 dBm	0.77 dB	+5 dBm	0.67 dB	--	--
2 GHz to 8 GHz	+5 dBm	0.21 dB	+5 dBm	0.75 dB	+5 dBm	0.55 dB	--	--
8 GHz to 12.5 GHz	+5 dBm	0.21 dB	+5 dBm	0.56 dB	+5 dBm	0.51 dB	--	--
12.5 GHz to 20 GHz	+3 dBm	0.20 dB	+5 dBm	0.79 dB	+5 dBm	0.69 dB	--	--
20 GHz to 31.25 GHz	--	--	0 dBm	0.60 dB	0 dBm	0.50 dB	--	--
31.25 GHz to 40 GHz	--	--	-3 dBm	0.55 dB	-3 dBm	0.60 dB	--	--
40 GHz to 50 GHz	--	--	-3 dBm	0.66 dB	-3 dBm	0.71 dB	--	--

Table 17. Test Port Input (Continued)

Description	Specification		Typical		
	Options 020, 120, 025, 125		--		
Compression Level (continued)					
	Power	Com- pression	--	--	--
300 kHz to 10 MHz	+8 dBm	1.0 dB (0.1 dB at +5 dBm typ.)	--	--	--
10 MHz to 50 MHz	+8 dBm	0.35 dB	--	--	--
50 MHz to 1GHz	+8 dBm	0.35 dB	--	--	--
1 GHz to 6 GHz	+8 dBm	0.25 dB	--	--	--
6 GHz to 8 GHz	+8 dBm	0.25 dB	--	--	--
8 GHz to 12.5 GHz	+8 dBm	0.30 dB	--	--	--
12.5 GHz to 13.5 GHz	+8 dBm	0.40 dB	--	--	--

Table 17. Test Port Input (Continued)

Description	Specification		Typical	
	--		Options 020, 120, 025, 125	
Test Port Compression - 0.1 dB				
	--	--	Power	Compression
300 kHz to 10 MHz	--	--	+5 dBm	0.1 dB
10 MHz to 1 GHz	--	--	+9 dBm	0.1 dB
1 GHz to 12.5 GHz	--	--	+10 dBm	0.1 dB
12.5 GHz to 13.5 GHz	--	--	+9 dBm	0.1 dB

Table 17. Test Port Input (Continued)

Description	Specification			Typical			
	Options 220, 225	Options 420, 425	Options 520, 525	Option 220	Option 225	Options 420, 425	Options 520, 525
Test Port Compression - 0.1 dB							
300 kHz to 10 MHz	--	--	--	--	--	--	--
10 MHz to 45 MHz ²	--	--	--	+10 dBm	negligible	negligible	negligible
45 MHz to 500 MHz	--	--	--	+10 dBm	+10 dBm	0.0 dBm	+1 dBm

500 MHz to 2 GHz	--	--	--	+9 dBm	+9 dBm	0.0 dBm	+1 dBm
2 GHz to 12.5 GHz	--	--	--	+6 dBm	+6 dBm	0.0 dBm	+1.5 dBm
12.5 GHz to 13.5 GHz	--	--	--	+6 dBm	+6 dBm	-1.0 dBm	0.0 dBm
13.5 GHz to 20 GHz	--	--	--	+6 dBm	+6 dBm	-1.0 dBm	0.0 dBm
20 GHz to 31.25 GHz	--	--	--	--	--	-5.5 dBm	-3.0 dBm
31.25 GHz to 40 GHz	--	--	--	--	--	-8.5 dBm	-7.5 dBm
40 GHz to 50 GHz	--	--	--	--	--	--	-10 dBm

Table 17. Test Port Input (Continued)

Description	Specification			Typical		
	Options 220, 225	Options 420, 520	Options 425, 525	Options 220, 225	Options 420, 520	Options 425, 525
Trace Noise Magnitude³						
1 kHz IF bandwidth, ratioed measurement, nominal power at test port.						
300 kHz to 10 MHz	--	--	--	--	--	--
10 MHz to 45 MHz	--	--	--	0.004 dB rms	0.015 dB rms	0.015 dB rms
45 MHz to 500 MHz	0.004 dB rms	0.010 dB rms	0.010 dB rms	--	--	--
500 MHz to 2 GHz	0.004 dB rms	0.006 dB rms	0.006 dB rms	--	--	--

2 GHz to 10.5 GHz	0.004 dB rms	0.006 dB rms	0.006 dB rms	--	--	--
10.5 GHz to 13.5 GHz	0.006 dB rms	0.010 dB rms	0.010 dB rms	--	--	--
13.5 GHz to 20 GHz	0.006 dB rms	0.010 dB rms	0.010 dB rms	--	--	--
20 GHz to 31.25 GHz	--	0.010 dB rms	0.010 dB rms	--	--	--
31.25 GHz to 40 GHz	--	0.020 dB rms	0.020 dB rms	--	--	--
40 GHz to 50 GHz	--	--	0.020 dB rms	--	--	--

Table 17. Test Port Input (Continued)

Description	Specification	Typical
	Options 020, 120, 025, 125	Options 020, 120, 025, 125
Trace Noise Magnitude³ (continued)		
100 kHz IF bandwidth, ratioed measurement, nominal power at test port		
300 kHz to 10 MHz	12 mdB	--
10 MHz to 6 GHz	4 mdB	--
6 GHz to 10.5 GHz	4 mdB	--
10.5 GHz to 13.5 GHz	8 mdB	--
600 kHz IF bandwidth, ratioed measurement, nominal power at test port		
300 kHz to 10 MHz	--	20 mdB

10 MHz to 6 GHz	--	8 mdB
6 GHz to 10.5 GHz	--	8 mdB
10.5 GHz to 13.5 GHz	--	10 mdB

Table 17. Test Port Input (Continued)

Description	Specification			Typical		
	Options 220, 225	Options 420, 520	Options 425, 525	Options 220, 225	Options 420, 520	Options 425, 525
Trace Noise Phase³						
1 kHz IF bandwidth, ratioed measurement, nominal power at test port.						
300 kHz to 10 MHz						
10 MHz to 45 MHz	--	--	--	0.025° rms	0.100° rms	0.100° rms
45 MHz to 500 MHz	0.060° rms	0.100° rms	0.100° rms	--	--	--
500 MHz to 2 GHz	0.060° rms	0.060° rms	0.060° rms	--	--	--
2 GHz to 10.5 GHz	0.060° rms	0.060° rms	0.060° rms	--	--	--
10.5 GHz to 13.5 GHz	0.060° rms	0.100° rms	0.100° rms			
13.5 GHz to 20 GHz	0.060° rms	0.100° rms	0.100° rms	--	--	--
20 GHz to 31.25 GHz	--	0.100° rms	0.100° rms	--	--	--
31.25 GHz to 40 GHz	--	0.200° rms	0.200° rms	--	--	--

40 GHz to 50 GHz	--	--	0.200° rms	--	--	--
------------------	----	----	------------	----	----	----

Table 17. Test Port Input (Continued)

Description	Specification	Technical
	Options 020, 120, 025, 125	Options 020, 120, 025, 125
Trace Noise Phase³ (continued)		
100 kHz IF bandwidth, ratioed measurement, nominal power at test port		
300 kHz to 10 MHz	80 mdeg	--
10 MHz to 6 GHz	30 mdeg	--
6 GHz to 10.5 GHz	30 mdeg	--
10.5 GHz to 13.5 GHz	60 mdeg	--
600 kHz IF bandwidth, ratioed measurement, nominal power at test port		
300 kHz to 10 MHz	--	100 mdeg
10 MHz to 6 GHz	--	60 mdeg
6 GHz to 10.5 GHz	--	60 mdeg
10.5 GHz to 13.5 GHz	--	80 mdeg

Table 17. Test Port Input (Continued)

Description	Specification	Typical
-------------	---------------	---------

	Options 020, 025, 120, 125, 220, 225, 420, 425, 520, 525	--
--	--	----

Reference Level Magnitude

Range	+/-200 dB	
Resolution	0.001dB	

Reference Level Phase

Range	+/-500°	
Resolution	0.01°	

Table 17. Test Port Input (Continued)

Description	Specification				Typical		
	--	--	--	--	Option 020, 025, 120, 125	Option 220, 225	Options 420, 425, 520, 525

Stability Magnitude⁴
--

300 kHz to 10 MHz	--	--	--	--	+/-0.015 dB/°C	--	--
10 MHz to 45 MHz	--	--	--	--	+/-0.010 dB/°C	+/-0.015 dB/°C	+/-0.015 dB/°C
45 MHz to 500 MHz	--	--	--	--	+/-0.010 dB/°C	+/-0.010 dB/°C	+/-0.010 dB/°C
500 MHz to 2 GHz	--	--	--	--	+/-0.010 dB/°C	+/-0.010 dB/°C	+/-0.010 dB/°C
2 GHz to 4 GHz	--	--	--	--	+/-0.015 dB/°C	+/-0.020 dB/°C	+/-0.010 dB/°C
4 GHz to 8 GHz	--	--	--	--	+/-0.020 dB/°C	+/-0.020 dB/°C	+/-0.010 dB/°C
4 GHz to 13.5 GHz	--	--	--	--	+/-0.020 dB/°C	+/-0.030 dB/°C	+/-0.015 dB/°C

13.5 GHz to 20 GHz	--	--	--	--	--	+/-0.030 dB/°C	+/-0.015 dB/°C
20 GHz to 40 GHz	--	--	--	--	--	--	+/-0.040 dB/°C
40 GHz to 50 GHz	--	--	--	--	--	--	+/-0.060 dB/°C
Stability Phase⁴							
300 kHz to 10 MHz	--	--	--	--	+/- 0.30°/°C	--	--
10 MHz to 45 MHz	--	--	--	--	+/- 0.025°/°C	+/- 0.25°/°C	+/-0.25°/°C
45 MHz to 500 MHz	--	--	--	--	+/- 0.035°/°C	+/- 0.20°/°C	+/-0.22°/°C
500 MHz to 2 GHz	--	--	--	--	+/- 0.050°/°C	+/- 0.15°/°C	+/-0.22°/°C
2 GHz to 4 GHz	--	--	--	--	+/- 0.10°/°C	+/- 0.15°/°C	+/-0.10°/°C
4 GHz to 8 GHz	--	--	--	--	+/- 0.15°/°C	+/- 0.15°/°C	+/-0.10°/°C
8 GHz to 13.5 GHz	--	--	--	--	+/- 0.30°/°C	+/- 0.45°/°C	+/-0.15°/°C
13.5 GHz to 20 GHz	--	--	--	--	--	+/- 0.45°/°C	+/-0.15°/°C
20 GHz to 40 GHz	--	--	--	--	--	--	+/-0.40°/°C
40 GHz to 50 GHz	--	--	--	--	--	--	+/-0.40°/°C

Table 17. Test Port Input (Continued)

Description	Specification	Typical				
		Options 020, 120	Option 220	Option 420, 520	Options 025, 125	Options 225, 425, 525
Damage Input Level						
Test Port 1 and 2	--	+27 dBm or +/- 16 VDC	+30 dBm or +/-25 VDC	+30 dBm or +/-40 VDC	+27 dBm or +/- 16 VDC	+27 dBm or +/- 7 VDC
R1, R2 in	--	--	--	--	+15 dBm or +/- 16 VDC	+15 dBm or +/-7 VDC
A, B in	--	--	--	--	+15 dBm or +/- 16 VDC	+15 dBm or +/-7 VDC
Coupler Thru	--	--	--	--	+27 dBm or +/- 16 VDC	+30 dBm or +/-40 VDC
Coupler Arm	--	--	--	--	+15 dBm or +/- 0 VDC	+30 dBm or +/-7 VDC

1Total average (rms) noise power calculated as the mean value of a 801 linear magnitude traces expressed in dBm.

2For Options 225, 420, 425, 520, 525 - Coupler roll-off will reduce compression to a negligible level below 45 MHz.

31 kHz IF BW, ratioed measurement, nominal power at the test port.

4Stability is defined as a ratio measurement made at the test port.

5 10Hz IFBW test port noise floor performance is mathematically derived from the 1kHz IFBW noise floor performance. The performance could be limited by crosstalk below 3MHz at certain frequencies. The measurement is defined as a single receiver measurement with loads on the ports at a given CW frequency with power set to the minimum plus 5dB.

6 Value and frequency band changed July 2006.


Table 18. Dynamic Accuracy (Specification^a)

Accuracy of the test port input power reading relative to the reference input power level.


Options 020, 025, 120, 125

Dynamic Accuracy, 300 kHz - 1 MHz, Option 020, 025, 120, or 125

Magnitude

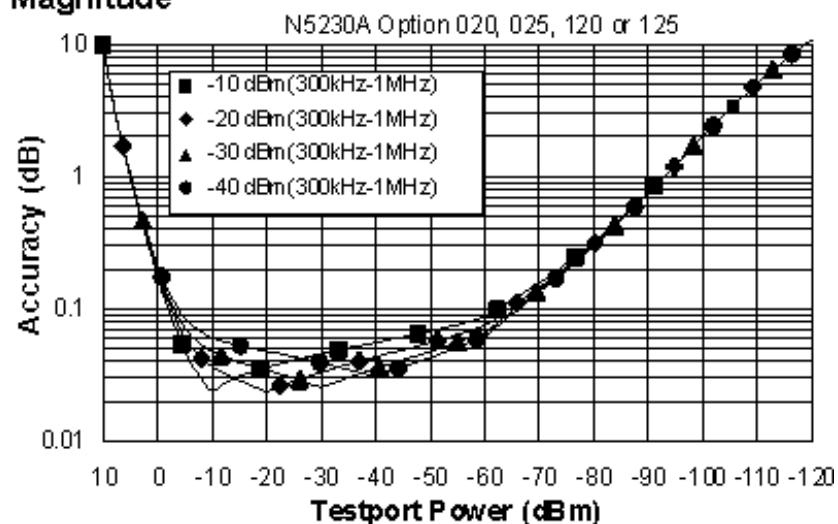


Phase

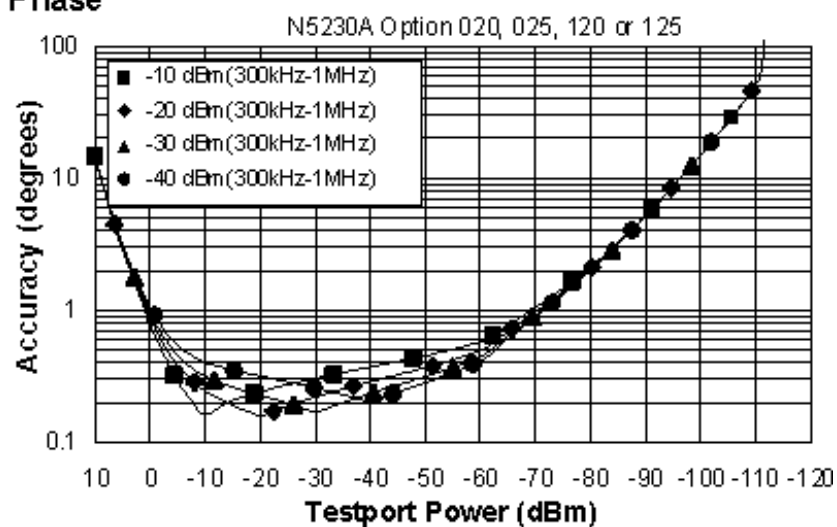


Dynamic Accuracy, 1 MHz- 10 MHz, Option 020, 025, 120, or 125

Magnitude

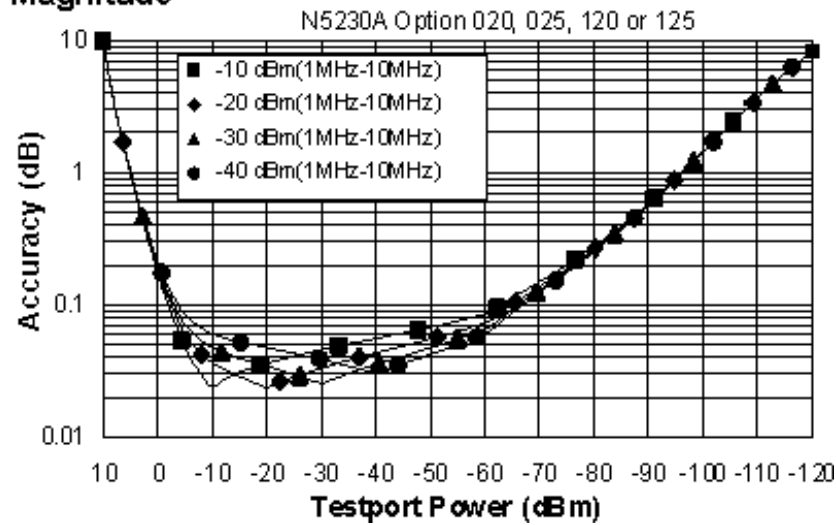


Phase

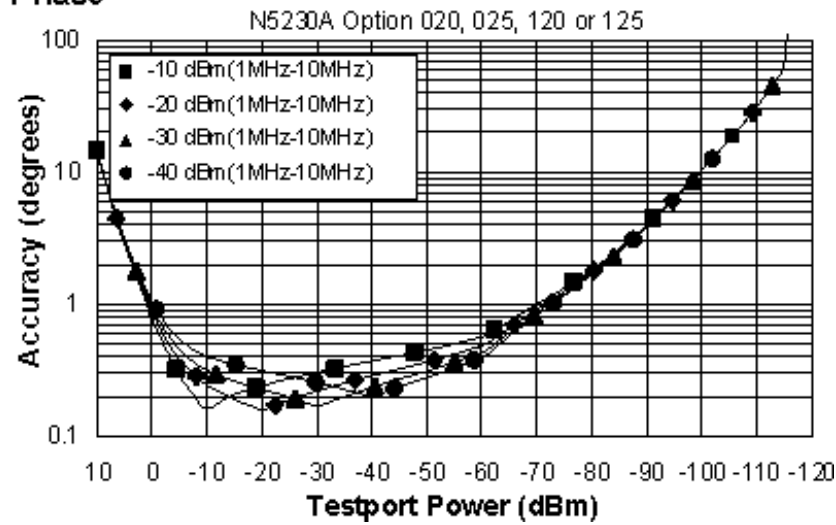


Dynamic Accuracy, 10 MHz- 1 GHz, Option 020, 025, 120, or 125

Magnitude

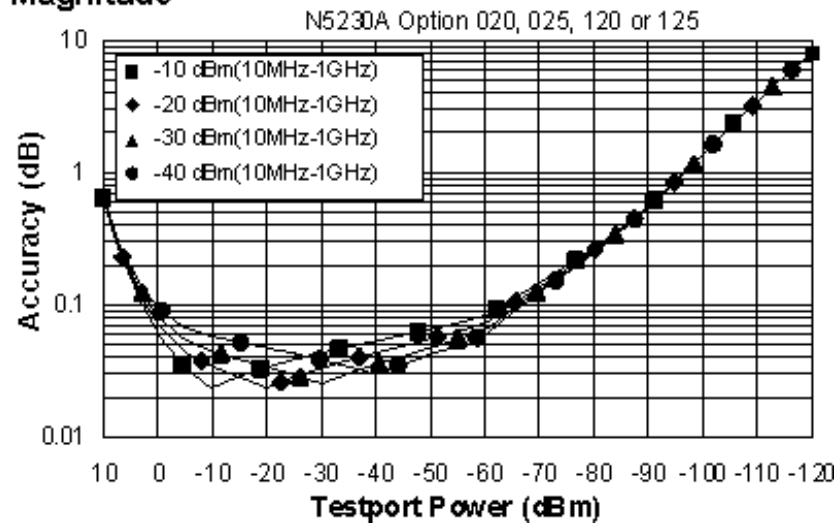


Phase

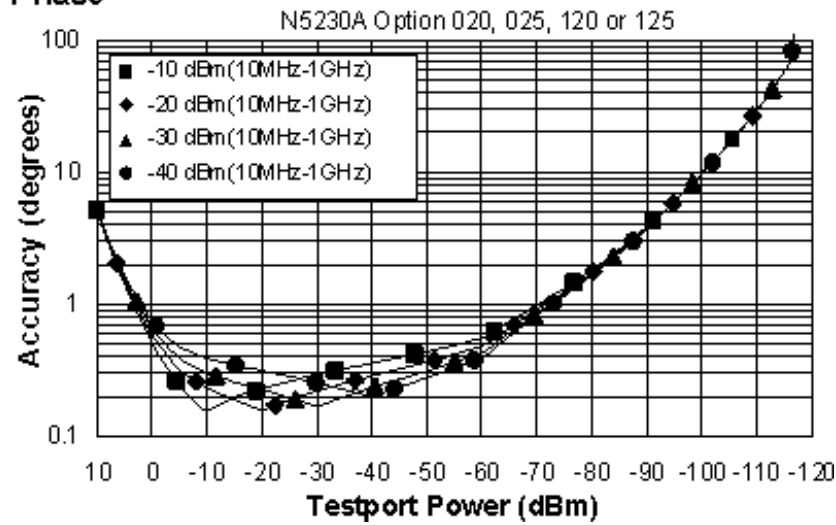


Dynamic Accuracy, 1 - 8 GHz, Option 020, 025, 120, or 125

Magnitude

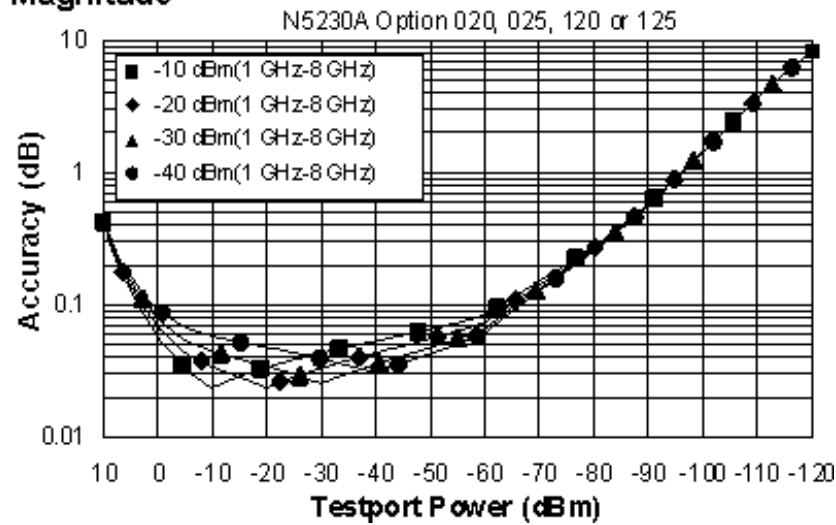


Phase

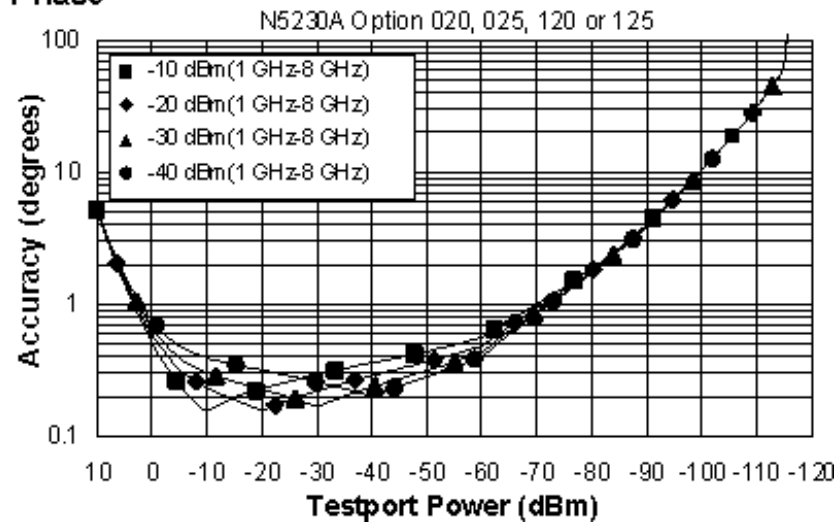


Dynamic Accuracy, 8 - 10.5 GHz, Option 120 or 125

Magnitude

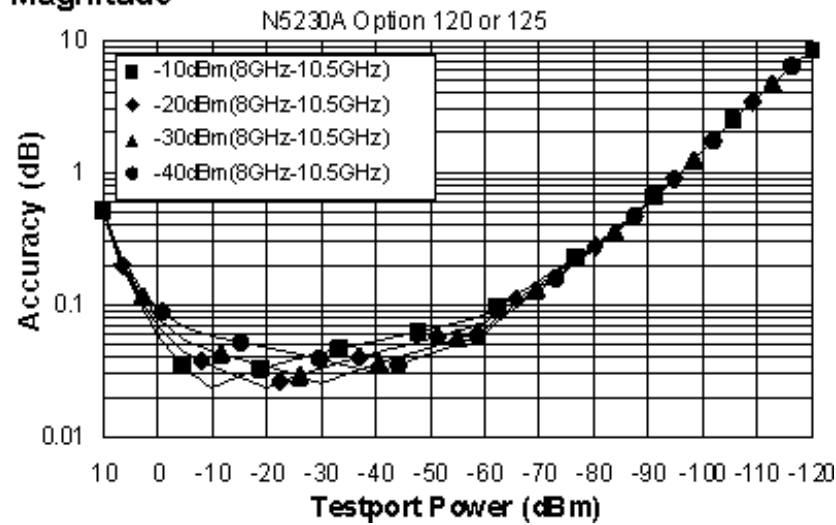


Phase

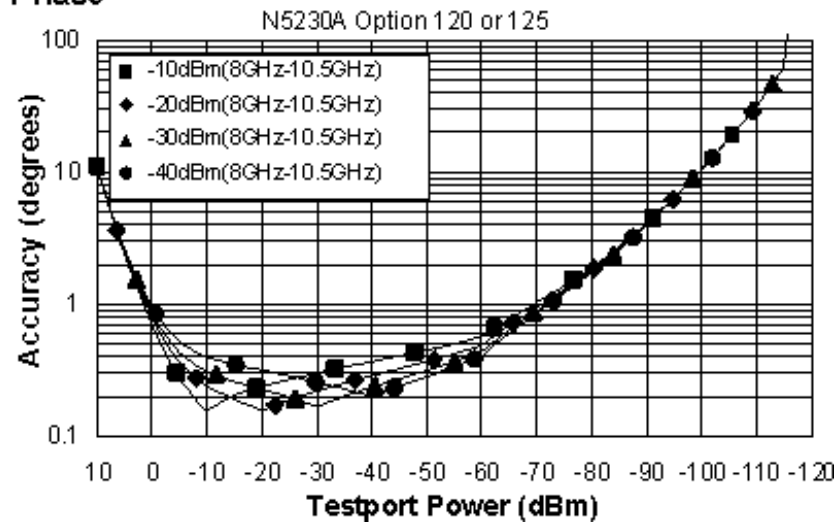


Dynamic Accuracy, 10.5 - 12.5 GHz, Option 120 or 125

Magnitude

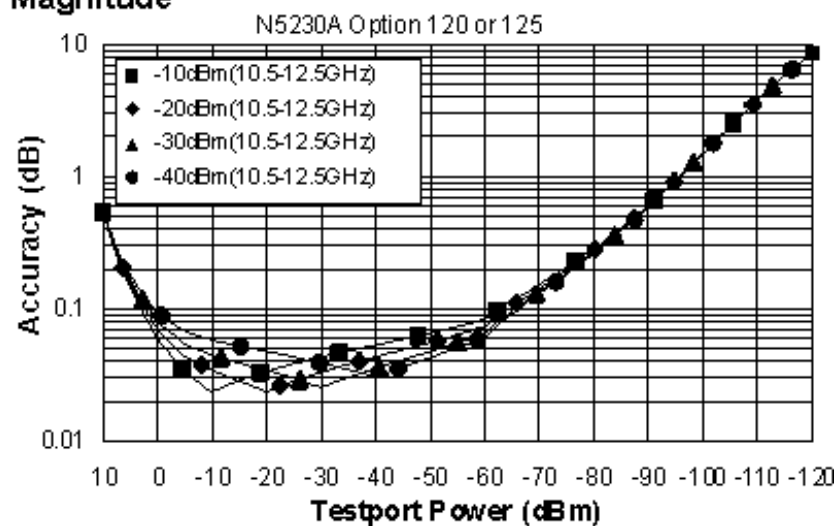


Phase

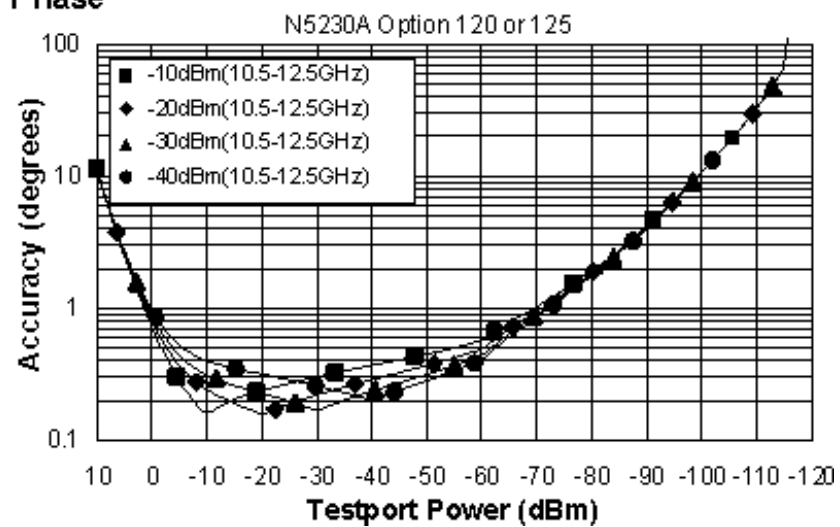


Dynamic Accuracy, 12.5 - 13.5 GHz, Option 120 or 125

Magnitude

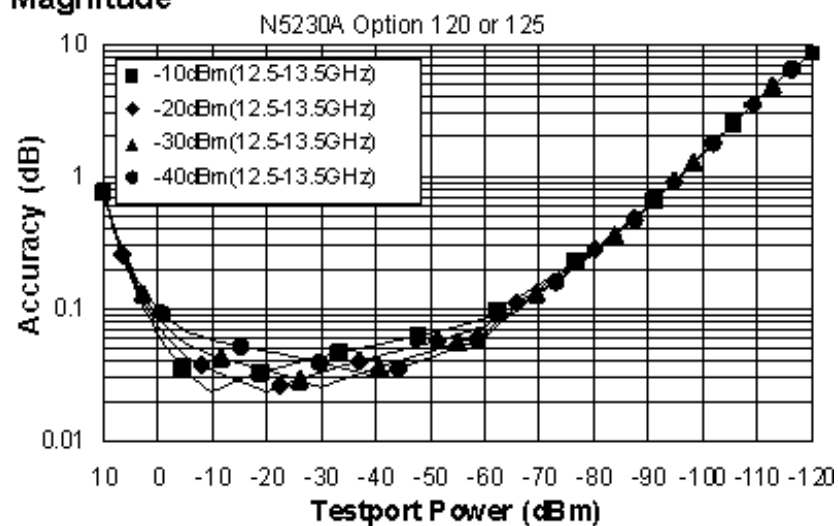


Phase

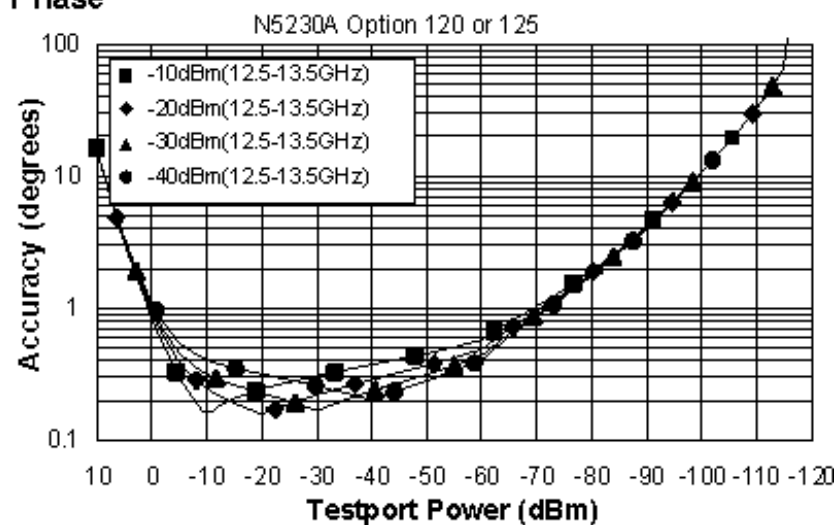


Options 220, 225

Dynamic Accuracy, 0.045 GHz, Option 220 or 225


Magnitude

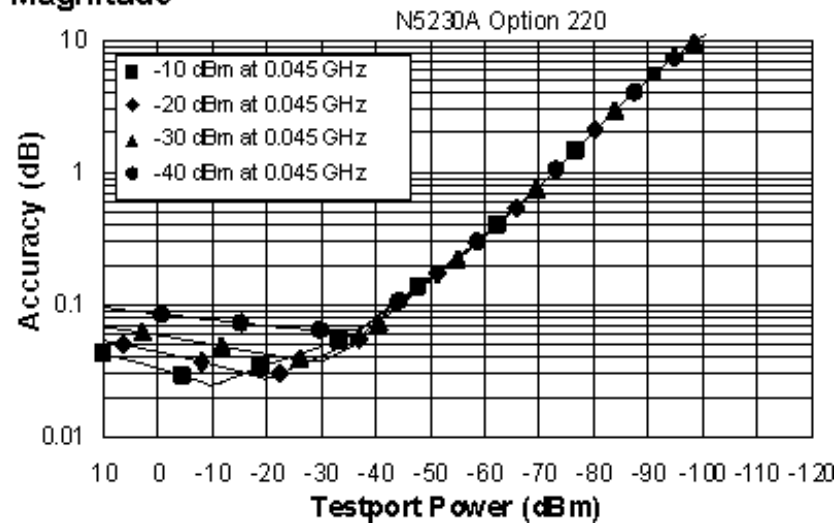


Phase

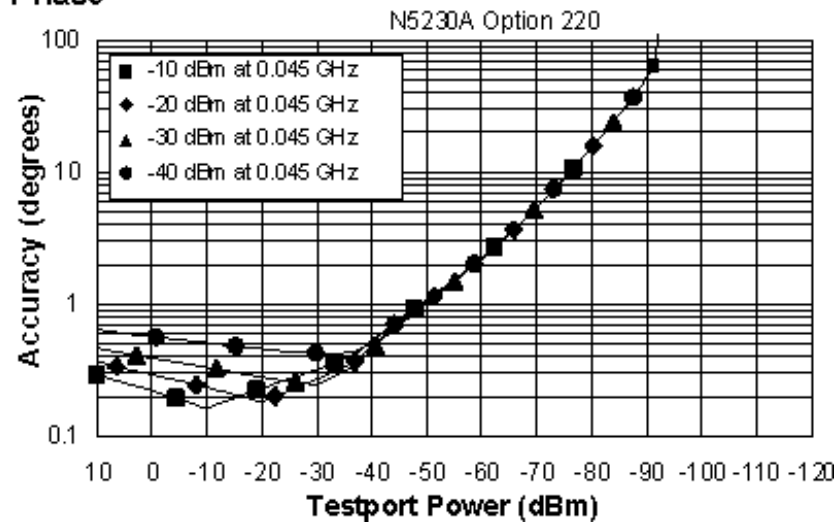

Magnitude

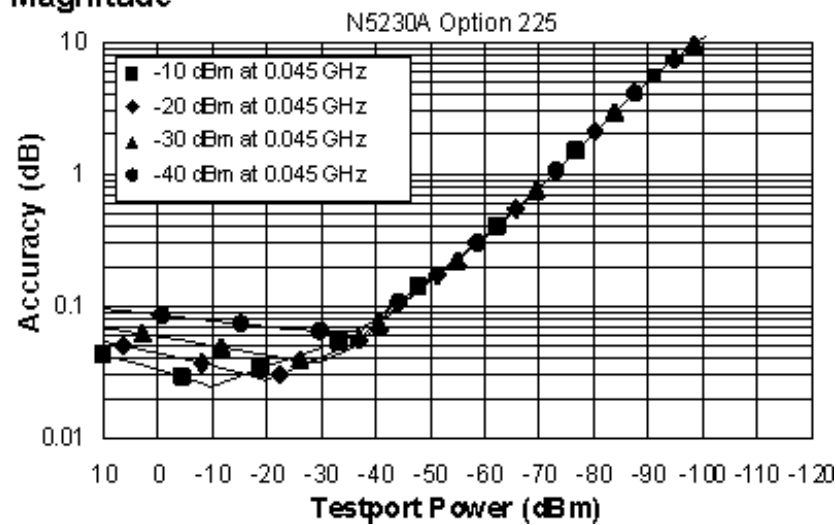


Phase

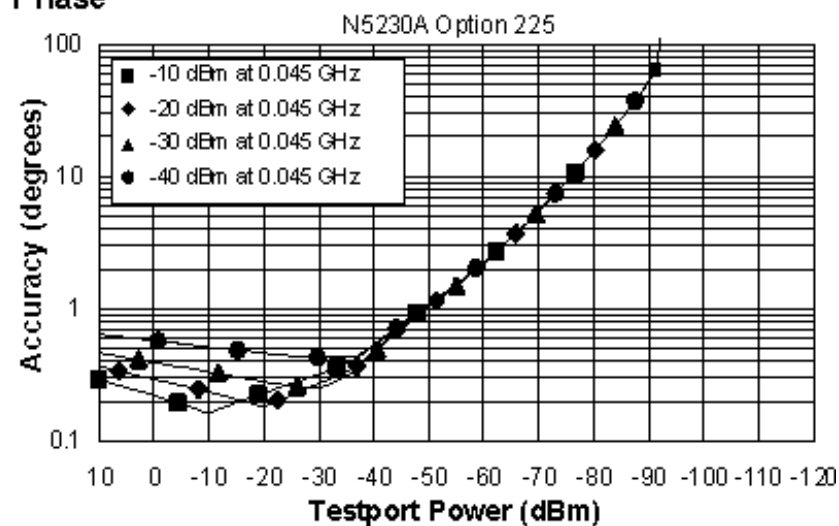


Dynamic Accuracy, 0.500 GHz, Option 220 or 225


Magnitude

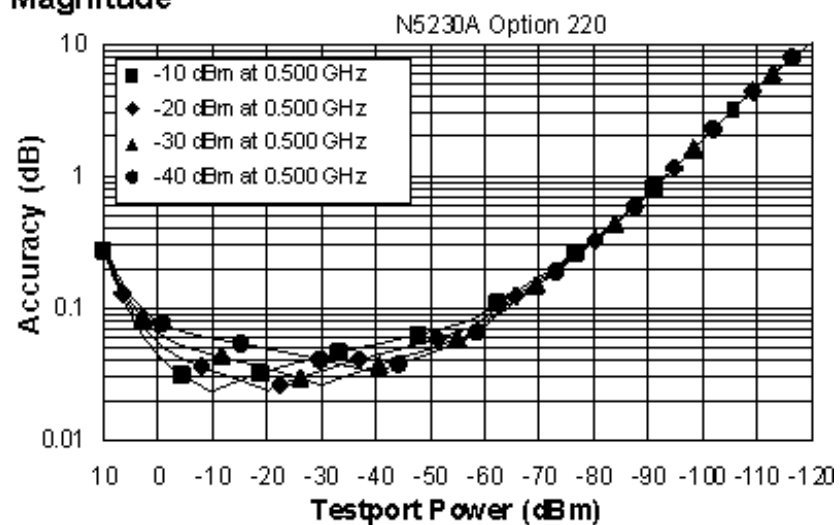


Phase

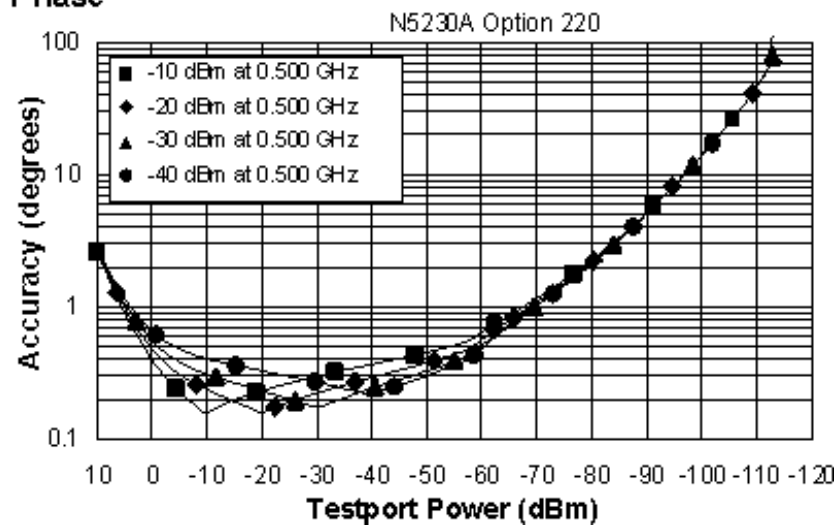


Magnitude

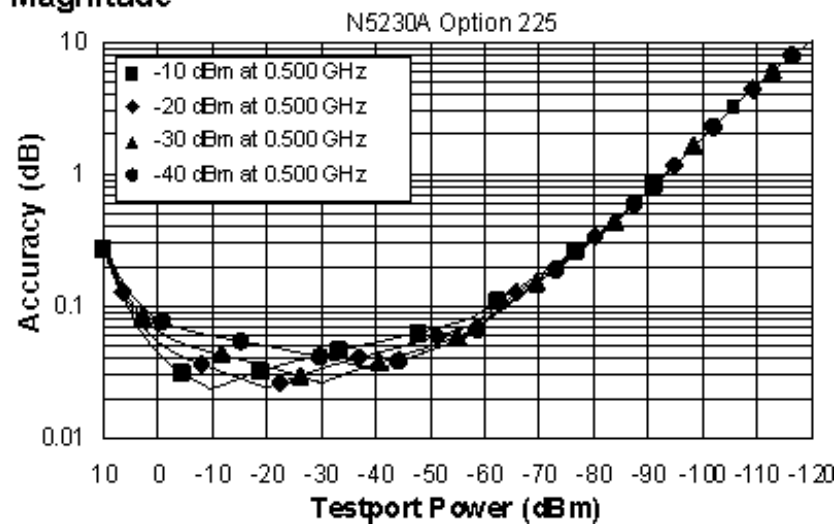


Phase

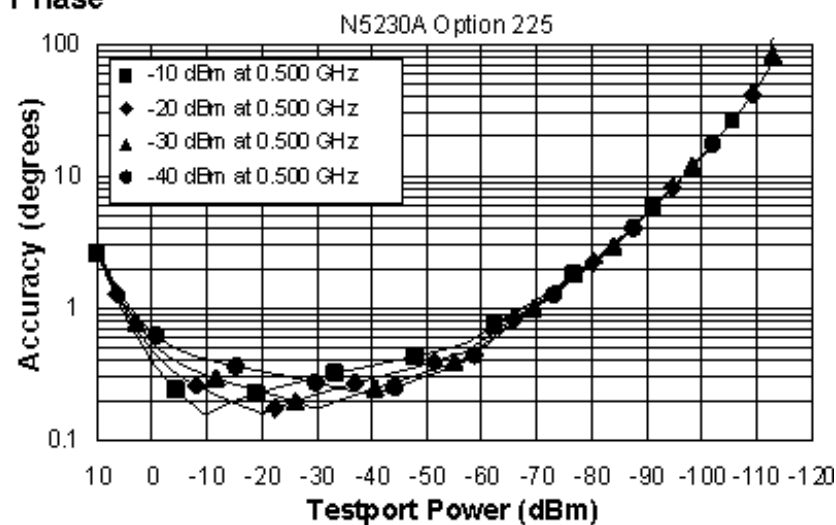


Magnitude

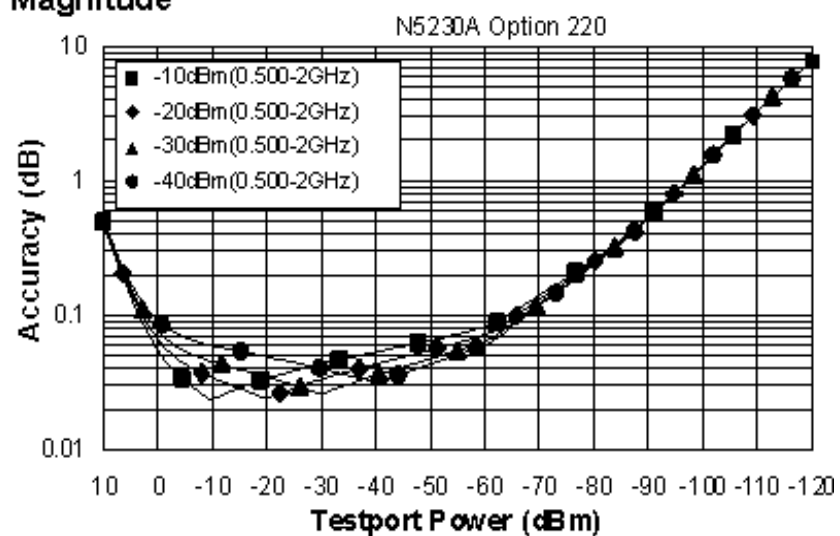


Phase

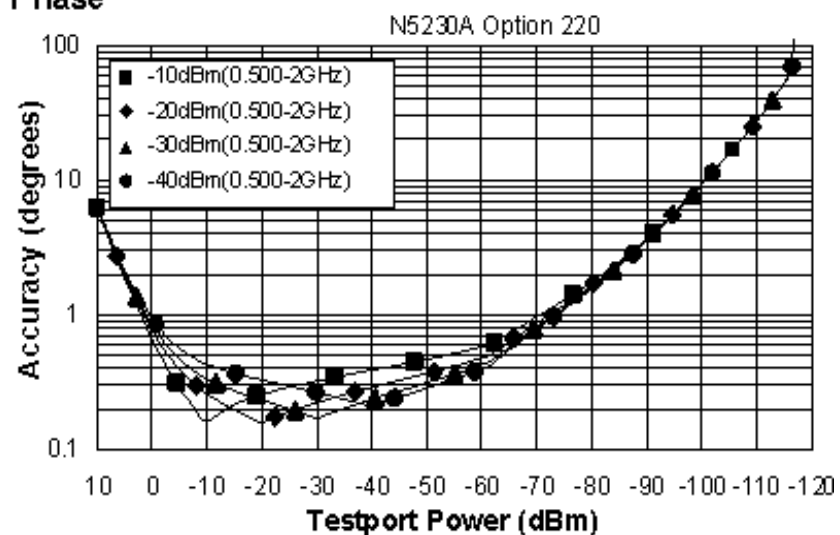

Magnitude

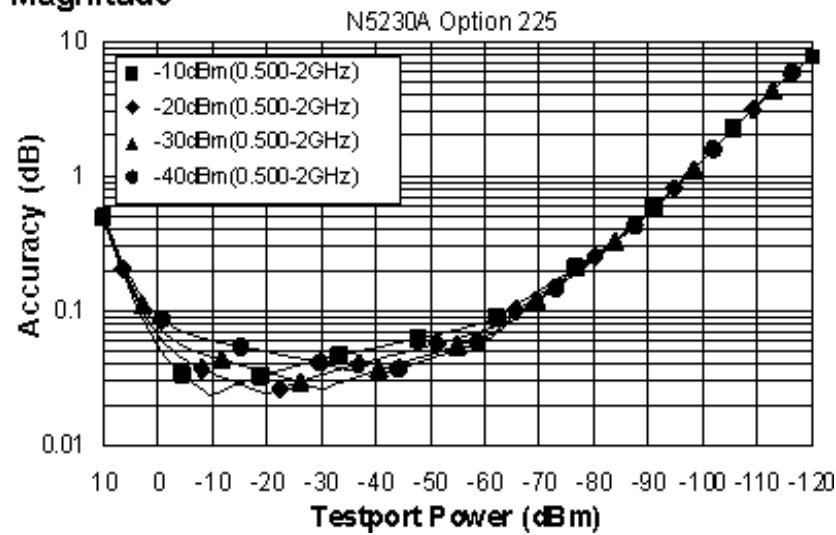


Phase

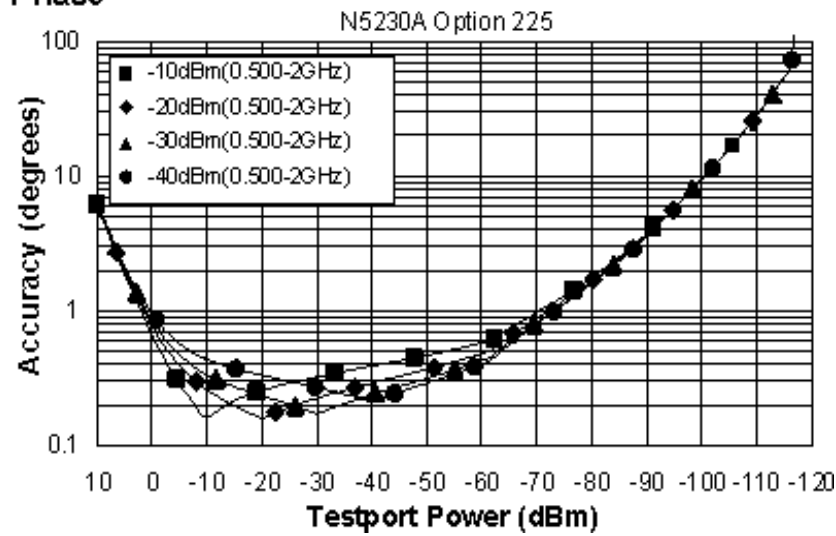


Dynamic Accuracy, 2 - 12.5 GHz, Option 220 or 225


Magnitude

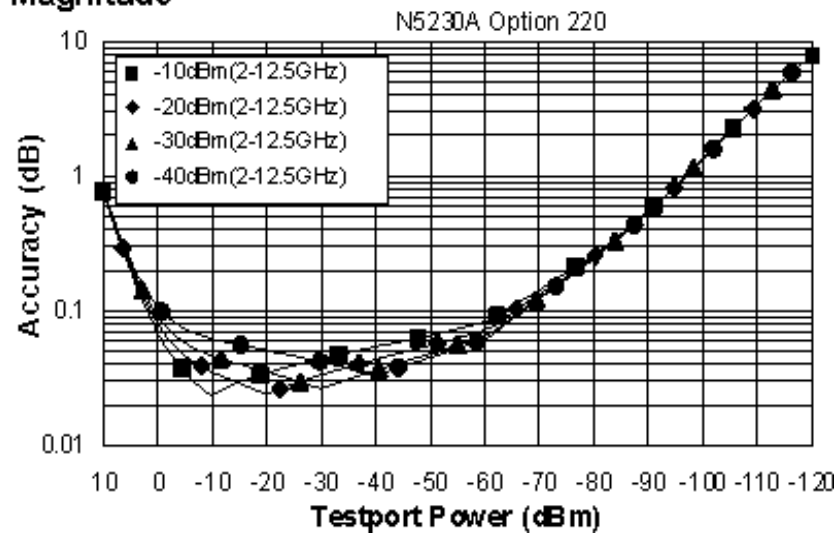


Phase

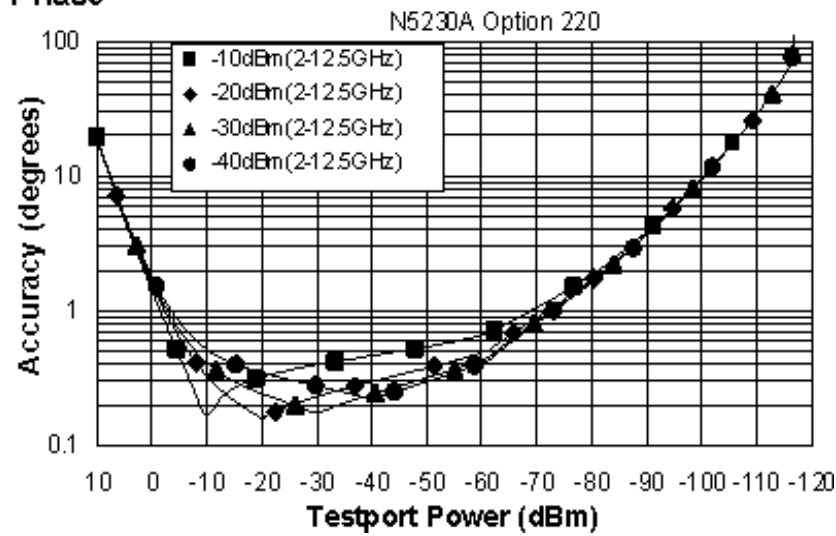

Magnitude

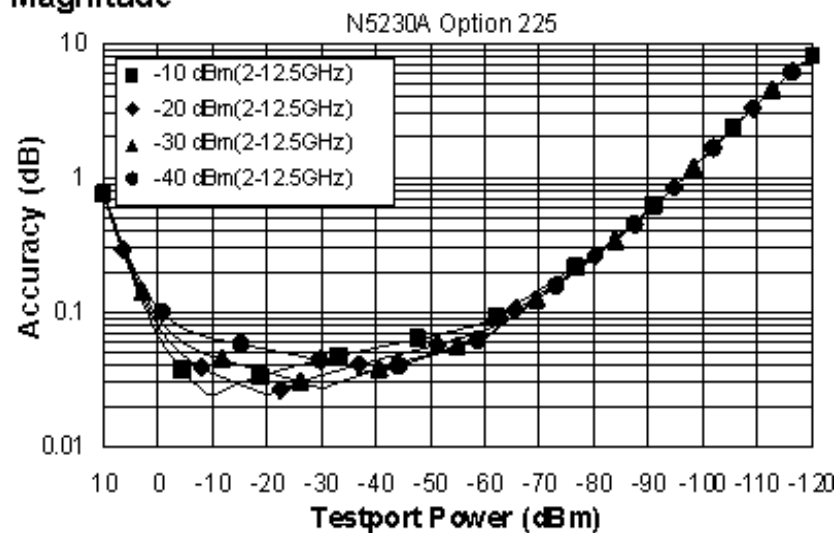


Phase

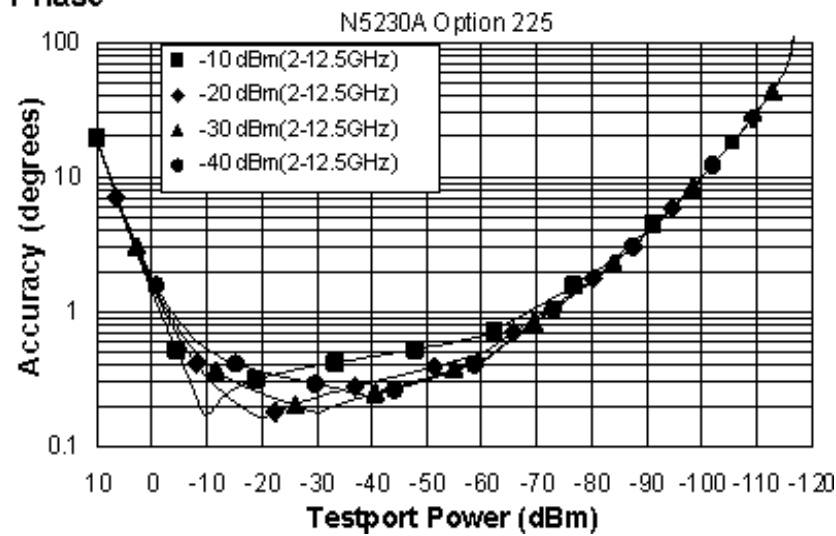


Dynamic Accuracy, 12.5 - 20 GHz, Option 220 or 225


Magnitude

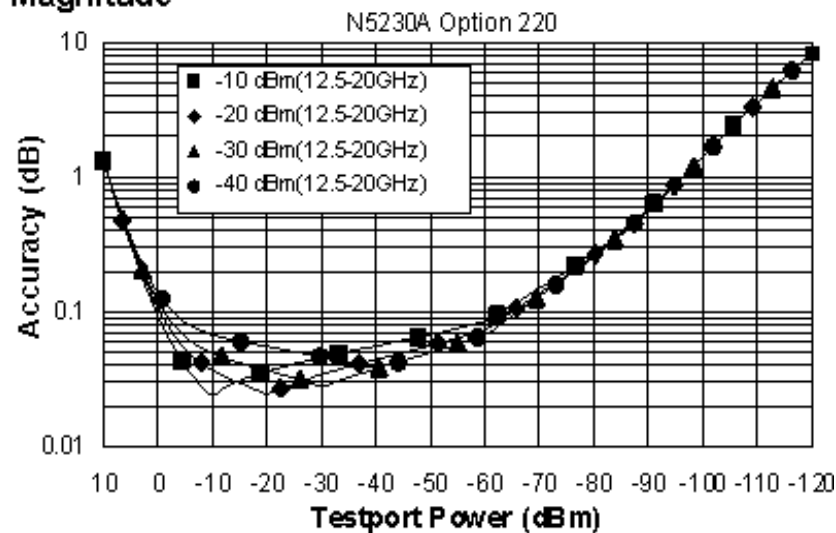


Phase

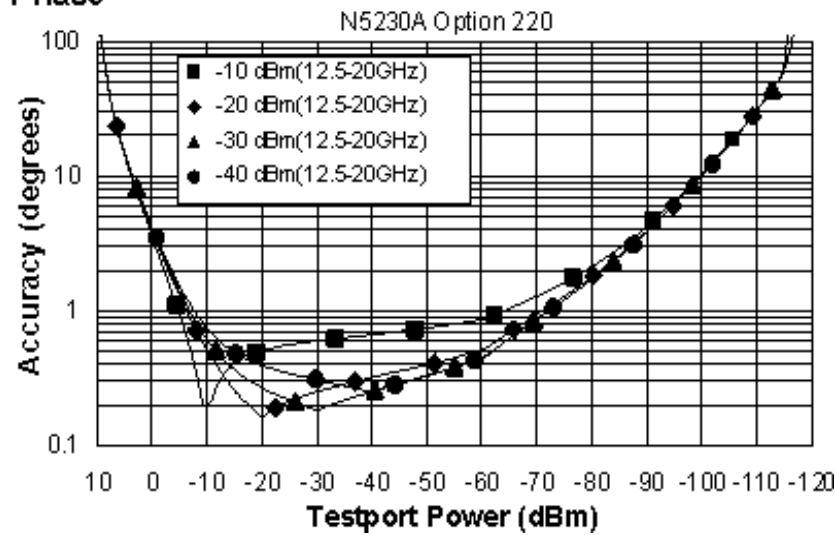

Magnitude

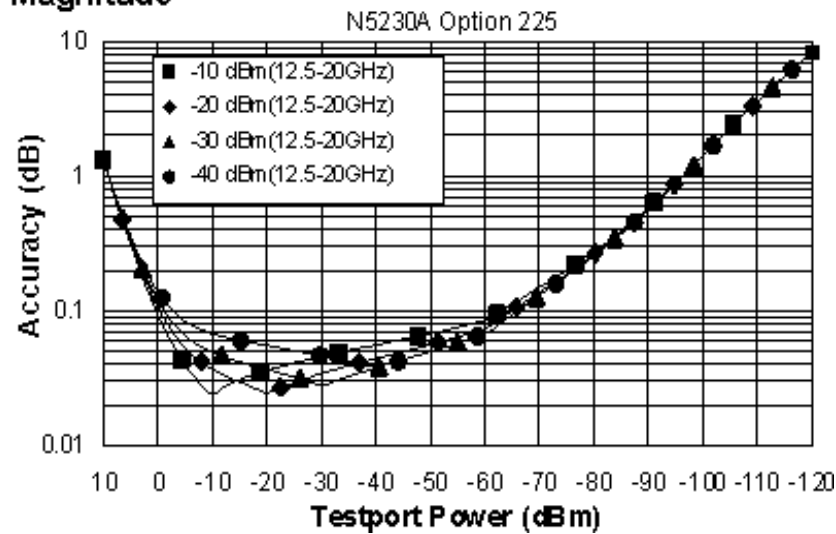


Phase

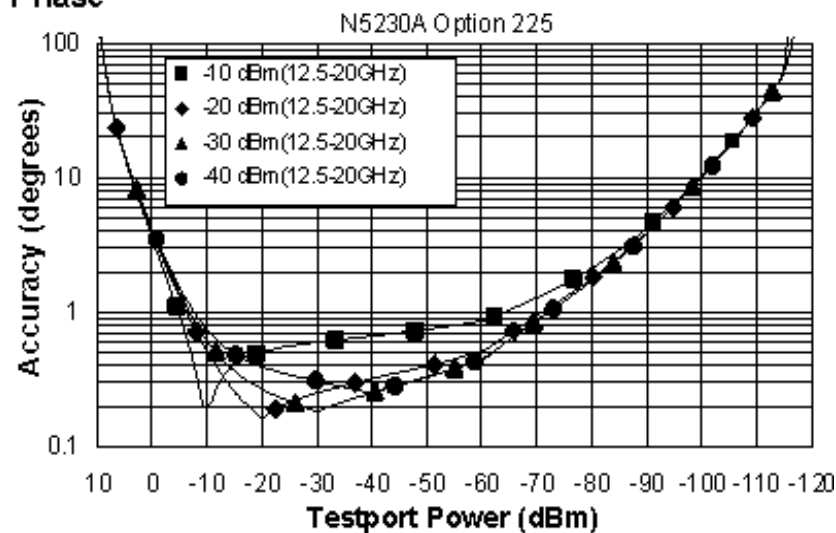


Options 420, 425, 520, 525

Dynamic Accuracy, 0.045 GHz, Option 420, 425, 520, or 525


Magnitude

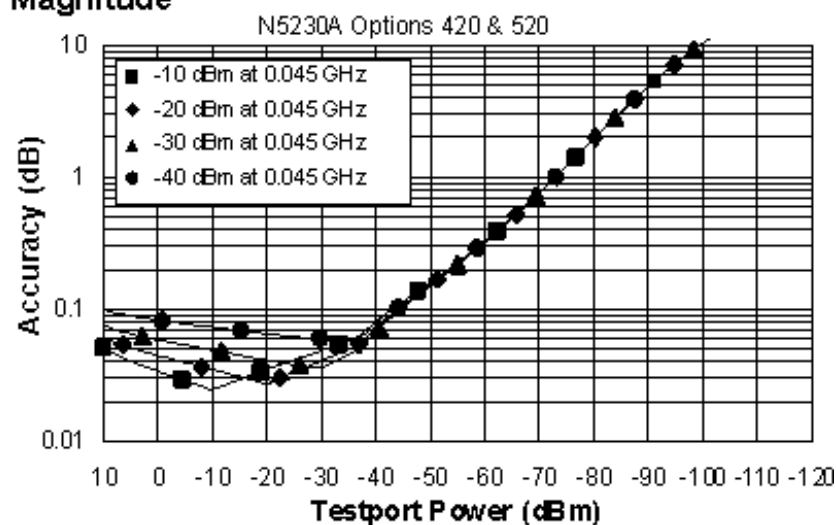


Phase

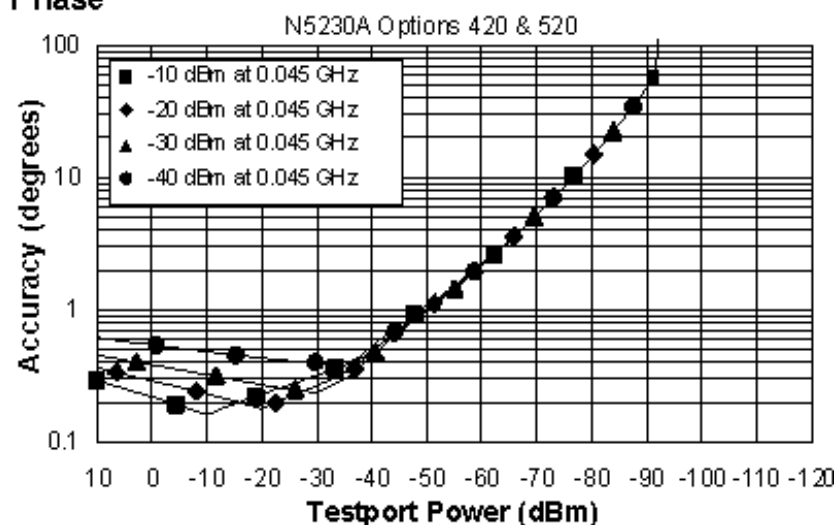

Magnitude

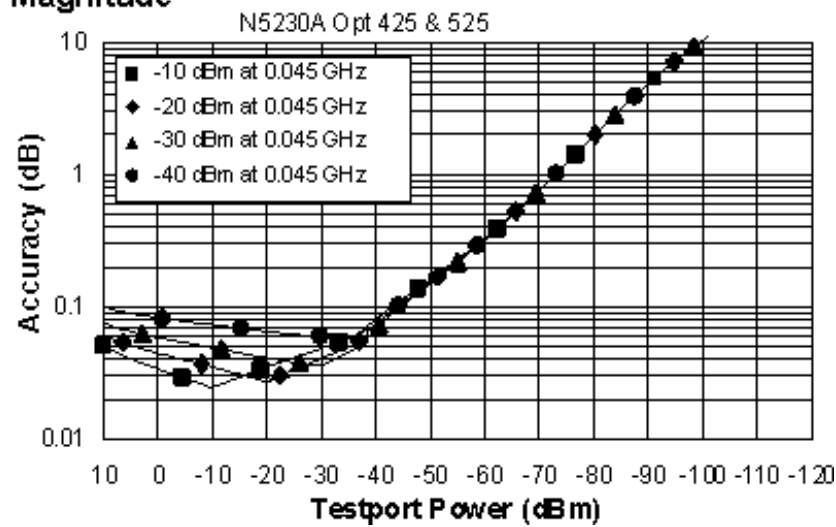


Phase

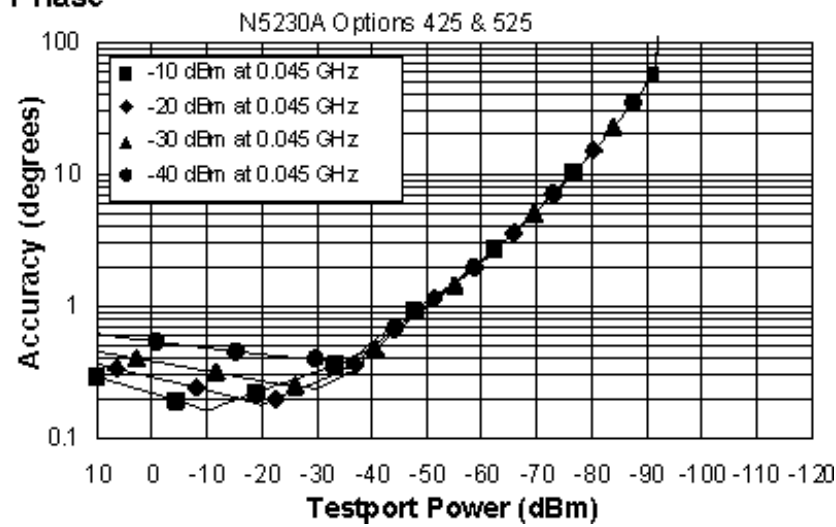


Dynamic Accuracy, 0.500 GHz, Option 420, 425, 520, or 525


Magnitude

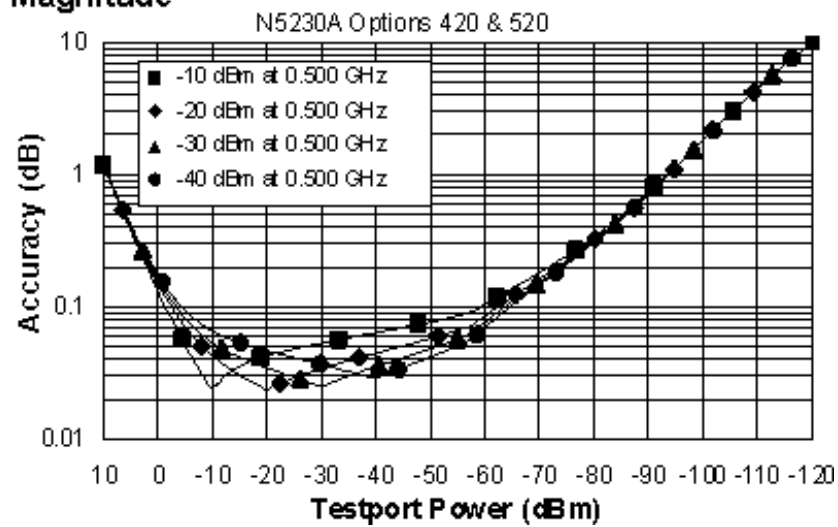


Phase

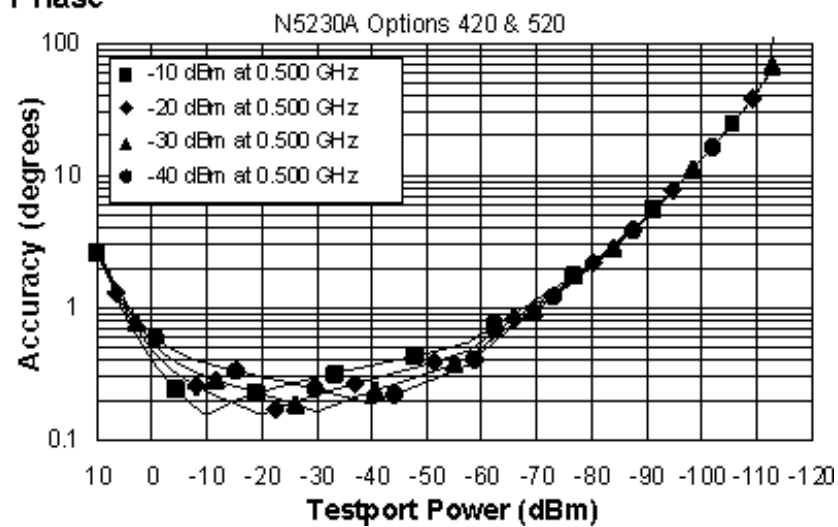

Magnitude

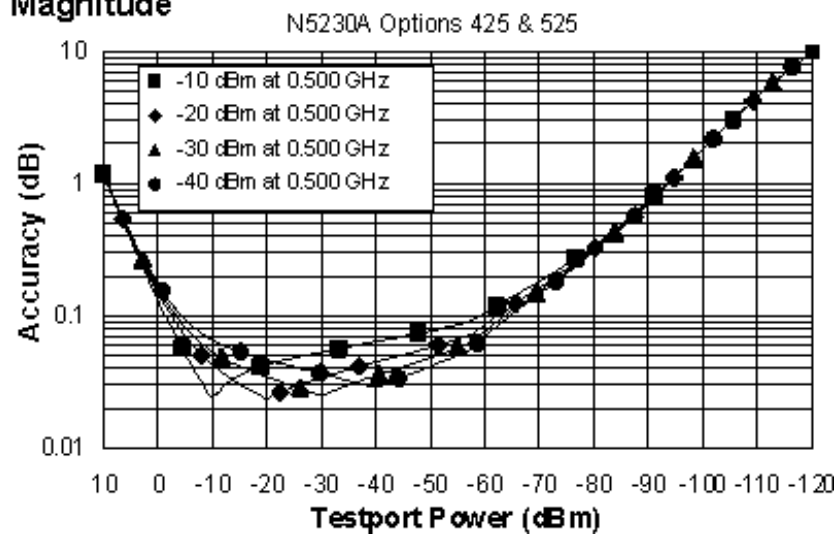


Phase

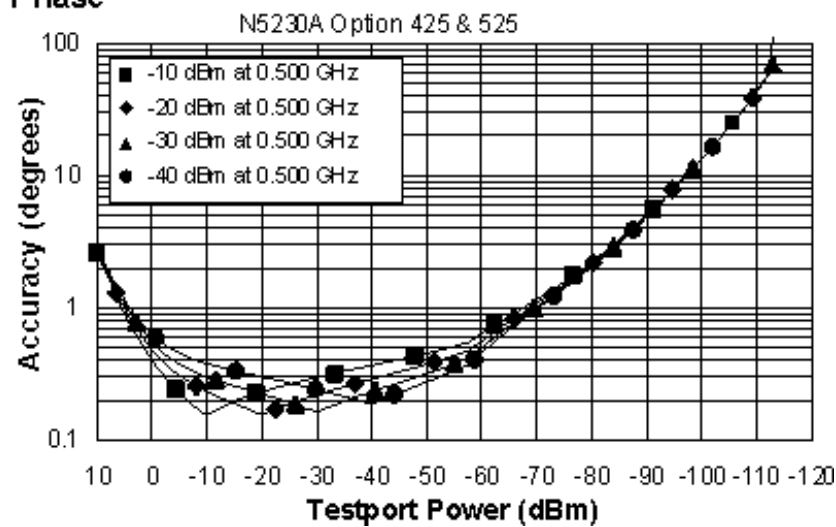


Dynamic Accuracy, 0.500 - 2 GHz, Option 420, 425, 520, or 525


Magnitude

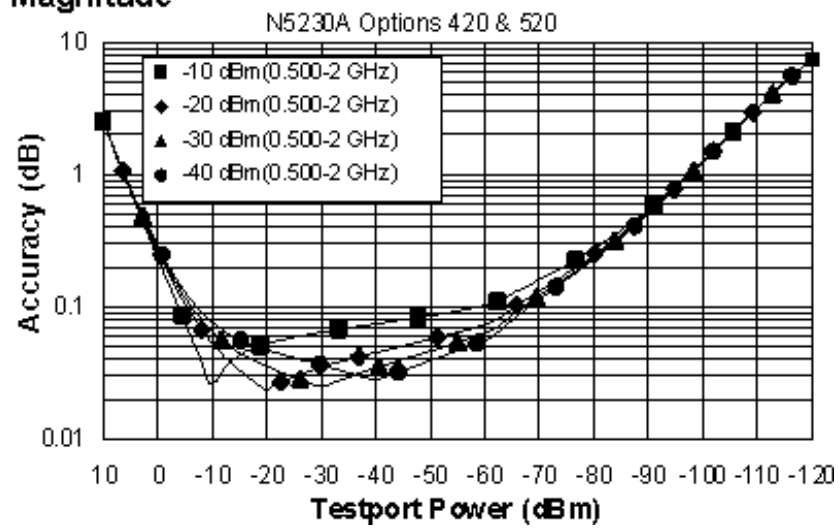


Phase

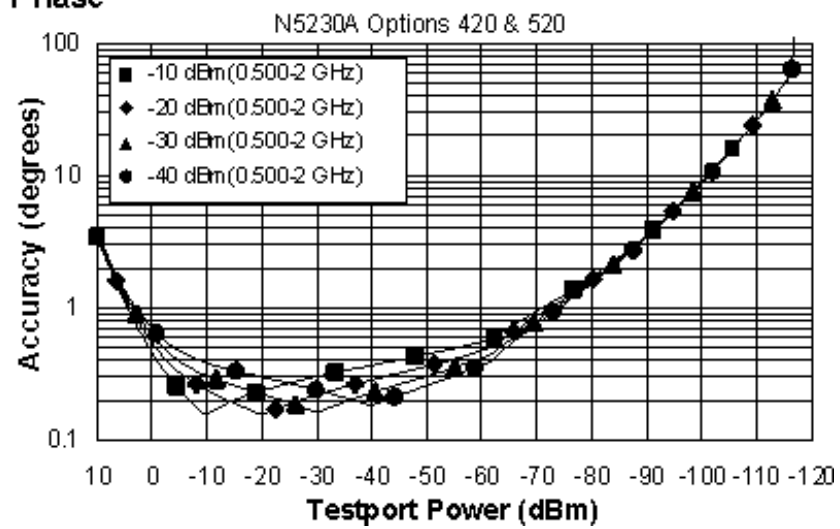

Magnitude

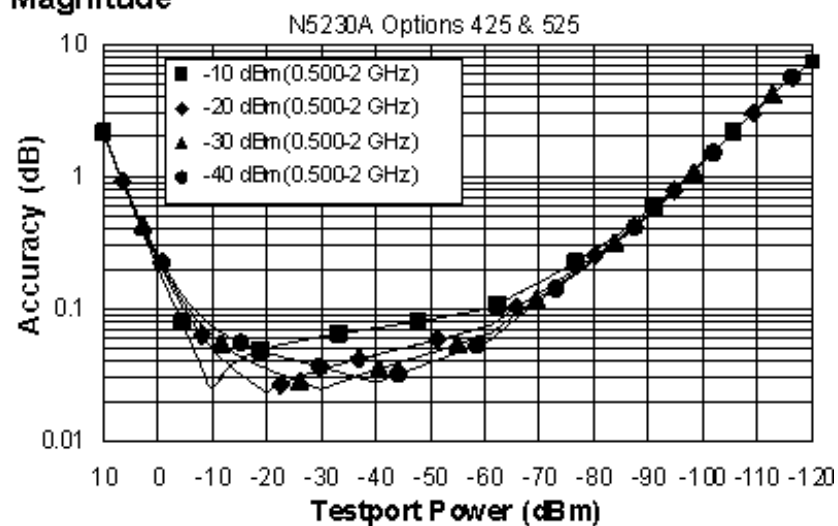


Phase

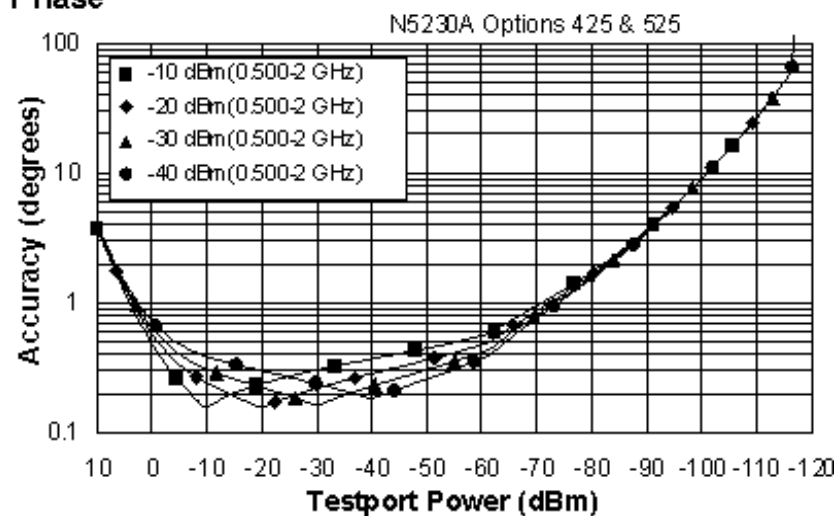


Dynamic Accuracy, 2 - 8 GHz, Option 420, 425, 520, or 525


Magnitude

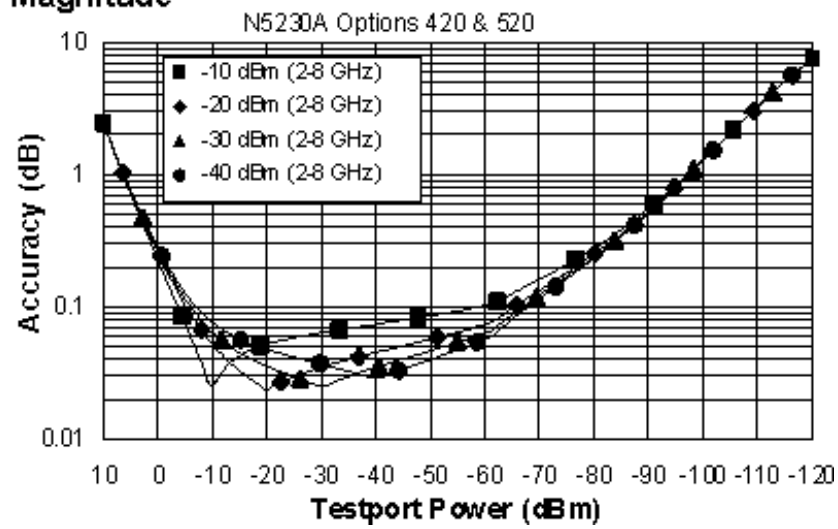


Phase

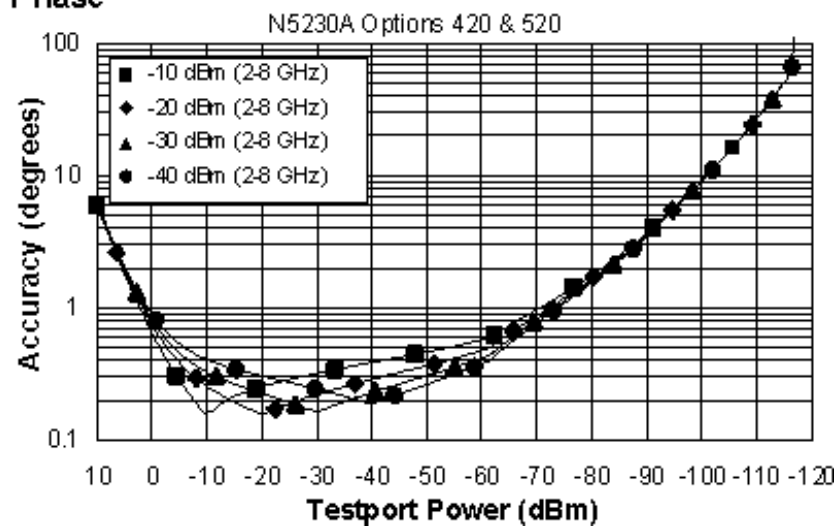

Magnitude

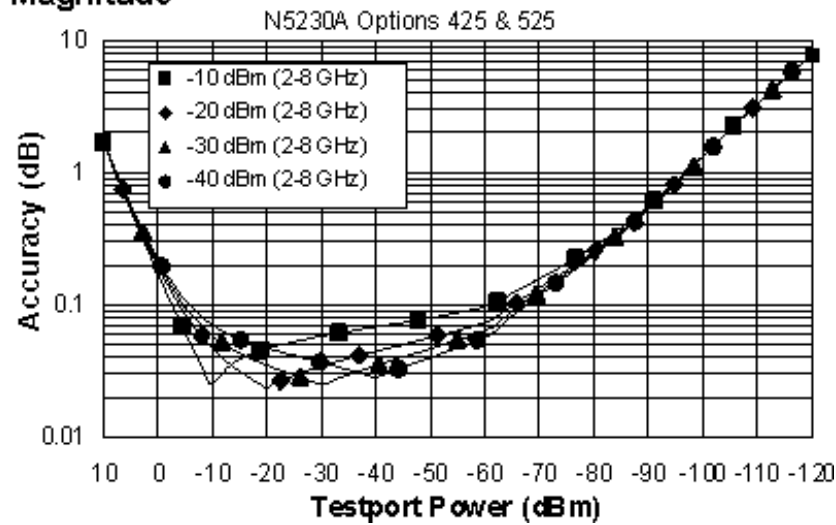


Phase

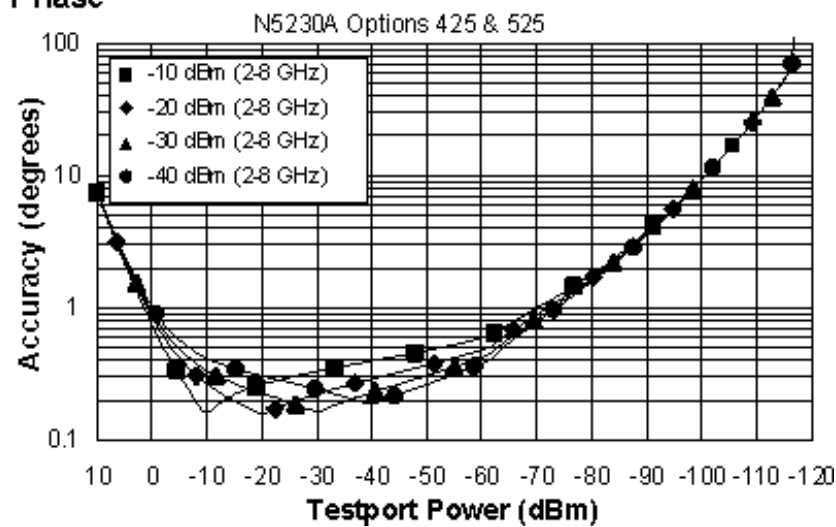


Dynamic Accuracy, 8 - 12.5 GHz, Option 420, 425, 520, or 525


Magnitude

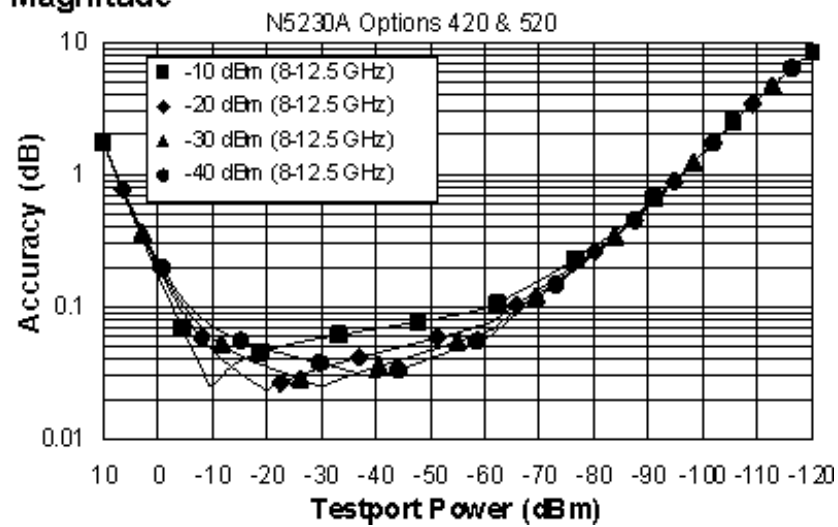


Phase

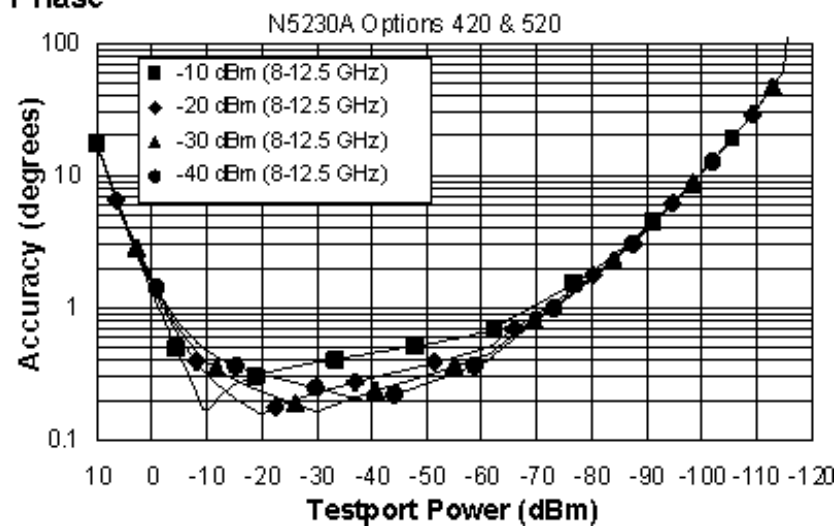

Magnitude

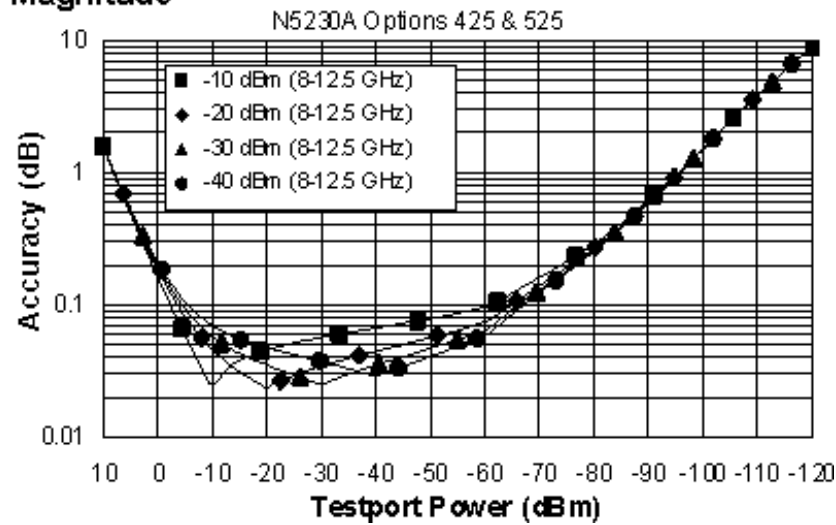


Phase

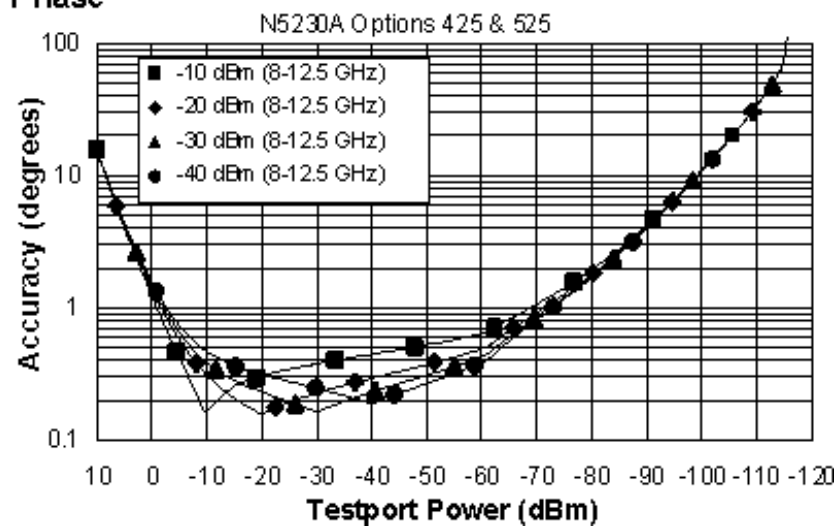


Dynamic Accuracy, 12.5 - 20 GHz, Option 420, 425, 520, or 525


Magnitude

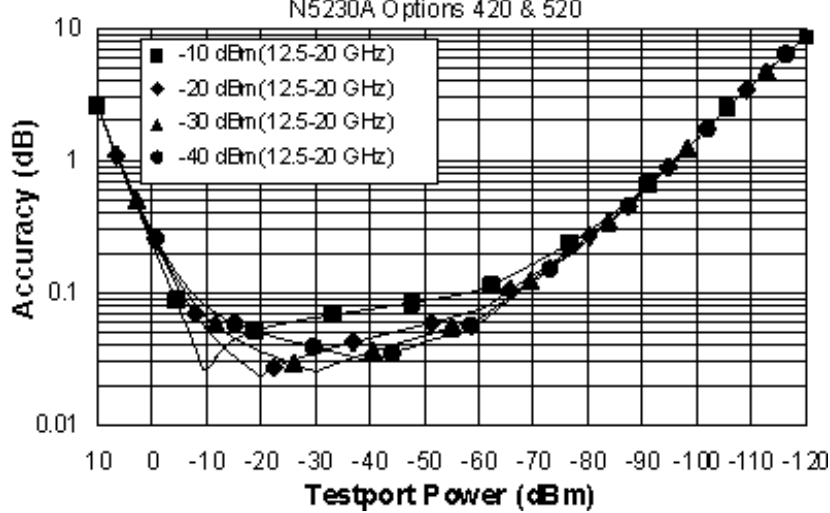


Phase

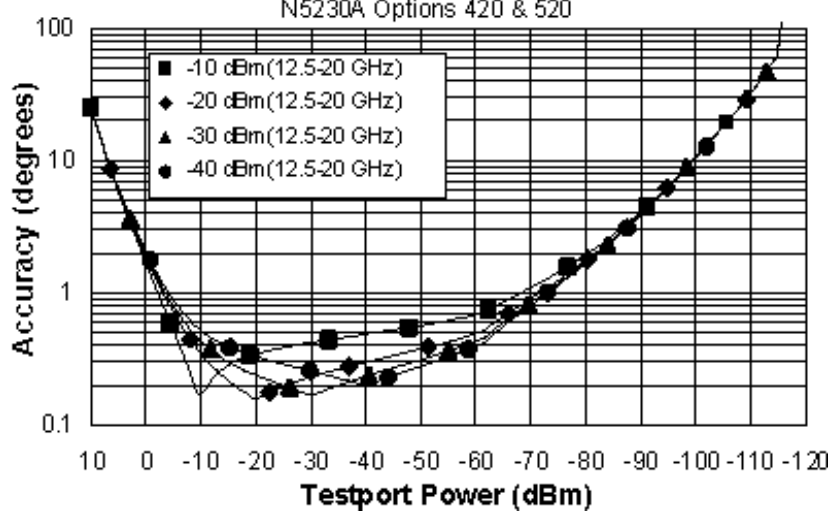

Magnitude

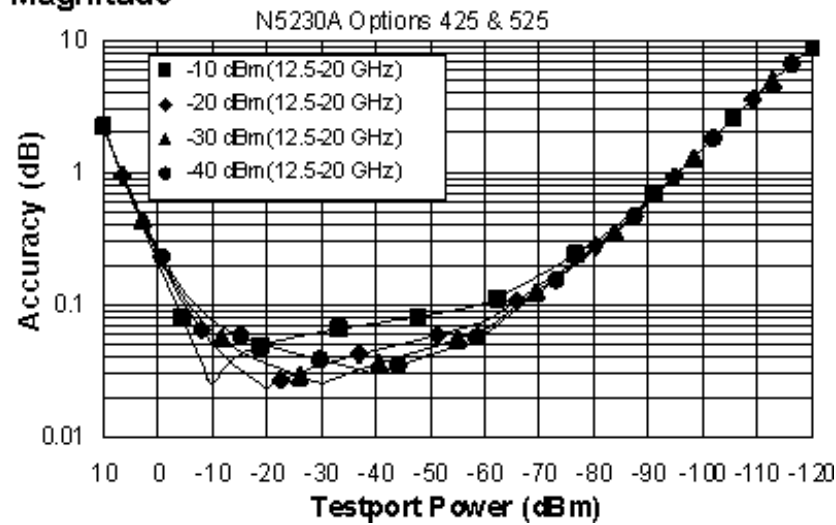


Phase

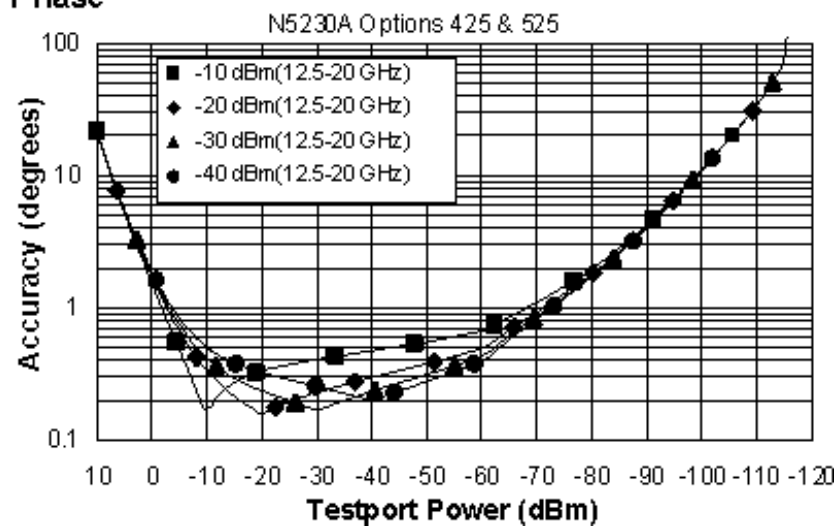


Dynamic Accuracy, 20 - 31.25 GHz, Option 420, 425, 520, or 525


Magnitude

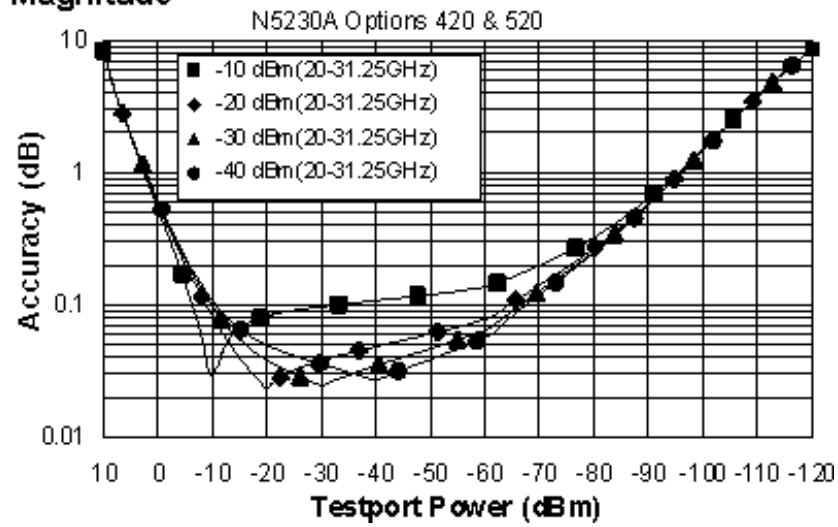


Phase

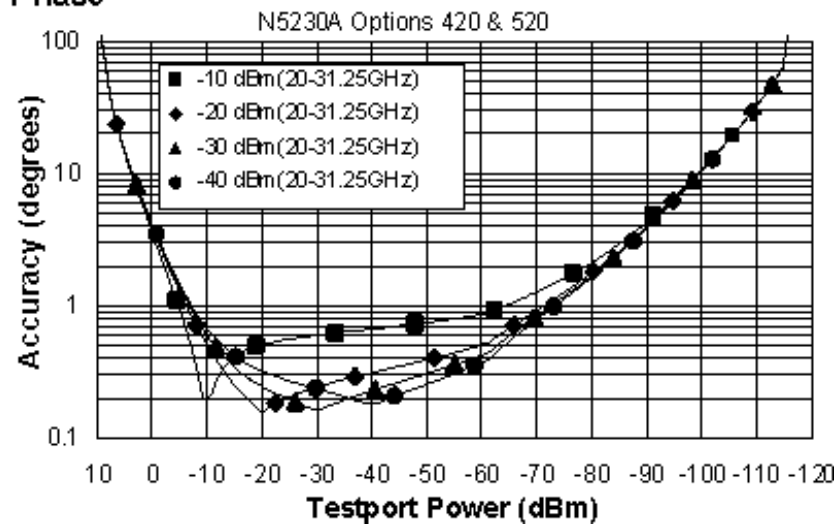

Magnitude

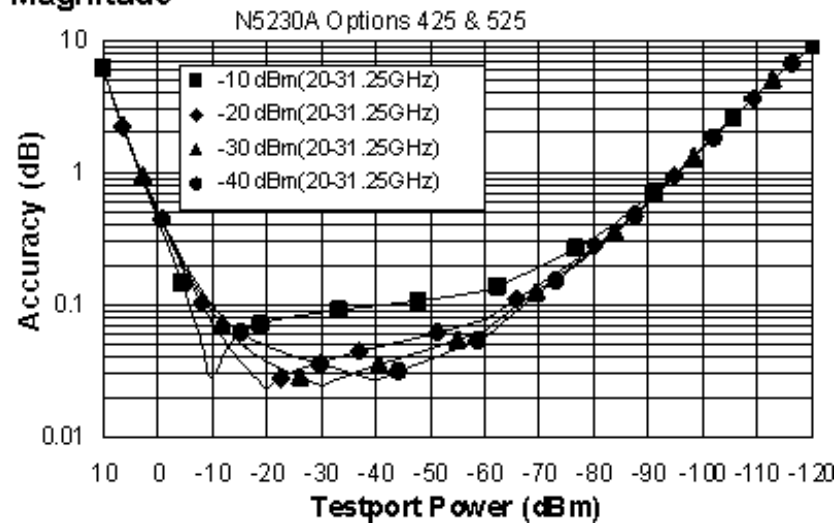


Phase

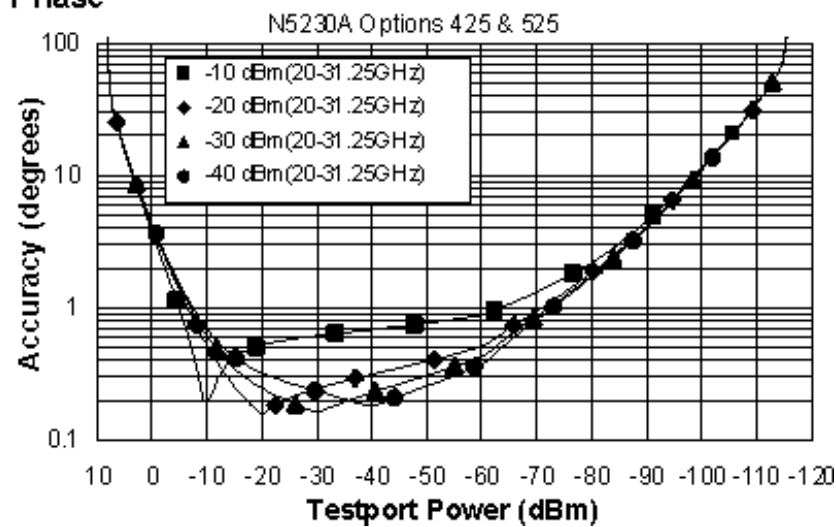


Dynamic Accuracy, 31.25 - 40 GHz, Option 420, 425, 520, or 525


Magnitude

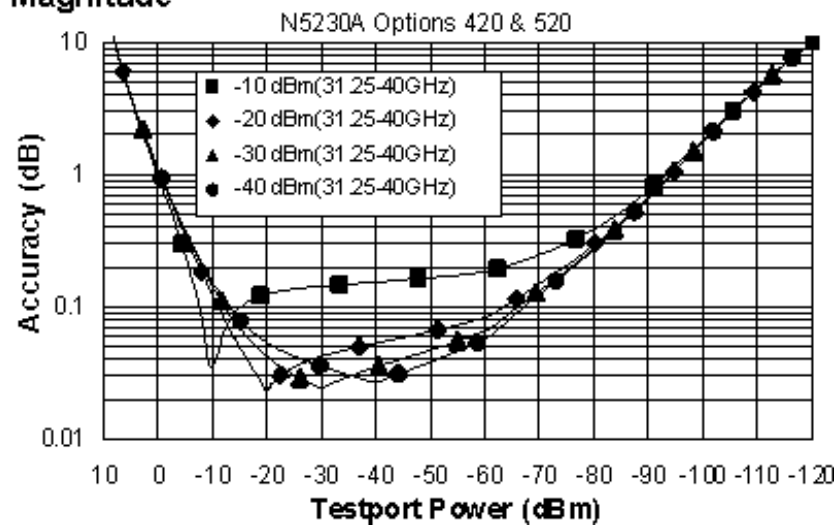


Phase

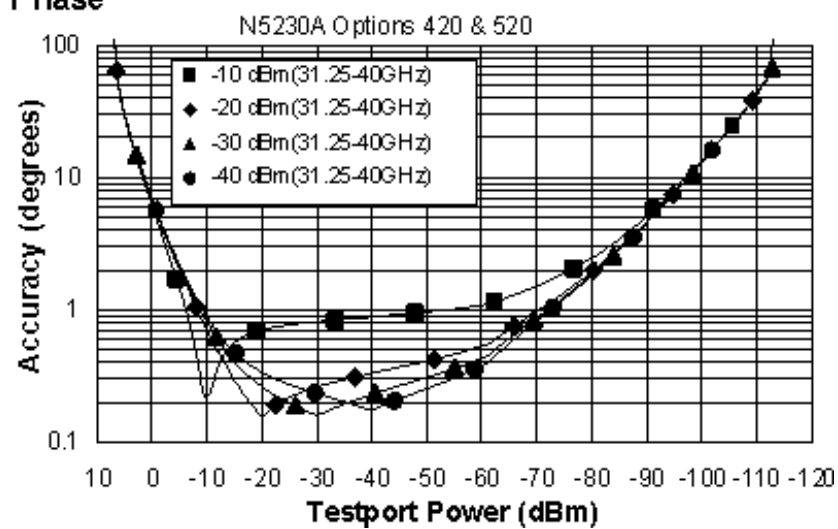

Magnitude

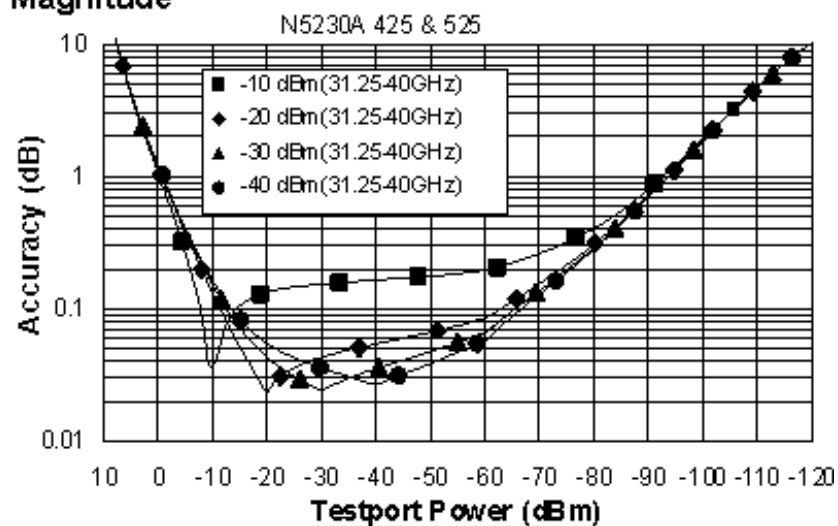


Phase

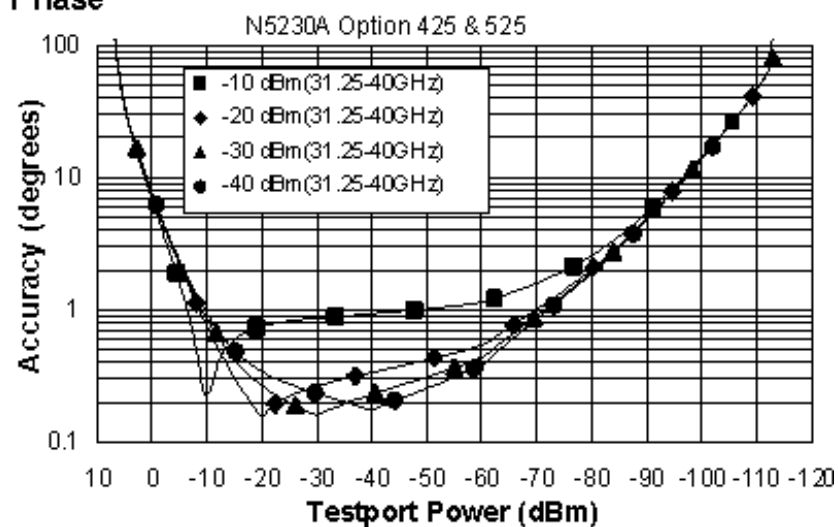


Dynamic Accuracy, 40 - 50 GHz, Option 520 or 525


Magnitude

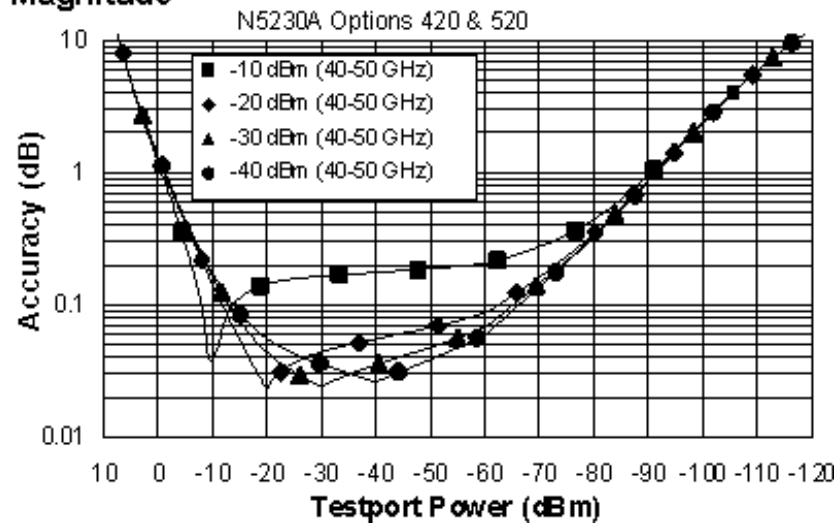


Phase

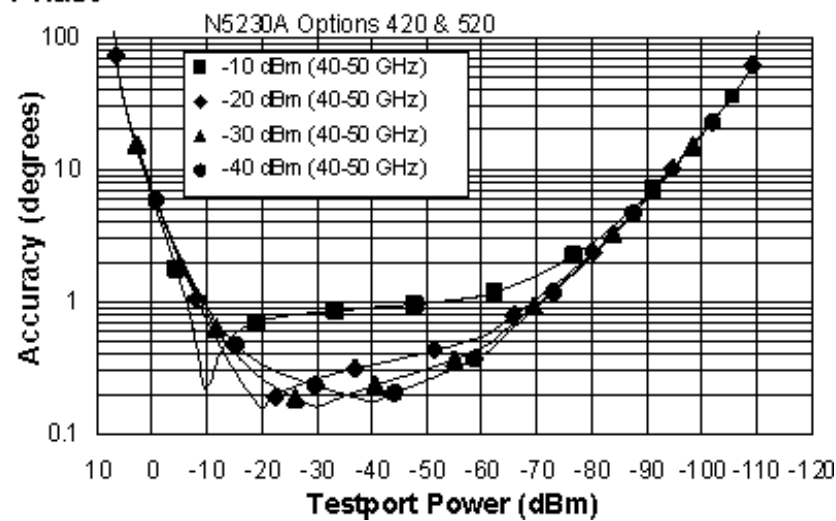

Magnitude

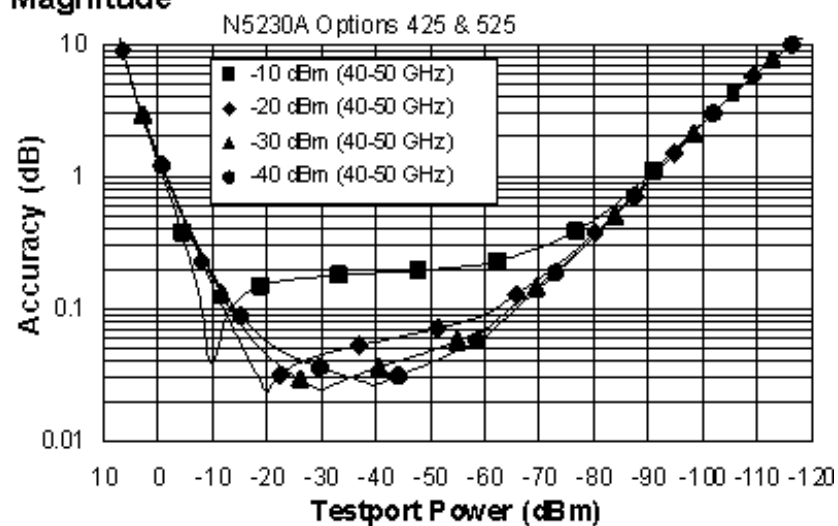

Phase

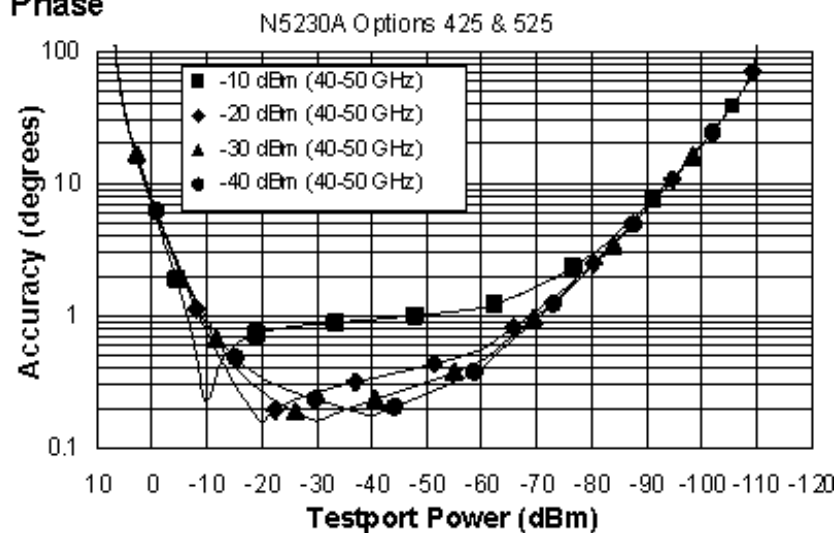

a Dynamic accuracy is verified with the following measurements:


- compression over frequency
- IF linearity at a single frequency of 1.195 GHz using a reference level of -20 dBm for an input power range of 0 to -110 dBm.

Table 19. Test Port Input (Group Delay)^a

Description	Specification	Supplemental Information (typ.)
Aperture (selectable)		(frequency span)/(number of points -1)
Maximum Aperture		20% of frequency span
Range		0.5 x (1/minimum aperture)
Maximum Delay		Limited to measuring no more than 180° of phase change within the minimum aperture.)
Accuracy		See graph below. Char.

The following graph shows characteristic group delay accuracy with full 2-port calibration and a 10 Hz IF bandwidth. Insertion loss is assumed to be < 2 dB and electrical length to be ten meters.

Group Delay (Typical)

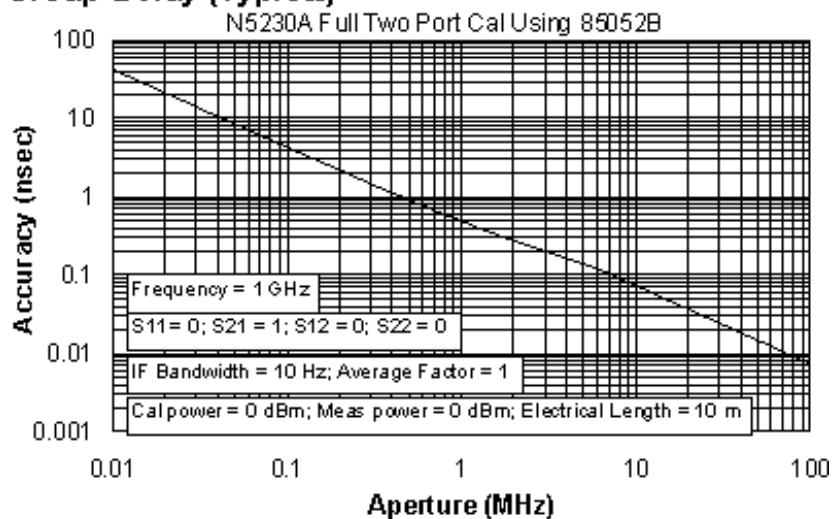

In general, the following formula can be used to determine the accuracy, in seconds, of specific group delay measurement:

$$\pm \text{Phase Accuracy (deg)} / [360 \times \text{Aperture (Hz)}]$$

Depending on the aperture and device length, the phase accuracy used is either incremental phase accuracy or worst case phase accuracy.

a Group delay is computed by measuring the phase change within a specified frequency step (determined by the frequency span and the number of points per sweep).

General Information

- [Miscellaneous Information](#)
- [Front Panel](#)
- [Rear Panel](#)

■ [Environment and Dimensions](#)

Table 20. Miscellaneous Information

Description	Specification	Supplemental Information
System IF Bandwidth Range		1 Hz to 250 kHz, nominal
CPU		Intel® 1.1 GHz Pentium® M with 1 GByte RAM

Table 21. Front Panel Information

Description	Supplemental Information
RF Connectors	
N5230A	
Type	Option 220 or 225: 3.5 mm (male), 50 ohm, (nominal) Option 420, 425, 520, or 525: 2.4 mm (male), 50 ohm, (nominal)
Center Pin Recession	0.002 in. (characteristic)
Display	
Size	21.3 cm (8.4 in) diagonal color active matrix LCD; 640 (horizontal) X 480 (vertical) resolution
Refresh Rate	Vertical 59.83 Hz; Horizontal 31.41 kHz
Pixels	When running the analyzer's built-in Display Test , one or more of the following symptoms indicate a faulty display assembly: <ul style="list-style-type: none"> • A complete row or column of "stuck on" or "dark" pixels. • More than six "stuck on" pixels (but not more than three green) • More than twelve "dark" pixels (but not more than seven of the same color) • Two or more consecutive "stuck on" pixels or three or more consecutive "dark" pixels (but no more than one set of two consecutive "dark" pixels) • "Stuck on" or "dark" pixels less than 6.5 mm apart (excluding consecutive pixels)
Display Range	
Magnitude	±500 dB (at 20 dB/div), max
Phase	±500°, max
Polar	10 pUnits, min 1000 Units, max

Display Resolution	
Magnitude	0.001 dB/div, min
Phase	0.01°/div, min
Marker Resolution	
Magnitude	0.001 dB, min
Phase	0.01°, min
Polar	0.01 mUnit, min; 0.01°,min

Table 22. Rear Panel Information

Description	Supplemental Information
10 MHz Reference In	
Connector	BNC, female
Input Frequency	10 MHz \pm 10 ppm, Typical
Input Level	-15 dBm to +20 dBm, Typical
Input Impedance	200 Ω , nom.
10 MHz Reference Out	
Connector	BNC, female
Output Frequency	10 MHz \pm 1 ppm, Typical
Signal Type	Sine Wave, Typical
Output Level	+10 dBm \pm 4 dB into 50 Ω , Typical
Output Impedance	50 Ω , nominal
Harmonics	<-40 dBc, Typical
VGA Video Output	
Connector	15-pin mini D-Sub; Drives VGA compatible monitors
Devices Supported:	
	Resolutions:
Flat Panel (TFT)	1024 X 768, 800 X 600, 640 X 480
Flat Panel (DSTN)	800 X 600, 640 X 480
CRT Monitor	1280 X 1024, 1024 X 768, 800 X 600, 640 X 480

	Simultaneous operation of the internal and external displays is allowed, but with 640 X 480 resolution only. If you change resolution, you can only view the external display (internal display will "white out").
Test Set IO	
	25-pin D-Sub connector, available for external test set control
Aux IO	
	25-pin D-Sub connector, male, analog and digital IO
Handler IO	
	36-pin parallel I/O port; all input/output signals are default set to negative logic; can be reset to positive logic via GPIB command
GPIB	
	24-pin D-sub (Type D-24), female; compatible with IEEE-488.
Parallel Port (LPT1)	
	25-pin D-Sub miniature connector, female; provides connection to printers or any other parallel port peripherals
Serial Port (COM 1)	
	9-pin D-Sub, male; compatible with RS-232
USB Port	
	One port on front panel and five ports on rear panel. Universal Serial Bus jack, Type A configuration (4 contacts inline, contact 1 on left); female
Contact 1	Vcc: 4.75 to 5.25 VDC, 500 mA, maximum
Contact 2	-Data
Contact 3	+Data
Contact 4	Ground
Table 22. Rear Panel Information (Continued)	
Description	Supplemental Information
LAN	

	10/100BaseT Ethernet, 8-pin configuration; auto selects between the two data rates
Line Power	
Frequency, Voltage	50/60/400 Hz for 100 - 120 V 50/60 Hz for 220 - 240 V Power supply is auto switching
Max	350 Watts

Note: Option H08 and Option H11 are not available with the N5230A

Table 23. Analyzer Dimensions and Weight

Description	Supplemental Information		
Cabinet Dimensions			
	Height	Width	Depth
Excluding front and rear panel hardware and feet	267 mm 10.5 in	426 mm 16.75 in	427 mm 16.8 in
As shipped - includes front panel connectors, rear panel bumpers, and feet.	280 mm 11.0 in	435 mm 17.1 in	470 mm 18.5 in
As shipped plus handles	280 mm 11.0 in	458 mm 18 in	501 mm 19.7 in
As shipped plus rack-mount flanges	280 mm 11.0 in	483 mm 19 in	470 mm 18.5 in
As shipped plus handles and rack-mount flanges	280 mm 11.0 in	483 mm 19 in	501 mm 19.70 in
Weight			
Net			
N5230A	24.9 kg (55 lb), nominal		
Shipping			
N5230A	36.3 kg (80 lb), nominal		

Note: For Regulatory and Environmental information, refer to the PNA Series Installation and Quick Start Guide, located at <http://cp.literature.agilent.com/litweb/pdf/E8356-90001.pdf>.

Measurement Throughput Summary

- [Typical Cycle Time for Measurement Completion](#)
- [Cycle Time vs IF Bandwidth](#)

- [Cycle Time vs Number of Points](#)
- [Data Transfer Time](#)

Table 24. Typical Cycle Time^a (ms) for Measurement Completion

Description	Typical				
	Number of Points				
	201	401	801	1601	16,001
Start 8 GHz, Stop 18 GHz, 30 kHz IF bandwidth					
Uncorrected	97.5	102.7	103.8	108.2	683.9
2-Port cal	203.7	213.5	218.5	234.6	1504.3
Start 10 MHz, Stop 10 GHz, 30 kHz IF bandwidth					
Uncorrected	112.6	120.6	124.8	138.2	738.4
2-Port cal	232.8	251.8	265.2	304.3	1623.4
Start 10 MHz, Stop 20 GHz, 30 kHz IF bandwidth					
Uncorrected	146	199.3	210.9	217.2	753.9
2-Port cal	302.3	410.5	438.7	462.5	1660.5
Start 8 GHz, Stop 18 GHz, 50 kHz IF bandwidth					
Uncorrected	79.1	81	81.7	86.6	482
2-Port cal	164.5	170.3	175.3	193.5	1104.7
Start 10 MHz, Stop 10 GHz, 50 kHz IF bandwidth					
Uncorrected	96.8	101.7	108.8	122.2	524.6
2-Port cal	202.1	215.6	236.7	276.7	1198.8
Start 10 MHz, Stop 20 GHz, 50 kHz IF bandwidth					
Uncorrected	141.6	163.9	170.7	179.7	546.5
2-Port cal	293.6	341	360	389.5	1248.8

^a Includes sweep time, retrace time and band-crossing time. Analyzer display turned off with DISPLAY:ENABLE OFF. Add 21 ms for display on. Data for one trace (S₁₁) measurement.

Table 25. (Options 020/025, 120/125, only) Cycle Time vs IF Bandwidth

Applies to the [Preset condition](#) (201 points, correction off) except for the following changes:

- CF = 10 GHz
- Span = 100 MHz
- Display off (add 21 ms for display on)

Description	Typical Performance	
IF Bandwidth (Hz)	Cycle Time (ms) ^a	Trace Noise (dB rms)
600,000	7	0.0035
360,000	7	0.0026
280,000	7	0.0022
200,000	7	0.0021
150,000	7	0.0016
100,000	7	0.0012
70,000	7	0.0011
50,000	9	0.0009
30,000	11	0.0008
20,000	14	0.0006
15,000	17	0.0005
10,000	28	0.0004
7000	37	0.0004
5000	48	0.0003
3000	72	0.0003
2000	102	0.0002
1500	130	0.0001

1000	218	0.0001
700	294	0.0001
500	399	0.0001
300	636	0.0001
200	932	0
100	1826	0
30	6004	0
10	17903	0
1	178398	0

a Cycle time includes sweep and retrace time.

Table 26. (Options 220/225, 420/425, 520/525 only) Cycle Time vs IF Bandwidth

Applies to the [Preset condition](#) (201 points, correction off) except for the following changes:

- CF = 10 GHz
- Span = 100 MHz
- Display off (add 21 ms for display on)

Description	Typical	
IF Bandwidth (Hz)	Cycle Time (ms) ^a	Cycle Time (ms) Option 080 enabled
250,000	8.9	37.9
200,000	9.3	39.3
150,000	9.9	40.1
100,000	10.5	41.8
70,000	11.5	43.6
50,000	12.8	45.4

30,000	15.4	50
20,000	18.3	53.9
15,000	21	57.5
10,000	27	65.8
7000	34	75.4
5000	48.5	93
3000	72.8	124
2000	108.8	169
1500	126.8	187.1
1000	272.5	
700	357.7	
500	460	
300	697.7	
200	1003.5	
150	1307.8	
100	1917.6	
30	6173.8	
10	18214.8	
1	181699.2	

a Cycle time includes sweep and retrace time.

Table 27. (Options 020/025, 120/125, only) Cycle Time vs Number of Points

Applies to the [Preset condition](#) (correction off) except for the following changes:

- CF = 10 GHz
- Span = 100 MHz

- Display off (add 21 ms for display on)

Description	Typical Performance	
IF Bandwidth (Hz)	Number of Points	Cycle Time (ms) ^a
30,000	3	6.7
	11	7.4
	51	6.9
	101	7.8
	201	11.2
	401	18.3
	801	32.4
	1,601	59.4
	6,401	224.7
	16,001	556.9
100,000	3	6.7
	11	6.6
	51	6.8
	101	7
	201	7.5
	401	9
	801	13.5
	1,601	22.9
	6,401	75.3
	16,001	180.3
600,000	3	6.5
	11	6.6
	51	6.8
	101	6.9
	201	7.3

	401	8.1
	801	9.4
	1,601	12
	6,401	27.7
	16,001	59.3

a Cycle time includes sweep and retrace time.

Table 28. (Options 220/225, 420/425, 520/525 only) Cycle Time vs Number of Points

Applies to the [Preset condition](#) (correction off) except for the following changes:

- CF = 10 GHz
- Span = 100 MHz
- Display off (add 21 ms for display on)

Description	Typical	
IF Bandwidth (Hz)	Number of Points	Cycle Time (ms) ^a
30,000	3	8
	11	8
	51	9.38
	101	11.4
	201	15.5
	401	23.6
	801	39.9
	1,601	71.6
	6,401	265.4
	16,001	650.8
50,000	3	7.7
	11	7.7
	51	8.7
	101	10.1
	201	13

	401	18.6
	801	29.8
	1,601	52.3
	6,401	184.5
	16,001	448.8
250,000	101	8.7
	201	9.05
	401	10.85
	801	14.42
	1,601	21.63
	6,401	61.1
	16,001	147.7

a Cycle time includes sweep and retrace time.

Table 29. Data Transfer Time (ms)


Description	Typical			
	Number of Points			
	201	401	1601	16,001
SCPI over GPIB (program executed on external PC)				
32-bit floating point	7	12	43	435
64-bit floating point	12	22	84	856
ASCII	64	124	489	5054
SCPI (program executed in the analyzer)				
32-bit floating point	1	2	3	30
64-bit floating point	2	2	4	40
ASCII	29	56	222	2220
COM (program executed in the analyzer)				
32-bit floating point	<0.4	0.4	0.5	1.9

Variant type	0.7	1	3	32
DCOM over LAN (program executed on external PC)				
32-bit floating point	<0.8	1	1.5	7.1
Variant type	1.8	2.7	8.5	80


Tables 30 - 35 [Front-panel Jumper Specs \(Options 025, 125, 225, 425, 525\)](#)

Test Set Block Diagrams

N5230A Option 020, or 120, or 220, or 420, or 520 (Standard Test Set and Standard Power Range)

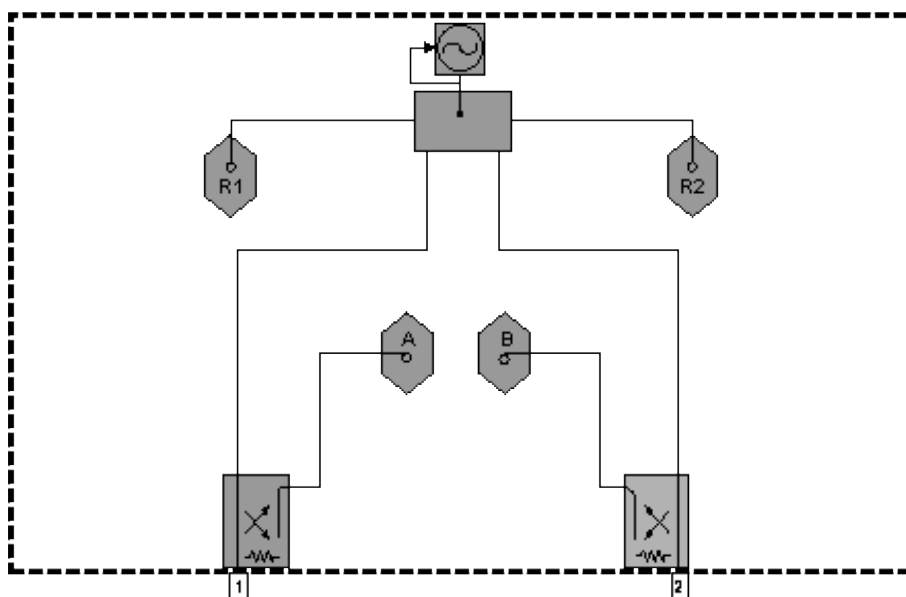

N5230A Option 025, or 125, or 225, or 425, or 525 (Configurable Test Set and Extended Power Range)

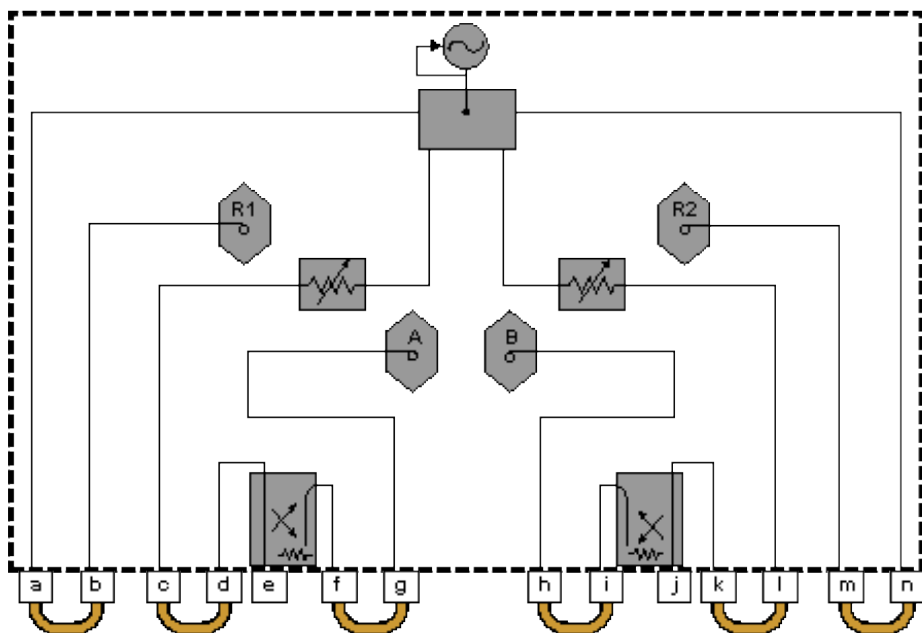

Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

Last modified:

Jan. 10, 2007 Updated line power; moved regulatory, operating, and non-operating info to I&QS Guide.

Technical Specifications for the N5230A

Options 140/145/146/240/245/246 (4-Port PNA-L)

Rev. 2007-01-10

This is a complete list of the N5230A Options 140, 145, 146, 240, 245, 246 network analyzer technical specifications.

- To optimize viewing of uncertainty curves, click the Maximize button.
 - To view or print the .pdf version of the specifications, visit our web site at www.agilent.com, and search for "Technical Specifications for the N5230A".
 - This N5230A document provides technical specifications for the 85052B calibration kit and the N4433A ECal module. Please download our free Uncertainty Calculator from http://www.agilent.com/find/na_calculator to generate the curves for your calibration kit and PNA setup.
-

■ Definitions

■ **Corrected System Performance**

- **System Dynamic Range**
- **Extended Dynamic Range**
- **3.5mm Connectors**

■ **Uncorrected System Performance**

■ **Test Port Output**

■ **Test Port Input**

■ **Dynamic Accuracy**

■ **Group Delay**

■ **General Information**

■ **Measurement Throughput Summary**

■ **Front-panel Jumper Specs** (Option 145 or 146 or 245 or 246 only)

■ **Test Set Block Diagrams**

See Specs for other PNA models

Definitions

All specifications and characteristics apply over a 25 °C \pm 5 °C range (unless otherwise stated) and 90 minutes after the instrument has been turned on.

Specification (spec.): Warranted performance. Specifications include guardbands to account for the expected statistical performance distribution, measurement uncertainties, and changes in performance due to environmental conditions.

Characteristic (char.): A performance parameter that the product is expected to meet before it leaves the factory, but that is not verified in the field and is not covered by the product warranty. A characteristic includes the same guardbands as a specification.

Typical (typ.): Expected performance of an average unit which does not include guardbands. It is not covered by the product warranty.

Nominal (nom.): A general, descriptive term that does not imply a level of performance. It is not covered by the product warranty.

Calibration: The process of measuring known standards to characterize a network analyzer's systematic (repeatable) errors.

Corrected (residual): Indicates performance after **error correction** (calibration). It is determined by the quality of calibration standards and how well "known" they are, plus system repeatability, stability, and noise.

Uncorrected (raw): Indicates instrument performance without error correction. The uncorrected performance affects the stability of a **calibration**.

Standard: When referring to the analyzer, this includes no options unless noted otherwise.

Corrected System Performance

The specifications in this section apply for measurements made with the N5230A analyzer with the following conditions:

- 10 Hz IF bandwidth
- No averaging applied to data
- Isolation calibration with an averaging factor of 8

■ System Dynamic Range

■ Extended Dynamic Range

■ 3.5mm Connectors

Table 1. System Dynamic Range at Test Port ¹

Description	Specification (dB) at Test Port	Typical (dB) at Test Port
Standard configuration and standard power range (Options 140 or 240)		
300 KHz to 10 MHz ²	--	108 dB
10 MHz to 4 GHz ²	120 dB	128 dB
4 GHz to 6 GHz	118 dB	129 dB
6 GHz to 10.5 GHz	115 dB	127 dB
10.5 GHz to 13.5 GHz	107 dB	119 dB
13.5 GHz to 15 GHz	107 dB	119 dB
15 GHz to 20 GHz	103 dB	116 dB
Configurable test set and extended power range (Options 145 or 245)		
Configurable test set, extended power range, and internal second source (Option 146 or 246)		
300 KHz to 10 MHz ²	--	108 dB
10 MHz to 4 GHz ²	120 dB	128 dB
4 GHz to 6 GHz	118 dB	128 dB
6 GHz to 10.5 GHz	113 dB	125 dB
10.5 GHz to 13.5 GHz	105 dB	117 dB
13.5 GHz to 15 GHz	105 dB	117 dB
15 GHz to 20 GHz	98 dB	115 dB

¹ The system dynamic range is calculated as the difference between the noise floor and the specified source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account.

² May be degraded by 10 dB at particular frequencies (multiples of 5 MHz) below 500 MHz due to spurious receiver residuals. Methods are available to regain the full dynamic range.

Table 2. Extended Dynamic Range at Direct Receiver Access Input ¹

Configurable test set and extended power range (Options 145/245)		
Configurable test set, extended power range, and internal second source (Options 146/246)		
	Specification (dB)	Typical (dB)
300 KHz to 10 MHz ²	--	124 dB
10 MHz to 4 GHz ²	136 dB	--
4 GHz to 6 GHz	134 dB	--
6 GHz to 10.5 GHz	129 dB	--
10.5 GHz to 13.5 GHz	121 dB	--
13.5 GHz to 15 GHz	121 dB	--
15 GHz to 20 GHz	114 dB	--

1 The direct receiver access input extended dynamic range is calculated as the difference between the direct receiver access input noise floor and the source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account. This set-up should only be used when the receiver input will never exceed its compression or damage level. When the analyzer is in segment sweep mode, it can have predefined frequency segments which will output a higher power level when the extended dynamic range is required (i.e. devices with high insertion loss), and reduced power when receiver compression or damage may occur (i.e. devices with low insertion loss). The extended range is only available in one-path transmission measurements.

2 May be degraded by 10 dB at particular frequencies (multiples of 5 MHz) below 500 MHz due to spurious receiver residuals. Methods are available to regain the full dynamic range.

Corrected System Performance with 3.5mm Connectors (Tables 3 - 4)

Receiver Dynamic Range technical specifications are not provided in this N5230A specs document.

Table 5. Uncorrected System Performance ¹

Description	Specification	Typical
	Options 140/ 145/ 146/ 240/ 245/ 246	Options 140/ 145/ 146/ 240/ 245/ 246
Directivity		
300 KHz to 10 MHz	--	-23 dB
10 MHz to 1 GHz	-28 dB	--
1 GHz to 3 GHz	-25 dB	--

3 GHz to 5 GHz	-20 dB	--
5 GHz to 11.5 GHz	-17 dB	--
11.5 GHz to 13.5 GHz	-15 dB	
13.5 GHz to 20 GHz	-15 dB	--
Source Match		
300 KHz to 10 MHz	--	-8 dB
10 MHz to 1 GHz	-12 dB	--
1 GHz to 3 GHz	-12 dB	--
3 GHz to 5 GHz	-12 dB	--
5 GHz to 10.5 GHz	-12 dB	--
10.5 GHz to 11.5 GHz	-10 dB	--
11.5 GHz to 13.5 GHz	-8 dB	
13.5 GHz to 20 GHz	-8 dB	--
Load Match		
300 KHz to 10 MHz	--	-9 dB
10 MHz to 1 GHz	-20 dB	--
1 GHz to 3 GHz	-20 dB	--
3 GHz to 5 GHz	-18 dB	--
5 GHz to 11.5 GHz	-12 dB	--
11.5 GHz to 13.5 GHz	-7 dB	
13.5 GHz to 16 GHz	-7 dB	--
16 GHz to 20 GHz	-7.5 dB	--
Crosstalk²		
300 KHz to 5 MHz	--	-70 dB
5 MHz-10 MHz	--	-100 dB

10 MHz to 45 MHz	--	-110 dB
45 MHz to 4 GHz	--	-122 dB
4 GHz to 6 GHz	--	-123 dB
6 GHz to 10.5 GHz	--	-120 dB
10.5 GHz to 13.5 GHz	--	-115 dB
13.5 GHz to 15 GHz		-115 dB
15 GHz to 20 GHz	--	-110 dB

1 Specifications apply over environmental temperature of 25 °C \pm 5 °C, with less than 1°C variation from the calibration temperature.

2 Measurement conditions: normalized to a thru, measured with two shorts, 10 Hz IF bandwidth, averaging factor of 8, alternate mode, source power set to the lesser of the maximum power out or the maximum receiver power.

Table 6. Test Port Output ¹

Description	Specification		Typical	
	Opt 140/ 240	Opt 145/ 146/ 245/ 246	Opt 140/ 240	Opt 145/ 1 245/ 246
Frequency Range				
Options 140/ 145/ 146	300 KHz to 13.5 GHz		--	
Options 240/ 245/ 246	300 KHz to 20 GHz		--	
Nominal Power				
	-5 dBm	-8 dBm	Preset power; attenuator switch point 10 dB below nominal power	
Frequency Resolution				
	1 Hz		--	
CW Accuracy				
	+/-1 ppm		--	
Frequency Stability				

	--	+/-0.05 ppm. -10° to 70° C +/-0.1 ppm/yr maximum		
Description	Specification		Typical	
	Opt 140/ 240	Opt 145/ 146/ 245/ 246	Opt 140/ 240	Opt 145/ 1 245/ 246
Power Level Accuracy				
Variation from nominal power in range 0				
300 KHz to 10 MHz	--	--	+/-1.0 dB	+/-1.0 dB
10 MHz to 2 GHz	+/-1.0 dB	+/-1.0 dB	--	--
2 GHz to 10.5 GHz	+/-1.5 dB	+/-1.5 dB	--	--
10.5 GHz to 13.5 GHz	+/-2.5 dB	+/-2.5 dB	--	--
13.5 GHz to 20 GHz	+/-2.5 dB	+/-2.5 dB	--	--
Max Leveled Power				
300 KHz to 10 MHz	--	--	+5 dBm	+5 dBm
10 MHz to 4 GHz	+8 dBm	+8 dBm	+12 dBm	+11 dBm
4 GHz to 6 GHz	+6 dBm	+6 dBm	+10 dBm	+9 dBm
6 GHz to 10.5 GHz	+3 dBm	+1 dBm	+8 dBm	+6 dBm
10.5 GHz to 13.5 GHz	0 dBm	-2 dBm	+5 dBm	+3 dBm
13.5 GHz to 15 GHz	0 dBm	-2 dBm	+5 dBm	+3 dBm
15 GHz to 20 GHz	-3 dBm	-8 dBm	+2 dBm	-1 dBm
Power Level Linearity				
Refer to footnote 1.				
300 KHz to 10 MHz	--	--	+/-2.0 dB	+/-2.0 dB
10 MHz to 1 GHz	+/-2.0 dB	+/-2.0 dB	--	--
1 GHz to 13.5 GHz	+/-1.5 dB	+/-1.5 dB	--	--

13.5 GHz to 20 GHz	+/-1.5 dB	+/-1.5 dB	--	--
Power Sweep Range (ALC)				
ALC range starts at maximum leveled power and decreases by the dB amount specified here.				
300 KHz to 10 MHz	--	--	32 dB	32 dB
10 MHz to 4 GHz	33 dB	33 dB	--	--
4 GHz to 6 GHz	31 dB	31 dB	--	--
6 GHz to 10.5 GHz	28 dB	26 dB	--	--
10.5 GHz to 13.5 GHz	25 dB	23 dB	--	--
13.5 GHz to 15 GHz	25 dB	23 dB	--	--
15 GHz to 20 GHz	22 dB	17 dB	--	--
Description	Specification		Typical	
	Opt 140/ 240	Opt 145/ 146/ 245/ 246	Opt 140/ 240	Opt 145/ 146/ 245/ 246
Power Resolution				
	0.01 dB	0.01 dB	--	--
Power Range				
300 KHz to 10 MHz	--	--	-27 to +5 dBm	-87 to +5 dBm
10 MHz to 45MHz	--	--	-27 to +12 dBm	-87 to +11 dBm
45 MHz to 4 GHz	--	--	-27 to +12 dBm	-87 to +11 dBm
4 GHz to 6 GHz	--	--	-27 to +10 dBm	-87 to +9 dBm
6 GHz to 10.5 GHz	--	--	-27 to +8 dBm	-87 to +6 dBm
10.5 GHz to 13.5 GHz	--	--	-27 to +5 dBm	-87 to +3 dBm

13.5 GHz to 15 GHz	--	--	-27 to +5 dBm	-87 to +3 dBm
15 GHz to 20 GHz	--	--	-27 to +2 dBm	-87 to -1 dBm
Power Settings				
Minimum Power Setting	--	--	-30 dBm	-90 dBm
Maximum Power Setting	--	--	+20 dBm	+20 dBm
Harmonics (2nd or 3rd) at Maximum Output Power				
In-band Source Harmonics				
300 KHz to 10 MHz	--	--	-17 dBc	
10 MHz to 1 GHz	--	--	-17 dBc	
1 GHz to 13.5 GHz	--	--	-20 dBc	
13.5 GHz to 20 GHz	--	--	-20 dBc	
Non-Harmonic Spurious (at Nominal Output Power)				
300 KHz to 13.5 GHz	--	--	-50 dBc for offset frequency 1 KHz	
13.5 GHz to 20 GHz	--	--	-50 dBc for offset frequency 1 KHz	

1 For Options 140/145/240/245, performance is specified on Port 1 only; Ports 2, 3, and 4 performance is typical. For Options 146/246, performance is specified on Ports 1 and 3 only; Ports 2 and 4 performance is typical. Test reference is at the nominal power level.

Table 6. Test Port Output (Continued)			
Phase Noise (Nominal power at test port)	Typical Performance		
	Options 140/145/146/240/245/246		
	10 kHz Offset	100 kHz Offset	1 MHz Offset
300 KHz to 10 MHz	-86 dBc/Hz	-86 dBc/Hz	-95 dBc/Hz
10 MHz to 1.5 GHz	-86 dBc/Hz	-91 dBc/Hz	-95 dBc/Hz
1.5 GHz to 3.125 GHz	-83 dBc/Hz	-91 dBc/Hz	-95 dBc/Hz
3.125 GHz to 6.25 GHz	-77 dBc/Hz	-85 dBc/Hz	-89 dBc/Hz
6.25 GHz to 12.5 GHz	-71 dBc/Hz	-79 dBc/Hz	-83 dBc/Hz
12.5 GHz to 13.5 GHz	-65 dBc/Hz	-73 dBc/Hz	-77 dBc/Hz
13.5 GHz to 20 GHz	-65 dBc/Hz	-73 dBc/Hz	-77 dBc/Hz

Table 7. Test Port Input

Description	Specification	Typical
	Opt 140/ 145/ 146/ 240/ 245/ 246	Opt 140/ 145/ 146/ 240/ 245/ 246
Test Port Noise Floor		
Total average (rms) noise power calculated as the mean value of a linear magnitude trace expressed in dBm.		
10 Hz IF Bandwidth		
300 KHz to 10 MHz	--	<-103 dBm
10 MHz to 500 MHz	<-112 dBm	<-116 dBm
500 MHz to 4 GHz	<-112 dBm	<-120 dBm
4 GHz to 10.5 GHz	<-112 dBm	<-119 dBm
10.5 GHz to 13.5 GHz	<-107 dBm	<-114 dBm
13.5 GHz to 15 GHz	<-107 dBm	<-114 dBm

15 GHz to 20 GHz	<-106 dBm	<-114 dBm
1 KHz IF Bandwidth		
300 KHz to 10 MHz	--	<-83 dBm
10 MHz to 500 MHz	<-92 dBm	<-96 dBm
500 MHz to 4 GHz	<-92 dBm	<-100 dBm
4 GHz to 10.5 GHz	<-92 dBm	<-99 dBm
10.5 GHz to 13.5 GHz	<-87 dBm	<-94 dBm
13.5 GHz to 15 GHz	<-87 dBm	<-94 dBm
15 GHz to 20 GHz	<-86 dBm	<-94 dBm
Direct Receiver Access Input Noise Floor (Options 145/ 146/ 245/ 246)		
Total average (rms) noise power calculated as the mean value of a linear magnitude trace expressed in dBm.		
10 Hz IF Bandwidth		
300 KHz to 10 MHz	--	<-119 dBm
10 MHz to 500 MHz	<-128 dBm	<-132 dBm
500 MHz to 4 GHz	<-128 dBm	<-136 dBm
4 GHz to 10.5 GHz	<-128 dBm	<-135 dBm
10.5 GHz to 13.5 GHz	<-123 dBm	<-130 dBm
13.5 GHz to 15 GHz	<-123 dBm	<-130 dBm
15 GHz to 20 GHz	<-122 dBm	<-130 dBm
1 KHz IF Bandwidth		
300 KHz to 10 MHz	--	<-99 dBm
10 MHz to 500 MHz	<-108 dBm	<-112 dBm
500 MHz to 4 GHz	<-108 dBm	<-116 dBm
4 GHz to 10.5 GHz	<-108 dBm	<-115 dBm
10.5 GHz to 13.5 GHz	<-103 dBm	<-110 dBm

13.5 GHz to 15 GHz	<-103 dBm	<-110 dBm
15 GHz to 20 GHz	<-102 dBm	<-110 dBm

Description	Specification		Typical	
	Opt 140/ 145/ 146/ 240/ 245/ 246		Opt 140/ 145/ 146/ 240/ 245/ 246	
Compression Level (at +8 dBm except as noted)				
	Power	Com- pression	Power	Com- pression
300 KHz to 10 MHz	--	--	+5 dBm	0.10 dB
10 MHz to 50 MHz	+8 dBm	0.35 dB	--	--
50 MHz to 1 GHz	+8 dBm	0.35 dB	--	--
1 GHz to 8 GHz	+8 dBm	0.25 dB	--	--
8 GHz to 12.5 GHz	+8 dBm	0.30 dB	--	--
12.5 GHz to 13.5 GHz	+8 dBm	0.55 dB	--	--
13.5 GHz to 20 GHz	+8 dBm	0.55 dB	--	--
Test Port Compression - 0.1 dB				
300 KHz to 10 MHz	--	--	+5 dBm	--
10 MHz to 1 GHz	--	--	+9 dBm	--
1 GHz to 12.5 GHz	--	--	+10 dBm	--
12.5 GHz to 13.5 GHz	--	--	+9 dBm	--
13.5 GHz to 20 GHz	--	--	+9 dBm	--

Table 7. Test Port Input (Continued)		
Description	Specification	Typical

	Opt 140/ 240	Opt 145/ 245	Opt 146/ 246	Opt 140/ 240	Opt 145/ 245	Opt 146/ 246
Trace Noise Magnitude						
Ratioed measurement, nominal power at test port.						
100 KHz IF bandwidth						
300 KHz to 10 MHz	--	--	--	.015 dB rms	.030 dB rms	.050 dB rms
10 MHz to 10.5 GHz	.006 dB rms	.008 dB rms	.016 dB rms	.004 dB rms	.005 dB rms	.013 dB rms
10.5 GHz to 13.5 GHz	.010 dB rms	.014 dB rms	.038 dB rms	.007 dB rms	.009 dB rms	.026 dB rms
10.5 GHz to 20 GHz	.010 dB rms	.014 dB rms	.038 dB rms	.007 dB rms	.009 dB rms	.026 dB rms
600 KHz IF bandwidth						
300 KHz to 10 MHz	--	--	--	.015 dB rms	.030 dB rms	.050 dB rms
10 MHz to 10.5 GHz	--	--	--	.013 dB rms	.015 dB rms	.032 dB rms
10.5 GHz to 13.5 GHz	--	--	--	.017 dB rms	.023 dB rms	.063 dB rms
13.5 GHz to 20 GHz	--	--	--	.017 dB rms	.023 dB rms	.063 dB rms
100 KHz IF bandwidth						
Measured at Maximum Specified Power						
300 KHz to 10 MHz	--	--	--	.005 dB rms	.010 dB rms	.012 dB rms
10 MHz to 2 GHz	--	--	--	.001 dB rms	.003 dB rms	.004 dB rms

2 GHz to 10.5 GHz	--	--	--	.002 dB rms	.003 dB rms	.004 dB rms
10.5 GHz to 13.5 GHz	--	--	--	.006 dB rms	.009 dB rms	.023 dB rms
13.5 GHz to 20 GHz	--	--	--	.006 dB rms	.009 dB rms	.023 dB rms
Trace Noise Phase						
Ratioed measurement, nominal power at test port.						
100 KHz IF bandwidth						
300 KHz to 10 MHz	--	--	--	0.110 deg rms	0.180 deg rms	0.280 deg rms
10 MHz to 10.5 GHz	0.05 deg rms	0.07 deg rms	0.13 deg rms	0.025 deg rms	0.035 deg rms	0.090 deg rms
10.5 GHz to 13.5 GHz	0.08 deg rms	0.10 deg rms	0.250 deg rms	0.050 deg rms	0.060 deg rms	0.170 deg rms
13.5 GHz to 20 GHz	0.08 deg rms	0.10 deg rms	0.250 deg rms	0.050 deg rms	0.060 deg rms	0.170 deg rms
600 KHz IF bandwidth						
300 KHz to 10 MHz	--	--	--	0.110 deg rms	0.180 deg rms	0.300 deg rms
10 MHz to 10.5 GHz	--	--	--	0.080 deg rms	0.100 deg rms	0.200 deg rms
10.5 GHz to 13.5 GHz	--	--	--	0.120 deg rms	0.160 deg rms	0.430 deg rms
13.5 GHz to 20 GHz	--	--	--	0.120 deg rms	0.160 deg rms	0.430 deg rms
100 KHz IF bandwidth						
Measured at Maximum Specified Power						
300 KHz to 10 MHz	--	--	--	0.040 deg rms	0.050 deg rms	0.075 deg rms

10 MHz to 2 GHz	--	--	--	0.007 deg rms	0.012 deg rms	0.013 deg rms
2 GHz to 10.5 GHz	--	--	--	0.012 deg rms	0.015 deg rms	0.030 deg rms
10.5 GHz to 13.5 GHz	--	--	--	0.040 deg rms	0.060 deg rms	0.150 deg rms
13.5 GHz to 20 GHz	--	--	--	0.040 deg rms	0.060 deg rms	0.150 deg rms
Stability Magnitude						
Stability is defined as a ratio measurement made at the test port.						
300 KHz to 10 MHz	--	--	--	+/-0.015 dB/°C		
10 MHz to 2 GHz	--	--	--	+/-0.010 dB/°C		
2 GHz to 4 GHz	--	--	--	+/-0.015 dB/°C		
4 GHz to 13.5 GHz	--	--	--	+/-0.020 dB/°C		
13.5 GHz to 16 GHz	--	--	--	+/-0.020 dB/°C		
16 GHz to 19 GHz	--	--	--	+/-0.025 dB/°C		
19 GHz to 20 GHz	--	--	--	+/-0.030 dB/°C		
Stability Phase						
Stability is defined as a ratio measurement made at the test port.						
300 KHz to 10 MHz	--	--	--	+/-0.360°/°C		
10 MHz to 45 MHz	--	--	--	+/-0.020°/°C		
45 MHz to 500 MHz	--	--	--	+/-0.030°/°C		

500 MHz to 2 GHz	--	--	--	+/- 0.050°/°C	+/- 0.07°/°C
2 GHz to 4 GHz	--	--	--	+/- 0.100°/°C	+/-0.150°/°C
4 GHz to 8 GHz	--	--	--	+/- 0.150°/°C	+/-0.250°/°C
8 GHz to 13.5 GHz	--	--	--	+/- 0.300°/°C	+/-0.500°/°C
13.5 GHz to 16 GHz	--	--	--	+/- 0.300°/°C	+/-0.500°/°C
16 GHz to 20 GHz	--	--	--	+/- 0.350°/°C	+/-0.650°/°C

Table 7. Test Port Input (Continued)				
Description	Specification		Typical	
	Options 140/ 240	Opt 145/ 146/ 245/ 246	Opt 140/ 240	Opt 145/ 146/ 245/ 246
Reference Level Magnitude				
Range	+/-200 dB	+/-200 dB	--	--
Resolution	0.001dB	0.001dB	--	--
Reference Level Phase				
Range	+/-500°/°C	+/-500°/°C	--	--
Resolution	0.01°/°C	0.01°/°C	--	--

Table 7. Test Port Input (Continued)


	Typical Performance	
Damage Input Level	Opt 140/ 240	Opt 145/ 146/ 245/ 246
Test Port 1,2,3, and 4	+27 dBm or +/-16 VDC	+27 dBm or +/-16 VDC
Receivers R,A,B,C,D	--	+15 dBm or +/-16 VDC
Source out (reference)	--	+27 dBm or +/-16 VDC
Source out (test ports)	--	+27 dBm or +/-16 VDC
Coupler Thru	--	+27 dBm or +/-16 VDC
Coupler Arm	--	+15 dBm or +/-0 VDC

Table 8. Dynamic Accuracy (Specification ^a)


Accuracy of the test port input power reading relative to the reference input power level.

Dynamic Accuracy, 0.045 GHz

Magnitude

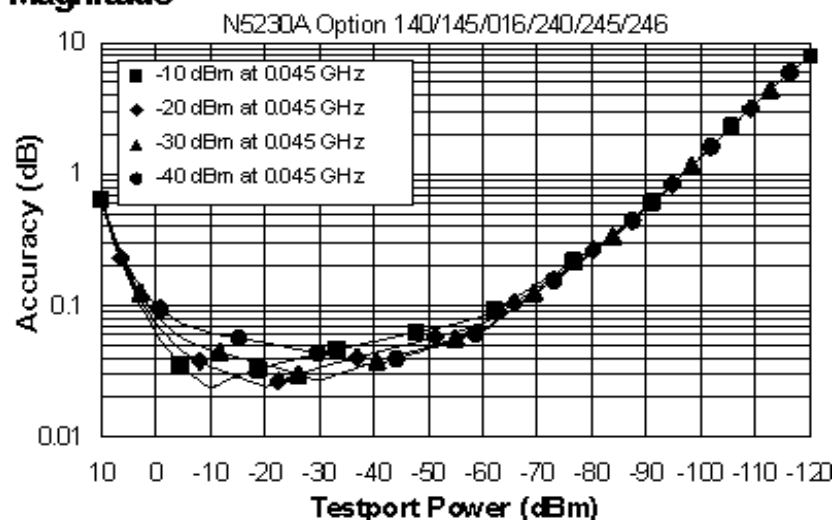


Phase

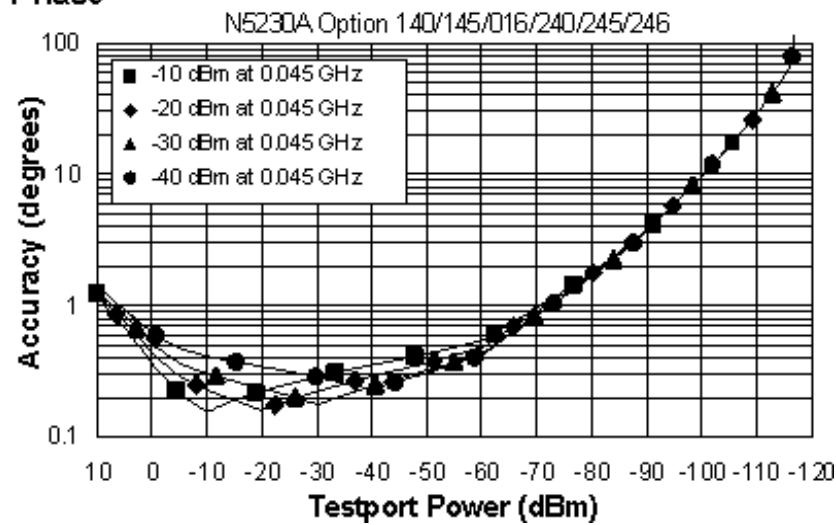


Dynamic Accuracy, 0.500 GHz

Magnitude

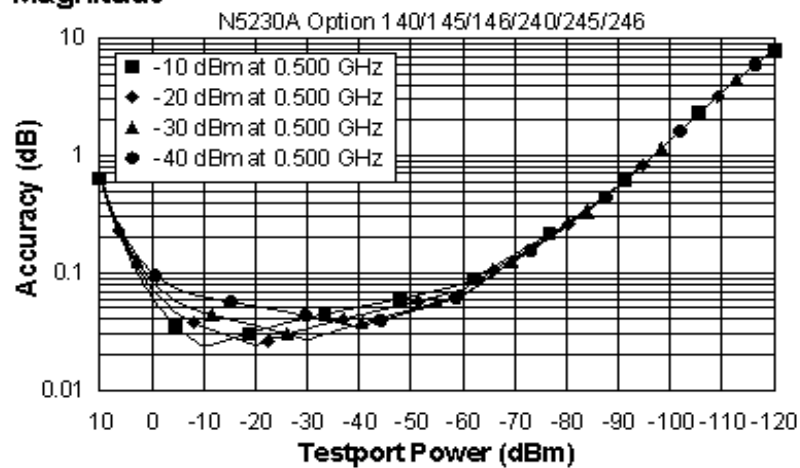


Phase

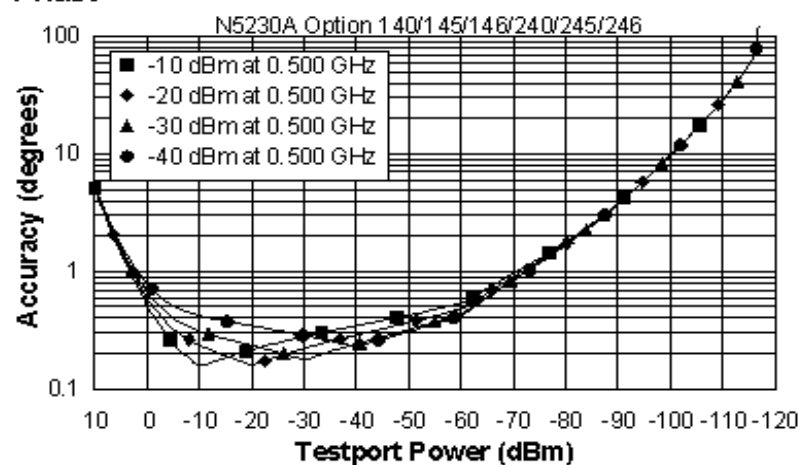


Dynamic Accuracy, 1- 2 GHz

Magnitude

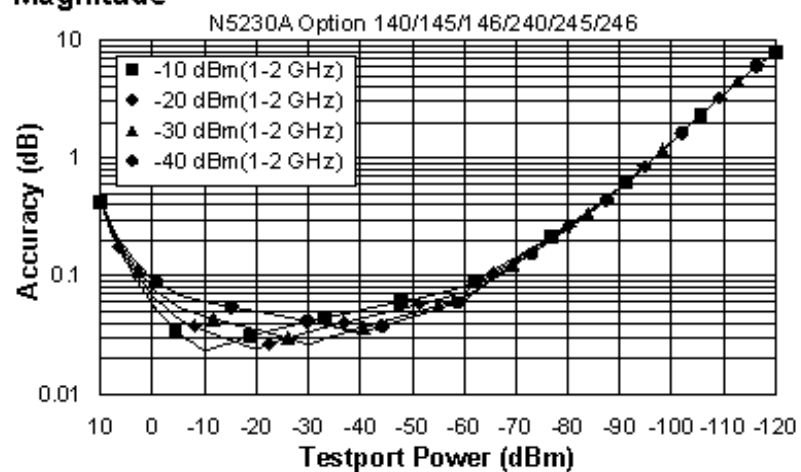


Phase

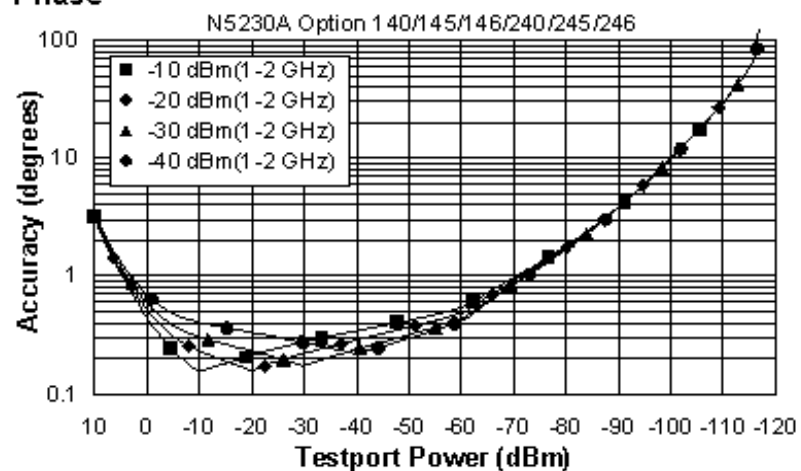


Dynamic Accuracy, 2 - 12.5 GHz

Magnitude

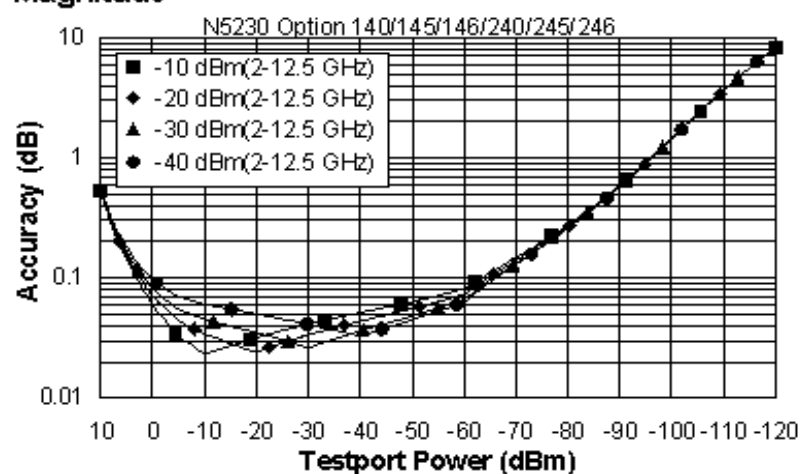


Phase

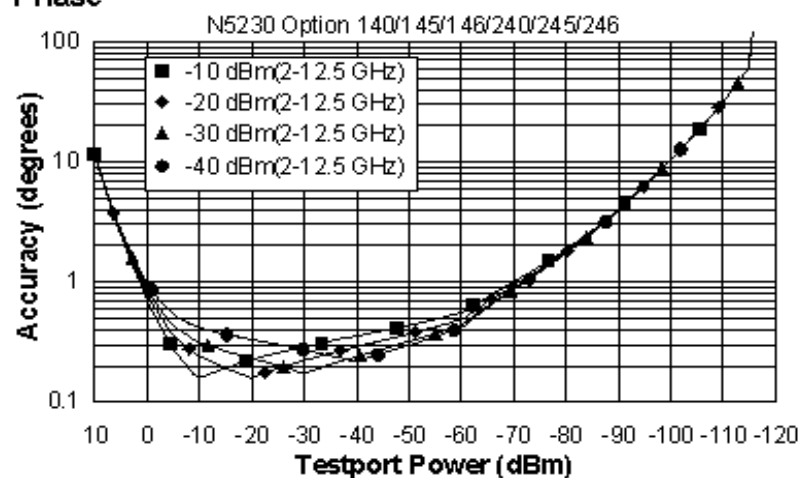


Dynamic Accuracy, 12.5-13.5 GHz

Magnitude

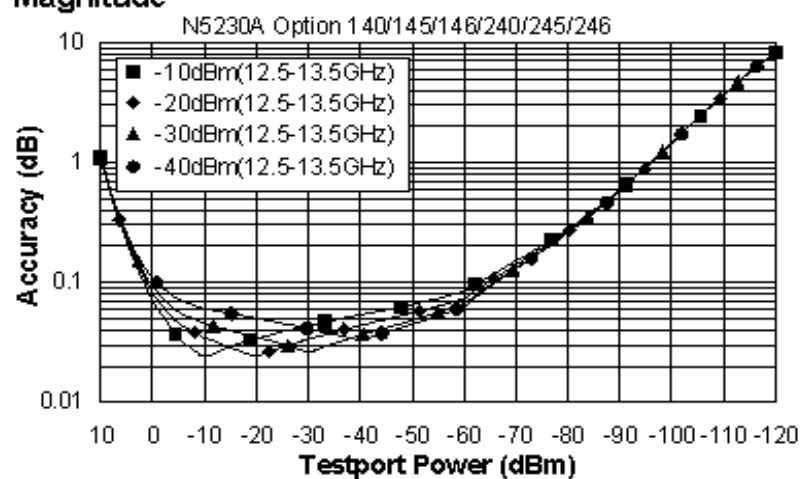


Phase

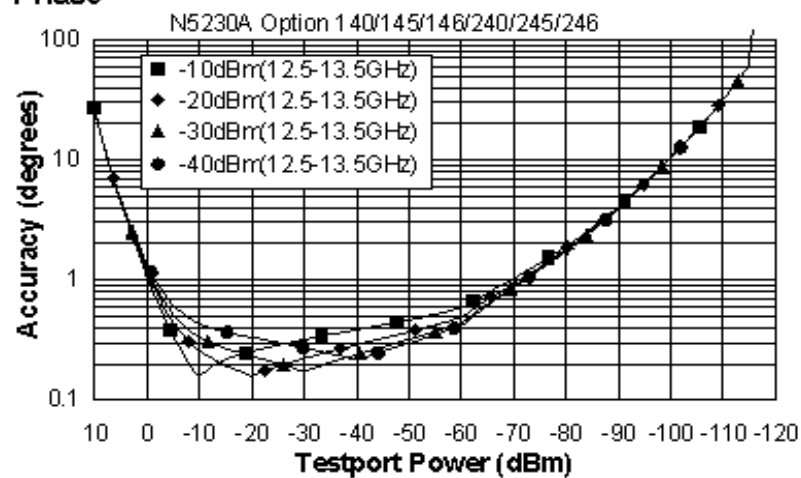


Dynamic Accuracy, 13.5 -20 GHz

Magnitude

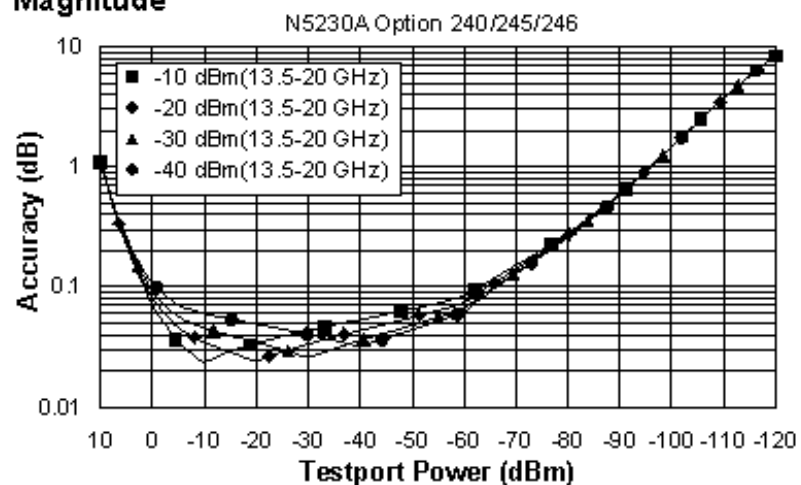

Phase

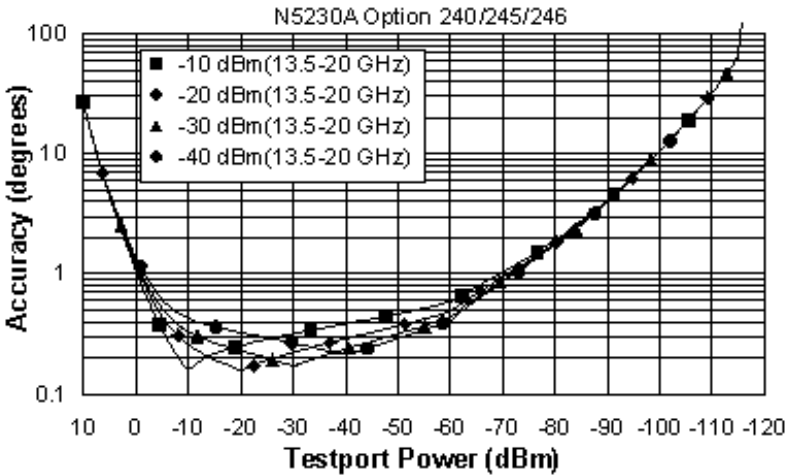

a Dynamic accuracy is verified with the following measurements:

- compression over frequency
- IF linearity at a single frequency of 1.195 GHz using a reference level of -20 dBm for an input power range of 0 to -110 dBm.


Table 9. Test Port Input (Group Delay) ^a

Description	Supplemental Information (typ.)
Aperture (selectable)	(frequency span)/(number of points -1)
Maximum Aperture	20% of frequency span
Range	0.5 x (1/minimum aperture)
Maximum Delay	Limited to measuring no more than 180° of phase change within the minimum aperture.)
Accuracy	See graph below. Char.

The following graph shows characteristic group delay accuracy with full 2-port calibration and a 10 Hz IF bandwidth. Insertion loss is assumed to be < 2 dB and electrical length to be ten meters.

For any S_{ij} Group Delay measurement, $S_{ij} = 0$, $S_{ji} = 1$, $S_{ji} = 0$, $S_{kl} = 0$ for all $kl \neq ij$

Group Delay (Typical)

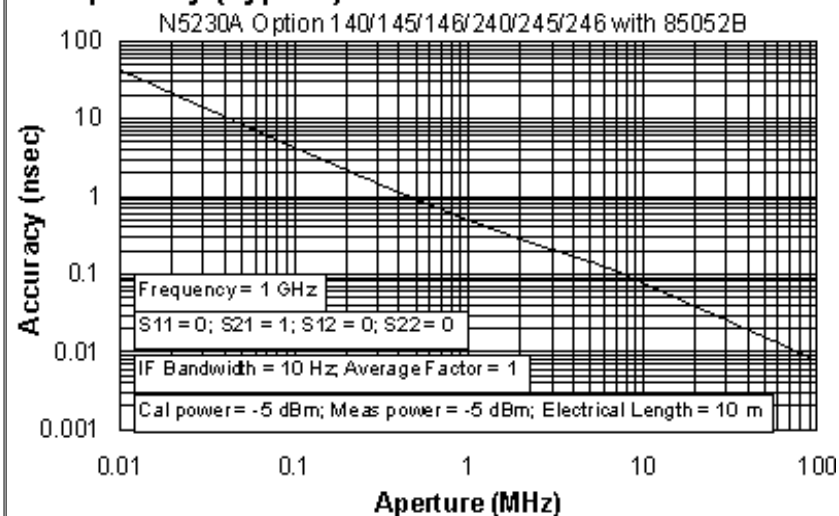

In general, the following formula can be used to determine the accuracy, in seconds, of specific group delay measurement:

$$\pm \text{Phase Accuracy (deg)} / [360 \times \text{Aperture (Hz)}]$$

Depending on the aperture and device length, the phase accuracy used is either incremental phase accuracy or worst case phase accuracy.

^a Group delay is computed by measuring the phase change within a specified frequency step (determined by the frequency span and the number of points per sweep).

General Information

- Miscellaneous Information
- Front Panel
- Rear Panel
- Environment and Dimensions

Table 10. Miscellaneous Information

Description	Supplemental Information
System IF Bandwidth Range	1 Hz to 600 kHz, nominal
CPU	Intel® 1.1 GHz Pentium® M with 1 GByte RAM

Table 11. Front Panel Information

Description	Supplemental Information
RF Connectors	
Type	Options 140/ 145/ 146/ 240/ 245/ 246: 3.5 mm (male), 50 ohm, (nominal)
Center Pin Recession	0.002 in. (characteristic)
Display	
Note: The PNA display must remain in the 16 bit color setting in order to comply with international emissions regulations.	
Size	21.3 cm (8.4 in) diagonal color active matrix LCD; 640 (horizontal) X 480 (vertical) resolution
Refresh Rate	Vertical 59.83 Hz; Horizontal 31.41 kHz
Pixels	<p>When running the analyzer's built-in Display Test , one or more of the following symptoms indicate a faulty display assembly:</p> <ul style="list-style-type: none"> • A complete row or column of "stuck on" or "dark" pixels. • More than six "stuck on" pixels (but not more than three green) • More than twelve "dark" pixels (but not more than seven of the same color) • Two or more consecutive "stuck on" pixels or three or more consecutive "dark" pixels (but no more than one set of two consecutive "dark" pixels) • "Stuck on" or "dark" pixels less than 6.5 mm apart (excluding consecutive pixels)
Display Range	
Magnitude	± 500 dB (at 20 dB/div), max
Phase	$\pm 500^\circ$, max
Polar	10 pUnits, min 1000 Units, max
Display Resolution	
Magnitude	0.001 dB/div, min
Phase	0.01°/div, min
Marker Resolution	
Magnitude	0.001 dB, min
Phase	0.01°, min
Polar	0.01 mUnit, min; 0.01°,min

Table 12. Rear Panel Information

Description	Supplemental Information
10 MHz Reference In	
Connector	BNC, female
Input Frequency	10 MHz \pm 10 ppm, Typical
Input Level	-15 dBm to +20 dBm, Typical
Input Impedance	200 Ω , nom.
10 MHz Reference Out	
Connector	BNC, female
Output Frequency	10 MHz \pm 1 ppm, Typical
Signal Type	Sine Wave, Typical
Output Level	+10 dBm \pm 4 dB into 50 Ω , Typical
Output Impedance	50 Ω , nominal
Harmonics	<-40 dBc, Typical
VGA Video Output	
Connector	15-pin mini D-Sub; Drives VGA compatible monitors
Devices Supported	Resolutions:
Flat Panel (TFT)	1024 X 768, 800 X 600, 640 X 480
Flat Panel (DSTN)	800 X 600, 640 X 480
CRT Monitor	1280 X 1024, 1024 X 768, 800 X 600, 640 X 480
	Simultaneous operation of the internal and external displays is allowed, but with 640 X 480 resolution only. If you change resolution, you can only view the external display (internal display will "white out").
Test Set IO	
	25-pin D-Sub connector, female, available for external test set control
Aux IO	
	25-pin D-Sub connector, male, analog and digital IO
Handler IO	
	36-pin parallel I/O port; all input/output signals are default set to negative logic; can be reset to positive logic via GPIB command female.

GPIO (two ports - dedicated controller and dedicated talker/listener)	
	24-pin D-sub (Type D-24), female; compatible with IEEE-488.
Parallel Port (LPT1)	
	25-pin D-Sub miniature connector, female; provides connection to printers or any other parallel port peripherals
Serial Port (COM 1)	
	9-pin D-Sub, male; compatible with RS-232
USB Port	
	One port on front panel and five ports on rear panel. Universal Serial Bus jack, Type A configuration (4 contacts inline, contact 1 on left); female
Contact 1	Vcc: 4.75 to 5.25 VDC, 500 mA, maximum
Contact 2	-Data
Contact 3	+Data
Contact 4	Ground
LAN	
	10/100BaseT Ethernet, 8-pin configuration; auto selects between the two data rates
Line Power	
Frequency, Voltage	50/60/400 Hz for 100 - 120 V 50/60 Hz for 220 - 240 V Power supply is auto switching
Max	350 Watts

Note : Option H08 and Option H11 are not available with the N5230A network analyzer.

Table 13. Analyzer Dimensions and Weight

Description	Supplemental Information
-------------	--------------------------

Cabinet Dimensions			
	Height	Width	Depth
Excluding front and rear panel hardware and feet	267 mm 10.5 in	426 mm 16.75 in	427 mm 16.8 in
As shipped - includes front panel connectors, rear panel bumpers, and feet.	280 mm 11.0 in	435 mm 17.1 in	470 mm 18.5 in
As shipped plus handles	280 mm 11.0 in	458 mm 18 in	501 mm 19.7 in
As shipped plus rack-mount flanges	280 mm 11.0 in	483 mm 19 in	470 mm 18.5 in
As shipped plus handles and rack-mount flanges	280 mm 11.0 in	483 mm 19 in	501 mm 19.70 in
Weight			
Net	24.9 kg (55 lb), nominal		
Shipping	36.3 kg (80 lb), nominal		

Note: For Regulatory and Environmental information, refer to the PNA Series Installation and Quick Start Guide, located online at <http://cp.literature.agilent.com/litweb/pdf/E8356-90001.pdf>.

Measurement Throughput Summary

- Typical Cycle Time for Measurement Completion
- Cycle Time vs IF Bandwidth
- Cycle Time vs Number of Points
- Data Transfer Time

Table 14. Typical Cycle Time ^a (ms) for Measurement Completion

Description	Typical Performance				
	Number of Points				
	201	401	801	1601	16,001
Start 8 GHz, Stop 18 GHz, 600 kHz IF bandwidth					
Uncorrected	21.148	21.743	23.01	25.198	54.836
4-Port cal	74.597	82.296	296.5	307.75	538.646
Start 300 kHz, Stop 10 GHz, 600 kHz IF bandwidth					

Uncorrected	19.814	22.801	24.973	29.01	67.733
4-Port cal	69.752	85.111	100.125	129.347	480.711
Start 300 kHz, Stop 20 GHz, 600 kHz IF bandwidth					
Uncorrected	32.575	34.7	39.237	43.155	69.625
4-Port cal	121.254	133.626	157.506	179.223	487.779
Start 8 GHz, Stop 18 GHz, 100 kHz IF bandwidth					
Uncorrected	38.083	51.816	55.488	56.36	184.154
4-Port cal	143.271	201.814	215.056	230.133	934.161
Start 300 kHz, Stop 10 GHz, 100 kHz IF bandwidth					
Uncorrected	37.03	42.532	45.122	46.729	198.683
4-Port cal	137.431	162.37	194.13	192.182	906.768
Start 300 kHz, Stop 20 GHz, 100 kHz IF bandwidth					
Uncorrected	44.98	69.408	87.161	92.475	198.792
4-Port cal	169.041	268.877	343.898	369.526	914.963
Start 8 GHz, Stop 18 GHz, 50 kHz IF bandwidth					
Uncorrected	42.171	70.09	88.702	90.981	371.611
4-Port cal	157.107	271.791	351.517	368.02	1532.609
Start 300 kHz, Stop 10 GHz, 50 kHz IF bandwidth					
Uncorrected	43.713	61.41	66.878	69.373	385.04
4-Port cal	163.58	238.267	259.687	279.816	1580.761
Start 300 kHz, Stop 20 GHz, 50 kHz IF bandwidth					
Uncorrected	48.673	80.798	124.605	147.303	388.46
4-Port cal	184.429	313.392	493.142	587.548	1587.839

a Includes sweep time, retrace time and band-crossing time. Analyzer display turned off with DISPLAY:ENABLE OFF. Add 21 ms for display on. Data for one trace (S₁₁) measurement.

Table 15. Cycle Time vs IF Bandwidth

Applies to the Preset condition (201 points, correction off) except for the following changes:

- CF = 10 GHz
- Span = 100 MHz
- Display off (add 21 ms for display on)

Description	Typical Performance	
IF Bandwidth (Hz)	Cycle Time (ms) ^a	Trace Noise
600,000	3.13	0.00544
360,000	3.21	0.00602
280,000	3.17	0.00321
200,000	3.17	0.00259
150,000	3.19	0.00207
100,000	4.05	0.00155
70,000	4.99	0.00144
50,000	6.41	0.00121
30,000	8.78	0.00094
20,000	12.07	0.00080
15,000	14.91	0.00069
10,000	26.02	0.00052
7000	34.54	0.00047
5000	45.87	0.00044
3000	69.91	0.00032
2000	99.69	0.00029
1500	128.18	0.00010
1000	215.62	0.00009
700	291.58	0.00006

500	397.36	0.00007
300	633.86	0.00000
200	930.15	0.00000
100	1824.19	0.00000
30	6001.70	0.00000
10	17899.79	0.00000
1	178391.58	0.00000

a Cycle time includes sweep and retrace time.

Table 16. Cycle Time vs Number of Points

Applies to the Preset condition (correction off) except for the following changes:

- CF = 10 GHz
- Span = 100 MHz
- Display off (add 21 ms for display on)

Description	Typical Performance	
IF Bandwidth (Hz)	Number of Points	Cycle Time (ms) ^a
30,000	3	2.88
	11	3.50
	51	3.91
	101	5.29
	201	8.75
	401	15.66
	801	29.46
	1,601	57.73
	6,401	221.04
	16,001	549.71
100,000	3	2.87
	11	2.82

	51	2.86
	101	2.96
	201	4.02
	401	6.23
	801	10.65
	1,601	19.49
	6,401	70.96
	16,001	173.78
600,000	3	2.84
	11	2.84
	51	2.87
	101	3.03
	201	3.14
	401	3.51
	801	4.22
	1,601	6.22
	6,401	19.35
	16,001	45.12

a Cycle time includes sweep and retrace time.


Table 17. Data Transfer Time (ms)

Description	Typical Performance			
	Number of Points			
	201	401	1601	16,001
SCPI over GPIB (program executed on external PC)				
32-bit floating point	6	10	33	313
64-bit floating point	10	18	65	622
ASCII	53	105	406	4032
SCPI over SICL/LAN or TCP/IP Socket (program executed in the analyzer)				
32-bit floating point	1	2	2.5	7
64-bit floating point	2	2	3	10
ASCII	11	20	73	720
COM (program executed in the analyzer)				
32-bit floating point	<0.2	0.2	0.3	0.9
Variant type	0.6	1	3.2	32
DCOM over LAN (program executed on external PC)				
32-bit floating point	<0.8	1	1.6	7.5
Variant type	1.9	3	8.9	82


Tables 18 - 23 Front-panel Jumper Specs (Option 145/146/245/246)

Test Set Block Diagrams


N5230A Option 140/ 240 (Standard Test Set and Standard Power Range)

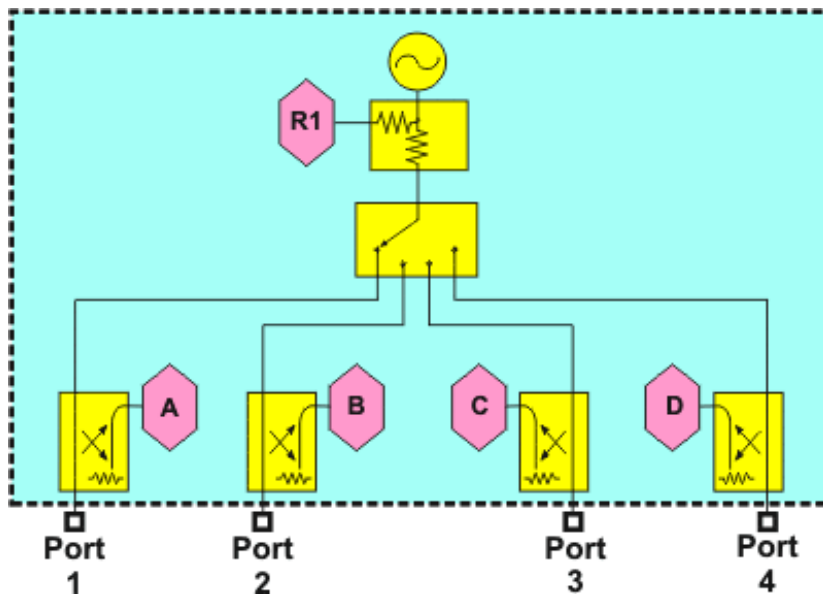

N5230A Option 145/ 245 (Configurable Test Set and Extended Power Range)

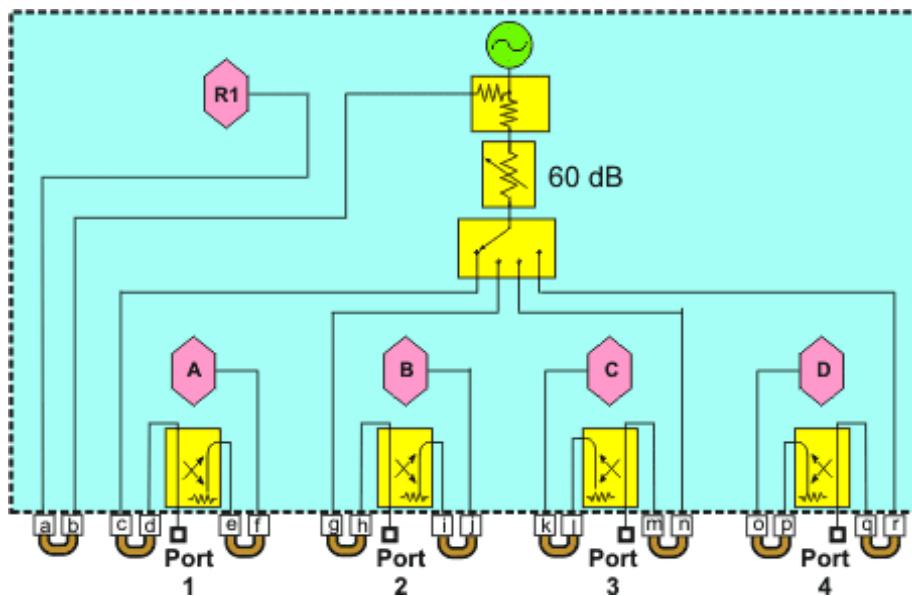

N5230A Option 146/ 246 (Configurable Test Set and Extended Power Range; Second Source)

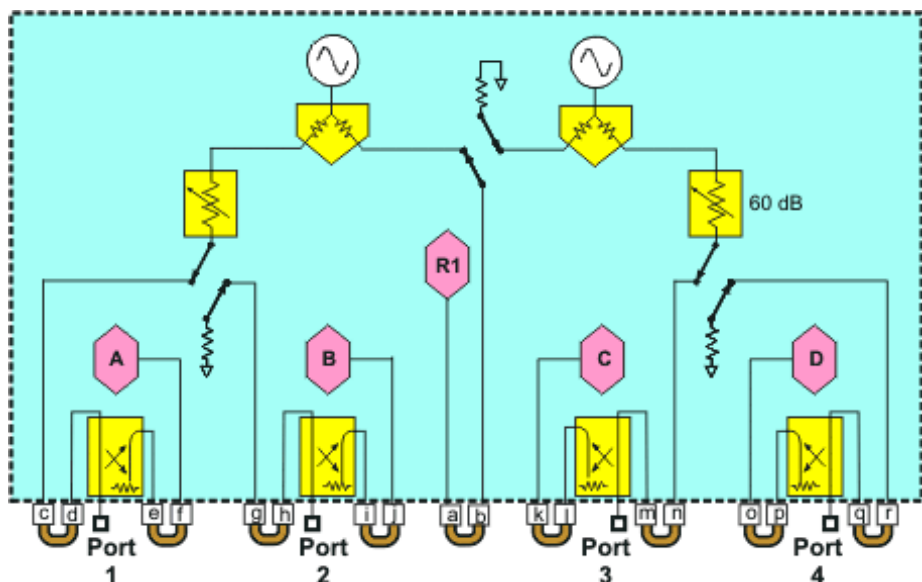

Item	Description	Item	Description	Item	Description
a	RCVR R IN	h	CPLR THRU	o	RCVR D IN
b	SOURCE OUT	i	CPLR ARM	p	CPLR ARM
c	SOURCE OUT	j	RCVR B IN	q	CPLR THRU
d	CPLR THRU	k	RCVR C IN	r	SOURCE OUT
e	CPLR ARM	l	CPLR ARM		
f	RCVR A IN	m	CPLR THRU		
g	SOURCE OUT	n	SOURCE OUT		

Last modified:

Jan. 10, 2007	Updated line power, moved regulatory, operating, and non-operating info to I&QS Guide.
Nov. 28, 2006	Updated for new model
Nov. 6, 2006	Added display note
Oct. 5, 2006	Added 350W typical to line power
July 10, 2006	Previous version

N5242A 10 MHz to 26.5 GHz

Data Sheet and Technical Specifications

Rev July 17, 2007

This is a complete list of the technical specifications for the N5242A PNA-X network analyzer with the following options:

Option 200 , 2-port standard test set (includes six front-panel access loops) and power range. See the block diagram .

Option 219 , adds 2-port extended power range, source and receiver attenuators, and bias-tees (requires Option 200). See the block diagram .

Option 224 , adds an internal second source, a combiner, and mechanical switches to the 2-port analyzer (requires Option 200, 219, and 080). See the block diagram .

Option 400 , 4-port standard test set (includes twelve front-panel access loops), power range, and an internal second source (Option 080 recommended). See the block diagram .

Option 419 , adds 4-port extended power range, source and receiver attenuators, and bias-tees (requires Option 400). See the block diagram .

Option 423 , adds an internal combiner, and mechanical switches to the 4-port analyzer (requires Option 400, 419, and 080). See the block diagram .

Note

This document provides technical specifications for the 85052B calibration kit, the N4433A 4-Port ECal module, and the N4691B 2-Port ECal module. Please download our free Uncertainty Calculator from http://www.agilent.com/find/na_calculator to generate the curves for the calibration kit and PNA setup.

[Definitions](#)

[Corrected System Performance](#)

[Uncorrected System Performance](#)

[Test Port Input](#)

[Table 16. Test Port Input](#)

[Dynamic Accuracy](#)

[General Information](#)

[Measurement Throughput Summary](#)

[Specifications: Front-Panel Jumpers](#)

[Test Set Block Diagrams](#)

Definitions

All specifications and characteristics apply over a 25 °C \pm 5 °C range (unless otherwise stated) and 90 minutes after the instrument has been turned on.

Specification (spec.): Warranted performance. Specifications include guardbands to account for the expected statistical performance distribution, measurement uncertainties, and changes in performance due to environmental conditions.

Characteristic (char.): A performance parameter that the product is expected to meet before it leaves the factory, but verified in the field and is not covered by the product warranty. A characteristic includes the same guardbands as a standard.

Typical (typ.): Expected performance of an average unit which does not include guardbands. It is not covered by the warranty.

Nominal (nom.): A general, descriptive term that does not imply a level of performance. It is not covered by the product warranty.

Calibration: The process of measuring known standards to characterize a network analyzer's systematic (repeatable) error.

Corrected (residual): Indicates performance after error correction (calibration). It is determined by the quality of calibration standards and how well "known" they are, plus system repeatability, stability, and noise.

Uncorrected (raw): Indicates instrument performance without error correction. The uncorrected performance affects the stability of a calibration.

Standard: When referring to the analyzer, this includes no options unless noted otherwise.

Corrected System Performance

The specifications in this section apply for measurements made with the N5242A analyzer with the following conditions:

- 10 Hz IF bandwidth
- No averaging applied to data
- Isolation calibration with an averaging factor of 8

Table 1a. System Dynamic Range at Test Port ¹

Option 200 or 400

Description	Specification (dB) at Test Port		Typical (dB) at Test Port	
	Port 1 or 3 ²	Port 2 or 4 ²	Port 1 or 3 ²	Port 2 or 4 ²
10 MHz to 50 MHz ³	93	93	106	106
50 MHz to 100 MHz ³	103	103	116	116
100 MHz to 500 MHz ³	117	117	131	131
500 MHz to 3.2 GHz	124	127	130	130
3.2 GHz to 10 GHz	127	127	137	137
10 GHz to 16 GHz	127	127	134	134
16 GHz to 20 GHz	127	124	133	133
20 GHz to 24 GHz	122	117	130	130
24 GHz to 26.5 GHz	112	109	124	124

1. The system dynamic range is calculated as the difference between the noise floor and the specified source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account.
2. Either port can be used as the source port. Any other port can be used as the receiver port.
3. May typically be degraded at particular frequencies below 500 MHz due to spurious receiver residuals.

Table 1b. System Dynamic Range at Test Port ¹

Option 219 or 419

Description	Specification (dB) at Test Port		Typical (dB) at Test Po	
	Port 1 or 3 ²	Port 2 or 4 ²	Port 1 or 3 ²	Port
10 MHz to 50 MHz ³	93	93	106	
50 MHz to 100 MHz ³	103	103	115	
100 MHz to 500 MHz ³	117	117	130	
500 MHz to 3.2 GHz	124	127	130	
3.2 GHz to 10 GHz	127	127	135	
10 GHz to 16 GHz	126	125	132	
16 GHz to 20 GHz	124	122	130	
20 GHz to 24 GHz	118	117	127	
24 GHz to 26.5 GHz	110	106	121	

¹ The system dynamic range is calculated as the difference between the noise floor and the specified source maximum output power. The dynamic range must take measurement uncertainties and interfering signals into account.

² Either port can be used as the source port. Any other port can be used as the receiver port.

³ May typically be degraded at particular frequencies below 500 MHz due to spurious receiver residuals.

Table 1c. System Dynamic Range at Test Port ¹

Option 224

Description	Specification (dB) at Test Port		Typical (dB) at Test Port	
	Source 2, Out 1	Source 2, Out 2	Source 2, Out 1	Source 2, Out 2
10 MHz to 50 MHz ²	98	93	108	103
50 MHz to 100 MHz ²	108	107	117	112
100 MHz to 500 MHz ²	122	121	132	127
500 MHz to 3.2 GHz	128	128	134	129
3.2 GHz to 10 GHz	132	132	139	134
10 GHz to 16 GHz	130	130	138	133
16 GHz to 20 GHz	129	127	136	131
20 GHz to 24 GHz	123	122	133	128
24 GHz to 26.5 GHz	114	112	127	122

¹ The system dynamic range is calculated as the difference between the noise floor and the specified source maximum output power. The system dynamic range must take measurement uncertainties and interfering signals into account.

² May typically be degraded at particular frequencies below 500 MHz due to spurious receiver residuals.

Table 1d. System Dynamic Range at Test Port ¹

Option 224 or 423

Description	Specification (dB) at Test Port		Typical (dB) at Test Port			
	Port 1 or 3 ²	Port 2 or 4 ²	Port 1 or 3 ²	Port 2 or 4 ²	Source 1, Port 1 Combine Mode	Source 2, P N
10 MHz to 50 MHz ³	93	93	106	104	104	
50 MHz to 100 MHz ³	103	103	115	115	112	
100 MHz to 500 MHz ³	117	117	130	130	121	
500 MHz to 3.2 GHz	124	127	130	134	127	
3.2 GHz to 10 GHz	127	127	136	134	132	
10 GHz to 16 GHz	126	124	132	131	128	
16 GHz to 20 GHz	124	121	130	127	125	
20 GHz to 24 GHz	117	115	127	124	121	
24 GHz to 26.5 GHz	107	105	121	117	115	

¹ The system dynamic range is calculated as the difference between the noise floor and the specified source maximum output power. The dynamic range must take measurement uncertainties and interfering signals into account.

² Either port can be used as the source port. Any other port can be used as the receiver port.

³ May typically be degraded at particular frequencies below 500 MHz due to spurious receiver residuals.

Table 2a Extended Dynamic Range at Direct Receiver Access Input¹

Option 200 or 400

Description	Typical (dB) at Direct Receiver Access Input	
	Port 1 or 3 ²	Port 2 or 4 ²
a		
10 MHz to 50 MHz ³	128	128
50 MHz to 100 MHz ³	115	115
100 MHz to 500MHz ³	129	129
500 MHz to 3.2 GHz	136	139
3.2 GHz to 10 GHz	139	139
10 GHz to 16 GHz	139	139
16 GHz to 20 GHz	139	136
20 GHz to 24 GHz	134	129
24 GHz to 26.5 GHz	124	121

¹ The direct receiver access input extended dynamic range is calculated as the difference between the direct receiver access input noise source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account. It should only be used when the receiver input will never exceed its maximum receiver input. When the analyzer is in segment sweep mode, predefined frequency segments which will output a higher power level when the extended dynamic range is required (i.e. devices with high insertion loss), and reduced power when the maximum receiver input level will occur (i.e. devices with low insertion loss). The extended range is only valid for one-path transmission measurements.

² Either port can be used as the source port. Any other port can be used as the receiver port.

³ May typically be degraded at particular frequencies below 500 MHz due to spurious receiver residuals.

Table 2b. Extended Dynamic Range at Direct Receiver Access Input ¹

Option 219 or 419

Description	Typical (dB) at Direct Receiver Access Input	
	Port 1 or 3 ²	Port 2 or 4 ²
10 MHz to 50 MHz ³	128	128
50 MHz to 100 MHz ³	115	115
100 MHz to 500MHz ³	129	129
500 MHz to 3.2 GHz	136	139
3.2 GHz to 10 GHz	139	139
10 GHz to 16 GHz	138	137
16 GHz to 20 GHz	136	134
20 GHz to 24 GHz	130	129
24 GHz to 26.5 GHz	122	118

¹ The direct receiver access input extended dynamic range is calculated as the difference between the direct receiver access input noise source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account. It should only be used when the receiver input will never exceed its maximum receiver input. When the analyzer is in segment sweep mode, predefined frequency segments which will output a higher power level when the extended dynamic range is required (i.e. devices with high insertion loss), and reduced power when the maximum receiver input level will occur (i.e. devices with low insertion loss). The extended range is only valid for one-path transmission measurements.

² Either port can be used as the source port. Any other port can be used as the receiver port.

³ May typically be degraded at particular frequencies below 500 MHz due to spurious receiver residuals.

Table 2c. Extended Dynamic Range at Direct Receiver Access Input¹

Option 224

Description	Typical (dB) at Direct Receiver Access Input	
	Source 2, Out 1	Source 2, Out 2
10 MHz to 50 MHz ²	133	128
50 MHz to 100 MHz ²	120	119
100 MHz to 500MHz ²	134	133
500 MHz to 3.2 GHz	140	140
3.2 GHz to 10 GHz	144	144
10 GHz to 16 GHz	142	142
16 GHz to 20 GHz	141	139
20 GHz to 24 GHz	135	134
24 GHz to 26.5 GHz	126	124

¹ The direct receiver access input extended dynamic range is calculated as the difference between the direct receiver access input noise source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account. It should only be used when the receiver input will never exceed its compression or damage level. When the analyzer is in segment sweep, it has predefined frequency segments which will output a higher power level when the extended dynamic range is required (i.e. devices with high insertion loss), and reduced power when receiver compression or damage may occur (i.e. devices with low insertion loss). The extended dynamic range is only available in one-path transmission measurements.

² May typically be degraded at particular frequencies below 500 MHz due to spurious receiver residuals.

Table 2d. Extended Dynamic Range at Direct Receiver Access Input ¹

Option 224 or 423

Description	Typical (dB) at Direct Receiver Access Input			
	Port 1 or 3 ²	Port 2 or 4 ²	Source 1, Port 1 Combine Mode	Source 2, Port 1 Cor
10 MHz to 50 MHz ³	128	128	139	115
50 MHz to 100 MHz ³	115	115	124	102
100 MHz to 500MHz ³	129	129	133	111
500 MHz to 3.2 GHz	136	139	139	124
3.2 GHz to 10 GHz	139	139	144	131
10 GHz to 16 GHz	138	136	140	127
16 GHz to 20 GHz	136	133	137	125
20 GHz to 24 GHz	129	127	133	121
24 GHz to 26.5 GHz	119	121	127	114

¹ The direct receiver access input extended dynamic range is calculated as the difference between the direct receiver access input noise source maximum output power. The effective dynamic range must take measurement uncertainties and interfering signals into account. It should only be used when the receiver input will never exceed its compression or damage level. When the analyzer is in segment sweep mode, it has predefined frequency segments which will output a higher power level when the extended dynamic range is required (i.e. devices with high insertion loss), and reduced power when receiver compression or damage may occur (i.e. devices with low insertion loss). The extended dynamic range is not available in one-path transmission measurements.

² Either port can be used as the source port. Any other port can be used as the receiver port.

³ May typically be degraded at particular frequencies below 500 MHz due to spurious receiver residuals.

Receiver Dynamic Range technical specifications are not provided in this N5242A specs document.

N5242A Corrected System Performance with 3.5mm Connectors¹

All Options

Note: For any S_{ii} reflection measurement:

- $S_{jj} = 0$.

For any S_{ij} transmission measurement:

- $S_{ji} = S_{ij}$ when $S_{ij} \leq 1$
- $S_{ji} = 1/S_{ij}$ when $S_{ij} \geq 1$
- $S_{kk} = 0$ for all k

Table 3. 85052B Calibration Kit N5242A

All Options

Applies to the N5242A Option 200 or 219 or 224 or 400 or 419 or 423 analyzers, 85052B (3.5mm) calibration kit, 85131F flexible test port for a full 2-port calibration. Also applies to the following condition:


Environmental temperature $23^\circ \pm 3^\circ \text{C}$, with $< 1^\circ \text{C}$ deviation from calibration temperature

Description	Specification (dB)			
	50 MHz to 500 MHz	500 MHz to 2 GHz	2 to 20 GHz	20 to 26.5 GHz
Directivity	48	48	44	44
Source Match	40	40	31	31
Load Match	48	48	44	44
Reflection Tracking ¹	± 0.003 $+0.010/^\circ\text{C}$	± 0.003 $+0.010/^\circ\text{C}$	± 0.006 $+0.020/^\circ\text{C}$	± 0.006 $+0.030/^\circ\text{C}$
Transmission Tracking ¹	± 0.017 $+0.010/^\circ\text{C}$	± 0.017 $+0.010/^\circ\text{C}$	± 0.104 $+0.020/^\circ\text{C}$	± 0.119 $+0.030/^\circ\text{C}$


¹ Temperature deviation is a characteristic value.

Transmission Uncertainty (Specifications)

Magnitude

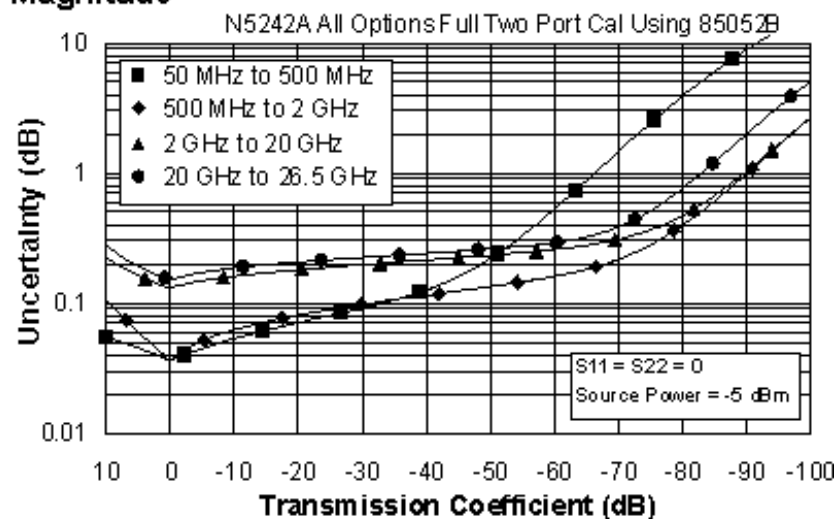


Phase

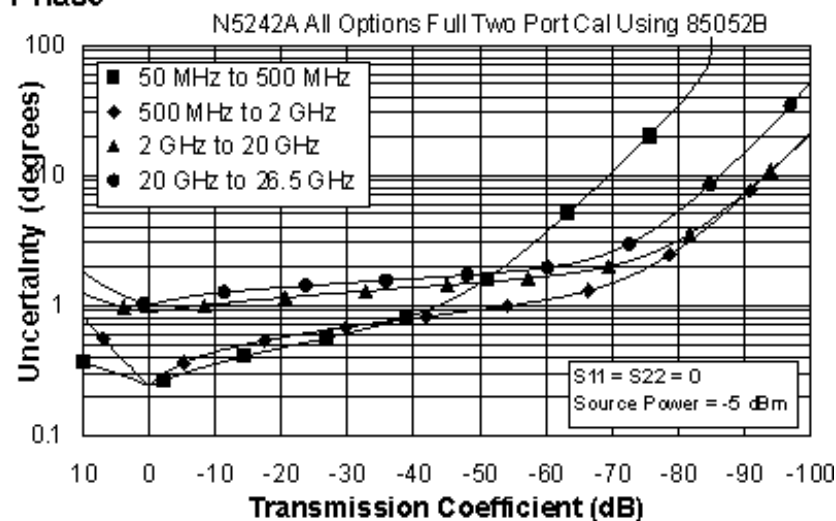

Reflection Uncertainty (Specifications)

Magnitude

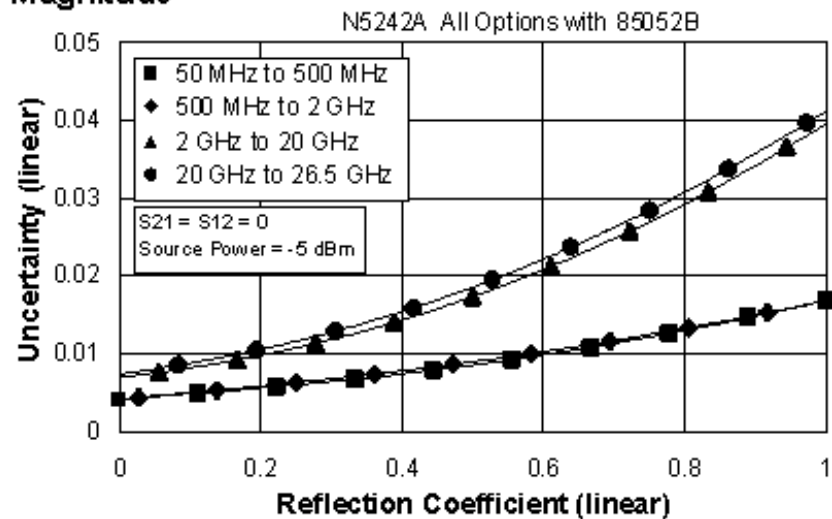

Phase

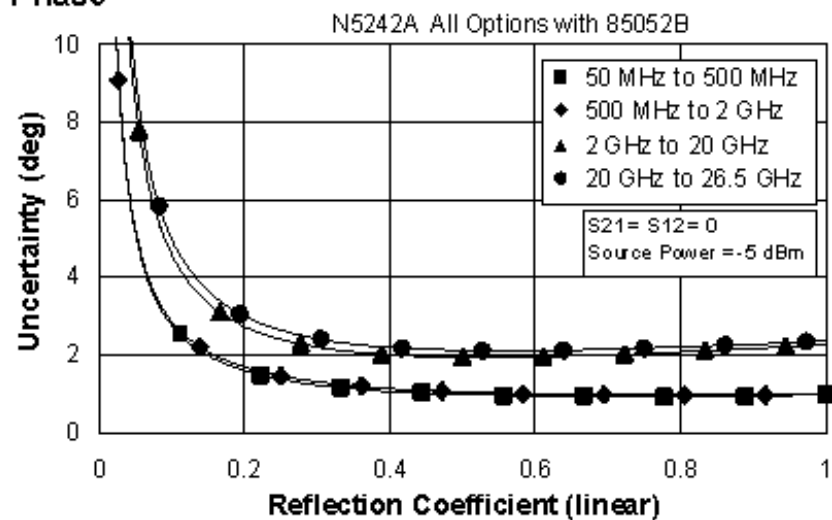


Table 4. N4433A 4-Port Electronic Calibration Module N5242A

All Options

Note : Uncertainty curves for the N4433A are created using a 2-port calibration. Multiport uncertainties are not supported.

Applies to the N5242A Option 200 or 219 or 224 or 400 or 419 or 423 analyzers, N4433A (3.5mm) electronic calibration 85131F flexible test port cable set, and a full 2-port calibration. Also applies to the following condition:


Environmental temperature $23^{\circ} \pm 3^{\circ} \text{C}$, with $< 1^{\circ} \text{C}$ deviation from calibration temperature

Description	Specification (dB)		
	50 MHz to 500 MHz	500 MHz to 2 GHz	2 to 20 GHz
Directivity	52	52	45
Source Match	42	42	31
Load Match	41	41	29
Reflection Tracking ¹	± 0.060 $+0.010/^{\circ}\text{C}$	± 0.060 $+0.010/^{\circ}\text{C}$	± 0.180 $+0.020/^{\circ}\text{C}$
Transmission Tracking ¹	± 0.063 $+0.010/^{\circ}\text{C}$	± 0.063 $+0.010/^{\circ}\text{C}$	± 0.197 $+0.020/^{\circ}\text{C}$


¹ Temperature deviation is a characteristic value.

Transmission Uncertainty (Specifications)

Magnitude

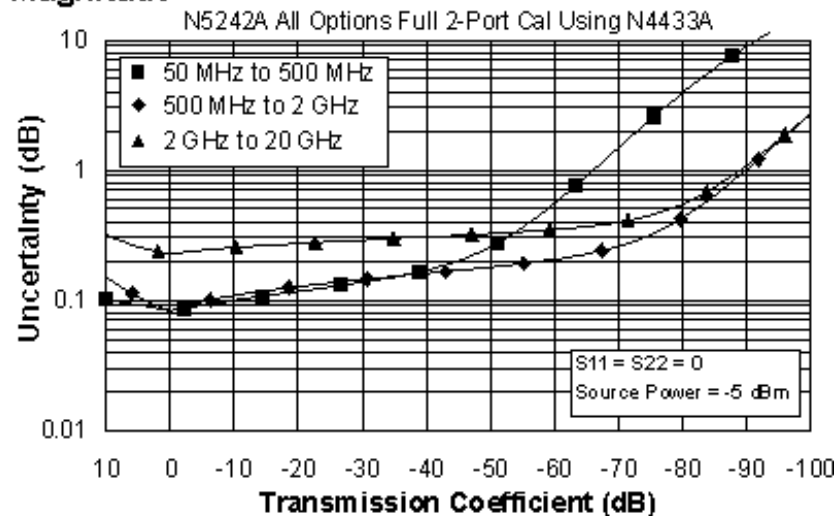


Phase

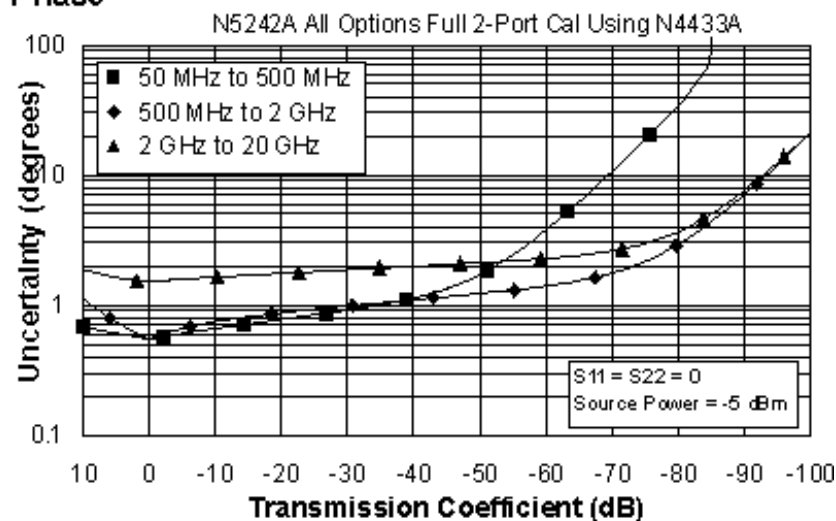

Reflection Uncertainty (Specifications)

Magnitude

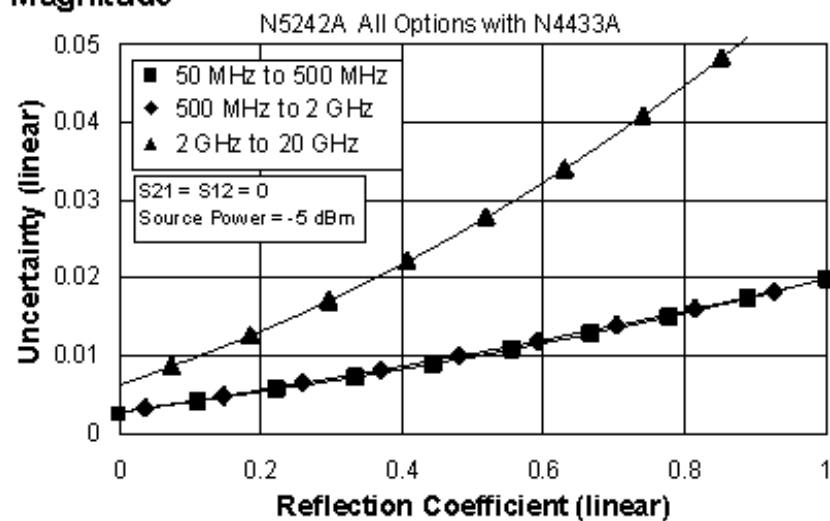

Phase

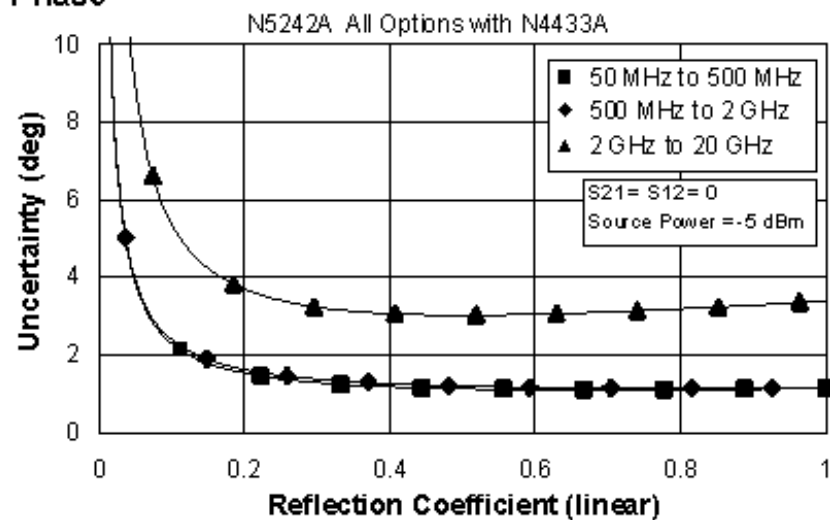


Table 5. N4691B 2- Port Electronic Calibration Module

N5242A All Options

Applies to the N5242A Option 200 or 219 or 224 or 400 or 419 or 423 analyzers, N4691B (3.5mm) electronic calibration module, 85131F flexible test port cable set, and a full 2-port calibration. Also applies to the following condition:


Environmental temperature 23° ±3 °C, with < 1 °C deviation from calibration temperature

Description	Specification (dB)			
	50 MHz to 500 MHz	500 MHz to 2 GHz	2 to 20 GHz	20 to 26.5 GHz
Directivity	46	56	48	44
Source Match	41	47	44	40
Load Match	40	46	42	38
Reflection Tracking ¹	±0.050	±0.020	±0.040	±0.050
	+0.010/°C	+0.010/°C	+0.020/°C	+0.030/°C
Transmission Tracking ¹	±0.056	±0.022	±0.052	±0.072
	+0.010/°C	+0.010/°C	+0.020/°C	+0.030/°C


¹ Temperature deviation is a characteristic value.

Transmission Uncertainty (Specifications)

Magnitude

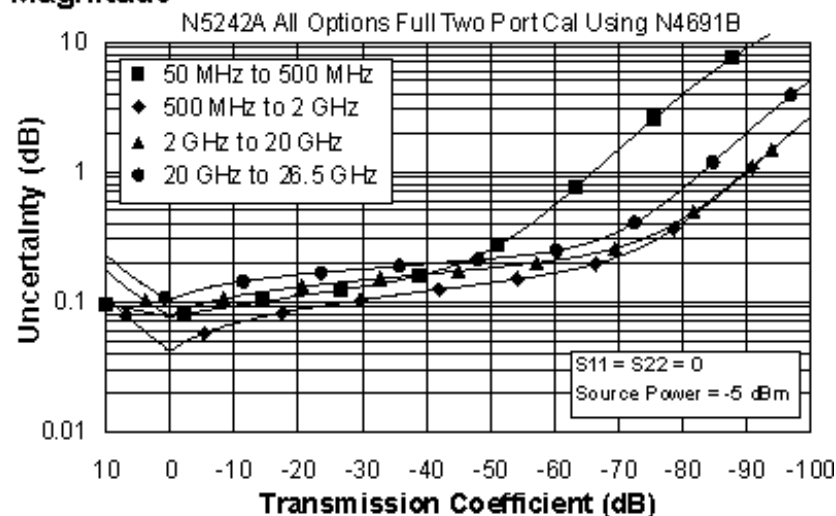


Phase

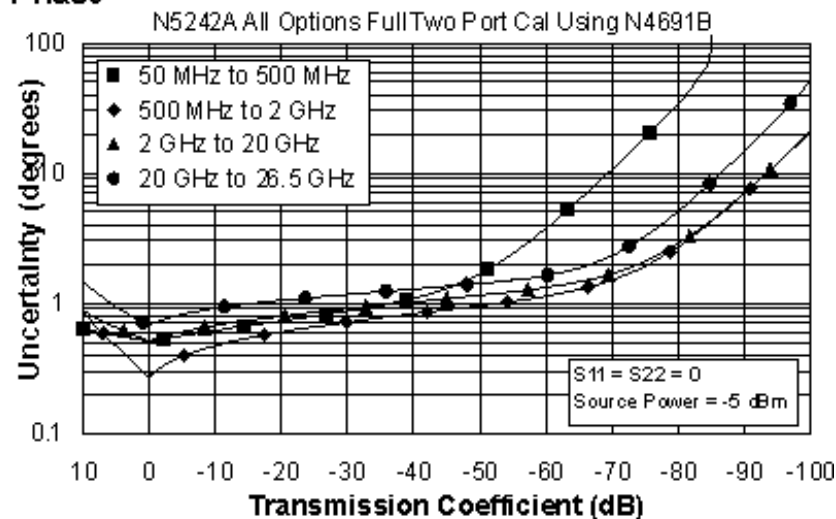


Reflection Uncertainty (Specifications)

Magnitude

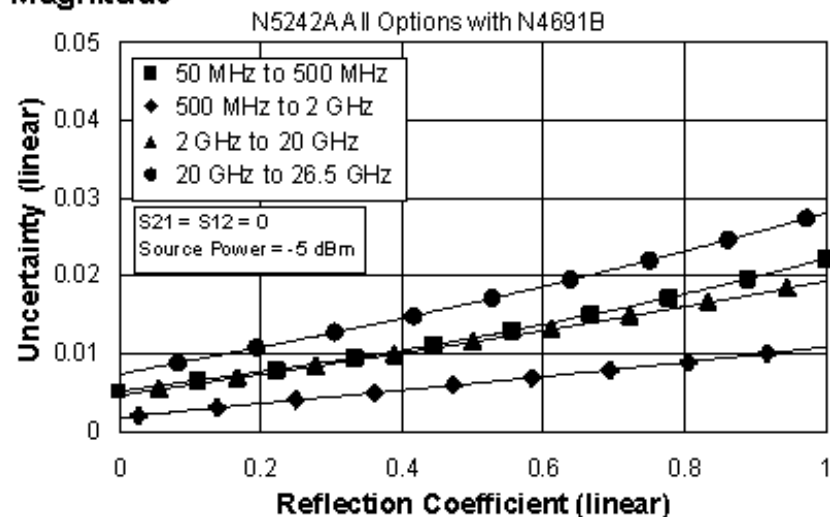

Phase

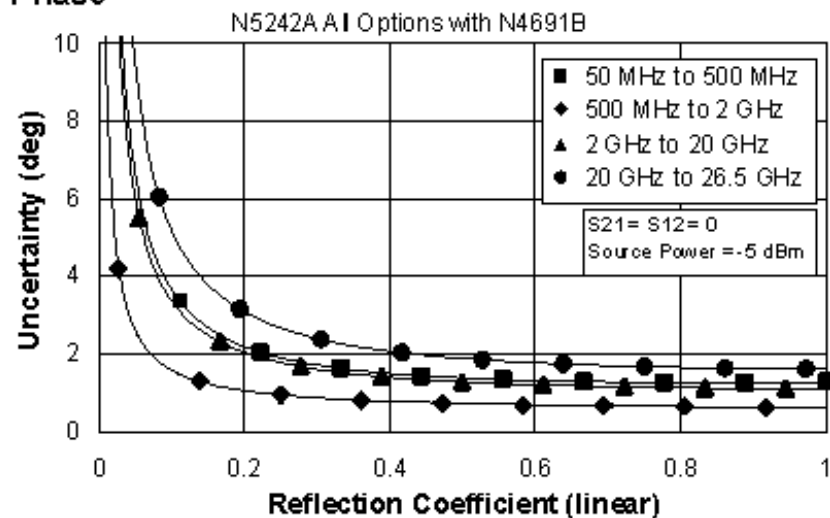

This N5242A document does not present specifications for the 85052C or 85052D Calibration Kit. Please download our free Uncertainty from http://www.agilent.com/find/na_calculator to generate the data and curves for the 85052C or the 85052D Calibration Kit.

Uncorrected System Performance

Table 6. Error Terms ¹

All Options - Ports 1, 2, 3, 4

Description	Specification	Typical
Directivity (dB)		
10 MHz to 50 MHz	16	23
50 MHz to 500 MHz	24	28
500 MHz to 3.2 GHz	24	32
3.2 GHz to 10 GHz	23	25
10 GHz to 16 GHz	16	22
16 GHz to 20 GHz	16	22
20 GHz to 24 GHz	16	22
24 GHz to 26.5 GHz	16	22
Source Match (dB)		
10 MHz to 50 MHz	11	14
50 MHz to 500 MHz	18	28
500 MHz to 3.2 GHz	18	22
3.2 GHz to 10 GHz	14	18
10 GHz to 16 GHz	12	16
16 GHz to 20 GHz	10	15
20 GHz to 24 GHz	10	14
24 GHz to 26.5 GHz	8	12

Description	Specification	Typical
Load Match (dB)		
10 MHz to 50 MHz	11	18
50 MHz to 500 MHz	17	25
500 MHz to 3.2 GHz	17	22
3.2 GHz to 10 GHz	13	17
10 GHz to 16 GHz	10	15
16 GHz to 20 GHz	9	14
20 GHz to 24 GHz	9	14
24 GHz to 26.5 GHz	8	13
Transmission Tracking ³ (dB)		
10 MHz to 50 MHz	--	+/-1.5
50 MHz to 500 MHz		
500 MHz to 3.2 GHz		
3.2 GHz to 10 GHz		
10 GHz to 16 GHz		
16 GHz to 20 GHz		
20 GHz to 24 GHz		
24 GHz to 26.5 GHz		
Reflection Tracking (dB)		
10 MHz to 50 MHz	--	+/-1.5
50 MHz to 500 MHz		
500 MHz to 3.2 GHz		
3.2 GHz to 10 GHz		
10 GHz to 16 GHz		
16 GHz to 20 GHz		

Description	Specification	Typical
20 GHz to 24 GHz		
24 GHz to 26.5 GHz		

Crosstalk ⁴ (dB)		
10 MHz to 50 MHz	--	-84
50 MHz to 100 MHz		-90
100 MHz to 500 MHz		-110
500 MHz to 3.2 GHz		-120
3.2 GHz to 20 GHz		-122
20 GHz to 24 GHz		-117
24 GHz to 26.5 GHz		-114

¹ Specifications apply over environmental temperature of 25 °C ±5 °C, with less than 1°C variation from the calibration temperature.

³ Cable loss not included.

⁴ Measurement conditions: normalized to a thru, measured with two shorts, 10 Hz IF bandwidth, averaging factor of 8, alternate mode, set to the lesser of the maximum power-out or the maximum receiver power.

Test Port Output

Table 7. Frequency Information

All Options

Description	Specification (dB)	Typical (dB)
Frequency Range	10 MHz to 26.5 GHz	--
Frequency Resolution	1 Hz	--
Frequency Accuracy	+/- 1 ppm	--
Frequency Stability	--	+/-0.05 ppm, -10° to 70° C +/-0.1 ppm/yr maximum

Table 8a. Maximum Levelled Power

Option 200 or 400

Description	Specification (dBm)			Typical (dBm)	
	Port 1 or 3 ¹ Filtered Mode ² See Figure 2 (Opt 200) or Figure 5 (Opt 400)	Port 1 or 3 ¹ Hi Pwr Mode ² See Figure 3 (Opt 200) or Figure 6 (Opt 400)	Port 2 or 4 ¹	Port 1 or 3 ¹ Filtered Mode ² See Figure 2 (Opt 200) or Figure 5 (Opt 400)	Port 1 or 3 ¹ Hi Pwr Mode ² See Figure 3 (Opt 200) or Figure 6 (Opt 400)
10 MHz to 50 MHz	8	13	13	10	19
50 MHz to 500 MHz	10	13	13	11	21
500 MHz to 3.2 GHz	10	10	13	12	13
3.2 GHz to 10 GHz	13	13	13	20	20
10 GHz to 16 GHz	13	13	13	17	17
16 GHz to 20 GHz	13	13	10	16	16
20 GHz to 24 GHz	12	12	7	15	15
24 GHz to 26.5 GHz	5	5	2	11	11

¹ Either port can be used as the source port.

² In Filtered Mode, the signal path goes through filters to minimize harmonics below 3.2 GHz. In Hi Pwr Mode, the signal bypasses the filters to maximize output.

Figure 1. Block Diagram, N5242A Option 200

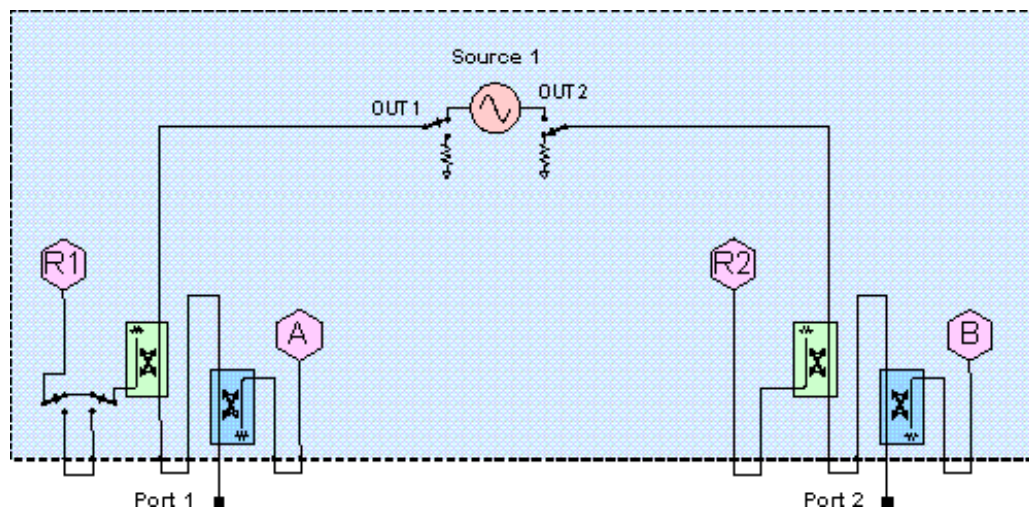


Figure 2. Path Configuration Diagram, N5242A Option 200, Port 1 Filtered Mode

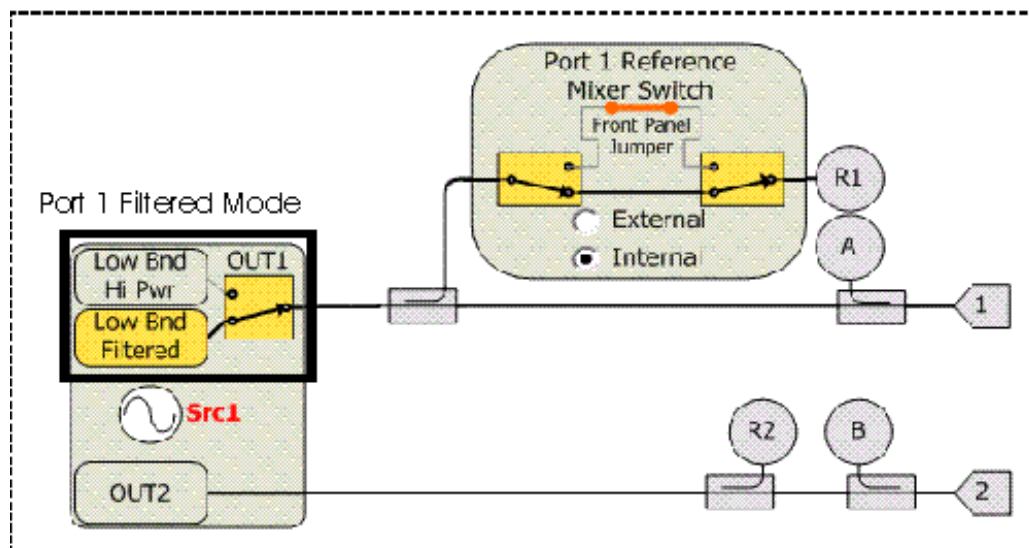


Figure 3. Path Configuration Diagram, N5242A Option 200, Port 1 Hi Pwr Mode

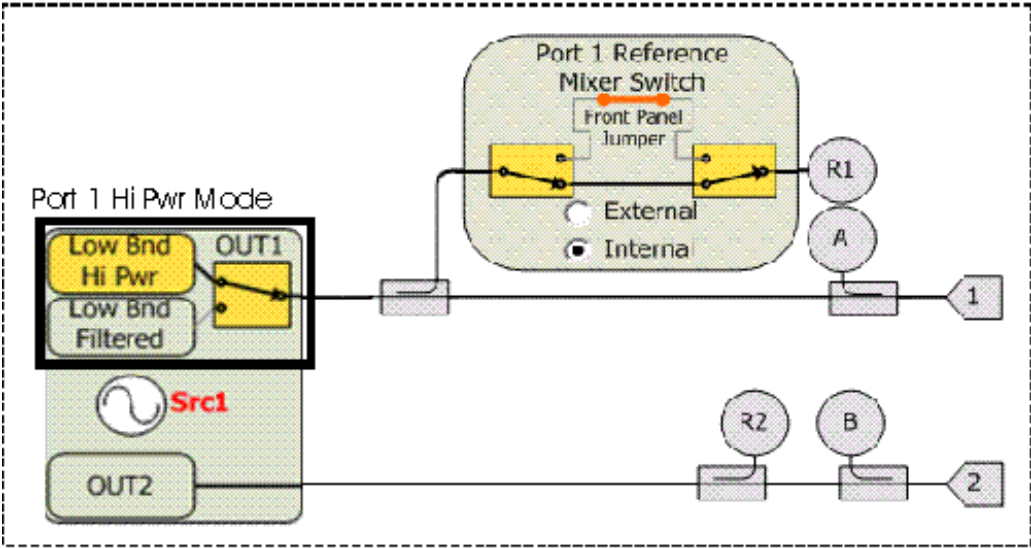


Figure 4. Block Diagram, N5242A Option 400

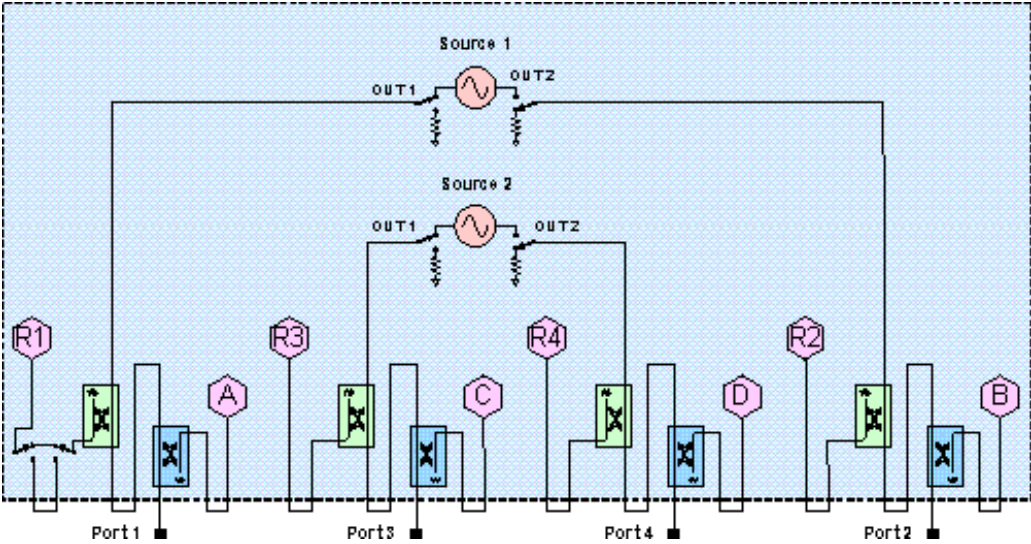


Figure 5. Path Configuration Diagram, N5242A Option 400, Port 1 or 3 Filtered Mode

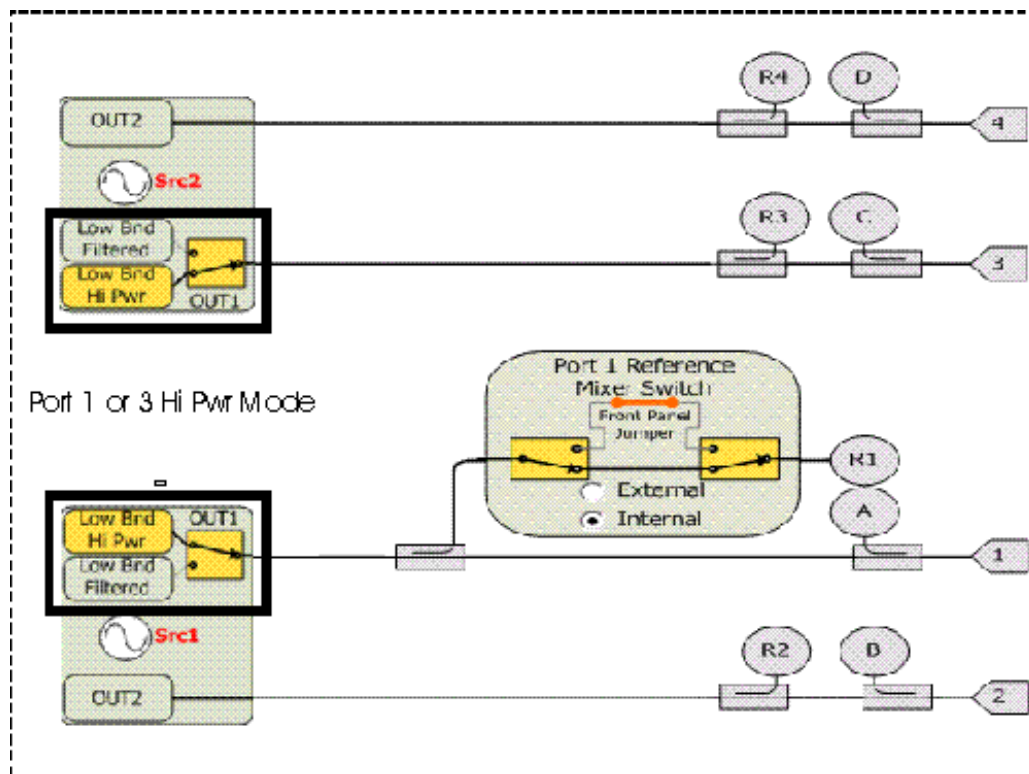


Figure 6. Path Configuration Diagram, N5242A Option 400, Port 1 or 3 Hi Pwr Mode

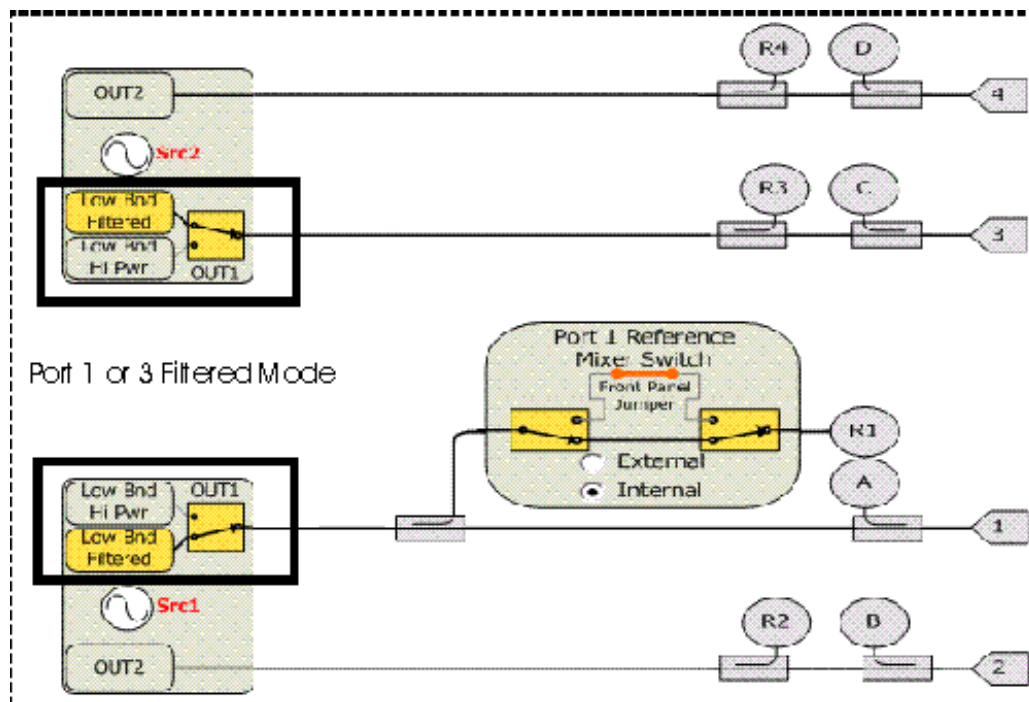


Table 8b. Maximum Levelled Power


Option 219 or 419

Description	Specification (dBm)		Typical (dBm)		
	Port 1 or 3 ¹ Filtered Mode ²	Port 1 or 3 ¹ Hi Pwr Mode ²	Port 2 or 4 ¹	Port 1 or 3 ¹ Filtered Mode ²	Port 1 or 3 ¹ Hi Pwr Mode ²
10 MHz to 50 MHz	8	13	13	10	19
50 MHz to 500 MHz	10	13	13	11	20
500 MHz to 3.2 GHz	10	10	13	11	13
3.2 GHz to 10 GHz	13	13	13	18	18
10 GHz to 16 GHz	12	12	11	15	15
16 GHz to 20 GHz	10	10	8	13	13
20 GHz to 24 GHz	8	8	7	12	12
24 GHz to 26.5 GHz	3	3	-1	8	8

¹ Either port can be used as the source port.


² In Filtered Mode, the signal path goes through filters to minimize harmonics below 3.2 GHz. In Hi Pwr Mode, the signal bypasses the maximize output power.

Figure 7. Block Diagram, N5242A Option 219

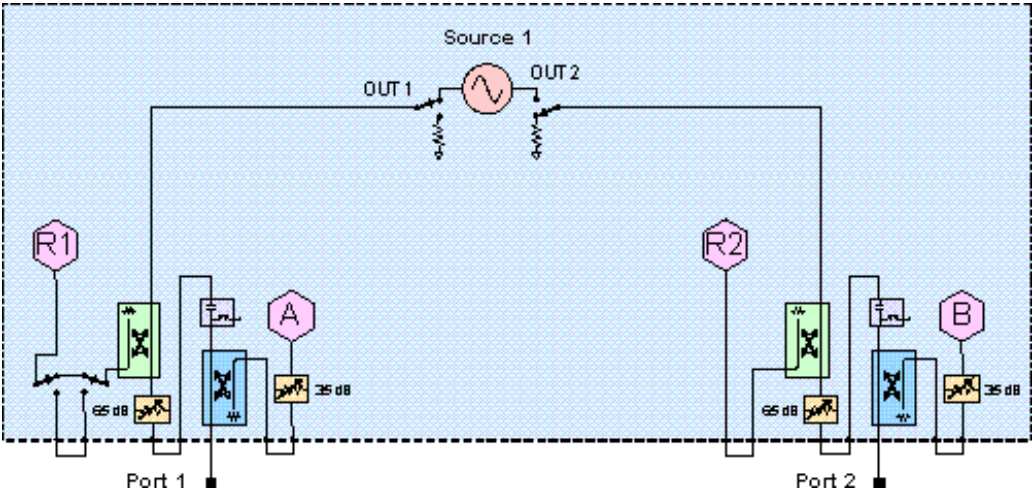

Note: The path configuration drawing for Option 219 is identical to the path configuration drawings for Option 200, which are shown in Figure 3.

Figure 8. Block Diagram, N5242A Option 419

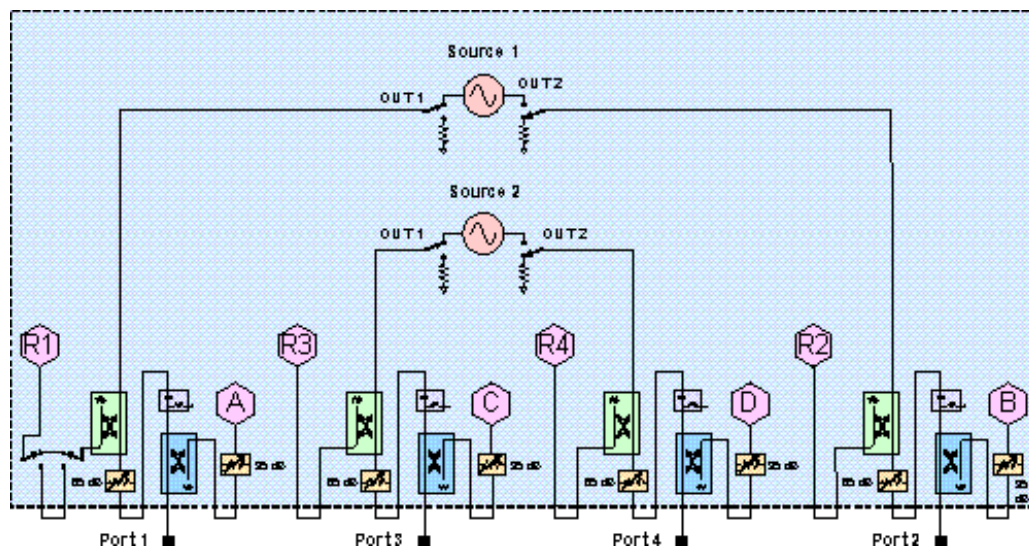

Note: The path configuration drawing for Option 419 is identical to the path configuration drawings for Option 400, which are shown in Figure 6.

Table 8c. Maximum Leveled Power

Option 224

Description	Specification (dBm)			Typical (dBm)	
	Port 1 Filtered Mode ¹	Port 1 Hi Pwr Mode ¹	Port 2	Port 1 Filtered Mode ¹	Port 1 Hi Pwr Mode ¹
10 MHz to 50 MHz	7	13	13	9	19
50 MHz to 500 MHz	8	13	13	11	20
500 MHz to 3.2 GHz	8	10	13	11	13
3.2 GHz to 10 GHz	13	13	13	19	19
10 GHz to 16 GHz	12	12	10	15	15
16 GHz to 20 GHz	10	10	7	13	13
20 GHz to 24 GHz	7	7	5	12	12
24 GHz to 26.5 GHz	0	0	-2	8	8

¹ In Filtered Mode, the signal path goes through filters to minimize harmonics below 3.2 GHz. In Hi Pwr Mode, the signal bypasses the filters to maximize output power.

Table 8d. Maximum Levelled Power

Option 224

Description	Specification (dBm)					Typical (dBm)
	Source 2, Out 1 Filtered Mode ¹	Source 2, Out 1 Hi Pwr Mode ¹	Source 2, Out 2	Source 2, Out 1 Filtered Mode ¹	Source 2, Out 1 Hi Pwr Mode ¹	
10 MHz to 50 MHz	9	18	13	12	21	
50 MHz to 500 MHz	11	18	17	13	22	
500 MHz to 3.2 GHz	10	14	14	13	17	
3.2 GHz to 10 GHz	18	18	18	22	22	
10 GHz to 16 GHz	16	16	16	21	21	
16 GHz to 20 GHz	15	15	13	19	19	
20 GHz to 24 GHz	13	13	12	18	18	
24 GHz to 26.5 GHz	7	7	5	14	14	

¹ In Filtered Mode, the signal path goes through filters to minimize harmonics below 3.2 GHz. In Hi Pwr Mode, the signal bypasses the maximize output power.

Figure 9. Block Diagram: N5242A Option 224

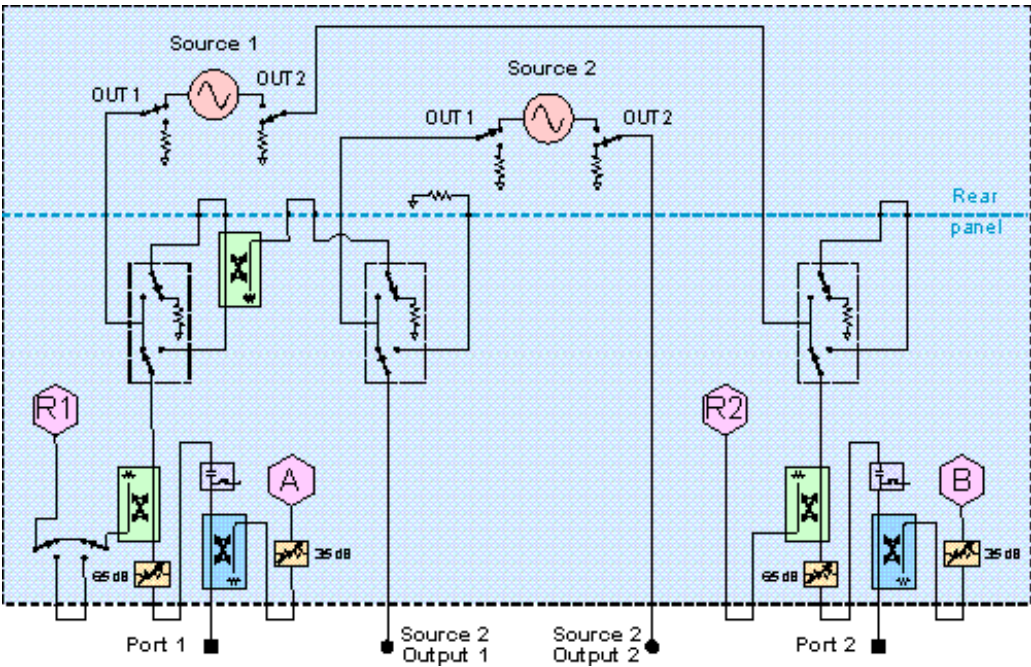


Figure 10. Path Configuration Diagram, N5242A Option 224

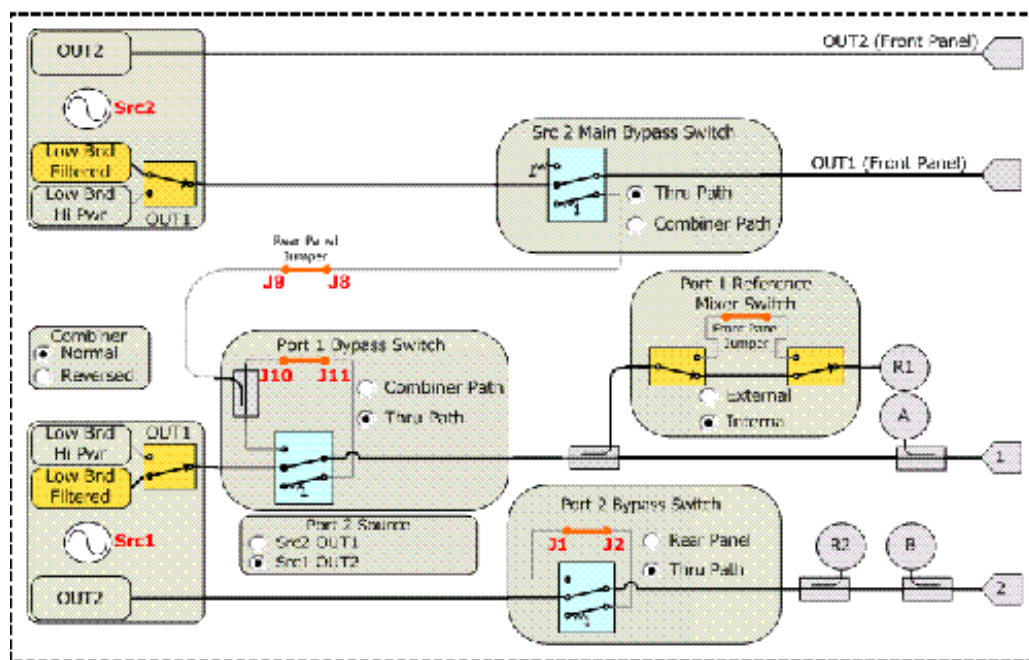


Table 8e. Maximum Levelled Power

Option 423

Description	Specification (dBm)			Typical (dBm)	
	Port 1 or 3 Filtered Mode ¹	Port 1 or 3 Hi Pwr Mode ¹	Port 2 or 4	Port 1 or 3 Filtered Mode ¹	Port 1 or 3 Hi Pwr Mode ¹
10 MHz to 50 MHz	7	13	13	9	19
50 MHz to 500 MHz	8	13	13	11	20
500 MHz to 3.2 GHz	8	10	13	11	13
3.2 GHz to 10 GHz	13	13	13	19	19
10 GHz to 16 GHz	12	12	10	15	15
16 GHz to 20 GHz	10	10	7	13	13
20 GHz to 24 GHz	7	7	5	12	12
24 GHz to 26.5 GHz	0	0	-2	8	8

¹ In Filtered Mode, the signal path goes through filters to minimize harmonics below 3.2 GHz. In Hi Pwr Mode, the signal bypasses the

maximize output power.

Table 8f. Maximum Leveled Power

Option 224 or 423

Description	Typical (dBm)			
	Source 1, Port 1 Combine Mode	Source 1, Port 1 Combine Mode	Source 2, Port 1 Combine Mode	Source 2, Port 1 Combine Mode
	Filtered Mode ¹	Hi Pwr Mode ¹	Filtered Mode ¹	Hi Pwr Mode ¹
10 MHz to 50 MHz	7	17	-7	-
50 MHz to 500 MHz	9	17	-5	-
500 MHz to 3.2 GHz	9	10	-5	-
3.2 GHz to 10 GHz	15	15	2	-
10 GHz to 16 GHz	11	11	-2	-
16 GHz to 20 GHz	8	8	-4	-
20 GHz to 24 GHz	6	6	-6	-
24 GHz to 26.5 GHz	2	2	-11	-

¹ In Filtered Mode, the signal path goes through filters to minimize harmonics below 3.2 GHz. In Hi Pwr Mode, the signal bypasses the filters to maximize output power.

Figure 11. Block Diagram: N5242A Option 423

Figure 12. Path Configuration Diagram, N5242A Option 423

Table 9a. Power Level Accuracy

All Options

Description	Specification (dB)		Typical (dB)	
	Ports 1, 2, 3, 4 ¹	Source 2, Out 1 Source 2, Out 2	Ports 1, 2, 3, 4 ¹	Source 2, Out 1 Source 2, Out 2
10 MHz to 50 MHz	+/-1.0	+/-2.0	+/-0.40	+/-0.40
50 MHz to 500 MHz	+/-1.0	+/-2.0	+/-0.20	+/-0.20
500 MHz to 3.2 GHz	+/-1.0	+/-2.0	+/-0.25	+/-0.25
3.2 GHz to 10 GHz	+/-1.0	+/-2.0	+/-0.40	+/-0.40
10 GHz to 13 GHz	+/-1.2	+/-2.0	+/-0.60	+/-0.60
13 GHz to 18 GHz	+/-2.0	+/-2.5	+/-0.60	+/-0.60
18 GHz to 26.5 GHz	+/-2.5	+/-2.5	+/-0.80	+/-0.80

¹ Any port can be used as the source port.

Table 9b. Power Level Linearity

All Options

Description	Specification (dB)		
	Port 1 or 3 ¹ -25dBm = P<-20dBm	Port 1 or 3 ¹ -20dBm = P<-15dBm	Port 1 or 3 ¹ P =
10 MHz to 50 MHz	+/-2.0	+/-1.5	-
50 MHz to 500 MHz	+/-1.5	+/-1.0	-
500 MHz to 3.2 GHz	+/-1.0	+/-1.0	-
3.2 GHz to 10 GHz	+/-1.0	+/-1.0	-
10 GHz to 16 GHz	+/-1.0	+/-1.0	-
16 GHz to 20 GHz	+/-1.0	+/-1.0	-
20 GHz to 24 GHz	+/-1.0	+/-1.0	-
24 GHz to 26.5 GHz	+/-1.0	+/-1.0	-

¹ Either port can be used as the source port.

Table 9c. (Continued) Power Level Linearity

All Options

Description	Specification (dB)		
	Port 2 or 4 ¹ -25dBm =P<-20dBm	Port 2 or 4 ¹ -20dBm =P<-15dBm	Port 2 or 4 ¹ P =
10 MHz to 50 MHz	+/-5.0	+/-2.0	-
50 MHz to 500 MHz	+/-4.0	+/-2.0	-
500 MHz to 3.2 GHz	+/-2.5	+/-1.0	-
3.2 GHz to 10 GHz	+/-2.0	+/-1.0	-
10 GHz to 16 GHz	+/-1.5	+/-1.5	-
16 GHz to 20 GHz	+/-1.0	+/-1.0	-
20 GHz to 24 GHz	+/-1.0	+/-1.0	-
24 GHz to 26.5 GHz	+/-1.0	+/-1.0	-

¹ Either port can be used as the source port.

Table 9d. Power Level Linearity

Option 224

Description	Specification (dB)		
	Source 2, Out 1 P = -15dBm	Source 2, Out 2 -15dBm = P < -10dBm	Source 2 P = -10dBm
10 MHz to 50 MHz	+/-1.0	+/-1.5	+/-1.0
50 MHz to 500 MHz	+/-1.0	+/-1.5	+/-1.0
500 MHz to 3.2 GHz	+/-1.0	+/-1.0	+/-1.0
3.2 GHz to 10 GHz	+/-1.0	+/-1.0	+/-1.0
10 GHz to 16 GHz	+/-1.0	+/-1.0	+/-1.0
16 GHz to 20 GHz	+/-1.0	+/-1.0	+/-1.0
20 GHz to 24 GHz	+/-1.0	+/-1.0	+/-1.0
24 GHz to 26.5 GHz	+/-1.0	+/-1.0	+/-1.0

Table 10a. Power Sweep Range

Option 200 or 400

Description	Specification (dB)		Typical (dB)	
	Port 1 or 3 ¹	Port 2 or 4 ¹	Port 1 or 3 ¹	Port 2 or 4 ¹
10 MHz to 50 MHz	38	38	46	46
50 MHz to 500 MHz	38	38	48	48
500 MHz to 3.2 GHz	35	38	40	40
3.2 GHz to 10 GHz	38	38	47	47
10 GHz to 16 GHz	38	38	44	44
16 GHz to 20 GHz	38	35	43	43
20 GHz to 24 GHz	37	32	42	42
24 GHz to 26.5 GHz	30	27	38	38

¹ Either port can be used as the source port.

Table 10b. Power Sweep Range

Option 219 or 419

Description	Specification (dB)		Typical (dB)	
	Port 1 or 3 ¹	Port 2 or 4 ¹	Port 1 or 3 ¹	Port
10 MHz to 50 MHz	38	38	46	
50 MHz to 500 MHz	38	38	47	
500 MHz to 3.2 GHz	35	38	40	
3.2 GHz to 10 GHz	38	38	45	
10 GHz to 16 GHz	37	36	42	
16 GHz to 20 GHz	35	33	40	
20 GHz to 24 GHz	33	32	39	
24 GHz to 26.5 GHz	28	24	35	

¹ Either port can be used as the source port.

Table 10c. Power Sweep Range

Option 224 or 423

Description	Specification (dB)		Typical (dB)	
	Port 1 or 3 ¹	Port 2 or 4 ¹	Port 1 or 3 ¹	Port
10 MHz to 50 MHz	38	38	46	
50 MHz to 500 MHz	38	38	47	
500 MHz to 3.2 GHz	35	38	40	
3.2 GHz to 10 GHz	38	38	46	
10 GHz to 16 GHz	37	35	42	
16 GHz to 20 GHz	35	32	40	
20 GHz to 24 GHz	32	30	39	
24 GHz to 26.5 GHz	25	23	35	

¹ Either port can be used as the source port.

Table 10d. Power Sweep Range

Option 224

Description	Specification (dB)			Typical (dB)
	Source 2 Out 1	Source 2 Out 2	Source 2 Out 1	
10 MHz to 50 MHz	33	28	38	
50 MHz to 500 MHz	33	32	39	
500 MHz to 3.2 GHz	29	29	34	
3.2 GHz to 10 GHz	33	33	39	
10 GHz to 16 GHz	31	31	38	
16 GHz to 20 GHz	30	28	36	
20 GHz to 24 GHz	28	27	35	
24 GHz to 26.5 GHz	22	20	31	

Table 11. Nominal Power (Preset Power)

Description	Specification (dBm)					Typical (dBm)
	Option 200 or 400	Option 219 or 224 or 419 or 423	Option 224			Option 224 or 423
		Ports 1, 2, 3, 4 ¹	Source 2, Out 1	Source 2, Out 2	Source 1, Port 1 Combine Mode	Source 1, Port 1 Combine Mode
10 MHz to 26.5 GHz	0	-5	5	5	-10	-10

¹ Any port can be used as the source port. Any other port can be used as the receiver port.

Table 12. Power Resolution and Maximum/Minimum Settable Power

Description	Specification at Test Port		Typical at Test Port	
	All Options	All Options	Option 200 or 400	Option 2
	Ports 1, 2, 3, 4 ¹			
Power Resolution	0.01 dB	--	--	--
Maximum Settable Power	--	30 dBm	--	--
Minimum Settable Power	--	--	-30 dBm	-95

¹ Any port can be used as the source port.

Table 13. Harmonics at Max Specified Power

All Options

(see Tables 8a - 8f Maximum Leveled Power)

Description	Typical (dBc)	
	Port 1 or 3 ^{1, 2} Source 2 Out 1	Port 2 or 4 ¹ Source 2 Out 2
2nd Harmonics ³		
10 MHz to 50 MHz	-51	-13
50 MHz to 2 GHz	-51	-13
2 GHz to 3.2 GHz	-60	-21
3.2 GHz to 10 GHz	-60	-21
10 GHz to 16 GHz	-60	-21
16 GHz to 20 GHz	-60	-21
20 GHz to 24 GHz	-60	-21
24 GHz to 26.5 GHz	-60	-21
3rd Harmonics ³		
10 MHz to 50 MHz	-51	-13
50 MHz to 2 GHz	-51	-13
2 GHz to 3.2 GHz	-60	-21
3.2 GHz to 10 GHz	-60	-21
10 GHz to 16 GHz	-60	-21
16 GHz to 20 GHz	-60	-21
20 GHz to 24 GHz	-60	-21
24 GHz to 26.5 GHz	-60	-21

1/2 and 1/4 Sub-Harmonics ³		
10 MHz to 50 MHz	-73	-73
50 MHz to 2 GHz	-73	-73
2 GHz to 3.2 GHz	-73	-73
3.2 GHz to 10 GHz	-66	-63
10 GHz to 16 GHz	-66	-63
16 GHz to 20 GHz	-66	-63
20 GHz to 24 GHz	-61	-52
24 GHz to 26.5 GHz	-61	-52

¹ Any port can be used as the source port.

² < 3.2 GHz Filtered Mode

³ Listed frequency is fundamental frequency; test at max specified power

Table 14. Non-Harmonic Spurs at nominal power

Description	Typical (dBc) at Test Port
	Ports 1, 2, 3, 4 Source 2 Out 1, Source 2 Out 2
Offset frequency = 30 kHz to 5 MHz	
10 MHz to 500 MHz	-50
500 MHz to 1 GHz	-60
1 GHz to 2 GHz	-60
2 GHz to 4 GHz	-57
4 GHz to 8 GHz	-51
8 GHz to 16 GHz	-45
16 GHz to 24 GHz	-39
24 GHz to 26.5 GHz	-33

Table 15. Phase Noise

All Options

Description	Typical (dBc/Hz)			
	Ports 1, 2, 3, 4, Source 2 Out 1, Source 2 Out 2			
	1 kHz Offset	10 kHz Offset	100 kHz Offset	1 MHz Offset
10 MHz to 500 MHz	-85	-85	-85	
500 MHz to 1 GHz	-105	-115	-110	
1 GHz to 2 GHz	-100	-110	-105	
2 GHz to 4 GHz	-95	-105	-100	
4 GHz to 8 GHz	-89	-100	-94	
8 GHz to 16 GHz	-83	-94	-88	
16 GHz to 26.5 GHz	-78	-89	-82	

Test Port Input

Table 16. Test Port Input

All Options

Description	Specification	Typical
Ports 1, 2, 3, 4		
Test Port Noise Floor ¹ (dBm)		
10 Hz IFBW		
10 MHz to 50 MHz ²	-80	-87
50 MHz to 100 MHz ²	-90	-95
100 MHz to 500 MHz ²	-104	-110
500 MHz to 2 GHz	-114	-117
2 GHz to 20 GHz	-114	-117
20 GHz to 24 GHz	-110	-115
24 GHz to 26.5 GHz	-107	-113
Direct Receiver Access Input Noise Floor ¹ (dBm)		
10 Hz IFBW		
10 MHz to 50 MHz ²	--	-130
50 MHz to 100 MHz ²	--	-128
100 MHz to 500 MHz ²	--	-132
500 MHz to 2 GHz	--	-133
2 GHz to 20 GHz	--	-129
20 GHz to 24 GHz	--	-122
24 GHz to 26.5 GHz	--	-119

Test Port Compression at 0.1 dB (dBm)		
10 MHz to 50 MHz	--	--
50 MHz to 500 MHz	--	--
500 MHz to 3.2 GHz	--	13
3.2 GHz to 10 GHz	--	13
10 GHz to 16 GHz	--	13
16 GHz to 20 GHz	--	12
20 GHz to 24 GHz	--	10.5
24 GHz to 26.5 GHz	--	10
Receiver Compression @ 8 dBm Test Port Power (dB)		
10 MHz to 50 MHz	--	--
50 MHz to 500 MHz	--	--
500 MHz to 3.2 GHz	<0.17	--
3.2 GHz to 10 GHz	<0.17	--
10 GHz to 16 GHz	<0.17	--
16 GHz to 20 GHz	<0.23	--
20 GHz to 24 GHz	<0.23	--
24 GHz to 26.5 GHz	<0.29	--

Table 16.(Continued) Test Port Input

All Options - Ports 1, 2, 3, 4

Description	Specification	Typical
Trace Noise Magnitude (dB rms)		
Ratioed measurement, nominal power at test port.		
1 kHz IFBW		
10 MHz to 100 MHz	0.007	0.0039
100 MHz to 13.5 GHz	0.002	0.0005
13.5 GHz to 16 GHz	0.002	0.0005
16 GHz to 22.5 GHz	0.002	0.0006
22.5 GHz to 24 GHz	0.003	0.0014
24 GHz to 26.5 GHz	0.005	0.0020
100 kHz IFBW		
10 MHz to 100 MHz	--	0.040
100 MHz to 13.5 GHz	--	0.005
13.5 GHz to 16 GHz	--	0.005
16 GHz to 22.5 GHz	--	0.005
22.5 GHz to 24 GHz	--	0.008
24 GHz to 26.5 GHz	--	0.008
600 kHz IFBW		
10 MHz to 100 MHz	--	0.140
100 MHz to 13.5 GHz	--	0.011
13.5 GHz to 16 GHz	--	0.011
16 GHz to 22.5 GHz	--	0.012
22.5 GHz to 24 GHz	--	0.020
24 GHz to 26.5 GHz	--	0.020

Trace Noise Phase (deg rms)		
Ratioed measurement, nominal power at test port.		
1 kHz IFBW		
10 MHz to 100 MHz	0.051	0.0261
100 MHz to 13.5 GHz	0.015	0.0041
13.5 GHz to 16 GHz	0.042	0.0124
16 GHz to 22.5 GHz	0.042	0.0135
22.5 GHz to 26.5 GHz	0.054	0.0225
100 kHz IFBW		
10 MHz to 100 MHz	--	0.266
100 MHz to 13.5 GHz	--	0.030
13.5 GHz to 16 GHz	--	0.030
16 GHz to 22.5 GHz	--	0.033
22.5 GHz to 26.5 GHz	--	0.057
600 kHz IFBW		
10 MHz to 100 MHz	--	1.053
100 MHz to 13.5 GHz	--	0.075
13.5 GHz to 16 GHz	--	0.075
16 GHz to 22.5 GHz	--	0.082
22.5 GHz to 26.5 GHz	--	0.139
Reference Level Magnitude		
Range	+/-500 dB	--
Resolution	0.001 dB	--
Reference Level Phase		
Range	+/-500°	--

Resolution	0.01°	--
------------	-------	----

Stability Magnitude (dB/°C)		
Stability is defined as a ratio measurement made at the test port.		
10 MHz to 50 MHz	--	0.01
50 MHz to 500 MHz	--	0.01
500 MHz to 3.2 GHz	--	0.01
3.2 GHz to 10 GHz	--	0.02
10 GHz to 16 GHz	--	0.02
16 GHz to 20 GHz	--	0.03
20 GHz to 24 GHz	--	0.03
24 GHz to 26.5 GHz	--	0.04

Table 16. (Continued) Test Port Input

All Options - Ports 1, 2, 3, 4

Description	Specification	Typical
Stability Phase (dB/°C)		
Stability is defined as a ratio measurement made at the test port.		
10 MHz to 50 MHz	--	0.29
50 MHz to 500 MHz	--	0.06
500 MHz to 3.2 GHz	--	0.07
3.2 GHz to 10 GHz	--	0.13
10 GHz to 16 GHz	--	0.13
16 GHz to 20 GHz	--	0.40
20 GHz to 24 GHz	--	0.54
24 GHz to 26.5 GHz	--	0.56

Table 16. (Continued)Test Port Input

Description	Typical
Damage Input Level	
Test Port 1 or 2 or 3 or 4	> +30 dBm RF, 40 VDC
(Option 224 only) Source 2 Out 1 or Source 2 Out 2	> +30 dBm RF, 0 VDC

¹ Total average (rms) noise power calculated as the mean value of a linear magnitude trace expressed in dBm.

² May typically be degraded at particular frequencies below 500 MHz due to spurious receiver residuals.

³ Test port receiver compression at specified input levels below 500 MHz is negligible due to coupler rolloff in this frequency range.


Dynamic Accuracy

Table 17 Dynamic Accuracy (Specification)


Accuracy of the test port input power reading relative to the reference input power level.

Dynamic Accuracy, 0.010 GHz


Magnitude

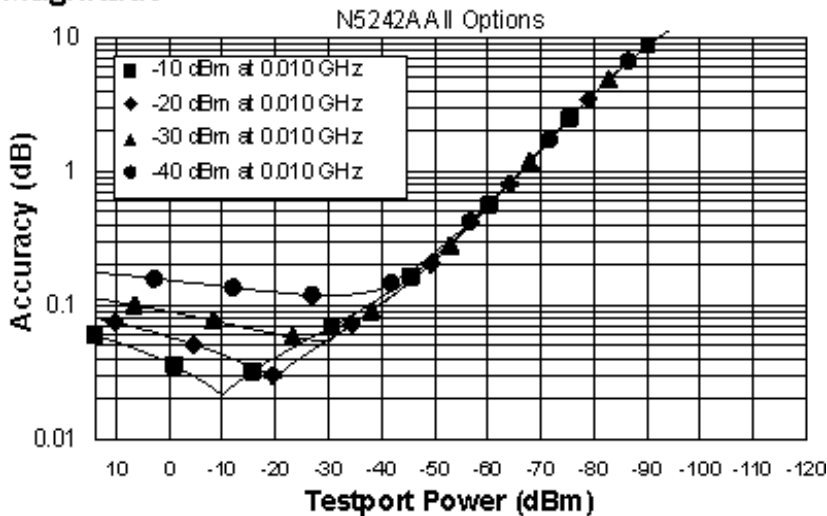


Phase

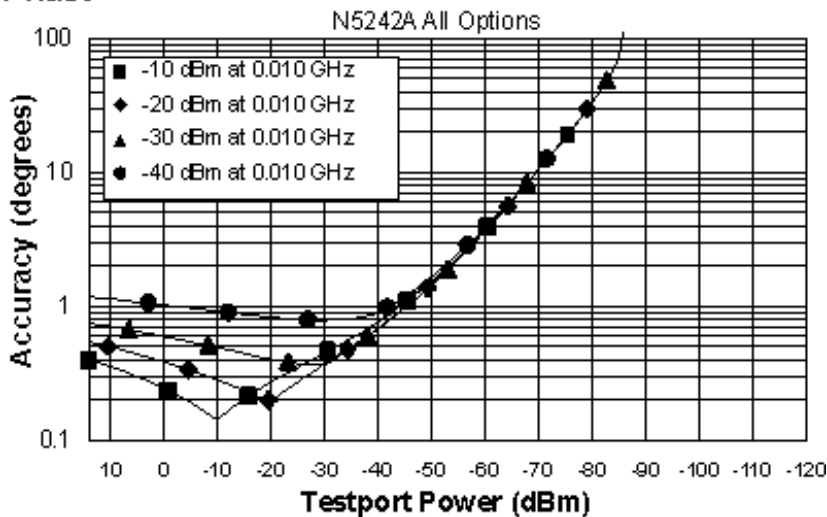

Phase

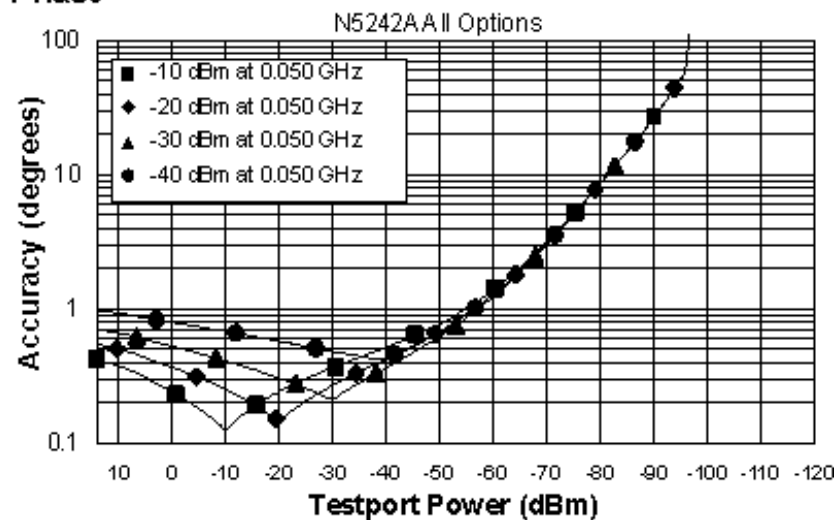


Magnitude

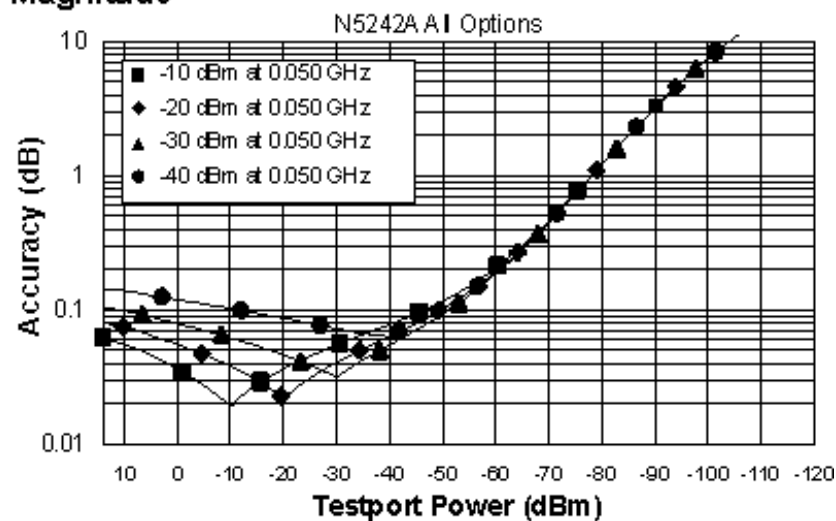


Dynamic Accuracy, 0.500 GHz

Phase

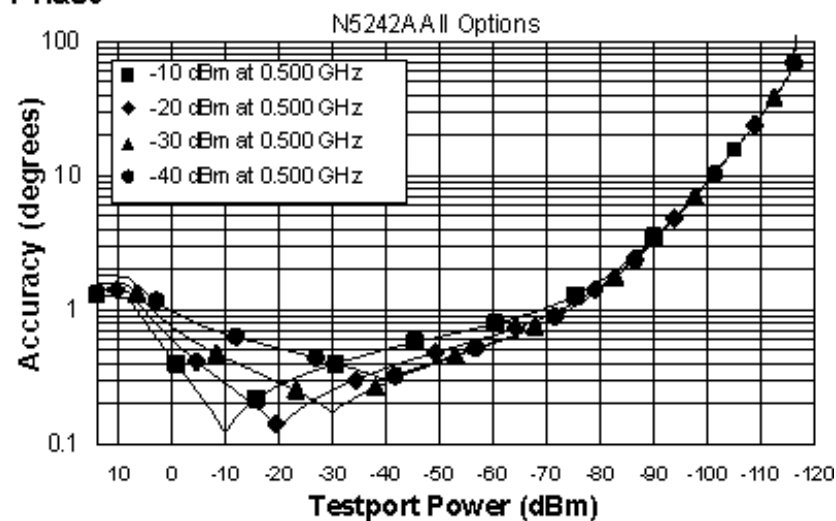


Magnitude

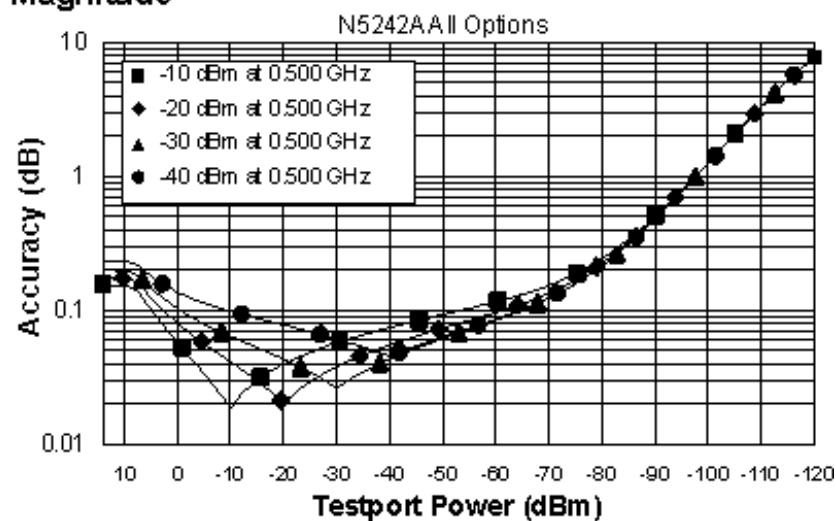


Dynamic Accuracy, 1- 10 GHz

Phase

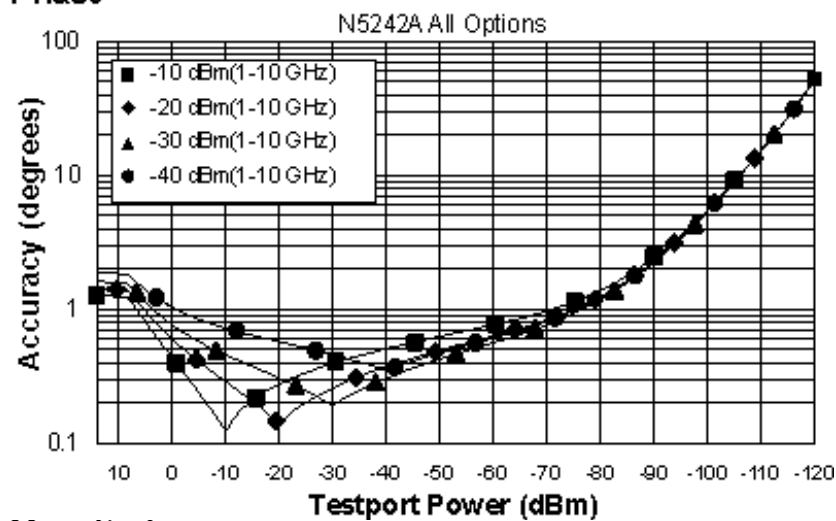


Magnitude

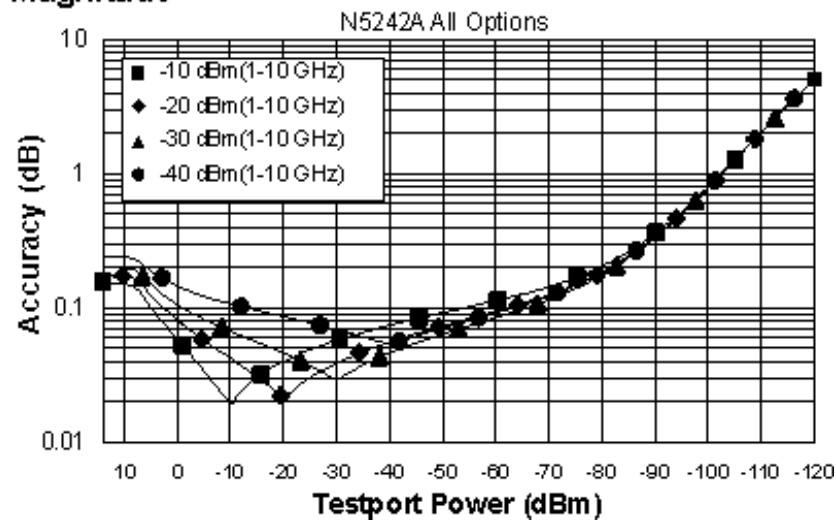


Dynamic Accuracy, 10 - 16 GHz


Phase

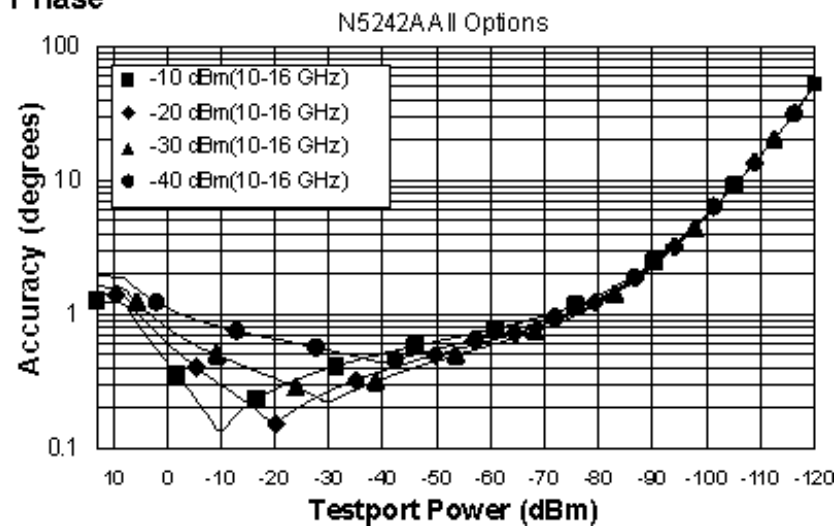


Magnitude

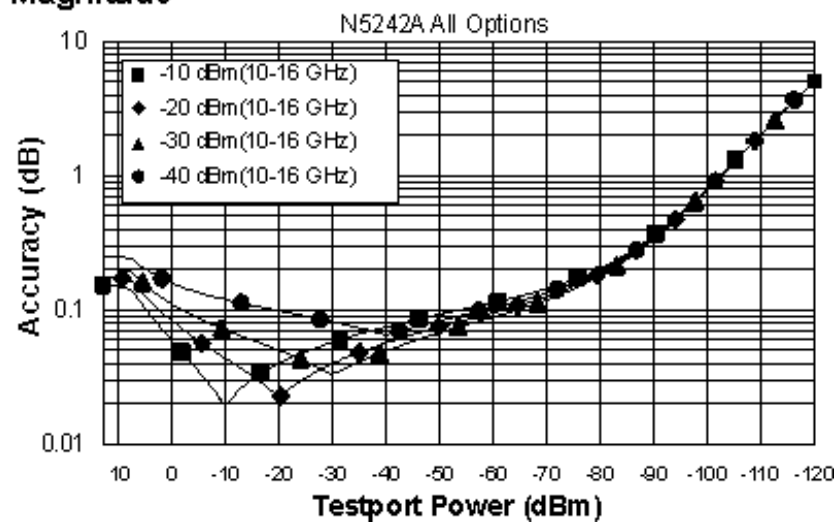


Magnitude

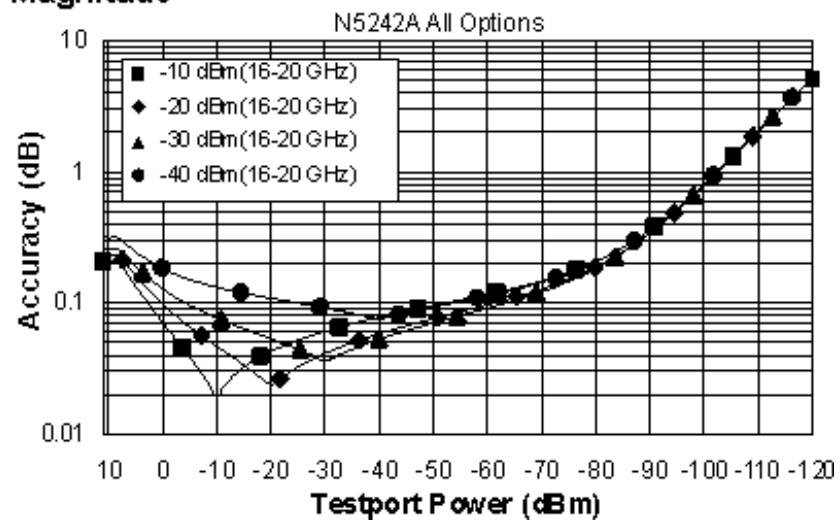


Phase

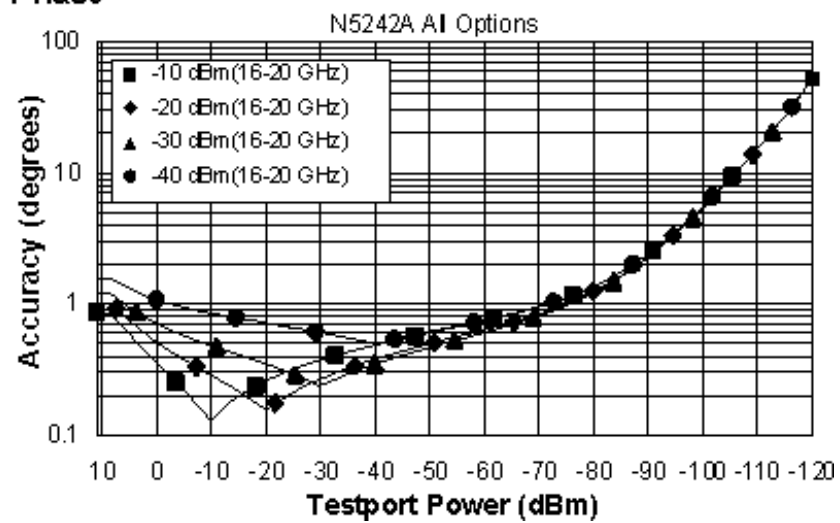

Magnitude

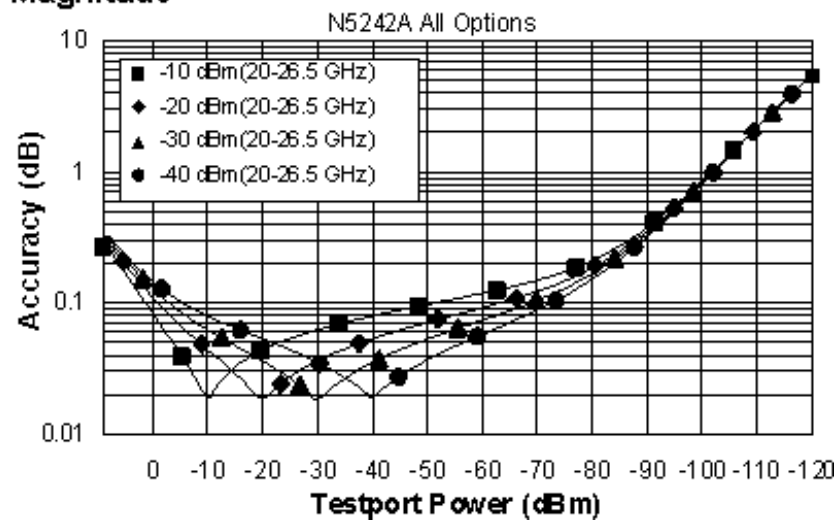

Phase

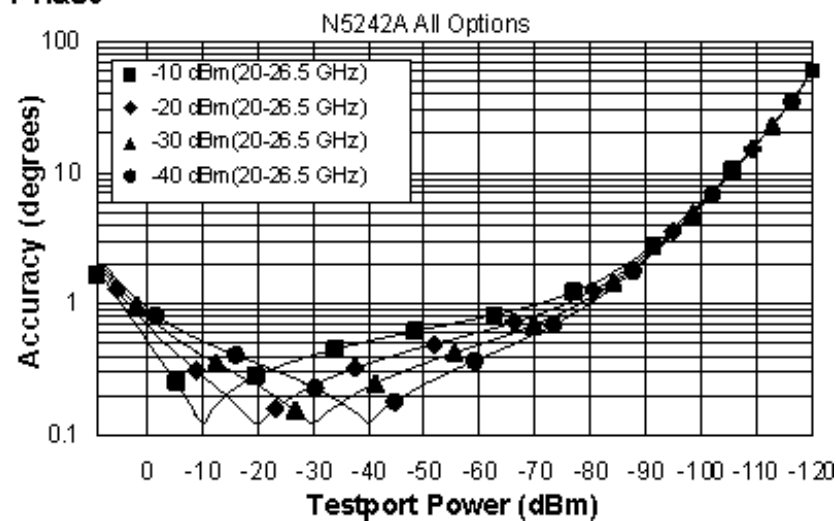

² Dynamic accuracy is verified with the following measurements:

Compression over frequency

IF linearity at a single frequency of 1.195 GHz using a reference level of -20 dBm for an input power range of 0 to -120 dBm.


Table 18. Test Port Input (Group Delay)^a

Description	Typical Performance
Aperture (selectable)	(frequency span)/(number of points -1)
Maximum Aperture	20% of frequency span
Range	0.5 x (1/minimum aperture)
Maximum Delay	Limited to measuring no more than 180° of phase change within the minimum aperture
Accuracy	See graph below. Char.

The following graph shows characteristic group delay accuracy with full 2-port calibration and a 10 Hz IF bandwidth. Insertion loss is to be < 2 dB and electrical length to be ten meters.

For any S_{ij} Group Delay measurement, $S_{ii} = 0$, $S_{ij} = 1$, $S_{ji} = 0$, $S_{kl} = 0$ for all $kl \neq ij$

Group Delay (Typical)

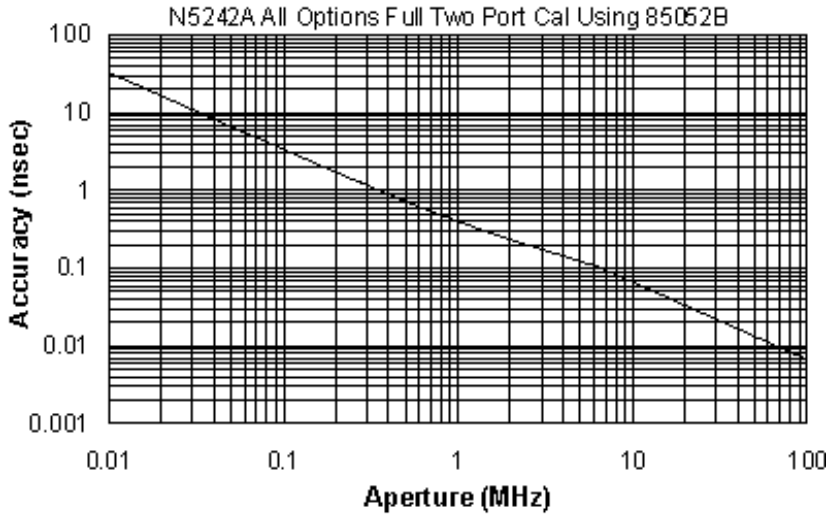

In general, the following formula can be used to determine the accuracy, in seconds, of specific group delay measurement:

$$\pm \text{Phase Accuracy (deg)} / [360 \times \text{Aperture (Hz)}]$$

Depending on the aperture and device length, the phase accuracy used is either incremental phase accuracy or worst-case phase accuracy.

^a Group delay is computed by measuring the phase change within a specified frequency step (determined by the frequency span and the number of points per sweep).

General Information

- Miscellaneous Information
- Front Panel
- Rear Panel
- Environment and Dimensions

Table 19. Miscellaneous Information

Description	Supplemental Information
System IF Bandwidth Range	1 Hz to 5 MHz, nominal
CPU	Intel® 1.6 GHz Pentium® M with 1 GByte RAM

Table 20. Front Panel Information

All Options

Description	Typical Performance
RF Connectors	
Type	Option 200 or 219 or 224 or 400 or 419 or 423: 3.5 mm (male), 50 ohm, (nominal)
Center Pin Recession	0.002 in. (characteristic)
USB 2.0 Ports	
Master (4 ports)	
Standard	Compatible with USB 2.0
Connector	USB Type-A female
Display	
Size	26.3 cm (10.4 in) diagonal color active matrix LCD; 1024 (horizontal) X 768 (vertical) resolution
Refresh Rate	Vertical 60 Hz; Horizontal 46.08 kHz
Pixels	A display is considered faulty if: More than 0.002% of the total pixels have a constant blue, green, red, or black appearance that will not change. Three or more consecutive pixels have a constant blue, green, red, or black

appearance that will not change.

Display Range	
Magnitude	+/-2500 dB (at 500 dB/div), max
Phase	+/-2500° (at 500 dB/div), max
Polar	10 pUnits, min 10,000 Units, max
Display Resolution	
Magnitude	0.001 dB/div, min
Phase	0.01°/div, min
Marker Resolution	
Magnitude	0.001 dB, min
Phase	0.01°, min
Polar	10 pUnit, min

Table 21 Rear Panel Information

All Options

Description	Typical Performance	
10 MHz Reference In		
Connector	BNC, female	
Input Frequency	10 MHz ± 10 ppm, typical	
Input Level	-15 dBm to +20 dBm, typical	
Input Impedance	200 Ω , nom.	
10 MHz Reference Out		
Connector	BNC, female	
Output Frequency	10 MHz ± 1 ppm, typical	
Signal Type	Sine Wave, typical	
Output Level	+10 dBm ± 4 dB into 50 Ω	
Output Impedance	50 Ω , nominal	
Harmonics	<-40 dBc, typical	
External IF Inputs		
Function	Allows use of external IF signals from remote mixers, bypassing the PNA's first converters	
Connectors	SMA (female); A, B, C, D, R (4-port); A, B, R1, R2 (2-port)	
Input Frequency	VNA IF (2.54 MHz, 7.61 MHz, or 10.73 MHz)	
Input Impedance	50 Ω	
RF Damage Level	+17 dBm	
DC Damage Level	1.0 VDC max	
Full scale input	-10 dBm (0.1V peak)	

Pulse Inputs (IF Gates)		
Function	Internal receiver gates used for point-in-pulse and pulse-profile measurements	
Connectors	15-pin mini D-sub	
Input Impedance	1 K Ohm	
Minimum Pulse Width, Source Modulators	33 ns	
Minimum Pulse Width, Receiver Gates	20 ns	
DC Damage Level	5.5 VDC	
Drive Voltage	0 V (off), +3.3 V (on), nominal	
RF Pulse Modulator Input (Source Modulator)		
On/Off Ratio		
10 MHz to 3.2 GHz	-64	
3.2 GHz to 26.5 GHz	-80	
Pulse Period		
Minimum	33 ns	
Maximum	70 s	
External Test Set Driver		
Function	Used for driving remote mixers	
Connections	SMA (female)	
RF, LO Output Frequency Range	1.7 to 26.5 GHz	

Table 21. (Continued) Rear Panel Information

Description	Typical (dBm)	
	Upper Limit (dBm)	Lower Limit (dBm)
Test Set Drivers (Continued)		
Rear Panel LO Power		
1.7 GHz to 18 GHz	0	-10
18 GHz to 22.5 GHz	2	-8
22.5 GHz to 26.5 GHz	6	-5
Rear Panel RF Power		
3.2 GHz to 20 GHz	-3	-8
20 GHz to 26.5 GHz	-8	-14

Table 21. (Continued) Rear Panel Information

Description	Typical Performance
VGA Video Output	
Connector	15-pin mini D-Sub; Drives VGA compatible monitors
Devices Supported:	
	Resolutions:
Flat Panel (TFT)	1024 X 768, 800 X 600, 640 X 480
Flat Panel (DSTN)	800 X 600, 640 X 480
CRT Monitor	1280 X 1024, 1024 X 768, 800 X 600, 640 X 480
	Simultaneous operation of the internal and external displays is allowed, but with 640 X 480 only. If you change resolution, you can only view the external display (internal display will "\
Bias Tee Inputs	
Connectors	BNC(f) for ports 1, 2, 3 and 4
Fuse	500 mA
Maximum Bias Current	+/-200 mA
Maximum Bias Voltage	+/-40 VDC
Trigger Inputs/Outputs	BNC(f), TTL/CMOS compatible
Test Set IO	25-pin D-Sub connector, available for external test set control.
Power IO	9-pin D-Sub, female; analog and digital IO
Handler IO	36-pin parallel I/O port; all input/output signals are default set to negative logic; can be res logic via GPIB command.

GPIB (two ports - dedicated controller and dedicated talker/listener)	
24-pin D-sub (Type D-24), female; compatible with IEEE-488.	
Parallel Port (LPT1)	25-pin D-Sub miniature connector, female; provides connection to printers or any other para peripherals
Serial Port (COM 1)	9-pin D-Sub, male; compatible with RS-232
USB Port	Four ports on front panel (all Host) and five ports (four Host and one Device) on rear panel. configuration (eight Host) and Type B configuration (one Device), USB 2.0 compatible.
LAN	10/100BaseT Ethernet, 8-pin configuration; auto selects between the two data rates
Line Power	
Frequency, Voltage	50/60 Hz for 100 240 VAC
Power supply is auto switching	
Max	450 watts

Note : Option H11 is not available with the N5242A network analyzer.

Table 22. Analyzer Dimensions and Weight

Cabinet Dimensions	Height	Width	Depth
Excluding front and rear panel hardware and feet	266 mm 10 in	436 mm 17 in	514 mm 20 in
As shipped - includes front panel connectors, rear panel bumpers, and feet.	277 mm 11 in	436 mm 17 in	561 mm 22 in
As shipped plus handles	277 mm 11 in	458 mm 18 in	581 mm 23 in
As shipped plus rack-mount flanges	277 mm 11 in	482 mm 19 in	561 mm 22 in
As shipped plus handles and rack-mount flanges	277 mm 11 in	482 mm 19 in	581 mm 23 in
Weight			
	Option 200 or 219 or 224	Option 400 or 419 or 423	--
Net	27 kg (60 lb), nominal	37 kg (82 lb), nominal	--
Shipping	43 kg (95 lb), nominal	53 kg (117 lb), nominal	--

Note: For Regulatory and Environmental information, refer to the PNA Series Installation and Quick Start Guide, located online at <http://cp.literature.agilent.com/litweb/pdf/E8356-90001.pdf> .

Measurement Throughput Summary

- Typical Cycle Time for Measurement Completion
- Cycle Time vs IF Bandwidth
- Cycle Time vs Number of Points
- Data Transfer Time

Table 23. Typical Cycle Time^a (ms) for Measurement Completion

All Options

Description	Typical Performance			
	Number of Points			
	201	401	1601	16001
Start 9 GHz, Stop 10 GHz, 600 kHz IF bandwidth				
Uncorrected	6	6.3	9.6	56
2-Port cal	20	21	28	134
Start 9 GHz, Stop 10 GHz, 10 kHz IF bandwidth				
Uncorrected	36	53	200	1945
2-Port cal	80	115	405	3900
Start 9 GHz, Stop 10 GHz, 1 kHz IF bandwidth				
Uncorrected	227	444	1740	17000
2-Port cal	460	900	3484	34000
Start 10 GHz, Stop 20 GHz, 600 kHz IF bandwidth				
Uncorrected	26	33	54	85
2-Port cal	62	77	121	190
Start 10 GHz, Stop 20 GHz, 10 kHz IF bandwidth				
Uncorrected	70	118	273	1958
2-Port cal	149	245	553	3922
Start 10 GHz, Stop 20 GHz, 1 kHz IF bandwidth				
Uncorrected	236	459	1780	17300

2-Port Cal	400	926	3565	34600
------------	-----	-----	------	-------

Start 10 MHz, Stop 26.5 GHz, 600 kHz IF bandwidth				
Uncorrected	59	69	118	350
2-Port cal	125	147	244	707
Start 10 MHz, Stop 26.5 GHz, 10 kHz IF bandwidth				
Uncorrected	94	156	480	2333
2-Port cal	196	320	968	4674
Start 10 MHz, Stop 26.5 GHz, 1 kHz IF bandwidth				
Uncorrected	277	504	1873	17950
2-Port cal	561	1015	3756	35900

^a Includes sweep time, retrace time and band-crossing time. Analyzer display turned off with DISPLAY:ENABLE OFF. Add 21 ms for display on. Data for one trace (S_{11}) measurement.

Note: Option H08 and Option H11 are not available with the N5242A network analyzer.

Table 24. Cycle Time vs IF Bandwidth

Applies to the Preset condition (201 points, correction off) except for the following changes:

- CF = 10 GHz
- Span = 100 MHz
- Display off (add 21 ms for display on)

Description	Typical Performance	
IF Bandwidth (Hz)	Cycle Time (ms) ¹	Trace Noise
600,000	5.00	0.009
100,000	6.84	0.003
30,000	11.6	0.002
10,000	29.0	0.001
3,000	71.8	0.0007
1,000	222	0.0004
300	640	0.0003
100	1826	0.0002
30	5982	<0.0002
10	17830	<0.0002
3	60000	<0.0002

^a Cycle time includes sweep and retrace time.

Table 25. Cycle Time vs Number of Points

Applies to the Preset condition (correction off) except for the following changes:

- CF = 10 GHz
- Span = 100 MHz
- Display off (add 21 ms for display on)

Description	Typical Performance	
IF Bandwidth (Hz)	Number of Points	Cycle Time (ms) ¹
1,000	3	7.7
	11	16.6
	51	60
	101	115
	201	222
	401	436
	801	860
	1,601	1,700
	6,401	6,700
	16,001	16,000
10,000	3	5.44
	11	7.90
	51	10.7
	101	16.8
	201	29.0
	401	53.0
	801	102
	1,601	199
	6,401	780
	16,001	1950

Description	Typical Performance	
IF Bandwidth (Hz)	Number of Points	Cycle Time (ms) ¹
30,000	3	5.7
	11	5.9
	51	6.5
	101	8.2
	201	11.8
	401	18.8
	801	32.8
	1,601	60.5
	6,401	228
	16,001	566
600,000	3	5.4
	11	5.4
	51	5.5
	101	5.6
	201	5.9
	401	6.3
	801	7.2
	1,601	9.6
	6,401	25
	16,001	56

^a Cycle time includes sweep and retrace time.

Table 26. Data Transfer Time (ms)

Description	Typical Performance			
	Number of Points			
	201	401	1601	16,001
SCPI over GPIB				
(Program executed on external PC ²)				
32-bit floating point	5.6	10.5	39.9	400
64-bit floating point	10.5	20.3	79.2	788
ASCII	46	92.5	370	3702
SCPI over SICT/LAN or TCP/IP Socket				
(Program executed in the analyzer)				
32-bit floating point	0.18	0.21	0.5	3.6
64-bit floating point	0.22	0.28	0.62	5.3
ASCII	6.3	12.3	47.3	470
COM ³				
(Program executed in the analyzer)				
32-bit floating point	<0.15	0.15	0.2	0.7
Variant type	0.75	1.2	4.5	50
DCOM over LAN ³				
(Program executed on external PC)				
32-bit floating point	<1.0	1.2	2.1	13
Variant type	2.7	4.5	15	150

¹ Measured with the analyzer display off. Values will increase slightly if the analyzer display is on.

² Measured when using the SCPI command DISPlay: VISible OFF.

³ Values are for real and imaginary pairs, with the analyzer display off.

Note : Specifications for Recall & Sweep Speed are not provided for the N5242A analyzers.

Specifications: Front-Panel Jumpers

Model N5242A (PNA-X)

Note: All PNA-X options have the following front-panel jumpers for each port.



- Measurement Receiver Inputs
- Reference Receiver Inputs
- Reference Outputs (Source Out)
- Source Outputs
- Coupler Inputs

Table 27 Measurement Receiver Inputs

(Rcvr A IN, Rcvr B IN, Rcvr C IN, Rcvr D IN) @ 0.1dB Typical Compression

Description	Typical
All Options	
Maximum Input Level	
10 MHz to 50 MHz ¹	--
50 MHz to 500 MHz ¹	--
500 MHz to 3.2 GHz	-2 dBm
3.2 GHz to 10 GHz	-2 dBm
10 GHz to 16 GHz	-2 dBm
16 GHz to 20 GHz	-2.5 dBm
20 GHz to 24 GHz	-4 dBm
24 GHz to 26.5 GHz	-4 dBm
Damage Level	
N5242A	+15 dBm
Maximum DC Level	
N5242A	0 V

¹ Test port receiver compression at specified input levels below 500 MHz is negligible due to coupler rolloff in this frequency range.

Table 28. Reference Receiver Input

(RCVR R1 IN) @ Max Specified Output Power

Description	Typical				
	Option 200 or 400 Filtered Mode	Option 200 or 400 Hi Pwr Mode	Option 224 or 423 Filtered Mode	Option 219 or 419 Filtered Mode	Option 219 or 419 Hi Pwr Mode
Maximum Input Level					
10 MHz to 50 MHz	-8 dBm	-3 dBm	-9 dBm	-8 dBm	-3 dBm
50 MHz to 500 MHz	-6 dBm	-3 dBm	-7 dBm	-6 dBm	-3 dBm
500 MHz to 3.2 GHz	-6 dBm	-6 dBm	-7 dBm	-5 dBm	-5 dBm
3.2 GHz to 10 GHz	-3 dBm	-3 dBm	-2 dBm	-2 dBm	-2 dBm
10 GHz to 16 GHz	-4 dBm	-4 dBm	-3 dBm	-3 dBm	-3 dBm
16 GHz to 20 GHz	-5 dBm	-5 dBm	-6 dBm	-6 dBm	-6 dBm
20 GHz to 24 GHz	-7 dBm	-7 dBm	-9 dBm	-8 dBm	-8 dBm
24 GHz to 26.5 GHz	-16 dBm	-16 dBm	-18 dBm	-15 dBm	-15 dBm
Damage Level					
	+15 dBm				
Maximum DC Level					
	+/-7 V				

Table 29. Reference Receiver Input

(RCVR R2 IN, RCVR R3 IN, RCVR R4 IN) @ Max Specified Output Power

Description	Typical					
	Option 400 RCVR R3 IN Filtered Mode	Option 400 RCVR R3 IN Hi Pwr Mode	Option 200 or 400 RCVR R2 IN RCVR R4 IN	Option 419 RCVR R3 IN Filtered Mode	Option 419 RCVR R3 IN Hi Pwr Mode	Option 419 RCVR R3 IN Hi Pwr Mode
Maximum Input Level						
10 MHz to 50 MHz	-6 dBm	-1 dBm	-1 dBm	-6 dBm	-1 dBm	-1 dBm
50 MHz to 500 MHz	-4 dBm	-1 dBm	-1 dBm	-4 dBm	-1 dBm	-1 dBm
500 MHz to 3.2 GHz	-4 dBm	-4 dBm	0 dBm	-3 dBm	-3 dBm	-3 dBm
3.2 GHz to 10 GHz	0 dBm	0 dBm	0 dBm	1 dBm	1 dBm	1 dBm
10 GHz to 16 GHz	1 dBm	1 dBm	0 dBm	1 dBm	1 dBm	1 dBm
16 GHz to 20 GHz	1 dBm	1 dBm	-3 dBm	0 dBm	0 dBm	0 dBm
20 GHz to 24 GHz	0 dBm	0 dBm	-6 dBm	-1 dBm	-1 dBm	-1 dBm
24 GHz to 26.5 GHz	-8 dBm	-8 dBm	-12 dBm	-7 dBm	-7 dBm	-7 dBm
Damage Level						
+15 dBm						
Maximum DC Level						
+/-15 V						

Table 29. (Continued) Reference Receiver Input

(RCVR R2 IN, RCVR R3 IN, RCVR R4 IN) @ Max Specified Output Power

Description	Typical		
	Option 423 RCVR R3 IN Filtered Mode	Option 423 RCVR R3 IN Hi Pwr Mode	Option 224 or RCVR R2 IN RCVR R4 IN F iltered Mode Note: No filter ports 2 & 4
Maximum Input Level			
10 MHz to 50 MHz	-7 dBm	-4 dBm	-1 d
50 MHz to 500 MHz	-6 dBm	-4 dBm	-1 d
500 MHz to 3.2 GHz	-5 dBm	-3 dBm	-1 d
3.2 GHz to 10 GHz	1 dBm	1 dBm	0 d
10 GHZ to 16 GHz	1 dBm	1 dBm	-2 d
16 GHZ to 20 GHz	0 dBm	0 dBm	-4 d
20 GHZ to 24 GHz	-2 dBm	-2 dBm	-6 d
24 GHZ to 26.5 GHz	-10 dBm	-10 dBm	-10 c
Damage Level			
	+15 dBm		
Maximum DC Level			
	+/-15 V		

Table 30. Reference Output

(REF 1 SOURCE OUT) @ Max Specified Output Power

Description	Typical					
	Option 200 or 400 F iltered Mode	Option 200 or 400 Hi Pwr Mode	Option 219 or 419 F iltered Mode	Option 219 or 419 Hi Pwr Mode	Option 224 or 423 F iltered Mode	Op 224 Hi
Maximum Input Level						
10 MHz to 50 MHz	-8 dBm	-3 dBm	-8 dBm	-3 dBm	-9 dBm	
50 MHz to 500 MHz	-6 dBm	-3 dBm	-6 dBm	-3 dBm	-7 dBm	
500 MHz to 3.2 GHz	-6 dBm	-6 dBm	-5 dBm	-5 dBm	-7 dBm	
3.2 GHz to 10 GHz	-3 dBm	-3 dBm	-2 dBm	-2 dBm	-2 dBm	
10 GHZ to 16 GHz	-4 dBm	-4 dBm	-3 dBm	-3 dBm	-3 dBm	
16 GHZ to 20 GHz	-5 dBm	-5 dBm	-6 dBm	-6 dBm	-6 dBm	
20 GHZ to 24 GHz	-7 dBm	-7 dBm	-8 dBm	-8 dBm	-9 dBm	
24 GHZ to 26.5 GHz	-16 dBm	-16 dBm	-15 dBm	-15 dBm	-18 dBm	
Damage Level						
	+15 dBm					
Maximum DC Level						
	+/-7 V					

Table 31. Reference Output

(REF 2 SOURCE OUT, REF 3 SOURCE OUT, REF 4 SOURCE OUT) @ Max Specified Output Power

Description	Typical					
	Option 400 REF 3 Source Out Filtered Mode	Option 400 REF 3 Source Out Hi Pwr Mode	Option 200 or 400 REF 2 Source Out REF 4 Source Out Filtered Mode	Option 419 REF 3 Source Out Filtered Mode	Option 419 REF 3 Source Out Hi Pwr Mode	Opti 219 REF Sou REF Sou Filt
Maximum Input Level						
10 MHz to 50 MHz	-6 dBm	-1 dBm	-1 dBm	-6 dBm	-1 dBm	
50 MHz to 500 MHz	-4 dBm	-1 dBm	-1 dBm	-4 dBm	-1 dBm	
500 MHz to 3.2 GHz	-4 dBm	-4 dBm	0 dBm	-3 dBm	-3 dBm	
3.2 GHz to 10 GHz	0 dBm	0 dBm	0 dBm	1 dBm	1 dBm	
10 GHZ to 16 GHz	1 dBm	1 dBm	0 dBm	1 dBm	1 dBm	
16 GHZ to 20 GHz	1 dBm	1 dBm	-3 dBm	0 dBm	0 dBm	
20 GHZ to 24 GHz	0 dBm	0 dBm	-6 dBm	-1 dBm	-1 dBm	
24 GHZ to 26.5 GHz	-8 dBm	-8 dBm	-12 dBm	-7 dBm	-7 dBm	
Damage Level						
	+15 dBm					
Maximum DC Level						
	0 V					

Table 31. (Continued) Reference Output

(REF 2 SOURCE OUT, REF 3 SOURCE OUT, REF 4 SOURCE OUT) @ Max Specified Output Power

Description	Typical			
	Option423 REF 3 Source Out Filtered Mode	Options 423 REF 3 Source Out Hi Pwr Mode	Option 224 or 423 REF 2 Source Out REF 4 Source Out	
Maximum Input Level				
10 MHz to 50 MHz	-7 dBm	-4 dBm	-1 d	
50 MHz to 500 MHz	-6 dBm	-4 dBm	-1 d	
500 MHz to 3.2 GHz	-5 dBm	-3 dBm	-1 d	
3.2 GHz to 10 GHz	1 dBm	1 dBm	0 d	
10 GHz to 16 GHz	1 dBm	1 dBm	-2 d	
16 GHz to 20 GHz	0 dBm	0 dBm	-4 d	
20 GHz to 24 GHz	-2 dBm	-2 dBm	-6 d	
24 GHz to 26.5 GHz	-10 dBm	-10 dBm	-10 d	
Damage Level				
	+15 dBm			
Maximum DC Level				
	0 V			

Table 32. Source Outputs

(PORT 1 SOURCE OUT, PORT 2 SOURCE OUT, PORT 3 SOURCE OUT, PORT 4 SOURCE OUT) @ Max Specified Output Power

Description	Typical					
	Option 200 or 400 Port 1 Source Out Port 3 Source Out Filtered Mode	Option 200 or 400 Port 1 Source Out Port 3 Source Out Hi Pwr Mode	Option 200 or 400 Port 2 Source Out Port 4 Source Out	Option 219 or 419 Port 1 Source Out Port 3 Source Out Filtered Mode	Option 219 or 419 Port 1 Source Out Port 3 Source Out Hi Pwr Mode	0 2 Pi 0 Pi 0
Maximum Input Level						
10 MHz to 50 MHz	8 dBm	13 dBm	13 dBm	8 dBm	13 dBm	
50 MHz to 500 MHz	10 dBm	13 dBm	13 dBm	10 dBm	13 dBm	
500 MHz to 3.2 GHz	11 dBm	11 dBm	13 dBm	11 dBm	11 dBm	
3.2 GHz to 10 GHz	14 dBm	14 dBm	14 dBm	14 dBm	14 dBm	
10 GHZ to 16 GHz	14 dBm	14 dBm	14 dBm	14 dBm	14 dBm	
16 GHZ to 20 GHz	14 dBm	14 dBm	11 dBm	12 dBm	12 dBm	
20 GHZ to 24 GHz	13 dBm	13 dBm	9 dBm	10 dBm	10 dBm	
24 GHZ to 26.5 GHz	7 dBm	7 dBm	4 dBm	5 dBm	5 dBm	
Damage Level						
+30 dBm						
Maximum DC Level						
0 V						

Table 32. (Continued) Source Outputs

(PORT 1 SOURCE OUT, PORT 2 SOURCE OUT, PORT 3 SOURCE OUT, PORT 4 SOURCE OUT) @ Max Specified Output Power

Description	Typical		
	Option 224 or 423 Port 1 Source Out Port 3 Source Out Filtered Mode	Option 224 or 423 Port 1 Source Out Port 3 Source Out Hi Pwr Mode	Option 224 or Port 2 Source Port 4 Source
Maximum Input Level			
10 MHz to 50 MHz	7 dBm	10 dBm	13 c
50 MHz to 500 MHz	8 dBm	10 dBm	13 c
500 MHz to 3.2 GHz	9 dBm	11 dBm	14 c
3.2 GHz to 10 GHz	14 dBm	14 dBm	14 c
10 GHZ to 16 GHz	14 dBm	14 dBm	12 c
16 GHZ to 20 GHz	12 dBm	12 dBm	9 d
20 GHZ to 24 GHz	9 dBm	9 dBm	7 d
24 GHZ to 26.5 GHz	2 dBm	2 dBm	4 d
Damage Level			
	+30 dBm		
Maximum DC Level			
	0 V		

Table 33. Coupler Inputs

(PORT 1 CPLR THRU, PORT 2 CPLR THRU, PORT 3 CPLR THRU, PORT 4 CPLR THRU) Insertion Loss of Coupler Thru

Description	Typical	
	Option 200 or 400	Option 219 or 419 or 220
Maximum Input Level		
10 MHz to 50 MHz	0 dB	-0.5 dB
50 MHz to 500 MHz	-0.25 dB	-0.75 dB
500 MHz to 3.2 GHz	-0.5 dB	-1.0 dB
3.2 GHz to 10 GHz	-0.75 dB	-1.25 dB
10 GHz to 16 GHz	-1.0 dB	-1.75 dB
16 GHz to 20 GHz	-1.5 dB	-2.25 dB
20 GHz to 24 GHz	-1.5 dB	-2.5 dB
24 GHz to 26.5 GHz	-1.75 dB	-2.5 dB
Damage Level		
N5242A	+30 dBm	
Maximum DC Level		
N5242A	+/-40 V	

Test Set Block Diagrams

Figure 13. 2-Port N5242A Base Unit (Option 200)

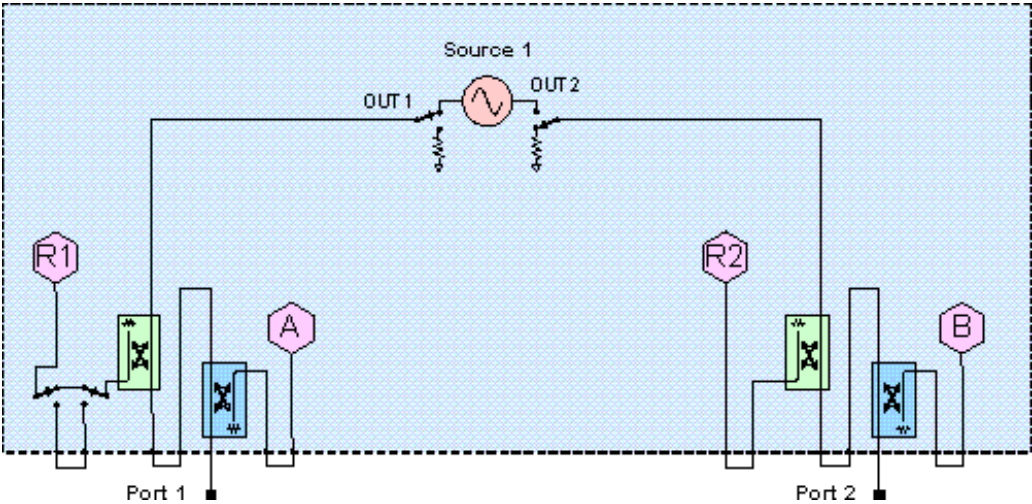


Figure 14. 2-Port N5242A (Option 219)

Figure 15. 2-Port N5242A (Option 224)

Figure 16. 4-Port N5242A Base Unit (Option 400)

Figure 17. 4-Port N5242A (Option 419)

Figure 18. 4-Port N5242A (Option 423)

Typical System Performance for the N5250A

(Rev. 2004-08-02)

- This is a complete list of the N5250A network analyzer [typical](#) system performance.
- To view or print the .pdf version of this document, visit our web site at <http://www.agilent.com>, type 5988-9620EN in the Quick Search box, then click GO.

See [Specs for other PNA models](#)

Definitions

Typical : Expected performance of an average unit which does not include guardbands. It is not covered by the product warranty.

Standard: When referring to the analyzer, this includes no options unless noted otherwise.

Unlike the lengthy specifications documents for other PNA models, this document presents typical system performance for the following categories only:

- [System Dynamic Range](#)
- [Test Port Power](#)
- [Noise Floor](#)
- [Test Port Damage Level](#)
- [Option H11 Rear Panel Connectors](#)

Typical System Performance

Table 1. System Dynamic Range

Frequency	1.0 mm Test Port	1.85 mm PNA Test Port	Waveguide Port
10 MHz to 45 MHz	63 dB	65 dB	
45 MHz to 500 MHz	94 dB	97 dB	
500 MHz to 2 GHz	120 dB	123 dB	
2 GHz to 10 GHz	116 dB	123 dB	
10 GHz to 24 GHz	111 dB	121 dB	
24 GHz to 30 GHz	100 dB	112 dB	
30 GHz to 40 GHz	92 dB	107 dB	
40 GHz to 45 GHz	84 dB	101 dB	
45 GHz to 50 GHz	85 dB	103 dB	
50 GHz to 60 GHz	80 dB	100 dB	
60 GHz to 67 GHz	75 dB	95 dB	
67 GHz to 70 GHz	68 dB		82 dB
70 GHz to 75 GHz	74 dB		87 dB
75 GHz to 80 GHz	85 dB		98 dB
80 GHz to 100 GHz	89 dB		101 dB
100 GHz to 110 GHz	87 dB		98 dB

Table 2. Test Port Power

Frequency	1.0 mm Test Port (Std Configuration ^a or Opt 017 ^b)	1.85 mm PNA Port	Waveguide Port
10 MHz to 45 MHz	-8 dBm	-7 dBm	
45 MHz to 500 MHz	-3 dBm	-1 dBm	
500 MHz to 2 GHz	0 dBm	2 dBm	
2 GHz to 10 GHz	-2 dBm	2 dBm	
10 GHz to 24 GHz	-5 dBm	0 dBm	
24 GHz to 30 GHz	-7 dBm	0 dBm	

30 GHz to 40 GHz	-10 dBm	-1 dBm	
40 GHz to 45 GHz	-15 dBm	-5 dBm	
45 GHz to 50 GHz	-12 dBm	-1 dBm	
50 GHz to 60 GHz	-17 dBm	-4 dBm	
60 GHz to 67 GHz	-22 dBm	-8 dBm	
67 GHz to 70 GHz	-9 dBm		-2 dBm
70 GHz to 75 GHz	-7 dBm		0 dBm
75 GHz to 80 GHz	-6 dBm		+1 dBm
80 GHz to 100 GHz	-5 dBm		+1 dBm
100 GHz to 110 GHz	-8 dBm		-2 dBm

a Assumes a 30" cable from the PNA 1.85mm Test Port Out is used to provide the 10 MHz to 67 GHz source signal. The Standard configuration does not have a bias tee in the 1.0mm head.

b Assumes a 30" cable from the PNA Source Out bulkhead connector is used to provide the 10 MHz to 67 GHz source signal. Option 017 includes a bias tee in the 1.0mm head.

Table 3: Noise Floor

Frequency	1.0mm Test Port	1.85mm Test Port	Waveguide Port
10 MHz to 45 MHz	-71 dBm	-72 dBm	
45 MHz to 500 MHz	-97 dBm	-98 dBm	
500 MHz to 2 GHz	-120 dBm	-121 dBm	
2 GHz to 10 GHz	-118 dBm	-121 dBm	
10 GHz to 24 GHz	-116 dBm	-121 dBm	
24 GHz to 30 GHz	-107 dBm	-112 dBm	
30 GHz to 40 GHz	-102 dBm	-108 dBm	
40 GHz to 45 GHz	-99 dBm	-106 dBm	
45 GHz to 50 GHz	-97 dBm	-104 dBm	
50 GHz to 60 GHz	-97 dBm	-104 dBm	
60 GHz to 67 GHz	-92 dBm	-103 dBm	

67 GHz to 70 GHz	-77 dBm		-84 dBm
70 GHz to 75 GHz	-81 dBm		-87 dBm
75 GHz to 80 GHz	-91 dBm		-97 dBm
80 GHz to 100 GHz	-94 dBm		-100 dBm
100 GHz to 110 GHz	-95 dBm		-100 dBm

Table 4. Test Port Damage Level

Frequency	1.0mm Test Port	1.85mm Test Port	Waveguide Port
10 MHz to 110 GHz	27 dBm	27 dBm	27 dBm

Table 5 Option H08 & H11 Rear Panel Connectors (typical)

IF Connectors	A, R1, R2, B (BNC Connectors)
IF Connector Input Frequency	8 1/3 MHz
Nominal Input Impedance at IF Inputs	50 Ω
RF Damage Level to IF Connector Inputs	-20.0 dBm
DC Damage Level to IF Connector Inputs	25 volts
0.1 dB Compression Point at IF Inputs	-27.0 dBm
Pulse Input Connectors ¹	A, R1, R2, B (BNC Connectors)
Nominal Input Impedance at Pulse Inputs	1 Kohm
Minimum IF Gate Width	20 ns for less than 1 dB deviation from theoretical performance ² .
DC Damage Level to Pulse Connector Inputs	5.5 volts

Drive Voltage	TTL (0, +5.0) Volts
Rear Panel LO Power Test Port Frequency (see 836x H11 Specs for Test Port Frequencies up to 67 GHz)	
67 GHz to 110 GHz ³	-7 to 13 dBm
Rear Panel RF Power - Test Port Frequencies (see 836x H11 Specs for Test Port Frequencies up to 67 GHz)	
67 GHz to 76 GHz ⁴	-4 to 10 dBm
76 GHz to 96 GHz ⁴	+1 to 5 dBm
96 GHz to 110 GHz ⁴	+5 to 1 dBm

1 Pulse input connectors are operational only with Option H08 (Pulse Measurement Capability) enabled.

2 Based on deviation from signal reduction equation: Signal Reduction (dB) = $20\log_{10}(\text{Duty_cycle}) = 20\log_{10}(\text{pulse_width/period})$.
Measured at Pulse Repetition Frequency (PFR) of 1 MHz.


3 For rear panel LO port frequency, divide by 8

4 For rear panel RF port frequency, divide by 6

Note: Typical system performance for front panel jumpers is not provided for the N5250A.

Test Set Block Diagram


N5250A - Standard Network Analyzer

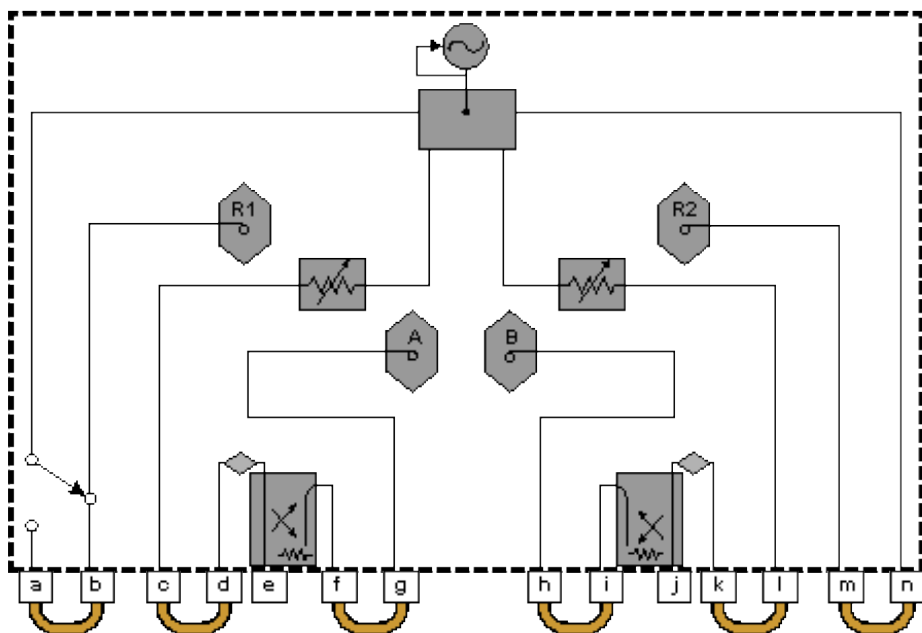

Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

Test Set with Option 016 Block Diagram

N5250A - Option 016 Receiver Attenuators Network Analyzer

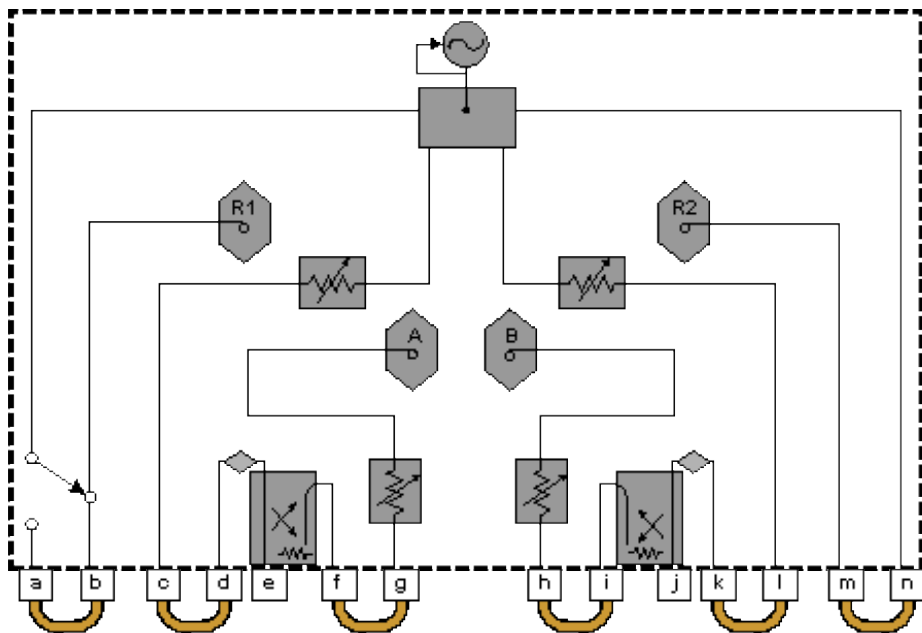

Item	Description	Item	Description
a	SOURCE OUT	h	RCVR B IN
b	RCVR R1 IN	i	CPLR ARM
c	SOURCE OUT	j	PORT 2
d	CPLR THRU	k	CPLR THRU
e	PORT 1	l	SOURCE OUT
f	CPLR ARM	m	RCVR R2 IN
g	RCVR A IN	n	SOURCE OUT

Glossary

[A](#) [B](#) [C](#) [D](#) [E](#) [F](#) [G](#) [H](#) [I](#) [J](#) [K](#) [L](#) [M](#)
[N](#) [O](#) [P](#) [Q](#) [R](#) [S](#) [T](#) [U](#) [V](#) [W](#) [X](#) [Y](#) [Z](#)

12-Term Error Correction See [Error Correction, 12-Term](#).

1-Port Device A device with a single connector or path to the device's circuitry. Examples include an oscillator and a load.

2-Port Calibration, Full See [Error Correction, 12-Term](#).

2-Port Device A device with two connectors or other paths to the device's circuitry. Examples include filters, SAW devices, attenuators, matching pads, and amplifiers.

3-Term Error Correction See [Error Correction, 3-Term](#).

A

Active Channel The highlighted channel affected by front panel functions.

Active Function Readout The area of a display screen where the active function and its state are displayed. The active function is the one that was completed by the last key selection or remote programming command.

Active Marker The marker on a trace that can be repositioned either by front panel controls or by programming commands.

Active Trace A trace that is being swept (updated) with incoming signal information.

ADC Analog to Digital Converter

Address The identification (represented by a name, label, or number) for a register, location in storage, or any other data source or destination. Examples are the location of a station in a communications network, or a device on the GP-IB.

ADM Add-Drop Multiplexer

Admittance (Y) The inverse of an impedance (i.e. the ratio of current to voltage). Complex admittances take the form $Y = G + jB(t)$.

ALC Automatic Level Control. See [Automatic Gain Control](#).

AM Amplitude Modulation

AM Group Delay A technique for the measurement of group delay through a device which utilizes an amplitude modulated (AM) source. Note: The actual delay of the modulation envelope is measured directly with an external scalar detector. Devices that distort the amplitude of a signal cannot be measured. These include amplifiers with automatic gain control (AGC) and devices subject to saturation or power limiting.

Amplitude Modulation The process, or result of the process, of varying the amplitude of a carrier signal. The resulting modulated carrier contains information that can be recovered by demodulation. See also [Modulation](#).

Analog The general class of devices or circuits in which the output varies as a continuous function of the input.

Annotation The labeling of specific information on the display (such as frequency or power).

ANSI American National Standards Institute: A national membership organization (open to manufacturers, organizations, users, and communications carriers) that approves standards, accredits standards development groups and certificate programs, and represents and coordinates US interests in non-treaty and non-government

standards bodies.

Aperture The frequency span of the network analyzer used for calculating group delay. The narrower the aperture, the finer the resolution of the group delay variations, but noise is reduced by increasing the aperture.

Array A set of numbers or characters that represents any given function.

ASCII American Standard Code for Information Interchange

Attenuation Denotes a reduction in signal amplitude. The difference between transmitted and received power due to loss through equipment, lines, or other transmission devices; usually expressed in decibels.

Attenuator An RF or microwave device used to reduce the power level of a signal by precise, incremental amounts over its entire frequency range.

Automatic Calibration System AutoCal: Feature offered on Rohde&Schwarz network analyzers.

Automatic Gain Control (AGC) A circuit used in amplifiers and other active devices to keep its RF power level constant as other parameters change, such as frequency. Synonym: Automatic Leveling Control (ALC)

Autoscale An analyzer feature that evaluates waveforms and adjusts controls to stable and enhance the display.

AUX Auxiliary; refers to rear-panel input connector.

Averaging A noise reduction technique that computes each data point based on consecutive sweeps and weighted by a user-specified averaging factor. Each new sweep is averaged into the trace until the total number of sweeps is equal to the averaging factor.

B

B/R The ratio of data sampled at B to the data sampled at R.

Band Pass A range of frequencies that are passed through a device, such as a filter. Frequencies not within the band pass are limited or attenuated. See also [Cutoff Frequency](#).

Bandwidth (BW) The difference between the frequencies of a continuous frequency band within which performance of a device falls within specifications.

Bandwidth Limit The condition prevailing when the system bandwidth is exceeded and signal distortion occurs beyond specifications.

Bandwidth Selectivity A measure of a filter's ability to resolve signals unequal in amplitude. It is the ratio of the 60 dB bandwidth to the 3 dB bandwidth for a given resolution filter (IF). Bandwidth selectivity tells us how steep the filter skirts are. Bandwidth selectivity is sometimes called shape factor.

Binary A method of representing numbers in a scale of two (on or off, high-level or low-level, one or zero). A compact, fast format used to transfer information to and from the analyzer.

BMP Bit-Mapped

Brightness See [Color Brightness](#).

Broadband Device A device that operates over a very wide frequency range and exhibits only small variations in response over that range.

Buffer A storage device used when transmitting information to compensate for a difference in the rate of flow of information between two devices.

Burst Carrier A carrier that is periodically turned off and on. A burst carrier may or may not be modulated.

BUS Basic Utility System

Bus One or more conductors used as a path to deliver transmitted information from any of several sources to any of several destinations.

BW Bandwidth

Byte Eight bits of data representing one character processed as a unit.

C

CAD Computer Aided Design

CAE Computer Aided Engineering

Calibration In HP instrumentation, the process of periodically (usually annually) verifying an instrument is performing to specifications. A calibration certificate is awarded after verification.

In network analyzers, the process of removing systematic errors from measurements. See [Error Correction](#).

Calibration Kit Hardware and software required to perform error correction on a network analyzer for a specific measurement and/or test set.

Calibration, 2-Port See [Error Correction, 12-Term](#).

Calibration, Blackburn Calibrations of transmission path with corrected source match involving 15 calibration terms. Synonym: 15-term error correction

Calibration, Frequency Response The simplest error correction procedure to perform, but only corrects for a few of the twelve possible systematic error terms. Frequency response corrections can be made for reflection measurements, transmission measurements, and isolation measurements.

Calibration, Interpolation A user selectable network analyzer feature that calculates (interpolates) new error correction terms from existing terms when there is a change in network analyzer parameters, such as IF bandwidth, power, or sweep time. The resulting error correction is not as accurate as completing a full 2-port calibration.

Calibration, Port Extension See [Port Extension](#).

Calibration, Reference Plane See [Reference Plane](#).

Calibration, Set Z Sets the system impedance, usually 50 or 75 ohms.

Calibration, SOLT A calibration using four known standards: Short-Open-Load-Through. Also known as a full two-port calibration and 12-term error correction. See also [Error Correction](#).

Calibration, TRL and LRM A calibration used in environments where the DUT cannot be connected directly to the network analyzer ports, (MMIC, microstrip, beam-lead diodes etc.). Thru-Reflect-Line (TRL) and M (Match) standards are fabricated and used because known high-quality standards are not readily available. The requirements for characterizing these standards are less stringent, but the calibration is not as accurate as the traditional full two-port calibration using S-O-L-T standards. The terms are used interchangeably (TRL, LRL, LRM etc.) but they all refer to the same basic calibration method.

Characteristic Impedance The impedance looking into the end of an infinitely long lossless transmission line.

Color Brightness A measure of the intensity (brightness) of a color.

Command A set of instructions that are translated into instrument actions. The actions are usually made up of individual steps that together can execute an operation.

Continuous Sweep Mode The analyzer condition where traces are automatically updated each time trigger conditions are met.

Controller A device capable of specifying the talker and listeners for an information transfer. An external computer connected to an instrument to control its operation.

Corrected Measurements made after performing error correction.

Coupler See [Directional Coupler](#).

CPU Central Processing Unit

Crosstalk The occurrence of a signal at one port of a device being affected by a signal in any other path. Isolation is the measurement of crosstalk.

Cursor An electronically generated pointer that moves across the display to manipulate controls.

Cutoff Frequency In filters, the frequency at which attenuation is 3dB below the band pass signal level, known as the 3dB points.

CW Continuous wave: A single frequency (rather than a swept frequency).

D

DAC Digital to Analog Converter

dB Decibel: a relative unit of measure. The ratio in dB is given by: $10 \log_{10} (P_1/P_2)$ where P_1 and P_2 are the measured powers. The dB is preferred instead of arithmetic ratios or percentages because when components are connected in series, their effect on power, expressed in dB, may be arithmetically added and subtracted. For example, if a 3dB attenuator is connected to a 10dB amplifier, the net gain of the two components is (-3dB + 10dB = +7dB).

dBm Absolute unit of measure in decibels: 0dBm = 1 mW. The conventions of the dB (adding and subtracting) continue to apply.

DBMS Database Management System

DC Direct Current

Default A known set of conditions used in the absence of user-defined conditions.

Delay See [Group Delay](#).

Demodulation The process of recovering from a modulated carrier, information in the form of a signal having essentially the same characteristics as the original modulating signal. Recovery of the modulating signal accomplished by signal detection.

Detection The process of demodulating signal carriers. There are two basic ways of providing signal detection in network analyzers: Diode detectors (used in broadband applications) and heterodyning, (used in narrowband applications).

Detector, Diode A device used to convert a RF signal to a proportional DC level. If the signal is amplitude modulated, the diode strips the RF carrier signal from the modulation. Many sources used with scalar analyzers are amplitude modulated with a 27.778 kHz signal and then detected in the network analyzer. Phase information on the signal carrier is lost in diode detection.

Deviation from Linear Phase Linear phase refers to the nature of the phase shift of a signal through a device. The phase is linear if a plot of phase shift versus frequency is a straight line using linear scales. Deviation from linear phase causes signal distortion.

Digital Pertaining to the class of devices or circuits in which the output varies in discrete steps.

Digital Demodulation Describes a technique of extracting the information used to modulate a signal. Digital signal processing algorithms are used on the signal after it has been converted from an analog to a digital form (digitized).

Dimension To specify the size of an array. The number of array rows or columns.

Directivity In a 3-port directional coupler, the ratio of the power present at the auxiliary port when the signal is traveling in the forward direction to the power present at the auxiliary port when the same signal is traveling in the reverse direction.

Directional Coupler A 3-port device typically used for separately sampling the backward (reflected) wave in a

transmission line.

Disk A circular, magnetic storage medium.

Display Noun: See [Screen](#).

Verb: To show annotation and measurement data on the display.

Display Detector Mode The manner in which analog, video information is processed prior to being digitized and stored in memory.

Display Dynamic Accuracy The amplitude uncertainty, usually in dB, over the display dynamic range.

Display Dynamic Range The amplitude range, in dB, over which the display dynamic accuracy applies.

Display Formats Graphical formats for displaying measurement data. These include single channel, overlay (multiple traces on one graticule), split (each trace on separate graticules).

Display Modes The ways in which measurement data can be presented graphically. On a network analyzer, the choices are Cartesian/rectilinear (XY plot with log or linear magnitude, phase, group delay, SWR, real and imaginary, and dBV, dBmV and dBuV), polar (magnitude and angle), magnitude and phase, and Smith chart. Not all display modes are available on all network analyzers. In addition, displays can present this information in various combinations of traces. Common modes are dual, (the ability to display more than one trace, usually over the same frequency range), and alternate, (the ability to display more than one trace, each with different frequency range and type).

Display Phase Dynamic Accuracy The phase measurement uncertainty, usually in degrees, for measurements whose units are in degrees.

Display Points The total number of measurement points made in a single measurement. The points can be in units of frequency, power, or time. The number of points often dictates measurement speed, resolution, and aperture.

Display Trace Noise, Magnitude The amplitude uncertainty of the trace, in dB, due to random noise in the test system.

Display Trace Noise, Phase The phase uncertainty of the trace, in degrees, due to random noise in the test system.

Display Type The type of display screen built into the analyzer. Data can be displayed as a raster drawing (a computer-like dot map) or as a vector drawing (lines drawn on the display). Color and display standard can also be specified as monochrome (single color), or color (two or more colors). The format standard may also be specified, such as VGA or SVGA, for IBM-compatible personal computers.

Distortion Deterioration of a signal's quality due to the nonlinear characteristics of a device or system transfer function. Distortion is measured as a combination of the changes in amplitude, frequency and phase of signal at the output of a device or system as compared to the signal at the input.

Drift The slow change in signal frequency.

DSP Digital Signal Processing

DUT Device Under Test

DVM Digital Volt Meter

Dynamic Range In a receiver, the range of signal levels, from minimum to maximum, that can be reliably measured simultaneously. Dynamic range allows small signals to be measured in the presence of large signals. Source power and receiver compression usually limits the maximum boundary to dynamic range. Receiver residual responses and noise floor usually limit the minimum power boundary.

E

ECal See [Electronic Calibration](#).

Electrical Delay A simulated variable length of lossless transmission line, added to or subtracted from a receiver input, to compensate for interconnecting cables. The firmware equivalent of mechanical or analog "line stretchers" in other network analyzers.

Electronic Calibration (ECal) A calibration system for electronic calibration of RF and microwave vector network analyzers. The electronic calibration system creates a twelve-term, two-port error model and then provides a confidence check of the calibration. The Ecal system consists of a repeatable, variable-impedance, solid-state calibration standard and a mainframe control unit which interfaces with the 8510, 8720 series, and the 8753 network analyzers or a USB module which interfaces with the PNA series network analyzers.

EMC Electro-Magnetic Compatibility

EMI Electro-Magnetic Interference: Unintentional interfering signals generated within or external to electronic equipment. Typical sources could be power-line transients, noise from switching-type power supplies and/or spurious radiation from oscillators. EMI is suppressed with power-line filtering, shielding, etc.

Engage To activate a function.

Enter The process of inputting information.

EPROM Electronically Programmable, Read-Only Memory

Error Correction In network analyzers, a process that removes or reduces systematic (repeatable) measurement errors by measuring known standards from a calibration kit. Synonym: measurement calibration

Error Correction, 3-Term Used to remove systematic measurement errors on a device with one port, such as a load.

Error Correction, 12-Term Correction for a two port device using six parameters:

Directivity

Source match

Load match

Reflection frequency response

Transmission frequency response

Isolation

To completely characterize a two-port device, these six parameters must be characterized in the forward and reverse directions, making a total of 12 terms. The user usually has the option of omitting isolation from the correction process. Synonym: Full two-port error correction

Error Correction, 1-Port Corrects a test set for port 1 or port 2 directivity, frequency response, and source match errors. The process requires three known standard terminations, for example, open, short, and load.

Error Message A message on a display that indicates an error condition. Missing or failed hardware, improper user operation, or other conditions that require additional attention can cause an error condition. Generally, the requested action or operation cannot be completed until the condition is resolved.

ESD Electro Static Discharge

Ethernet A network that adheres to the IEEE 802.3 Local Area Network standard.

Ethernet address A hexadecimal number which is used to identify a machine on a network. Each analyzer is assigned a unique Ethernet address at the factory and it is stored in the analyzer's ROM.

External trigger signal A TTL signal that is input to an analyzer and initiates a measurement sweep or similar event, making the measurements synchronous with the external triggering source.

F

Filter A passive device that allows some frequencies to pass and attenuates others, depending on the type and specifications. A high-pass filter passes frequencies above the cutoff frequency, a low-pass filter passes frequencies below the cutoff frequency, and a band-pass filter passes frequencies between two specific frequencies.

Firmware An assembly made up of hardware and instruction code. The hardware and instruction code is integrated and forms a functional set that cannot be altered during normal operation. The instruction code, permanently installed in the circuitry of the instrument, is classified as ROM (read only memory). The firmware determines the operating characteristics of the instrument or equipment.

Flatness The amplitude and phase response of a device under test (DUT), a signal source, a receiver, or a combination of these. See also [Frequency Response](#).

FM Frequency Modulation

Frequency The number of periodic oscillations, vibrations, or waves per unit of time, usually expressed in cycles per second, or Hertz (Hz).

Frequency Accuracy The uncertainty with which the frequency of a signal or spectral component is indicated, either in an absolute sense or relative to another signal or spectral component. Absolute and relative frequency accuracies are specified independently.

Frequency Range The range of frequencies over which a device or instrument performance is specified.

Frequency Resolution The ability of a network analyzer to measure device characteristics at closely spaced frequencies and display them separately. Resolution of equal amplitude responses is determined by IF bandwidth. Resolution of unequal amplitude responses is determined by IF bandwidth and bandwidth selectivity.

Frequency Response The peak-to-peak variation in the displayed amplitude response over a specified center frequency range. Frequency response is typically specified in terms of dB, relative to the value midway between the extremes.

Frequency Span The magnitude of the displayed frequency component. Span is represented by the horizontal axis of the display. Generally, frequency span is given as the total span across the full display. Some analyzers represent frequency span (scan width) as a per-division value.

Frequency Stability The ability of a frequency component to remain unchanged in frequency or amplitude over short and long-term periods of time. Stability refers to an oscillator's ability to remain fixed at a particular frequency over time.

Front Panel Key Keys that are located on the front panel of an instrument. The key labels identify the function the key activities. Numeric keys and step keys are two examples of front panel keys.

Full 2-Port Calibration See [Error Correction, 12-Term](#).

Function The action or purpose that a specific item is intended to perform or serve. The network analyzer contains functions that can be executed via front panel key selections, or through programming commands. The characteristics of these functions are determined by the firmware in the instrument. In some cases, a DLP (downloadable program) execution of a function allows you to execute the function from front panel key selections.

Fundamental Frequency In any waveform, the lowest frequency component; all other components are harmonics. A pure sinusoid has only one component, the fundamental.

G

Gb Gigabit

GB Gigabyte

GHz Gigahertz

GIF Graphics Interchange Format - Standard graphic format to store bitmapped graphics files.

Giga Prefix for one billion.

GP I/O General Purpose Input / Output; a connector usually on the back of an instrument that allows communication with other test equipment, external test sets, switches, and computers that enable the instrument to be triggered or to trigger external equipment. An example is a foot switch that continues or cycles a measurement, allowing the operator to use both hands on the test hardware.

GPIB General Purpose Interface Bus - IEEE 488 bus is interconnect bus and protocol, allows linking of instruments and computer.

Graticule (or Grid) Enclosed area where waveform is displayed on instrument. Tick marks, on frame or axis, are a scaling aid for making visual measurements.

Group Delay A measure of the transit time of a signal through a DUT versus frequency. Group delay can be calculated by differentiating the DUT's insertion-phase response with respect to frequency. See also [AM Group Delay](#) and [Deviation from Linear Phase](#).

GUI Graphical User Interface

H

Hardcopy Paper copy of data.

Hardkey A front-panel key, which engages a single analyzer function or presents a single menu of softkeys.

Horizontal Reference See [Reference Level](#).

Horizontal Resolution The analyzer's ability to take closely spaced horizontal data points over the full sweep.

Host Computer A computer or device on a network that provides end users with services such as computation and database access and that usually performs network control functions.

Host Name A unique name that is used to identify each host machine on a network. The host name is directly linked to, and can usually be used in place of, the IP address. The user or the system administrator usually creates the host name.

HP Hewlett-Packard Company

HPGL Hewlett-Packard Graphics Language

HP-IB Hewlett-Packard Interface Bus. A parallel interface that allows "daisy chaining" of more than one device to a port on a computer or instrument. Interface protocol is defined in IEEE 488.2; equivalent to the industry standard GPIB.

HTTP HyperText Transfer Protocol: Used to carry World Wide Web (WWW) traffic.

Hue The dimension of color referred to a scale of perceptions ranging from red through yellow, green, and blue, and back to red. A particular gradation of color, tint, shade.

I

I/O Input/Output

I/O Path Input/Output Path

IEEE Institute of Electrical and Electronic Engineers

IF Intermediate Frequency: the frequency at which a signal is processed after mixing.

Impedance The ratio of voltage to current at a port of a circuit, expressed in ohms.

Initialize The process that assigns information locations to a disk to prepare the magnetic media to accept files.

Input A path intended for putting a signal into an instrument.

Most network analyzers have either 3 (labeled A, B, and R) or 4 inputs (labeled A, B, R1, and R2). Inputs are not the same as channels.

Input Attenuator An attenuator between the input connector and the first mixer of a spectrum analyzer (also called an RF attenuator). The input attenuator is used to adjust the signal level incident to the first mixer, and to prevent gain compression due to high-level or broadband signals. It is also used to set the dynamic range by controlling the degree of internally-generated distortion. For some analyzers, changing the input attenuator settings changes the vertical position of the signal on the display, which then changes the reference level accordingly. In Agilent microprocessor-controlled analyzers, the IF gain is changed to compensate for changes in input attenuator settings. Because of this, the signals remain stationary on the display, and the reference level is not changed.

Insertion Loss The difference between the power measured before and after the insertion of a device. The attenuation between the input and output of a device.

Intensity Brightness; emitting or reflecting light; luminosity.

Interface A connection that allows a common communication link between two or more instruments.

Intermodulation Distortion Undesired frequency components resulting from the interaction of two or more spectral components passing through a device having nonlinear behavior, such as a mixer or an amplifier. The undesired components are related to the fundamental components by sums and differences of the fundamentals and various harmonics. The algorithm is: $f_1 \pm f_2$, $2f_1 \pm f_2$, $2f_2 \pm f_1$, $3f_1 \pm 2f_2$, and so on.

Internet The connection of two or more distinct networks. Often a gateway or router is used to make the connection.

Interpolate To determine a value of a signal between two adjacent points by a procedure or algorithm.

IP Internet Protocol

IP Address Internet protocol address: a unique number that is assigned to each device which is to be connected to a TCP/IP network. Before using an analyzer on a network, your network administrator will need to assign an IP address. An IP address consists of a 32-bit value presented in decimal dot notation: 4 octets (bytes) separated by a dot.

ISDN Integrated Services Digital Network: A standard digital service capability that features one or more circuit-switched communication channels capable of carrying digital voice, data, or image signals, a packet-switched channel for out-of-band signaling and control. In addition, ISDN provides a collection of standard and optional features that support information productivity for the user, providing higher-speed Internet access than analog systems.

ISO International Standards Organization

Isolation A specification or measure of the immunity that one signal has to being affected by another adjacent signal. The occurrence is known as crosstalk.

Isolator An RF device used for providing isolation between paths and components. Made from a 3-port circulator, the third port being terminated in a 50ohm load.

J

K

Kilo Prefix for one thousand.

KB Kilobyte

Kb/s Kilobytes per second

L

LAN Local Area Network

LANS Local Area Network System

LCD Liquid Crystal Display

LED Light Emitting Diode

LIF Logical Interchange Format (used for older HP disk drives/computers)

Limit Lines Lines input by the user that overlay the analyzer's measurement data to allow automatic detection of data that is out of the acceptable range. Pass/Fail annotation, audio alarms, or electronic output can be triggered to notify the operator or on-line computer program of the over-limit condition.

Limit-Line File The user-memory file that contains the limit-line table entries.

Limit-Line Table The line segments of a limit line are stored in the limit-line table. The table can be recalled to edit the line segments, then restored in the limit-line file.

Linear Device A device in which the output is continuously proportional to the input.

LO Local Oscillator. In a superheterodyne system, the LO is mixed with the received signal to produce a sum or difference equal to the intermediate frequency (IF) of the receiver.

LO Feedthrough The response that in a superheterodyne system when the first local oscillator frequency is equal to the first IF.

Load A one port microwave device used to terminate a path in its characteristic impedance.

Load Match A measure of how close the device's terminating load impedance is to the ideal transmission line impedance. Match is usually measured as return loss or standing wave ratio (SWR) of the load.

Local Lock Out A condition or command that prevents analyzer front-panel entries (and disables the Local key).

Local Operation To operate manually from the front panel.

Log Logarithm

Log Display The display mode in which vertical deflection is a logarithmic function of the input signal amplitude. Log display is also called logarithmic display. The display calibration is set by selecting the value of the reference level position and scale factor in dB per division.

LRM Line-Reflect-Match. See [Calibration, TRL, and LRM](#).

M

Magnitude The amplitude of a signal measured in its characteristic impedance without regard to phase. See also [Scalar](#).

Marker A graphical symbol along a display trace that is annotated with measurement characteristics of that specific data point.

Marker Functions Mathematical or statistical computation on the data of one or more markers to provide the operator more information. For example, the marker delta function calculates and displays the difference between two markers.

Maximum Input Level The maximum signal power that may be safely applied to the input of an analyzer. The maximum input level is typically 1 W (+30 dBm) for Agilent spectrum analyzers.

MB Megabyte

Measurement Uncertainty The quantified amount of error in a measurement situation. Calibrations are intended to reduce the amount of uncertainty. The following are sources of measurement errors that lead to uncertainty:

- Systematic errors (imperfections in calibration standards, connectors, cables, and instrumentation)
- Random errors (noise, connector repeatability)
- Drift (source and instrumentation)

Mega Prefix for one million.

Memory A storage medium, device, or recording medium into which data can be stored and held until some later time, and from which the entire original data may be retrieved.

Memory Card A small memory device shaped like a credit card that can store data or programs.

Menu The analyzer functions that appear on the display and are selected by pressing front panel keys. These selections may invoke a series of other related functions that establish groups called menus.

MHz Megahertz

milli Prefix for one-thousandth.

Modem Modulator/Demodulator

Modulation The process, or the result of the process, of varying a characteristic of a carrier signal with an information-bearing signal, causing the carrier to contain the information. See [AM](#) and [FM](#).

Monitor Any external display.

Monochrome Having only one color (chromaticity).

ms Millisecond

mW Milliwatt: one thousandth of a watt

Multisync A type of monitor that can synchronize its horizontal sweep to various frequencies within a specified range.

N

Narrowband In network analysis, the frequency resolution of the analyzer's receiver that is sufficiently narrow to resolve the magnitude and phase characteristics of narrowband devices. The reduced receiver bandwidth usually decreases the noise floor of the receiver, providing more measurement amplitude range.

Narrowband Device A device whose transfer characteristics are intended to operate over a very narrow frequency range and are designed to provide well-defined amplitude responses in that range, such as a band pass filter.

Network Analysis The characterization of a device, circuit, or system derived by comparing a signal input going into the device to a signal or signals coming out from the device.

NIST National Institute of Standards and Technology

Nit The unit of luminance (photometric brightness) equal to one candela per square meter.

Noise Random variations of unwanted or disturbing energy in a communications system from man-made and natural sources that affects or distorts the information carried by the signal. See also [Signal-to-Noise Ratio](#).

Noise Figure (F): For a two-port device, a measure of how the noise generated inside the device degrades the signal-to-noise ratio of a signal passing through the device at 290 degrees, usually expressed in dB.

Noise Floor The analyzer's internal displayed noise. The noise level often limits how small a signal magnitude can be measured. In network analysis, noise floor is measured with the test ports terminated in loads, full two-port error correction, 10 Hz IF bandwidth, maximum test port power, and no averaging during the test.

Non-Insertable Devices In measurement calibration, a device that cannot be substituted for a [Zero-Length Through Path](#). It has the same type and sex connectors on each port, or a different type of connector on each port.

Nonvolatile Memory Memory data that is retained in the absence of an ac power source. This memory is typically retained with a battery. Refer also to battery-backed RAM.

Normalize To subtract one trace from another to eliminate calibration data errors or to obtain relative information.

O

Offset To move or set off a determined amount. Used in instruments for offsetting frequencies, limits, delay, loss, impedance, etc.

Output Attenuation The ability to attenuate the signal, the source, in order to control its power level.

P

PC Personal Computer

PDF Portable Document Format (used on the Web)

Parser, Command Reads program messages from the input queue of a device in the order they were received from the controller. The parser determines what actions the analyzer should take. One of the most important functions of the command parser is to determine the position of a program message in the analyzer SCPI command tree. When the command parser is reset, the next element it receives is expected to arise from the base of the analyzer command tree.

Peak Search A function on an analyzer that searches for the largest response and places a marker on it.

Phase The fractional part of a cycle through which an oscillation has advanced, measured from an arbitrary starting point; usually measured in radians or degrees. In network analysis, the phase response of the device under test is the change in phase as a function of frequency between the input stimulus and the measured response.

Port The physical input or output connection of an instrument or device.

Port Extension Redefining the reference plane to other than that established at calibration. A new reference plane is defined in seconds of delay from the test set port.

Positive Peak The maximum, instantaneous value of an incoming signal.

Postscript (.ps files) Stores bitmapped graphics files in an encapsulated format for direct use by postscript printers.

Power, Max Input The upper limit to input power for which the specifications apply. Some specifications may have different levels of maximum inputs. For example, compression power maximum is usually higher than the harmonic distortion maximum.

Power, Safe Input The input power, usually in dBm, allowed without damaging the instrument.

Preset A pre-defined instrument state (that also runs an analyzer self-test). The action of pushing the Preset key.

Protocol A set of conventions that specify how information will be formatted and transmitted on a network, and how machines on a network will communicate.

Q

Q or Q Factor The ratio of energy stored to energy lost in a resonant circuit. High Q indicates a sharp resonance response over frequency.

Query Any analyzer programming command having the distinct function of returning a response. These commands may end with a question mark (?). Queried commands return information to the computer.

R

$r + jx$ Expression for complex impedance, where r represents the resistive portion and x represents the reactive portion.

R Channel Reference Channel

RAM Random Access Memory, or read-write memory: A storage area allowing access to any of its storage locations. Data can be written to or retrieved from RAM, but data storage is only temporary. When the power is removed, the information disappears. User-generated information appearing on a display is RAM data.

ROM Read Only Memory: A storage area that can be read only; it cannot be written to or altered by the user. In instruments, the storage area that contains the "brains" or operational programming; the firmware.

Receiver A circuit or system designed for the reception and/or measurement of signals in a specified frequency spectrum.

Receiver Dynamic Range See [Dynamic Range](#).

Reference Level An instrument function that allows the user to set the amplitude value at the reference position. On network analyzers, the reference position is also selectable. On some spectrum analyzers, the reference position is fixed at the top of the display.

Reference Plane The electrical location at which a network analyzer assumes the system connectors and fixturing ends and the DUT begins. The reference plane is set by using calibration standards with known electrical length. The closer the reference plane is to the device under test (DUT), the better the characterization of the device because of the elimination of test system uncertainties.

Reference Receiver In a network analyzer, the receiver that measures signals as they come out of the source, before they are incident on the test port and DUT. Typically, these signals are used to compare with the signal at the Test Port Receiver, to determine the affect that the DUT has on the signal. In a 2-port network analyzer, these are typically named 'R1' (port 1) and 'R2' (port 2). [See a block diagram](#) of the receivers in your PNA.

Reflection The phenomenon in which a traveling wave strikes a discontinuity and returns to the original medium.

Reflection Coefficient The ratio of the reflected voltage to the incident voltage into a transmission line or circuit. If a transmission line is terminated in its characteristic impedance, the reflection coefficient is zero. If the line is shorted or open the coefficient is 1. See also [Return Loss](#) and [SWR](#).

Reflection Measurements Measurements that characterize the input and /or output behavior of the device under test (DUT). Measured as the ratio of the reflected signal to the incident signal as a function of frequency. Parameters are called return loss, reflection coefficient, impedance, and standing wave ratio (SWR), all as a function of frequency. See also [S-Parameters](#).

Remote A mode of operation where another device (or computer) controls an instrument via the HP-IB. In this mode, the instrument front panel keys are disabled. Front panel operation is called local operation.

Remote Programming The automatic operation of an instrument by a computer, usually through a HP-IB, LAN, or RS-232 link.

Resolution The ability of a receiver to resolve two signals.

Resolution Bandwidth The ability of a spectrum analyzer to display adjacent responses discretely (Hertz, Hertz decibel down). This term is used to identify the width of the resolution bandwidth filter of a spectrum analyzer at some level below the minimum insertion loss point (maximum deflection' point on the display). Typically, it is the 3 dB resolution bandwidth that is specified, but in some cases the 6 dB resolution bandwidth is specified.

Return Loss The amount of dB that the reflected signal is below the incident signal. If zero signal is reflected, the impedance of the device is equal to the characteristic impedance of the transmission system, and return loss is infinite. If the entire incident signal is reflected, the return loss is zero. See also [S-Parameters](#), [Reflection Coefficient](#), and [SWR](#).

Reverse Measurement The measurement of a device from output to input.

RF Radio Frequency (from approximately 50 kHz to approximately 3 GHz). Usually referred to whenever a signal is radiated through the air.

ROM Read Only Memory

S

S/N Signal-to-Noise Ratio

Sampler An electronic component that captures the signal level and phase across a known impedance at a uniform rate. In Network Analyzers, this sampling rate must be sufficiently high and precisely timed to make accurate measurements. Network analyzers typically have three or four samplers or mixers.

Sampler Bounce The leakage or crosstalk between a network analyzer's samplers. Delay in this crosstalk caused by leakage transmission propagation, give the interference its "bounce" appearance. Sampler bounce causes an increase in the noise level of the affected channel, reducing the sensitivity of the analyzer.

Saturation The degree of color purity, on a scale from white to pure color.

Scalar A quantity that has magnitude but no phase. A network analyzer capable of measuring only magnitude.

Scale Factor The display vertical axis calibration in terms of units per division.

SCPI Standard Commands for Programmable Instruments

Screen The physical surface of the CRT or flat panel upon which the measurement results, setup information, softkey definitions, and other instrument communication is presented.

Self-Test A group of tests performed at power-up (or at preset) that verify proper instrument operation.

Sensitivity The minimum input signal required to produce a specified output signal having a specified signal-to-noise ratio, or other specified criteria.

On a spectrum analyzer, the level of the smallest sinusoid that can be observed, usually under optimized conditions of minimum resolution bandwidth, 0 dB input attenuation, and minimum video bandwidth.

The normalized change in YIG component's center frequency resulting from a change in tuning coil current, specified in MHz/mA.

Serial Prefix The five-character prefix that begins an instrument serial number; used to represent versions of firmware or hardware changes that have occurred.

Server A device that is configured to provide a service to other devices on a network, such as shared access to a file system or printer.

Signal-to-Noise Ratio SNR: The ratio of the amplitude of the desired signal to the amplitude of noise signals, usually expressed in dB and in terms of peak values for impulse noise and root-mean-square values for random noise.

Single Sweep Mode The spectrum analyzer sweeps once when trigger conditions are met. Each sweep is initiated

by pressing an appropriate front panel key, or by sending a programming command.

Small Signal Gain Compression A situation when the input signal's measured amplitude is less than its actual level due to overloading of the network analyzer's input mixer; the analyzer is operating nonlinearly. For broadband analyzer detectors, a signal other than the one under test can put the analyzer into this gain compressed mode, thereby making even lower level signals appear at a lower level than actual. The broadband mode measures all the power incident to the analyzer, not just the signals at the frequency of interest.

Smith Chart A graphical mapping of the complex reflection coefficient into normalized complex impedance. Circles on the chart represent constant resistance and radiating lines orthogonal to the circles represent constant reactance. The center of the chart represents the characteristic impedance of the transmission system. Any point on the chart defines a single complex impedance. A line on the chart represents changing impedance over frequency.

SOLT Short-Open-Load-Through calibration. See also [Calibration, SOLT](#).

Source A device that supplies signal power; a sweep oscillator or synthesized sweeper.

Source Amplitude Accuracy The amplitude uncertainty, in dB, of the source power readout.

Source Amplitude Flatness The amplitude flatness, in dB, of the source power over the frequency range specified.

Source Frequency Resolution The smallest unit of frequency which can be set and/or measured, in Hz.

Source Frequency Time Base Accuracy A measure of the analyzer's frequency stability measured in parts per million (ppm, or 1 part in 10E6). For example, a stability of ± 5.0 ppm means that an analyzer will measure 1 MHz to an accuracy of $\pm 5 \times 10^{-6} \times 10^6 \text{ Hz} = \pm 5 \text{ Hz}$.

Source Frequency Time Base Stability A measure of the analyzer's time base accuracy over time and temperature. Typically the time base accuracy will be specified for 1 year. A typical temperature frequency stability is ± 10 ppm for $25^\circ\text{C} \pm 50^\circ\text{C}$.

Source Harmonics The level of harmonics generated by the analyzer's signal source, in dBc from the fundamental.

Source Match A measure of how close the signal source impedance is to the ideal transmission line impedance of the test system. Match is usually measured as return loss or standing wave ratio (SWR) of the source.

Span The stop frequency minus the start frequency. The span setting determines the horizontal-axis scale of the analyzer display.

Span Accuracy The uncertainty of the indicated frequency separation of any two signals on the display.

S-Parameters (Scattering Parameters) A convention used to characterize the way a device modifies signal flow using a network analyzer. A two port device has four S-parameters: forward transmission (S21), reverse transmission (S12), forward reflection (S11), and reverse reflection (S22).

Stop/Start Frequency Terms used in association with the stop and start points of the frequency measurement range. Together they determine the span of the measurement range.

Storage States The number of settings, programs, traces, and other parameters available to be saved, cataloged, and recalled at any one time.

Storage, Disk An internal or external digital storage disk for saving test data, instrument settings, IBASIC programs, and other measurement parameters. Storage formats include MS-DOS (R) and HPs standard LIF with binary, PCX, HP-GL, or ASCII data formats.

Structural Return Loss Poor return loss in cable due to a periodic fault such as a periodic dent caused by dropping the cable spool or by the cable pulling process during manufacture.

Supplemental Characteristics Typical but non-warranted performance parameters, denoted as "typical", "nominal" or "approximate".

Sweep The ability of the source to provide a specified signal level over a specified frequency range in a specified time period. Also see [Sweep Mode](#) and [Sweep Type](#).

In data processing mode, a series of consecutive data point measurements, taken over a sequence of stimulus values.

Sweep Mode The way in which a sweep is initiated or selected, e.g., single, continuous, alternate, or chopped.

Sweep Type The method of sweeping the source, e.g., linear, log, or frequency step.

Sweeper A signal source that outputs a signal that varies continuously in frequency.

SWR Standing Wave Ratio, calculated as $(1 + \pi) / (1 - \pi)$ where π is the reflection coefficient.

Sync Synchronization, or Synchronized

Syntax The grammar rules that specify how commands must be structured for an operating system, programming language, or applications.

System Dynamic Range The difference between the maximum receiver input level and the receiver's noise floor. System dynamic range applies to transmission measurements only, since reflection measurements are limited by directivity.

T

T/R See [Transmission/Reflection](#).

Termination A load connected to a transmission line or other device.

Test Limit The acceptable result levels for any given measurement.

Test Port See [Port](#).

Test Port Receiver In a network analyzer, the receiver directly behind the test ports, used to measure the signal as it is reflected off, or transmitted through, the DUT. This signal is typically compared with the signal at the [Reference Receiver](#) to determine how the DUT affects a signal. In a 2-port network analyzer, these are typically named 'A' (port 1) and 'B' (port 2). [See a block diagram](#) of the receivers in your PNA.

Test Set The arrangement of hardware (switches, couplers, connectors and cables) that connect a test device input and output to the network analyzer's source and receiver to make s-parameter measurements.

Third Order Intercept TOI: The power input to a non-linear device that would cause third order distortion at the same power level. TOI is a measurement to determine the distortion characteristics of a mixer or receiver. The higher the value, the more immune the receiver to internal distortion.

Thru Through line: A calibration standard. See [Calibration, SOLT](#).

Tint A shade of color; hue.

Toggle To switch states, usually to change a function from on to off, or off to on.

TOM Thru-Open-Match: A Rohde&Schwarz term to describe a calibration method.

Trace A series of data points containing frequency and response information. The series of data points is often called an array. The number of traces is specific to the instrument.

Tracking The ability of the analyzer's receiver to tune to the source frequency over the measurement frequency range. Poor tracking results in amplitude and phase errors due to the receiver IF circuits attenuating and delaying the device under test output.

Transfer Function The ratio of the output signal to the stimulus signal, both as a function of frequency.

Transmission See [Transmission Measurements](#).

Transmission Intermodulation Spurious A measure of the capability of the transmitter to inhibit the generation of intermodulation distortion products. Intermodulation spurious is sometimes called intermodulation attenuation.

Transmission Measurements The characterization of the transfer function of a device, that is, the ratio of the output signal to the incident signal. Most common measurements include gain, insertion loss, transmission coefficient, insertion phase, and group delay, all measured over frequency. See also [S-Parameters](#).

Transmission/Reflection (T/R) Refers to the suite of measurements made by a scalar or vector network analyzer to characterize a device's behavior over frequency. See also [S-Parameters](#).

Transparent Something that is not visible to the user. Usually a procedure that occurs without the user's initiation or knowledge.

Trigger A signal that causes the instrument to make a measurement. The user can select several options for triggering, such as manual, continuous, or external (for synchronizing measurements to an external source).

TRL Through-Reflect-Line. See [Calibration, TRL and LRM](#).

TTL Transistor-Transistor Logic

Two-Port Error Correction See [Error Correction, 12-Term](#).

U

Uncorrected Measurements made without performing error correction.

Uncoupled Channels Stimulus or receiver settings allowed to be set independently for each channel.

UNI User-Network Interface: The point at which users connect to the network.

Units Dimensions on the measured quantities. Units usually refer to amplitude quantities because they can be changed. In analyzers with microprocessors, available units are dBm (dB relative to 1 mW dissipated in the nominal input impedance), dBmV (dB relative to 1 mV), dBW (dB relative to 1 W), V (volts), W (watts).

V

Variable A symbol, the value of which changes either from one iteration of a program to the next, or within each iteration of a program.

Vector A quantity that has both magnitude and phase.

A network analyzer capable of measuring both magnitude and phase.

VEE Visual Engineering Environment (Agilent software product)

Velocity Factor A numerical value related the speed of energy through transmission lines with different dielectrics (.66 for polyethylene). Used in making time domain measurements.

Vertical Resolution The degree to which an instrument can differentiate amplitude between two signals.

Video An electrical signal containing timing, intensity, and often color information that, when displayed, gives a visual image.

Video Bandwidth In spectrum analyzers, the cutoff frequency (3 dB point) of an adjustable low-pass filter in the video circuit. When the video bandwidth is equal to or less than the resolution bandwidth, the video circuit cannot fully respond to the more rapid fluctuations of the output of the envelope detector. The result is a smoothing of the trace, or a reduction in the peak-to-peak excursion, of broadband signals such as noise and pulsed RF when viewed in broadband mode. The degree of averaging or smoothing is a function of the ratio of the video bandwidth to the resolution bandwidth.

Video Filter In spectrum analyzers, a post-detection, low-pass filter that determines the bandwidth of the video

amplifier. It is used to average or smooth a trace. Refer also to [Video Bandwidth](#).

VNA Vector Network Analyzer

W

Waveform A representation of a signal plotting amplitude versus time.

Wireless A term that refers to a broad range of technologies that provide mobile communications for home or office, and "in-building wireless" for extended mobility around the work area, campus, or business complex. It is also used to mean "cellular" for in-or out-of-building mobility services.

WWW World Wide Web

X

Y

Z

Zero-Length Through Path In a measurement calibration, when the two test cables mate together directly without using adapters or a thru-line. See also [Non-Insertable Devices](#).

INDEX

.	
.csa - .cst - .sta - .cal files	421
.cti files	421
.mxr file	2320
.NET	1630
.s1p - .s2p - .s3p files	421
.xml files	2211
1	
10 MHz adjustment	2486
10 MHz reference	
Instrument Calibration and Verification	2466
specification summary	
1-port calibration; reflection	256
2	
2-port calibration; isolation portion	280
2-port devices reflection accuracy	210
3	
3.8 GHz adjustment	2484
3-Port error terms	316
3-port SOLT calibration	256
4	
4-port embed-deembed	361
4-port error terms	316
4-port on wafer calibrations	
4-port with external testset	2548
8	
81110A Pulse Generator	2531
82357A	2444
8510 cal kits - importing	328
8510 data processing mode	397
A	

about Network Analyzer	97
absolute output power	458
access, front panel interface	75
accessories- list of	2437
accessories, effects of	224
accuracy of calibration	280
accuracy, improving	
accuracy, on low-loss 2-port devices	210
accuracy, phase measurements	204
accuracy, reflection	210
accurate measurement calibrations	280
active channel	78
active entry keys	178
adapter - Centronics	
adapter removal cal - ECal	274
adapter removal cal - mechanical stds	274
adapters - using to calibrate	274
adaptor - characterize macro	379
ADC Receiver Measurements	193
add users	43
address - GPIB	2172
adjust the display	178
adjustments	2486
10 MHz	2486
3.8 GHz	2484
LO power	2489
offset lo power adjustment	2491
phase-lock IF gain	2499
receiver calibration	2514
source calibration	2511
administrative tasks	
administrator - user	43
administrator password	43

admittance chart	162
AGC loops, testing amps with	503
Agilent IO libraries	2203
AgileUpdate	2447
ALC leveling	133
aliasing	516
alternate sweep, crosstalk	223
AM input, external connector	
amplifier - high power measurements	503
amplifier parameters	465
AM-to-PM conversion	460
analog receivers	193
analyzer specifications	
annotation - display	178
antivirus protection	51
aperture, group delay	497
app notes	443
application crashes	2368
applying cal sets	262
arbitrary impedance	328
arbitrary ratio	114
arbitrary segment sweep	142
arbitrary Z standard	237
archiving cal sets	262
arranging windows	171
ASCII file types	421
assignments - cal class	328
attenuation	133
attenuators, receiver	133
auto port ext.	373
auto save	421
autocheck	2447
automation	

autostart PNA	72
auxiliary front-panel jumpers	
auxiliary i/o connector	2217
auxiliary i/o interface control	2211
auxiliary trigger	155
averaging, sweep	215
how to set	215
avoid spurs	2289

B

balanced measurements	471
banded millimeter modules	2523
banded test heads	2523
bias input	
binary file types	421
blanking - frequency band crossings	125
block diagram - configurable test set	
block diagram - standard test set	
booster amp with SMC	2360
boot from the recovery partition	50
broadband LO tuning	2354

C

C and COM	1627
cables - front-panel jumpers	
cables - how to ground	457
cal kit	
cal kit manager	328
cal set viewer	316
cal sets	262
calibrate touchscreen	
calibration	256
accurate	280
cal set	262
Cal Wizard	241

class assignments	328
converter	2299
data-based model	280
electronic (ECal)	288
enhanced response	256
instrument calibration and verification	2466
isolation (crosstalk)	223
kits	
mixer	2299
model	280
data-based	280
polynomial	280
non-insertable device	274
overview	235
polynomial model	280
power calibration	347
preferences	93
select a,	256
standards	237
types	256
using thru adapters	274
validity of,	283
window	241
calibration kits	237
creating	328
databased	280
list of models	2453
modifying	328
waveguide	328
calibration standards - measuring	283
care of connectors	446
change computer name	46
channel settings	78

channels - copy	190
channels - traces and windows	78
characterize adapter macro	379
choose configuration	2366
citifiles	421
class assignments - modify	328
classes calibration - about	237
classes-measurement	122
clean connectors	446
client for networking	2367
code translator application	
coefficient, reflection	114
coefficient, transmission	114
collections	1616
COM Data Types	1617
COM Events	1621
COM Examples	
COM Fundamentals	1609
COM Object Model	532
COM versus SCPI	2257
combiner	175
COM-DCOM configuration	1604
commands for programming	
common mode	471
compensating for test fixture	361
compression, gain	492
computer name	46
conductive table mat	457
confidence check	283
configurable test set	
block diagram	
dynamic range	198
options	2453

configuration - millimeter module	2523
configuration - PNA standard	2453
configuration IF Path	2527
configuration RF path	175
configure an external LO source	2329
configure for COM-DCOM	1604
configure for GPIB-SICL	2181
connect to disc drive	435
connectivity	92
connector care	446
connectors - test port	2453
conversion-loss measurement calibration	2299
converter	
Copy Channels	190
corrected system performance - specifications	
correction level	270
correction ON/off	270
corrupted operating system	50
counter averaging	215
coupled markers	387
coupled trace settings - time domain	516
coupler rolloff, compensate for	224
CPU speed	46
crash - PNA	2368
creating windows	78
crossover cable	2363
crosstalk specification	
crosstalk, receiver	223
cti files	421
curves - uncertainty	
customize your analyzer screen	178
data trace	178
status bar	178

tables	178
title bars	178
toolbars	178
CW time sweep	142
cycle time	
data transfer	
specifications	
typical	
versus IF bandwidth	
versus points	

D

data display	162
data points	202
data processing - 8510 mode	397
data processing chain	
data saving	421
data trace display	178
data transfer speed	230
data transfer time - specifications	
data-based model for calibration	280
date and time	46
default conditions	106
define data saves	421
definitions - specs	
defragmenter - disk	49
delay, electrical	204
delay, group	497
accuracy considerations	497
aperture, what is	497
what is	497
why measure	497
delta marker	387
delta match cal	383

detector inputs - specifications	
deviation from linear phase	482
accuracy considerations	482
using electrical delay	482
what is	482
why measure	482
device delay	208
device-side USB	2199
diagnostic tools and adjustments	
dielectric - velocity factor	204
differential mode	471
dimensions-physical	
directivity error	316
disaster recovery partition	50
discrete marker	387
disk defragmenter	49
disk drive, floppy	53
display	178
frequency stimulus	178
limit lines	178
limit test results	178
marker readout	178
title	178
trace status	178
display formats	162
display screen	
display settings	
display specifications	
display test	2488
display, arranging	171
distance marker settings	516
documentation - PNA	97
documentation warranty	97

domain	1604
drift	213
errors	316
frequency	213
temperature	213
drive mapping	435
dwel time - segment sweep	142
dwel time - stepped sweep	142
dynamic accuracy specification	
dynamic range	198
specifications	

E

E5091 Testset	2544
easy versus secure configuration	2366
ECal	288
confidence check	283
models	2437
procedure	288
thru methods	274
user-characterization	296
edge triggering	155
editor - equation	403
effects of accessories	224
electrical delay, using	482
electrical length, add	208
electrically-long device measurements	208
electronic calibration (ECal)	235
electrostatic discharge protection	457
embed and De-Embed a fixture	361
embedded LO meas	2354
EMI specification	
emissions- display	
enhanced response cal	256

entry keys	53
entry toolbar	
environment specifications	
equation editor	403
equations - uncertainty curves	
erase memory	87
error correction	270
no correction	270
potential degradation	270
validation calibration accuracy	283
error messages - about	2433
error messages - list of	2372
error terms - 4 port	316
error terms-monitoring	316
errors, measurement	316
drift	316
monitoring	316
sources	
errors, random	316
connector repeatability	316
instrument noise	316
switch repeatability	316
errors, systematic	316
directivity	316
isolation	316
load match	316
reflection tracking	316
source match	316
transmission tracking	316
ESD protection	457
ethernet	
event log	2368
examples of cal set usage	262

examples-programming	
excursion	387
expanded math	328
extensions, port	280
external AM input	
external CD-RW drive, save file to	421
external detector connector	
external monitor - VGA	
external PC drive sharing	435
external source control	2329
dwell time	2329
external source synchronization	485
external testset control	2548
external testset io connector	2222
external trigger	155

F

F1, F2, F3, F4 keys	53
factor - velocity	204
fault detection resolution	516
favorites	
FCA	2287
file recall	421
file save	421
file types	421
files - manage without a mouse	421
finder for commands	
firmware and help upgrade	2447
firmware rev number	97
fixed marker type	387
fixed output converter measurements	2320
fixture simulator	361
flatness and gain, small signal	489
floppy disk drive	53

save file to	421
flush thru cal	288
formats - data	162
group delay	162
imaginary	162
linear mag	162
log mag	162
phase	162
polar	162
real	162
rectangular	162
smith chart	162
SWR	162
forward and reverse FCA scalar meas.	2289
frequency band crossings	125
frequency blanking	87
frequency converter application	2287
calibration overview	2299
configure a mixer	2320
known issues	2286
measurements	2289
using the	2289
frequency drift	213
frequency offset	2260
frequency range	125
PNA models	2453
preset	106
frequency reference, 10 MHz	213
frequency resolution	125
frequency, CW	125
front panel jumpers	
dynamic range	198
option 015	

option014	
specifications	
front panel keypad not working	2368
front panel specification	
front panel tour	53
full computer name	46
functions, marker	387

G

gage connectors	446
gain	114
gain and flatness, small signal	489
gain compression	492
gain definition	465
gain drift versus time, definition	465
gain flatness, definition	465
gating	224
reflection response	224
transmission response	224
general specifications	
getting data with scpi	2185
getting started	
global - trigger	152
global delta match cal	383
global pass-fail indicator	416
GPiB - configure	2181
GPiB Address	2172
GPiB Commands	
GPiB connector	
GPiB Examples	
GPiB Fundamentals	2172
GPiB Interface	2444
GPiB Local - Remote Label	2181
GPiB Pass-Through	2165

grid, screen	
grounding test cables	457
group delay	497
specifications	
group delay format	162
GUID	262
guided calibration	241

H

H08 option	2531
H08 specifications	
H11 option	2519
H11 specifications	
Verification	2496
handle to an object	1613
handler io connector	2228
handshake - trigger	155
hard disk - version	97
hard disk problems - preventing	
hard disk recovery	50
hard disk, save file to	421
hard drive - removable	
hard drive defragmenter	49
harmonics specification	
HDD Problems	
heel strap - ESD	457
help -using	97
hibernate	72
high power measurements	503
hold mode	133
host ID	2462
HPIB Commands	

I

IF access (H11)	2519
IF bandwidth	215

IF bandwidth - for segment sweep	142
IF bandwidth - how to set	215
IF gain - phase lock- adjustment	2499
IF gain configuration	2519
IF Path Config (PNA-X)	2527
IF switch configuration	2519
imbalance parameters	471
impedance	114
setting system	196
Incident power - FCA scalar	2289
input receiver - specifications	
input, 10 MHz reference	
inspect connectors	446
Installation and Quick Start Guide	97
installed options	2453
instrument calibration	2466
instrument specifications	
instrument state	421
interface control	2211
interface, front panel	75
interpolation ON/off	270
interpolation, effects on error correction	270
inverse Smith chart	162
IP address	46
isolation error	316
isolation, 2-port calibration	280
isolation, reverse	509

J

jpeg format	437
jumper cables - front-panel	

K

keypad not working	2368
knob, front panel	53

L

LAN Connections	51
LAN connector	
LCD display test	2488
leakage, crosstalk	223
leveling-ALC	133
limit lines	416
limit lines, default	106
limit table	178
linear frequency sweep	142
linear phase shift, compensate for	204
linear phase; deviation from	482
LO - embedded in mixer	2354
LO power adjustment	2489
LO source - configure for mixers	2329
load match error	316
load types	328
local	2181
log errors	2433
log on	43
log sweep	142
long devices electrically	208
loops - front-panel jumpers	
loss	114
lost phase lock	2368
low-loss 2-port devices	210
LRL line auto characterization	328
LVL	133
LXI	2181

M

macro - characterize adaptor	379
macro/local key	53
macros	231

magnitude offset	162
manage files without a mouse	421
managing cal sets	262
map - data access	
mapping a drive	435
marker	387
default	106
delta	387
discrete	387
display of	178
distance settings - time domain	516
drag	
formats	387
readout	178
reference	387
table	387
marker functions	387
marker search	387
bandwidth	387
domain	387
execute	387
peak	387
target	387
types	387
marker types	387
fixed	387
normal	387
markers coupled	387
masking	516
material handler interface control	2211
material handler io connector	2228
math operations, data-memory	397
statistics	397

mating plane surfaces	446
measure key	53
measurement annotation	178
measurement calibration	235
accurate	280
improve crosstalk	223
select type	256
validity of	283
measurement calibration method	256
measurement classes	122
measurement display	178
measurement errors	316
measurement parameters	114
arbitrary ratio	114
balanced	114
default	106
S-parameters	114
unratioed power	114
measurement reference plane	280
measurement sequence	86
measurement setups, preconfigured	171
measurement stability, increase	213
measurement throughput - specifications	
measurement throughput techniques	227
measurement, averages	215
measurements, phase	506
mechanical stds calibration	241
memory - random access	46
memory trace	397
menu/dialog key	53
messages - error	2433
Microsoft Networks	2367
Millimeter Module Configuration	2523

minimize application	178
mixed mode S-parameters	471
mixer calibration	2299
mixer characterization	2299
mixer testing	
mixer with embedded LO	2354
model for data-based calibration	280
model for polynomial calibration	280
modify calibration kits	328
monitors, external	
mouse - mange files without	421
multiple measurements for throughput	227
multiple standards	241
multiport testset - E5091A	2544
multiport testset control	2548

N

N44xx testsets	2548
N5260A	2523
name of computer	46
NET	1630
network analyzer specifications	
network analyzer users	43
network client	2367
network drive mapping	435
new features	38
new windows	78
noise floor	223
noise reduction	215
nominal incident power	2289
non-insertable device calibrations	274
normal marker type	387
normalize	397
Novell NetWare	2367

number of points	202
------------------	-----

O

object hierarchy	1613
obsolete COM commands	
offset - magnitude	162
offset - phase	204
offset lo power adjustment	2491
offset load	328
offset-receiver atten	133
offset-source atten	133
on and off	72
on-wafer 4-port cal	
open-loop leveling	133
operating system errors	2433
operating system recovery	50
operator's check	2492
option 010, time domain	516
option 014 or 015 - configurable test set	
option 082 SMC	2453
option 083	2453
option 550	2548
option 551	2548
option enable	2462
options available	2453
options installed	2453
output power - FCA scalar	2289
output power, absolute	458
output, 10 MHz reference	2486
overlapping sweep segments	142
overlay windows	171
override - stimulus CW	2260

P

parallel interface port connector	
-----------------------------------	--

parameters, amplifier	465
AM-to-PM conversion	465
complex impedance	465
deviation from linear phase	465
gain	465
gain compression	465
gain drift versus time	465
gain flatness	465
group delay	465
return loss	465
reverse isolation	465
parameters, measurement	114
arbitrary ratio	114
S-parameters	114
unratioed power	114
pass-fail indicator	416
pass-through - GPIB	2165
password	43
path configuration IF	2527
path configuration RF	175
peak, marker	387
permission to launch and access PNA	1604
phase lock lost	2368
phase measurement accuracy	204
electrical delay	204
phase offset	204
port extensions	373
spacing between frequency points	204
phase measurements	506
types of	506
what are	506
why measure	506
phase offset	204

phase shift	204
phase, linear	482
phase-lock if gain adjustment	2499
phase-shift component	497
PIA	1630
pixel test	2488
PNA autostart	72
PNA Release 2	38
PNA specifications	
PNA start	106
PNA-X	59
point spacing - x axis	142
point-averaging	215
point-in-pulse	2531
points, number of	202
polar format	162
polynomial model for calibration	280
port extensions	373
power	133
absolute output	458
attenuation	133
coupling between ports	133
during retrace and sweep	133
independent segments	142
level	133
optimum	133
range	133
receiver attenuation	133
slope	133
sweep	142
unratioed	114
power - high	503
power calibration	347

power I/O connector	2243
power On and Off	72
power unlevelled	133
power, line specifications	
power, probe	53
power-up conditions	106
precise LO tuning	2354
preferences - cal	312
preferences - error	2433
preferences - PNA	93
preset conditions	106
calibration	106
data display	106
frequency	106
global display	106
limit lines	106
marker	106
measurement parameter	106
power	106
response	106
segment	106
sweep	106
time domain	106
trigger	106
preset user defined	106
Preventing HDD problems	
primary GPIB address	2172
Primary Interop Assembly	1630
print Help documentation	97
print options	437
print to file	437
printers	437
probe power	53

probe power - PNA-X	59
probe specifications	
processing data map	
processor - CPU speed	2453
product support	2479
programming guide	2245
protection - antivirus	51
protection - ESD	457
PSG synchronize	485
pulse I/O connector	2241
pulsed application	2531

Q

QSOLT Cal	256
queues	2185
Quick Start Guide	97

R

RAM	46
random measurement errors	316
range, dynamic	198
range, frequency	2453
range, power	133
ratio, arbitrary	114
ratio, standing wave	512
reading data	
readout marker	178
rear panel interface control	2211
rear panel specifications	
rear panel tour	67
recall and sweep speeds - specifications	
recall measurements quickly	227
receiver attenuation	133
receiver calibration	2514
receiver crosstalk	223

receiver display	2517
receiver input - specifications	
receiver power cal	347
receivers - number of reference	2453
receivers- measurement	114
recovering the operating system	50
reduce trace noise	215
IF bandwidth	215
sweep averages	215
trace smoothing	215
reference channel jumper	
reference impedance for a fixture	361
reference level	162
reference level & stability - specs	
reference marker	387
reference mixer	2299
reference plane	280
reference position	162
reference receivers	114
reference, 10 MHz	
reflection accuracy	210
reflection classes, calibration standards	328
reflection measurements	512
reflection tracking error	316
relative velocity	204
remote-GPIB	2181
replacement COM commands	
response calibration	256
restart - trigger	152
restore ECAL data	296
restore the operating system	50
retrace - power level during	133
return loss	465

reverse isolation	509
reverse sweep	142
revision number - PNA	97
right-click functions	
rolloff, coupler	224

S

s1p - s2p -s3p files	421
save and recall a file	421
save as	421
save calibration	241
saving data	421
scalar mixer calibration	2299
scale	162
scan disk	49
scope, trigger	152
SCPI Commands	1632
SCPI Errors	2468
SCPI Examples	
SCPI Fundamentals	2172
SCPI Syntax	2177
screen arrange	171
screen test	2488
screen, display	
search, marker	387
bandwidth	387
domain	387
execute	387
peak	387
target	387
types	387
securing the PNA	87
security frequency blanking	87
security settings for the DCOM	2366

segment point spacing	142
segment sweep	142
segment table	178
segments, limit	416
sequence, basic measurement	86
serial interface port (COM1) connector	
serial number - instrument	97
service request	2200
service routines	
setup macros	231
sharing a drive	435
SICL	2203
signal purity specification	
Simcal	2194
simulator - fixture	361
single and double click option.	51
single-ended devices	471
sliding load	328
slope, power	133
small signal gain and flatness	489
SMC	2299
smith chart	162
smoothing - trace	215
sockets	2181
softkeys	
software version	97
SOLT calibration	256
source - external synch	485
source calibration - service	2511
source match error	316
source power cal	347
source unleveled	133
source, trigger	152

external	152
internal	152
manual	152
S-parameters	114
specifications	
corrected system performance	
cycle time versus IFBW	
cycle time versus number of points	
data transfer time	
definitions	
dynamic accuracy	
dynamic range	
environment	
front panel	
front panel jumpers	
general	
group delay	
measurement throughput	
option H08	
option H11	
rear panel	
receiver dynamic range	
reference level & stability	
system bandwidths	
test port input (receiver)	
test port output (source)	
trace noise	
typical cycle time	
uncertainty curve equations	
uncorrected system performance	
speed, data transfer	230
speed, sweep	225
split windows	171

spreadsheet - saving data to	421
spurious specification	
spurs - avoid	2289
SRQ	2200
stability, measurement	213
device connections	213
frequency drift	213
temperature drift	213
under-sampled data	213
stack windows	171
standards, calibration	328
class assignment	237
modify	328
standard definition	237
start PNA application	106
state - instrument	421
state, trigger	152
continuous	152
group	152
Hold	152
point	152
single	152
static electricity	457
statistics	397
status bar	178
second	2548
status registers	2200
stepped sweep	142
stimulus sweep	142
stimulus, default	106
support	2479
swap equal adapter cal	274
sweep averages	215

sweep in reverse	142
sweep indicator	142
sweep setup	142
sweep speed	225
sweep time	142
sweep types	142
SWR	114
synchronize an external source	485
synchronizing commands	2189
system bandwidths - specifications	
system impedance	196
system performance, corrected	
system performance, uncorrected	
system restoration	50
system verification	2501
systematic measurement errors	316
connector repeatability	316
instrument noise	316
switch repeatability	316

T

table mat - ESD	457
tables	178
limit	178
marker	178
segment	178
technical specifications	
technical support	2479
telnet	2181
temperature drift	213
terminate reflection measurement	210
test port specifications	
input	
output	

test set (configurable) block diagram	
test set block diagram	
test set interface control	2211
test set IO connector	2222
test set reference switch	2260
testset control - N44xx	2548
testset control - other	2548
testset control -E5091A	2544
theme - windows	51
threshold	387
throughput, increased	227
thru - unknown	274
thru response calibration	256
time and date	46
time domain	516
aliasing	516
default	106
distance marker settings	516
gating	516
impulse and step modes	516
mask	516
overview	516
range	516
resolution	516
toolbar	178
trace coupling	516
windowing	516
timeout	2189
title - trace	78
title - window	178
title bars	178
toolbars	178
active entry	178

all off	178
markers	178
measurement	178
stimulus	178
sweep control	178
time domain	178
tour	
trace status	178
topology - balanced	471
torque wrench	446
touchscreen	
touchstone format	421
tour	53
front panel	53
rear panel	67
trace	78
math	397
max	78
memory	397
noise - reduce	215
noise specification	
statistics	397
status	178
title	78
traces - channels and windows	78
transfer speed, data	230
transferring data	
transmission	114
transmission classes, calibration standards	328
transmission tracking error	316
trigger	152
auxiliary	155
default	106

external	155
IN / OUT connectors	
model	161
scope	152
source	152
state	152
TRL calibration	308
troubleshoot the analyzer	2368
tuning for embedded LO	2354
type library	1604
types, marker	387
fixed	387
normal	387

U

uncertainty curves	
uncertainty model	
uncorrected system performance - specs	
unknown thru cal	274
unleveled	133
unratioed power	114
unwrapped phase display	162
upgrade options	2453
upgrade PNA firmware	2447
uploading error terms	2194
USB device - the PNA	2199
USB hub	
USB port specifications	
USB/GPIB Interface	2444
user interface	75
User Key	
user name	43
user preset	106
user range	397

user span	387
user-characterization	296

V

vector mixer calibration	2299
characterizing the cal mixer	2299
VEE RunTime - Agilent	2206
velocity factor	204
verification - system	2501
verifying calibration	283
version - firmware	97
VGA output connector	
Video Graphics Adapter	
view/modify standards	328
VISA	2203
VMC	2299
VMC with embedded LO	2354
VNC	96

W

warm-up spec	
warranty period	2453
waveguide	328
Wincal	2194
window - calibration	241
window - customize	
windowing time domain	516
windows - creating and managing	78
windows theme	51
windows traces and channels	78
Windows XP / 2000	51
windows, arranging feature	171
wizard, calibration	241
workgroup	1604

X

X-axis display for FCA	2289
X-axis point spacing -segment sweep	142
XP - Windows	51

Y

Y-axis Scale	162
--------------	-----

Z

Z conversion - balanced	361
Z0 System Impedance	196
Z5326A H08 test set commands	2211
zoom-trace	
